







PCM1/PCM2 4-20 mA SSR Drivers





■ ■ Operator's Manual



### WARRANTY

OMEGA warrants this unit to be free of defects in materials and workmanship and to give satisfactory service for a period of 13 months from date of purchase. OMEGA Warranty adds an additional one (1) month grace period to the normal one (1) year product warranty to cover handling and shipping time. This ensures that our customers receive maximum coverage on each product. If the unit should malfunction, it must be returned to the factory for evaluation. Our Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective it will be repaired or replaced at no charge. However, this WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of being damaged as a result of excessive current, heat, moisture, vibration, or misuse. Components which wear or which are damaged by misuse are not warranted. These include contact points, fuses, and triacs.

Include contact points, fuses, and triacs.

THERE ARE NO WARRANTIES EXCEPT AS STATED HEREIN. THERE ARE NO OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND OF FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT SHALL OMEGA ENGINEERING, INC. BE LIABLE FOR CONSEQUENTIAL, INCIDENTAL OR SPECIAL DAMAGES. THE BUYER'S SOLE REMEDY FOR ANY BREACH OF THIS AGREEMENT BY OMEGA ENGINEERING, INC. OR ANY BREACH OF ANY WARRANTY BY OMEGA ENGINEERING, INC. CHALL NOT EXCEED THE PURCHASE PRICE PAID BY THE PURCHASER TO OMEGA ENGINEERING, INC. FOR THE UNIT OR UNITS OR EQUIPMENT DIRECTLY AFFECTED BY SUCH BREACH.



One Omega Drive, Box 4047 Stamford, Connecticut 06907-0047

Call OMEGA Toll Free\*—Use these direct lines to get the service you want!
Sales: It's Easy to Order from OMEGA!

For the BEST in Customer Service:

WHEN You Need Engineering Support and Technical

Assistance, Dial:

\*In CT: (203) 359-1660 And International CABLE: OMEGA TELEX: 996404 1-800-USA-WHEN EASYLINK: 62968934 FAX: (203) 359-7700

1-800-82-66342

1-800-TC-OMEGA 1-800-622-2378

1-800-622-BEST

1-800-872-9436

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. That way our customers get the latest in technology and engineering.

### Return Requests/Inquiries

Direct all warranty and repair requests/inquiries to OMEGA Customer Service Department, telephone number (203) 359-1660. BEFORE RETURNING ANY INSTRUMENT, PLEASE CONTACT THE OMEGA CUSTOMER SERVICE DEPARTMENT TO OBTAIN AN AUTHORIZED RETURN (AR) NUMBER. The designated AR number should then be marked on the outside of the return package.

To avoid processing delays, also please be sure to include:

- 1. Returnee's name, address, and phone number.
- 2. Model and Serial numbers.
- 3. Repair instructions.

OMEGA® is a registered trademark of OMEGA ENGINEERING, INC.

© Copyright 1989 OMEGA ENGINEERING, INC. All rights reserved including illustrations. Nothing in this manual may be reproduced in any manner, either wholly or in part for any purpose whatsoever without written permission from OMEGA ENGINEERING, INC.

Printed in U.S.A.

M957/0289

### **GENERAL DESCRIPTION**

The OMEGA® PCM Series driver modules allow simple conversion of an ON/OFF Solid State Relay (SSR) to a proportional power regulator. The module mounts directly to the input terminals of the solid state relay. Screw terminals are provided on the driver module for the 4-20mA control signal. The Solid State Relay's power section connects in standard fashion to the line and load.

The PCM module plus SSR provides a rectangular shape, time proportional (zero fired) control signal to the load. Thus the average power to the load is proportional to the 4-20mA input signal.

Two models are available. Use Model PCM1 to control single phase loads. Model PCM2 comes with an additional circuit board that enables one module to fire two SSR's. Therefore, Model PCM2 can be used for 3-Phase, 3-Wire (delta) applications. To control 3-Phase, 4-Wire (Wye) loads, simply use 3 PCM1 units. Each unit is supplied with operator's manual and mounting screws.

### UNPACKING


Remove the packing list and verify that all equipment has been received. If there are any questions about the shipment, please call OMEGA Customer Service Department at (203) 359-1660.

Upon receipt of the shipment, inspect the container and equipment for any signs of damage. Take particular note of any evidence of rough handling in transit. Immediately report any damage to the shipping agent.

### NOTE

The carrier will not honor any claims unless all shipping material is saved for their examination. After examining and removing contents, save packing material and carton in the event reshipment is necessary.

### TYPICAL APPLICATION

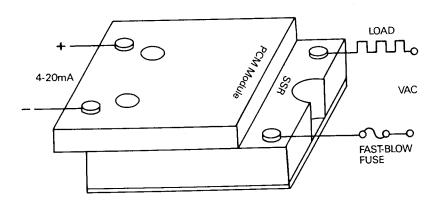

1

### **SPECIFICATIONS**

**ANALOG INPUT SIGNAL:** 

4 to 20 mAdc

**VOLTAGE DROP ACROSS MODULES:** 

PCM1-6.3Vdc ±10% PCM2-12 Vdc ±10%


AMBIENT TEMPERATURE:

32 to 104°F (0 to 40°C)


INPUT CURRENT	OUTPUT LEVEL*	CYCLE TIME
4.0mA 7.2mA 12.0mA	0% 20% 50% 80%	.8 sec. .4 sec. .8 sec.
16.8mA 20.0mA	100%	.o sec.


<sup>\*</sup>Linearity: Output level within 2%

### **MOUNTING**

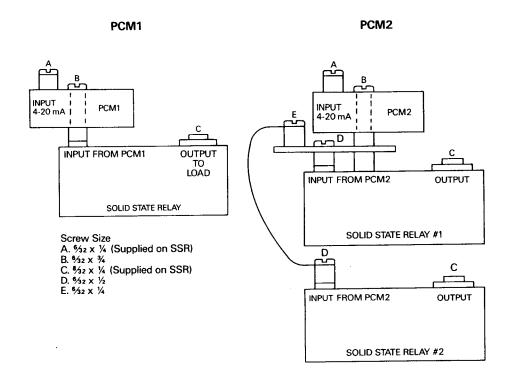


# WIRING SINGLE PHASE VOLTAGE SUPPLY OPTIONAL FUSING 1 Phase Power Control INPUT PCM1 SSR (+) + ωΟ N LOAD

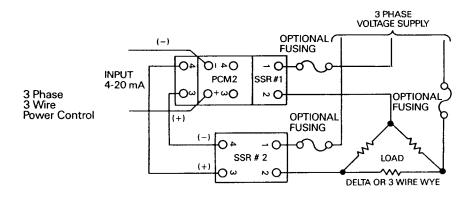

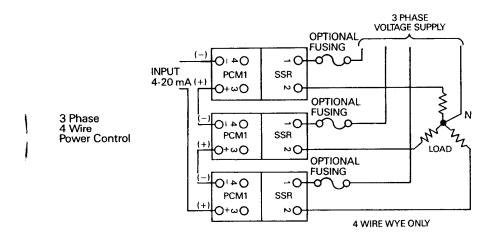


3

# PCM1 DIMENSIONS

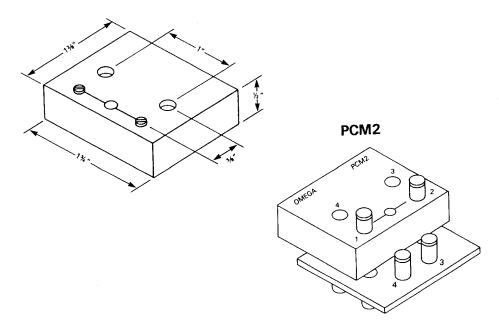

## PCM2 DIMENSIONS

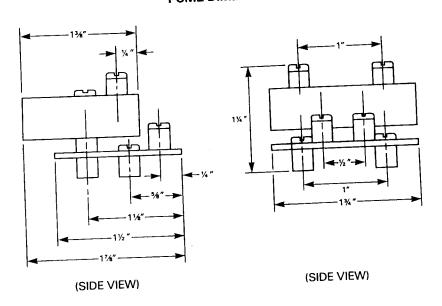

# **OMEGA**\*...Your Source for Process Measurement and Control

TE	34	D	C	D	Α	T	IJ	D	C
IC	W	r	C	n	м		u	n	E

<ul> <li>□ Connector Systems and Panels</li> <li>□ Wire: Thermocouple, RTD and Thermistor</li> <li>□ Calibrators and Ice Point References</li> <li>□ Recorders, Controllers and Process Monitors</li> <li>□ Data Acquisition Modules and Data Loggers</li> <li>□ Computer Sensor Interface</li> <li>PRESSURE/STRAIN</li> <li>□ Transducers</li> <li>□ Strain Gauges</li> <li>□ Load Cells</li> <li>□ Pressure Gauges</li> <li>□ Instrumentation</li> <li>FLOW</li> <li>□ Rotameters</li> <li>□ Flowmeter Systems</li> <li>□ Air Velocity Indicators</li> <li>□ Turbine/Paddlewheel Systems</li> <li>□ Vortex Meters and Flow Computers</li> <li>pH</li> <li>□ Electrodes</li> </ul>	☐ Thermocouple, RTD & Thermistor
<ul> <li>Wire: Thermocouple, RTD and Thermistor</li> <li>□ Calibrators and Ice Point References</li> <li>□ Recorders, Controllers and Process Monitors</li> <li>□ Data Acquisition Modules and Data Loggers</li> <li>□ Computer Sensor Interface</li> <li>PRESSURE/STRAIN</li> <li>□ Transducers</li> <li>□ Strain Gauges</li> <li>□ Load Cells</li> <li>□ Pressure Gauges</li> <li>□ Instrumentation</li> <li>FLOW</li> <li>□ Rotameters</li> <li>□ Flowmeter Systems</li> <li>□ Air Velocity Indicators</li> <li>□ Turbine/Paddlewheel Systems</li> <li>□ Vortex Meters and Flow Computers</li> <li>pH</li> <li>□ Electrodes</li> </ul>	Probes & Assemblies
<ul> <li>□ Calibrators and Ice Point References</li> <li>□ Recorders, Controllers and Process Monitors</li> <li>□ Data Acquisition Modules and Data Loggers</li> <li>□ Computer Sensor Interface</li> </ul> PRESSURE/STRAIN <ul> <li>□ Transducers</li> <li>□ Strain Gauges</li> <li>□ Load Cells</li> <li>□ Pressure Gauges</li> <li>□ Instrumentation</li> </ul> FLOW <ul> <li>□ Rotameters</li> <li>□ Flowmeter Systems</li> <li>□ Air Velocity Indicators</li> <li>□ Turbine/Paddlewheel Systems</li> <li>□ Vortex Meters and Flow Computers</li> </ul> pH <ul> <li>□ Electrodes</li> </ul>	
<ul> <li>□ Recorders, Controllers and Process Monitors</li> <li>□ Data Acquisition Modules and Data Loggers</li> <li>□ Computer Sensor Interface</li> <li>PRESSURE/STRAIN</li> <li>□ Transducers</li> <li>□ Strain Gauges</li> <li>□ Load Cells</li> <li>□ Pressure Gauges</li> <li>□ Instrumentation</li> <li>FLOW</li> <li>□ Rotameters</li> <li>□ Flowmeter Systems</li> <li>□ Air Velocity Indicators</li> <li>□ Turbine/Paddlewheel Systems</li> <li>□ Vortex Meters and Flow Computers</li> <li>pH</li> <li>□ Electrodes</li> </ul>	
<ul> <li>□ Data Acquisition Modules and Data Loggers</li> <li>□ Computer Sensor Interface</li> <li>PRESSURE/STRAIN</li> <li>□ Transducers</li> <li>□ Strain Gauges</li> <li>□ Load Cells</li> <li>□ Pressure Gauges</li> <li>□ Instrumentation</li> <li>FLOW</li> <li>□ Rotameters</li> <li>□ Flowmeter Systems</li> <li>□ Air Velocity Indicators</li> <li>□ Turbine/Paddlewheel Systems</li> <li>□ Vortex Meters and Flow Computers</li> <li>pH</li> <li>□ Electrodes</li> </ul>	
□ Computer Sensor Interface  PRESSURE/STRAIN □ Transducers □ Strain Gauges □ Load Cells □ Pressure Gauges □ Instrumentation  FLOW □ Rotameters □ Flowmeter Systems □ Air Velocity Indicators □ Turbine/Paddlewheel Systems □ Vortex Meters and Flow Computers  PH □ Electrodes	
PRESSURE/STRAIN    Transducers   Strain Gauges   Load Cells   Pressure Gauges   Instrumentation  FLOW   Rotameters   Flowmeter Systems   Air Velocity Indicators   Turbine/Paddlewheel Systems   Vortex Meters and Flow Computers  PH   Electrodes	
☐ Transducers ☐ Strain Gauges ☐ Load Cells ☐ Pressure Gauges ☐ Instrumentation  FLOW ☐ Rotameters ☐ Flowmeter Systems ☐ Air Velocity Indicators ☐ Turbine/Paddlewheel Systems ☐ Vortex Meters and Flow Computers  pH ☐ Electrodes	☐ Computer Sensor Interface
□ Strain Gauges □ Load Cells □ Pressure Gauges □ Instrumentation  FLOW □ Rotameters □ Flowmeter Systems □ Air Velocity Indicators □ Turbine/Paddlewheel Systems □ Vortex Meters and Flow Computers  pH □ Electrodes	PRESSURE/STRAIN
□ Load Cells □ Pressure Gauges □ Instrumentation  FLOW □ Rotameters □ Flowmeter Systems □ Air Velocity Indicators □ Turbine/Paddlewheel Systems □ Vortex Meters and Flow Computers  PH □ Electrodes	☐ Transducers
□ Pressure Gauges □ Instrumentation  FLOW □ Rotameters □ Flowmeter Systems □ Air Velocity Indicators □ Turbine/Paddlewheel Systems □ Vortex Meters and Flow Computers  pH □ Electrodes	☐ Strain Gauges
☐ Instrumentation  FLOW  ☐ Rotameters ☐ Flowmeter Systems ☐ Air Velocity Indicators ☐ Turbine/Paddlewheel Systems ☐ Vortex Meters and Flow Computers  PH ☐ Electrodes	☐ Load Cells
FLOW  Rotameters Flowmeter Systems Air Velocity Indicators Turbine/Paddlewheel Systems Vortex Meters and Flow Computers  PH Electrodes	☐ Pressure Gauges
□ Rotameters □ Flowmeter Systems □ Air Velocity Indicators □ Turbine/Paddlewheel Systems □ Vortex Meters and Flow Computers  pH □ Electrodes	☐ Instrumentation
<ul> <li>☐ Flowmeter Systems</li> <li>☐ Air Velocity Indicators</li> <li>☐ Turbine/Paddlewheel Systems</li> <li>☐ Vortex Meters and Flow Computers</li> <li>pH</li> <li>☐ Electrodes</li> </ul>	FLOW
<ul> <li>☐ Air Velocity Indicators</li> <li>☐ Turbine/Paddlewheel Systems</li> <li>☐ Vortex Meters and Flow Computers</li> <li>pH</li> <li>☐ Electrodes</li> </ul>	□Rotameters
<ul> <li>☐ Air Velocity Indicators</li> <li>☐ Turbine/Paddlewheel Systems</li> <li>☐ Vortex Meters and Flow Computers</li> <li>pH</li> <li>☐ Electrodes</li> </ul>	☐ Flowmeter Systems
<ul><li>□ Vortex Meters and Flow Computers</li><li>pH</li><li>□ Electrodes</li></ul>	
pH □ Electrodes	☐ Turbine/Paddlewheel Systems
☐ Electrodes	□ Vortex Meters and Flow Computers
☐ Electrodes	Hq
	<del>-</del>
□ Benchtop/Laboratory Meters	☐ Benchtop/Laboratory Meters
☐ Controllers	
☐ Calibrators/Simulators	
	☐ Calibrators/Simulators
	☐ Calibrators/Simulators



One Omega Drive, Box 4047 Stamford, Connecticut 06907-0047 (203)359-1660 Telex: 996404 Cable: OMEGA FAX: (203) 359-7700