


LV820, LV850, & LV860 Electronic Level Switches

Operator's Manual: M1027/1292

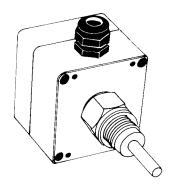



GENERAL DESCRIPTION

The OMEGA® LV820, LV850, and LV860 Level Sensors are electronic devices used to detect the presence of a material at a given level in a tank, bin, or other container. The level sensors operate on the capacitance principle. A tunable oscillator circuit is ON when the probe is immersed, keeping the output conductive (relay output LV820, transistor output LV850, LV860). The indicator LED is then lit. When the level drops below the sensor position, the LED will extinguish and the output relay will drop out (contacts 3-2 open, 3-1 closed). The transistor output of the LV850/860 is now non-conductive.

OPERATION

The operation of the LV820 is shown in the following diagram. Models LV850 and LV860 operate identically, except the relay output 1, 2, 3 is replaced by a transistor output.

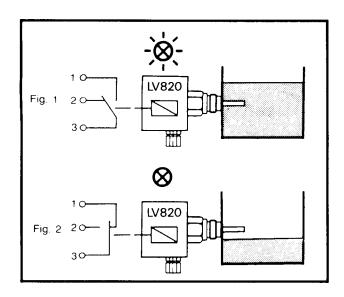

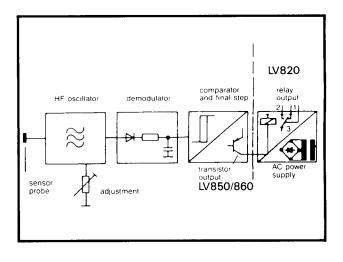

Operating Principle

Basic Block Diagram

INSTALLATION AND CALIBRATION

The Level Sensors have stainless steel NPT ¾ inch threaded fittings with a HEX shape to properly apply mounting torque (1¼ " wrench) for a tight fit. DO NOT APPLY TORQUE VIA THE LV820 BLUE BOX!

Make the proper electrical connections via the cable supplied with the LV850/860, or your own cable and the screwless terminal block within model LV820.

Raise the liquid level to completely immerse the probe. Adjust the sensitivity potentiometer counterclockwise (-) until the LED extinguishes. Slowly turn clockwise (+) until LED is ON; at this setting, turn adjustment one additional full turn clockwise to compensate for tolerances. The Level Sensor is now calibrated.

Close the cover. Note: Different media require re-adjustment.

MATERIAL SENSING WITH CAPACITIVE SENSORS

Capacitive sensors detect liquids, powders, or solid materials by measuring a change in capacitance. The amount of change in capacitance is dependent on the dielectric constant of the material being sensed. The larger the dielectric constant, the easier the material to detect. This means that materials with a high dielectric constant can be detected at greater distances than those with low constants or that materials with high dielectric constants can be detected through the walls or containers made of material with lower constants. An example of this is water (80) through the wall of a glass container (10).


Applications rules:

- 1. Products with constants of 1.2 or greater can be detected.
- 2. The higher the constant, the easier the material can be detected.
- 3. Materials with high constants can be detected through a container with low constant.
- 4. Larger concentrations of materials are easier to detect than small samples.
- 5. Liquids and powders should be detected by immersion detection methods (sensor actually is immersed into liquids).
- 6. Solid materials should be detected by non-contact detection methods.


INDUSTRIAL PRODUCTS AND THEIR DIELECTRIC CONSTANTS

MATERIALS	DIELECTRIC CONSTANTS	MATERIALS	DIELECTRIC CONSTANTS
Acetone	19.5	Salt	6
Acrylic Resin	2.7-4.5	Sand	3-5
Air	1.000264	Shellac	2.5-4.7
Ammonia	15-25	Shell Lime	1.2
Aniline	6.9	Silicon Varnish	2.8-3.3
Aqueous Solutions	50-80	Soybean Oil	2.9-3.5
Benzene	2.3	Styrene Resin	2.3-3.4
Carbon Dioxide	1.000985	Sugar	3.0
Carbon Tetrachloride	2.2	Sulfur	3.4
Cement Powder	4	Tetraflouroethylene Resin	2.0
Cereal	3-5	Toluene	2.3
Chlorine Liquid	2.0	Turpentine	2.2
Ebonite	2.7 - 2.9	Urea Resin	5-8
Epoxy Resin	2.5-6	Vaseline	2.2-2.9
Ethanol	24	Water	80
Ethylene Glycol	38.7	Wood (Dry)	2-6
Fired Ash	1.5—1.7	Wood (Wet)	10-30
Flour	2.5-3.0		
Freon R22 & 502	6.11		
Gasoline	2.2		
Glass	3.7 – 10		
Glycerine	47		
Marble	8.5		
Melamine Resin	4.7—10.2		
Mica	5.7 - 6.7		
Nitrobenzine	36		
Nylon	4-5		
Paraffin	1.9-2.5		
Paper	1.6 - 2.6		
Perspex	3.5		
Petroleum	2.0-2.2		
Phenol Resin	4-12		
Polyacetal	3.6-3.7		
Polyester Resin	2.8—8.1		
Polypropylene	2.0—2.2		
Polyvinyl Chloride Resin	2.8—3.1		
Porcelain	5-7		
Powdered Milk	3.5-4		
Pressboard	2-5		
Rubber	2.5—35		


LV820 Physical Dimensions in mm

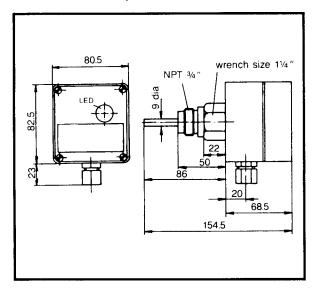


LV820 Wiring Diagram

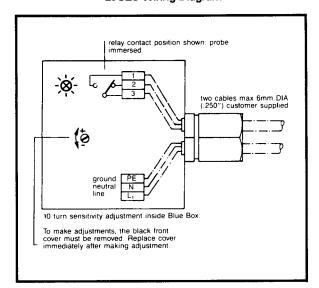


LV850 Physical Dimensions in mm

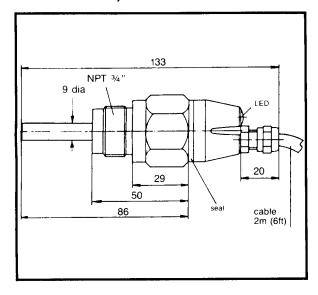

LV850/860 Wiring Diagram

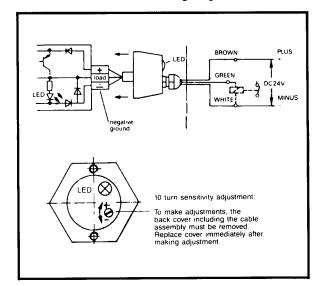

LV860 Physical Dimensions in mm

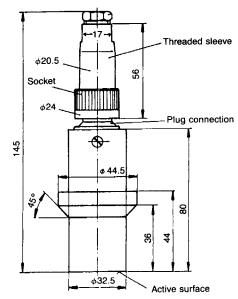



Servicing USA and Canada: Call OMEGA Toll Free Canada USA

One Omega Drive, Box 4047 Stamford, CT 06907-0047 Telephone: (203) 359-1660 FAX: (203) 359-7700

976 Bergar Street Laval (Quebec) H7L 5A1 Telephone: (514) 856-6928 FAX: (514) 856-6886

Sales Service: 1-800-826-6342 / 1-800-TC-OMEGASM Customer Service: 1-800-622-2378 / 1-800-622-BESTSM Engineering Service: 1-800-872-9436 / 1-800-USA-WHENSM TELEX: 996404 EASYLINK: 62968934 CABLE OMEGA

Servicing Europe: United Kingdom Sales and Distribution Center

25 Swannington Road, Broughton Astley, Leicestershire LE9 6TU, England

Telephone: 44 (0455) 285520 FAX: 44 (0455) 283912

The OMEGA Complete Measurement and Control Handbooks & Encyclopedias

- Temperature
- ✓ Pressure, Strain & Force
- ✓ Flow and Level
- pH and Conductivity
- ✓ Data Acquisition Systems
- Electric Heaters
- ✓ Environmental Monitoring and Control



Call for Your FREE Handbook Request Form Today: (203) 359-RUSH

REMOVING ELECTRONIC ASSEMBLY

It is possible to remove the electronic control portion while the probe remains installed in the tank. To do so:

- 1. Disconnect supply voltage.
- 2. Lower liquid level below probe.
- 3. Remove cover of Level Sensor.
- 4. Disconnect cables.
- For the LV850/860: Remove screw and plastic washer holding electronics in housing. For the LV820: Remove 2 screws in bottom of Blue Box.
- 6. Carefully pull electronic assembly.

To re-install, reverse the above directions.

SPECIFICATIONS

, ,	LV850/860	LV820	
SUPPLY VOLTAGE:	DC 24V ±15% reverse polarity protected	AC 115V +10-15%	
POWER CONSUMPTION:	1 Watt max.	4 VA max.	
ОИТРИТ:	PNP transistor,DC 24V/0.3A Cont. load max., 1.5 V drop approx. Integral suppression diode for short circuit protection	Relay,SPDT contacts max 5A at AC240V or DC24V. Higher DC contact voltages up to DC100V are permissible but load must not exceed 120W	
AMBIENT TEMPERATURE:	-4°F to +185°F (-20°C to +85°C)	-4°F to +185°F (-20°C to +85°C)	
MEDIUM TEMPERATURE:	-4°F to +185°F (-20°C to +85°C) up to 212°F (100°C) intermittent	-4°F to +185°F (-20°C to +85°C) up to 212°F (100°C) intermitter:	
ENVIRONMENTAL PROTECTION:	Electronic portion splash water/dust proof	Electronic portion splash water/dust proof	
PROBE PRESSURE RESISTANCE:	10 bar (147 PSi)/ 2 bar (30 PSI)	10 bar (147 PSI)	
TERMINATIONS:	Cable, 6 ft. (2m)	Terminal block	
MATERIALS: Probe: Fitting: Cover: Housing:	Tefzel (1) V2A (2) Delrin (3) Teflon (LV860)	Tefzel (1) V2A (2) Alu, black anodized ABS (4)	
SWITCH POINT HYSTERESIS (probe mounted horizontally)	0.35 in. (9mm) max. equivalent to probe diameter	0.35in. (9mm) max. equivalent to probe diameter	

(1) Tefzel: Ethylene – tetrafluoroethylene (ETFE)

(2) V2A: Stainless steel DIN 1.4305 equivalent to AISI 303

(3) Delrin: Polyoxyethylene (POM)

(4) ABS: Terpolymer (DIN 7728-Abselex)

UNPACKING INSTRUCTION

Remove the Packing List and verify that you have received all equipment. If you have any questions about the shipment, please call the OMEGA Customer Service Department at 1-800-622-2378 or (203) 359-1660.

When you receive the shipment, inspect the container and equipment for any signs of damage. Note any evidence of rough handling in transit. Immediately report any damage to the shipping agent.

The carrier will not honor any claims unless all shipping material is saved for their examination. After examining and removing contents, save packing material and carton in the event reshipment is necessary.

WARRANTY

OMEGA warrants this unit to be free of defects in materials and workmanship and to give satisfactory service for a period of **13 months** from date of purchase. OMEGA Warranty adds an additional one (1) month grace period to the normal **one** (1) **year product warranty** to cover handling and shipping time. This ensures that our customers receive maximum coverage on each product. If the unit should malfunction, it must be returned to the factory for evaluation. Our Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective it will be repaired or replaced at no charge. However, this WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of being damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA's control. Components which wear or which are damaged by misuse are not warranted. These include contact points, fuses, and triacs.

We are glad to offer suggestions on the use of our various products. Nevertheless, OMEGA only warrants that the parts manufactured by it will be as specified and free of defects.

OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHAT-SOEVER, EXPRESSED OR IMPLIED, EXCEPT THAT OF TITLE AND ALL IMPLIED WAR-RANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED.

LIMITATION OF LIABILITY: The remedies of buyer set forth herein are exclusive and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.

Every precaution for accuracy has been taken in the preparation of this manual; however, OMEGA ENGINEERING, INC. neither assumes responsibility for any omissions or errors that may appear nor assumes liability for any damages that result from the use of the products in accordance with the information contained in the manual.

SPECIAL CONDITION: Should this equipment be used in or with any nuclear installation or activity, buyer will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the equipment in such a manner.

RETURN REQUESTS / INQUIRIES

Direct all warranty and repair requests/inquiries to the OMEGA ENGINEERING Customer Service Department. Call toll free in the USA and Canada: 1-800-622-2378, FAX: 203-359-7811; International: 203-359-1660, FAX: 203-359-7807.

BEFORE RETURNING ANY PRODUCT(S) TO OMEGA, YOU MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OUR CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS). The assigned AR number should then be marked on the outside of the return package and on any correspondence.

FOR **WARRANTY** RETURNS, please have the following information available BEFORE contacting OMEGA:

La. 7....

- P.O. number under which the product was PURCHASED.
- 2. Model and serial number of the product under warranty, and
- 3. Repair instructions and/or specific problems you are having with the product.

FOR **NON-WARRANTY** REPAIRS OR **CALI-BRA- TION**, consult OMEGA for current repair/
calibration charges. Have the following information available BEFORE contacting OMEGA:

- 1. Your P.O. number to cover the COST of the of the repair/calibration,
- 2. Model and serial number of product, and
- 3. Repair instructions and/or specific problems you are having with the product.

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering.

OMEGA is a registered trademark of OMEGA ENGINEERING, INC.

© 1993 OMEGA ENGINEERING, INC. All rights reserved.