

1 YEAR
WARRANTY

CE



User's Guide

Shop online at

omega.com®

Ω OMEGA®

omega.com

e-mail: info@omega.com

**For latest product manuals:
*omegamanual.info***

ISO 9001

CERTIFIED
CORPORATE QUALITY

STAMFORD, CT

ISO 9002

CERTIFIED
CORPORATE QUALITY

MANCHESTER, UK

MADE IN TAIWAN



LDH-380
Refrigerant Leak Detector

omega.com[®]

ΩOMEGA[®]

OMEGAnet[®] Online Service
omega.com

Internet e-mail
info@omega.com

Servicing North America:

U.S.A.:

ISO 9001 Certified

One Omega Drive, Box 4047
Stamford, CT 06907-0047
Tel: (203) 359-1660
FAX: (203) 359-7700
e-mail: info@omega.com

Canada:

976 Bergar
Laval (Quebec) H7L 5A1, Canada
Tel: (514) 856-6928
FAX: (514) 856-6886
e-mail: info@omega.ca

For immediate technical or application assistance:

U.S.A. and Canada: Sales Service: 1-800-826-6342/1-800-TC-OMEGA[®]
Customer Service: 1-800-622-2378/1-800-622-BEST[®]
Engineering Service: 1-800-872-9436 1-800-USA-WHEN[®]

Mexico:

En Español: (001) 203-359-7803
FAX: (001) 203-359-7807
e-mail: espanol@omega.com
info@omega.com.mx

Servicing Europe:

Czech Republic:

Frystatska 184, 733 01 Karvina, Czech Republic
Tel: +420 (0)59 6311899
FAX: +420 (0)59 6311114
Toll Free: 0800-1-66342
e-mail: info@omegashop.cz

Germany/Austria:

Daimlerstrasse 26, D-75392 Deckenpfronn, Germany
Tel: +49 (0)7056 9398-0
FAX: +49 (0)7056 9398-29
Toll Free in Germany: 0800 639 7678
e-mail: info@omega.de

United Kingdom:

ISO 9002 Certified

One Omega Drive, River Bend Technology Centre
Northbank, Irlam, Manchester
M44 5BD United Kingdom
Tel: +44 (0)161 777 6611
FAX: +44 (0)161 777 6622
Toll Free in United Kingdom: 0800-488-488
e-mail: sales@omega.co.uk

It is the policy of OMEGA Engineering, Inc. to comply with all worldwide safety and EMC/EMI regulations that apply. OMEGA is constantly pursuing certification of its products to the European New Approach Directives. OMEGA will add the CE mark to every appropriate device upon certification.

The information contained in this document is believed to be correct, but OMEGA Engineering, Inc. accepts no liability for any errors it contains, and reserves the right to alter specifications without notice.

WARNING: These products are not designed for use in, and should not be used for, human applications.

1. GENERAL INFORMATION -----	2
2. FEATURES -----	2
3. SPECIFICATION -----	3
4. OPERATION GUIDE -----	4
5. PART & CONTROL-----	5
6. GETTING STARTED-----	7
6-1 Installing Batteries -----	7
6-2 Automatic Circuit/Reset Feature -----	8
6-3 Feature Sensitivity Adjustment -----	9
7. OPERATING PROCEDURE-----	9
8. REPLACING NEW SENSOR-----	11
9. CLEANING -----	12

1. GENERAL INFORMATION

Thank you for purchasing Refrigerant Leak Detector. Read though the instruction manual before operation for correct and safe usage. Please store and retain this instruction manual for future reference.

2. FEATURES

Refrigerant Leakage Detector is the perfect tool for maintaining the air-condition or a cooling system with compressor and Refrigerant. This unit used newly developed semi-conductor sensor which is extremely sensitive to variety of general used Refrigerant.

- Microprocessor Control with advanced digital signal processing.
- Multi color visual display.
- High-Low leak sensitivity selector.
- Low battery indication.
- Semiconductor gas sensor.
- Detection of R-134a, R-410A, R-407C, R22... Freon gas.
- Carrying case included.
- 15.5" (40 CM) flexible stainless probe.
- Reference Leak source included.
- Ambient concentration reset.

3. SPECIFICATION

Detectable Gases:

R-134a, R-404A, R-407C, R-410A, R-22 etc.

Sensitivity:

	H	L
R-22,134a	6g/year	30g/year
R-404A,407C,410A	8g/year	40g/year

Alarm Method:

Buzzer, Tricolor LED bar Indicator.

Power Usage:

4 AA size (6V DC) Alkaline Batteries

Snake Tube length: 40cm (15.5")

Dimension / Weight:

173 x 66 x 56 mm (approximately 400g)

Accessories:

Alkaline batteries (AA) X 4 pcs

User manual, leak check bottle, carry case.

Battery Life:

Approximately 40 hours normal use.

Auto power OFF:10 minutes

Warm-Up Time: Approximately 90 seconds

Operating Temperature & Humidity:

0 ~40 °C, < 80% RH

Storage Temperature & Humidity:

-10 ~60 °C, < 70% RH


Altitude: < 2000M (6500')

4. OPERATION GUIDE

(1) The refrigerant leak detector unit is not equipped with anti-explosive designs and measures. Do not use this unit in the environment with the burnable gases.


(2) There are some environmental condition that might cause the error reading:

- Pollutant places.
- Large temperature variation.
- Places with high wind velocity.
- Organic solvent, adhesive vapor, fuel gas and vesicant will cause abnormal response from the sensor. Try to avoid the environment involved with this substance.
- Places fill with too much to Freon Gas.

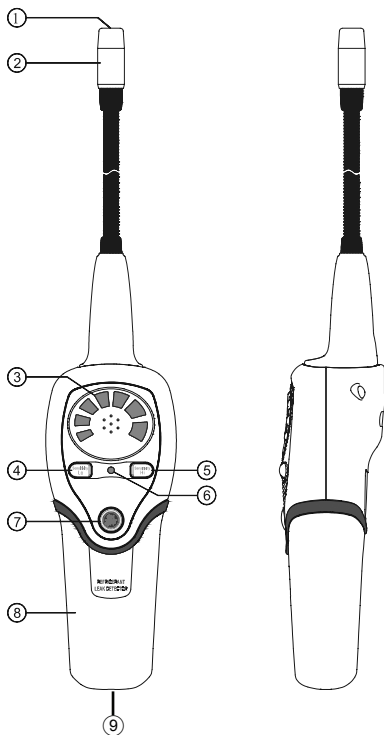5. PART & CONTROL**5-1 Panel Description**

-
- | | |
|-------------------------------|-------------------------|
| ① Sensor | ② Sensor Protector |
| ③ LED Leak Indicators | ④ Sensitivity Lo Button |
| ⑤ Sensitivity Hi Button | ⑥ Low Battery Indicator |
| ⑦ Power On/Off & Reset Button | |
| ⑧ Battery Cover | ⑨ Battery Cover Screw |
-

5-2 LED Leak Indicator Definition:

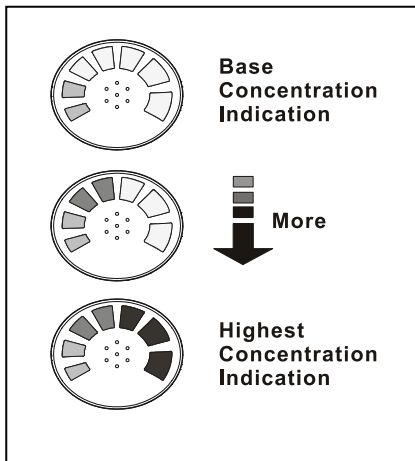


6. GETTING STARTED

6-1 Installing Batteries

- Loose the screw and remove the battery compartment door located on the bottom of the instrument as show below (Fig.1).
- Install 4 “AA” size alkaline batteries.
- Reinstall the battery cover by aligning it with the handle.

When the batteries are nearing the end of their useful life, the Red LED Low Battery indicator illuminates. The batteries should be replaced as quickly as possible.

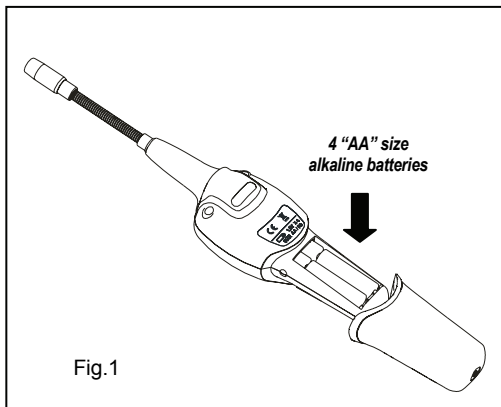

6-2 Automatic Ambient Reset Feature

The Refrigerant leak detectors feature an Automatic Ambient Reset function that sets the unit to ignore ambient concentrations of refrigerant.

- **Automatic Ambient Setup** - Upon initial power on, the unit automatically sets itself to ignore the level of refrigerant present at the tip. Only a level, or concentration, greater than this will cause an alarm.



CAUTION!

Be aware that this feature will cause the unit to ignore any refrigerant present at turn on. In other words, with the unit off if you place the tip up to a known leak and switch the unit on, no leak will be indicated!

- **Ambient Reset Feature** - Resetting the unit during operation performs a similar function, it programs the circuit to ignore the level of refrigerant present at the tip. This allows the user to 'home-in' on the source of the leak (higher concentration). Similarly, the unit can be moved to fresh air and reset for maximum sensitivity. Resetting the unit with no refrigerant present (fresh air) causes any level above zero to be detected.

6-3 Feature Sensitivity Adjustment

The Instrument provides two levels of sensitivity. When the unit is switched on, it is set to the high sensitivity level.

- To change the sensitivity, press the  key. When the key is pressed, the visual display will momentarily show the two left LED's (green) indicating Low Sensitivity level is selected.
- To switch back to High Sensitivity, press the  key. The two right LED's (red) will light momentarily indicating high Sensitivity level is selected.

7. OPERATING PROCEDURE


WARNING!

Do not operate this instrument in the presence of gasoline, natural gas, propane, or in other combustible atmospheres.

● How To Find Leaks?

NOTE: A sudden whipping of the leak detector probe or "blowing" into the sensor tip will affect the air flow over the sensor and cause the instrument to alarm.

(1) Power-Up & Reset function key:

The  key turns the Refrigerant leak detector instrument ON or OFF and reset function.

Press it once to turn on the Refrigerant leak detector, the display will illuminate with flash, for 1.5 minutes to heat up the sensor..

Press it again to reset the ambient base concentration.

Press and hold this button for 5 second to turn OFF the power.

(2) Verify the condition of the unit and sensor:

- Set the sensitivity level to “Hi”.
- Open the leak check bottle cover and slowly move it closer to snake tube nozzle.
- If the indication moves up to high from low then we should move the check bottle away and the LED should go off again. This shows that the unit is under working condition.
- If the unit does not perform as we expect, bring the unit for maintenance at your local sales office.

(3) Enter The Measuring Mode


- Place the tip of the leak-detector probe as close as possible to the site of the suspected leak. Try to position the probe within 1/4 inch (6 mm) of the possible leak source.
- Slowly move the probe past each possible leakage point.
- When the instrument detects a leak source, the audible tone will alarm. Additionally, the visual indicators will light from left to right, Green LED

then Orange LED then Red LED (highest concentration) as increasing of level indicate that the location is close to the source.


- When the Instrument signals a leakage, pull the probe away from the leak for a moment, then bring it back to pinpoint the location. If the refrigerant leak is large, setting the sensitivity switch to LOW will make it easier to find the exact site of the leak.
- Return the sensitivity switch to HIGH before searching for additional leaks.
- When you've finished leak-testing, turn OFF the instrument and store it in a clean place, protect the leak detector from possible damage.

8. REPLACING NEW SENSOR

The sensor had a limited operative period. Under normal operation, the sensor should work more than one year. Expose the sensor under high density of coolant (>30000ppm) will shorten its life cycle rapidly. It is important to ensure that sensor surface is free from water droplets, vapor, oil, grease, dust and any or all other forms of contaminant. Furthermore, to ensure good working condition of the unit, sensors must be replacement periodically when its operative life is over.

 *WARNING!* *When replacing new sensor, the worn-out sensor may be HOT!!*

- (1) Remove cone cap cover from the tip of snake tube.
- (2) Pull out old sensor and insert the new sensor into the plug (see below fig.2).
- (3) Seal the cap cover over the plug.

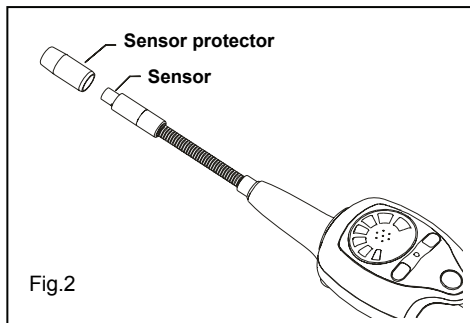

9. CLEANING:

The Instrument plastic housing can be cleaned with standard household detergent or isopropyl alcohol. Care should be taken to prevent the cleaner from entering the instrument. Gasoline and other solvents may damage the plastic and should be avoided.

⚠ WARNING!

The detergent or isopropyl alcohol might damage the sensor, please keep then from the sensor through the process.

Where Do I Find Everything I Need for Process Measurement and Control? **OMEGA...Of Course!** *Shop online at omega.com*

TEMPERATURE

- ☑ Thermocouple, RTD & Thermistor Probes, Connectors, Panels & Assemblies
- ☑ Wire: Thermocouple, RTD & Thermistor
- ☑ Calibrators & Ice Point References
- ☑ Recorders, Controllers & Process Monitors
- ☑ Infrared Pyrometers

PRESSURE, STRAIN AND FORCE

- ☑ Transducers & Strain Gages
- ☑ Load Cells & Pressure Gages
- ☑ Displacement Transducers
- ☑ Instrumentation & Accessories

FLOW/LEVEL

- ☑ Rotameters, Gas Mass Flowmeters & Flow Computers
- ☑ Air Velocity Indicators
- ☑ Turbine/Paddlewheel Systems
- ☑ Totalizers & Batch Controllers

pH/CONDUCTIVITY

- ☑ pH Electrodes, Testers & Accessories
- ☑ Benchtop/Laboratory Meters
- ☑ Controllers, Calibrators, Simulators & Pumps
- ☑ Industrial pH & Conductivity Equipment

DATA ACQUISITION

- ☑ Data Acquisition & Engineering Software
- ☑ Communications-Based Acquisition Systems
- ☑ Plug-in Cards for Apple, IBM & Compatibles
- ☑ Datalogging Systems
- ☑ Recorders, Printers & Plotters

HEATERS

- ☑ Heating Cable
- ☑ Cartridge & Strip Heaters
- ☑ Immersion & Band Heaters
- ☑ Flexible Heaters
- ☑ Laboratory Heaters

ENVIRONMENTAL MONITORING AND CONTROL

- ☑ Metering & Control Instrumentation
- ☑ Refractometers
- ☑ Pumps & Tubing
- ☑ Air, Soil & Water Monitors
- ☑ Industrial Water & Wastewater Treatment
- ☑ pH, Conductivity & Dissolved Oxygen Instruments

WARRANTY/DISCLAIMER

OMEGA ENGINEERING, INC. warrants this unit to be free of defects in materials and workmanship for a period of **13 months** from date of purchase. OMEGA's WARRANTY adds an additional one (1) month grace period to the normal **one (1) year product warranty** to cover handling and shipping time. This ensures that OMEGA's customers receive maximum coverage on each product.

If the unit malfunctions, it must be returned to the factory for evaluation. OMEGA's Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective, it will be repaired or replaced at no charge. OMEGA's WARRANTY does not apply to defects resulting from any action of the purchaser, including but not limited to mishandling, improper interfacing, operation outside of design limits, improper repair, or unauthorized modification. This WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of having been damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA's control. Components in which wear is not warranted, include but are not limited to contact points, fuses, and triacs.

OMEGA is pleased to offer suggestions on the use of its various products. However, OMEGA neither assumes responsibility for any omissions or errors nor assumes liability for any damages that result from the use of its products in accordance with information provided by OMEGA, either verbal or written. OMEGA warrants only that the parts manufactured by the company will be as specified and free of defects. OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESSED OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. LIMITATION OF LIABILITY: The remedies of purchaser set forth herein are exclusive, and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.

CONDITIONS: Equipment sold by OMEGA is not intended to be used, nor shall it be used: (1) as a "Basic Component" under 10 CFR 21 (NRC), used in or with any nuclear installation or activity; or (2) in medical applications or used on humans. Should any Product(s) be used in or with any nuclear installation or activity, medical application, used on humans, or misused in any way, OMEGA assumes no responsibility as set forth in our basic WARRANTY/DISCLAIMER language, and, additionally, purchaser will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the Product(s) in such a manner.

RETURN REQUESTS/INQUIRIES

Direct all warranty and repair requests/inquiries to the OMEGA Customer Service Department. BEFORE RETURNING ANY PRODUCT(S) TO OMEGA, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OMEGA'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS). The assigned AR number should then be marked on the outside of the return package and on any correspondence.

The purchaser is responsible for shipping charges, freight, insurance and proper packaging to prevent breakage in transit.

FOR **WARRANTY** RETURNS, please have the following information available BEFORE contacting OMEGA:

1. Purchase Order number under which the product was PURCHASED,
2. Model and serial number of the product under warranty, and
3. Repair instructions and/or specific problems relative to the product.

FOR **NON-WARRANTY** REPAIRS, consult OMEGA for current repair charges. Have the following information available BEFORE contacting OMEGA:

1. Purchase Order number to cover the COST of the repair,
2. Model and serial number of the product, and
3. Repair instructions and/or specific problems relative to the product.

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering.

OMEGA is a registered trademark of OMEGA ENGINEERING, INC.

© Copyright 2007 OMEGA ENGINEERING, INC. All rights reserved. This document may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without the prior written consent of OMEGA ENGINEERING, INC.