


1 YEAR
WARRANTY



Ω OMEGA[®] User's Guide

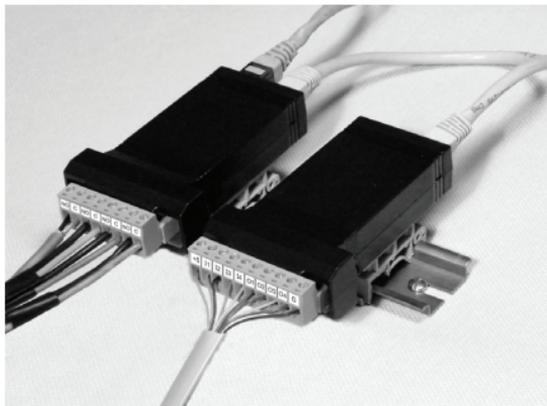

**Shop online at
omega.com[®]**

e-mail: info@omega.com
***For latest product manuals:
omegamanual.info***



DPA 1002

DIN-Rail Mounting Kit



OMEGAnet[®] Online Service omega.com	Internet e-mail info@omega.com
---	--

Servicing North America:

U.S.A.: <u>ISO 9001 Certified</u>	Omega Engineering, Inc., One Omega Drive, P.O. Box 4047 Stamford, CT 06907-0047 USA Toll Free: 1-800-826-6342 FAX: (203) 359-7700	TEL: (203) 359-1660 e-mail: info@omega.com
Canada:	976 Bergar Laval (Quebec), H7L 5A1 Canada Toll-Free: 1-800-826-6342 FAX: (514) 856-6886	TEL: (514) 856-6928 e-mail: info@omega.com

For immediate technical or application assistance:

U.S.A. and Canada:	Sales Service: 1-800-826-6342/1-800-TC-OMEGA * Customer Service: 1-800-622-2378/1-800-622-BEST * Engineering Service: 1-800-872-9436/1-800-USA-WHEN *	
Mexico/ Latin America:	En Español: 001 (203) 359-7803 info@omega.com.mx	FAX: 001 (203) 359-7807 e-mail: espanol@omega.com

Servicing Europe:

Benelux:	Managed by the United Kingdom Office Toll-Free: 0800 099 3344 FAX: +31 20 643 46 43	TEL: +31 20 347 21 21 e-mail: sales@omegaeng.nl
Czech Republic:	Frystatska 184 733 01 Karviná, Czech Republic Toll-Free: 0800-1-66342 FAX: +420-59-6311114	TEL: +420-59-6311899 e-mail: info@omegashop.cz
France:	Managed by the United Kingdom Office Toll-Free: 0800 466 342 FAX: +33 (0) 130 57 54 27	TEL: +33 (0) 161 37 29 00 e-mail: sales@omega.fr
Germany/Austria:	Daimlerstrasse 26 D-75392 Deckenpfronn, Germany Toll-Free: 0800 6397678 FAX: +49 (0) 7056 9398-29	TEL: +49 (0) 7056 9398-0 e-mail: info@omega.de
United Kingdom: <u>ISO 9001 Certified</u>	OMEGA Engineering Ltd. One Omega Drive, River Bend Technology Centre, Northbank Irlam, Manchester M44 5BD United Kingdom Toll-Free: 0800-488-488 FAX: +44 (0) 161 777-6622	TEL: +44 (0) 161 777-6611 e-mail: sales@omega.co.uk

It is the policy of OMEGA Engineering, Inc. to comply with all worldwide safety and EMC/EMI regulations that apply. OMEGA is constantly pursuing certification of its products to the European New Approach Directives. OMEGA will add the CE mark to every appropriate device upon certification.

The information contained in this document is believed to be correct, but OMEGA accepts no liability for any errors it contains, and reserves the right to alter specifications without notice.

WARNING: These products are not designed for use in, and should not be used for, human applications.

WARRANTY/DISCLAIMER

OMEGA ENGINEERING, INC. warrants this unit to be free of defects in materials and workmanship for a period of 13 months from date of purchase. OMEGA's WARRANTY adds an additional one (1) month grace period to the normal one (1) year product warranty to cover handling and shipping time. This ensures that OMEGA's customers receive maximum coverage on each product. If the unit malfunctions, it must be returned to the factory for evaluation. OMEGA's Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective, it will be repaired or replaced at no charge. OMEGA's WARRANTY does not apply to defects resulting from any action of the purchaser, including but not limited to mishandling, improper interfacing, operation outside of design limits, improper repair, or unauthorized modification. This WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of having been damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA's control. Components in which wear is not warranted, include but are not limited to contact points, fuses, and triacs.

OMEGA is pleased to offer suggestions on the use of its various products. However, OMEGA neither assumes responsibility for any omissions or errors nor assumes liability for any damages that result from the use of its products in accordance with information provided by OMEGA, either verbal or written. OMEGA warrants only that the parts manufactured by the company will be as specified and free of defects. OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESSED OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. LIMITATION OF LIABILITY: The remedies of purchaser set forth herein are exclusive, and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.

CONDITIONS: Equipment sold by OMEGA is not intended to be used, nor shall it be used: (1) as a "Basic Component" under 10 CFR 21 (NRC), used in or with any nuclear installation or activity; or (2) in medical applications or used on humans. Should any Product(s) be used in or with any nuclear installation or activity, medical application, used on humans, or misused in any way, OMEGA assumes no responsibility as set forth in our basic WARRANTY/DISCLAIMER language, and, additionally, purchaser will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the Product(s) in such a manner.

RETURN REQUEST/INQUIRIES

Direct all warranty and repair requests/inquiries to the OMEGA Customer Service Department. BEFORE RETURNING ANY PRODUCT(S) TO OMEGA, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OMEGA'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PRO-CESsing DELAYS). The assigned AR number should then be marked on the outside of the return package and on any correspondence. The purchaser is responsible for shipping charges, freight, insurance and proper packaging to prevent breakage in transit.

FOR **WARRANTY** RETURNS, please have the following information available BEFORE contacting OMEGA:

1. Purchase Order number under which the product was PURCHASED,
2. Model and serial number of the product under warranty, and
3. Repair instructions and/or specific problems relative to the product.

FOR **NON-WARRANTY** REPAIRS, consult OMEGA for current repair charges. Have the following information available BEFORE contacting OMEGA:


1. Purchase Order number to cover the COST of the repair,
2. Model and serial number of the product, and
3. Repair instructions and/or specific problems relative to the product.

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering.

OMEGA is a registered trademark of OMEGA ENGINEERING, INC.

© Copyright 2012 OMEGA ENGINEERING, INC. All rights reserved. This document may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without the prior written consent of OMEGA ENGINEERING, INC.

The mounting kit includes (1) 6" length of DIN-rail, (4) mounting clips, and this instruction sheet. It contains enough parts to mount 2 modules. Please read the instructions thoroughly before proceeding.

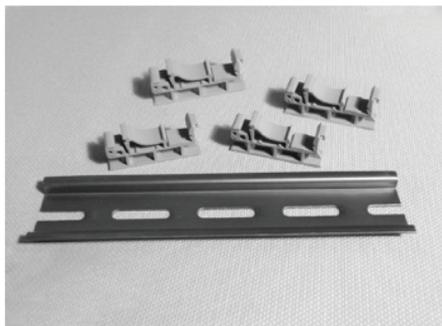


INSTRUCTIONS


Step 1

Mounting the DIN-rail clips to the module.

Place the expansion module on a flat surface with the bottom surface facing up. The bottom surface can be identified as the surface closest to the locking tab slot on the modular connector (see picture at right).

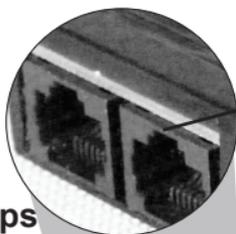


Locking Tab Slot

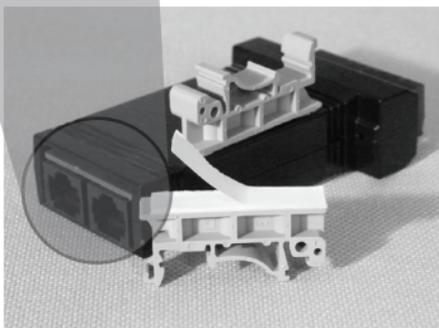


Expansion Module Example


Peel the protective layer off of the adhesive tape on the bottom of one of the mounting clips. With the hinge end of the clip (see below) facing the end of the module with the communications connector, align the clip along the long (side) edge of the module and centered lengthwise within the flat surface of the module.

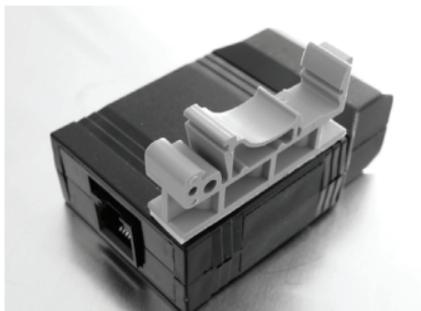

Communications Module Example

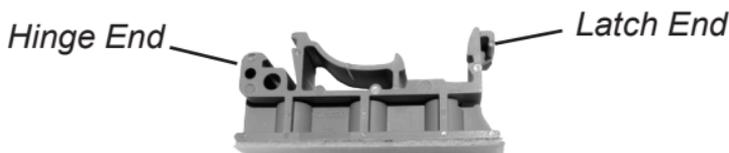

Firmly press down on clip for 10 seconds. Repeat this procedure on opposite side. Once clips are properly installed, the modules with clips mounted should look similar to one or both of the modules pictured to the right. While the adhesive is initially quite strong, this strength improves significantly over a period of approximately 12 hours.

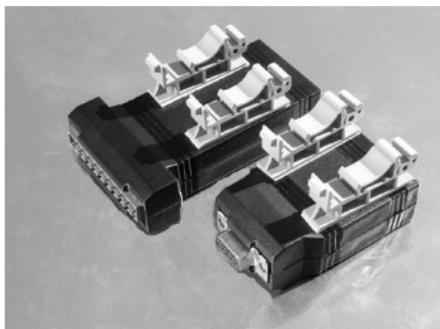


Completed Assemblies

Step 2

Mounting the DIN-rail to your panel.

The modules are very light (approx. 1½ oz each). As such, the mounting hardware does not need to be very strong. We recommend two #10 pan head screw (shown to the right), but only because it best accommodates the slots in the DIN-rail. Do consider any strain your wiring might place on the module mounting. In many cases, you may find mounting the DIN-rail with double-sided tape might be acceptable (not recommended in areas of high vibration or temperatures outside the range of 45 to 95°F). When choosing a location to mount the DIN-rail, keep in mind that wires will be entering both ends of the modules (see picture shown on the bottom right). Leave enough space on either end of module to allow for wire routing. Otherwise undue stress may be placed on the module's connectors and mounting clips. The DIN-rail can be mounted on any vertical or horizontal mounting plane, providing wiring that is properly secured.

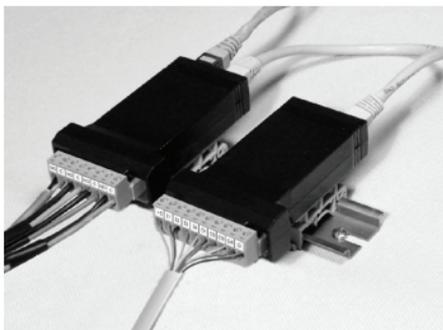


Step 3

Mounting modules to DIN-rail.

To mount modules to DIN-rail, first locate the approximate position you would like to place the module on the DIN-rail, then hook hinge end of mounting clip to edge of DIN-rail as shown to the right. Then lower the opposite “latch end” of the clip onto the rail. Press down on the module until the latch end snaps in place.

A typical installation may look like the photo to the right once modules are mounted to the DIN-rail.

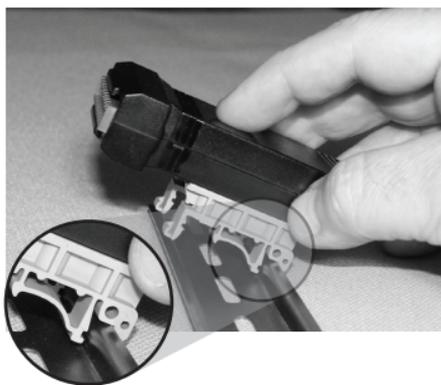

Step 4

After mounting the expansion module(s), please refer to the Instruction Manual for each module for proper wiring and use instructions.

Where Do I Find Everything I Need for Process Measurement and Control? **OMEGA...Of Course!** *Shop online at omega.comSM*

TEMPERATURE

- ☑ Thermocouple, RTD & Thermistor Probes, Connectors, Panels & Assemblies
- ☑ Wire: Thermocouple, RTD & Thermistor
- ☑ Calibrators & Ice Point References
- ☑ Recorders, Controllers & Process Monitors
- ☑ Infrared Pyrometers

PRESSURE, STRAIN AND FORCE

- ☑ Transducers & Strain Gages
- ☑ Load Cells & Pressure Gages
- ☑ Displacement Transducers
- ☑ Instrumentation & Accessories

FLOW/LEVEL

- ☑ Rotameters, Gas Mass Flowmeters & Flow Computers
- ☑ Air Velocity Indicators
- ☑ Turbine/Paddlewheel Systems
- ☑ Totalizers & Batch Controllers

pH/CONDUCTIVITY

- ☑ pH Electrodes, Testers & Accessories
- ☑ Benchtop/Laboratory Meters
- ☑ Controllers, Calibrators, Simulators & Pumps
- ☑ Industrial pH & Conductivity Equipment

DATA ACQUISITION

- ☑ Data Acquisition & Engineering Software
- ☑ Communications-Based Acquisition Systems
- ☑ Plug-in Cards for Apple, IBM & Compatibles
- ☑ Data Logging Systems
- ☑ Recorders, Printers & Plotters

HEATERS

- ☑ Heating Cable
- ☑ Cartridge & Strip Heaters
- ☑ Immersion & Band Heaters
- ☑ Flexible Heaters
- ☑ Laboratory Heaters

ENVIRONMENTAL MONITORING AND CONTROL

- ☑ Metering & Control Instrumentation
- ☑ Refractometers
- ☑ Pumps & Tubing
- ☑ Air, Soil & Water Monitors
- ☑ Industrial Water & Wastewater Treatment
- ☑ pH, Conductivity & Dissolved Oxygen Instruments