

TABLE OF CONTENTS

Introduction.....	2
Features.....	3
Safety Precautions.....	4
Unpacking.....	6
CN4321	
Model Configuration.....	7
Specifications.....	8
Outer Dimensions and Panel Cutout Size.....	13
Installation.....	14
Wiring Instructions:.....	15
Front Panel Description.....	16
Front Panel Operation.....	17
CN4431	
Model Configuration.....	19
Specifications.....	20
Outer Dimensions and Panel Cutout Size.....	25
Installation.....	26
Wiring Instructions:.....	27
System Wiring Diagrams.....	32
Front Panel Description.....	33
Front Panel Operation.....	34
Autotuning.....	36
Programming	
Setup Menu.....	37
System Menu.....	40
Factory Preset Menu.....	57
Error Messages.....	62
Appendix A: Autotuning.....	63
Appendix B: Manual Tuning.....	66
Appendix C: Heat/Cool Option.....	75
Quick Reference.....	79

INTRODUCTION

The OMEGA® CN4321 and CN4431 controllers are economical process controllers that accept temperature or process inputs, and have sophisticated control capabilities, providing on/off control, PID, or autotune PID, with Fuzzy Logic. They feature an 8-segment ramp/soak function.

The CN4431 is a 1/16 DIN controller that has dual digital display for simultaneous indication of process value and setpoint. It is available with a single output that includes mechanical relay, 24V DC SSR driver, or 4-20 mA output. Options available include alarms (configurable as high/low, deviation, or zone alarm).

The CN4321 is a 1/32 DIN controller that has a single digital display. It is available with either single or dual outputs; dual output models can be used for heat/cool, heat/heat or cool/cool control. Output options include mechanical relay and 5V DC SSR driver. It also has an optional programmable alarm output.



The first section of this manual details the specifications and general description for the CN4321 controller. The second section will cover the CN4431 controller, followed by a detailed description of the programming parameters, which are common to both the controllers. Several appendices describe some of the controlling techniques. Finally, a Quick Reference guide gives a listing of all the parameters and their default values.

FEATURES

- Fuzzy Logic Control
- PID Autotune with manual override - heating or cooling
- Programmable control action - reverse or direct
- Programmable cycle time
- Programmable inputs - Thermocouple/RTD, or Current/ Voltage
- Sensor burn-out protection
- Zero/span calibration
- Outputs: Relay, Solid-state relay drive, or 4-20mA DC (4-20mA not available on CN4321)
- Secondary output for cooling (optional)
- High/low alarm outputs (optional)
- Menu-driven format
- Setting – touch keys on front panel
- Programmable 8-segment ramp/soak function
- Digital filtering (to suppress factory noise)
- Adjustable setpoint range
- Selectable °F/°C
- Offset adjustments
- Programmable decimal point
- Programmable lock-up feature
- Advanced security options to prevent unauthorized parameter changes
- 4-digit, LED indication
- Output status indication
- Fault indication
- Non-volatile memory
- 1/32 or 1/16 DIN panel mount package with plastic bracket
- NEMA 4X faceplate
- ABS plastic housing
- Termination– terminal block (CN4321) or socket with screw-down terminals (CN4431)
- 85 to 264V AC free voltage power supply
- 24V AC/DC optional power supply (on CN4431 only)
- UL and C-UL recognized
- CE approved

SAFETY PRECAUTIONS

Before using this product, the user is requested to read the following precautions carefully to ensure safety. The safety requirements are classified as either "warning" or "caution" according to the following explanations:

 Warning	suggesting that the user's mishandling can result in personal death or serious injury.
 Caution	suggesting that the user's mishandling can result in personal injury or damage to the property.

Warning

Wiring

1. If there is danger of serious accident resulting from a failure or defect in this unit, provide the unit with an appropriate external protective circuit to prevent an accident.
2. The unit is normally supplied without a power switch or a fuse. Use power switch and fuse as required (Rating of the fuse: 250V, 1A)

Power supply

1. Be sure to use the rated power supply voltage to protect the unit against damage and to prevent failure.
2. Keep the power off until all of the wiring is completed so that electric shock and trouble with the unit can be prevented.

General

1. Never attempt to disassemble, modify, or repair this unit. Tampering with the unit may result in malfunction, electric shock, or fire.
2. Do not use the unit in combustible or explosive gaseous atmospheres.



Caution

Installation

1. Avoid installing the unit in places where:
 - the ambient temperature may reach beyond the range of -10 to 50°C (14 to 122°F) while in operation
 - the ambient humidity may reach higher than 90% RH while in operation
 - a change in the ambient temperature is so rapid as to cause condensation
 - corrosive gases (sulfide and ammonia gas, in particular) or combustible gases are emitted
 - the unit is subject to vibration or shock
 - the unit is likely to come in contact with water, oil, chemicals, steam, or vapor
 - the unit is exposed to dust, salt, or air containing iron particles
 - the unit is subject to interference with static electricity, magnetism, or noise
 - the unit is exposed to direct sunlight
 - heat may be accumulated due to the radiation of heat

Maintenance

1. Do not use organic solvents such as alcohol or benzene to wipe this unit. Use a neutral detergent.

UNPACKING

Remove the Packing List and verify that you have received all equipment, including the following (quantities in parenthesis):

- Process controller (1)
- Mounting bracket (1)
- Socket with CN4431 (1)
- Operator's manual (1)
- Waterproof gasket (1)
- 250 Ω precision resistor (when required) (1)
- Current transformer (when required) (1)

If you have any questions about the shipment, please call the OMEGA[®] Customer Service Department.

When you receive the shipment, inspect the container and equipment for signs of damage. Note any evidence of rough handling in transit. Immediately report any damage to the shipping agent.

Note:

The carrier will not honor damage claims unless all shipping materials are saved for inspection. After examining and removing contents, save packing material and carton in the event reshipment is necessary.

CN4321 MODEL CONFIGURATION

MODEL	DESCRIPTION
Single Output Models	
CN4321(*)-R1	1/32 DIN controller, relay output
CN4321(*)-D1	1/32 DIN controller, DC SSR driver output
Dual Output Models	
CN4322(*)-R1-R2	1/32 DIN controller, dual relay output
CN4322(*)-D1-R2	1/32 DIN controller, DC SSR driver and relay output
<i>* Specify TR for Thermocouple/RTD input or CV for current/voltage input</i>	
ALARM OPTION (Not Available with CN4322)	
-A	1A, SPST relay

CN4321 SPECIFICATIONS

INPUT RANGE TABLE:

Input Signal	Input Range (°C)	Input Range (°F)	Remarks
Thermocouple*			
J	0 ~ 800	32 ~ 1472	Cold Junction compensating function built-in
K	0 ~ 1200	32 ~ 2192	
R	0 ~ 1600	32 ~ 2912	
B	0 ~ 1800	32 ~ 3272	
S	0 ~ 1600	32 ~ 2912	
T	-199 ~ 200	-328 ~ 392	
T	-150 ~ 400	-238 ~ 752	
E	-199 ~ 800	-328 ~ 1472	
N	0 ~ 1300	32 ~ 2372	
PL2	0 ~ 1300	32 ~ 2372	
RTD*			
Pt100 $\alpha = .00385$	-150 ~ 850	-238 ~ 1562	Allowable wiring resistance 10 ohms max (per wire).
DC Voltage/ Current**	Scaling Range: -1999 to 9999 Engineering units		For current input, use the 250 Ω resistor to obtain 1-5V DC or 0-5V DC input.
1-5V			
0-5V			
4-20mA			
0-20mA			

* For TR models

** For CV models

See also the description for parameter P-n2 in the programming section, on how to program for a particular input.

CONTROL FUNCTION

(SINGLE OUTPUT)

Control action	PID control with auto-tuning Fuzzy control with auto-tuning
Proportional band (P)	0-999.9% of full scale (FS), setting in 0.1% steps
Integral time (I)	0-3200 sec, setting in 1 sec steps
Differential time (D)	0-999.9 sec, setting in 0.1 sec steps
P,I,D = 0: On/Off action I,D = 0: Proportional action	
Proportional cycle	1-150 sec, setting in 1 sec steps, for relay contact output and DC SSR driver output only
Hysteresis width	0-50% FS, setting in 1 E.U. (Engineering Unit) steps On/Off action only
Anti-reset wind up	0-100% FS, setting in 1 E.U. steps, auto-setting with auto-tuning
Input sampling cycle	0.5 sec

CONTROL FUNCTION

(DUAL OUTPUT) (Heat/Cool Type)

Heating Proportional band	$P \times 1/2$ (P= 0-999.9%)
Cooling Proportional band	Heating proportional band \times Cooling proportional band coefficient Cooling proportional band coefficient= 0-100 0: On/Off action
Integral time	0-3200 sec for heating and cooling
Differential time	0-999.9 sec for heating and cooling

P,I,D= 0: On/Off action (without dead band) for heating and cooling	
I,D= 0: Proportional action	
Proportional cycle	1-150 sec, for relay contact output and DC SSR driver output only
Hysteresis width	On/Off action for heating and cooling: 0.5% FS On/Off action for cooling: 0.5% FS
Anti-reset wind-up	0-100% FS, setting in 1 E.U. steps, auto setting with auto-tuning
Overlap/dead band	±50% of heating proportional band
Input sampling cycle	0.5 sec

OUTPUT

Relay contact output:	220V AC/30V DC 2A (resistive load) Mechanical life: 10 ⁷ times (under no load) Electrical life: 10 ⁶ times (under the rated load)
SSR driver output:	On-5V DC typ. (5.5V ±1V), 20mA max. Off-0.5V or less
Alarm output/ 2nd control output:	1 point, 220V AC/ 30V DC 2A (resistive load)
Alarm:	Configurable from the front panel keys as Absolute, Deviation, Zone, or Combination alarms with or without the hold feature.

SETTING AND INDICATION

Accuracy:	±0.5% of FS ±1 digit R T/C: 0-400°C: ±1% FS ±1 digit B T/C: 0-500°C: ±5% FS ±1 digit
Indication:	4 digit, 7-segment LED (green)

ADDITIONAL FUNCTIONS

8-segment ramp-soak:	4 ramp/4 soak with 16 different modes Setpoint setting: 0-100% FS Ramp/soak period: 0-99 hrs 59 mins
Parameter mask:	Parameters can be masked from being displayed
Self-diagnosis:	Watchdog timer monitors program error

PROTECTION FROM POWER FAILURE

Memory protection:	Non-volatile memory. Parameter values remain unchanged with disruption of power. Ramp/soak function has to be re-initiated.
--------------------	---

OPERATING AND STORAGE CONDITIONS

Operating temperature:	-10 to 50°C (14 to 122°F)
Operating humidity:	Less than 90% RH (non-condensing)
Storage temperature:	-20 to 60°C (-4 to 140°F)

GENERAL SPECIFICATIONS

Rated voltage:	85-264V AC, 50/60 Hz, or 24V AC/DC \pm 10% (optional)
Power consumption:	5VA or less (100V AC) 8VA or less (240V AC)
Insulation resistance:	20M Ω or more (500V DC)
Withstand voltage:	Power source-Earth: 1500V AC, 1 min Power source-input terminal: 1500V AC, 1 min Earth-relay output: 1500V AC, 1 min Earth-Alarm output: 1500V AC, 1 min Between other terminals: 500V AC, 1 min
Input impedance:	Thermocouple: 1M Ω or more Voltage: 450K Ω or more Current: 250 Ω (external resistor)


Allowable signal source resistance:	Thermocouple: 100 Ω or less Voltage: 1K Ω or less
Allowable wiring resistance:	RTD: 10 Ω or less per wire
Reference junction compensation accuracy:	± 1 °C (at 23°C)
Process variable offset:	$\pm 10\%$ FS
Setpoint variable offset:	$\pm 50\%$ FS
Input filter:	0-900.0 sec, setting in 0.1 sec steps (primary lagging filter)
Noise rejection ratio:	Normal mode noise (50/60Hz): 50dB or more Common mode noise (50/60Hz): 140dB or more

STRUCTURE

Mounting method:	Panel mounting
Enclosure:	Plastic housing
External terminal:	Terminal block with screw connection
External dimensions:	48 (W) x 24.5 (H) x 99 (D) mm 1.89 x 0.96 x 3.90 in.
Weight:	Approx. 100 g
Finish color:	Black (front panel)
Protection:	Front panel: NEMA 4X (equivalent to IEC IP66) Protection against corrosion, windblown dust and rain, and hose-directed water. Rear case: IEC IP20. Protection against solid objects up to 12mm.
Installation category:	II
Pollution degree:	2

OUTER DIMENSIONS & PANEL CUTOUT SIZE


Outer Dimensions

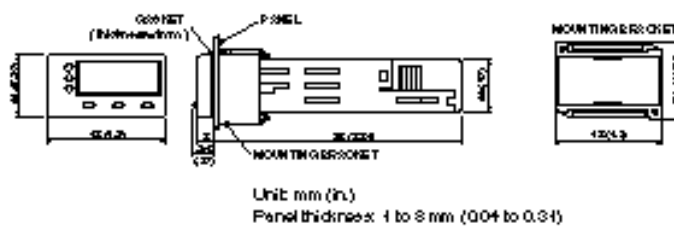

Panel Cutout Size

When installing "n" number of units

- A: 57 (2.24) or more
- B: 34 (1.34) or more
- +0.5(0.02)
- 0
- D: 22.2 (0.87) +0.3(0.01)
- 0

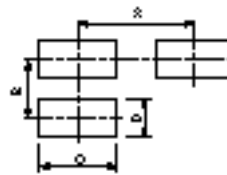


INSTALLATION


NEMA 4X Integrity

The front side of this instrument conforms to NEMA 4X. To ensure the waterproofness between the instrument and the panel, use the gasket that is provided with the unit according to the installation procedure described below.

1. Install the gasket over the enclosure and insert the unit into the panel as shown in Figure 1.
2. Slide the mounting bracket and tighten the screws as shown in Figure 2.

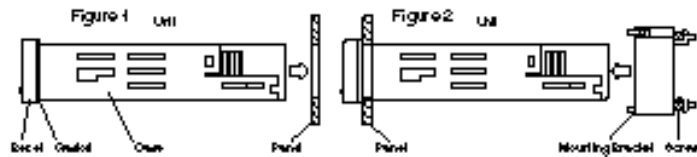


Caution: After the mounting bracket is installed, check the gasket for displacement and detachment as shown in Figure 3.

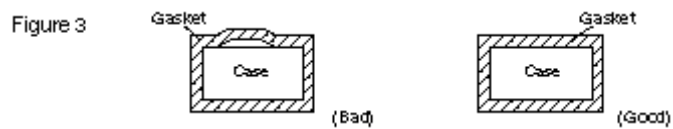


WIRING INSTRUCTIONS

 Terminal connection



Warning

Be sure to use the rated power supply voltage and polarity.

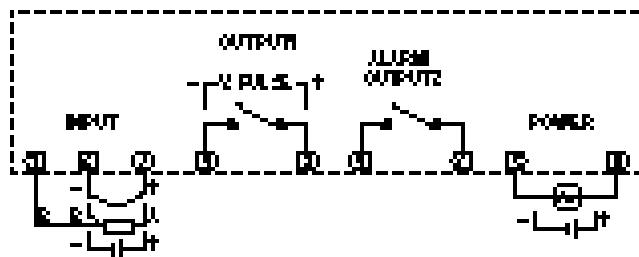

* For current input, install the 250Ω precision resistor (accessory) before using the unit.




Wiring material

1. For terminals 1, 2, 3, use 18 ~ 26 gauge wire.
2. For terminals 4 to 9, use 14 ~ 24 gauge wire.

Please refer to Page 28 for further instructions on wiring power, input and output to the controller.

FRONT PANEL DESCRIPTION

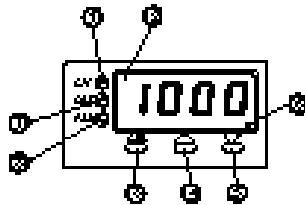

NAME

- ① Set value (SV) indication lamp
- ② Measured value (PV)/ Set value (SV)/ parameter display
- ③ Select key
- ④ UP key
- ⑤ DOWN key
- ⑥ Autotuning indication lamp
- ⑦ Control output indication lamp
- ⑧ Alarm indication lamp

FUNCTION

- Comes on when the set value (SV) is displayed
- Measured value (PV), Setpoint value (SV), or parameter symbols and codes are displayed.
- To be used when the first, second, or third block parameters are selected
- Pressing the key once will increase the value by one. By pressing and holding it, the value is continuously incremented.
- Pressing the key once will decrease the value by one. By pressing and holding it, the value is continuously decremented.
- Blinks while PID autotuning is being performed
- Comes on when the control output is ON
- Comes on when the alarm/second output is activated. Blinks while the alarm is being set.

FRONT PANEL OPERATION

The programming menu consists of three blocks— SETUP MENU, SYSTEM MENU, and FACTORY PRESET MENU. At power up the controller will be in the operational mode— process variable (PV) will be displayed. This is the variable that is being controlled, and it is not programmable. When setting the parameters, turn off the power to the load (operating equipment) to ensure safety. Allow 30 minutes for the unit to stabilize in terms of temperature, and to achieve the rated accuracy. Option-related features are displayed only when the options are provided.

Viewing and Setting Parameters

- The data is automatically registered in 3 seconds after the setting. It can also be registered by pressing the SEL key.

How to set Setpoint value (SV)

Operation

1. Power on
2. Press SEL key
3. Press UP or DOWN key
4. Press SEL key to go back to the operational mode

Display

- Process value (PV)
- SV value; SV lamp is lit
- SV value changes accordingly
- Process value (PV); SV lamp off

SETUP MENU

Operation

1. Operational mode
2. Press SEL key for 3 seconds
3. Press UP key to select rrUn/rHLd, if necessary
4. Press SEL key once

Display

- Process value (PV)
- roFF
- rrUn/rHLd
- ALM LED blinks; AH data (for units with alarm option)

- | | |
|---|--------------------|
| 5. Press SEL key to access the next parameter | – AT 0, |
| 6. Press SEL key for 3 secs. | – Operational mode |

SYSTEM MENU

Operation

1. Operational mode
2. Press and hold SEL key
3. Release and press SEL key again
4. Press UP or DOWN key
5. Press SEL key once
6. Press DOWN key to scroll down the menu
7. Press SEL key for 3 secs.

Display

- Process value
- 3 seconds later, "roFF"
- 7 seconds later, "P"
- "P" data
- "P" data changes accordingly
- "P"
- "i", "d",, "Mod"
- Operational mode

FACTORY PRESET MENU

Operation

1. Operational mode
2. Press and hold SEL key
3. Release and press SEL key again
4. Press UP or DOWN key
5. Press SEL key once
6. Press DOWN key to scroll down the menu
7. Press SEL key for 3 secs.

Display

- Process value
- 3 seconds later, "roFF"
- 7 seconds later, "P"
- 9 seconds later, "P-n1"
- "P-n1" data
- "P-n1" data changed
- "P-n1"
- "P-dF",, "dSP7"
- Operational mode

Please refer to Quick Reference guide for a listing of all the parameters.

CN4431 MODEL CONFIGURATION

MODEL	DESCRIPTION
CN4431(*)-R1	1/16 DIN controller, relay output
CN4431(*)-D1	1/16 DIN controller, DC SSR driver output
CN4431(*)-F1	1/16 DIN controller, 4-20 mA DC output

** Specify TR for Thermocouple/RTD input or CV for current/voltage input*

ALARM OPTION

-A 2A, SPST relay

LOW VOLTAGE POWER SUPPLY OPTION

-24V 24V AC/DC, 50/60 Hz

CN4431 SPECIFICATIONS

INPUT RANGE TABLE:

Input Signal	Input Range (°C)	Input Range (°F)	Remarks
Thermocouple*			
J	0 ~ 800	32 ~ 1472	Cold Junction compensating function built-in
K	0 ~ 1200	32 ~ 2192	
R	0 ~ 1600	32 ~ 2912	
B	0 ~ 1800	32 ~ 3272	
S	0 ~ 1600	32 ~ 2912	
T	-199 ~ 200	-328 ~ 392	
T	-150 ~ 400	-238 ~ 752	
E	-199 ~ 800	-328 ~ 1472	
N	0 ~ 1300	32 ~ 2372	
PL2	0 ~ 1300	32 ~ 2372	
RTD*			
Pt100 $\alpha = .00385$	-150 ~ 850	-238 ~ 1562	Allowable wiring resistance 10 ohms max (per wire).
DC Voltage/ Current**			
1-5V 0-5V 4-20mA 0-20mA	Scaling Range: -1999 to 9999 Engineering units		For current input, use the 250 Ω resistor to obtain 1-5V DC or 0-5V DC input.

* For TR models

** For CV models

See also the description for parameter P-n2 in the programming section, on how to program for a particular input.

CONTROL FUNCTION

(SINGLE OUTPUT)

Control action	PID control with auto-tuning Fuzzy control with auto-tuning
Proportional band (P)	0-999.9%, of full scale (FS), setting in 0.1% steps
Integral time (I)	0-3200 sec, setting in 1 sec steps
Differential time (D)	0-999.9 sec, setting in 0.1 sec steps
P,I,D = 0:	On/Off action
I,D = 0:	Proportional action
Proportional cycle	1-150 sec, setting in 1 sec steps, for relay contact output and DC SSR driver output only
Hysteresis width	0-50% FS, setting in 1 E.U. (Engineering Unit) steps On/Off action only
Anti-reset wind up	0-100% FS, setting in 1 E.U. steps, auto-setting with auto-tuning
Input sampling cycle	0.5 sec

OUTPUT

(Single Output)

Control output	One of the following three types is selected: (1) Relay contact (SPDT) 220V AC/30V DC, 3A (resistive load) Mechanical life: 10 ⁷ times (under no load) Electrical life: 10 ⁵ times (under the rated load) (2) DC SSR driver (voltage pulse): 15-30V DC at ON/0.5V DC or less at OFF. Current– 60mA or less. (3) 4-20mA DC: Allowable load resistance– 600Ω or less.
----------------	--

ALARM

Alarm output	1-point relay contact (SPST), 220V AC/30V DC, 1A (resistive load)
--------------	--

SETTING AND INDICATION

Parameter setting method	Digital setting with three keys
PV/SV display method	Dual display for PV/SV 4 digits each, PV=red, SV=green
Status display	Control output, alarm output
Indication accuracy (at 23°C)	Thermocouple: $\pm 0.5\%$ FS ± 1 digit $\pm 1^\circ\text{C}$ R thermocouple: 0-400°C; $\pm 1\%$ FS ± 1 digit $\pm 1^\circ\text{C}$ B thermocouple: 0-500°C; $\pm 5\%$ FS ± 1 digit $\pm 1^\circ\text{C}$ RTD, voltage, current: $\pm 0.5\%$ FS ± 1 digit

ADDITIONAL FUNCTIONS

8-segment ramp-soak:	4 ramp/4 soak with 16 different modes Setpoint setting: 0-100% FS Ramp/soak period: 0-99 hrs 59 mins
Parameter mask:	Parameters can be masked from being displayed
Self-diagnosis:	Watchdog timer monitors program error

GENERAL SPECIFICATIONS

Rated voltage	85-264V AC, 50/60 Hz, or 24V AC/DC $\pm 10\%$ (optional)
Power consumption	10VA or less (100V AC) 15VA or less (240V AC)
Insulation resistance	50M Ω or more (500V DC)

Withstand voltage	Power source-Earth: 1500V AC, 1 min Power source-input terminal: 1500V AC, 1 min Earth-relay output: 1500V AC, 1 min Earth-Alarm output: 1500V AC, 1 min Between other terminals: 500V AC, 1 min
Input impedance	Thermocouple: 1M Ω or more Voltage: 450K Ω or more Current: 250 Ω (external resistor)
Allowable signal source resistance	Thermocouple: 100 Ω or less Voltage: 1K Ω or less
Allowable wiring resistance	RTD: 10 Ω or less per wire
Reference junction compensation accuracy	$\pm 1^{\circ}\text{C}$ (at 23 $^{\circ}\text{C}$)
Process variable offset	$\pm 10\%$ FS
Setpoint variable offset	$\pm 50\%$ FS
Input filter	0-900.0 sec, setting in 0.1 sec steps (primary lagging filter)
Noise rejection ratio	Normal mode noise (50/60Hz): 50dB or more Common mode noise (50/60Hz): 140dB or more

POWER FAILURE PROTECTION

Memory protection:	Non-volatile memory. Parameter values remain unchanged with disruption of power. Ramp/soak function has to be re-initiated.
--------------------	---

OPERATING AND STORAGE CONDITIONS


Operating temperature	-10 to 50°C (14 to 122°F)
Operating humidity	Less than 90% RH (non-condensing)
Storage temperature	-20 to 60°C (-4 to 140°F)

STRUCTURE

Mounting method	Panel mounting or surface mounting
External terminal	8-pin or 11-pin socket
Enclosure	Black ABS plastic
Dimensions	48 x 48 x 85.7mm (1/16 DIN) 1.89 x 1.89 x 3.37 in. (W x H x D)
Weight	Approx. 150g
Protective structure	Front panel: NEMA 4X (equivalent to IEC IP66) Protection against corrosion, windblown dust and rain, and hose-directed water. Rear case: IEC IP20. Protection against solid objects up to 12mm.
Installation category:	II
Pollution degree:	2

OUTER DIMENSIONS & PANEL CUTOUT SIZE

CN4431

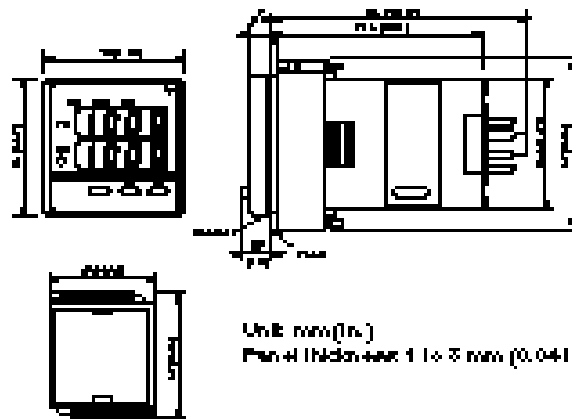


Unit: mm (In.)
 Panel thickness: 1 to 3 mm (0.04 to 0.31 in.)

Mounting Bracket

Panel cutout size: when installing
 "n" numbers of units.

A: 63 (2.48) or more

B: 45 (1.77) ^{+0.5(0.02)}
 -0

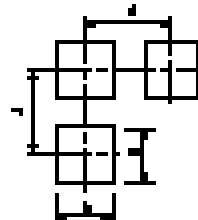


INSTALLATION

NEMA 4X Integrity


The front side of this instrument conforms to NEMA 4X. To ensure the waterproofness between the instrument and the panel, use the gasket that is provided with the unit according to the installation procedure described below.

How to install the unit

Install the unit in the panel as shown below, and tighten the screws on the mounting bracket until the unit is secure. Make sure there is no space between the front side of the unit and the gasket, and between the gasket and the panel.

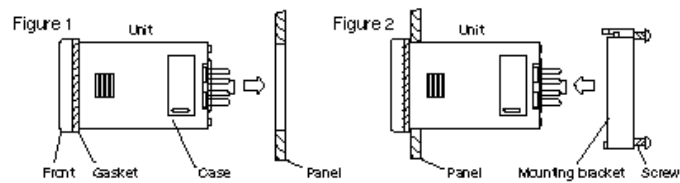

 Caution: After the mounting bracket is installed, check the gasket for any displacement as shown in Figure 3.





WIRING INSTRUCTIONS



Warning

Be sure to use the rated power supply voltage and polarity.

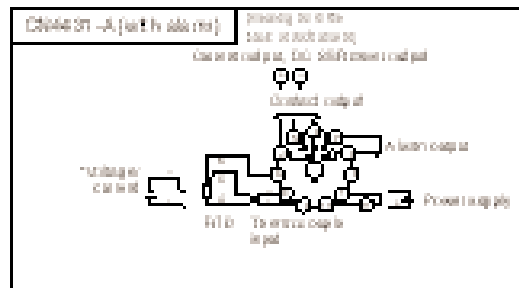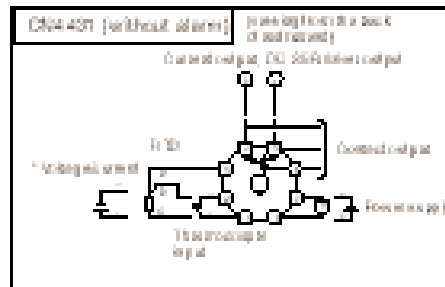

* For current input, install the 250Ω precision resistor (accessory) before using the unit.



Wiring Power to the Controllers

- Be sure to use the rated power supply voltage and polarity to avoid failure or damage to the unit.
- Keep the power off until all of the wiring is completed to prevent electric shock and abnormal operation.
- Keep the power supply wires separated from the input and output wires.
- Power connections should be made with 18-gauge or larger insulated wire. Stranded wire improves noise immunity. Noise filters and isolation transformers are recommended in case of noisy power lines.

Wiring Inputs

There are two input categories available: Thermocouple/RTD or current/voltage. Make sure you have the right type before wiring the inputs. Refer to Table of Input Type Codes and set the parameter "P-n2" accordingly.

Note: In order to minimize the risk of high frequency noise induced by coils and windings in relays, solenoids, and transformers, use leads which have braided sheath and ground one end of the sheath. Keep your input leads separate from power and output leads. If you have to bring the input signal from a long distance, a signal transmitter might be needed to maintain an accurate reading; in this case, a unit that accepts current/voltage input would be necessary.

Thermocouple

- Connect thermocouples directly to the input terminals whenever possible.

- If using extension wires, make sure they are of the same thermocouple material and grade; any dissimilar metal junctions will lead to erroneous readings.
- Ungrounded thermocouples are recommended for optimal performance and to prevent ground loops.
- Make sure the polarity is correct.

RTD Pt100

- Use a 3-wire Pt100 Ω RTD whenever possible. All three wires must have low lead resistance (less than 10 Ω) and no resistance differentials among them.
- If using a 2-wire RTD, jumper the two B-legs with a wire of equal resistance.
- Make sure A and B leads are connected to the right terminals.

Current/Voltage

- The controller accepts 1-5V, 0-5V, 4-20mA, and 0-20mA DC signals. If wiring for a voltage input, feed the signal directly to the input terminals. For current inputs, first connect the 250 Ω precision resistor that comes with the unit.
- Make sure the polarity is correct.

Wiring Outputs

Before wiring the outputs, make sure the unit has the right kind of control output, and that all the load handling devices conform to the controller specifications. Note that it takes 5 seconds for the outputs to activate after the power is turned on.

Refer to parameter "P-n1" and to the Table of Output Type Codes to choose the preferred type of control action— reverse-acting or direct-acting.

If using two outputs in a heat/cool type control, please refer to Appendix C for more details.

Relay


- Connecting a load to full capacity of the relay will shorten the relay life, especially if it is operated at a rapid rate. To protect the output relay, an external relay or a contactor should be used. If a higher current rating is required, a solid-state relay driver type output is recommended.
- Connect the load between the normally opened contacts of the relay. This way, if power to the controller is disrupted, the output circuit would open, preventing the load from running out of control.
- Set the proportional time cycle parameter, "TC" to 15 secs. or more. (30 secs typical).
- Use of MOV circuit is recommended to protect the relay against switching surges and to ensure the product's long life. Connect it between the contacts of the relay as shown in the example below.

Part No.: **MOV-100** (power supply voltage: 100V)
MOV-200 (power supply voltage: 200V)

CN4431
(8-pin)



CN4321

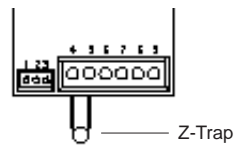

DC SSR Driver (voltage pulse)

- The non-isolated DC output is used to drive an external load-handling device such as Solid-State Relay(SSR) or Solid-State Contactor(SSC).
- The total current drawn should be within the allowed value.
- Make sure the polarity is correct.
- Set the proportional time cycle parameter, "**TC**" to 1 sec. or more.

4 to 20mA DC


- The output is a non-isolated analog signal used to drive a variety of output devices such as SCRs and valve actuators.
- The load resistance must be less than 600 Ω .
- Make sure the polarity is correct.
- The proportional time cycle parameter, "**TC**" is set to 0, and is not displayed on the programming menu.
- Not available on CN4321.

Wiring Alarms


- Make sure the load does not exceed the rated capacity of the relay.
- Several types of alarm configurations can be programmed and does not require a change in the wiring. Refer to parameters **AL**, **AH**, **P-AH**, **P-AL**, **P-An**.

SYSTEM WIRING DIAGRAMS


Example 1:

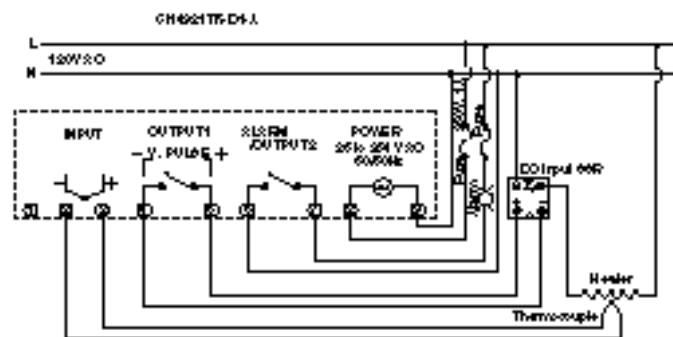

Example 2:

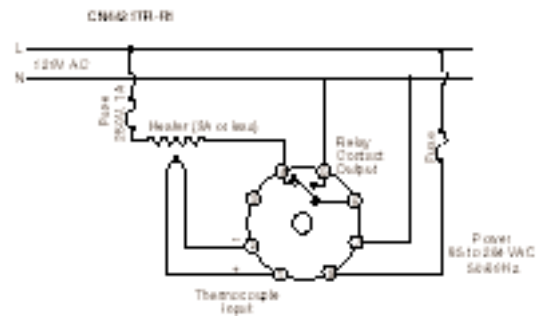

FRONT PANEL DESCRIPTION

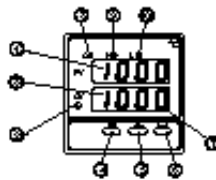

Name	Function
① Process Value (PV) display	Displays the measured value.
② Set value (SV) indication lamp	Comes on while the set value is displayed.
③ Set value (SV) and parameter display	Set value (SV), or parameter symbols and codes are displayed.
④ SELECT key	Key for switching between the parameter blocks and for scrolling through the parameters.
⑤ UP key	For incrementing the numerical value or scrolling up the menu. Numerical value is incremented continuously when held pressed.
⑥ DOWN key	For decrementing the numerical value or scrolling down the menu. Numerical value is decremented continuously when held pressed.
⑦ Auto-tuning indicator	Point LED blinks while PID auto-tuning is being performed.
⑧ Control Output indication lamp	Stays on while control output is ON.
⑨ Upper limit alarm indication lamp	Comes on when the upper limit alarm is activated. Blinks while the alarm value is being set.
⑩ Lower limit alarm indication lamp	Comes on when the lower limit alarm is activated. Blinks while the alarm value is being set.

FRONT PANEL OPERATION

The CN4431 programming menu consists of three blocks— SETUP MENU, SYSTEM MENU, and FACTORY PRESET MENU. At power up the controller will be in the operational mode, and process variable (PV) and setpoint variable (SV) will be displayed. PV is the variable that is being controlled, and it is not programmable. When setting the parameters, turn off the power to the load (operating equipment) to ensure safety. Allow 30 minutes for the unit to stabilize in terms of temperature, and to achieve the rated accuracy. Option-related features are displayed only when the options are used.

Viewing and Setting Parameters

- The data is automatically registered in 3 seconds after the setting. It can also be registered by pressing the SEL key.

How to set Setpoint value (SV)

Operation	Display
1. Power on	– Operational mode
2. Press UP or DOWN key	– SV value changes accordingly

SETUP MENU

Operation	Display
1. Operational mode	– PV, SV
2. Press SEL key for 3 seconds	– roFF
3. Press UP key to select rrUn/rHLd, if necessary	– rrUn/rHLd
4. Press SEL key once	– 'H' LED blinks; AH data (for units with alarm option)

- | | |
|---|------------------------|
| 5. Press SEL key to access the next parameter | - 'L' LED blinks, |
| 6. Press SEL key for 3 secs. | - Operational mode |

SYSTEM MENU

- | Operation | Display |
|---|---|
| 1. Operational mode | - PV, SV |
| 2. Press and hold SEL key | - 3 seconds later, "roFF"
7 seconds later, "P" |
| 3. Release and press SEL key again | - "P" data |
| 4. Press UP or DOWN key | - "P" data changes accordingly |
| 5. Press SEL key once | - "P" |
| 6. Press DOWN key to scroll down the menu | - "i", "d", "Mod" |
| 7. Press SEL key for 3 secs. | - Operational mode |

FACTORY PRESET MENU

- | Operation | Display |
|---|--|
| 1. Operational mode | - PV, SV |
| 2. Press and hold SEL key | - 3 seconds later, "roFF"
7 seconds later, "P"
9 seconds later, "P-n1" |
| 3. Release and press SEL key again | - "P-n1" data |
| 4. Press UP or DOWN key | - "P-n1" data changed |
| 5. Press SEL key once | - "P-n1" |
| 6. Press DOWN key to scroll down the menu | - "P-dF", "dSP7" |
| 7. Press SEL key for 3 secs. | - Operational mode |

Please refer to Quick Reference guide for a listing of all the parameters.

AUTOTUNING

Before initiating the autotune function, first decide if you would like to autotune at setpoint or 10% of full scale below setpoint. Set the setpoint (SV), alarms (AL, AH) and the cycle time (TC). Bring your process near setpoint before starting the autotune procedure. Autotuning works best for heating processes in which the setpoint is 100°F (60°C) above ambient temperature.

Set the parameter AT to either "1" (to auto-tune at setpoint) or "2" (to auto-tune at 10% of full scale below setpoint) and press SEL key to start auto-tuning. The point indicator at lower right will then start blinking. When the auto-tuning is completed, the point indicator stops blinking and the parameter AT will automatically be set to "0."

Duration of the autotune process varies with every application. The auto-tuning process may take between 1 and 30 minutes to complete. If it fails to complete, an abnormality may be suspected. In this case, recheck the wiring, control action, and input type code. Refer to page 38 and Appendix A for additional details.

The PID parameters calculated by autotuning will be retained even if the power is lost. However, if the power is turned off during the auto-tuning process, you must restart Autotuning. To abort the autotune procedure, set AT to "0." Auto-tuning has to be repeated if there is a significant change in SV, P-SL or P-SU, or in the controlled process. Autotuning can also be performed while fuzzy control is selected.

SETUP MENU

See *Quick Reference (p.74)* for a listing of the menu.


PARAMETER DESCRIPTION

roFF - rhLd	Ramp/Soak Command: The Ramp/Soak program automatically changes the setpoint value with time according to a preset pattern. Setting: roFF : Normal operation is performed rrUn : Ramp/Soak operation is performed rhLd : Ramp/Soak operation is suspended rEnd indicates that the operation is terminated.
Blinking AH 'H' LED	High Alarm Setpoint: The High Alarm Setpoint is that point of the process above which, the high alarm output relay is energized. If the alarm type, programmed in the setup menu, includes an absolute value for the High Alarm Setpoint, enter the actual value you want the alarm to be activated at regardless of what the main setpoint is set for. If the alarm type includes a deviation value for the High Alarm Setpoint, enter the number of units above main setpoint in which you want the alarm to be activated at; the deviation alarm tracks main setpoint. Set within the Input Range. Not indicated without the alarm option.
Blinking AL 'L' LED	Low Alarm Setpoint: The Low Alarm Setpoint is that point of the process below which, the low alarm output relay is energized. Absolute and deviation alarm configurations are programmable from within the secondary menu.


Set within the Input Range.
 Not indicated without the alarm option, or in CN4321.

- A1** AT **Autotuning:** Autotuning is the automatic calculation and entering of the control parameters (P, I and D) into memory. Autotuning will also automatically set anti-reset wind-up (Ar). There are two types of Autotuning that can be performed by the controller, Autotuning at main setpoint or Autotuning at 10% of full scale below main setpoint. The latter may yield slightly different values, not as precise, but the process overshoot encountered during the autotuning procedure would not be as much. Enter the value for the type of autotuning you would like to run on your particular application based on overshoot tolerances and the precision of the PID parameters needed. For more information on principles of Autotuning, refer to Appendix A. See also page 36.
- Setting:
 0 - Autotuning off
 1 - Autotuning performed at setpoint
 2 - Autotuning performed at 10% of F.S. below setpoint

Standard type (AT=1)

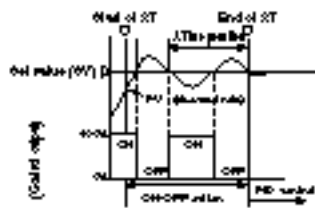

Low PV type (AT=2)

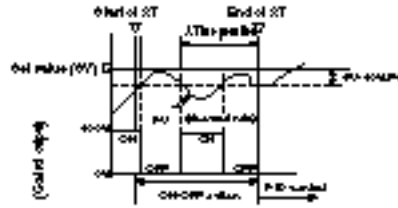

LoC iLoC

Parameter lock: This function enables or disables changing the settings of parameters.

Code:


0 - All parameter settings are changeable

1 - All parameter settings are locked; cannot be changed

2 - Only the main setpoint can be changed; all other parameter settings are locked and cannot be changed.

SYSTEM MENU


- P** P **Proportional Band:** The proportional band is that area around main setpoint where the control output is neither fully on nor fully off.
Setting range: 0.0 to 999.9% of full scale
For On/Off control, set to "0"
- I** I **Integral Time (reset):** The Integral Time is the speed at which a corrective increase or decrease in output is made to compensate for offset which usually accompanies proportional only processes. The more Integral Time entered, the slower the action. The less Integral Time entered, the faster the action. Enter a value that would eliminate offset without overcompensation, that could result in process oscillations.
Setting Range: 0 to 3200 secs
Integral action is turned off when set to "0"
- d** d **Derivative Time (Rate):** The Derivative Time is that time used in calculating rate of change and thermal lag in helping to eliminate overshoot that results in response to process upsets. This overshoot usually accompanies proportional-only and proportional-integral processes. The derivative action dampens proportional and integral action as it anticipates where the process should be. The more Derivative Time entered, the more the damping action. The less Derivative Time entered, the less the damping action. Enter as much Derivative Time as necessary to eliminate overshoot without over-damping the process, that could result in process oscillations.
Setting Range: 0.0 to 999.9 secs
Derivative action is disabled when set to "0"

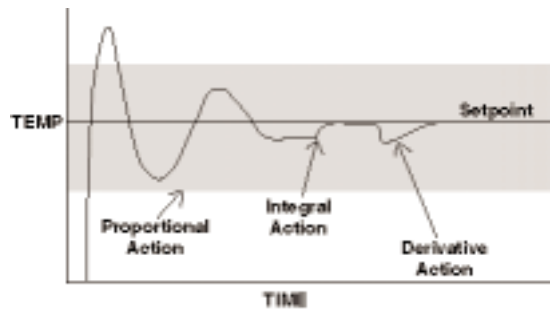

TC **Cycle Time (Output #1):** The Cycle Time for output #1 is that time where the output is on for a percentage of that time and off for a percentage of that time, creating a proportioning effect. The Cycle Time is only used when P, PI, PD, or PID control action is used, and when the output is time proportional as with the relay or SSR driver outputs. The shorter the Cycle Time, the higher the proportioning resolution is, and better is the control, but there will be an increased strain on the output device. Enter a value that is based on the limitations of your controller's output type.
 Setting range: 1 to 150 secs.
 For relay output: Set to 15 secs. or more (30 secs typ.).
 For DC SSR driver output: Set to 1 sec or more.
 For current output: Set to 0 (normally not indicated)



HYS HYS **Hysteresis:** Hysteresis is that area around the main setpoint where the output does not change condition. That area or deadband is intended to eliminate relay chatter at setpoint for On/Off control applications. The wider the Hysteresis, the longer it takes for the controller to change output condition. The narrower the Hysteresis, the less time it takes for the controller to change output condition. When the Hysteresis is narrow, the On/Off control is more accurate but the wear on the output relay is increased. Enter a value which is small enough to meet the control tolerance of the application but large enough to eliminate relay chatter. Setting range: 0 to 50% of FS, set in E.U., for output #1. Hysteresis for On/Off action for dual outputs (heating and

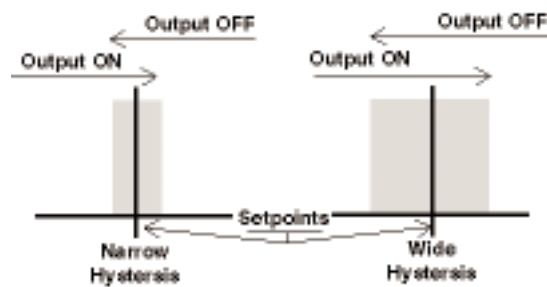

TC2

cooling) is fixed at 0.5% of full scale.

Cool

TC2 **Cycle Time (Output #2)** The Cycle Time for output #2 is similar in function to Cycle Time for output #1. Output #2 is the cooling side of heat/cool controller CN4321. Enter a value that is based on the limitations of your controller's output type.
Setting Range: 1 to 150 secs.
Not indicated without the control output #2 option
Not indicated with current output.

Cool **Proportional Band Coefficient for Cooling:** The Proportional Band Coefficient for Cooling is a multiplier for the proportional

$$\text{Prop. Band for Heating X Input Range} = \frac{P}{2}$$
$$\text{Prop. Band for Cooling X Input Range} = \frac{P}{2} \times \text{Cool}$$
$$\text{Deadband/Overlap X Input Range} = \frac{P}{200\%} \times \text{db}$$

db

band on the cooling side of a heat/cool controller. It varies the width of the proportional band on the cooling side. A large value would establish a larger proportional band for more powerful cooling loads. A small value would establish a smaller proportional band for less


Deadband/Overlap

$$\frac{\text{Prop. Band for Heating X Input Range}}{100\%} = \frac{\# \text{ of units in the Proportional Band for Heating}}{100\%}$$

$$\frac{\text{Prop. Band for Cooling X Input Range}}{100\%} = \frac{\# \text{ of units in the Proportional Band for Cooling}}{100\%}$$

$$\frac{\text{Deadband/Overlap X Input Range}}{100\%} = \frac{\# \text{ of units in the Deadband/Overlap}}{100\%}$$

$$\text{Input Range} = (P-SU \text{ minus } P-SL)$$

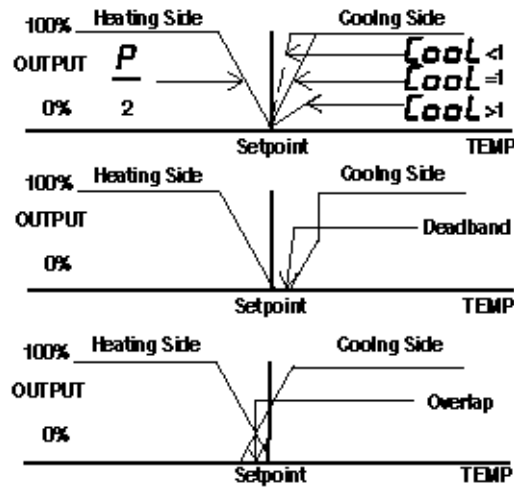

powerful cooling loads. Enter a value based on the power of your cooling load.

Setting Range: 0.0 to 100.0

Not indicated without control output #2 option.

Set to "0" for On/Off control.

db

db **Deadband/Overlap:** The Deadband/Overlap is that percentage of the heating side of the proportional band where the heating (output #1) and the cooling (output #2) outputs are separated by a deadband or where they overlap on a heat/cool controller. A value greater than zero establishes a Deadband area where neither the heating nor cooling outputs are energized, for more powerful heating and cooling loads. A value less than zero establishes an Overlap area where both the heating and cooling outputs are energized at the same time, for less powerful heating and cooling loads. Enter a value based on the power of your heating and cooling loads as well as the application's efficiency in maintaining tight

Ar

P-n2

heat/cool control.

Setting range: -50.0 to 50.0% of the heating proportional band.

Not indicated without control output #2 option

bAL Balance: Balance is used to pre-position the proportional band with respect to setpoint. With Balance (MV Offset) set at 50% the proportional band will be centered around setpoint. To move the band left or right, decrease or increase the balance setting respectively.
Setting range: 0-100%

Ar Anti-Reset Wind-up: Anti-Reset is used to limit the range where integration occurs. This helps in stabilizing a system. With Anti-Reset at 100%, integration will occur throughout the proportional band. With Anti-Reset set to 90%, integration will occur at 90% of the band above the setpoint and 90% of the band below the setpoint. Auto-tuning automatically sets Ar.

P-SL

Setting range: 0-100% of full scale, set in E.U.

P-n2 Input type: The Input Type is the type of sensor to be used with the controller in sensing the process variable. The Input Type must be correctly programmed into the controller in order for the controller to perform with the selected sensor type. Depending on the type of sensor to be used, the controller comes in two models. One model accepts J, K, R, B, S, T, E, N thermocouples and RTDs (Pt100), and the other model accepts 1-5/0-5V DC and 4-20/0-20mA DC signals.

The current/voltage model comes with a 250 Ω precision resistor. Wired directly to the controller, it converts a current signal into a voltage signal. There is no need to

Table of Input Type Codes

Input Signal		Code	Range of measurement (°C)	Range of measurement (°F)
RTD (±0.003%)	PT100Ω	1	-150 to 350	-223 to 1562
Thermocouple	J	2	0 to 500	32 to 1472
	K	3	0 to 1200	32 to 2192
	R	4	0 to 1600	32 to 2912
	E	5	0 to 1300	32 to 2372
	Q	6	0 to 1600	32 to 2912
	T	7	-150 to 400	-223 to 152
	L	8	-150 to 300	-223 to 1472
	N	12	0 to 1300	32 to 2372
	PL11	13	0 to 1300	32 to 2372
	D.C. current/voltage	0-20mA	15	Scaling range: -1999 to 9999 Engineering units
0-5V 4-20mA 1-5V		16		

use the resistor if a voltage signal is applied directly. After the appropriate physical changes have been made, the controller will still need the correct code for the input type to be used. Enter the appropriate code from the Table of Input Type Codes.

P-SU

P-SL **Lower Limit of Input Range:** The Lower Limit of Input Range is that value which establishes the desired low limit for the type of input used. The value must be greater than or equal to the input type's lowest limit. Setpoint settings are restricted to values greater than the low limit. Parameters which are calculated as a percentage of full scale are affected by this setting. An underscale error message is indicated on the process variable display when the process variable goes below the Lower Limit of Input Range setting by 5% of full scale. The primary purpose of the Lower Limit of Input Range when used with a thermocouple or RTD sensor input is to limit setpoint settings. Making the input range smaller does not increase the accuracy. The primary purpose of the Lower Limit of Input range when used with 1-5/0-5V DC or 4-20/0-20mA DC signal input is to scale the range so that 1/0V DC on a 1-5/0-5V DC signal and 4/0mA DC on a 4-20/0-20mA DC signal equals the low limit of the engineering unit range used. The engineering unit range could be %, PSI, GPM, PH, or any range which can be scaled between -1999 and 9999 units.

Enter a value to set Lower Limit of Input range based on the type of input used.

P-SU **Upper Limit of Input Range:** The Upper Limit of Input Range is that value which establishes the desired high

SCALING THERMOCOUPLE AND RTD(P100) INPUT RANGES

Example: Program a J thermocouple for 50 to 600°F

Input Type	Minimum/Maximum Range
J Thermocouple	32 3472 °F

Program **P-SL** to 50
P-SU to 600

Full Range = (600-50) = 450 F



SCALING DC CURRENT/VOLTAGE INPUT RANGES

Example: Program a 4-20mA DC signal for 0 to 100 E.U.

Input Type	Minimum/Maximum Range
4-20mA DC	-1500 ... 9999 Engineering Units

Program **P-SL** to 0
P-SU to 100

Full Range = (100-0) = 100 Engineering Units



P-dP

limit for the type of input used. The value must be less than or equal to the input type's highest limit. Setpoint settings are restricted to values less than the high limit. Parameters which are calculated as a percentage of full scale are affected by this setting. An overscale error message is indicated on the process variable display when the process variable goes above the Upper Limit of Input Range setting by 5% of full scale. The primary purpose of the upper limit when used with a thermocouple or RTD input is to limit setpoint settings. Making the input range smaller does not increase the accuracy. The primary purpose of the Upper Limit of Input range when used with 1-5/0-5V DC or 4-20/0-20mA DC signal input is to scale the range so that 5V DC on a 1-5/0-5VDC signal and 20mA DC on a 4-20/0-20mA DC signal equals the high limit of the engineering unit range used. The engineering unit range could be %, PSI, PH, or any range which can be scaled between -1999 and 9999 units.

**P-AH
P-AL**

Enter a value to set Upper Limit of Input range based on the type of input used.

P-dP **Decimal Point Position (Resolution):** The Decimal Point Position is the resolution at which the controller displays the process variable and other parameter values. The display can indicate integers, tenths or hundredths of a unit. The Decimal Point Position does not increase the accuracy of the controller, it only increases the resolution. For a thermocouple, integers are usually sufficient due to the accuracy rating and the programmed input range. For a RTD (Pt100), integers or tenths of a degree may be entered, because of the increased accuracy of these sensors, depending on the programmed input range. For a

1-5/0-5V DC or 4-20/0-20mA DC signal, integers, tenths or hundredths of a unit may be entered depending on the programmed input range.

Setting:

0 -None

1- Tenths of a unit

2 - Hundredths of a unit

P-AH **Alarm Type 1:**

P-AL **Alarm Type 2:** These functions set the control action for the optional alarm output relays. They can be programmed for absolute, deviation, combination, or zone alarm configuration. The high and low alarm setpoints are set with primary menu parameters AH and AL (AL is not applicable in the case of CN4321). The absolute alarm configurations are independent of main setpoint. The alarm output relays are energized when the process variable exceeds the alarm setpoint, an absolute value. The deviation alarm configuration is main setpoint tracking. The alarm output relays are energized when the process variable exceeds the main setpoint by a deviation value set by AL or AH. The combination alarm

PVQF

configurations are a mixture of both the deviation and absolute value settings for the high and low alarms. With zone alarm configurations the alarm output is energized between the range set by AL and AH.

SVQF

One of the alarm types is Alarm with Hold. In this case the alarm is not turned on the first time the measured value is in the alarm band. Instead it turns on only when the measured value goes out of the band and enters it again. This type is useful when using deviation alarm with step type input.

Table of Alarm Action Type Codes—CN4321

	Code (0-11)	Alarm type	Action diagram
	0	No alarm	
Absolute value alarm	1	Absolute upper limit	
	2	Absolute lower limit	
	3	Absolute upper limit (with hold)	
	4	Absolute lower limit (with hold)	
Deviation alarm	5	Upper limit deviation	
	6	Lower limit deviation	
	7	Upper and lower limit deviation	
	8	Upper limit deviation (with hold)	
	9	Lower limit deviation (with hold)	
	10	Upper and lower limit deviation (with hold)	
Range alarm	11	Deviation from upper and lower limit of a range	

Table of Alarm Action Type Codes—CN4431

	ALM1 (P- PL)	ALM2 (P- PL)	Alarm type	Action diagram
	0	0	No alarm	
Absolute value alarm	1	1	High alarm	
	2	2	Low alarm	
	3	3	High alarm (with hold)	
	4	4	Low alarm (with hold)	
Deviation alarm	5	5	High alarm	
	6	6	Low alarm	
	7	7	High/Low alarm	
	8	8	High alarm (with hold)	
	9	9	Low alarm (with hold)	
	10	10	High/Low alarm (with hold)	
Zone alarm	11	11	High/Low deviation alarm (SMD12 independent action)	
	—	12	High/Low absolute alarm	
	—	13	High/Low deviation alarm	
	—	14	High absolute/Low deviation alarm	
	—	15	High deviation/Low absolute alarm	

Enter the code for P-AH and P-AL from the Table of Alarm Action Type Codes. See pages 57 & 58.

P-AL is not applicable in the case of CN4321.

Note 1: A change of alarm action type can cause the alarm set value to change, but this is not a malfunction.


Note 2: After the alarm type is changed, turn off the power to the unit once.

P - F PVOF **Process Variable Offset:** The Process variable Offset is the amount by which the indicated process variable is shifted in a positive or negative direction. Both the indicated as well as the measured process variable will be changed. This parameter can be used to correct for differences in sensors, sensor placement, and standardization problems. Enter a value which is the difference between the measured process value and the actual process value of the system.
51A7 Setting range: -10 – 10% of full scale

SVOF **Setpoint Variable Offset:** The Setpoint Variable Offset is that amount of offset which shifts the measured setpoint variable in a positive or negative direction. The measured setpoint variable is changed but the indicated setpoint variable remains unchanged. Be careful when using this variable because what you see as the setpoint variable may be very different from the actual setpoint variable.
Setting range: -50 – 50% of full scale
Indicated Setpoint Variable is Unchanged
Measured Setpoint Variable is Changed

P-F **C/F Selection:** The C/F Selection allows choosing either the Celsius or the Fahrenheit scale. If using the con-

50-1 troller to control a process other than temperature using
50-4 the current/voltage input model, the C/F Selection is not
701r important because the scaling is done using the lower
704r limit of the input range and upper limit of input range
7015 parameters, and the indication is in engineering units.
7045 Setting: °C or °F
STAT **Ramp/Soak Status:** The Ramp/Soak program automati-
 cally changes the setpoint value with time in accordance
 with a preset pattern, as shown in the figure. This device
 allows a maximum of four ramp and four soak segments.

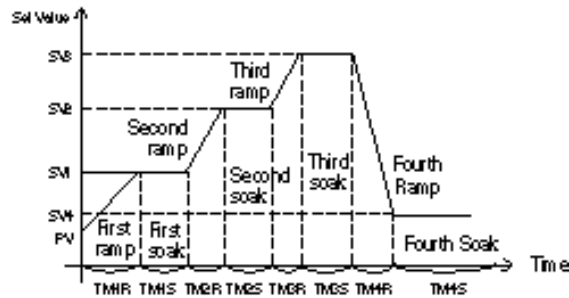

Ramp: Region in which the setpoint changes toward the target value.
Soak: Region in which the setpoint stays unchanged at the target value.

Note 1: SV cannot be changed while the operation is running or suspended.
Note 2: The use of fuzzy control is inhibited while Ramp-Soak operation is being performed.

Mod Ramp is the region in which SV changes toward the target value. Soak is the region in which the target value is maintained. STAT displays the current ramp/soak status. No setting can be made.

Table of Ramp/Soak Modes

MOD	Power on start	Output on END	Output on OFF	Repeat function
0	No	Continue controlling	Continue controlling	No
1	No	Continue controlling	Continue controlling	Yes
2	No	Continue controlling	Stand-by mode	No
3	No	Continue controlling	Stand-by mode	Yes
4	No	Stand-by mode	Continue controlling	No
5	No	Stand-by mode	Continue controlling	Yes
6	No	Stand-by mode	Stand-by mode	No
7	No	Stand-by mode	Stand-by mode	Yes
8	Yes	Continue controlling	Continue controlling	No
9	Yes	Continue controlling	Continue controlling	Yes
10	Yes	Continue controlling	Stand-by mode	No
11	Yes	Continue controlling	Stand-by mode	Yes
12	Yes	Stand-by mode	Continue controlling	No
13	Yes	Stand-by mode	Continue controlling	Yes
14	Yes	Stand-by mode	Stand-by mode	No
15	Yes	Stand-by mode	Stand-by mode	Yes

1. Power on Start: Program starts from the current PV value.
2. Output on END: Output condition at the end of the program (rEnd)
3. Output on OFF: Output condition when program is terminated (roFF)
4. Repeat function: Ramp-soak program operates repeatedly.
If the repeat function is off, the SV value on the last step is maintained.

Stand-by mode: Output -3%, Alarm off.

Going on Control: When program ends (rEnd), control is at the SV value on the last step. When program is terminated (roFF), control is at the main SV value.

P-n1

oFF:	Not in operation
1-rP – 4-rP:	Executing 1st – 4th ramp
1-St – 4-St:	Executing 1st – 4th soak
End:	End of program

to SV-1 **Ramp Target Value:** Sets the target value for each ramp to segment.
SV-4 Setting range: 0-100% of full scale

to TM1r **Ramp Segment Time:** Sets the duration of each ramp to segment.
TM4r Setting range: 00.00 to 99hrs 59mins.

to TM1S **Soak Segment Time:** Sets the duration of each soak to segment.
TM4S Setting range: 00.00 to 99hrs 59mins.

Mod **Ramp/Soak Mode:** Up to 16 different modes of ramp/soak operations are possible. Choose the appropriate code from the Table of Ramp/Soak Modes
Setting: 0-15

FACTORY PRESET MENU

P-n1 **Control Action & Sensor Burn-out Protection:** The Control Action is the direction of the output relative to the process variable. The controller can be programmed as either a reverse-acting or a direct-acting controller. In a reverse-acting controller, the controller's output decreases as the process variable increases. A heating

Table of Output Type Codes

Code	Output type	Control action		Burn-out direction	
		Output 1	Output 2	Output 1	Output 2
0	Single	Reverse action	—	Downwards	—
1				Upwards	
2		Direct action		Downwards	
3				Upwards	
4	Dual	Reverse action	Direct action	Downwards	Downwards
5				Upwards	
6				Downwards	Upwards
7				Upwards	
8		Direct action		Downwards	Downwards
9				Upwards	
10			Downwards	Upwards	
11			Upwards		
12		Reverse action	Reverse action	Downwards	Downwards
13				Upwards	
14				Downwards	Upwards
15				Upwards	
16	Direct action	Downwards		Downwards	
17		Upwards			
18		Downwards	Upwards		
19		Upwards			

P-dF


application would require reverse acting control. In a direct-acting controller, the output increases as the process variable increases. A cooling application would require direct-acting control. Enter the code from the Table of Output Type Codes which establishes the controller as either a reverse or direct-acting controller.

The Sensor Burn-out Protection is the intended direction of the output in the event of a thermocouple or RTD sensor break, or a break in the analog input. The controller can be programmed with either upscale or downscale burn-out direction. With upscale burnout, 100% output will be delivered in the event of sensor burnout. With downscale burnout, 0% output will be delivered in the event of sensor burnout. Enter the appropriate code from the Table of Output Type Codes.

P-Rn

Refer to Error Messages on page 62 for more details.

P-dF **Input Filter Constant:** The Input Filter is used to filter out the quick changes that occur to the process variable in a dynamic or quick responding application that might cause erratic control. By slowing down the response

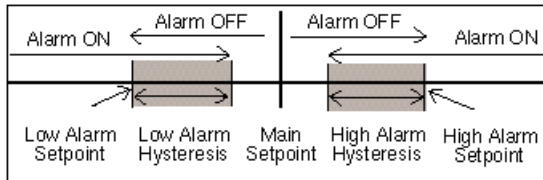

F029

time, the controller averages out the peaks and valleys of a dynamic system which, in turn, stabilizes the control. The digital filter also aids in controlling processes where the electrical noise is affecting the input signal. The larger the value entered, the more filter added and the slower the controller reacts to process variable changes. The smaller the value entered, the less filter added and the quicker the controller reacts to process variable changes. Enter as small a value as possible that pro-



A0J0 A0J5

vides accurate and stable control.
Setting range: 0.0-900.0 secs

P-An **Alarm Hysteresis:** The Alarm Hysteresis is that area on one side of the alarm setpoint where the output does not change condition. That area or deadband is intended to eliminate relay chatter at alarm setpoint with less wear on the relay. With a wide Alarm Hysteresis, the controller takes a longer time to change output condition. With a narrow Alarm Hysteresis, the controller takes a shorter time to change output condition. Enter a value which is just large enough to eliminate relay chatter.
Setting Range: 0 to 50% of full scale, set in E.U.

dSP1 FUZY **Fuzzy Logic Control:** Employing Fuzzy Logic Control in addition to PID control eliminates system overshoot and effectively suppresses fluctuation of the process variable due to external disturbances. This function may be enabled even during auto-tuning. Note that fuzzy control is not effective in units with dual outputs, due to the complexity of the process. Fuzzy control is also inhibited while the Ramp/Soak function is in operation.

dSP7

ADJ0 **Zero/span Calibration:** This function is used for zero/
ADJ span calibration of the input. Calibration is effected by first applying the appropriate signal for zero and span

ERROR MESSAGES

Error Indication	Cause	Control Output
UUUU	<ol style="list-style-type: none"> 1. Thermocouple burnt out. 2. RTD (A) leg burnt out. 3. PV value exceeds P-SU by 5% FS. 	When the burn-out control output is set for lower limit (standard): OFF, or 4mA or less.
LLLL	<ol style="list-style-type: none"> 1. When RTD (B or C) is burnt out. 2. When RTD (between A and B, or between A and C) is shorted. 3. When PV value is below P-SL by 5% FS. 4. When analog input wiring is open or short. 	When the burn-out control output is set for upper limit: ON, or 20mA or less.
LLLL	When PV value goes below -1999.	Control is continued until the value reaches -5% FS or less, after which burn-out condition will occur.
HB lamp ON	Heater burnout condition	Normal control output for heating is continued.
Err	When the setting of P-SL/P-SU is improper	OFF, or, 4mA or less.
FRL 1	Fault in the unit	Undefined. Stop use immediately.

APPENDIX A

Autotuning

By autotuning, the controller selects what it calculates to be the optimal PID control parameters for a particular process and then stores them in EEPROM memory for future use. The PID parameters are stored so that when the controller is powered up after being shut down, the controller does not need to be autotuned again. The controller uses the same autotuned PID parameters until the Autotune function is again initiated. The Autotune parameters are only good for the process the Autotune function was used on. If the setpoint is significantly changed, the input sensor is changed, the load or output device is changed or relocated, or any other disturbances occur which might change the dynamics of the system, the Autotune function should be performed again. The autotuned control parameters are not always perfect for every application but almost always give the operator a good starting point from which further refinement of the control parameters can be performed manually.


The autotuning algorithm used here is particularly suited for temperature control applications and may not always autotune effectively for other processes. Here are cases where the Autotune function does not perform well or does not perform at all:

1. The system is affected by process disturbances external to the control loop. Adjacent heater zones, changing material levels, exothermic reactions are examples of process disturbances which are external to the control loop. The controller would never be able to autotune such an unstable process.
2. The system is very dynamic. The process variable changes very quickly. Certain pressure and flow applications would be characterized as


very dynamic. Because of how the Autotune function is performed, a very dynamic system would create very large overshoots which could damage the process.

3. The system is very insulated and cannot cool down in a timely manner. With such heating systems the autotuning function would take a long time to complete, with questionable results.

During autotuning test signals are sent to the process. The test signals are 100% output and 0% output at the Autotune point. The Autotune point can either be at setpoint or 10% of full scale below setpoint. The controller performs as an On/Off controller. See diagram below.

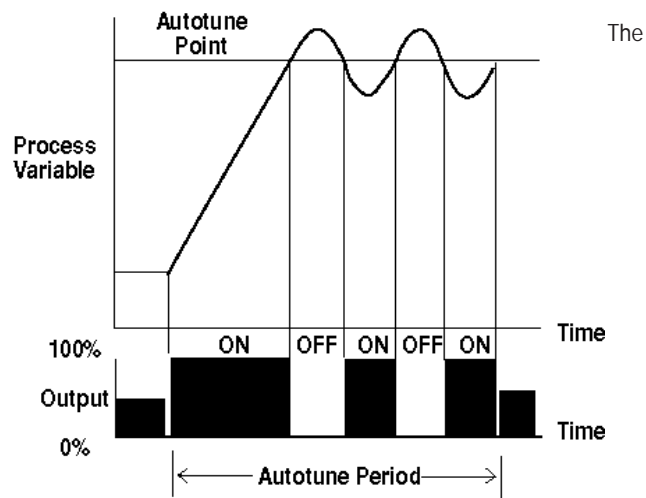

controller then reads the reaction of these test signals on the process. Keep in mind that every process is different and therefore every reaction to the test signals is different. This is why PID parameters are not the same for all processes. The amplitude (L) or lag time which is the overshoot and undershoot of the system when autotuning, and the time constant (T) which is the time the process takes to go through one On/Off cycle are measured. See diagram below.

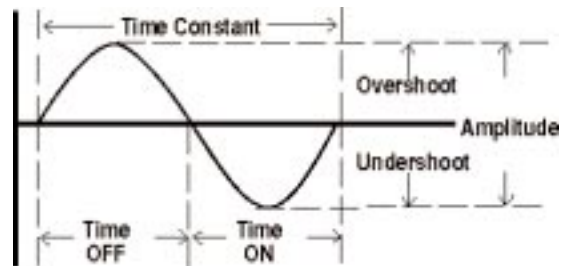

The measurements are then used with the Autotune algorithm for calculation of the proper PID parameters for the system, as shown below, where K is the proportionality constant and S is the Laplace operator.

$$\frac{K}{(1+TS)} e^{-LS}$$

APPENDIX B

Manual Tuning


Tune the controller if any of the following occurs:

- The controller is installed in a new system
- The controller is used as a replacement in an existing system
- The input sensor is relocated or changed
- The output device is relocated or changed
- The setpoint is significantly changed
- Any other condition that will alter the dynamics of the system

Proportional Band

The proportional band is a band around the setpoint of the CN4431 where the output is between 0% and 100%. The percentage of output is proportional to the amount of error between the setpoint variable (SV) and the process variable (PV). Outside of the proportional band the output is either 0% or 100%.


The proportional band on CN4321/CN4431 is equidistant from the main setpoint as illustrated below.

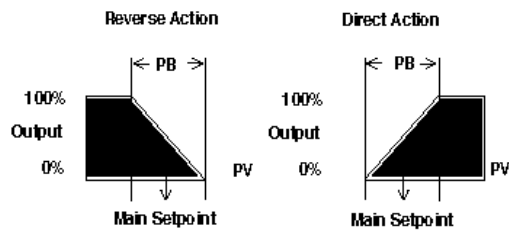

Note: PB = Proportional Band

An example of proportioning would be a vehicle approaching a stop sign at an intersection. If the driver were traveling at 50mph and only applied his brakes once at the intersection, his car would skid through the intersection before coming to a full stop. This illustrates how On/Off control acts. If, however, the driver started slowing down some distance before the stop sign and continued slowing down at some rate, he could conceivably come to a full stop at the stop sign. This illustrates how proportional control acts. The distance where the speed of the car goes from 50 to 0 MPH illustrates the proportional band. As you can see, as the car travels closer to the stop sign, the speed is reduced accordingly. In other words, as the error or distance between the car and the stop sign becomes smaller, the output or speed of the car is proportionally diminished. Figuring out when the vehicle should start slowing down depends on many variables such as speed, weight, tire tread, and braking power of the car, road conditions, and weather much like figuring out the proportional band of a control process with its many variables.

The width of the proportional band depends on the dynamics of the system. The first question to ask is, how strong must my output be to eliminate the error between the setpoint variable and process variable? The larger the proportional band (low gain), the less reactive the process. A proportional band too large, however, can lead to process wandering or sluggishness. The smaller the proportional band (high gain), the more

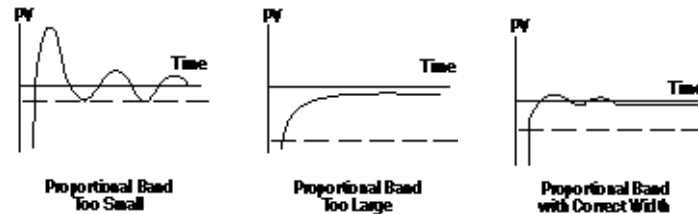

reactive the output becomes. A proportional band too small, however, can lead to over-responsiveness leading to process oscillation.

A proportional band which is correct in width approaches main setpoint as fast as possible while minimizing overshoot. If a faster approach to setpoint is desired and process overshoot is not a problem, a smaller or narrower proportional band may be used. This would establish an over-damped system or one where the output would change greatly, proportional to the error. If process overshoot cannot be tolerated and the approach to setpoint does not have to be quick, a larger or wider proportional band may be used. This would establish an under-damped system or one where the output would change little, proportional to the error.

To Calculate Proportional Band:

$$\text{Proportional Band (as a percentage)} = \frac{\text{Proportional Band}}{\text{Input Range}} \times 100\%$$

Example:

$$3\% = \frac{30^\circ\text{C}}{100^\circ\text{C}} \times 100\%$$


$$\text{Proportional Band Range} = \frac{\text{Proportional Band (as a percentage)}}{100\%} \times 1000^\circ\text{C}$$

Example:


$$30^\circ\text{C} = \frac{3\%}{100\%} \times 1000^\circ\text{C}$$

Integral Time


With the proportional band alone, the process tends to reach equilibrium at some point away from the main setpoint. This offset is due to the difference between the output needed to maintain setpoint and the output of the proportional band at setpoint. Since the proportional band is equidistant from the main setpoint, the output is around 50%. If anything more or less than 50% output is required to maintain setpoint, an offset error will occur. Integral action eliminates this offset. See the diagrams below.

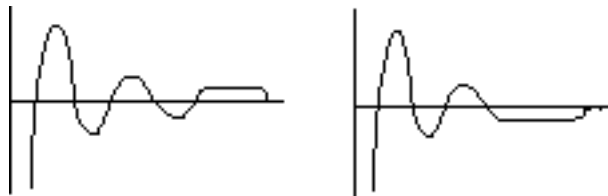

Integral action eliminates offset by adding to or subtracting from the output of the proportional action alone. This increase or decrease in output corrects for offset error within the proportional band in establishing steady-state performance at setpoint. It is not intended to correct for process disturbances. See the following diagram.

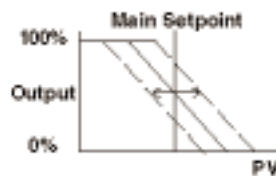


Integral Time is the speed at which the controller corrects for offset. A short integral time means the controller corrects for offset quickly. If the integral time is too short, the controller would react before the effects of previous output shifts—due to lead or lag time—could be sensed, causing oscillation. A long Integral time means the control corrects for offset over a long time. If the integral time is too long, the offset will remain for some time causing a slow responding or sluggish control. See the diagram below.

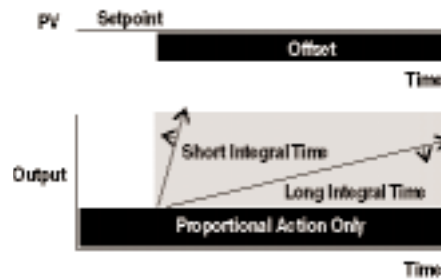


Derivative Time

In the case of a process upset, proportional only or proportional-integral action cannot react fast enough in returning a process back to setpoint without overshoot. The derivative action corrects for disturbances providing sudden shifts in output which oppose the divergence of the process from setpoint. See the diagram below.

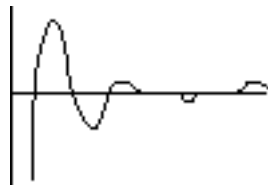

The derivative action changes the rate of reset or integration proportional to the rate of change and lag time of the system. By calculating the rate of change of the process and multiplying it by the lag time which is the time it takes the controller to sense an output change, the controller can anticipate where the process should be and change the output accordingly. This anticipatory action speeds up and slows down the effect of proportional and proportional-integral actions to return a process to setpoint as quickly as possible with minimum overshoot. See the diagram below.

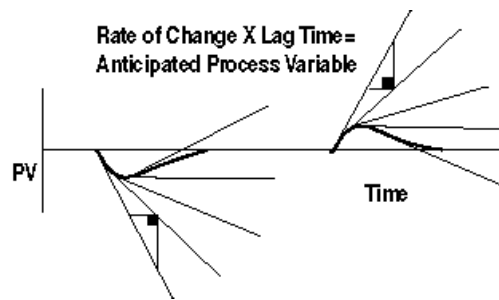

Derivative time is the amount of anticipatory action needed to return a process back to setpoint. A short derivative time means little derivative action. If the derivative time is too short, the controller would not react quickly to process disturbances. A long derivative time means more derivative action. If the derivative time is too large, the controller would react too dramatically to process disturbances creating rapid process oscillation. A process which is very dynamic such as pressure and flow applications is more efficiently controlled if the derivative action is turned off because of the oscillation problem that would result in.

Tuning

Tuning, as with any PID loop, requires tuning each parameter separately and in sequence. To achieve good PID control manually, you can use the trial and error method explained below.

Tune the Proportional Band

Set Integral Time = 0 (off)

Set Derivative Time = 0 (off)

Start with a large Proportional Band value which gives very sluggish control with noticeable offset and tighten by decreasing the value in half. Analyze the process variable. If the control is still sluggish, tighten by decreasing the value in half again. Continue with the same procedure until the process starts to oscillate at a constant rate. Widen the Proportional Band by 50%, or multiply the setting 1.5 times. From a cold start, test and verify that the Proportional Band allows maximum rise to setpoint while maintaining minimum overshoot and offset. If not completely satisfied, fine-tune the value, up or down, as needed and test until correct. The Proportional Band is now tuned.

Add Integral Time


Start with a large Integral Time value which gives very sluggish response to process offset and tighten by decreasing the value in half. Analyze the process variable. If the response to process offset is still sluggish, tighten by decreasing the value in half again. Continue with the same procedure until the process starts to oscillate at a constant rate. Increase the Integral Time value by 50%. From a cold start, test and verify that the Integral Time allows maximum elimination of offset with minimum overshoot. If not completely satisfied, fine-tune the value, up or down, as needed and test until correct. The Integral Time is now tuned.

Add Derivative Time

Do not add Derivative Time if the system is too dynamic. Start with a small Derivative Time value which gives sluggish response to process upsets and double the value. Analyze the process variable. If the response to process upsets is still sluggish, double the value again. Continue with the same procedure until the process starts to oscillate at a quick constant rate. Decrease the Derivative Time value by 25%. From a cold start, test and verify that the Derivative Time value allows maximum response to process disturbances with minimum overshoot. If not completely satisfied, fine-tune the value, up or down, as needed and test until correct. Note that the Derivative Time value is usually somewhere around 25% of the Integral Time value. The derivative Time is now tuned.

Another tuning method is the closed-loop cycling or Zeigler-Nichols method. According to J.G. Zeigler and N.B. Nichols, optimal tuning is achieved when the controller responds to a difference between setpoint and the process variable with a 1/4 wave decay ratio. That is to say that the amplitude of each successive overshoot is reduced by 3/4 until stabilizing at setpoint. The procedure is explained below.

1. Integral Time=0
Derivative Time=0
2. Decrease the Proportional Band to the point where a constant rate of oscillation is obtained. This is the response frequency of the system. The frequency is different for each process.
3. Measure the Time Constant which is the time to complete one cycle of the response frequency. The Time Constant will be defined as "T" when calculating Integral and Derivative Times.

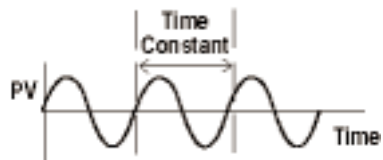

4. Widen the Proportional Band until only slightly unstable. This is the Proportional Band's Ultimate Sensitivity. The Proportional Band's Ultimate Sensitivity width will be defined as "P" when calculating the actual Proportional Band.
5. Use the following coefficients in determining the correct PID settings for your particular application.

Control Action	P Setting	I Setting	D Setting
P Only	2P	*	*
PI	2.2P	.83T	*
PID	1.67P	.5T	.125T

APPENDIX C

Heat/Cool Option (Available on CN4321 only)

With the Heat/Cool Option, the CN4321 can control a temperature application with one input at one main setpoint using two outputs, a heating output and a cooling output. By using a heating and cooling output, a process is able to quickly bring the temperature to setpoint in both directions and to limit the amount of overshoot. The larger the deviation from setpoint, the more output applied to the system on both the heating and cooling sides. Heat/Cool control is a very effective way of controlling exothermic processes, processes that generate their own heat, or processes where ambient temperature is not adequate or fast enough in returning a process back to setpoint.

The two outputs on the CN4321 are independent and sent to two different output devices. The first output could be either a relay or a DC SSR driver, while the second output has to be a relay output only.

The CN4321 controls the cooling side with three additional parameters, TC-2, COOL, and DB as explained in the programming section.

TC2 TC2 **Cycle Time (Output #2):** Because Output #2 is not necessarily the same as Output #1, the cycle time may be different.

COOL COOL **Proportional Band Coefficient for Cooling:** Because the cooling power may not necessarily be the same as the heating power, the cooling proportional band may be different from that of the heating proportional band.

db db **Deadband/Overlap:** Deadband is that area where neither outputs are energized. Overlap is that area when both outputs are energized. This function lets you decide where you want the heating action to stop and the cooling action to begin.

Notes:

1. The Heat/Cool Option is available on the CN4321 controller only. Output #2 can be a relay output only.
2. Integral and Derivative Times are the same for both the heating and cooling sides of a process with PID control because the response frequency or time constant of the system does not change at main setpoint when cooling is added.
3. The Proportional Band for heating and cooling are almost always different. Rarely does the same amount of cooling output remove the same percentage of process error as the heating output does. The Cooling Proportional Band must be manually and separately tuned.
4. If the heating side is set for On/Off control, the cooling side will be set for On/Off control also. Regardless of what the COOL parameter is set for, if the Proportional Band is set to zero, the Heating Proportional Band and the Cooling Proportional Band will always be zero.
5. If the cycle times of one or both outputs are long and the process dynamic, there is a good chance that both outputs will be cycling on and off at the same time around main setpoint. This is evident if one or both outputs are relays.
6. Autotune is not effective on the cooling side of Heat/Cool control. Autotune the controller for heat only and then manually tune the cooling parameters.

Wiring and Setting

1. Make sure that the controller has a relay installed for Output #2. Verify that parameters TC2, COOL, and db are indicated in the Setup menu.
2. Wire your cooling load to the Output #2 terminals located on the back of the controller.
3. In the Factory Preset menu, program the correct code for Heat/Cool action. See Table of Output Type Codes.
4. In the System menu, program TC2, the cycle time for Output #2.
5. Autotune or manually tune the PID parameters of your controller. Autotune will work for the heating PID parameters but not on the cooling parameters. You must manually tune the cooling parameters.
6. With the heat side tuned, manually set the COOL parameter or Proportional Band Coefficient for Cooling. If the cooling output is less powerful than the heating output, the Cooling Proportional Band must be narrower than the Heating Proportional Band; the COOL parameter would be less than "1". If the cooling output is more powerful than the heating output, the Cooling Proportional Band must be wider than the Heating Proportional Band; the COOL parameter would be more than "1". See the programming section for more details.
7. Finally, you can add a Deadband/Overlap. The programmed Deadband/ Overlap parameter can be within -50% to +50% of the Heating Proportional band. To establish a Deadband, parameter "db" is set

Heating Side	Cooling Side
Heating Proportional Band [P/2]	Cooling Proportional Band [P/2 COOL]
I	I (same as for heating)
D	D (same as for heating)

somewhere between 0% and 50% of the Heating Proportional band. To establish an Overlap, "db" is set somewhere between -50% and 0% of the Heating Proportional Band.

8. Manually fine-tune the parameters, "Cool" and "db", until just the right amount of cooling is achieved. Refer to the programming section for more details on these parameters.

CN4321/CN4431 QUICK REFERENCE

Setup Menu

Parameter		Range	Description	Default settings	DSP settings
roFF - rHLd		roFF/rrUn/rHLd	Ramp/soak command	roFF	dSP1-1
H	AH	0 - 100%FS	High Alarm Setpoint	10	dSP1-2
L	AL	0 - 100%FS	Low Alarm Setpoint	10	dSP1-4
Hb	Hb	-	N/A	0.0	dSP1-8
AT	AT	0 - 2	Auto-tuning	0	dSP1-16
LoC	LoC	0 - 2	Parameter lock	0	dSP1-32

System Menu

P	P	0.0 - 999.9%FS	Proportional band	5.0	dSP1-128
I	I	0 - 3200sec	Integral time	240	dSP2-1
d	D	0.0 - 999.9sec	Derivative time	60	dSP2-2
TC	TC	1 - 150sec	Cycle Time (output #1)	†	dSP2-4
HYS	HYS	0 - 50%FS	Hysteresis	1	dSP2-8
TC2	TC2**	1 - 150sec	Cycle Time (output #2)	†	dSP2-16
Cool	Cool**	0.0 - 100.0	Proportional band coefficient for cooling	1.0	dSP2-32
db	db**	-50 - 50% of P	Deadband/Overlap	0.0	dSP2-64
bAL	bAL	0 - 100%	Balance	0.0/50.0	dSP2-128
Ar	Ar	0 - 100%FS	Anti-reset wind-up	100%FS	dSP3-1
P-n2	P-n2	0 - 16	Input type code	†	dSP3-2
P-SL	P-SL	-1999 - 9999	Lower range of input	0%FS	dSP3-4

Parameter		Range	Description	Default settings	DSP settings
P-SU	P-SU	-1999 - 9999	Upper range of input	100%FS	dSP3-8
P-dP	P-dP	0 - 2	Decimal point position	0	dSP3-16
P-AH	P-AH	0 - 11	Alarm Type 1 code	5	dSP3-32
P-AL	P-AL*	0 - 15	Alarm Type 2 code	9	dSP3-64
PVOF	PVOF	-10 - 10%FS	PV offset	0	dSP3-128
SVOF	SVOF	-50 - 50%FS	SV offset	0	dSP4-1
P-F	P-F	°C/°F	°C/°F selection	†	dSP4-2
STAT	STAT	--	Ramp/soak status	oFF	dSP4-4
SV-1	SV-1	0 - 100%FS	1st setpoint	0%FS	dSP4-8
TM1r	TM1r	0 - 99hr 59min	1st ramping time	0.00	dSP4-16
TM1S	TM1S	0 - 99hr 59min	1st soaking time	0.00	dSP4-32
SV-2	SV-2	0 - 100%FS	2nd setpoint	0%FS	dSP4-64
TM2r	TM2r	0 - 99hr 59min	2nd ramping time	0.00	dSP4-128
TM2S	TM2S	0 - 99hr 59min	2nd soaking time	0.00	dSP5-1
SV-3	SV-3	0 - 100%FS	3rd setpoint	0%FS	dSP5-2
TM3r	TM3r	0 - 99hr 59min	3rd ramping time	0.00	dSP5-4
TM3S	TM3S	0 - 99hr 59min	3rd soaking time	0.00	dSP5-8
SV-4	SV-4	0 - 100%FS	4th setpoint	0%FS	dSP5-16
TM4r	TM4r	0 - 99hr 59min	4th ramping time	0.00	dSP5-32
TM4S	TM4S	0 - 99hr 59min	4th soaking time	0.00	dSP5-64
MOD	MOD	0-15	Ramp/soak Mode code	0	dSP5-128

Factory Preset Menu

Parameter		Range	Description	Default settings	DSP settings
P-n1	P-n1	0 -19	Control Action code	†	dSP6-2
P-dF	P-dF	0.0 - 900.0sec	Input Filter Constant	5.0	dSP6-4
P-An	P-An	0 - 50%FS	Alarm Hysteresis	1	dSP6-8
rCJ	rCJ	-	N/A	ON	dSP6-16
PLC1	PLC1	-	N/A	-3.0	dSP6-32
PHC1	PHC1	-	N/A	103.0	dSP6-64
PLC2	PLC2	-	N/A	-3.0	dSP6-128
PHC2	PHC2	-	N/A	103.0	dSP7-1
PCUT	PCUT	-	N/A	0	dSP7-2
FUZY	FUZY	OFF/ON	Fuzzy control	OFF	dSP7-4
GAIN	GAIN	-	N/A	1	dSP7-8
ADJ0	ADJ0	-	Zero calibration	0	dSP7-16
ADJ5	ADJ5	-	Span calibration	0	dSP7-32
OUT	OUT	-	N/A	-3.0	dSP7-64
dSP1 dSP7	dSP1-7	0-255	Parameter mask	†	-

* Not applicable to CN4321

**Not applicable to CN4431

† Based on the model