

AVC 1000-3000



M3333/1217

Shop online at: omega.com e-mail: info@omega.com For latest product manuals: omegamanual.com



INSTALLATION AND OPERATING INSTRUCTIONS FOR **OMEGA® PRESSURE VOLUME CONTROLLERS,** MODELS AVC-1000 AND AVC-3000

INSTALLATION (see figure)

Step 1 -Install a valve to the vent port on the pressure balance valve assembly.

Step 2 -

Install a valve to the inlet port on the pressure balance valve assembly.

Step 3 -


Install a tee fitting to the rear of the AVC unit.

Step 4 -

Connect a pressure standard, for example a dial gauge or digital indicator to one side of the tee. To the other side of the tee connect the device to be calibrated or tested.

NOTE (Installation) -

All plumbing connections are made to 1/8 NPTF ports.

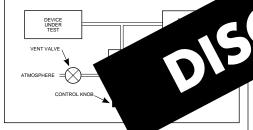

OPERATION

Step 1 -Open the pressure balance valve.

Step 2 -Open the vent valve.

Step 3 -

Turn the control knob to approximately midrange. This will allow for increase and decrease of system pressure. Alternatively, the starting position of the knob may be at the counterclockwise

or clockwise stop. This will allow for maximum pressure increase (knob at the counterclockwise stop) or maximum pressure decrease (knob at clockwise stop).

Step 4 -

Close the vent valve.

Step 5 –

Open the inlet valve to provide pressure to approximately the desired pressure level.

Step 6 -

When the appropriate pressure has been achieved, close the inlet valve.


Step 7 -Close pressure balance valve.


Step 8 –

Turn control knob clockwise to increase system pressure or counterclockwise to decrease system pressure.

NOTE (Operation) –

INUEP During operation the prevalve will automatic sure across the This is fact ferent

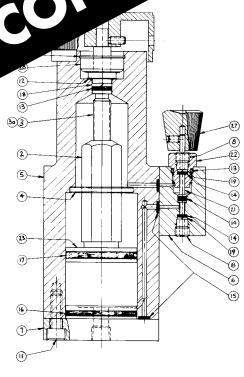

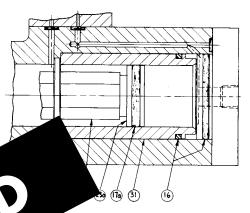

LIST

NO.	QTY. Per Assy.	PART NUMBER	DESCRIPTION
1	1		Final Assembly
2	1	603X002-01	Actuator (1000 psi unit)
2a	1	603X002-02	Actuator (3000 psi unit)
3	1	603X003-01	Lead Screw (1000 psi unit)
3a	1	603X003-02	Lead Screw (3000 psi unit)
4	1	603X004-01	Washer, Actuator
5	1	603X005-01	Body
6	1	603X006-01	Valve Body
7	1	603X007-01	End Cap
8	2	603X008-01	Guide Screw
9	3**	854X050-01	Pipe Plug
10	2**	605X003-09	Socket Head Screw (valve)
11	8	605X004-05	Socket Head Screw
12	1	605X005-01	Washer
13	2	607A001-02	0-Ring
14	3	607X001-04	0-Ring
15	3	607X001-05	0-Ring
16	1*	607X001-06	0-Ring
17	1	607X001-08	O-Ring (1000 psi unit)
17a	1	607X001-07	O-Ring (3000 psi unlt)
18	1	607A002-02	Back-up Ring
19	2	607X002-05	Back-up Ring
20	1	607X006-01	Retaining Ring
21	1	609X005-01	Spool Valve
22	1	609X006-01	Retainer Valve
23	1	614X003-01	Piston (1000 psi unit)
23a	1	614X003-02	Piston (3000 psi unit)
24	1	618X004-01	Label, Valve Control
25	1	618X005-03	Label (1000 psi unit)
25a	1	618X005-04	Label (3000 psi unit)
26	1	619X001-03	Knob, Adjustment
27	1	619X002-01	Knob, Balance Valve
28	1	620X001-01	Bearing, Ball Thrust
29	1**	617X006-01	Mounting Kit, Panel
30	1**	621X001-02	Table Mount Bracket (optional)
31	1	610X002-01	Sleeve (3000 psi unit)
*Quantity is 2 in model AVC-3000.			

Quantity is 2 in model AVC-3000 **Not shown.

omega.com info@omega.com

Servicing North America:

U.S.A. Headquarters:

Omega Engineering, Inc. Toll-Free: 1-800-826-6342 (USA & Canada only) **Customer Service: 1-800-622-2378** (USA & Canada only) Engineering Service: 1-800-872-9436 (USA & Canada only) Tel: (203) 359-1660 e-mail: info@omega.com

For Other Locations Visit omega.com/worldwide

The information contained in this document is believed to be correct, but OMEGA accepts no liability for any errors it contains, and reserves the right to alter specifications without notice.

WARRANTY/DISCLAIMER

OMEGA ENGINEERING, INC. warrants this unit to be free of defects in materials and workmanship for a period of **13 months** from date of purchase. OMEGA's WARRANTY adds an additional one (1) month grace period to the normal **one (1) year product warranty** to cover handling and shipping time. This ensures that OMEGA's customers receive maximum coverage on each product. If the unit malfunctions, it must be returned to the factory for evaluation. OMEGA's Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective, it will be repaired or replaced at no charge. OMEGA's WARRANTY does not apply to defects resulting from any action of the purchaser, including but not limited to mishandling, improper interfacing, operation outside of design limits, improper repair, or unauthorized modification. This WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of having been damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA's control. Components in which wear is not warranted, include but are not limited to contact points, fuses, and triacs.

OMEGA is pleased to offer suggestions on the use of its various products. However, OMEGA neither assumes responsibility for any omissions or errors nor assumes liability for any damages that result from the use of its products in accordance with information provided by OMEGA, either verbal or written. OMEGA warrants only that the parts manufactured by the company will be as specified and free of defects. OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESSED OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. LIMITATION OF LIABILITY: The remedies of purchaser set forth herein are exclusive, and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.

CONDITIONS: Equipment sold by OMEGA is not intended to be used, nor shall it be used: (1) as a "Basic Component" under 10 CFR 21 (NRC), used in or with any nuclear installation or activity; or (2) in medical applications or used on humans. Should any Product(s) be used in or with any nuclear installation or activity, medical application, used on humans, or misused in any way, OMEGA assumes no responsibility as set forth in our basic WARRANTY/DISCLAIMER language, and, additionally, purchaser will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the Product(s) in such a manner.

RETURN REQUESTS / INQUIRIES

Direct all warranty and repair requests/inquiries to the OMEGA Customer Service Department. BEFORE RETURNING ANY PRODUCT(S) TO OMEGA, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OMEGA'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS). The assigned AR number should then be marked on the outside of the return package and on any correspondence.

The purchaser is responsible for shipping charges, freight, insurance and proper packaging to prevent breakage in transit.

FOR **WARRANTY** RETURNS, please have the following information available BEFORE contacting OMEGA:

- 1. Purchase Order number under which the product was PURCHASED,
- 2. Model and serial number of the product under warranty, and
- 3. Repair instructions and/or specific problems relative to the product.

FOR **<u>NON-WARRANTY</u>** REPAIRS, consult OMEGA for current repair charges. Have the following information available BEFORE contacting OMEGA:

- 1. Purchase Order number to cover the COST of the repair,
- 2. Model and serial number of the product, and
- 3. Repair instructions and/or specific problems relative to the product.

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering. OMEGA is a registered trademark of OMEGA ENGINEERING, INC.

[©] Copyright 2016 OMEGA ENGINEERING, INC. All rights reserved. This document may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without the prior written consent of OMEGA ENGINEERING, INC.