


User's Guide

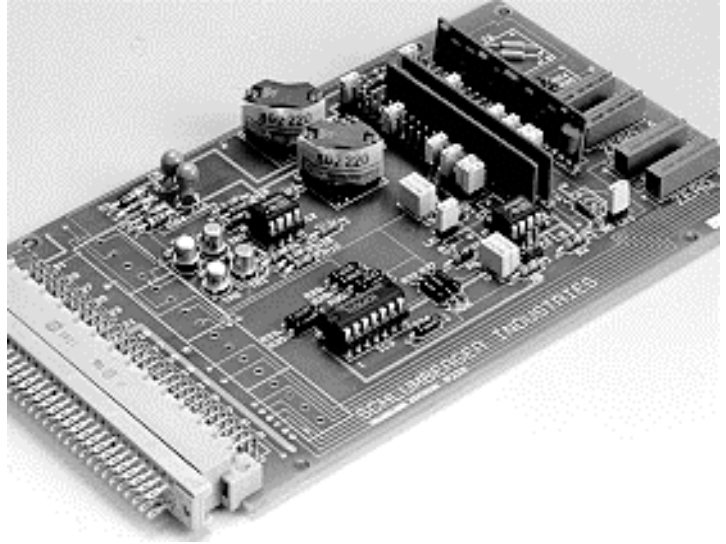

*<http://www.omega.com>
e-mail: info@omega.com*

LDX-CA
LDX-CA card



OMEGAnet® On-Line Service http://www.omega.com	Internet e-mail info@omega.com
---	--

Servicing North America:

USA: One Omega Drive, Box 4047
ISO 9001 Certified Stamford, CT 06907-0047
Tel: (203) 359-1660 FAX: (203) 359-7700
e-mail: info@omega.com

Canada: 976 Bergar
Laval (Quebec) H7L 5A1
Tel: (514) 856-6928 FAX: (514) 856-6886
e-mail: info@omega.ca

For immediate technical or application assistance:

USA and Canada: Sales Service: 1-800-826-6342 / 1-800-TC-OMEGASM
Customer Service: 1-800-622-2378 / 1-800-622-BESTSM
Engineering Service: 1-800-872-9436 / 1-800-USA-WHENSM
TELEX: 996404 EASYLINK: 62968934 CABLE: OMEGA

Mexico and Latin America: Tel: (95) 800-826-6342 FAX: (95) 203-359-7807
En Español: (95) 203-359-7803 e-mail: espanol@omega.com

Servicing Europe:

Benelux: Postbus 8034, 1180 LA Amstelveen, The Netherlands
Tel: (31) 20 6418405 FAX: (31) 20 6434643
Toll Free in Benelux: 0800 0993344
e-mail: nl@omega.com

Czech Republic: ul. Rude armady 1868, 733 01 Karvina-Hranice
Tel: 420 (69) 6311899 FAX: 420 (69) 6311114
Toll Free: 0800-1-66342 e-mail: czech@omega.com

France: 9, rue Denis Papin, 78190 Trappes
Tel: (33) 130-621-400 FAX: (33) 130-699-120
Toll Free in France: 0800-4-06342
e-mail: france@omega.com

Germany/Austria: Daimlerstrasse 26, D-75392 Deckenpfronn, Germany
Tel: 49 (07056) 3017 FAX: 49 (07056) 8540
Toll Free in Germany: 0130 11 21 66
e-mail: info@omega.de

United Kingdom: One Omega Drive, River Bend Technology Centre
ISO 9002 Certified Northbank, Irlam, Manchester
M44 5EX, England
Tel: 44 (161) 777-6611 FAX: 44 (161) 777-6622
Toll Free in the United Kingdom: 0800-488-488
e-mail: info@omega.co.uk

It is the policy of OMEGA to comply with all worldwide safety and EMC/EMI regulations that apply. OMEGA is constantly pursuing certification of its products to the European New Approach Directives. OMEGA will add the CE mark to every appropriate device upon certification.

The information contained in this document is believed to be correct, but OMEGA Engineering, Inc. accepts no liability for any errors it contains, and reserves the right to alter specifications without notice.


WARNING: These products are not designed for use in, and should not be used for, patient-connected applications.

Introduction

The function of the card is to energize a transducer (LVDT, Half-Bridge or Full-Bridge) with a stable a.c. waveform and to convert the output of the transducer to a d.c. voltage proportional to displacement, strain, load etc. Several versions are available with either single or dual channel conditioning. An $(A \pm B)/2$ facility may be provided as an option.

The card should be powered from a stable twin rail d.c. supply of $\pm 15V$.

Figure 1 - Schematic

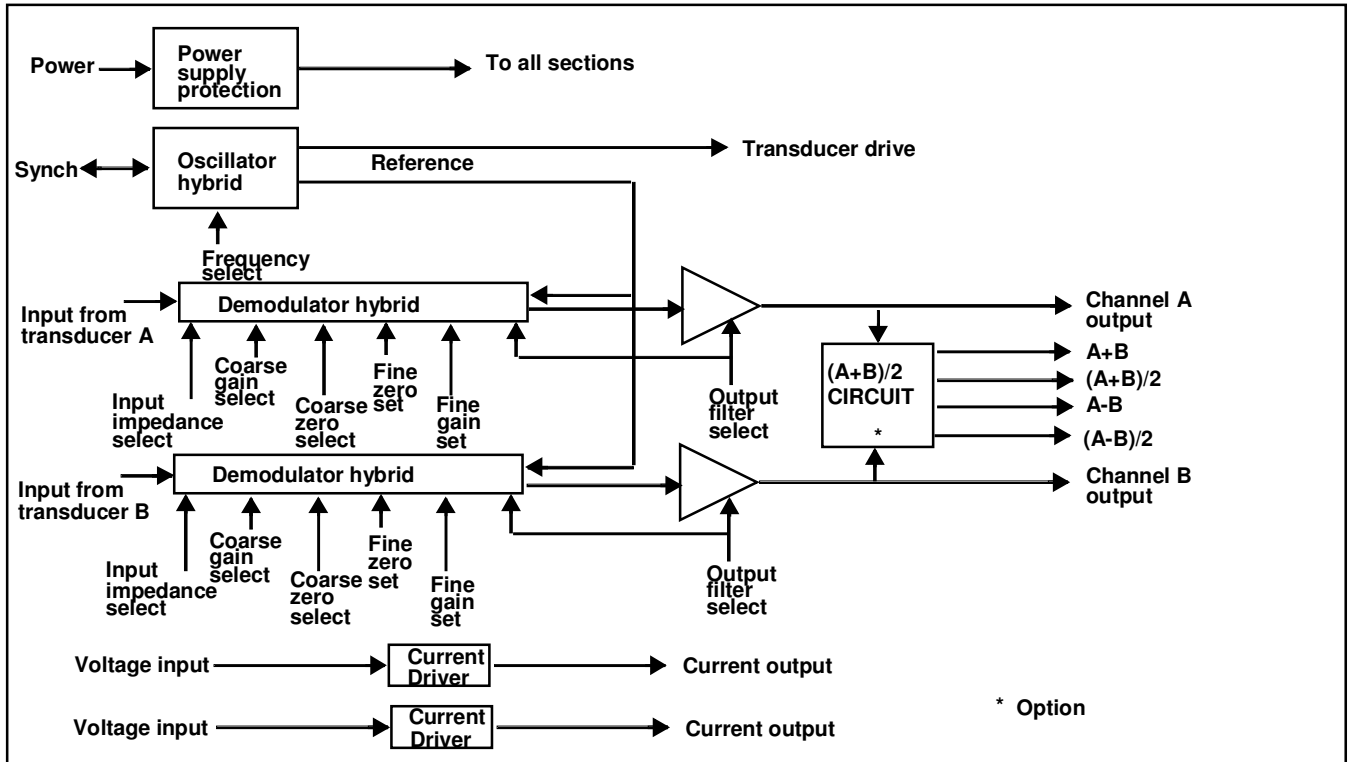

Circuit Operation

Power supply protection is provided to protect against reversed power rails, the circuit is also tolerant of the disconnection of one supply. A pair of zener diodes offer basic protection against voltage spikes on the supply rails.

The oscillator hybrid drives the transducer and the signal from the transducer is fed into the demodulator hybrid.

The d.c. output from the demodulator is fed into another filter to reduce output ripple even further and hence to the output.

The $(A \pm B)/2$ facility offers four outputs based on the two transducer outputs (A and B). These are A+B, A-B, $(A+B)/2$, $(A-B)/2$ and they can be used for measuring diameters etc. where two transducers are involved. The current drivers are wired up separately and so can be used with any of the d.c. outputs.

In order to exploit the transducer to the full, a number of facilities are provided. Span is adjustable in 9 coarse ranges and with a fine span control to allow the use of transducers with sensitivities in the range 0.5mV/V to 750mV/V for a full scale output of 5V d.c. Coarse and fine zero controls are provided to enable the transducer to be zeroed anywhere in its stroke. Two operating frequencies are provided, 5kHz and 10kHz and the output filter cut off frequency can be set to 500Hz to 1kHz to allow for the best response time/output ripple trade off. The standard card is provided with an input transformer and a pair of resistors to be used when half-bridge transducers are in use. These two resistors are precision low drift types to reduce drift. (The transformer option should be used in critical Half-Bridge applications.)

Figure 2 - Connections

FUNCTION	DIN 41612 PINS	SCREW TERMINAL
Power Supply		
+15V dc	32a & c	32
0V	30a & c	30
-15V	28a & c	28
Transducer Drive		
Oscillator Output (LVDT Red)	22a & c	22
Oscillator 0V Return (LVDT Blue)	20a & c	20
Oscillator/2 for use with Half-Bridges	18a & c	18
Synch (to Synchronize cards)	21a	21
Transducer Screens	24a & c	24
Channel A Demodulator		
Input (LVDT White)	16a & c	16
Input return (LVDT Green)	14a & c	14
dc output	26a & c	26
Channel B Demodulator		
Input (LVDT White)	19a	19
Input return (LVDT Green)	17a	17
dc output	23a	23
Current Drivers		
Driver A input	25a	25
Driver A output	27a	27
Driver B input	29a	29
Driver B output	31a	31
(A ± B)/2 Section		
A+B Output	7a	7
(A+B)/2 Output	9a	9
A-B Output	11a	11
(A-B)/2 Output	13a	13
Selected Output X	15a	15
Selected Output Y	15c	

Figure 3 – Card Layout



Potentiometers

If it is required to mount the span or zero potentiometers remotely, the pins are available on the edge connector to do so. Wire lengths should be kept short to avoid pick up of electrical noise, and lengths greater than 0.55 yards (0.5m) may cause some degradation of performance.

The potentiometer leads should be wired to the pins specified in external connections, ensuring the clockwise and anticlockwise leads are not reversed.

Figure 4 -

FUNCTION	DIN 41612 PINS	SCREW TERMINAL
Potentiometers		
Span and zero potentiometers are connected to the edge connector, so that they can be replaced by ones off board.		
Channel A & B Zero Clockwise	8a & c	8
Channel A & B Zero Counterclockwise	10a & c	10
Channel A Zero Wiper	12a & c	12
Channel B Zero Wiper	5a	5
Channel A & B Span Clockwise	2a & c	2
Channel A Span Counterclockwise	4a & c	4
Channel A Span Wiper	6a & c	6
Channel B Span Counterclockwise	1a	1
Channel B Span Wiper	3a	3

Synch


Pin 21a is a synchronizing pin to be used in systems using more than one card. Link pin 21a on all cards together with short wires to synchronize the oscillators.

If this is not done it is possible to create beat notes between oscillators causing fluctuations in the dc outputs.

Wiring Up

This section details how to connect the card to power supplies, transducer and readouts.


Figure 5 - Power Supply

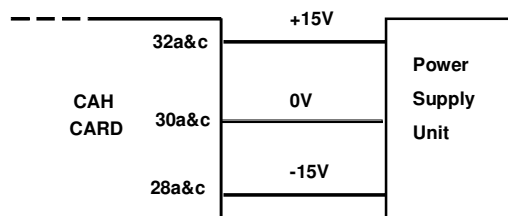

Transducers

The LDX-CA card can be used with three different types of transducers: LVDT, Full-Bridge or Half-Bridge (either inductive or resistive). Note that on the dual channel card the two transducers are driven in parallel, but their outputs go to separate demodulators.

Figure 6 - Transducer Wiring

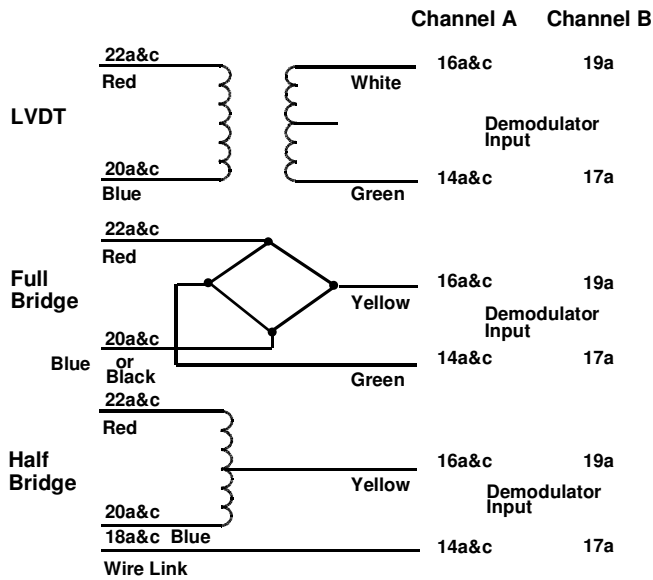

Note that colors of wires may vary with different manufacturers. The colors quoted are standard for Omega. In all cases the transducer lead screen may be connected to Pins 24 a&c.


Output Voltages

The dc output voltage from the card can be read by putting a voltmeter (either digital or analogue) between the output and 0V (Pin 30).

Similarly, when the (A±B)/2 facility is used, the four outputs (A+B, A-B, (A+B)/2, (A-B)/2) can be read by connecting the voltmeter between the appropriate output pin and 0V. All outputs can be read at once.


To enable the use of one meter, a six way selector switch can be used:

Figure 7 - (A±B)/2 Wiring using Single Voltmeter

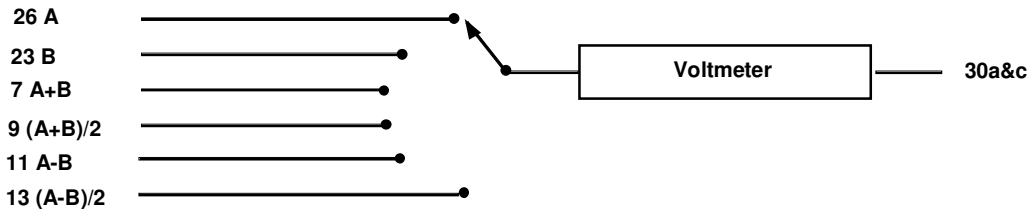

In some cases it may be desired to mount this switch on a front panel attached to the card, with the selected output from the switch wiper being fed to a remote meter via the edge connector. For this purpose there are two output pins (15a&c) assigned to be 'selected outputs', and the wiper of the switch should be wired to one of these. To enable this to be done the appropriate pins (26, 23, 7, 11 & 13) on the edge connector are wired to pads near the edge connector so wires to the switch can be attached.


Figure 8 -

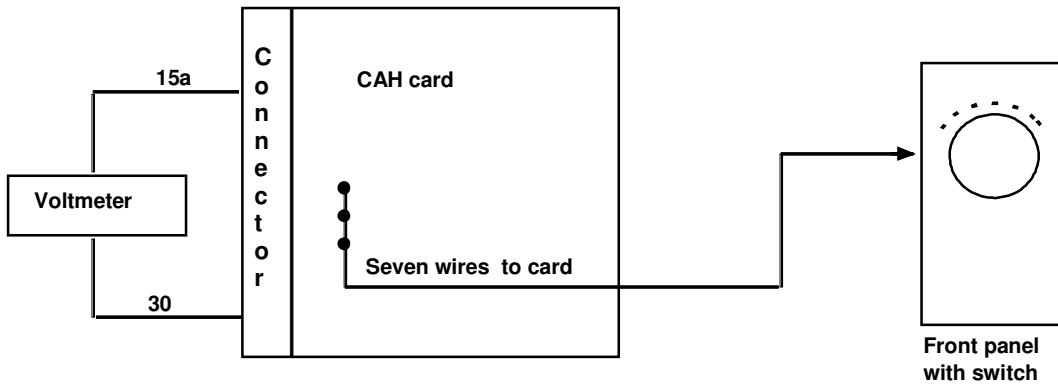

Current Outputs

These are provided by two current drivers, wired separately to the rest of the card electronics. They can be looked upon as voltage to current converters and can be operated with any of the six output voltages mentioned above.

Figure 9 - Current Outputs

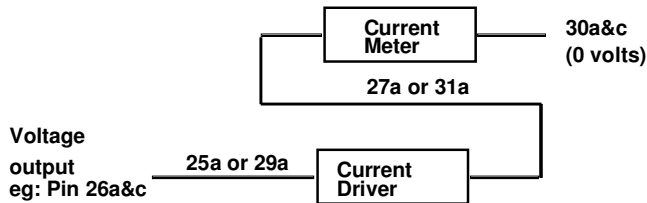

The current drivers provide 2mA of output per volt input, so that $\pm 5V$ on the voltage output causes $\pm 10mA$ output.

Setting Up


Facilities exist on the card for adjusting oscillator frequency, output filter frequency, demodulator input impedance, span and zero. This is carried out by moving links to short out elected pairs of vertical pins. These links simply lift off and push onto the pins. In the case of span and zero there are also potentiometers for fine adjustment.

Oscillator Frequency

Two oscillator frequencies are selectable using the four way set of pin pairs. If the links are placed over the two center pairs, the oscillator will run at 5kHz, and, if over the other pairs, at 10kHz.

Frequency should be selected to be near the zero phase shift frequency of the transducer for minimum temperature drift. Most transducers are calibrated at 5kHz and so this frequency can be relied upon for good results. However, if a faster speed of response is required, then the 10kHz oscillator frequency can be used with most transducers (not ac long strokes).

Figure 10 - Oscillator Frequency Links

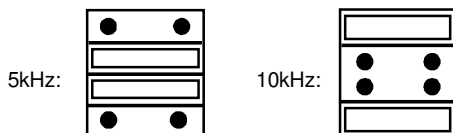


Output Filter Frequency

Each demodulator has a low pass filter on the output to remove the ac signal used to energize the transducer. The cut off frequency of this filter can be set to either 500Hz or 1kHz using pin pairs LK1 - LK4. Under normal use the 500Hz setting would be used with the 5kHz oscillator frequency and 1kHz with 10kHz oscillator. The benefit of using the higher frequency is that the output will follow the movement of the transducer armature more quickly, but use of the lower frequency results in less ripple on the dc output. The best compromise is with the settings above, but if, for example, a fast response with a long stroke is required, it will be necessary to use a 5kHz oscillator and a 1kHz filter. The disadvantage is an increase in ripple. LK1 and LK3 are used for channel A. Put the link on LK1 for 1kHz filter frequency or LK3 for 500Hz. LK2 and LK4 are used for channel B. Put the link on LK2 for 1kHz filter frequency or on LK4 for 500Hz.

Demodulator Input Impedance

Different transducers are calibrated into different loads. For instance most LVDT's are calibrated with 100k Ω loads, but half bridges use 1k Ω . For this reason the input impedance of the demodulator can be set to 100k Ω , 10k Ω or 1k Ω , using the three pin pairs at the top of the eighteen way selector. The channel A and B selectors are laid out as follows:

Figure 11 - Channel A and B Selectable Links

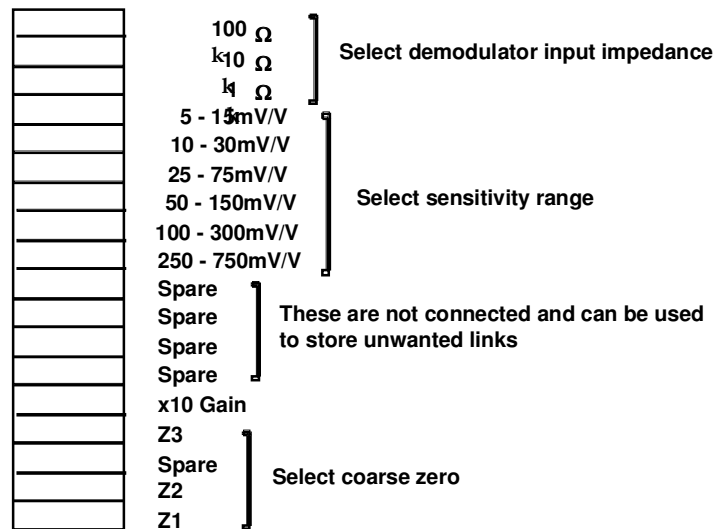

A link should be placed over one of the 100k Ω , 10k Ω or 1k Ω , pin pairs to select the correct impedance. If unsure, use the 100k Ω setting.

Selecting Sensitivity Range

Before adjusting the fine zero and span controls it is necessary to set the sensitivity range links for the appropriate transducer being used. All Omega transducers have a sensitivity value supplied with the transducer and the appropriate links should be made as shown in Table A. There are nine coarse ranges in two overlapping ranges of six each. If unsure select 100-300mV range to start.

Table A

Range	Transducer Sensitivity		Select Pin Pair	x10 Link Fitted
	Minimum	Maximum		
1	250mV/V	750mV/V	250 - 750	No
2	100	300	100 - 300	No
3	50	150	50 - 150	No
4	25	75	25 - 75	No
5	10	30	10 - 30	No
6	5	15	5 - 15	No
4	25	75	250 - 750	Yes
5	10	30	100 - 300	Yes
6	5	15	50 - 150	Yes
7	2.5	7.5	25 - 75	Yes
8	1	3	10 - 30	Yes
9	0.5	1.5	5 - 15	Yes


Selecting the x10 link increases the gain of the amplifier and so reduces the necessary sensitivity of the transducer. The span control is used to set the span in the range between minimum and maximum. The above sensitivity ranges are for a standard $\pm 5V$ or $\pm 10mA$ output (10V or 20mA total range).

If a different output range is required (say V volts) then the necessary transducer sensitivities shown should be multiplied by $v/10$. For example, if an output of $\pm 3V$ is required (total range 6V) then range 1 becomes 250×0.6 to 750×0.6 which is 150 to 450mV/V.


Setting Coarse Zero Range

Eight coarse zero ranges are provided and selected by linking up to three off pin pairs Z1 to Z3. A fine control is used to set the zero anywhere required. This means that on minimum gain, the ranges provided are:

Figure 12 -

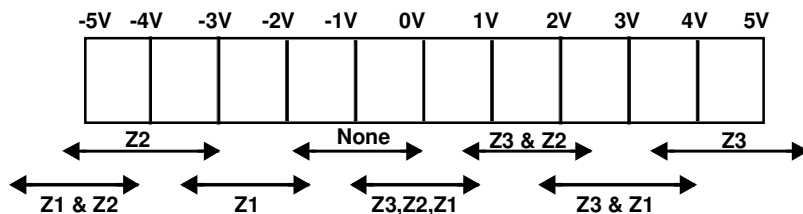

As the gain is increased this opens out, so that at maximum gain it becomes three times wider:

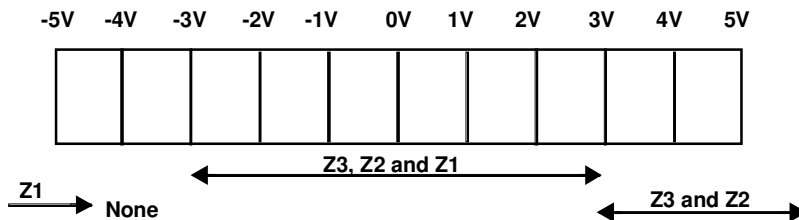

Note that the normal mode of operation is with all three links on, to provide fine adjustment about zero.

Span and Zero

To set up the span and zero controls, examine the output that will finally be required, ie. the voltage or current output, to avoid errors in the current drivers. If the $(A\pm B)/2$ facility is being used, then it is possible to calibrate on (for instance) the $A+B$ output, again for maximum accuracy.

Note that it is necessary in this case to zero the unwanted transducer, or remove the secondary and short the demodulator input so that one transducer is examined at a time.

With transducers such as load cells that have an obvious center point (ie. no load) then it is merely necessary to set the card span and zero as described below. However, for LVDT's and Half-Bridges it is necessary to find the mechanical zero (ie. center of linear stroke) first. To accomplish this:

- (a) Remove transducer from card input.
- (b) Short the demodulation input (Pins 14 & 16 or 17 & 19) to simulate a transducer at center of stroke and read the d.c. output from the card demodulator. Adjust the appropriate zero adjust pot if necessary to read 0V.
- (c) Remove the short and reconnect the transducer.
- (d) Mechanically adjust the transducer to its mid-position to give zero output voltage. The transducer is now set to the middle of its stroke and the zero adjust can be used to set the d.c. output to exactly 0V.
- (e) Now move the transducer to the desired full stroke value and adjust the span potentiometer to give 5V.
- (f) Re-check the zero and span positions until both are correct.

If an offset zero is required (such as on a 4-20mA system) then first adjust for normal mid-range zero as detailed previously in steps (b) to (d).

Now move the transducer mechanically to the offset position required and use the zero adjust to give a 4mA reading. Then set the transducer to the desired full stroke relative to the new offset zero and use the span adjust for 20mA (in conjunction with coarse zeroes if necessary).

Re-check 4 and 20mA positions until fully set up, as, because the zero position is offset, it is affected by the span adjustment.

Card Specification

Dimensions	4 inches x 6.25 inches (100mm x 160mm) (Eurocard)
Weight	Up to 4.224 ozs (120 grms)
Operating Temperature Range	0-122°F (0 to 50°C)
Power Supply	Regulated $\pm 15V$ ($\pm 1V$) at $\pm 100mA$ [This can be reduced to $\pm 12V$, but it will only be possible to overrange to approx. $\pm 9V$ instead of $\pm 10V$. Note, if output transformer fitted to oscillator reduce oscillator output to 4V.]
Supply Protection	Protected against reverse polarity, overvoltage transients, and is insensitive to failure of a single supply
Transducers Usable	LVDT's, Full Bridges and Half Bridges, both inductive and resistive. The use of the two resistors provided as standard to complete the second half for a Half Bridge may introduce slight zero drift at the highest gains.

Oscillator

Transducer Drive	5V RMS sine wave, at 5kHz or 10kHz, user selectable
Drive Current	50mA maximum (100 Ω load) [40mA (130 Ω load) if output transformer (T3) fitted]
Oscillator Protection	Open and short circuit protected

Each Demodulator

Transducer Secondary Load	100K, 10K or 1K user selectable (Demodulator Input Impedance)
Transducer Sensitivity Range	0.5mV/V to 750mV/V in 9 coarse ranges (see Table A)
Range of Gain Controls	500:1 Coarse and 3:1 Fine control
Range of Zero Control	8 coarse settings and fine control enabling zero to be placed anywhere in transducer stroke.
Output Voltage (Full Scale $\pm 5V$)	$\pm 5V$ DC, but linear to $\pm 10V$, with positive output for inward stroke of transducer, if wired in accordance with instructions. To reverse polarity, reverse input or output leads of transducer.

Output Load	2K Ω minimum for $\pm 5V$ DC output.
Output Impedance	<1 Ω
Output Protection	Open and short circuit protected. Insensitive to capacitive loads
Output Ripple	<5mV pk-pk (0.1%) when oscillator frequency is 10 times filter frequency
Output Filter	Third order, cut off frequency user selectable at 500Hz or 1kHz to minimize ripple or maximize speed
Step Response (Nominal)	3.5mS at 500Hz and 2mS at 1kHz
Non-Linearity	<0.02%
Temperature Coefficients	Span <0.05%/ $^{\circ}C$ Zero <0.05%/ $^{\circ}C$

A \pm B Outputs (Option)

Outputs Available	A+B, A-B, A+B/2, A-B/2
Output Voltage	$\pm 5V$, Linear to $\pm 10V$ minimum load, impedance, protection as on demodulator output
Accuracy of Calculation	<0.5%
Temperature Coefficients	Span <0.0028%/ $^{\circ}F$ (<0.005%/ $^{\circ}C$) } In addition to demodulator Zero <0.0028%/ $^{\circ}F$ (<0.005%/ $^{\circ}C$) } temperature coefficients

Current Outputs

Two current drivers are provided which can be used with any of the six outputs (A, B, A+B, A-B, A+B/2, A-B/2) above.

Output Current	$\pm 10mA$ for $\pm 5V$ DC input, but linear to $\pm 20mA$ for $\pm 10V$ DC input. By appropriate use of span and zero controls, these can be set for a 0-20mA or 4-20mA output
Output Load	500 Ω maximum for 20mA output on $\pm 5V$ supply
Output Impedance	>50K
Output Protection	Open and short circuit protected. Insensitive to capacitive loads
Temperature Coefficients	Span <0.0028%/ $^{\circ}F$ (<0.005%/ $^{\circ}C$) } In addition to Zero <0.0028%/ $^{\circ}F$ (<0.005%/ $^{\circ}C$) } voltage coefficients

References

Single Channel		Eurocard	Screw Terminals	911001-6S
Single Channel		Eurocard	DIN 41612 Connector	911001-6D
Dual Channel		Eurocard	Screw Terminals	911001-7S
Dual Channel		Eurocard	DIN 41612 Connector	911001-7D
Dual Channel Output Transformer		Eurocard	DIN 41612 Connector	911001-7DT
Dual Channel	$A \pm B/2$	Eurocard	Screw Terminals	911001-8S
Dual Channel	$A \pm B/2$	Eurocard	DIN 41612 Connector	911001-8D
Dual Channel Output Transformer	$A \pm B/2$	Eurocard	DIN 41612 Connector	911001-8DT
Single Channel Output Transformer		Eurocard	Screw Terminals	911001-6ST
Single Channel Output Transformer		Eurocard	DIN 41612 Connector	911001-6DT
Dual Channel Output Transformer		Eurocard	Screw Terminals	911001-7ST
Dual Channel Output Transformer	$A \pm B/2$	Eurocard	Screw Terminals	911001-8ST

THIS PAGE INTENTIONALLY LEFT BLANK

THIS PAGE INTENTIONALLY LEFT BLANK

WARRANTY/DISCLAIMER

OMEGA ENGINEERING, INC. warrants this unit to be free of defects in materials and workmanship for a period of **13 months** from date of purchase. OMEGA Warranty adds an additional one (1) month grace period to the normal **one (1) year product warranty** to cover handling and shipping time. This ensures that OMEGA's customers receive maximum coverage on each product.

If the unit malfunctions, it must be returned to the factory for evaluation. OMEGA's Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective, it will be repaired or replaced at no charge. OMEGA's WARRANTY does not apply to defects resulting from any action of the purchaser, including but not limited to mishandling, improper interfacing, operation outside of design limits, improper repair, or unauthorized modification. This WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of having been damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA's control. Components which wear are not warranted, including but not limited to contact points, fuses, and triacs.

OMEGA is pleased to offer suggestions on the use of its various products. However, OMEGA neither assumes responsibility for any omissions or errors nor assumes liability for any damages that result from the use of its products in accordance with information provided by OMEGA, either verbal or written. OMEGA warrants only that the parts manufactured by it will be as specified and free of defects. OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESS OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. LIMITATION OF LIABILITY: The remedies of purchaser set forth herein are exclusive, and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.

CONDITIONS: Equipment sold by OMEGA is not intended to be used, nor shall it be used: (1) as a "Basic Component" under 10 CFR 21 (NRC), used in or with any nuclear installation or activity; or (2) in medical applications or used on humans. Should any Product(s) be used in or with any nuclear installation or activity, medical application, used on humans, or misused in any way, OMEGA assumes no responsibility as set forth in our basic WARRANTY / DISCLAIMER language, and, additionally, purchaser will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the Product(s) in such a manner.

RETURN REQUESTS / INQUIRIES

Direct all warranty and repair requests/inquiries to the OMEGA Customer Service Department. BEFORE RETURNING ANY PRODUCT(S) TO OMEGA, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OMEGA'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS). The assigned AR number should then be marked on the outside of the return package and on any correspondence.

The purchaser is responsible for shipping charges, freight, insurance and proper packaging to prevent breakage in transit.

FOR **WARRANTY** RETURNS, please have the following information available BEFORE contacting OMEGA:

1. Purchase Order number under which the product was PURCHASED,
2. Model and serial number of the product under warranty, and
3. Repair instructions and/or specific problems relative to the product.

FOR **NON-WARRANTY** REPAIRS, consult OMEGA for current repair charges. Have the following information available BEFORE contacting OMEGA:

1. Purchase Order number to cover the COST of the repair,
2. Model and serial number of the product, and
3. Repair instructions and/or specific problems relative to the product.

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible.

This affords our customers the latest in technology and engineering.

OMEGA is a registered trademark of OMEGA ENGINEERING, INC.

© Copyright 1999 OMEGA ENGINEERING, INC. All rights reserved. This document may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without the prior written consent of OMEGA ENGINEERING, INC.

Where Do I Find Everything I Need for Process Measurement and Control? OMEGA...Of Course!

TEMPERATURE

- Thermocouple, RTD & Thermistor Probes, Connectors, Panels & Assemblies
- Wire: Thermocouple, RTD & Thermistor
- Calibrators & Ice Point References
- Recorders, Controllers & Process Monitors
- Infrared Pyrometers

PRESSURE, STRAIN AND FORCE

- Transducers & Strain Gauges
- Load Cells & Pressure Gauges
- Displacement Transducers
- Instrumentation & Accessories

FLOW/LEVEL

- Rotameters, Gas Mass Flowmeters & Flow Computers
- Air Velocity Indicators
- Turbine/Paddlewheel Systems
- Totalizers & Batch Controllers

pH/CONDUCTIVITY

- pH Electrodes, Testers & Accessories
- Benchtop/Laboratory Meters
- Controllers, Calibrators, Simulators & Pumps
- Industrial pH & Conductivity Equipment

DATA ACQUISITION

- Data Acquisition & Engineering Software
- Communications-Based Acquisition Systems
- Plug-in Cards for Apple, IBM & Compatibles
- Datalogging Systems
- Recorders, Printers & Plotters

HEATERS

- Heating Cable
- Cartridge & Strip Heaters
- Immersion & Band Heaters
- Flexible Heaters
- Laboratory Heaters

ENVIRONMENTAL MONITORING AND CONTROL

- Metering & Control Instrumentation
- Refractometers
- Pumps & Tubing
- Air, Soil & Water Monitors
- Industrial Water & Wastewater Treatment
- pH, Conductivity & Dissolved Oxygen Instruments