Where Do I Find Everything I Need for Process Measurement and Control? OMEGA...Of Course! Shop online at omega.com[™]

TEMPERATURE

- Thermocouple, RTD & Thermistor Probes. Connectors Panels & Assemblies
- ☑ Wire: Thermocouple, RTD & Thermistor
- Calibrators & Ice Point References
- Recorders, Controllers & Process Monitors
- Infrared Pyrometers

PRESSURE, STRAIN AND FORCE

- Transducers & Strain Gages
- Load Cells & Pressure Gages
- Displacement Transducers
- Instrumentation & Accessories

FLOW/LEVEL

- Rotameters, Gas Mass Flowmeters & Flow Computers
- Air Velocity Indicators
- Turbine/Paddlewheel Systems
- ✓ Totalizers & Batch Controllers

pH/CONDUCTIVITY

- pH Electrodes, Testers & Accessories
- Benchtop/Laboratory Meters Controllers, Calibrators, Simulators & Pumps
- Industrial pH & Conductivity Equipment

DATA ACQUISITION

- Data Acquisition & Engineering Software
 Communications-Based Acquisition Systems
- Plug-in Cards for Apple, IBM & Compatibles
- Data Logging Systems
- Recorders, Printers & Plotters

HEATERS

- Heating Cable
- $\boldsymbol{\nu}$ Cartridge & Strip Heaters
- 1 Immersion & Band Heaters
- Flexible Heaters
- Laboratory Heaters

ENVIRONMENTAL MONITORING AND CONTROL

- Metering & Control Instrumentation
- Refractometers
- Pumps & Tubing
- Air, Soil & Water Monitors
- Industrial Water & Wastewater Treatment
- 1 pH, Conductivity & Dissolved Oxygen Instruments

M4643/0409

1 YEAR

WARRANTY



Shop online at

omega.com

omegamanual.info

omega.com



OMEGAnet[®] On-Line Service omega.com Internet e-mail info@omega.com

Servicing North America:

U.S.A.:

ISO 9001 Certified

 OMEGA Engineering, Inc., One Omega Drive,

 P.O. Box 4047, Stamford, CT 06907-0047 USA

 Toll-Free: 1-800-826-6342

 TEL: (203) 359-7160

 FAX: (203) 359-7700

 e-mail: info@omega.com

Canada:

976 Bergar Laval (Quebec), Canada H7L 5A1 Toll-Free: 1-800-826-6342 TEL: (514) 856-6928 FAX: (514) 856-6886 e-mail: info@omega.ca

For immediate technical or application assistance:

U.S.A. and Canada:

Sales Service: 1-800-826-6342/1-800-TC-OMEGA® Customer Service: 1-800-622-2378/1-800-622-BEST® Engineering Service: 1-800-872-9436/1-800-USA-WHEN®

Mexico:

En Español: 001 (203) 359-7803 FAX: (001) 203-359-7807 e-mail: info@omega.com.mx espanol@omega.com

Servicing Europe:

Benelux:	France:	United Kingdom: ISO 9001 Certified
Managed by the United Kingdom Office	Managed by the United Kingdom Office	OMEGA Engineering Ltd.
	Toll-Free: 0800 466 342 TEL: +33 (0) 161 37 29 00	One Omega Drive, River Bend Technology
FAX: +31 20 643 46 43 e-mail: sales@omega.nl	FAX: +33 (0) 130 57 54 27 e-mail: sales@omega.fr	Centre, Northbank, Irlam, Manchester
Czech Republic:	Germany/Austria:	M44 5BD England
Frystatska 184, 733 01 Karviná, Czech Republic	Daimlerstrasse 26	Toll-Free: 0800-488-488
Toll-Free: 0800-1-66342 TEL: +420-59-6311899	D-75392 Deckenpfronn, Germany	TEL: +44 (0)161 777-6611
FAX: +420-59-6311114	Toll-Free: 0 800 6397678 TEL: +49 (0) 7059 9398-0	
e-mail: info@omegashop.cz	FAX: +49 (0) 7056 9398-29 e-mail: info@omega.de	e-mail: sales@omega.co.uk

It is the policy of OMEGA Engineering, Inc. to comply with all worldwide safety and EMC/EMI regulations that apply. OMEGA is constantly pursuing certification of its products to the European New Approach Directives. OMEGA will add the CE mark to every appropriate device upon certification. The information contained in this document is believed to be correct, but OMEGA accepts no liability for any errors it contains, and reserves the right to alter specifications without notice.

WARNING: These products are not designed for use in, and should not be used for, human applications.

RETURN REQUESTS / INQUIRIES

Direct all warranty and repair requests/inquiries to the OMEGA Customer Service Department. BEFORE RETURNING ANY PRODUCT(S) TO OMEGA, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OMEGA'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS). The assigned AR number should then be marked on the outside of the return package and on any correspondence. The purchaser is responsible for shipping charges, freight, insurance and proper packaging to prevent breakage in transit.

FOR **WARRANTY** RETURNS, please have the following information available BEFORE contacting OMEGA:

1. Purchase Order number under which the product was PURCHASED,

 Model and serial number of the product under warranty, and
 Repair instructions and/or specific problems relative to the product.

FOR **NON-WARRANTY** REPAIRS, consult OMEGA for current repair charges. Have the following information available BEFORE contacting OMEGA:

1. Purchase Order number to cover the COST of the repair,

2. Model and serial number of the product, and

3. Repair instructions and/or specific problems relative to the product.

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering.OMEGA is a registered trademark of OMEGA ENGINEERING, INC.

© Copyright 2009 OMEGA ENGINEERING, INC. All rights reserved. This document may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without the prior written consent of OMEGA ENGINEERING, INC.

WARRANTY/DISCLAIMER

OMEGA ENGINEERING. INC. warrants this unit to be free of defects in materials and workmanship for a period of **13 months** from date of purchase. The OMEGA® WARRANTY adds an additional one (1) month grace period to the normal one (1) year product warranty to cover handling and shipping time. This ensures that OMEGA's customers receive maximum coverage on each product.

If the unit malfunctions, it must be returned to the factory for evaluation, OMEGA's Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective, it will be repaired or replaced at no charge. OMEGA's WARRANTY does not apply to defects resulting from any action of the purchaser, including but not limited to mishandling, improper interfacing, operation outside of design limits, improper repair, or unauthorized modification. This WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of having been damaged as a result of excessive corrosion: or current, heat, moisture or vibration; improper specification; misapplication; or misuse or other operating conditions outside of OMEGA's control. Components in which wear is not warranted, include but are not limited to contact points, fuses, and triacs.


OMEGA is pleased to offer suggestions on the use of its various products. However, OMEGA neither assumes responsibility for any omissions or errors nor assumes liability for any damages that result from the use of its products in accordance with information provided by OMEGA, either verbal or written. OMEGA warrants only that the parts manufactured by the company will be as specified and free of defects. OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESSED OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. LIMITATION OF LIABILITY: The remedies of purchaser set forth herein are exclusive, and the total liability of OMEGA with respect to this order, whether based on contract, warranty, nealigence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.


CONDITIONS: Equipment sold by OMEGA is not intended to be used, nor shall it be used; (1) as a "Basic Component" under 10 CFR 21 (NRC), used in or with any nuclear installation or activity; or (2) in medical applications or used on humans. Should any Product(s) be used in or with any nuclear installation or activity, medical application, used on humans, or misused in any way. OMEGA assumes no responsibility as set forth in our basic WARRANTY DISCLAIMER language, and, additionally, purchaser will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the Product(s) in such a manner.

CONTENT

Product Features 2	Viewing on a TV monitor11
First Time Use 4	Setting video format11
System Modes 4	Deleting a specific photo (Browse mode only)12
Multi-function keys5	Deleting all photos12
Manual Screen 6	Setting auto power off13
Operating Instructions8	Re-charging the battery13
Power On/Off8	Creation of Memory Card Folder 13
Adjust the brightness8	Specifications15
Taking Photos8	Troubleshooting16
Video Recording9	Insert Tube Maintenance17
Viewing photos/videos9	Cautions for Use18
Setting Time/Date10	
Setting Time Display10	



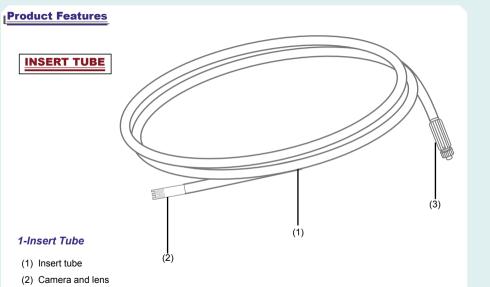

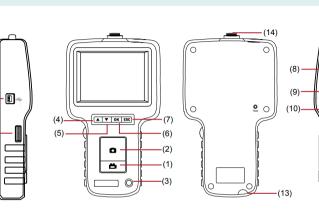

2-CONSOLE	
(1)	📇 RECORD
(2)	SNAP
(3)	U POWER
(4)	▲ PREVIOUS

HHB1500

(11) -

(12)

(6)	ок
(7)	ESC
(8)	SD Port
(9)	TV out

(5) **V**NEXT

(10)	AC Jack
(11)	USB port
(12)	Light adjustment
(13)	Hanger Hole
(14)	Console Connector

(3) Insert tube connector

(Please read the entire instruction manual before usage)

First Time Use

- STEP 1-Insert the insert tube into the connector according to the direction of the arrow and tighten the screw nut.
- STEP 2-Press and hold down the power button on the console for 3 seconds until the image is displayed on the monitor.
- STEP 3-Aim the camera lens at the selected object. Press SNAP to capture a .jpg image, or RECORD to begin recording a .asf video.

System Modes

The HHB1500 provides three simple working modes: Preview, Browse and Manual Mode.

Preview Mode	The Preview Mode is activated as soon as the unit is turned on. The image received by the camera is displayed in real time on the video monitor. The user can capture photos and record video while in the Preview Mode.
Browse Mode	In Browse Mode, users may view photos and video, and conduct basic file maintenance.
Manual Mode	In Manual Mode, users may customize their set up preferences.

Note: The system returns to Preview Mode automatically after 10 seconds without any response in Manual Model.

Multi-function keys

Each console button performs a unique function depending upon the Mode in which the system is being operated

Push-Buttons	Preview Mode	Browse Mode	Manual Mode
	Switch to Browse Mode to view photos and videos.	Move to previous photo or video.	Move upward through the main manual.
▼	Switch to Browse Mode to view photos and videos.	Move to next photo or video.	Move the light bar downward.
ок	Enter Manual Mode.	Delete photo or video.	Execute selected command.
ESC	Return to Preview Mode.	Return to Preview Mode.	Return to Preview Mode.
٥	Capture a .jpg photo	View the next photo or pause/play video clips.	Display various data for repair
ä	Start and stop video recording	Return to Preview Mode	Return to Preview Mode

Manual Screen

The user may press the MENU button in Manual Mode to execute desired commands as indicated below.

DELETE ALL VIDEO OUTPUT DATE/TIME SETUP LANGUAGE VIDEO FORMAT AUTO POWER OFF



•DELETE ALL

After initiating this command, select "yes" or "no" by pressing up or down arrow buttons. To delete all, select "yes". Exit by pressing the OK button.


•VIDEO OUTPUT

This command will send the video signal out through the AV port. The monitor will turn black until you execute this command again.

(Figure.2)



Use the arrow buttons to select Year/Month/Day or Hour/Min/Sec. Press RECORDING to increase the number, or press SNAP to decrease. Select "Display ON" to print the date on the photo.

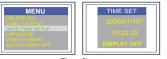

(Figure.3)

MENU	LANGUAGE
OELDTE ALL VIDEO OUTPUT DATE/TIME SETUP	ENGLISH 日本語
LANGUAGE VIDEO FORMAT	ESPANOL ITALIAN
AUTO POWER OFF	

(Figure.4)

VIDEO FORMAT

•I ANGUAGE

Set up your video format.

AUTO POWER OFF

Set the auto power off feature to your desired length of time.

POWER OFF

(Figure.5)



Use this command to select the desired language.



Operating Instructions

Power On/Off

- STEP1: To turn the console on, press the power button for 3~5 seconds until you see the sign below appear on your monitor.
 - SD card memory capacity Battery capacity)



STEP2: Press the power button for 3~5 seconds to turn the console off.

Adjust the brightness

When the objects on the screen or "fully-blank (light over)", it might be because the light source is too bright. In this case, please turn the light switch counterclockwise to reduce the brightness. Turn the light switch clockwise to increase the brightness.

Taking Photos

Press D button during Preview mode to take the photo.

Or, continue pressing the 🖸 button to show the photo that has just been taken. Image Status: Returns to Preview Mode automatically after photo is taken.



Video Recording

1. Press button to start video recording.
Image Status: Sign will appear at the left bottom of the screen.




(Figure.8)

2. Press button again to stop recording. Image Status: isign disappears.

Note: User may return to Preview Mode anytime by pressing ESC button regardless of working under Browse mode or Manual mode.

Viewing photos/videos

1. Press ▲ or ▼ during preview mode. <u>Image Status: Display the latest photo/video.</u>

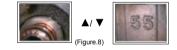

2. Press ▲ or ▼ again to view the oldest or second to last photo/video.

Image Status: All files will be stored according to the time sequence of photo capture/video recording.

Note: When viewing videos, the video will be displayed automatically until it ends and then the next photo or video will be displayed.

Setting Time/Date

1.Press OK

2.Press \blacktriangle or \blacksquare to move to Date/Time command.

3.Press **OK** to initiate the command.

4.Press **O** to increase the number or to decrease.

5.Press **1** for next adjustment.

6.Repeat step 4 and 5 until the correct time/date are set.

7.Press **OK** to complete the set up.

Setting Time Display


1.Press OK

2.Press \blacktriangle or \checkmark to move to "Date/Time" command.

3.Press OK

4.Press \blacktriangle or \blacksquare for "Display" option.

- 5.Press **t** to switch the "Display" function between ON/OFF. Image Status: Press **o** once for ON. press again for OFF.
- 6. Press **OK** to complete set up.
- 7. Press ESC to return to Preview mode.

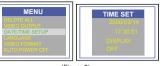

(Figure.9)

NOT DISPLAY

(Figure.10)

Viewing on a TV monitor

1. Plug the included AV cord into the AV socket located on the right side of the console.

Notice: Please plug the other end of the AV cord into the "AV in" socket on the

external monitor.

2.Press OK

3.Press \blacktriangle or \blacktriangledown to move to "Video output" option.

4.Press OK

Image Status: image will be transmitted to the external monitor.

Setting video format

1.Press OK

2.Press \blacktriangle or \blacksquare to move to "Video Format" option.


3.Press OK

4.Press \blacktriangle or \blacktriangledown to select NTSC/PAL.

5.Press OK



(Figure.12)

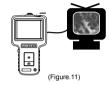

Deleting a specific photo (Browse mode only)

- 1. Enter Browse mode, then press \blacktriangle or \checkmark to locate the photo or video you wish to delete.
- 2 Press OK

Image Status: "Delete yes or no" options

3. To select your option, press \blacktriangle or \blacktriangledown

Image Status: The selected option flashes.

4. Press **OK** to execute your selected option or press ESC to cancel.



(Figure.13)

Deleting all photos

- 1. Press **OK** during Preview mode. Image Status: Showing the Main Manual
- 2. Press ▲ or ▼ for "Delete All" command.

3. Press OK

Image Status: "ves" or "no" option appears

4. Use \blacktriangle or \triangledown to select "yes".

5. Press **OK** to execute.



(Figure.14)

Setting auto power off

- 1.Press **OK** during Preview mode.
- 2.Press \blacktriangle or \checkmark for "Auto power off" command.
- 3.Press OK
- 4. Press \blacktriangle or ∇ to select desired time length or choose "Disable".

5.Press OK

MENU POWER OFF

(Figure.15)

The console will automatically turn off if it has not been used for this preset length of time.

Re-charging the battery

Re-charging the console battery

Plug the adapter into the outlet and plug the power jack into the socket on the console.

Creation of Memory Card Folder

The following information applies to the included SD card only. All photos and videos are stored in the [100MEDIA] folder under the [DCIM] folder. All files will be named according to the time/date setup.

User Guide 15

Camera System and Insert Tube	
0.2" Diameter Insert Tube	325(H)*250(V)
Housing	Steel
Light Source	White LED
Length	3.3", 6.6", 9.8" (1M, 2M, 3M) SOFT METAL 3.3", 6.6", 9.8", 16.4", 32.8", 98.4" (1M, 2M, 3M, 5M, 10M, 30M)
Field of View	Horizontal field angle 46°
	Vertical field angle 34°
	Diagonal field angle 56°
Depth of Field (DOF)	0.4" ~ 2.4"
Water Resistant	Only the InsertionInsert tube is water resistant
Working Temperature	32°F to 131°F

Specifications

System Console	
System Dimension	8.5" x 4.7" x 1.4" (215 x 120 x 36 mm)
System Weight	380g
Power	Battery rechargeable Li-Polymer battery 3.7V power supply AC 100-240V 50-60Hz power consumption DC5.5 1.8A
Display	3.5 TFT LCD QVGA
Recording Medium	1G SD CARD
Video Out Format	NTSC & PA

The original setup date 1 Month 1 Date 6:14:23 Name of the file

1 1 0 6 1 4 2 3 JPG Month Date Hour: Minute: Second Extension



- Users should complete the time/date setup before usage in order to achieve accurate file management.
- The time/date is pre-set to 2007/1/1. Users may identify this when the file name begins with the digits 11.
- File names are not labeled by serial number. They are labeled according to the current time/date.
- Both photos and videos are named in the same way but with different file extensions, .jpg and .asf.

Interface	AV out
Compression Format	Compliant with MPEG4
Still Image Storage Format	jpeg (640*480)
Frame Rate	~30 fps
Exposure	Automatic
White Balance	Fix
S/N Ratio	42dB or more
Language	English // Japanese // Netherlands // Spain // French // Italian
Recharge Temperature	32°F to 104°F
Working Temperature	-4°F to 140°F
Storage Temperature	-4°F to 140°F

Troubleshooting

•1. Unable to turn on the console

Users will not be able to turn on the console when the battery is very low or empty. Please re-charge before use.

+2. Can turn on the unit but the image does not appear on the monitor

Please check the insert tube connector or simply re-connect the insert tube to correct the problem.

•3. Unable to capture photos/video

Please check the status of the SD card. Users will not be able to capture photos or video if the SD card is not installed properly or if it is full, write protected or damaged.

Insert Tube Maintenance

»To avoid danger, please do not put the insert tube into any flammable liquid or gas.

»The insert tube contains a series of small wires that control the optics and electronics of the camera tip. To ensure long-term reliability, do not bend the insert tube more than 180 degrees, and always bend the insert tube in as large an arc as possible during usage and storage.

»Camera Lens cleaning

User may clean the camera lens with a cotton swab and small amount of cleaning naphtha

»Do not remove the SD card during capturing photos or video. This can cause a loss of the image or video and may damage the SD card.

»Video recording requires an SD card with fast writing speed. We recommend 80X (or above) writing speed SD cards for better video quality.

Θ

»The HHB1500 is designed for industrial use only. Do not use the system for human or any other biological inspection.

»Do not insert the insert tube into any flammable gas or liquid (such as a fuel tank) to avoid dangers. »Do not use the HHB1500 in a fuel tank or other dangerous environment such as a gasoline or alcohol storage tank. »Do not use any corrosive liquid for cleaning, such as alcohol.
 »Do not try to disassemble the product. This presents a shock hazard and could damage the unit.
 »Do not bend the insert tube over 180 degrees during usage or storage.
 »Please use only recommended components or accessories. Unapproved accessories and components may cause damage.
 »Please do not use HHB1500 in a medical facility.
 »Avoid direct exposure to sunlight for long periods of time.
 Store the system in a cool, dry and well-ventilated place.