

**3 YEAR**  
WARRANTY



# Ω OMEGA® User's Guide

**Shop online at  
*omega.com*®**

***e-mail: info@omega.com***  
***For latest product manuals:  
omegamanual.info***



MADE IN UNITED KINGDOM



## **MPS40** **Melting Point Apparatus**



**OMEGAnet® Online Service**  
**omega.com**

**Internet e-mail**  
**info@omega.com**

### **Servicing North America:**

**U.S.A.:**  
ISO 9001 Certified

OMEGA Engineering, Inc.  
One Omega Drive  
P.O. Box 4047  
Stamford, CT 06907-0047 USA  
Toll-Free: 1-800-826-6342  
FAX: (203) 359-7700

TEL: (203) 359-1660  
e-mail: info@omega.com

**Canada:**

976 Bergar  
Laval (Quebec), H7L 5A1 Canada  
Toll-Free: 1-800-826-6342  
FAX: (514) 856-6886

TEL: (514) 856-6928  
e-mail: info@omega.ca

### **For immediate technical or application assistance:**

**U.S.A. and Canada:** Sales Service: 1-800-826-6342 / 1-800-TC-OMEGA®  
Customer Service: 1-800-622-2378 / 1-800-622-BEST®  
Engineering Service: 1-800-872-9436 / 1-800-USA-WHEN®

**Mexico/  
Latin America**

En Español: 001 (203) 359-7803  
info@omega.com.mx

FAX: 001 (203) 359-7807  
e-mail: espanol@omega.com

### **Servicing Europe:**

**Benelux:**

Managed by the United Kingdom Office  
Toll-Free: 0800 099 3344  
FAX: +31 20 643 46 43

TEL: +31 20 347 21 21  
e-mail: sales@omegageng.nl

**Czech Republic:**

Frystatska 184  
733 01 Karviná, Czech Republic  
Toll-Free: 0800-1-66342  
FAX: +420-59-6311114

TEL: +420-59-6311899  
e-mail: info@omegashop.cz

**France:**

Managed by the United Kingdom Office  
Toll-Free: 0800 466 342  
FAX: +33 (0) 130 57 54 27

TEL: +33 (0) 161 37 29 00  
e-mail: sales@omega.fr

**Germany/Austria:**

Daimlerstrasse 26  
D-75392 Deckenpfronn, Germany  
Toll-Free: 0800 6397678  
FAX: +49 (0) 7056 9398-29

TEL: +49 (0) 7056 9398-0  
e-mail: info@omega.de

**United Kingdom:**

ISO 9001 Certified

OMEGA Engineering Ltd.  
One Omega Drive, River Bend Technology Centre, Northbank  
Irlam, Manchester M44 5BD United Kingdom  
Toll-Free: 0800-488-488  
FAX: +44 (0) 161 777-6622

TEL: +44 (0) 161 777-6611  
e-mail: sales@omega.co.uk

It is the policy of OMEGA Engineering, Inc. to comply with all worldwide safety and EMC/EMI regulations that apply. OMEGA is constantly pursuing certification of its products to the European New Approach Directives. OMEGA will add the CE mark to every appropriate device upon certification.


The information contained in this document is believed to be correct, but OMEGA accepts no liability for any errors it contains, and reserves the right to alter specifications without notice.

**WARNING:** These products are not designed for use in, and should not be used for, human applications.



# Melting Point Apparatus SMP40

Instructions for use

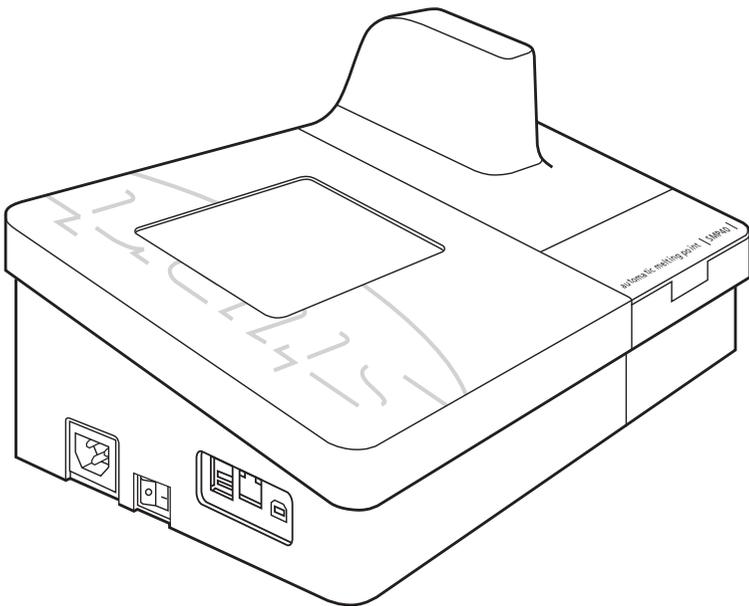

1. Introduction	1
2. Safety Advice Before Use	1
3. General Description	1
3.1 Module Separation	2
3.2 Melting Point Determination	3
3.3 Temperature Settings	3
3.4 Sample Preparation	3
4. Preparation for Use	4
4.1 Electrical Installation	4
4.2 Installation	4
5. Instrument and Software Controls	5
5.1 Instrument	5
5.2 Main Menu Screen	6
6. Setting up New Methods	10
6.1 Creating a New Method	11
6.2 Preset Methods	12
6.3 Carry out a Rapid-Melt	13
7. Performing Melt Determinations	14
8. Results	17
8.1 View Previous Results	17
8.2 Re-use Result Parameters	25
9. File Management	26
9.1 Manage Files	26
9.2 View Storage Information	28
10. Settings and Calibration	29
10.1 User Settings	29
10.2 Maintenance Settings	31
10.3 Instrument Calibration	31
11. Maintenance & Servicing	36
11.1 Repairs and Support	36
11.2 Cleaning the Sample Block	36
11.3 Accessories	36
12. Warranty	37
13. Specification	37

# 1. Introduction

Thank you for purchasing this piece of Stuart equipment. To get the best performance from the SMP40 please read these instructions carefully before use. Before discarding the packaging check that all parts are present and correct.

For your own safety and that of others please read and understand the safety advice given below before using the equipment.

## 2. Safety Advice Before Use

 If the equipment is not used in the manner described in this manual and with accessories other than those recommended by Stuart, the protection provided might be impaired.

This equipment is designed to operate under the following conditions:

- ❖ For indoor use only
- ❖ Use in a well ventilated area
- ❖ Ambient temperature range +5°C to +40°C
- ❖ Altitude to 2000m
- ❖ Relative humidity not exceeding 80%
- ❖ Mains supply fluctuation not exceeding 10%
- ❖ Over-voltage category II IEC 60364-4-443
- ❖ Pollution degree 2

Never move or carry the unit when in use or connected to the mains electricity supply.

The unit should be carried using both hands with fingers under each side of the frame.

The ventilation slots at the back or side of the device should not be sealed or obstructed.

# 3. General Description

The device is designed to automatically measure and record the melting temperatures of crystalline samples held within capillary tubes. Up to three tubes can be accommodated in an illuminated chamber within an aluminium block. The tubes are monitored by a digital camera; the image of which can be viewed on the instruments display during the melting process. The device is designed to be independently operated using the colour touch screen allowing all operational and data management functions to be performed without the need to attach an external computer or keyboard. The unit can be split into two modules to allow the heating module to be located in an environment suitable for the types of samples being tested, while the control module can be kept in a more convenient location.

The temperature range of the device is ambient to 400°C and the heating rate is variable between 0.1°C and 20°C/minute. Temperature data and information on the instruments status is displayed on the screen at all times. All of the instruments functions and menus are accessed using the colour touch screen interface which allows fast and intuitive navigation throughout a substance's melting point determination (melt determination). The instrument has sufficient internal storage capacity for an almost unlimited number of preset method programs and typically between 100 and 200 result files\*. When required, result files can be transferred from the instrument to a PC or USB flash drive for external storage and archiving.


When a melt cycle is started the SMP40 heats up to the pre-programmed plateau temperature at the maximum rate before stabilising at the plateau temperature for 60 seconds. The SMP40 will then start to heat at the pre-programmed rate until the melt is complete or until the device reaches a pre-determined end temperature. Once a melt determination has been completed, cooling is automatically engaged until the instrument reaches 50°C.

\* The number of result files that can be stored on the SMP40 is largely dependant upon the runtime and size of the video file for each sample.

The user is able to review the result file and video, reprocessing the automatically determined results if required.

### 3.1 Module Separation

Control module

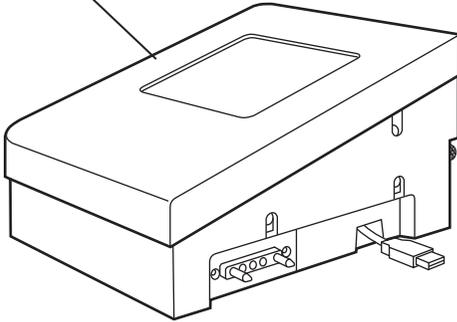

Melt module

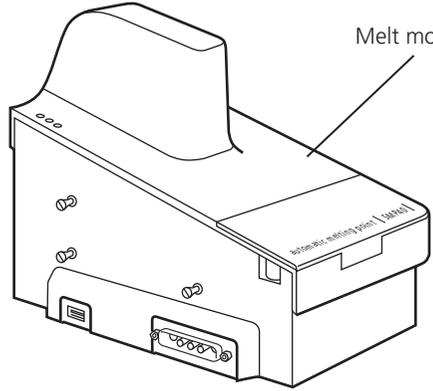


Figure 1: SMP40 module separation


The SMP40 can be split into two separate modules using the split module release mechanism located at the rear of the “Control” module. Using the supplied accessory cables the modules can be placed in separate locations up to 1m apart.

The SMP40s touchscreen display is fitted with an accelerometer device.


**Please ensure that the instruments electrical power supply is switched off or disconnected before commencing the following procedure.**

1. Rotate the split module release mechanism clockwise until it cannot be turned any further.
2. Gently pull the “Control” and “Melt” modules apart taking care not to strain the connecting USB cable.
3. Disconnect the USB cable on the control module that connects the two modules.
4. Using the accessory cables supplied with your SMP40 reconnect the power and USB connections between the modules.
5. Once the devices power supply is re-established the unit can then be used as described in this manual.
6. Reconnecting the modules is the reverse of the above.

**Please ensure that the extension cables are not removed from their connections when the unit is connected to the electrical power supply and switched on.**

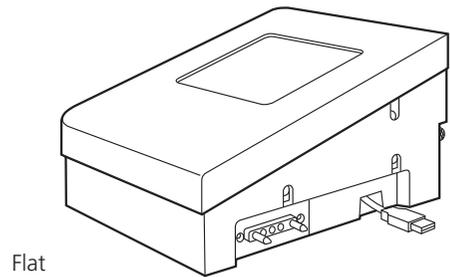

Flat

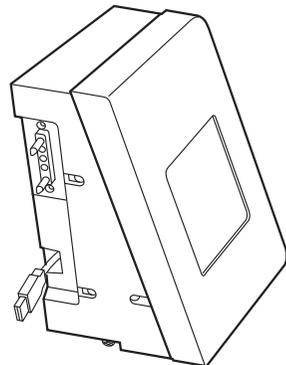

Upright

### 3.2 Melting Point Determination

The capillary technique is a standard method for determining the melting point of a substance. In this method, thin glass capillary tubes containing prepared samples of a substance are introduced into the heating block of a suitable device. The block is then heated at a fixed rate over a temperature range that brackets the expected melting temperature of the substance, until the substance is completely melted (i.e. clear point).

During the heating cycle the substance under test will often undergo a number of observable physical changes:

1. Fine droplets adhere uniformly to the inside of the capillary tube.
2. A clearance between the sample and the capillary wall becomes visible.
3. The substance collapses and begins to liquefy.
4. A meniscus is visible at the samples surface but solid particles remains visible. (Meniscus Point)
5. The sample is a clear liquid and no solid particles remain visible. (Clear Point)

When determining the melting point of a substance it is necessary to select one stage in the melting process which will be used to define the melting point. The meniscus point or clear point is commonly used to define the melting point of a substance.

**The SMP40 automatically reports the Clear Point (5); the point at which the sample is a clear liquid and no solid particles remain, as the melting point of a substance.**

Other changes in the physical appearance of the substance are sometimes observed, such as sublimation (transition from the solid to gas phase with no intermediate liquid stage) or decomposition (the separation of a substance into its elements or smaller compounds). These changes (if observed) should be recorded manually.

Where a single melting point is difficult to define for a substance it is often useful to report a substances melting range. The melting range of a substance is defined as the interval between the start of a melt and the clear point.

### 3.3 Temperature Settings

The temperature settings used to determine a substances melting point are critical to the accuracy of the determination.

<b>Start or Plateau Temperature:</b>	The start temperature is usually set 5 or 10°C below the expected melting point of the substance.
<b>End Temperature:</b>	The end temperature is set at a temperature where all physical changes in the substance are expected to be complete.
<b>Ramp Rate:</b>	The ramp rate is the rate at which the sample block is heated during the melt determination. For accurate determinations a rate of between 0.5°C/min and 2.0°C/min is recommended.

**Ramp rate is the most important instrument parameter with regards to the accuracy of a substances melt determination. The use of fast ramp rates is the most common cause of inaccurate melt determinations.**

### 3.4 Sample Preparation

For accurate melting point determinations the substance being tested should be in a dry and uniformly powdered form. Coarse crystalline and non-homogeneous samples should be crushed into a fine powder using a pestle and mortar before the substance is introduced into a capillary tube.

Each capillary tube in a substances melt determination should be prepared in the same way. The open end of a capillary tube is pressed gently into a small amount of powdered substance until the capillary contains sufficient material to form a compact layer of 2.5-4.5mm in height. The powder is then forced to the bottom of the tube by repeatedly tapping the bottom of the capillary against a hard surface.

**Excessive amounts of sample in the capillary tubes will result in inaccurate melt determinations.**

The SMP40 can accommodate up to three sample capillaries. For accurate melting point determinations it is recommended that three samples of the same material are prepared in the same way and analysed at the same time. The average of the three capillaries results can then be reported as the substances melting point.

The appropriate mains lead should be connected to the instrument BEFORE connection to the mains supply. Should the mains lead require replacement, a cable of 1mm<sup>2</sup> of harmonised code H05VV-F connected to an IEC320 plug should be used. The UK mains lead is protected by a 10A fuse mounted in the plug top.

## 4. Preparation for Use

### 4.1 Electrical Installation



THIS EQUIPMENT MUST BE EARTHED

Before connecting the instrument, please read and understand these instructions and ensure that the electrical supply corresponds to that shown on the rating plate. This unit is designed for use with a supply rated at 115/230V, 50-60Hz. The power consumption of the unit is 60W. The unit is fitted with an IEC socket at the side of the instrument for connection of the mains lead.

**Caution: Fuses are fitted in both live and neutral lines.**

The unit is supplied with two mains leads fitted with IEC plugs. One lead has a UK 3 pin plug and the other has a 2 pin "Shuko" plug for connection to the mains supply. Choose the lead appropriate for your electrical installation and discard the other. Should neither lead be suitable take the lead with the UK plug and replace the plug with a suitable alternative. This involves cutting off the moulded plug, preparing the cable and connecting to the rewirable plug in accordance with its instructions.

**IT IS IMPORTANT THAT THIS OPERATION SHOULD ONLY BE UNDERTAKEN BY A QUALIFIED ELECTRICIAN.**

Refer to the equipment's rating plate to ensure that the plug and fusing are suitable for the voltage and wattage stated. The wires in the mains cable are coloured as follows:

LIVE	BROWN
NEUTRAL	BLUE
EARTH	GREEN/YELLOW

### 4.2 Installation

Connect the unit to the electricity supply but DO NOT SWITCH ON. Place the unit on a firm, level, non-slip surface ensuring that there is sufficient free space on all sides without coming into contact with anything else during use. Switch the unit ON at the mains On/Off switch on the side of the instrument. When switched ON, the touch screen display will illuminate and the interface software will load within 30 seconds.

**IF IN DOUBT CONSULT A QUALIFIED ELECTRICIAN**



The sample block will become hot during operation.

# 5. Instrument and Software Controls

## 5.1 Instrument

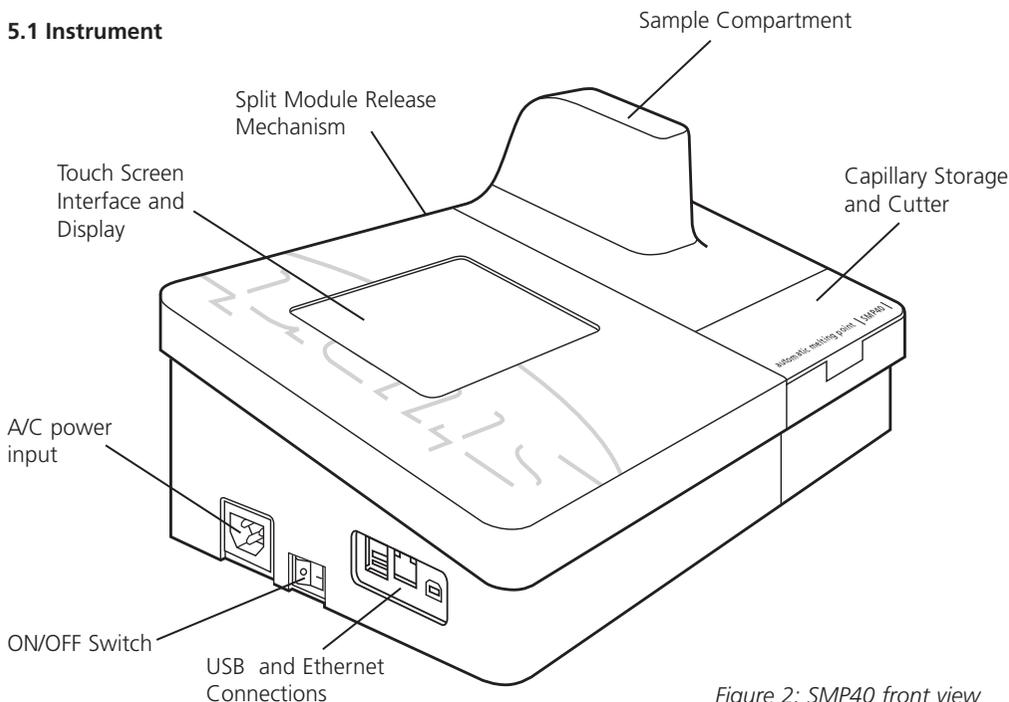


Figure 2: SMP40 front view

### Mains On/Off:

This is a rocker type switch found on the left hand side of the unit. Pressing the “I” switches the unit ON. Pressing the “O” switches the unit OFF.

### Sample Compartment:

This lifts to provide access to the sample block which is capable of holding three capillary sample tubes.

**Capillary tubes must be a minimum of 5.0cm in length to ensure that they can be retrieved from the sample block.**

### Capillary Storage and Cutter:

A compartment is provided for the storage of the glass capillaries used in the melt determinations and incorporates a device to cut capillary tubes.

### Touch Screen Interface and Display:

The touch screen interface is used to perform all control functions on the SMP40. Live images of the sample compartment, real-time data on the instrument’s status and the sample block’s temperature can also be viewed on this display.

### USB and Ethernet Connections:

A USB flash drive can be inserted into the one of the USB ports, allowing result files to be copied or moved from the device. If the unit is to be connected directly to a PC please contact the technical support department for advice. See page 35 for contact details.

The ethernet port is for service and support use only.

## 5.2 Main Menu Screen

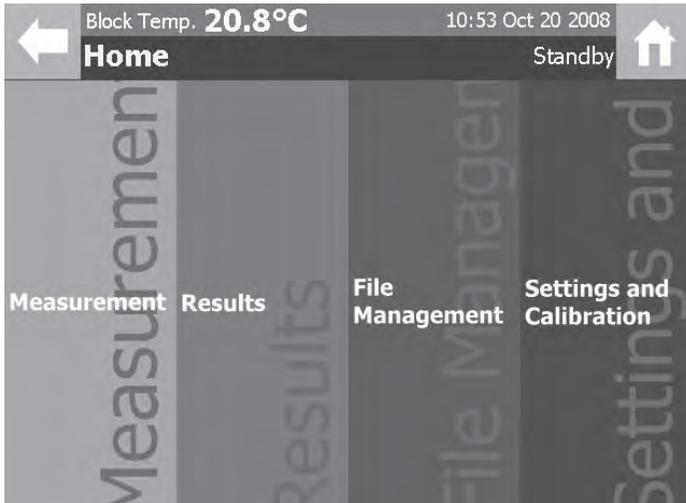


Figure 3:  
Main Menu

When the instrument is first switched on the display will show “LOADING PLEASE WAIT” message. After 30 seconds the display will show the main menu screen and the four main menu options:

**Measurement:** This menu gives access to options that allow a new melt determination to be performed using new, previously stored or preset method parameters.

**Results:** This menu gives access to the result files stored on the device. The result files report and video file can be accessed from this menu.

**File Management:** This menu allows result files on the device to be copied or moved to an inserted USB flash drive. The devices storage information is also displayed in this menu.

**Settings and Calibration:** This menu gives access to the devices user adjustable settings and also allows the device to be recalibrated if required.

The Stuart SMP40 is controlled solely through the touch screen interface of the instrument. The header bar is located at the top of the screen in most menus within the software interface.



Figure 4: The  
Touchscreen  
Header Bar

**Back Button:** Used to return to the previous screen at anytime

**Block Temperature:** Displays the actual temperature reading from the sample block

**Time and Date:** Displays the current time and date in the format specified in the user settings

**Menu Title/Name:** Displays the current menus title or name

**Instrument Status:** Displays the current instrument status

**Home Button:** Used to return to the main menu at anytime


The command toolbar is located at the bottom of the screen in most menus within the software interface. The command toolbar will give the user either one or two options based upon the menu shown.



Figure 5: The Command Toolbar

If the number of options available in a menu exceeds the number that can be displayed on the screen, a scrollbar will be displayed on the right hand side. Pressing the arrows at the top and bottom of the scrollbar enables the list of options available in the menu to be seen.

The following controls are used to input data and adjust settings on the instrument:

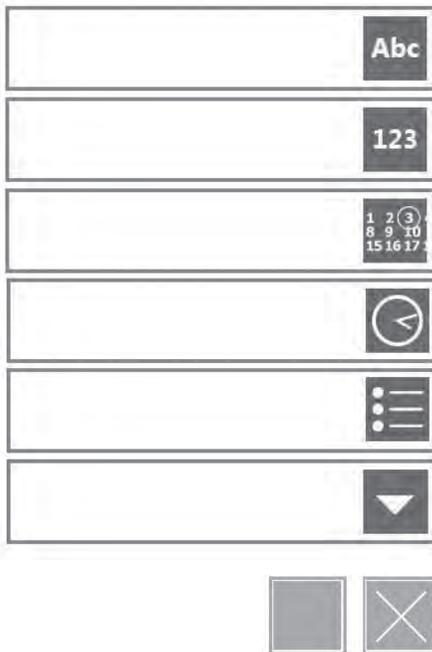

**Alphanumeric:** Alphanumeric data can be entered.

**Numerical:** Numerical data can be entered.

**Date:** Calendar date information can be entered.

**Time:** 12/24hr time information can be entered.

**Listed Options:** Setting specific options can be selected.

**Drop Down List:** Field specific options can be selected.

**Toggle Selection Field:** Option is not selected or selected respectively.

Other keys used:

**BCK** Removes the character directly behind the cursor or the highlighted characters.

**DEL** Removes the character directly in front of the cursor or the highlighted characters.

**SHIFT** Toggles the keypad between higher and lower case letters for one character entry.

**CAPS** Toggles the keypad between higher and lower case letters for all characters entered.


**CLR** Clears the characters in the current entry.

To change the data in each of these fields the screen should be pressed within the border of the control. The interface used to add or change the setting depends on the type of control.

### 5.2.1 Alphanumeric Entry Field



- 1 Selecting an Alphanumeric Entry Field opens the text keypad interface.
- 2 The alphanumeric entry field can be populated with letters (Abc), numbers (123) or symbols (SYM). Text, numbers and symbols are accessed using the Abc, 123 and SYM keys on each of the respective keypads.
- 3 Entries are confirmed by pressing the "Accept this text" button on the command toolbar.

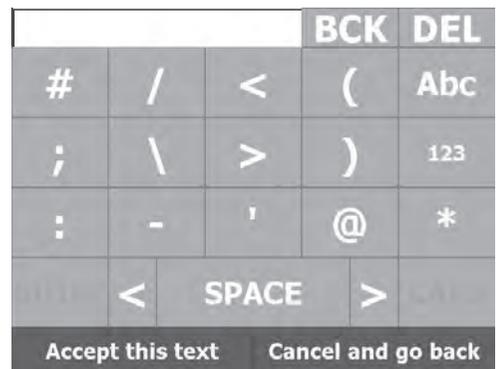


### 5.2.2 Numerical Entry Field




- 1 Selecting a Numerical Entry Field opens the numeric keypad interface.
- 2 The numeric entry field can only be populated with numbers.
- 3 Entries are confirmed by pressing the "Accept this number" button on the command toolbar.

### 5.2.3 Date Entry Field

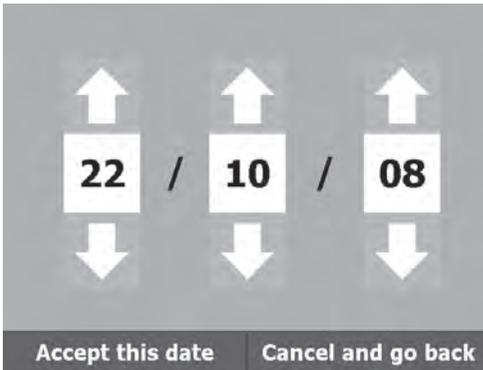


- 1 Selecting a Date Entry Field opens the date keypad interface.
- 2 The date entry field is displayed in the format specified in the User Settings menu.
- 3 Press the arrows above and below each number to increase or decrease the value displayed.
- 4 Entries are confirmed by pressing the "Accept this date" button on the command toolbar.

### 5.2.4 Time Entry Field

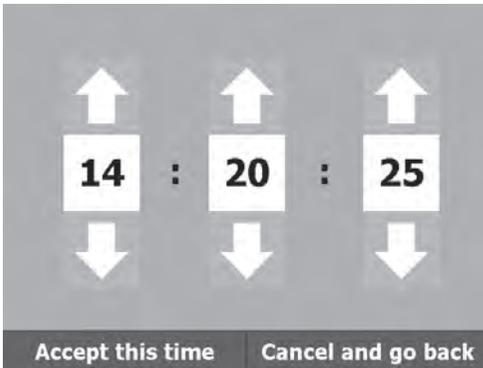

- 1 Selecting a Time Entry Field opens the time keypad interface.
- 2 The Time Entry Field is displayed in the 24 hour format.
- 3 Press the arrows above and below each number to increase or decrease the value displayed.
- 4 Entries are confirmed by pressing the "Accept this time" button on the command toolbar.

### 5.2.5 Listed Options Field

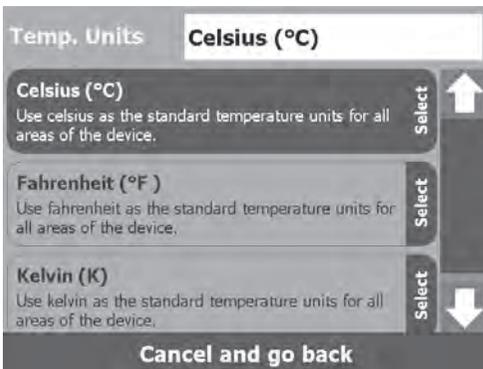

- 1 Selecting a Listed Options Field opens the listed options keypad interface.
- 2 The options available in the Listed Options entry field is specific to each individual setting. e.g. The Temperature Units setting gives the options Celsius (°C), Fahrenheit (°F) and Kelvin (K).
- 3 Use the scrollbar to view the full list of available options for each setting.
- 4 The option that is required is selected by pressing on the required option button.

## 5.2.6 Drop Down List Field



- 1 Selecting a Drop Down List Field displays the options available for that field.
- 2 Arrows keys may be displayed to indicate that further options are available. Use the arrow buttons to view the additional options.
- 3 Press the required option from the list to select it.

## 5.2.7 Toggle Selection Field



- 1 Pressing a Toggle Selection Field will add or remove the check mark in that field.
- 2 A check mark indicates that the option is active.

# 6. Setting up New Methods

Touching the measurement section on the main menu screen will open the measurement menu where three options are available:



**Create a new measurement:** This option allows a new melt determination to be started. Measurement parameters such as the Sample Name, Start Temperature and Ramp Rate need to be entered when using this option.

**Use a preset from the library:** This option allows a new melt determination to be started using measurement parameters stored previously on the device.

**Carry out a rapid-melt:** The device will roughly determine the melting point of the sample using preset measurement parameters.

## 6.1 Creating a New Method

In the Measurement menu screen touch the “Create a new measurement” section of the screen.

Block Temp. 45.9°C 14:42 Oct 20 2008 Standby

**Create New Method**

Sample Name  Abc

Start Temperature  Abc

Ramp Rate  123

Touch here to enter additional information

Continue Cancel and go back

Block Temp. 44.8°C 14:43 Oct 20 2008 Standby

**Additional Info**

End Temperature  Abc

Batch/Reference  Abc

Automatically detect the melt end

Go back to main information Cancel and go back


**Save as a preset method?** Yes

A preset method can be quickly selected, removing the need to enter method details each time. No

- 1 Enter a sample name for the samples by selecting the Sample Name field
- 2 Enter an appropriate start or plateau temperature for the sample by selecting the Start Temperature field.
- 3 Enter the required temperature ramp rate for the samples by selecting the Ramp Rate field.
- 4 Optional sample and method information is accessed by pressing the “Touch here to enter additional information” button. If this is not required press “Continue” and go to step 8.
- 5 The SMP40 will automatically detect the end of the melt when the toggle selection field has an X in the Automatically detect the melt end field. Removing this check mark allows a value to be entered into the End Temperature field.
- 6 Enter any batch or reference details in the Batch/Reference alphanumeric entry field.
- 7 To proceed to the melt determination select “Go back to main information” and then select “Continue”.
- 8 The option of saving this new method as a preset method will be given. Select “Yes” to save the method for future use or select “No” to proceed without saving the method.


## 6.2 Preset Methods

In the Measurement menu screen touch the “Use a preset from the library” section of the screen.

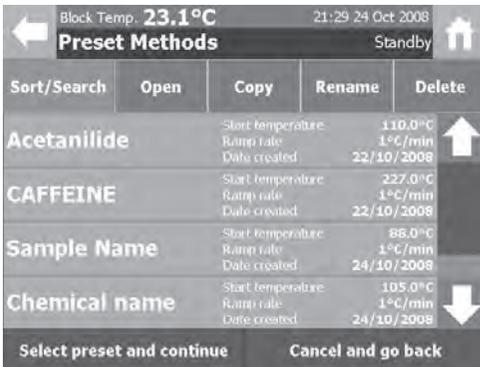


1 In the preset methods screen select the method to be used for the melt determination by pressing on the method details.

2 Press “Select preset and continue”.

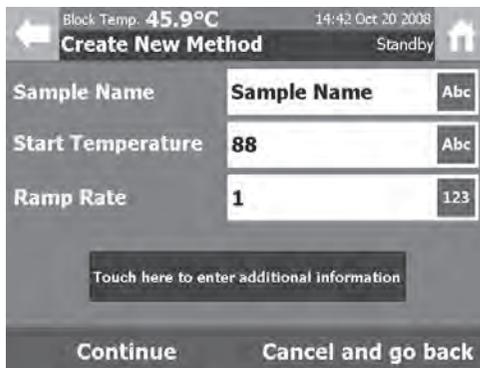

3 Method parameters such as the Sample Name, the Start Temperature and the Ramp Rate can then be adjusted if required by selecting the relevant field.

4 Optional sample and method information is accessed by pressing the “Touch here to enter additional information” button.

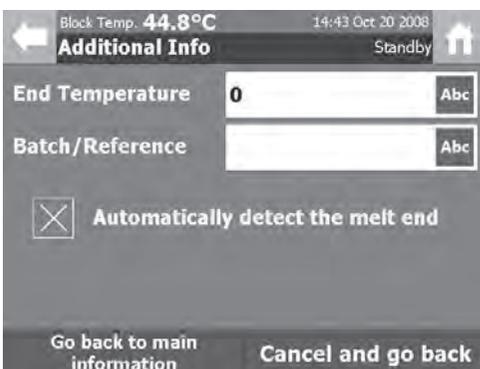

5 Method parameters can be adjusted if required. The SMP40 will automatically detect the end of the melt when the toggle selection field has an X in the “Automatically detect the melt end” field. Removing this check mark allows a value to be entered into the End Temperature field.

6 Enter any batch or reference details in the Batch/Reference alphanumeric entry field.

7 To proceed to the melt determination, select “Go back to main information” and then select “Continue”.

### Save as a preset method?

A preset method can be quickly selected, removing the need to enter method details each time.

Yes

No

### Overwrite existing preset?

A preset method with this sample name already exists. Do you want to overwrite it?

Yes


No

- 8 The option of saving this new method as a new preset method will be given if the sample name has been changed. Select "Yes" to save the method for future use or select "No" to proceed without saving the method.
- 9 If changes are made to the temperature settings the user will be asked whether they wish to overwrite the existing preset method of that name. Select "Yes" to save the new method settings for future use or select "No" to proceed without saving the new settings.

## 6.3 Carry out a Rapid-Melt

If the user is unsure of the start temperature that should be specified in a melt determination method they can use the rapid melt function to quickly determine an approximate melting temperature.

In the Measurement menu screen touch the "Carry out a rapid-melt" section of the screen.

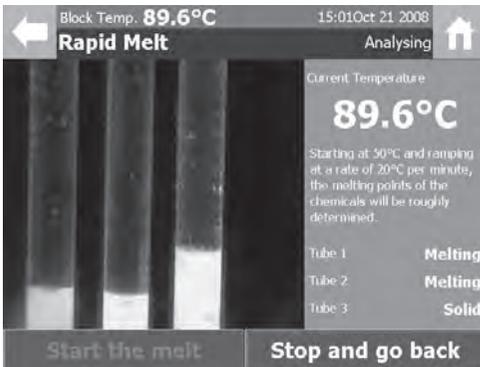

- 1 The rapid melt function will heat the sample from 50.0°C at 20.0°C/min until the sample has melted.



- 2 The results will be reported on the screen as shown in the example opposite.
- 3 The results from the rapid melt analysis can then be used to facilitate the setting of the start temperature on a more accurate melt determination.

## 7. Performing Melt Determinations

Once the analysis method and sample information have been entered into the SMP40 software the instrument will display the New Measurement screen.


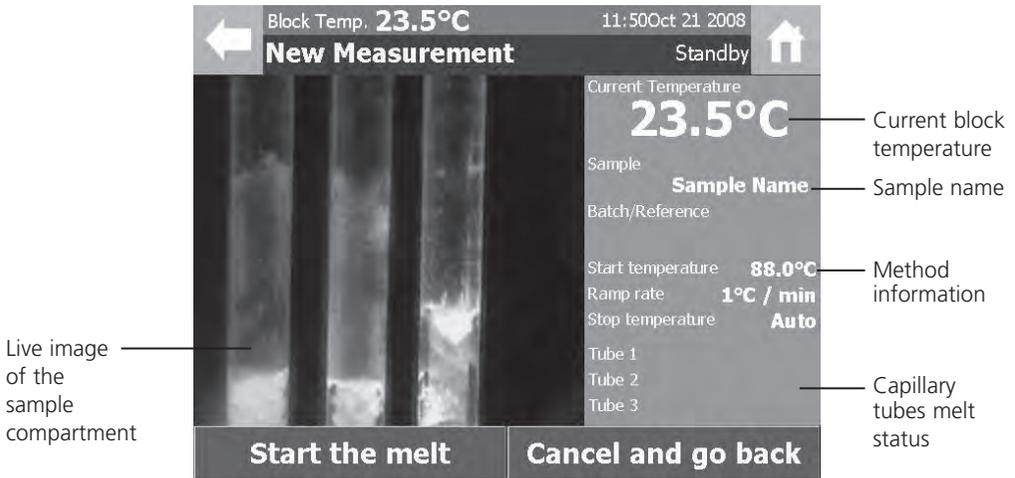


Figure 6: New Measurement Screen


**The Capillary tubes melt status is for Information Only. An accurate analysis of the data is performed after the melt determination has been completed.**

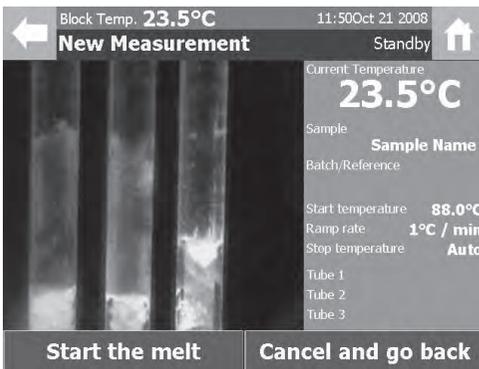


- 1 Place 1-3 prepared melting point capillaries into the SMP40 sample compartments sample block.

**The external surface of the sample capillaries must be wiped clean before being placed into the sample block as chemical residues may build up and affect the performance of the device.**


- 2 Press "Start the melt" to initiate the melting protocol.

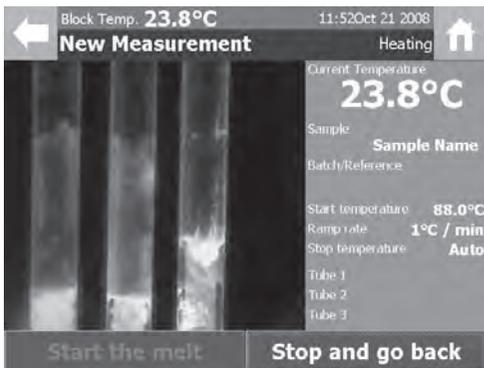

- 3 The instrument status will change to “Heating” and the command toolbar options will change.
- 4 The SMP40 will quickly heat the sample block to the set start temperature.

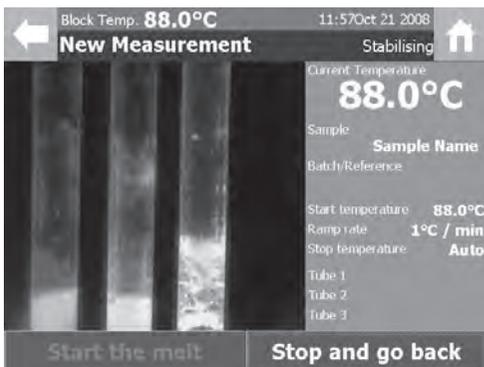


- 5 When the sample block reaches the start temperature the SMP40 status will change to “Stabilising” and the temperature of the sample block will remain constant for 60 seconds.

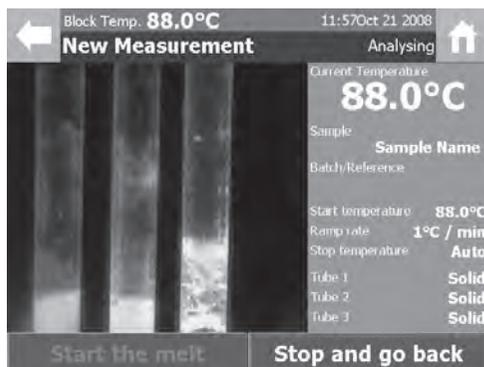

- 6 After the instrument has stabilised at the start temperature the status will change automatically to “Analysing” and the instrument will begin to heat the sample capillaries at the specified ramp rate.
- 7 The Capillary tubes melt status is shown to indicate the melt determinations progress.

**The Capillary tubes melt status is shown for Information Only.**

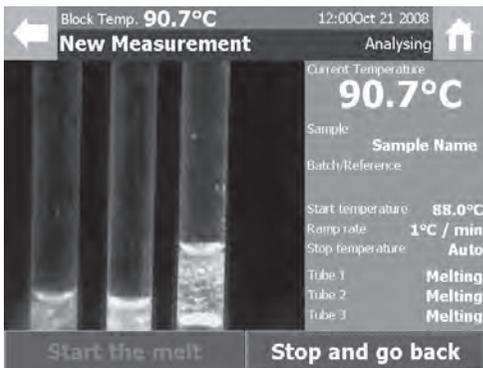

8 As the melt determination progresses the capillary tube melt status changes through:

**Solid:** No changes have been detected in the samples physical form.


**Melting:** The sample is showing the first signs of a change in its physical form.

**Liquid:** The change in the samples physical form is complete.

**Finished:** Once a capillary tube displays “finished” the melt determination is complete.

Once all of the sample capillaries are deemed to have finished, or the instrument reaches the previously specified end temperature, the instrument will complete the measurement and display the samples analysis report.

At any time in the melt determination pressing the “Stop and go back” button will end the melt determination and save any data collected up until that point.

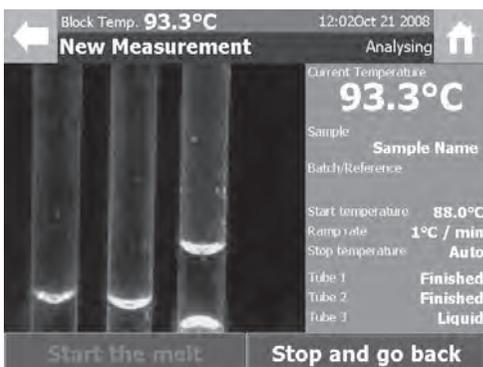

Once the melt determination is complete the analysis report will be displayed. The analysis report displays the following information:

**Statistical Analysis:** The mean and standard deviation are calculated for the clear point values in the melt determination.


**Method Information:** Sample name, Filename, Batch reference, Start and end temperatures, Ramp rate, Time created, Date created, and Calibration factor.

**Individual Capillaries Results:** Intensity graph, melting range and clear point.



## 8. Results

Touching the results section on the main menu screen will open the results menu. Two options are now available:

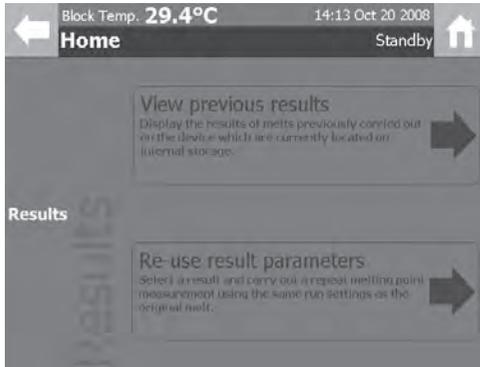

**View previous results:** Displays the result files of melt determinations previously carried out on the device which are currently located on internal storage.

**Re-use result parameters:** A result can be selected and a repeat melt determination carried out using the method settings from that result.

### 8.1 View Previous Results

In the Results menu screen touch the "View previous results" section of the screen. The View Results screen allows the user to perform a number of actions with the result files stored on the instrument. The actions available are displayed in the Results Toolbar.



Figure 7: View Results Screen

The View Results screen allows the user to perform a number of actions with the result files stored on the instrument. The actions available are displayed in the Results Toolbar.

**Sort/Search:** The Sort/Search function is used to display the stored result files in accordance with the rules specified in this option.

**Open:** The Open action is used to display the Report screen for the selected result.



**View Video:** The View Video action is used to display the Video Replay screen for the selected result.

**Rename:** The Rename action is used to change the Sample Name for the selected result.

**Delete:** The Delete action is used to delete the selected result from the instruments internal storage.

### 8.1.1 Sort/Search Function

#### Sort/Search

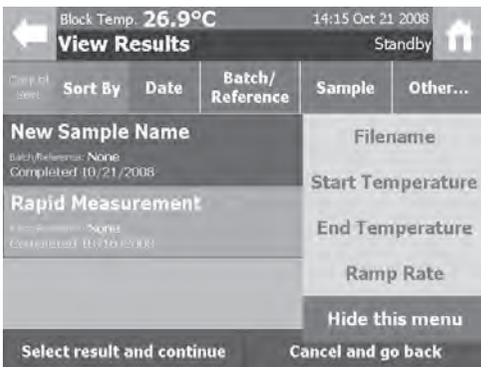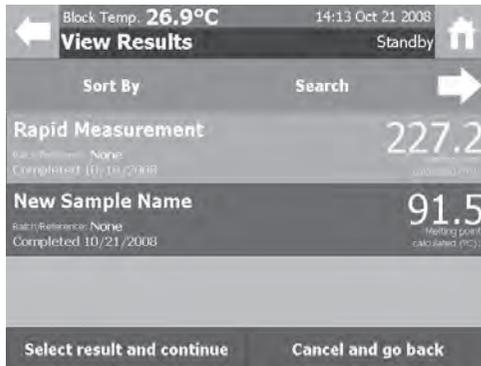


In the menus that display the stored methods and results the user has the option to organise the displayed data using either a sort by or search for function.

#### Sort:

- 1 Pressing the "Sort/Search" button will change the tool bar to allow the user to specify which function is required.
- 2 Pressing the "Sort By" button will display the sort toolbar options.
- 3 The sort toolbar allows a method or parameter to be selected to organise the displayed data.
- 4 Select the parameter to be used to organise the displayed data by pressing the appropriate button.
- 5 Pressing the button twice will reverse the order of the displayed data.
- 6 Highlight the required result file and press the "Select result (or preset) and continue" button.
- 7 The "Other" button on the toolbar can be used to access additional parameters such as Filename, Start Temperature, End Temperature and Ramp Rate with which to sort the displayed files.

#### Search


- 1 Pressing the "Sort/Search" button will change the tool bar to allow the user to specify which function is required.
- 2 Pressing the "Search By" button will display the search options screen.
- 3 Pressing on a data entry field allows the user to define the search criteria for that field.

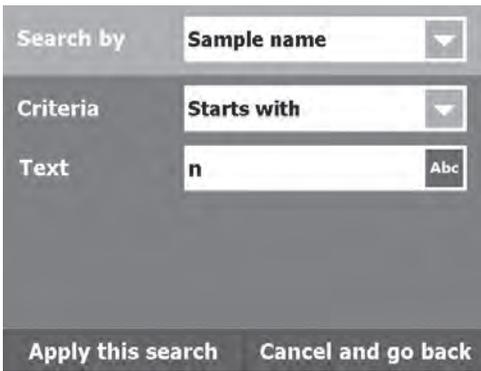

- 4 The required option should be selected from the displayed list or alternatively enter the search criteria using the keypad that is displayed.
- 5 When the search criteria have been finalised, press "Apply this search".



- 6 Only the results that match the search criteria specified will now be displayed.

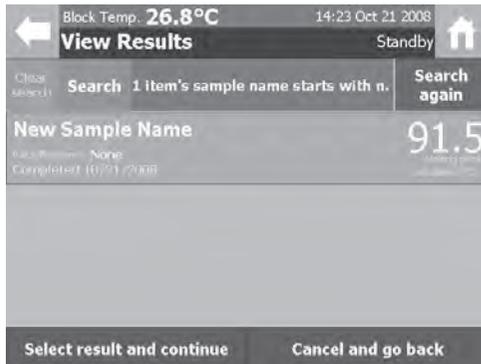

- 7 Pressing the "Sort/Search" and "Search" buttons again will display the search results summary and allow a new search to be started.
- 8 Press the "Search again" button to apply new search criteria.
- 9 Press the "Clear search" button to remove the specified search criteria.

## 8.1.2 Opening Results Files

When a melt determination is complete or a result file is opened, the screen will display the Report Screen.

The report displays the following information:

**The mean clear point:** The average of the sample capillaries clear point values is automatically calculated.

**The standard deviation of the clear points:** The standard deviation of the sample capillaries clear point values is automatically calculated.



**Method information:** The Sample name, Filename, Batch reference (if entered), Analysed temperature range, Ramp rate, Time created, Date created, and Calibration factor are all displayed in the analysis report.

**Intensity graphs for each capillary tube:** The device continuously measures each capillary tubes image intensity value during the melt determination. These graphs show how the intensity value changes throughout the melt determination. Coloured lines indicate the start (green) and end (red) of the melting range.

**Recorded events for each capillary tube:** Automatic and any manually recorded events are displayed for each capillary tube.

**Use the scrollbar to review the data contained in the report:** Use the arrows to scroll up and down the report.

If a video record of the melt determination has been stored it can be reviewed by pressing the "View the video" button on the command toolbar.

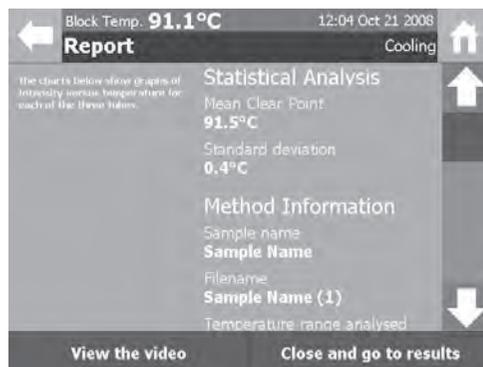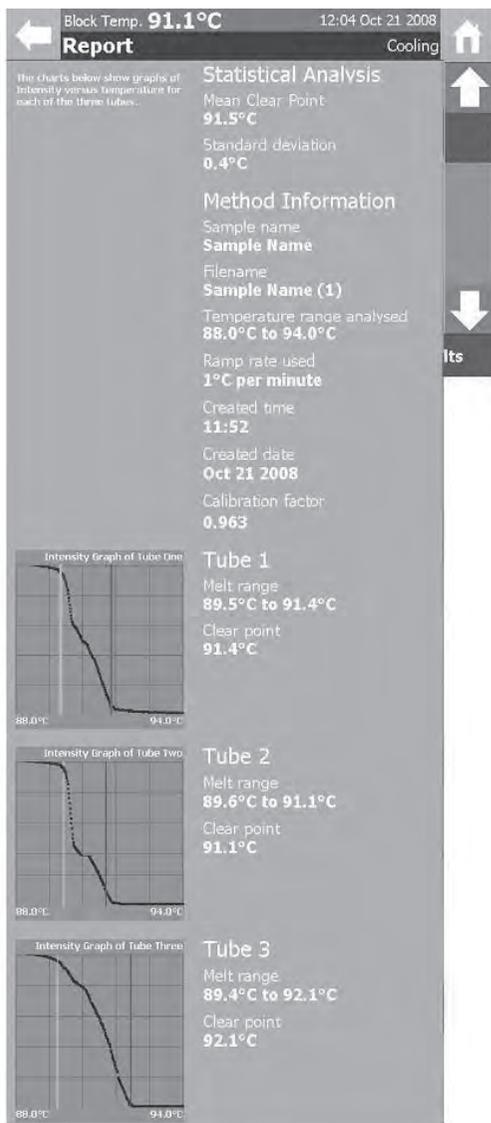

### 8.1.3 Viewing Videos

When a video record is accessed the Video Replay screen is displayed.

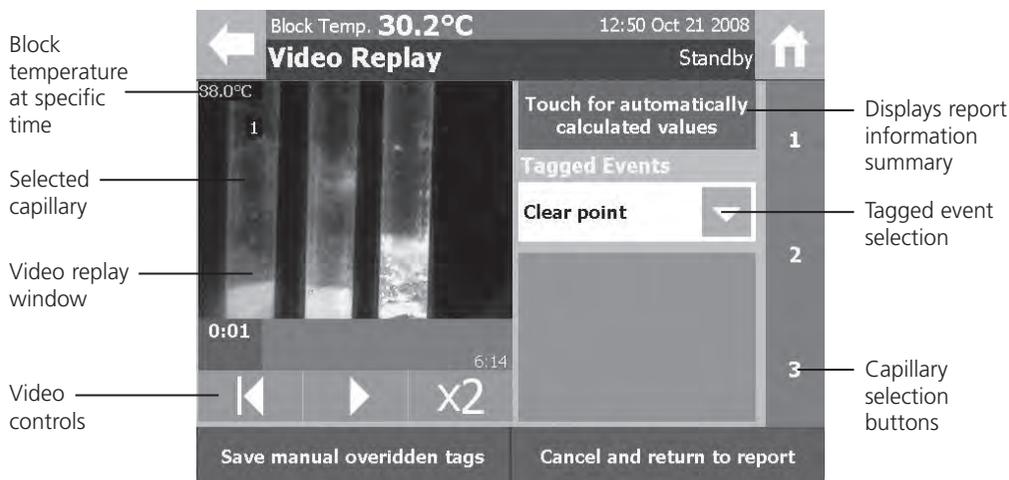


Figure 8: Video Replay Screen

The Video Replay screen is designed to allow the user to review the recorded video of a melt determination and reprocess the results if required.

**Block temperature at specific time:** The temperature of the sample block at the specific timeframe displayed in the video replay window.

**Report information:** Pressing the “Touch for automatically calculated values” button displays the screen below. Each capillary tube has its start temperature, end temperature and clear point displayed. In addition, the mean value of the start and end temperatures is calculated and displayed.


Press the “Hide” button to return to the Video Replay screen.

**Tagged event selection:** During the melt determination additional events may occur that are required to be recorded in the report. Pressing this button accesses the list of available events that can be added to the analysis report.

**Capillary selection:** In order to record a manual event you must first select the number of the capillary tube it applies to by using these buttons.

**Video replay window:** The Video replay window displays the images that were recorded during the substances melt determination. To view the image in full screen mode press the video replay window. Pressing the screen again will return the device to the normal Video Replay screen.

**Video controls:** The Video controls are used to control the playback of the substances melt determination video.

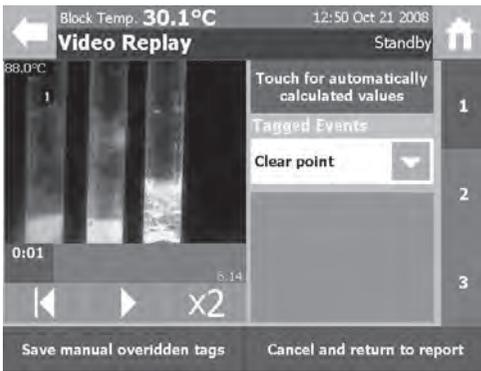

1 To start the video replay press the play button (▶) in the video replay controls. Once the play button has been pressed it will change to a pause symbol (⏸).

2 The video replay scrollbar will move and display the elapsed time in the format mins:seconds.

3 The scrollbar can be used to quickly move to any timeframe within the video file. Touch the scrollbar and whilst still touching the screen, drag the scrollbar to the required timeframe.



4 Pressing the X2 button will double the speed at which the video is replayed.

5 The restart button (◀) can be pressed to return the beginning of the video file.

## Manual Events

Each melt determination may contain events of interest that require highlighting in the report. The SMP40 allows the user to review the melt video and add defined event information to specific timeframes for each individual capillary tube. Both the automatically determined events and any manually added events are shown in the analysis report.

The Tagged Events field can be used to add the following events:

**Clear point:** The sample is a clear liquid. Solid particles are no longer visible.

**Collapse point:** The substance collapses and begins to liquefy.

**Decomposition point:** The separation of a substance into its elements or smaller compounds. Often seen as discolouration or charring of the sample.


**End of melt:** The point at which no further changes in the physical form of the substance are being seen.

**Start of melt:** Droplets of liquid are clearly visible for the first time.


**Meniscus point:** A meniscus becomes clearly visible at the surface of the sample but solid particles remain visible in the liquid.

**Sublimation point:** The substance undergoes a transition from the solid to gas phase with no intermediate liquid stage.

**Other:** Use this tag if an event occurs that is not accurately described by the events listed previously.

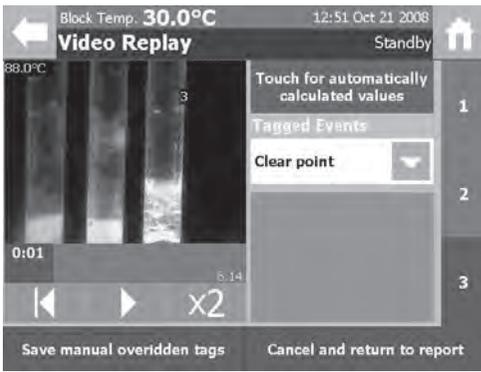


1 Select the capillary tube to which the manual event is to be added by pressing the relevant “Capillary selection” button.

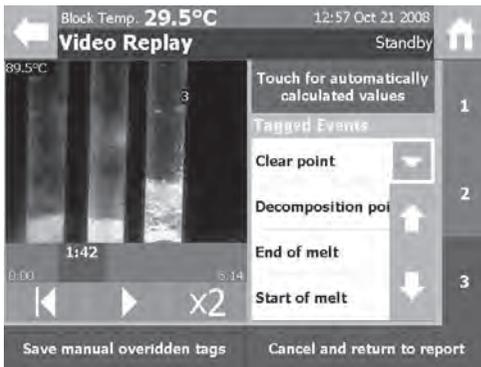

2 Select the timeframe in the video file, where the manual event is to be added, using the video replay scrollbar and the video controls.

3 A manually determined event is added to the timeframe by pressing the “Tagged Events” field and selecting the required event from the drop down list.


**Manual events can only be used once in each capillaries report. e.g. A capillary cannot have more than one Meniscus Point.**

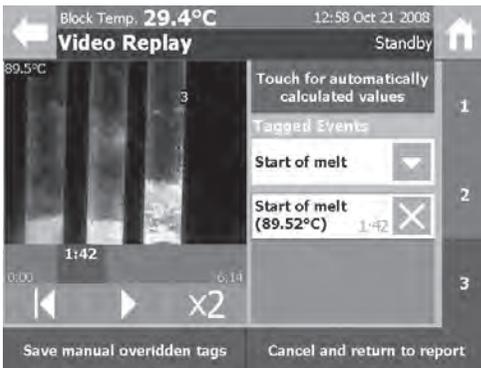

4 Additional manual events can be added by repeating the process described in steps 2 and 3.

5 If a manual event needs to be deleted, pressing the X next to the manual event will delete that event.

6 After the manual events have been added for each capillary tube select “Save manual overridden tags”. The screen will then go back to the previously displayed screen.

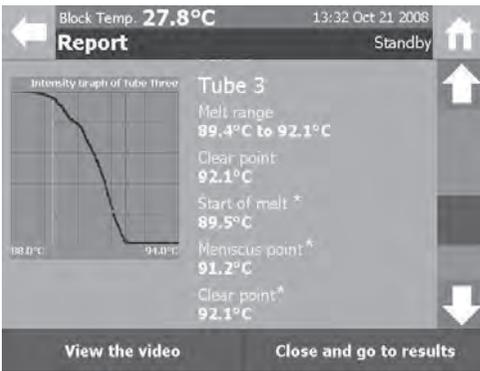


The melt determination report is updated with any manual events that are added and saved. An asterisk next to the event name is used to denote that it has been manually added by the user.

**CAUTION: IF A MANUAL CLEAR POINT EVENT IS ADDED BY THE USER, THE TEMPERATURE VALUE IN THE MANUAL EVENT WILL BE USED TO CALCULATE THE SAMPLES REPORTED MELTING POINT.**

### 8.1.4 Renaming Result Files



- 1 When the “Rename” button is pressed for a result a rename dialogue box is opened.
- 2 Press the alphanumeric entry field (Abc) in the dialogue box to enter a new Sample Name for the selected result.

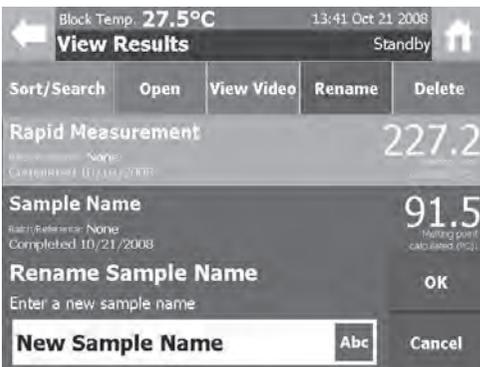

- 3 The new Sample Name is then displayed in the alphanumeric entry field. Select “OK” to confirm the change to the results Sample Name. Select “Cancel” to retain the current Sample Name.

## 8.1.5 Deleting Result Files




- 1 To delete individual results from the instruments memory highlight the result to be deleted and press the "Delete" button on the Result Toolbar.
- 2 A confirm delete dialogue box will appear asking the user to confirm the action. Select "Yes" to confirm or "No" to cancel.

## 8.2 Re-use Result Parameters



In the Results menu screen touch the "Re-use result parameters" section of the screen.

- 1 In the Repeat Measurement screen highlight the result file to be repeated.
- 2 Press "Select result and continue".
- 3 The method parameters used previously will be loaded into the Create New Method screen.

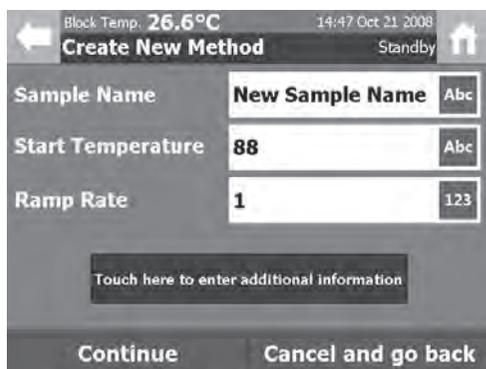

- 4 Method parameters and information can be 4 adjusted and a new measurement initiated as described on page 14.

# 9 File Management

Touching the File Management section on the main menu screen will open the File Management menu. Two options are now available:



**Manage files:** Result files can be copied, moved or deleted from the devices internal storage.

**View storage information:** Displays status information on the internal storage or an inserted USB flash drive.

## 9.1 Manage Files

In the File Management menu screen touch the Manage files section of the screen.



Figure 9:  
Manage Files  
Screen

The View Results screen allows the user to perform a number of actions with the result files stored on the instrument. The actions available are displayed in the Result Toolbar:

**Sort/Search:** See page 18

**Select All/Clear Selection:** The Select All/Clear Selection action is used to select all of the result files on the instrument or it can be used to deselect the result files currently highlighted.

**Copy:** The Copy action is used to copy the selected result files to the inserted USB flash drive.

**Move:** The Move action is used to move the selected result files to the inserted USB flash drive.

**Delete:** The Delete action is used to delete the selected result files from the instruments memory.

### 9.1.1 Select All/Clear Selection



- 1 Pressing the “Select All” button in the Manage Files toolbar will highlight all of the result files.
- 2 If any of the result files in the Manage Files screen are selected, the “Select All” button will change to a “Clear Selection” button. Pressing the “Clear Selection” button will deselect all the highlighted result files.

### 9.1.2 Copying Files



- 1 Result files can be copied to an inserted USB flash drive by highlighting the files to be copied and pressing the “Copy” button in the Manage Files toolbar.
- 2 A window is displayed to show the progress of the copy action.


Copying a typical 5MB result and video file will take approximately 10 seconds.

### 9.1.3 Moving Files




- 1 Result files can be moved to an inserted USB flash drive by highlighting the files to be moved and pressing the “Move” button in the Manage Files toolbar.
- 2 A window is displayed to show the progress of the move action.

Moving a typical 5MB result and video file will take approximately 10 seconds.

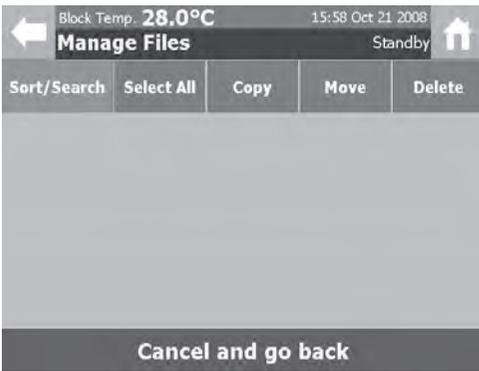

- Once the move action has been completed the files will no longer be available on the instrument so ensure that no further reprocessing of the results is required before using the move action as it is not possible to move the file back, from the USB flash drive to the instrument, once the action is complete.

### 9.1.4 Deleting Files

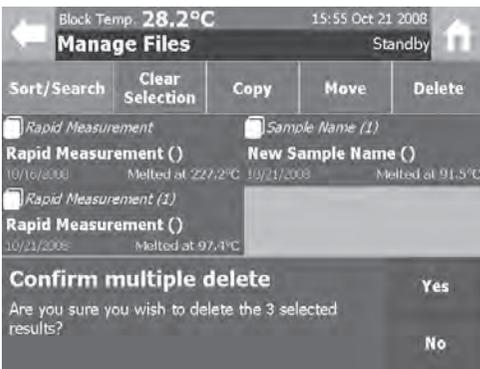

- To delete results from the instruments memory highlight the results to be deleted and press the "Delete" button on the Manage Files Toolbar.
- A confirm delete dialogue box will appear asking the user to confirm the action. Select "Yes" to confirm or "No" to cancel.

## 9.2 View Storage Information

In the File Management menu screen touch the View storage information section of the screen.



- The Storage Details screen displays information on the status of the internal memory.

Information displayed includes:

Total storage capacity.

Available storage capacity.

Details on the types of files stored on the instrument.

- If a USB flash drive is inserted, a summary of the flash drives storage information can be displayed by pressing the Change to inserted USB flash drive section of the screen.

# 10 Settings and Calibration

Touching the Settings and Calibration section on the main menu screen will open the Settings and Calibration menu. There are three options available:



**Change user settings:** Settings that relate to how the device operates and displays information can be viewed and adjusted in this menu.

**Change maintenance settings:** The devices software can be upgraded and the touch screen can be recalibrated in this menu.

**Manage device calibration:** This menu can be used to recalibrate the device and view stored information on the devices calibration history.

## 10.1 User Settings

The following user settings can be accessed and adjusted by pressing the Change user settings section of the Settings and Calibration screen.

**Date format:** The devices displayed date can be set to UK or US format.

**Time format:** The devices displayed time can be set to 12 or 24 hour format.

 
**Temperature unit:** The devices displayed temperature unit can be set to centigrade (°C), fahrenheit (°F) or Kelvin (K).

**Camera gain:** The devices camera gain can be adjusted to make the image of the sample capillaries darker or brighter. Three settings of Low, Normal and High are available. The “Low” settings will reduce the brightness of the image compared to the “Normal” setting and the “High” setting will increase the brightness of the image compared to the “Normal” setting. The “Normal” setting should be suitable for most melt determinations.

**Calibration frequency:** The frequency at which the device is recommended to be recalibrated can be specified using this option. The available options are Never, Weekly, Monthly, Bi-annually and Yearly.

When a melt determination is initiated, the dialogue box below will be displayed if the time period specified in this setting has elapsed since the previous calibration. Pressing “OK” will allow the user to continue with the melt determination.

The dialogue box will be displayed each time a melt determination is initiated, until the device is recalibrated or the calibration frequency setting is changed.



**Set time:** The devices displayed time can be set using the time keypad interface.

**Set date:** The devices displayed date can be set using the date keypad interface.

**Save melt video:** If the video files of the devices melt determinations do not need to be stored, remove the check mark in this Toggle Selection field.


**Use sounds for events:** If sounds are not required for events that occur on the device, remove the check mark in this Toggle Selection field.

**Use sounds for screen touches:** If a sound is not required to confirm each time the touch screen is pressed, remove the check mark in this Toggle Selection field.




In the Settings and Calibration menu screen touch the Change user settings section of the screen.

- 1 The Change User Settings screen displays the current status of all the user adjustable instrument settings.
- 2 To adjust any of the displayed settings, touch the individual settings control field and a new setting can be entered by following the control instructions on pages 11 and 12.
- 3 When the required adjustments have been made press "Save these settings" on the command toolbar to apply them.

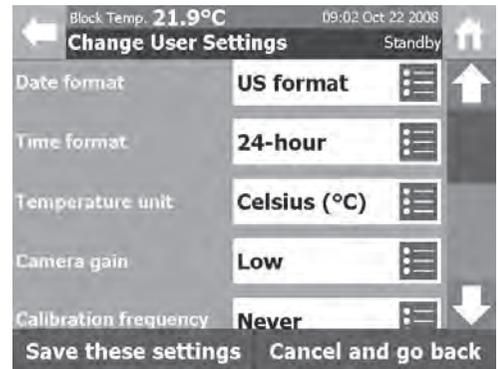

## 10.2 Maintenance Settings

In the Settings and Calibration menu screen touch the Change maintenance settings section of the screen. The Maintenance screen allows the user to upgrade the version of software on the instrument and to recalibrate the touch screen.

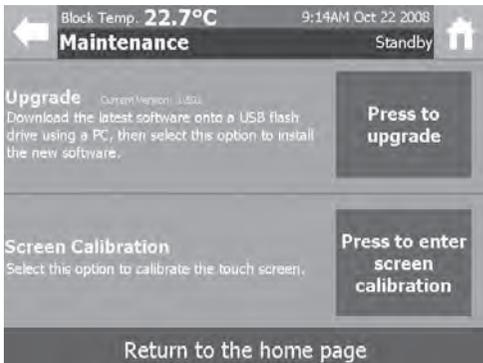

- 1 To upgrade the instruments software, firstly download the new software version onto a USB flash drive. Insert the USB flash drive into one of the SMP40's USB ports and touch the "Press to upgrade" button. The new software version will be automatically installed onto the instrument.

**Do not switch off the device or attempt to remove the USB flash drive during this process.**

- 2 To recalibrate the touch screen touch the "Press to enter screen calibration" button and follow the on-screen instructions.

## 10.3 Instrument Calibration

To ensure that the instrument is operating correctly, periodic checks on the accuracy of the instruments temperature readings are commonly performed. If the accuracy of the instrument is found to deviate from the specification or if it is a requirement of your local quality policy, the following procedure can be used to recalibrate the displayed temperature on the instrument.

It is recommended that the recalibration procedure is performed using suitable certified reference materials (CRM's), as this will ensure the highest levels of confidence is maintained in the results generated with the instrument. The World Health Organisation (WHO) gives a list of suitable CRM's which includes the following materials:

### Material Nominal Melting Point

Azobenzene	69 °C
Vanillin	83 °C
Benzil	96 °C
Acetanilide	116 °C
Phenacetin	136 °C
Benzanilide	165 °C
Sulfanilamide	166 °C
Sulfapyridine	193 °C
Dicyanodiamide	210 °C
Saccharin	229 °C
Caffeine	237 °C
Phenolphthalein	263 °C

For information on where to purchase suitable certified reference materials please contact us:

[stuarthelp@bibby-scientific.com](mailto:stuarthelp@bibby-scientific.com)

Tel: +44 (0)1785 810433

In the Settings and Calibration menu screen touch the Manage device calibration section of the screen.

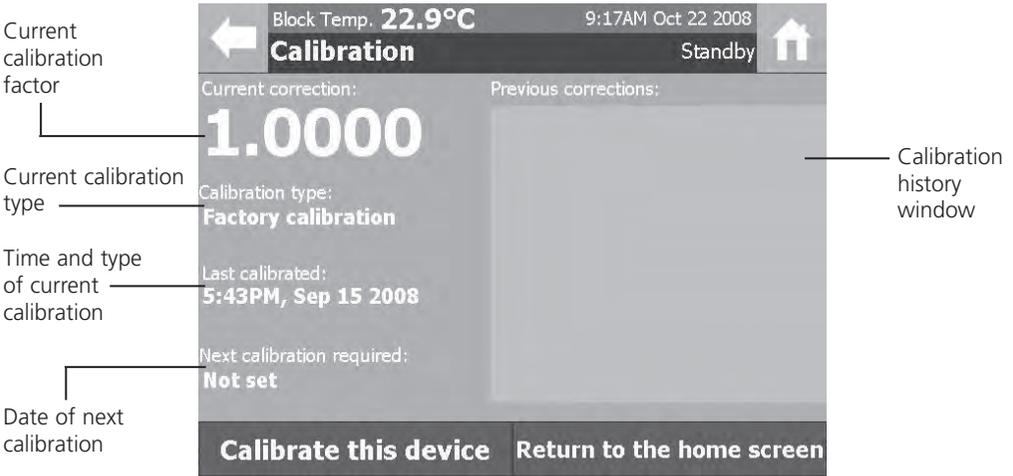


Figure 10: Calibration Screen

The Calibration screen shows the following information:

**Current calibration factor:** The current calibration factor of the device

**Calibration type of the current calibration:** Three types of calibration are possible: Single, Dual and Factory.

**Time and date of current calibration:** Displays the time and date of the current calibration.

**Date when next calibration is due:** Displays the date when the next calibration is due to be performed as specified in the user settings.

**Previous calibration history:** Displays a summary of the devices historical calibrations including the time, date, type and calibration factor.

### 10.3.1 Current Calibration Factor

The current calibration factor shows the factor which is used to calculate the displayed block temperature on the device.

$$\text{Displayed Block Temperature} = \text{Instruments Sensor Temperature} \times \text{Calibration Factor}$$

To calculate a new calibration factor the instrument uses the following equation.

New Calibration Factor Calculation:


$$\text{Calibration Factor} = \frac{\text{Expected Melting Point}}{\left( \frac{\text{Actual Melting Point}}{\text{Results Calibration Factor}} \right)}$$

Please see the following calibration procedure for more details on calibrating the instrument.

### 10.3.2 Calibration Procedure


The SMP40 allows the user to perform either a single or dual point calibration by using the following procedure.

- 1 Using a suitable certified reference material, perform a melt determination as described in section 7.
- 2 If a dual point calibration is required, perform a second melt determination on a certified reference material with a different melting point to that used in step 1.
- 3 If manual events need to be added to a result file, they should be added using the steps described on page 22 before starting the recalibration procedure below.
- 4 In the Settings and Calibration screen select the Manage device calibration section of the screen.
- 5 In the Calibration screen press the "Calibrate this device" button on the Command toolbar.
- 6 The Set Calibrated Values screen is used to select the result files that will be used to calibrate the instrument.
- 7 Select the first result to be used by pressing the "Choose Result" field next to Value 1.

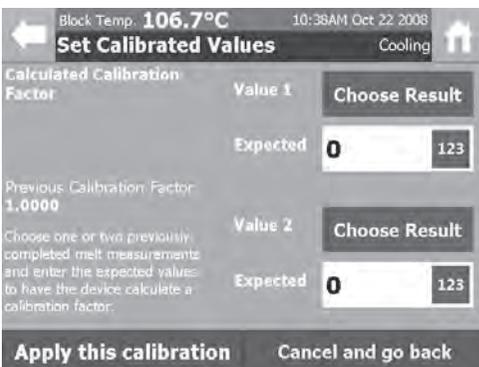




- 8 In the Select Calibration screen highlight the result file to be used for the first calibration point.
- 9 Press the "Select result and continue" button on the Command toolbar.

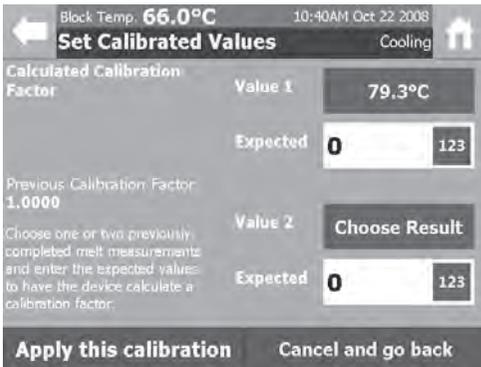

- 10 The results melting point (mean clear point) is now displayed in the field. If the selected result needs to be changed press this field again and go to step 8.
- 11 If a dual point calibration is required press the "Choose Result" field next to Value 2 and repeat the selection process described in steps 8 to 10.

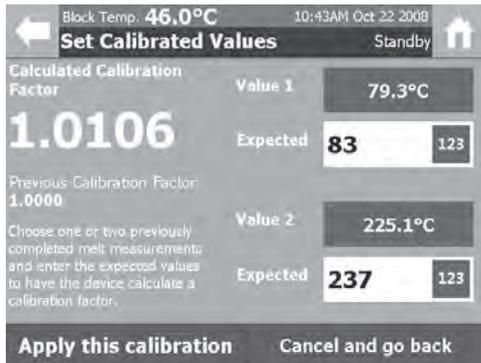

- 12 Enter the certified melting point (clear point) of the reference material/s in the respective "Expected" numerical entry field/s.
- 13 The new calibration factor is calculated and displayed on the screen.
- 14 To accept the new calibration factor press the "Apply this calibration" button on the Command toolbar.



- 15 The calibration screen is now updated to show the new calibration details. The Calibration history window will now update to display details of the previous calibration.



- 16 If a calibration record needs to be deleted, pressing the X next to the calibration record will display a confirm deletion dialogue box. Press "YES" to confirm or "NO" to cancel.

# 11. Maintenance & Servicing

**WARNING: Ensure the unit is disconnected from the mains electricity supply before attempting maintenance or servicing.**

This equipment does not require routine servicing. The only maintenance required is to clean internal and external surfaces using a damp cloth and mild detergent solution. Do not use harsh or abrasive cleaning agents.

## 11.1 Repairs and Support

Any repairs or replacement of parts MUST be undertaken by suitably qualified personnel. Only spare parts supplied or specified by Stuart or its agents should be used. Fitting of non-approved parts may affect the performance and safety features designed into the instrument. For a comprehensive list of parts required by service engineers conducting internal repairs please contact the service department quoting the model and serial number:

Email: [service@bibby-scientific.com](mailto:service@bibby-scientific.com)

Tel. +44 (0)1785 810475

Fax: +44 (0)1785 810471

For any other technical enquiries please contact the Technical Support Department at;

Email: [stuarthelp@bibby-scientific.com](mailto:stuarthelp@bibby-scientific.com)

Tel: +44 (0)1785 810433

## 11.2 Cleaning the Sample Block

Occasionally it may be necessary to gain access to the sample block to allow broken capillary tubes or other debris to be removed.

**Please ensure that the sample block is cooled to room temperature and the instruments electrical power supply is switched off or disconnected before commencing the following procedure.**

- 1 Lift the cover of the capillary storage compartment and remove the two screws on either side of the recess.

- 2 Remove the plastic cover from the instruments melt module.
- 3 Remove the ceramic sample block cover and the metal plate covering the sample block chamber by lifting them clear of the instrument.
- 4 Unscrew the two thumbscrews on either side of the sample block and lift it out of the instrument. Take care not to damage the wiring that is connected to the sample block during its removal.
- 5 Using a pair of long nosed pliers or small tweezers remove the circlip from the sample blocks glass window.
- 6 The glass window is removed by gently agitating the sample block until the window is dislodged from the sample block.
- 7 Debris can now be removed from the sample block. Please ensure the window is clean before reassembly as any grease or dirt on the glass could be detrimental to the instruments performance.
- 8 Reassembly is the reverse of the above.

## 11.3 Accessories

The following accessories are available from your local distributor.

Description	Catalogue No.
Capillaries, open at both ends (pack of 100)	SMP1/4
Capillaries, open at one end (pack of 100)	SMP10/1
Capillaries, closed at both ends (pack of 100)	SMP2/1

## 12. Warranty

Stuart warrants this instrument (**excluding the VGA touch screen**) to be free from defects in material and workmanship when used under normal laboratory conditions, for a period of 3 years (**the VGA touch screen warranty period is 12 months**). In the event of a justified claim Bibby Scientific Ltd will replace any defective component or replace the unit free of charge. This warranty does NOT apply if damage is caused by fire, accident, misuse, neglect, incorrect adjustment or repair, damage caused by incorrect installation, adaptation, modification, fitting of non-approved parts or repair by unauthorised personnel.

Bibby Scientific Ltd.  
Stone  
Staffordshire, ST15 0SA  
United Kingdom  
Tel: +44 (0) 1785 812121

Fax: +44 (0) 1785 813748  
E-mail: [equipment@bibby-scientific.com](mailto:equipment@bibby-scientific.com)  
Website: [www.bibby-scientific.com](http://www.bibby-scientific.com)

## 13. Specification

### Overall Dimensions:

Height: 180mm

Depth: 210mm

Width: 340mm

Weight: 3.9kg

### Technical Specifications:

Temperature range	Ambient to 400°C
Temperature resolution	0.1°C
Ramp rate	0.1°C to 10°C/minute
Cooling time	350°C to 50°C in 10 minutes
Number of samples	Up to three
Display	5.7" Colour VGA touch screen
Sensor	PT1000
Memory storage	1GB
Electrical supply	115V / 230V, 50-60Hz

## Notes

## Notes





This product meets the applicable EC harmonized standards for radio frequency interference and may be expected not to interfere with, or be affected by, other equipment with similar qualifications. We cannot be sure that other equipment used in its vicinity will meet these standards

and so we cannot guarantee that interference will not occur in practice. Where there is a possibility that injury, damage or loss might occur if equipment malfunctions due to radio frequency interference, or for general advice before use, contact the Technical Department of Bibby Scientific Ltd.

## Declaration of Conformity

### Automatic Melting Point Apparatus, Model SMP40

These products comply with the requirements of the EU Directives listed below:

- 2004/108/EC      EMC Directive.  
2006/95/EC      Low voltage Directive (LVD)

Compliance with the requirements of these Directives is claimed by meeting the following standards:

- EN 61326: 1997 + Amendments (Electrical Equipment for Measurement, Control and Laboratory use)  
EN 61010-1: 2001 (Safety Requirements for Electrical Equipment for Measurement, Control and Laboratory use)  
EN 61010-2-010: 2003 (Particular Requirements for Laboratory Equipment for heating of materials)

CE mark affixed '08.

Signed:  (Mr D. E. Hicks CEng MIEE)

Date: 10<sup>th</sup> December 2008

Authority: Technical/Development Manager  
Bibby Scientific Ltd

 Bibby Scientific

Bibby Scientific Ltd - Stone - Staffs - ST15 0SA - UK  
Tel: +44 (0) 1785 812121 - Fax +44 (0) 1785 813748  
DofC\_89\_Rev01

# INSPECTION REPORT

**MODEL** SMP40

## ELECTRICAL SAFETY

1. Earth continuity
2. Insulation
3. Flash test




## FUNCTIONAL

1. Indicators
2. Temperature control
3. Visual acceptance



**QUALITY CONTROL INSPECTOR**

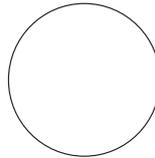

### **Bibby Scientific France SAS**

ZI du Rocher Vert - BP 79  
77793 Nemours Cedex  
France  
Tel: +33 1 64 45 13 13  
Fax: +33 1 64 45 13 00  
e-mail: [bsf@bibby-scientific.fr](mailto:bsf@bibby-scientific.fr)  
[www.bibby-scientific.com](http://www.bibby-scientific.com)

### **Bibby Scientific Italia Srl**

Via Alcide de Gasperi 56  
20077 Riozzo di Cerro al Lambro  
Milano Italia  
Tel: +39 (0)2 98230679  
Fax: +39 (0)2 98230211  
e-mail: [marketing@bibby-scientific.it](mailto:marketing@bibby-scientific.it)  
[www.bibby-scientific.it](http://www.bibby-scientific.it)

### **Bibby Scientific Ltd**

Beacon Road Stone  
Staffordshire ST15 0SA  
United Kingdom  
Tel: +44 (0)1785 812121  
Fax: +44 (0)1785 813748  
e-mail: [info@bibby-scientific.com](mailto:info@bibby-scientific.com)  
[www.bibby-scientific.com](http://www.bibby-scientific.com)

### **Bibby Scientific US Ltd**

3 Terri Lane Suite 10  
Burlington NJ 08016  
USA  
Tel: 800-225-9243  
Fax: 609-589-2571  
[www.bibby-scientific.com](http://www.bibby-scientific.com)

### **Bibby Scientific (Asia) Ltd**

Room 607 Yen Sheng Centre  
64 Hoi Yuen Road Kwun Tong  
Kowloon Hong Kong  
Tel: +852 3583 1581  
Fax: +852 3583 1580  
e-mail [bibby@bibby-scientificasia.com](mailto:bibby@bibby-scientificasia.com)  
[www.bibby-scientificasia.com](http://www.bibby-scientificasia.com)

## WARRANTY/DISCLAIMER

OMEGA ENGINEERING, INC. warrants this unit to be free of defects in materials and workmanship for a period of **37 months** from date of purchase. OMEGA's WARRANTY adds an additional one (1) month grace period to the normal **three (3) year product warranty** to cover handling and shipping time. This ensures that OMEGA's customers receive maximum coverage on each product.

If the unit malfunctions, it must be returned to the factory for evaluation. OMEGA's Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective, it will be repaired or replaced at no charge. OMEGA's WARRANTY does not apply to defects resulting from any action of the purchaser, including but not limited to mishandling, improper interfacing, operation outside of design limits, improper repair, or unauthorized modification. This WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of having been damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA's control. Components in which wear is not warranted, include but are not limited to contact points, fuses, and triacs.

**OMEGA is pleased to offer suggestions on the use of its various products. However, OMEGA neither assumes responsibility for any omissions or errors nor assumes liability for any damages that result from the use of its products in accordance with information provided by OMEGA, either verbal or written. OMEGA warrants only that the parts manufactured by the company will be as specified and free of defects. OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESSED OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. LIMITATION OF LIABILITY: The remedies of purchaser set forth herein are exclusive, and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.**

CONDITIONS: Equipment sold by OMEGA is not intended to be used, nor shall it be used: (1) as a "Basic Component" under 10 CFR 21 (NRC), used in or with any nuclear installation or activity; or (2) in medical applications or used on humans. Should any Product(s) be used in or with any nuclear installation or activity, medical application, used on humans, or misused in any way, OMEGA assumes no responsibility as set forth in our basic WARRANTY/DISCLAIMER language, and, additionally, purchaser will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the Product(s) in such a manner.

## RETURN REQUESTS/INQUIRIES

Direct all warranty and repair requests/inquiries to the OMEGA Customer Service Department. BEFORE RETURNING ANY PRODUCT(S) TO OMEGA, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OMEGA'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS). The assigned AR number should then be marked on the outside of the return package and on any correspondence.

The purchaser is responsible for shipping charges, freight, insurance and proper packaging to prevent breakage in transit.

FOR **WARRANTY** RETURNS, please have the following information available BEFORE contacting OMEGA:

1. Purchase Order number under which the product was PURCHASED,
2. Model and serial number of the product under warranty, and
3. Repair instructions and/or specific problems relative to the product.

FOR **NON-WARRANTY** REPAIRS, consult OMEGA for current repair charges. Have the following information available BEFORE contacting OMEGA:

1. Purchase Order number to cover the COST of the repair,
2. Model and serial number of the product, and
3. Repair instructions and/or specific problems relative to the product.

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering.

OMEGA is a registered trademark of OMEGA ENGINEERING, INC.

© Copyright 2012 OMEGA ENGINEERING, INC. All rights reserved. This document may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without the prior written consent of OMEGA ENGINEERING, INC.

# Where Do I Find Everything I Need for Process Measurement and Control? **OMEGA...Of Course!** *Shop online at [omega.com](http://omega.com)<sup>SM</sup>*

## **TEMPERATURE**

- ☑ Thermocouple, RTD & Thermistor Probes, Connectors, Panels & Assemblies
- ☑ Wire: Thermocouple, RTD & Thermistor
- ☑ Calibrators & Ice Point References
- ☑ Recorders, Controllers & Process Monitors
- ☑ Infrared Pyrometers

## **PRESSURE, STRAIN AND FORCE**

- ☑ Transducers & Strain Gages
- ☑ Load Cells & Pressure Gages
- ☑ Displacement Transducers
- ☑ Instrumentation & Accessories

## **FLOW/LEVEL**

- ☑ Rotameters, Gas Mass Flowmeters & Flow Computers
- ☑ Air Velocity Indicators
- ☑ Turbine/Paddlewheel Systems
- ☑ Totalizers & Batch Controllers

## **pH/CONDUCTIVITY**

- ☑ pH Electrodes, Testers & Accessories
- ☑ Benchtop/Laboratory Meters
- ☑ Controllers, Calibrators, Simulators & Pumps
- ☑ Industrial pH & Conductivity Equipment

## **DATA ACQUISITION**

- ☑ Data Acquisition & Engineering Software
- ☑ Communications-Based Acquisition Systems
- ☑ Plug-in Cards for Apple, IBM & Compatibles
- ☑ Data Logging Systems
- ☑ Recorders, Printers & Plotters

## **HEATERS**

- ☑ Heating Cable
- ☑ Cartridge & Strip Heaters
- ☑ Immersion & Band Heaters
- ☑ Flexible Heaters
- ☑ Laboratory Heaters

## **ENVIRONMENTAL MONITORING AND CONTROL**

- ☑ Metering & Control Instrumentation
- ☑ Refractometers
- ☑ Pumps & Tubing
- ☑ Air, Soil & Water Monitors
- ☑ Industrial Water & Wastewater Treatment
- ☑ pH, Conductivity & Dissolved Oxygen Instruments