



OM-22,OM-23,OM-24

Multi-Use PDF Temperature and Humidity Data Loggers

INSTRUCTION SHEET

M5618/1016

Shop online at omega.com e-mail: info@omega.com
For latest product manuals: www.omegamanual.info

Made in China

CE

Introduction

Congratulations on your purchase of this multiple function PDF datalogger. This datalogger is designed for monitoring temperature or temperature with humidity subject to quality control requirement. Temperature and humidity measurements are saved throughout the entire duration of the measurement period. This datalogger is equipped with a user defined programming function. The measurement report output is implemented using a PDF file and an Excel file, no unique software, and no USB driver are required. Read through the instruction manual before using this logger. The logger is calibrated before shipment.

Product Description



- 1.USB2.0 plug & play connector. USB driver is not required.
- 2.LED indicator:
Low/High: Red LED blinks every 10 seconds when the measuring set limit value is exceeded during record.
OK:When the logging function is started, the green LED blinks once every 10 seconds when green LED blinks once every 10 seconds when there is no alarm occurs.
- 3.NTC thermistor for temperature measuring and capacitive humidity sensor for humidity measuring.
- 4.External probe socket in models with external probe port
- 5.LCD (Liquid Crystal Display).



- a. Measured temperature or humidity. LCD updates and interexchange every 5 seconds.
- b. REC flashes every second when logger is in logging mode. While logger is programmed with start delay, REC displays but doesn't flash during the standby status.

- c. T1 is air temperature, T2 is external probe temperature
- d. H or L displays when measuring set limit value is exceed.
- e. MX or MI display when checking MAX or MIN value from logged data.
- f. Low battery icon flashes on display every second when battery level is too low to accurately measure and log data.
- 6.Battery cover, operated by 2 pcs CR2032 batteries. Use coin and follow up the direction indicator to open and close the cover. While installing the batteries, the anode side faces up.

- 7.START/STOP (ON/OFF) key:
After installing the batteries, press key to power on the logger. LCD displays for 2 seconds. Press again to turn off.
After the logger is programmed, press the Start/Stop button for 5 seconds to start logging. To stop logging, press the Start/Stop button again, for 5 seconds. In the logging mode, short press key won't power off the logger.
- 8.MARK key:
To mark an event manually during the measurement period, press the MARK button for 2 seconds until the measured data flash three times. This MARK function is usually used when there is a transition, from one location to another. At most 8 marks will be identified in the PDF report.

- Short press MARK button any time can also display the leftover battery life time as a quick reference. However, precise battery life time is still decided by operation condition & battery brand.
- 9.MAX/MIN key:
Press key to check the MAX or MIN data of all logged data.
- 10.Waterproof cover and stand:
To provide USB plug waterproof feature, put on this cover and slightly rotate it to make it tight. To make logger stand on desktop, rotate this cover to suitable supporting angle.

- 11.Hanger

- Operation
NOTE:
1. Adobe Reader software is required.
2. Program the logger and generate the PDF and Excel report at room temperature.
For example: if the logger is removed from a freezer, it should be allowed to return to the ambient room temperature before generating the PDF report temperature.
- 3. The executable file for programming the logger is named: PDF Logger Configuration Tool

Step1 Configuring the data logger

- It is possible to make configuration changes at anytime before the logging function is started. Once the logger is started, configuration changes cannot be made unless stopping the logging first. If the logger is locked with a Password, the Password is required to make configuration changes.
- Press ON/OFF to power on the logger
- Connect the data logger to a PC via the USB port. The green LED is ON while building the connection with computer.
- Windows file display window will appear.
- If the correct file folder is not open, click on Folder to view files.
- Open the file " PDF Logger Configuration Tool. exe".
- The default language is English. The user may change it to one of several alternate languages. There are English, German, French, Italian, Spanish and Portuguese.
- To review the instruction manual, you may click "Manual" to open the manual PDF file.
- The user can check the calibration report for the logger by selecting the PDF file named "Calibration Certificate".
- User programmable parameters are as follows:
★Sampling rate
Select the sampling interval you need from 30 seconds to 2 hours.

- ★Start delay
Select the start delay from 0 min to 24 hours.
For example: If the delay is 5 minutes, and the sampling rate is 10 minutes, the real time to log the first temperature measurement is 5 minutes after the START button is pressed. All measurements after the first measurement will be at a 10 minute (or selected) interval.
- ★Temperature Unit of Measurement (UoM)
Select the temperature UoM that will be displayed on the PDF report. The selections are Celsius, or Fahrenheit. Celsius is the default.
- ★Password
The Password function is default OFF. The user may enable it to prevent unauthorized reprogramming prior to pressing the START button. A Password may have up to 16 alpha or numeric characters.
- ★Company Name
A user defined name, or descriptor, can be input under Company Name. It will be displayed on the PDF report as the Title, with a maximum of 20 characters.
- ★Alarm types
Regardless of the Alarm Type, if the red LED is triggered, it won't stop even the reading return to normal range or logging is stopped. The way to stop red alarm LED is to plug logger into computer to generate report or power off the logger.
Single: an alarm is triggered immediately when the measured value exceeds the alarm threshold.
Cumulative: an alarm is not triggered when the measured value exceeds the alarm threshold, but only once the overall average value during alarm delay duration exceeds the alarm threshold.
Disable: No alarm function during the logging process
- ★Alarm delay
The preset alarm delay interval for a single alarm type is always ZERO.
The adjustable alarm delay interval for a cumulative alarm type can be 5 minutes to 2 hours.

- ★Alarm Limits
Select the alarm threshold values. For example: if 2 - 8 deg C is selected, it means that an alarm condition will occur below 2 deg C, or above 8 deg C. The programmable alarm limit of each parameter is limited to one decimal. To summarize, to activate a alarm when 30 min average value of hazardous alarm delay period is higher than 8°C, please program the alarm delay as 30 mins, alarm type as cumulative and range as 2~8°C
- ★Time zone
Before programming the logger the user must assure that the PC is set for the correct time zone. The logger will auto synchronize to the time zone of the PC, when Save is pressed. Time zone changes over the transit distance are not adjusted in the logged data. The default value of above parameters are:
Sampling rate: 5 min Alarm Type: Disable
Start delay: 0 min Alarm delay: 0 min
Temp. Unit: °C Alarm Limits:
Password: disable Temp. blank
Company Name: blank Ext. T: blank
Language: English RH: blank
Once all the programming is done, press "Save" to confirm the setting and then you may close the setup window and remove the logger from PC USB port.

Step2 Start the logging

- Press "START" key for 5 seconds when you want to start the logging.
- “REC” will appear and flash on LCD to indicate the logging is activated. Measured parameters update and interexchange on LCD every 10 seconds.
- If Logger is programmed as Start delay, after pressing the start key, the “REC” will appear (not flashing) to show the logging is started and in standby status.
- During the logging, the green LED will blink every 10 seconds if there is no alarm occurred. If any, it turns into flashing red LED.
- If the red LED is triggered, it won't stop even the reading return to normal range or logging is stopped. The way to stop red alarm LED is to plug logger into computer to generate report or power off the logger.

- To place a bookmark manually during the delivery transition, long press MARK key until measured reading flashes three times.

-Press MAX/MIN key any time to review the maximum and minimum data stored in memory.

-Press MARK key can review the approximate leftover battery life time.

Step3 Download data

- Press "STOP" key for 5 seconds to stop the logging.
- Plug logger into PC USB port can also stop the logging.
- Open the file "PDF Logger Configuration Tool. exe
- Choose function “Convert to PDF” or “ Convert to Excel” to generate the report in preferred format.

The default language is English. The user may change it to one of several alternate languages.

- Select the preference location to save the generated report to.

- The created excel report contains all data shown in PDF report except the graph.

NOTE: Note: The generated “excel” file is a tab-delimited ASCII text file which can be easily read by many programs. However, when opening the file in Microsoft Excel, a warning message may be displayed because the file is named “.xls” but the contents are like a “.txt” file. It can be safely opened.

Technical data

Model

OM-22 : Temperature logger

OM-23: Temperature + Ext. temp. logger

OM-24: Temperature + Humidity logger

Temp. & Ext. By NTC thermistor, measurement -30.0~70.0oC (-22.0~158.0oF)

Temp. resolution 0.1oC (0.1oF)

Temp. accuracy +/-0.5oC

Humidity 0.1~99.9%rH

Humidity res. 0.1%rH

Humidity accu. +/-3% at 25 oC(10-90%rH), others +/-5%

Logging Type Multiple use

Sampling points

OM-22: 48000 points

OM-23: 24000 Temp. +24000 ext. Temp.

OM-24: 24000 Temp. +24000 Humidity

Battery Life 3 months

Operating temp. -30~70oC (Logging status); room temp.(PC status)

Operating RH% Humidity < 80%

Storage temp. -40~85oC

Storage RH% Humidity <90%

Weight ~90g

Battery 2PC 3.0V CR2032

Sampling interval 30 seconds, 5, 10, 30, 60, 90, 120 minutes

Start delay 0, 5, 30, 45, 60, 90,120 minutes, 24 hours

Alarm range Temp: -30.0~70.0oC

 Humidity:1~99%rH

Alarm delay 0, 5, 30, 45, 60, 90, 120 minutes

Alarm type Single, Cumulative, Disable

Operation keys 3 Keys, Start/Stop & Mark & MX/Mn

LED indicator REC, High /Low alarm

Protection class

OM-22: IP67

OM-23: IP65

OM-24: IP65, not include sensor.

Directives EN12830

Operating System Windows only

Error Code

| | |
|---|---|
| - - - - - | |
| Why? | In model 2 only. External probe is unplugged |
| Solution | Check the contact between probe and logger |
| E02 | |
| Why? | Measured value is below specified range |
| Solution | Put the logger in specified range |
| E03 | |
| Why? | Measured value is above specified range |
| Solution | Put the logger in specified range |
| E04 | |
| Why? | In humidity display of model 3 only, means temperature is in error mode |
| Solution | Solve the error issue of temp. sensor |
| E11 | |
| Why? | In humidity display of model 3 only, means humidity calibration is fail |
| Solution | Re-calibrate the humidity |
| E31 | |
| Why? | Microprocessor is fail |
| Solution | Contact distributor for after service |
| E33 | |
| Why? | In humidity display of model 3 only, means humidity measuring is fail |
| Solution | Contact distributor for after service |
| Why red LED is flashing but recorded data is OK | |
| Why? | Alarm detection works every 10 seconds but data logging are possibly programmed as every 2 hours. In this condition, if alarm happens between two logging points, it might lead the recorded data is OK but red LED is flashing, especially if the alarm mode is set as “Single”. |
| Solution | To program the alarm function as cumulative can reduce this situation |



omega.com info@omega.com

Servicing North America:

U.S.A.:

Omega Engineering, Inc., One Omega Drive, P.O. Box 4047
Stamford, CT 06907-0047 USA
Toll-Free: 1-800-826-6342 (USA & Canada only)
Customer Service: 1-800-622-2378 (USA & Canada only)
Engineering Service: 1-800-872-9436 (USA & Canada only)
Tel: (203) 359-1660 Fax: (203) 359-7700
e-mail: info@omega.com

For Other Locations Visit omega.com/worldwide

The information contained in this document is believed to be correct, but OMEGA accepts no liability for any errors it contains, and reserves the right to alter specifications without notice.

WARRANTY/DISCLAIMER

OMEGA ENGINEERING, INC. warrants this unit to be free of defects in materials and workmanship for a period of **13 months** from date of purchase. OMEGA’s WARRANTY adds an additional one (1) month grace period to the normal **one (1) year product warranty** to cover handling and shipping time. This ensures that OMEGA’s customers receive maximum coverage on each product.

If the unit malfunctions, it must be returned to the factory for evaluation. OMEGA’s Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective, it will be repaired or replaced at no charge. OMEGA’s WARRANTY does not apply to defects resulting from any action of the purchaser, including but not limited to mishandling, improper interfacing, operation outside of design limits, improper repair, or unauthorized modification. This WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of having been damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA’s control. Components in which wear is not warranted, include but are not limited to contact points, fuses, and triacs.

OMEGA is pleased to offer suggestions on the use of its various products. However, OMEGA neither assumes responsibility for any omissions or errors nor assumes liability for any damages that result from the use of its products in accordance with information provided by OMEGA, either verbal or written. OMEGA warrants only that the parts manufactured by the company will be as specified and free of defects. OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESSED OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. LIMITATION OF LIABILITY: The remedies of purchaser set forth herein are exclusive, and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.

CONDITIONS: Equipment sold by OMEGA is not intended to be used, nor shall it be used: (1) as a “Basic Component” under 10 CFR 21 (NRC), used in or with any nuclear installation or activity; or (2) in medical applications or used on humans. Should any Product(s) be used in or with any nuclear installation or activity, medical application, used on humans, or misused in any way, OMEGA assumes no responsibility as set forth in our basic WARRANTY/DISCLAIMER language, and, additionally, purchaser will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the Product(s) in such a manner.

RETURN REQUESTS/INQUIRIES

Direct all warranty and repair requests/inquiries to the OMEGA Customer Service Department. BEFORE RETURNING ANY PRODUCT(S) TO OMEGA, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OMEGA’S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS). The assigned AR number should then be marked on the outside of the return package and on any correspondence.

The purchaser is responsible for shipping charges, freight, insurance and proper packaging to prevent breakage in transit.

FOR **WARRANTY** RETURNS, please have the following information available BEFORE contacting OMEGA:

1. Purchase Order number under which the product was PURCHASED,
2. Model and serial number of the product under warranty, and
3. Repair instructions and/or specific problems relative to the product.

FOR **NON-WARRANTY** REPAIRS, consult OMEGA for current repair charges. Have the following information available BEFORE contacting OMEGA:

1. Purchase Order number to cover the COST of the repair,
2. Model and serial number of the product, and
3. Repair instructions and/or specific problems relative to the product.