

**1 YEAR**  
WARRANTY

**UL** US  
LISTED

**Ω OMEGA™**

# User's Guide



**Shop online at  
[omega.com](http://omega.com)**

**e-mail: [info@omega.com](mailto:info@omega.com)  
For latest product manuals:  
[www.omegamanual.info](http://www.omegamanual.info)**

## DRST-AC Din Rail AC Transmitter



omega.com info@omega.com

**Servicing North America:**

**U.S.A.  
Headquarters:**

Omega Engineering, Inc.

Toll-Free: 1-800-826-6342 (USA & Canada only)

Customer Service: 1-800-622-2378 (USA & Canada only)

Engineering Service: 1-800-872-9436 (USA & Canada only)

Tel: (203) 359-1660

Fax: (203) 359-7700

e-mail: info@omega.com

**For Other Locations Visit [omega.com/worldwide](http://omega.com/worldwide)**

## Table of Contents

<b>Section</b>	<b>Page</b>
Section 1 <b>Warning</b>	5
Section 2 <b>Safety Instructions</b>	6
Section 3 <b>How to demount DRST Series</b>	7
Section 4 <b>Universal AC/DC transmitter</b>	8
Section 4.2 Application	8
Section 4.3 Technical characteristics	8
Section 4.4 Mounting / installation / programming	8
Section 5 <b>Signals/Connection</b>	9
Section 5.1 Input Signals	9
Section 5.2 Output Signals	9
Section 5.3 Power Connection	9
Section 6 <b>DRSL-DISPLAY/programming front</b>	10
Section 8.1 Mounting / demounting the DRSL-DISPLAY	10
Section 7 <b>Order</b>	11-13
Section 7.1 Specifications	13
Section 8 <b>Configurable input error indication &amp; input limits</b>	14-15
Section 9 <b>DRSL-DISPLAY display readout</b>	16
Section 10 <b>Connections</b>	17
Section 11 <b>Block Diagram</b>	18
Section 12 <b>Configuration / Operating the function keys</b>	19
Section 13 <b>Routing Diagram</b>	21-26
Section 13.2 Advanced settings	25
Section 13.3 Help text overview	25
Section 13.4 Document history	26

# 6 Product Pillars to meet your every need

Individually outstanding, unrivalled in combination

With our innovative, patented technologies, we make signal conditioning smarter and simpler. Our portfolio is composed of six product areas, where we offer a wide range of analog and digital devices covering over a thousand applications in industrial and factory automation. All our products comply with or surpass the highest industry standards, ensuring reliability in even the harshest of environments and have a 5-year warranty for greater peace of mind.



Our range of temperature transmitters and sensors provides the highest level of signal integrity from the measurement point to your control system. You can convert industrial process temperature signals to analog, bus or digital communications using a highly reliable point-to-point solution with a fast response time, automatic self-calibration, sensor error detection, low drift, and top EMC performance in any environment.



We deliver the safest signals by validating our products against the toughest safety standards. Through our commitment to innovation, we have made pioneering achievements in developing I.S. interfaces with SIL 2 Full Assessment that are both efficient and cost-effective. Our comprehensive range of analog and digital intrinsically safe isolation barriers offers multifunctional inputs and outputs, making Omega an easy-to-implement site standard. Our backplanes further simplify large installations and provide seamless integration to standard DCS systems.



We provide inexpensive, easy-to-use, future-ready communication interfaces that can access your installed base of products. The detachable DRSL-DISPLAY Local Operator Interface (LOI) allows for local monitoring of process values, device configuration, error detection and signal simulation. The next generation, our DRST-CM Remote Operator Interface (ROI) does all that and more, adding remote digital communications via Modbus/RTU, while the analog output signals are still available for redundancy. With the DRST-CM you can further expand connectivity with a gateway, which connects via industrial Ethernet, wirelessly through a Wi-Fi router.



Our unique range of single devices covering multiple applications is easily deployable as your site standard. Having one variant that applies to a broad range of applications can reduce your installation time and training, and greatly simplify spare parts management at your facilities. Our devices are designed for long-term signal accuracy, low power consumption, immunity to electrical noise and simple programming.



Our compact, fast, high-quality 6 mm isolators are based on microprocessor technology to provide exceptional performance and EMC-immunity for dedicated applications at a very low total cost of ownership. They can be stacked both vertically and horizontally with no air gap separation between units required.



Our display range is characterized by its flexibility and stability. The devices meet nearly every demand for display readout of process signals, and have universal input and power supply capabilities. They provide a real-time measurement of your process value no matter the industry, and are engineered to provide a user-friendly and reliable relay of information, even in demanding environments.

**WARNING**

GENERAL

This device is designed for connection to hazardous electric voltages. Ignoring this warning can result in severe personal injury or mechanical damage.

To avoid the risk of electric shock and fire, the safety instructions of this guide must be observed and the guidelines followed. The specifications must not be exceeded, and the device must only be applied as described in the following.

Prior to the commissioning of the device, this installation guide must be examined carefully.

Only qualified personnel (technicians) should install this device. If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

**WARNING**HAZARDOUS  
VOLTAGE

Until the device is fixed, do not connect hazardous voltages to the device. The following operations should only be carried out on a disconnected device and under ESD safe conditions:

- General mounting, connection and disconnection of wires.
- Troubleshooting the device.

**Repair of the device and replacement of circuit breakers must be done by Omega A/S only.**

**WARNING**

CAUTION

Do not open the front plate of the device as this will cause damage to the connector for the display / programming front DRSL-DISPLAY.

This device contains no DIP-switches or jumpers.

DRST Series must be mounted on a DIN rail according to DIN EN 60715.

**Section 1.2 - Symbol Identification**

**Triangle with an exclamation mark:** Read the manual before installation and commissioning of the device in order to avoid incidents that could lead to personal injury or mechanical damage.



**The CE mark** proves the compliance of the device with the essential requirements of the directives.



**The double insulation symbol** shows that the device is protected by double or reinforced insulation.

## Section 2 - Safety instructions

### Definitions

Hazardous voltages have been defined as the ranges: 75 to 1500 Volt DC, and 50 to 1000 Volt AC.

Technicians are qualified persons educated or trained to mount, operate, and also trouble-shoot technically correct and in accordance with safety regulations.

Operators, being familiar with the contents of this manual, adjust and operate the knobs or potentiometers during normal operation.

### Receipt and unpacking

Unpack the device without damaging it and check whether the device type corresponds to the one ordered. The packing should always follow the device until this has been permanently mounted.

### Environment

Avoid direct sun light, dust, high temperatures, mechanical vibrations and shock, and rain and heavy moisture. If necessary, heating in excess of the stated limits for ambient temperatures should be avoided by way of ventilation.

The device must be installed in pollution degree 2 or better.

### Mounting

Only technicians, who are familiar with the technical terms, warnings, and instructions in the manual and who are able to follow these, should connect the device. Should there be any doubt as to the correct handling of the device, please contact our Omega tech support.

Mounting and connection of the device should comply with national legislation for mounting of electric materials, i.e. wire cross section, protective fuse, and location.

Descriptions of input / output and supply connections are shown in the block diagram and side label.

The following apply to fixed hazardous voltages-connected devices:

The max. size of the protective fuse is 10 A and, together with a power switch, it should be easily accessible and close to the device. The power switch should be marked with a label indicating that it will switch off the voltage to the device.

Year of manufacture can be taken from the first two digits in the serial number.

### UL installation requirements

Use 60/75°C copper conductors only

For use only in pollution degree 2 or better

Max. ambient temperature           60°C

Max. wire size                        AWG 26-14

UL file number                       E248256

### Calibration and Adjustment

During calibration and adjustment, the measuring and connection of external voltages must be carried out according to the specifications of this manual. The technician must use tools and instruments that are safe to use.

### Normal operation

Operators are only allowed to adjust and operate devices that are safely fixed in panels, etc., thus avoiding the danger of personal injury and damage. This means there is no electrical shock hazard, and the device is easily accessible.

### Cleaning

When disconnected, the device may be cleaned with a cloth moistened with distilled water.

### Liability

To the extent the instructions in this manual are not strictly observed, the customer cannot advance a demand against Omega A/S that would otherwise exist according to the concluded sales agreement.

## Section 3 - How to demount DRST-AC

### Picture 1:

The device is detached from the DIN rail by moving the bottom lock down.



### **When front LED flashes red or DRSL-DISPLAY display shows AO.ER**

The DRST-AC is designed with a high safety level. Therefore, the device continuously measures the output current. If "S4-20" is selected during configuration, and output current drops to 0 mA, the DRSL-DISPLAY display will indicate "AO.ER" and the front LED will turn red. (A 0 mA output can be caused by an open output loop). The error mode can be reset by power cycling the device or stepping through the menu.

## Section 4.1 - Universal AC/DC transmitter

- Measures AC current and voltage signals and converts these into uni-/bipolar DC current and voltage signals ~
- Outputs passive or active current signals
- Programming, process monitoring and diagnostics via DRSL-DISPLAY
- Response time < 0.75 s and excellent accuracy better than 0.3%
- Universally powered by 21.6...253 Vac / 19.2...300 Vdc

### Application

- The 0... 5 AAC range makes it possible to accurately measure a typical current transformer.
- The 0...300 VAC range allows accurate supply voltage monitoring.
- The DRST-AC measures standard input ranges, and can be freely configured to customer-defined input range.
- Converts narrow AC current / voltage inputs to wide bipolar or unipolar outputs, e.g. 0...1 VAC input =  $\pm 10$  volt or 4...20 mA output with a minimum span of 0.5 AAC or 0.5 VAC.
- The detachable DRSL-DISPLAY displays provide enhanced diagnostics.
- Configurable input limits control the output value for increased safety.

### Technical characteristics


- The latest analog and digital techniques are used to obtain maximum accuracy and immunity to interference.
- Possibility of output safety readback by selecting S4...20 mA output.
- Response time < 0.75 s for measuring AC current / voltage signals.
- The current output can drive up to 800 Ohms, with an adjustable response time of 0.0...60.0 seconds.
- Exceptional mA output load stability of < 0.001% of span / 100 Ohm.
- Meets the NAMUR NE21 recommendations, ensuring high accuracy in harsh EMC environments.
- Meets the NAMUR NE43 recommendations, allowing the control system to easily detect an input error.
- Each unit is tested to a high 2.3 kVAC, 3-port galvanic isolation level.
- Excellent signal to noise ratio of > 60 dB.

### Mounting / installation / programming


- Very low power consumption means units can be mounted side by side without an air gap – even at 60°C ambient temperature.
- Configuration, monitoring, 2-point process calibration and more are accomplished using either the DRSL-DISPLAY detachable display or the DRST-CM detachable digital communication enabler.
- All programming can be password-protected.




**Section 5.1 - signals:**

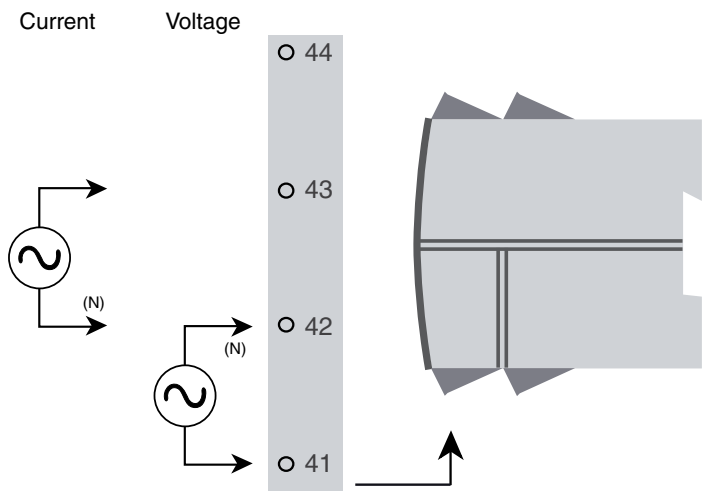

**Section 5.2 - Output signals:**

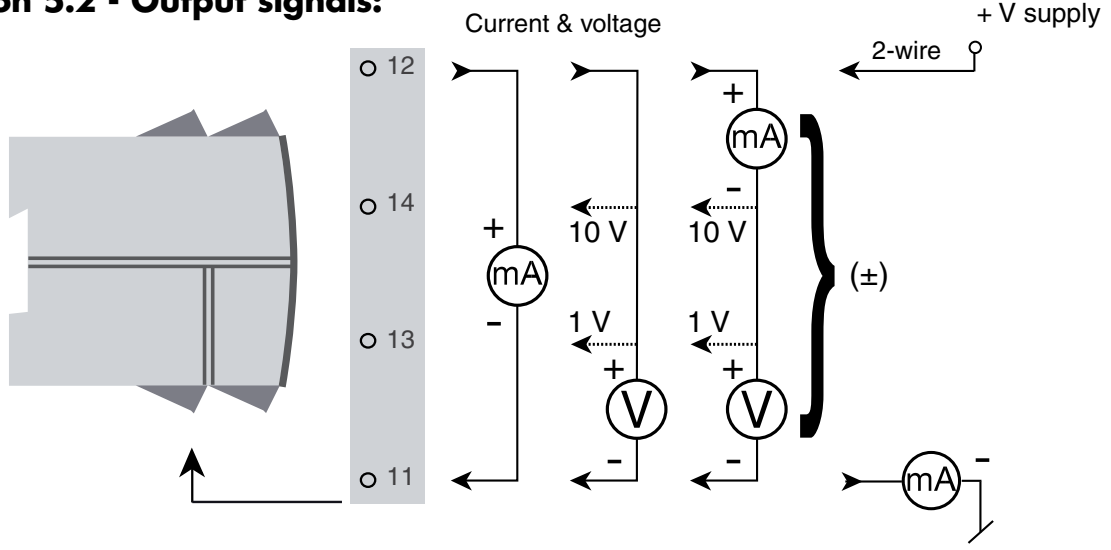

**Section 5.3 - Power connection:**

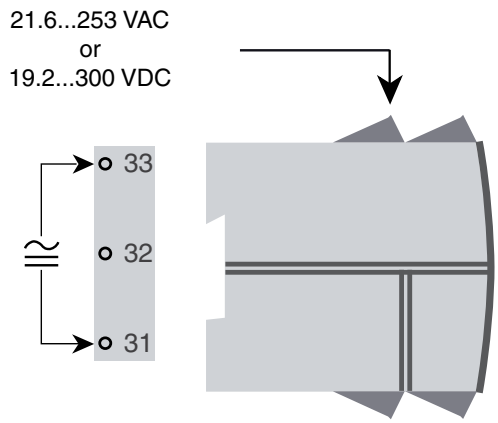

## Section 4.1 - Universal AC/DC transmitter



### Functionality

The simple and easily understandable menu structure and the explanatory help texts guide you effortlessly and automatically through the configuration steps, thus making the product very easy to use. Functions and configuration options are described in the section "Configuration / operating the function keys".

### Application

- Communications interface for modification of operational parameters in DRST-AC.
- Can be moved from one DRST-AC device to another and download the configuration of the first unit to subsequent units.
- When mounted in the process, the display shows process values and device status.

### Technical characteristics


- LCD display with 4 lines:
  - Line 1 (H=5.57 mm) shows the scaled process value - OK or error.
  - Line 2 (H=3.33 mm) shows the selected engineering unit.
  - Line 3 (H=3.33 mm) shows analog output or TAG no.
  - Line 4 shows status for communication and signal trending.
- Programming access can be blocked by assigning a password. The password is saved in the device in order to ensure a high degree of protection against unauthorized modifications to the configuration.

### Mounting/demounting the DRSL-DISPLAY/DRST-CM

- 1: Insert the tabs of the DRSL-DISPLAY/DRST-CM into the holes at the top of the device.
- 2: Hinge the DRSL-DISPLAY/DRST-CM down until it snaps into place.

Demounting of the DRSL-DISPLAY/DRST-CM

- 3: Push the release button on the bottom of the DRSL-DISPLAY/DRST-CM and hinge the the DRSL-DISPLAY/DRST-CM out and up.
- 4: With the DRSL-DISPLAY/DRST-CM hinged up, remove from holes at the top of the device.

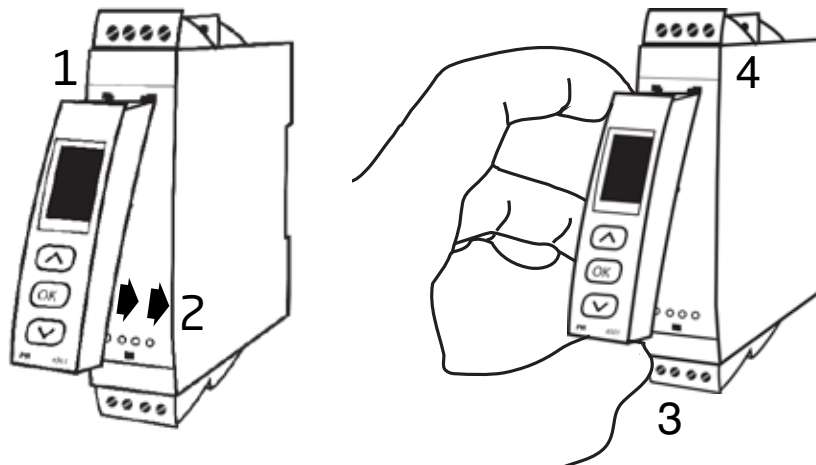

## Section 7 - Order

DRST-AC = Universal AC/DC transmitter

### Accessories

DRSL-DISPLAY = Display/programming front

DRST-CM = Communication enabler

### Electrical specifications

Environmental conditions:

Operating temperature. . . . .	-20 to 60°C
Storage temperature . . . . .	-20 to 85°C
Calibration temperature . . . . .	20...28°C
Relative humidity. . . . .	< 95% RH (non-cond.)
Protection degree . . . . .	IP20
Installation in pollution degree 2 & measurement / overvoltage category II.	

### Mechanical specifications:

Dimensions (H x W x D). . . . .	109 x 23.5 x 104 mm
Dimensions (H x W x D) w/DRSL-DISPLAY/DRST-CM . . . . .	109 x 23.5 x 116 / 131 mm
Weight approx. . . . .	250 g
Weight incl. DRSL-DISPLAY/DRST-CM (approx.) . . . . .	285 g / 350 g
DIN rail type . . . . .	DIN EN 60715 - 35 mm
Wire size. . . . .	0.13...2.08 mm <sup>2</sup> / AWG 26...14 stranded wire
Screw terminal torque . . . . .	0.5 Nm
Common electrical specifications:	
Supply voltage, universal . . . . .	21.6...253 VAC, 50...60 Hz or 19.2...300 Vdc
Max. required power. . . . .	≤ 1.8 W nom.
Max. power dissipation . . . . .	≤ 2.5 W
Isolation voltage - test . . . . .	2.3 kVac
Isolation voltage - working . . . . .	250 Vac (reinforced) / 500 Vac (basic)
Programming . . . . .	Communication enabler DRST-CM/ Programming front DRSL-DISPLAY
Signal dynamics, input / output . . . . .	20 bit / 18 bit
Signal/noise ratio. . . . .	> 60 dB
Response time (0...90%, 100...10%) . . . . .	< 0.75 s
Output referred common mode rejection ratio . . . . .	0.02 ppm / VHz

**Accuracy, the greater of general and basic values:**

General values		
Input type	Absolute accuracy	Temperature coefficient
All	$\leq \pm 0.3\%$ of span*	$\leq \pm 0.01\%$ of span* / °C

Basic values		
Input type	Basic accuracy	Temperature coefficient
Current	1.5 mA	50 $\mu$ A / °C
Voltage	1.5 mVAC	50 $\mu$ VAC / °C

EMC - immunity influence . . . . .	< $\pm 0.5\%$ of span*
Extended EMC immunity: NAMUR NE 21, A criterion, burst . . . . .	< $\pm 1\%$ of span*

of span = of selected standard range

\* For custom signals, general accuracy and EMC specifications are 0.3% of full scale

**Input specifications:****Current input:**

Signal range . . . . .	0...5 AAC / 40...400 Hz
Maximum input limit . . . . .	6.00 AAC @ 40°C
Programmable measurement ranges . . . . .	0...0.5, 0...1, 0...2.5 & 0...5 AAC
Custom configurable signal range . . . . .	0...5 AAC / 40...400 Hz
Min. span . . . . .	0.5 AAC
Input resistance . . . . .	Nom. < 0.07 $\Omega$

**Voltage input:**

Signal range . . . . .	0...300 VAC / 40...400 Hz
Programmable measurement ranges . . . . .	0...0.5, 0...1, 0...2.83, 0...5, 0...120, 0...230 & 0...300 VAC
Custom configurable signal range . . . . .	0...300 VAC / 40...400 Hz
Min. span . . . . .	0.5 VAC
Input resistance . . . . .	Nom. 3 M $\Omega$    100 pF

**Configurable input limits:****Configurable input limits, low:**

VOLT. . . . .	0 VAC to 'Minimum selected input'
CURR . . . . .	0 AAC to 'Minimum selected input'

**Configurable input limits, high:**

VOLT. . . . .	'Maximum selected input' to 300 VAC
CURR . . . . .	'Maximum selected input' to 5 AAC

**Input limit low/high, error indication levels:**

UP . . . . .	See table on page 15
DOWN . . . . .	See table on page 15
ZERO . . . . .	See table on page 15
NONE . . . . .	See table on page 15
Hysteresis . . . . .	0.5% of 'Max. output'
Error detection release delay . . . . .	< 2.5 s

## Current output specifications:

**Active unipolar and bipolar mA:**

Programmable ranges . . . . .	0...20, 4...20, S4...20, $\pm 10$ and $\pm 20$ mA Direct or Inverted action
V-curve function, 100-0-100% . . . . .	20-0-20 mA
Load. . . . .	$\leq 800 \Omega$

**Passive 2-wire mA:**

Programmable ranges . . . . .	0...20 and 4...20 mA Direct or Inverted action
V-curve function, 100-0-100% . . . . .	20-0-20 mA
External 2-wire loop supply . . . . .	3.5...30 V

**Common specifications current output:**

All standard and custom ranges can be selected as Direct or Inverted action.

V-function can be selected for fixed output ranges starting at zero.

Signal range . . . . .	0...23 mA (unipolar) / -23...+23 mA (bipolar)
Current limit . . . . .	$\leq 28$ mA (unipolar) / $\pm 28$ mA (bipolar)
Load stability . . . . .	$\leq 0.001\%$ of span / $100 \Omega$
Response time, programmable . . . . .	0.0...60.0 s
Output limitation at outside range . . . . .	See table on page 14

## Voltage output specifications:

All standard and custom ranges can be selected as Direct or Inverted action.

V-function can be selected for fixed output ranges starting at zero.

Programmable ranges . . . . .	0/0.2...1, 0/1...5, 0/2...10, $\pm 1$ , $\pm 5$ and $\pm 10$ V Direct or Inverted action
V-curve function, 100-0-100% . . . . .	1-0-1 V, 5-0-5 V and 10-0-10 V
Load, min . . . . .	$> 500 \text{ k}\Omega$
Response time, programmable . . . . .	0.0...60.0 s
Output limitation at outside range . . . . .	See table on page 14

**Observed authority requirements:**

EMC . . . . .	2014/30/EU
LVD . . . . .	2014/35/EU
RoHS. . . . .	2011/65/EU

**Approvals:**

c UL us, Standard for Safety . . . . .	UL 508 / C22.2 No. 14
--	-----------------------

## Section 8 - Configurable input error indication and input limits

### Configurable input error detection


To increase system safety and integrity, users can program a high and low input error detection level. Input signals outside the selected error indication levels will cause the output of the device to go to the programmed error state. The error is indicated in display line 1 as IN.ER and at the same time the backlight flashes.

The two configurable input error detection levels can be set and enabled individually, just as it is possible to individually set the output error indication for each of the two detection levels. This allows users to differentiate process faults, broken input wires, etc.


Available output error states for each of the two detection levels are: UP, DOWN, ZERO and NONE.

Output error indication uses the error states defined by NAMUR NE43 for 4...20 mA output span, and for all other output spans equivalent output error indications are used (see table on page 14).

### Example - 4...20 mA output span and both high and low configurable input error limit enabled with output error indication set to ZERO:

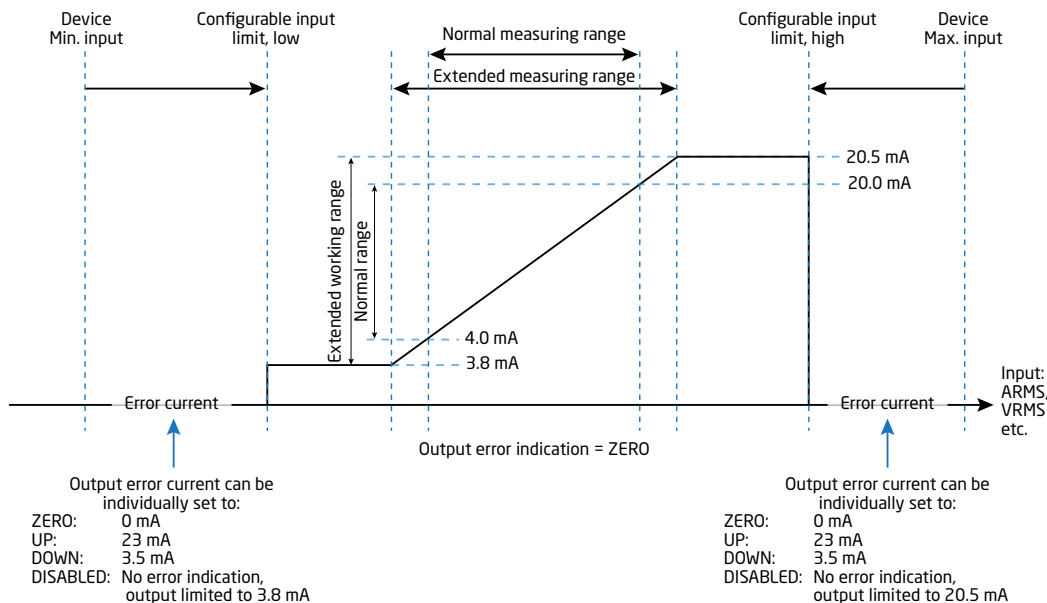

### Example - input limits disabled:

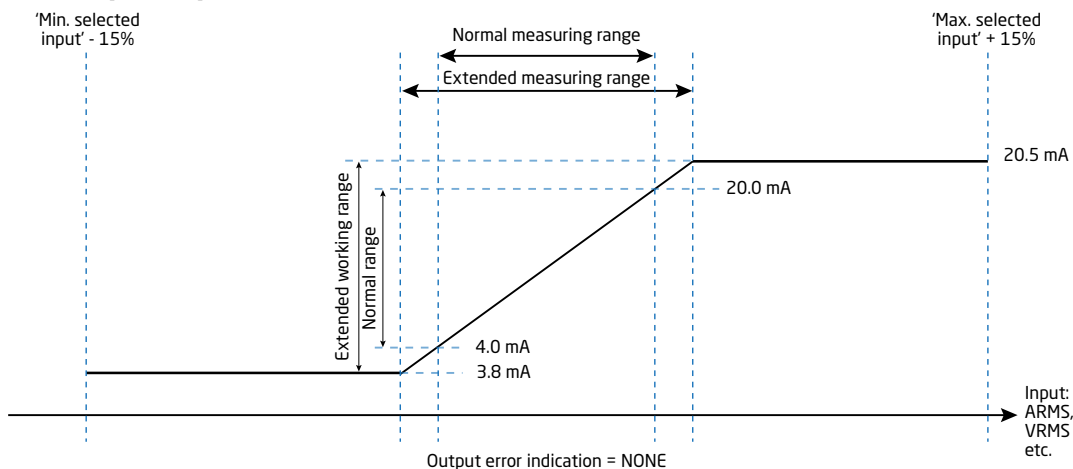

	Input limit check disabled		Input limit check Low and / or High enabled					
Output span	Output limit low	Output limit high	Output limit low	Output limit high	Output error indication, UP	Output error indication, DOWN	Output error indication, ZERO	Output error indication, NONE
4...20 mA	0 mA	23 mA	3.8 mA	20.5 mA	23 mA	3.5 mA	0 mA	No error indication
0...20 mA	0 mA	23 mA	0 mA	20.5 mA	23 mA	0 mA	0 mA	No error indication
±10 mA	-11.5 mA	11.5 mA	-10.25 mA	10.25 mA	11.5 mA	-11.5 mA	0 mA	No error indication
±20 mA	-23 mA	23 mA	-20.5 mA	20.5 mA	23 mA	-23 mA	0 mA	No error indication

	Input limit check disabled		Input limit check Low and / or High enabled					
Output span	Output limit low	Output limit high	Output limit low	Output limit high	Output error indication, UP	Output error indication, DOWN	Output error indication, ZERO	Output error indication, NONE
0...1 V	0 V	1.15 V	0 V	1.025 V	1.15 V	0 V	0 V	No error indication
0.2...1 V	0 V	1.15 V	0.195 V	1.025 V	1.15 V	0.175 V	0 V	No error indication
0...5 V	0 V	5.75 V	0 V	5.125 V	5.75 V	0 V	0 V	No error indication
1...5 V	0 V	5.75 V	0.975 V	5.125 V	5.75 V	0.875 V	0 V	No error indication
0...10 V	0 V	11.5 V	0 V	10.25 V	11.5 V	0 V	0 V	No error indication
2...10 V	0 V	11.5 V	1.95 V	10.25 V	11.5 V	1.75 V	0 V	No error indication
±1 V	-1.15 V	1.15 V	-1.025 V	1.025 V	1.15 V	-1.15 V	0 V	No error indication
±5 V	-5.75 V	5.75 V	-5.125 V	5.125 V	5.75 V	-5.75 V	0 V	No error indication
±10 V	-11.5 V	11.5 V	-10.25 V	10.25 V	11.5 V	-11.5 V	0 V	No error indication

## Section 9.1 DRSL-DISPLAY/DRST-CM display readout

### Display readout of input error detection and signal "outside range"

Configurable input error detection - readout (IN.ER):			
Input	Range	Readout	Limit
CURR	All	IN.ER	See table on page 14
VOLT	All	IN.ER	See table on page 14

Display readout below min. / above max. (-1999, 9999):			
Input	Range	Readout	Limit
All	All	-1999	Display readout <-1999
		9999	Display readout >9999


Readout at hardware error		
Error search	Readout	Cause
Check measurement of analog output	AO.ER	No load on the current output (only S4...20 mA)*
Communications test between DRSL-DISPLAY/DRST-CM and DRST-AC	NO.CO	Connection error
Configuration error	CO.ER	Default configuration is loaded
Configuration error	CO.ER	Invalid configuration**
Check that saved configuration in DRSL-DISPLAY/DRST-CM matches device	TY.ER	Invalid type or rev. no.
Hardware error	RA.ER	RAM error*
Hardware error	AD.ER	A/D converter error*
Hardware error	AO.SU	Analog output supply error*
Hardware error	EF.ER	External flash error*
Hardware error	IF.ER	Internal flash error*

!	All error indications in the display flash once per second. The help text explains the error. If the error is an input loop error, the display backlight flashes as well - this is acknowledged (stopped) by pushing the 3 button.
*	Error is acknowledged by either stepping through the basic setup, or by resetting the device power. Some types of errors can only be acknowledged by resetting the device power.
**	Error is acknowledged by stepping through the basic setup.





**Section 10.1 - Connections**





Supply

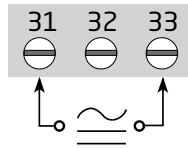


Inputs:

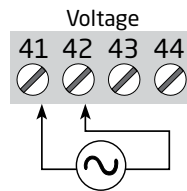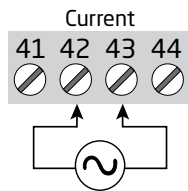

Outputs:

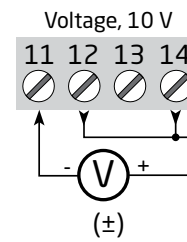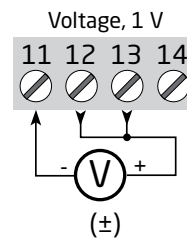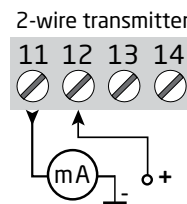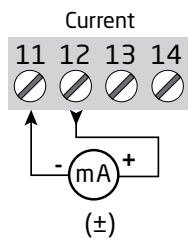

Section 11.1 - Block Diagram

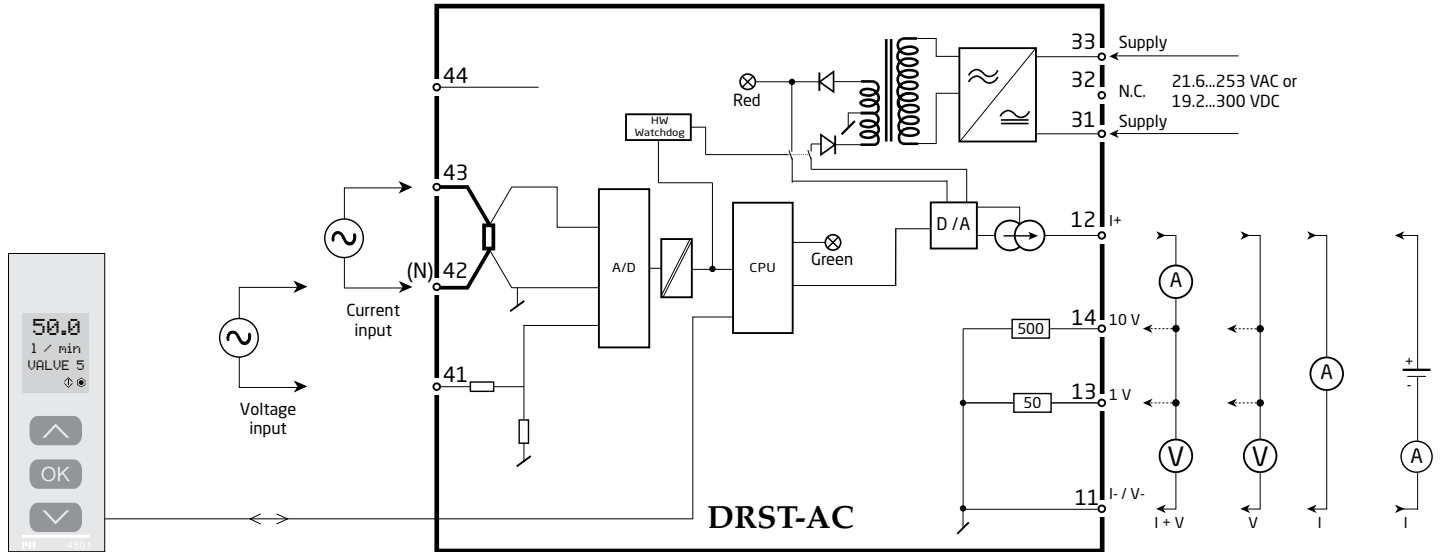

## Section 12.1 - Configuration / operating the function keys

Documentation for routing diagram.

In general

When configuring the DRST-AC, you will be guided through all parameters and you can choose the settings which fit the application. For each menu there is a scrolling help text which is automatically shown in line 3 on the display.

Configuration is carried out by use of the 3 function keys:

- 1 will increase the numerical value or choose the next parameter
- 2 will decrease the numerical value or choose the previous parameter
- 3 will save the chosen value and proceed to the next menu

When configuration is completed, the display will return to the default state 1.0. Pressing and holding 3 will return to the previous menu or return to the default state (1.0) without saving the changed values or parameters. If no key is activated for 1 minute, the display will return to the default state (1.0) without saving the changed values or parameters.

Further explanations

Password protection: Programming access can be blocked by assigning a password. The password is saved in the device in order to ensure a high degree of protection against unauthorised modifications to the configuration. Default password 2008 allows access to all configuration menus.

Signal and sensor error indication via display front DRSL-DISPLAY/DRST-CM

Error indication is displayed in line 1 as text and at the same time the backlight flashes. A flashing bullet in line 4 is indicating correct functioning of DRST-DISPLAY.

Signal and sensor error indication without display front

Status of the unit can also be read from the red/green LED in the front of the device.

Green flashing LED 13 Hz indicates normal operation.

Green flashing LED 1 Hz indicates loop error.

Steady green LED indicates internal error.

Steady red LED indicates fatal error.

Advanced functions

The unit gives access to a number of advanced functions which can be reached by answering "Yes" to the point "ADV.SET".

Memory (MEM): In the memory menu you can save the configuration of the device in the DRST-DISPLAY, and then move the DRST-DISPLAY onto another device of the same type and download the configuration in the new device.

Display setup (DISP): Here you can adjust the brightness contrast and the backlight. Setup of TAG numbers with 6 alphanumerics. Selection of functional readout in line 3 of the display - choose between readout of analogue

## Section 12.1 - Configuration / Operating the function keys

output or tag no.

Two-point process calibration (CAL): The device can be process-calibrated in 2 points to fit a given input signal . A low input signal (not necessarily 0%) is applied and the actual value is entered via DRSL-DISPLAY/DRST-CM Then a high signal (not necessarily 100%) is applied and the actual value is entered via DRSL-DISPLAY/DRST-CM. If you accept to use the calibration, the device will work according to this new adjustment. If you later reject this menu point or choose another type of input signal the device will return to factory calibration.

Process simulation function (SIM): In the menu point "EN.SIM" it is possible to simulate an input signal by means of the arrow keys and thus control the output signal up or down. You must exit the menu by pressing 3 (no time-out).

The simulation function exits automatically, if the DRSL-DISPLAY/DRST-CM is detached.

Password (PASS): Here you can choose a password between 0000 and 9999 in order to protect the unit against unauthorised modifications to the configuration. The unit is delivered default without password.

Language (LANG): In the menu "LANG" you can choose between 7 different language versions of help texts that will appear in the menu. You can choose between UK, DE, FR, IT, ES, SE and DK.

Output function (OFUN): Here the output characteristics can be set to either Direct (DIR) or Inverted (INV) function. Output type and range are set in the normal programming menu. If the selected output range is starting at zero, V-curved output function (VFUN) can also be selected. The output characteristics will then be 100-0-100% on the basis of a linear 0-100% input signal.


Auto diagnostics

The device performs an advanced auto diagnosis of the internal circuits - check tables on page 15.

### Section 13.1 - Routing diagram

If no key is activated for 1 minute, the display will return to the default state 1.0 without saving configuration changes.

- 1 Increase value / choose next parameter
- 2 Decrease value / choose previous parameter
- 3 Save the chosen value and proceed to the next menu
- Hold 3 Back to previous menu / return to menu 1.0 without saving.

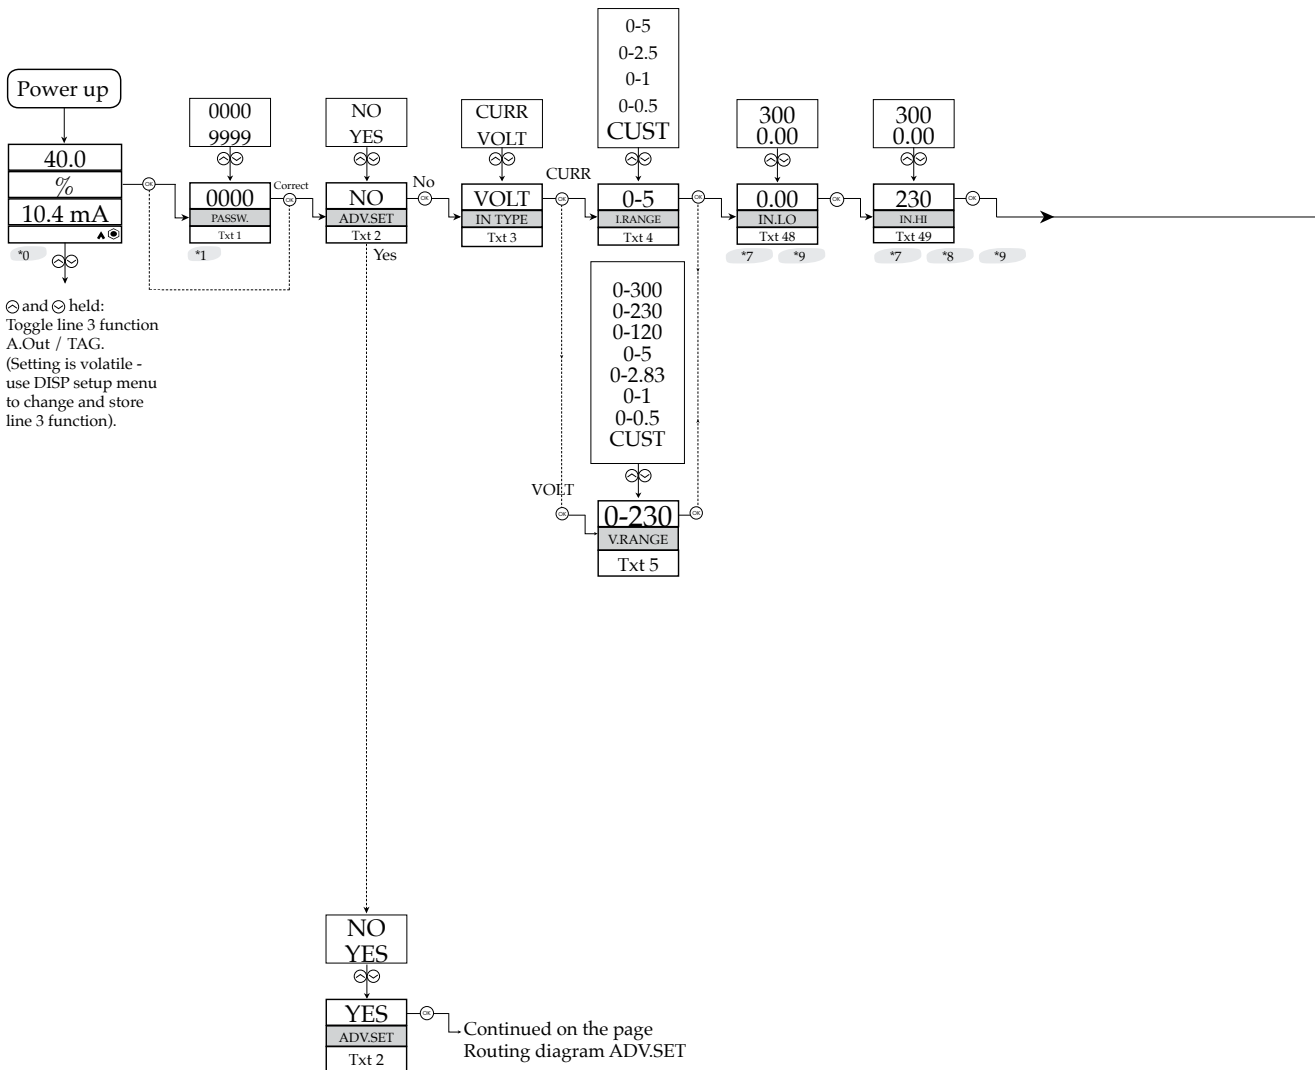

Continued on the page  
Routing diagram ADV.SET


\*0 Default state.  
Line 1 shows the scaled process value - OK or error.  
Line 2 shows the selected engineering unit.  
Line 3 shows analogue output or TAG no.  
Line 4 shows status for communication and signal trending.


\*1 Only displayed if password is enabled.

\*7 Only displayed if CUST is selected!  
This menu will change range automatically.


\*8 Value will be forced to be greater than xx.LO.

\*9 Maximum and minimum value selectable from menu must be based on input type  
VOLT: Min: 0.000 Max: 300  
CURR: Min: 0.000 Max: 5.00

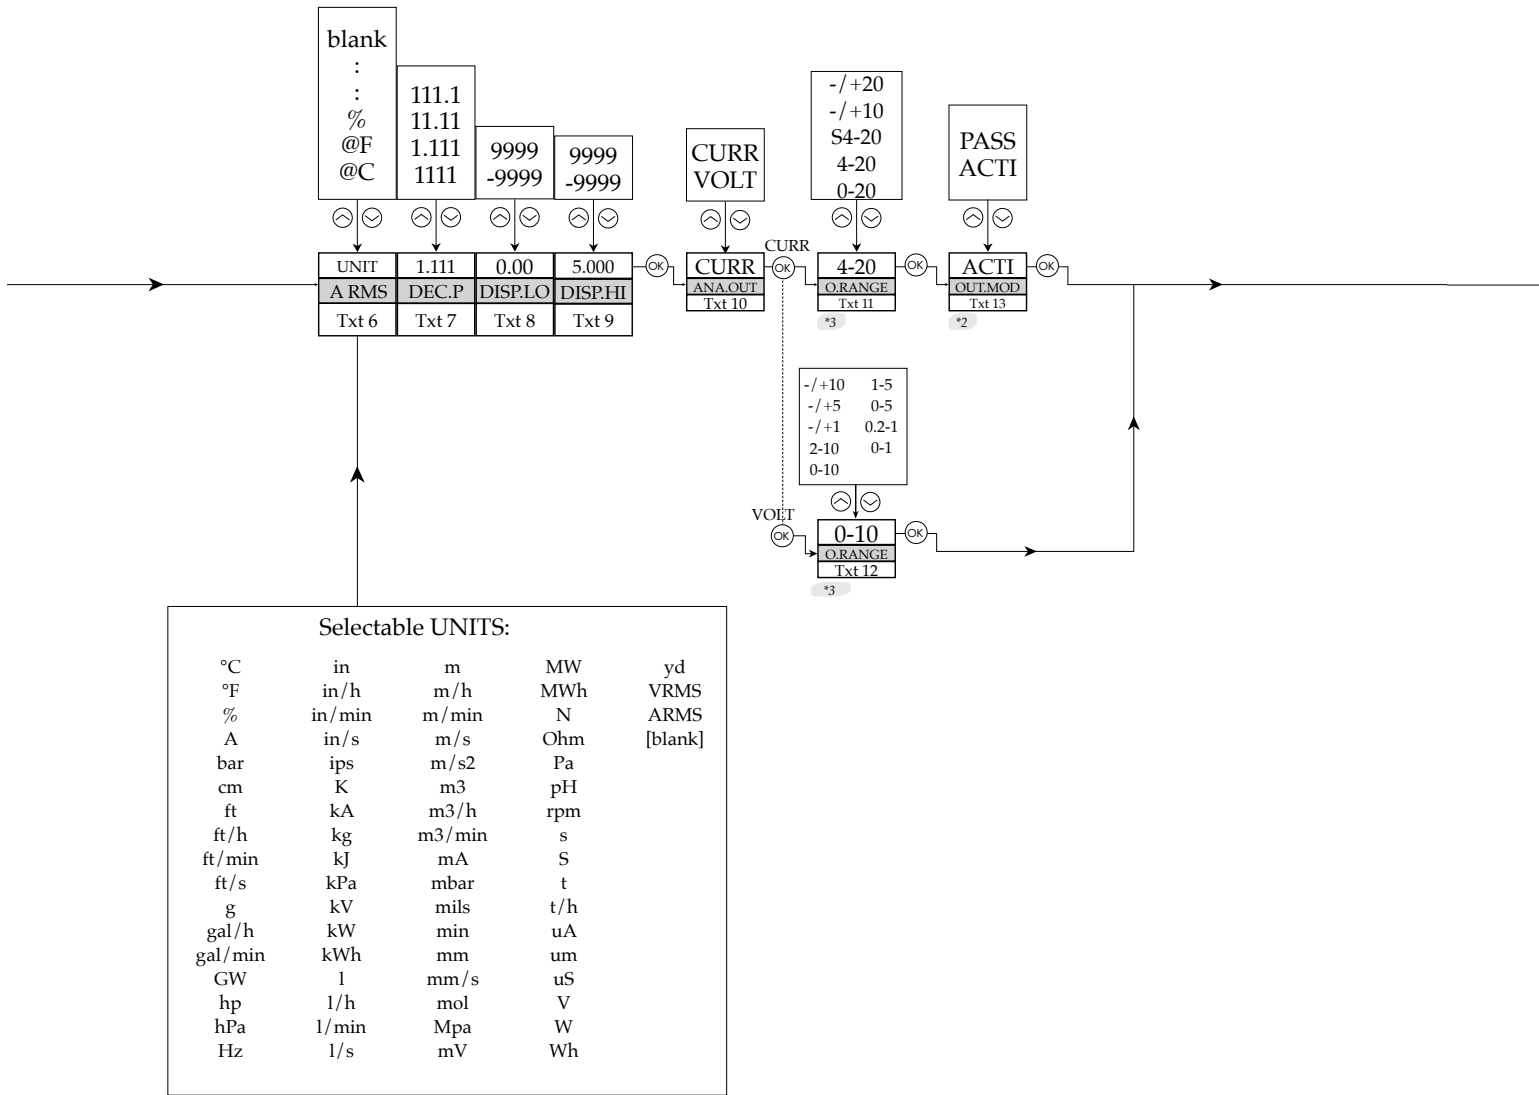

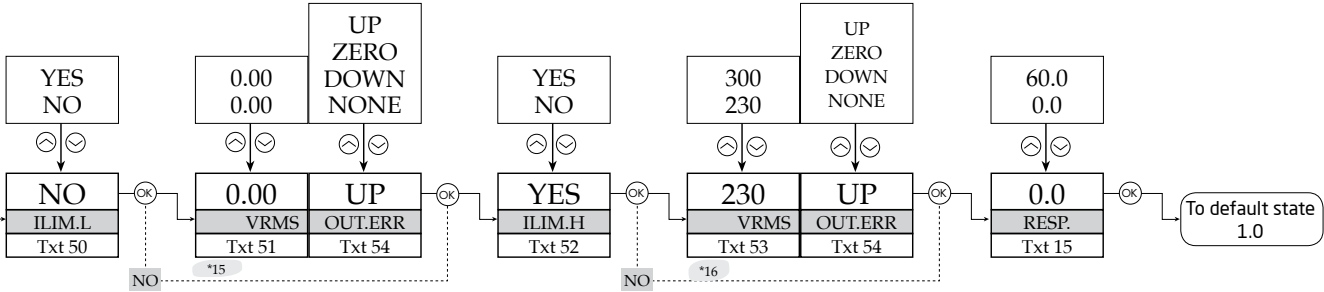

Section 13.2 - advanced settings (ADV.SET)

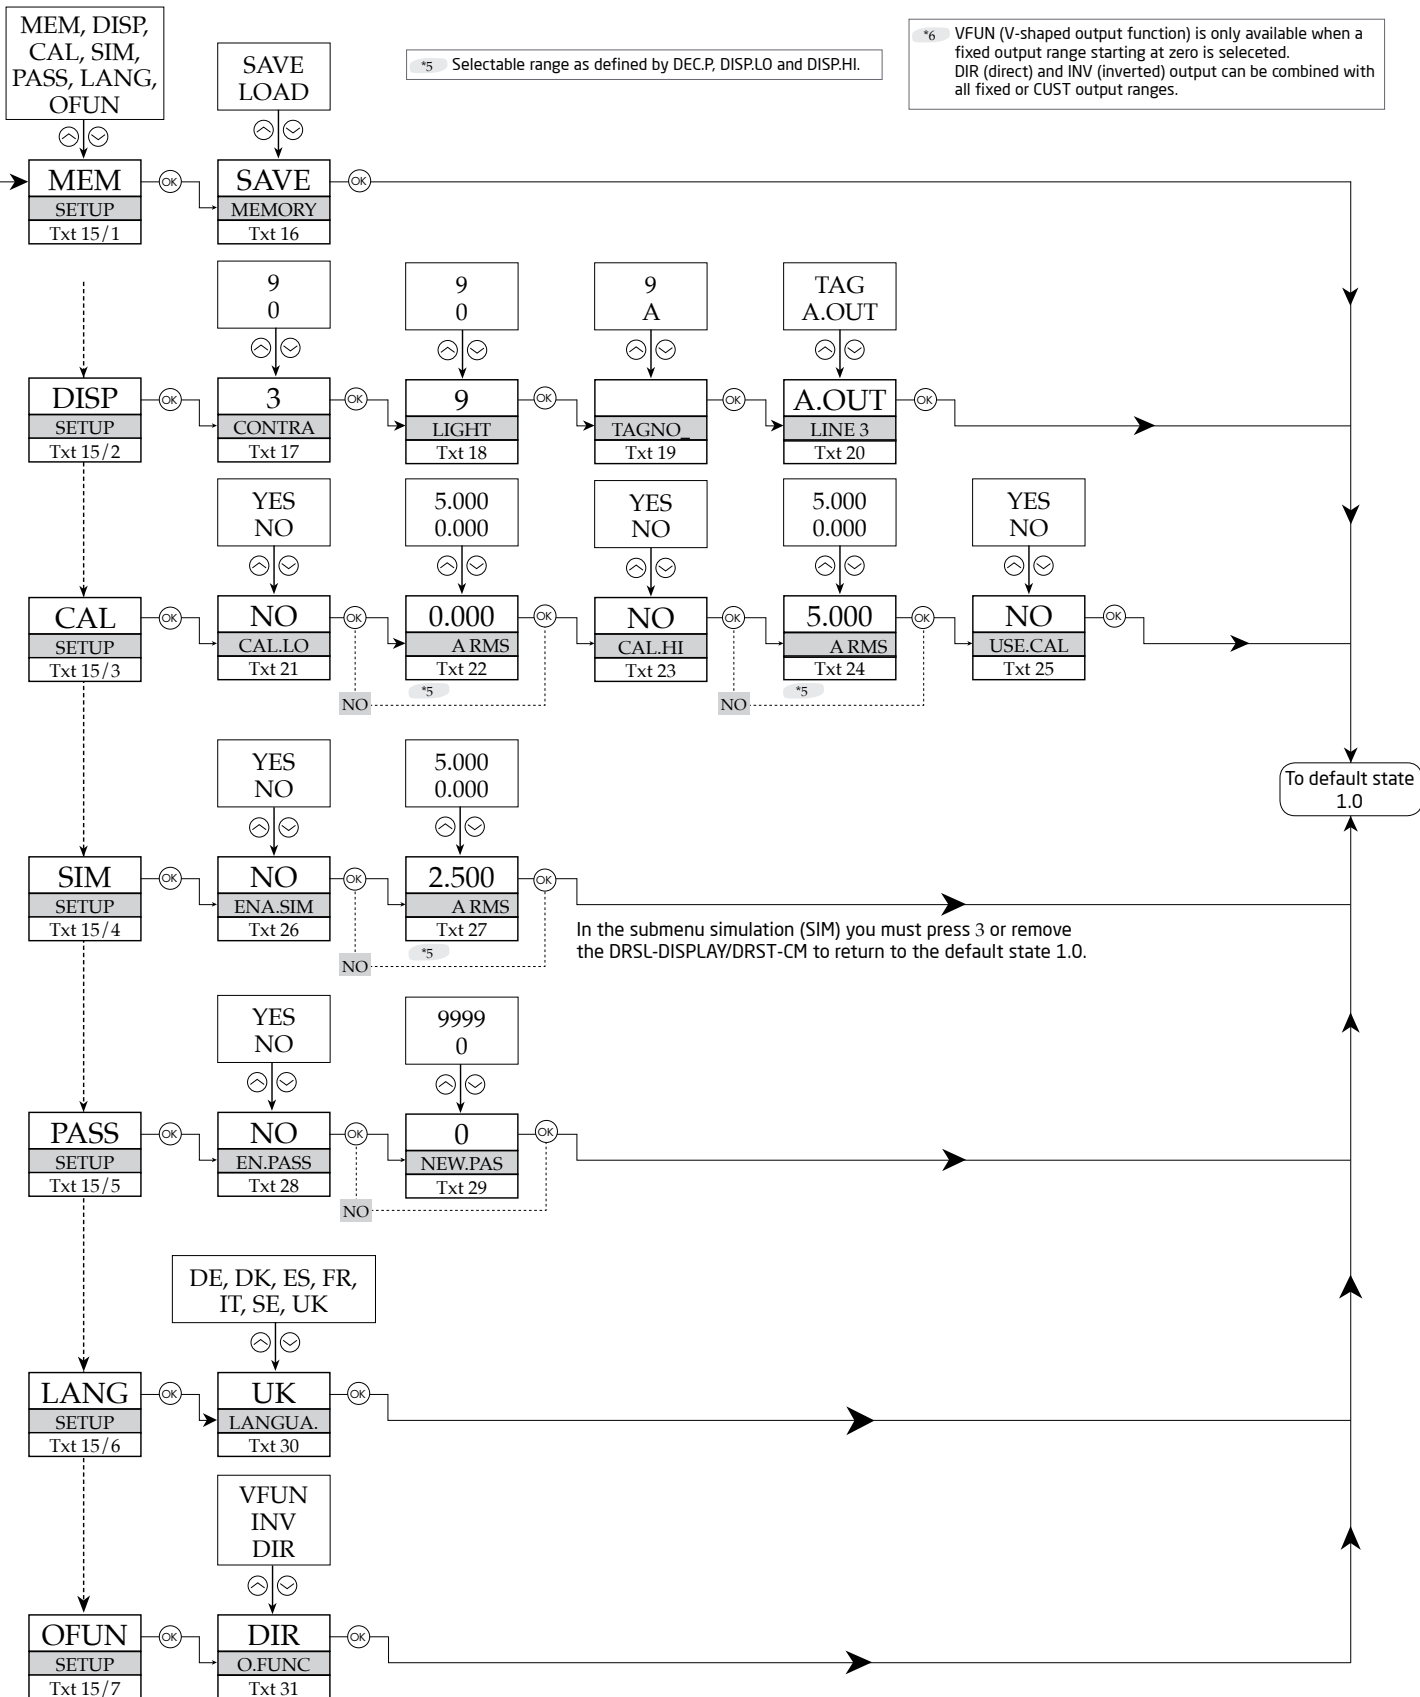



## Section 13.3 - Help text overview

- [1] Set correct password
- [2] Enter advanced setup menu?
- [3] Select current input  
Select voltage input
- [4] Select 0...5 A input range  
Select 0...2.5 A input range  
Select 0...1 A input range  
Select 0...0.5 A input range  
Select custom current input range
- [5] Select 0...230 V input range  
Select 0...120 V input range  
Select 0...2.83 V input range  
Select 0...1 V input range  
Select 0...0.5 V input range  
Select custom voltage input range
- [6] Select display unit
- [7] Select decimal point position
- [8] Set display range low
- [9] Set display range high
- [10] Select current as analog output type  
Select voltage as analog output type
- [11] Select 0...20 mA output range  
Select 4...20 mA output range  
Select 4...20 mA with safety readback  
Select -10...10 mA output range  
Select -20...20 mA output range
- [12] Select 0.0...1 V output range  
Select 0.2...1 V output range  
Select 0...5V output range  
Select 1...5V output range  
Select 0...10V output range  
Select 2...10V output range  
Select -1...1 V output range  
Select -5...5 V output range  
Select -10..10 V output range
- [13] Select active output mode  
Select passive output mode
- [14] Set Analog output response time in seconds
- [15] Select Analog Output Function  
Enter Language setup  
Enter Password setup  
Enter Simulation mode  
Perform Process calibration  
Enter Display setup  
Perform Memory operations
- [16] Load saved configuration into module  
Save configuration in display front
- [17] Adjust LCD contrast
- [18] Adjust LCD backlight
- [19] Write a 6-character device TAG
- [20] Analog output value is shown in display line 3  
Device TAG is shown in display line 3
- [21] Calibrate Input low to process value?
- [22] Set value for low calibration point
- [23] Calibrate Input high to process value?
- [24] Set value for high calibration point
- [25] Use process calibration values?
- [26] Enable simulation mode?

- [27] Set the input simulation value
- [28] Enable password protection?
- [29] Set new password
- [30] Select language
- [31] Select direct output mode
- Select inverted output mode
- Select V-function output mode
- [32] Display underrange
- [33] Display overrange
- [34] Input underrange
- [35] Input overrange
- [36] Analog output supply error
- [37] Analog output error - check output connections and reset power
- Configuration error - default configuration is loaded
- [38] RAM memory error
- [39] Invalid configuration
- [40] A/D converter error
- [41] No communication
- [42] Input range limit error - Input outside configurable input range limit
- [44] Invalid configuration type or version
- External flash error
- [45] Internal flash error
- [46] Set input range low
- [47] Set input range high
- [48] Enable configurable input limit, low
- [49] Set configurable input limit, low
- [50] Enable configurable input limit, high
- [51] Set configurable input limit, high
- [52] Select downscale at error
- [53] Select zero output at error
- [54] Select upscale at error
- Select no error action - output undefined at error

## Section 13.4 - Document history

The following list provides notes concerning revisions of this document.

Rev. ID	Date	Notes
100	1740	Initial release of the product

## WARRANTY/DISCLAIMER

OMEGA ENGINEERING, INC. warrants this unit to be free of defects in materials and workmanship for a period of **13 months** from date of purchase. OMEGA's WARRANTY adds an additional one (1) month grace period to the normal **one (1) year product warranty** to cover handling and shipping time. This ensures that OMEGA's customers receive maximum coverage on each product.

If the unit malfunctions, it must be returned to the factory for evaluation. OMEGA's Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective, it will be repaired or replaced at no charge. OMEGA's WARRANTY does not apply to defects resulting from any action of the purchaser, including but not limited to mishandling, improper interfacing, operation outside of design limits, improper repair, or unauthorized modification. This WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of having been damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA's control. Components in which wear is not warranted, include but are not limited to contact points, fuses, and triacs.

**OMEGA is pleased to offer suggestions on the use of its various products. However, OMEGA neither assumes responsibility for any omissions or errors nor assumes liability for any damages that result from the use of its products in accordance with information provided by OMEGA, either verbal or written. OMEGA warrants only that the parts manufactured by the company will be as specified and free of defects. OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESSED OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. LIMITATION OF LIABILITY: The remedies of purchaser set forth herein are exclusive, and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.**

CONDITIONS: Equipment sold by OMEGA is not intended to be used, nor shall it be used: (1) as a "Basic Component" under 10 CFR 21 (NRC), used in or with any nuclear installation or activity; or (2) in medical applications or used on humans. Should any Product(s) be used in or with any nuclear installation or activity, medical application, used on humans, or misused in any way, OMEGA assumes no responsibility as set forth in our basic WARRANTY/DISCLAIMER language, and, additionally, purchaser will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the Product(s) in such a manner.

## RETURN REQUESTS/INQUIRIES

Direct all warranty and repair requests/inquiries to the OMEGA Customer Service Department. BEFORE RETURNING ANY PRODUCT(S) TO OMEGA, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OMEGA'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS). The assigned AR number should then be marked on the outside of the return package and on any correspondence.

The purchaser is responsible for shipping charges, freight, insurance and proper packaging to prevent breakage in transit.

FOR **WARRANTY** RETURNS, please have the following information available BEFORE contacting OMEGA:

1. Purchase Order number under which the product was PURCHASED,
2. Model and serial number of the product under warranty, and
3. Repair instructions and/or specific problems relative to the product.

FOR **NON-WARRANTY** REPAIRS, consult OMEGA for current repair charges. Have the following information available BEFORE contacting OMEGA:

1. Purchase Order number to cover the COST of the repair,
2. Model and serial number of the product, and
3. Repair instructions and/or specific problems relative to the product.

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering.

OMEGA is a trademark of OMEGA ENGINEERING, INC.

© Copyright 2018 OMEGA ENGINEERING, INC. All rights reserved. This document may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without the prior written consent of OMEGA ENGINEERING, INC.

# Where Do I Find Everything I Need for Process Measurement and Control? **OMEGA...Of Course!** *Shop online at [omega.com](http://omega.com)*

## **TEMPERATURE**

- ☑ Thermocouple, RTD & Thermistor Probes, Connectors, Panels & Assemblies
- ☑ Wire: Thermocouple, RTD & Thermistor
- ☑ Calibrators & Ice Point References
- ☑ Recorders, Controllers & Process Monitors
- ☑ Infrared Pyrometers

## **PRESSURE, STRAIN AND FORCE**

- ☑ Transducers & Strain Gages
- ☑ Load Cells & Pressure Gages
- ☑ Displacement Transducers
- ☑ Instrumentation & Accessories

## **FLOW/LEVEL**

- ☑ Rotameters, Gas Mass Flowmeters & Flow Computers
- ☑ Air Velocity Indicators
- ☑ Turbine/Paddlewheel Systems
- ☑ Totalizers & Batch Controllers

## **pH/CONDUCTIVITY**

- ☑ pH Electrodes, Testers & Accessories
- ☑ Benchtop/Laboratory Meters
- ☑ Controllers, Calibrators, Simulators & Pumps
- ☑ Industrial pH & Conductivity Equipment

## **DATA ACQUISITION**

- ☑ Communications-Based Acquisition Systems
- ☑ Data Logging Systems
- ☑ Wireless Sensors, Transmitters, & Receivers
- ☑ Signal Conditioners
- ☑ Data Acquisition Software

## **HEATERS**

- ☑ Heating Cable
- ☑ Cartridge & Strip Heaters
- ☑ Immersion & Band Heaters
- ☑ Flexible Heaters
- ☑ Laboratory Heaters

## **ENVIRONMENTAL MONITORING AND CONTROL**

- ☑ Metering & Control Instrumentation
- ☑ Refractometers
- ☑ Pumps & Tubing
- ☑ Air, Soil & Water Monitors
- ☑ Industrial Water & Wastewater Treatment
- ☑ pH, Conductivity & Dissolved Oxygen Instruments