 


ISOLATED ANALOG OUTPUT OPTION

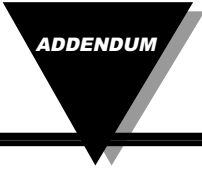

New INF-B / DP41-B



Older-Style INF / DP41

 


These changes are the result of the following product enhancement:

- New Isolated Analog Output Option Card improved for speed and accuracy.

If you have purchased your main board unit in the past, and are now purchasing the new Isolated Analog Output Option Card, you may need to change the micro-processor.


- Look on the Serial Label (on your meter's case) for the micro-processor version number.
- For **New INF-B / DP41-B** meters: the micro-processor is compatible, no change required.
- For **Older-Style INF / DP41** meters: the micro-processor version should be **-07** (or higher).
- If you need to change the micro-processor, please contact the Sales department (1-800-639-7678 or 714-540-4914) for assistance.



MICRO-PRO VERSION #

For this option card to work properly you must position the jumper **S1** as detailed below.

 - For **New INF-B / DP41-B** meters: **S1-A** must be installed. You may also refer to the Analog Output Option Manual, located on our website (as listed on side of meter).
- For **Older-Style INF / DP41** meters: **S1-A** does not need to be installed, but located in a storage position.

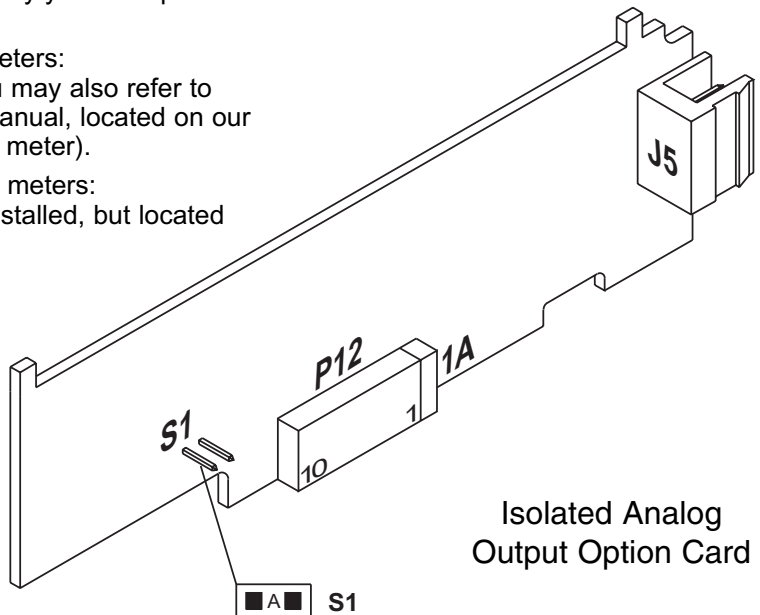

Isolated Analog Output Option Card