







## Shop online at

omega.com®

omega.com e-mail: info@omega.com For latest product manuals: omegamanual.info







# OM-CP-PR2000 Pressure Data Logger with LCD

#### **Product Notes**

The OM-CP-PR2000 is a pressure data logger with LCD display. The device features an IP rating of 65, which means it is dust proof, and splash proof making it available to be used outdoors. The convenient LCD provides access to the current pressure reading, as well as minimum, maximum and average statistics. A trending graph is also displayed of the last 100 readings. For additional information refer to your OM-CP-PR2000 manual and "Data Logger & Software Operating Manual".

#### **Backlight**

The backlight uses a significant amount of battery life. Refer to the manual to configure the auto shut-off when not in use.

### **Submergibility**

The OM-CP-PR2000 is rated IP65, which means it is dust tight and can withstand water jets.

#### **Set Password**

To password protect the device so that others cannot start, stop or reset the device:

- Click Identify Device and Read Status, then select the Device Detail Tab.
- Choose Set Password.
- Enter and confirm the password and click OK

#### **Device Maintenance**

## **Battery Replacement Materials:**

9/64" HEX Driver (Allen Key) and Replacement Batteries (Six AA)

- Remove the back cover from the device by unscrewing the four screws.
- Remove the batteries from the compartment.
- Insert the new batteries as indicated by the diagram on the battery holder.
- Replace the cover taking care not to pinch the wires. Screw the enclosure back together securely.

Note: Be sure not to over tighten the screws or strip the threads.

#### **Installation Guide**

## **Installing the Interface cable**

OM-CP-IFC200: Insert the Software CD in the CD-ROM Drive. If the autorun does not appear, locate the drive on the computer and double click on Autorun.exe. Click on Drivers and Third Party Tools, then Install USB Interface Drivers. Click Install to install the USB drivers. Plug the OM-CP-IFC200 cable into an available USB port on the computer.

#### **Installing the software**

Insert the Software CD in the CD Drive. If the autorun does not appear, locate the drive on the computer and double click Autorun.exe. Follow the instructions in the Wizard.

### **Connecting the data logger**

- Once the software is installed and running, plug the interface cable into the data logger.
- Click the Communication Menu, then Auto Configure Port.
- After a moment, a box will appear stating that a device has been found.
- Click OK. The Device Status box will appear. Click OK.
- At this point, communications have been configured for your logger. These settings can be found under the Communication Menu.

Note: For additional installation instructions refer to your "Data Logger & Software Operating Manual".

## **Device Operation**

## Starting the data logger

- Click Device Menu then Start Device.
- Choose the desired start method.
- Choose the start parameters by selecting a Reading Rate suitable for your application.
- Enter in any other desired parameters and click Start.
- A box will appear stating the data logger has been started. Click OK.
- Disconnect the data logger from the interface cable and place it in the environment to measure.

Note: The device will stop recording data when the end of memory is reached or the device is stopped. At this point the device cannot be restarted until it has been re-armed by the computer.

## Downloading data from a data logger

- Connect the data logger to the interface cable.
- Click the Device Menu then Read Device Data. This will offload all recorded data onto the PC.



Part Number	OM-CP-PR2000				
Pressure Sensor	Semiconductor (strain guage)				
Pressure Range					
Pressure Resolution	*See Table Below				
Pressure Accuracy					
Memory	262,143				
Sampling Rate	2 seconds to 24 hours				
Required Interface Package	OM-CP-IFC200				
Baud Rate	115,200				
Typical Battery Type	6 Alkaline AA Batteries				
Operating Environment	-20°C to 60°C (-4°F to 140°F), 0%RH to 95%RH (non-condensing)				
Material	Black anodized aluminum and 303 stainless steel NPT process connection				
Dimensions	5.1" x 4.8" x 1.78" (130mm x 122mm x 45mm)				
Approvals	CE				

#### \* OM-CP-PR2000 Pressure Range, Resolution and Accuracy

Range (PSI)	0-30	0-100	0-300	0-500	0-1000	0-5000	
Resolution	2% FSR, 0.25% @ 25°C typical						
Accuracy (PSI)	0.002	0.005	0.02	0.05	0.05	0.2	

#### **Battery Warning**

WARNING: DISCARD USED BATTERY PROMPTLY. KEEP OUT OF REACH OF CHILDREN. DO NOT DISPOSE OF IN FIRE, RECHARGE, PUT IN BACKWARDS, DISASSEMBLE, OR MIX WITH OTHER BATTERY TYPES. MAY EXPLODE, FLAME, OR LEAK AND CAUSE PERSONAL INJURY.



OMEGAnet® Online Service Internet e-mail omega.com info@omega.com

Czech

Republic:

Germany/

Austria

**Servicing North America:** 

**Servicing Europe:** 

TEL: +31 20 347 21 21

TEL: +420-59-6311899

e-mail: sales@omegaeng.nl

e-mail: info@omegashop.cz

Omega Engineering, Inc., One Omega Drive, P.O. Box 4047 Benelux: U.S.A.: Managed by the United Kingdom Office Toll-Free: 0800 099 3344

e-mail:espanol@omega.com

Stamford, CT 06907-0047 ISO 9001 Certifie d

Latin America info@omega.com.mx

Toll-Free: 1-800-826-6342 Tel: (203) 359-1660

FAX: (203) 359-7700 e-mail: info@omega.com

Canada:

976 Bergar Laval (Quebec), H7L 5A1 Canada

For immediate technical or application assistance:

Toll-Free: 1-800-826-6342 TEL: (514) 856-6928

FAX: (514) 856-6886 e-mail: info@omega.ca

Sales Service: 1-800-826-6342/1-800-TC-OMEGA®

Customer Service: 1-800-622-2378/1-800-622-BEST Engineering Service: 1-800-872-9436/1-800-USA-WHEN®

En Español: 001 (203) 359-7803 FAX: 001 (203) 359-7807

Toll-Free: 0800-1-66342 FAX: +420-59-6311114 Managed by the United Kingdom Office France:

FAX: +31 20 643 46 43

Frystatska 184

Toll-Free: 0800 466 342

TEL: +33 (0) 161 37 29 00 e-mail: sales@omega.fr

FAX: +33 (0) 130 57 54 27

733 01 Karviná, Czech Republic

Daimlerstrasse 26, D-75392 Deckenpfronn, Germany Toll-Free: 0800 6397678 TEL: +49 (0) 7056 9398-0

FAX: +49 (0) 7056 9398-29 e-mail: info@omega.de

OMEGA Engineering Ltd.

United One Omega Drive, River Bend Technology Centre, Northbank Kingdom:

Irlam, Manchester M44 5BD United Kingdom ISO 9001

Toll-Free: 0800-488-488 Certified

TEL: +44 (0) 161 777-6611 FAX: +44 (0) 161 777-6622 e-mail: sales@omega.co.uk

It is the policy of OMEGA Engineering, Inc. to comply with all worldwide safety and EMC/EMI regulations that apply. OMEGA is constantly pursuing certification of its products to the European New Approach Directives. OMEGA will add the CE mark to every appropriate device upon certification.

The information contained in this document is believed to be correct, but OMEGA accepts no liability for any errors it contains, and reserves the right to alter specifications without notice.

WARNING: These products are not designed for use in, and should not be used for, human applications.



U.S.A. and

Canada:

Mexico/

#### **WARRANTY/DISCLAIMER**

OMEGA ENGINEERING, INC. warrants this unit to be free of defects in materials and workmanship for a period of 61 months from date of purchase. OMEGA's WARRANTY adds an additional one (1) month grace period to the normal five (5) year product warranty to cover handling and shipping time. This ensures that OMEGA's customers receive maximum coverage on each

If the unit malfunctions, it must be returned to the factory for evaluation. OMEGA's Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective, it will be repaired or replaced at no charge. OMEGA's WARRANTY does not apply to defects resulting from any action of the purchaser, including but not limited to mishandling, improper interfacing, operation outside of design limits, improper repair, or unauthorized modification. This WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of having been damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA's control. Components in which wear is not warranted, include but are not limited to contact points, fuses, and triacs.

OMEGA is pleased to offer suggestions on the use of its various products. However, OMEGA neither assumes responsibility for any omissions or errors nor assumes liability for any damages that result from the use of its products in accordance with information provided by OMEGA, either verbal or written. OMEGA warrants only that the parts manufactured by the company will be as specified and free of defects. OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESSED OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. LIMITATION OF LIABILITY: The remedies of purchaser set forth herein are exclusive, and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.

CONDITIONS: Equipment sold by OMEGA is not intended to be used, nor shall it be used: (1) as a "Basic Component" under 10 CFR 21 (NRC), used in or with any nuclear installation or activity; or (2) in medical applications or used on humans. Should any Product(s) be used in or with any nuclear installation or activity, medical application, used on humans, or misused in any way, OMEGA assumes no responsibility as set forth in our basic WARRANTY/DISCLAIMER language, and, additionally, purchaser will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the Product(s) in such a manner.

#### RETURN REQUESTS / INQUIRIES

Direct all warranty and repair requests/inquiries to the OMEGA Customer Service Department. BEFORE RETURNING ANY PRODUCT(S) TO ÓMEGA, PURCHÁSER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OMEGA'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS). The assigned AR number should then be marked on the outside of the return package and on any correspondence.

The purchaser is responsible for shipping charges, freight, insurance and proper packaging to prevent breakage in transit.

FOR WARRANTY RETURNS, please have the following information available BEFORE contacting OMEGA:

- 1. Purchase Order number under which the product was PURCHASED,
- 2. Model and serial number of the product under warranty, and
- 3. Repair instructions and/or specific problems relative to the

FOR NON-WARRANTY REPAIRS, consult OMEGA for current repair charges. Have the following information available BEFORE contacting OMEGA:

- 1. Purchase Order number to cover the COST of the repair,
- 2. Model and serial number of the product, and
- 3. Repair instructions and/or specific problems relative to

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering.

OMEGA is a registered trademark of OMEGA ENGINEERING, INC.

© Copyright 2011 OMEGA ENGINEERING, INC. All rights reserved. This document may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without the prior written consent of OMEGA ENGINEERING, INC.