 


**1 YEAR**  
WARRANTY

**OMEGA CARE**  
Extended Warranty  
Program



# **OMEGA®** User's Guide



Shop online at  
**omega.com®**

e-mail: [info@omega.com](mailto:info@omega.com)  
For latest product manuals:  
[www.omegamanual.info](http://www.omegamanual.info)

## **OM-93** **OMEGA® Bluetooth® Wireless** **Temperature / Humidity Data** **Logger**

MQS5543/0216



omega.com info@omega.com

### **Servicing North America:**

**U.S.A.:**

Omega Engineering, Inc., One Omega Drive, P.O. Box 4047  
Stamford, CT 06907-0047 USA  
Toll-Free: 1-800-826-6342 (USA & Canada only)  
Customer Service: 1-800-622-2378 (USA & Canada only)  
Engineering Service: 1-800-872-9436 (USA & Canada only)  
Tel: (203) 359-1660 Fax: (203) 359-7700  
e-mail: info@omega.com

**For Other Locations Visit [omega.com/worldwide](http://omega.com/worldwide)**

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Omega Engineering, Inc. is under license. Other trademarks and trade names are those of their respective owners.

iPhone®, iPad®, and iPad-mini® are trademarks of Apple, Inc. registered in the U.S. and other countries.

Windows® is a registered trademark of Microsoft Corporation in the United States and other countries.

# OM-93

## OMEGA® Bluetooth® Temperature / Humidity Data Logger

 
### Quick Reference Guide

(Model OM-93)

#### **Description**


The OM-93 logger is a portable wireless data logger from Omega. It can be connected either via a USB cable to a Windows® PC application or using Bluetooth® wireless technology to your iPhone®, iPad® or iPad mini® mobile devices. This makes it possible to make use of the OM-93 logger in situations where it is simply not convenient to make a cable connection to a PC. Both Windows® PC and iPhone® mobile device applications offer a simple means of configuring the logger, data extraction and data viewing features.

This Quick Reference Guide gets you started with the logger with the most basic functions to have you up and running with your logger in a matter of minutes.

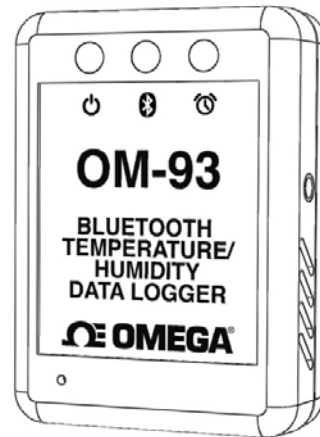

#### **OM-93 Battery Charging**

 Your Omega OM-93 logger includes a Lithium Polymer (LiPo) rechargeable battery. The Battery automatically charges by connection to any USB source such as a PC or Mac. Charging of the battery may be necessary on first receiving your OM-93 logger. The logger is charged when the rightmost "Alarm LED" goes from being illuminated red continuously to green continuously. This can take up to 2 hours for a completely discharged battery.

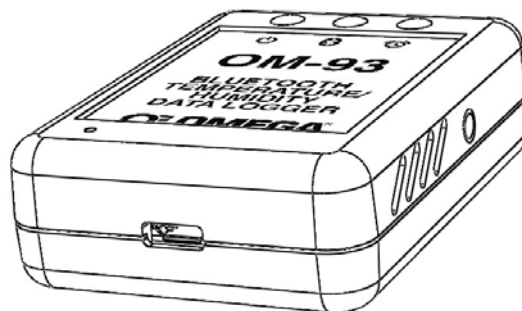


It is also possible to charge using a USB mains charger. Use of a USB mains charger is permitted when OM-93 is logging meaning that the logger always has battery life and will not need recharging.

## USB Operation

 The OM-93 logger can be configured, data downloaded and further analysed by connection to a PC using a USB cable and the OM-90 Series Data Logger Software. The logger can similarly be configured by the iPhone application and this is described later in this Quick Reference Guide.

Installation of the OM-90 Series Data Logger Software is very simple. The OM-93 needs no special drivers since it is a USB HID device and such devices can make use of the standard drivers that come with Windows. Simply run the application from the included CD or obtain from the Omega website:


In the Windows Start Menu launch the OM-90 Series Data Logger Software.

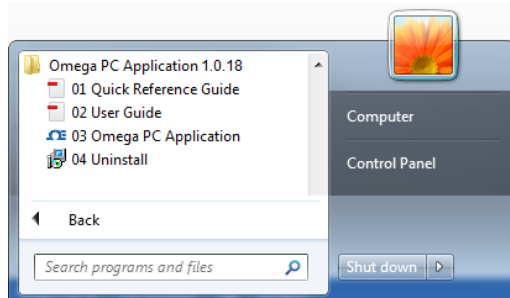

The front page of the GUI is an overview of the logger. Press the Configuration button to get to the next page.



 Connect the logger and you will see the connected indication changes to blue.

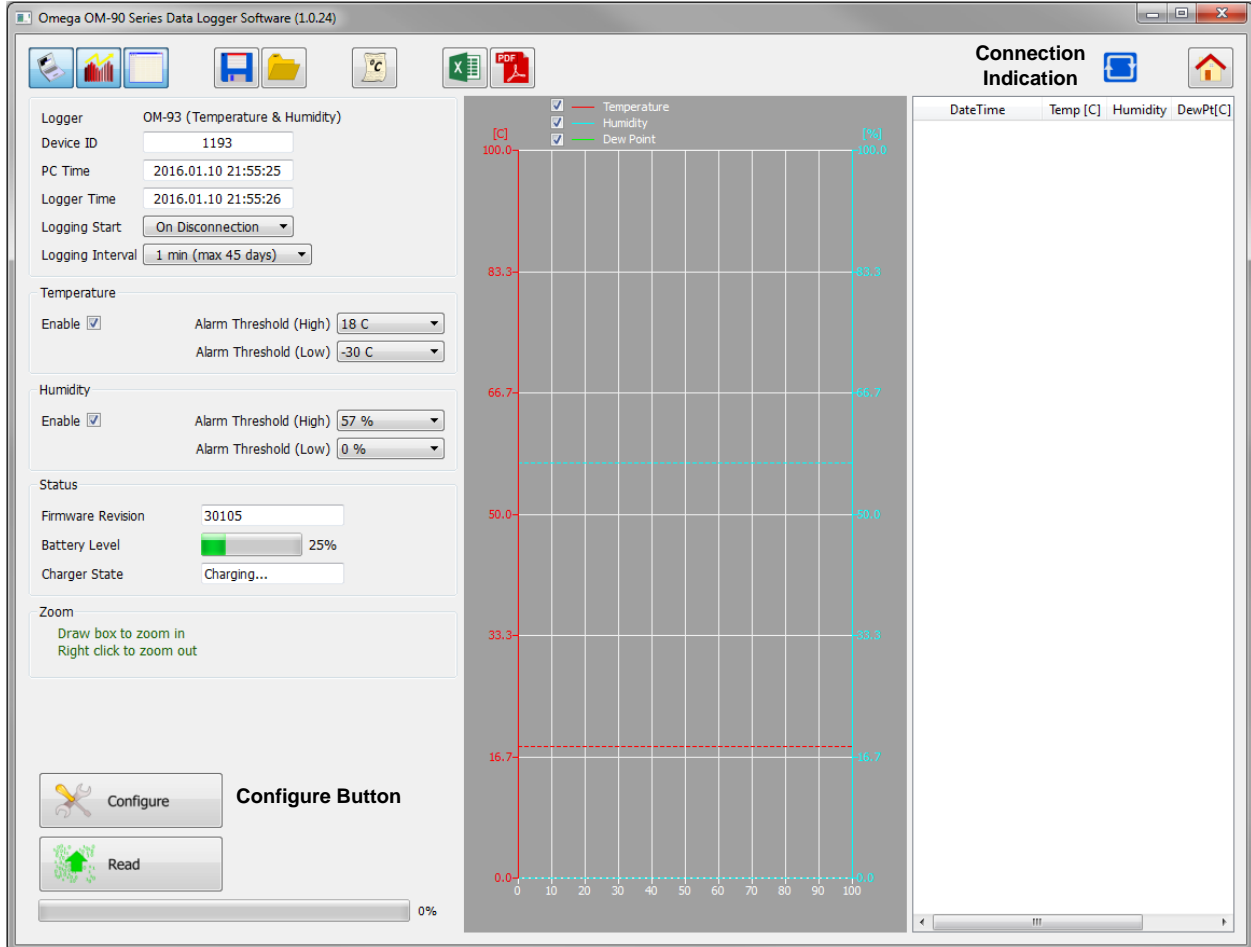

Next fill out the configuration settings. For example:-

- °C or °F
- logging start to "On Disconnection"
- logging interval to say 10 seconds
- temperature alarm enabled and thresholds set
- humidity alarms enabled and thresholds set

Press the "Configure Button" so that the settings are updated in your logger. Please wait until the software has finished updating the logger.

 
Disconnect the logger. You should see that logging will start automatically indicated by a 1 second green light. The green light will then flash every 6 seconds to indicate that the unit is logging. The red light will flash also in the case that the temperature or humidity goes outside of the allowed limits and triggers the alarms.

If the logger becomes full then all lights will stop flashing.

When you have collected data with your OM-93 logger one can reconnect to the PC Application to retrieve the data. Connect your OM-93 logger using the USB cable. The logger red light will illuminate for 1 second indicating logging is stopping.

Start the PC application and navigate to the Configuration page.

Press "Read Logger Configuration/Data" to retrieve the configuration and data from the connected logger. Wait until all information is retrieved from the logger.

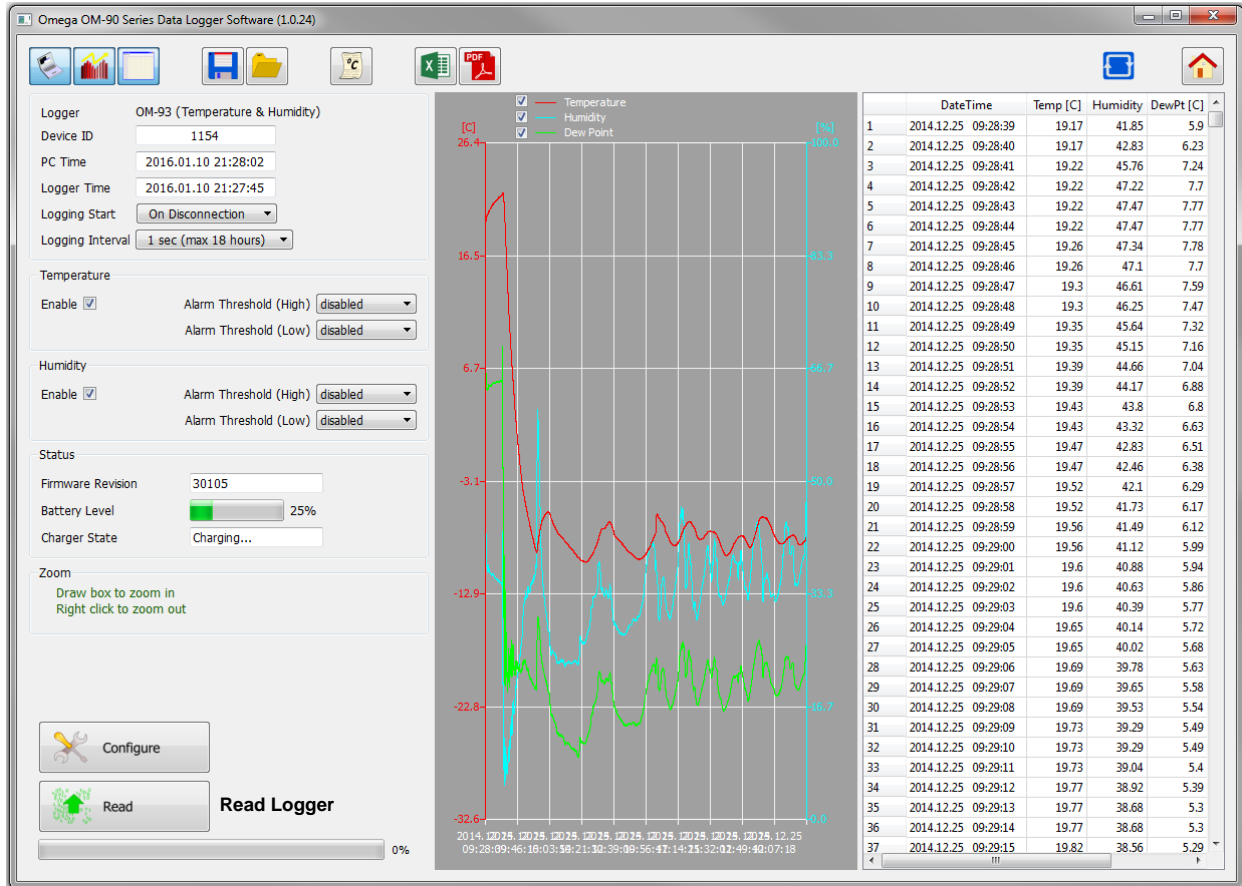

The graph and spread sheet will be filled with the logged data.

Zooming in and out of the graphs can be achieved by the following controls:


- to Zoom In - drag the left mouse button
- to Zoom Out - click the right mouse button
- when zoomed in you can move around using the key-board arrows or the mouse scroll wheel

To write data and configuration to file, press the save icon.

## iPhone Operation

 
The OM-93 logger can be configured, data can be downloaded and further analyzed through wireless connection from an iPhone, iPad or iPad-mini® using the OM-93 iPhone application.

The OM-93 iPhone Application is a free iPhone app found on Apple's App Store. Search for Omega Engineering OM-93 App. Download and install the application.

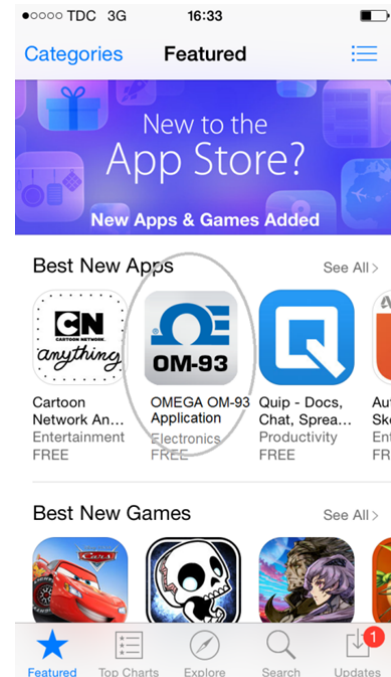


The OM-93 iPhone application requires that the Bluetooth® is enabled for the mobile device. If the application is started and this is not the case then it will first ask to be enabled. Once the OM-93 application is started then there is an option of scanning for all OM-93 loggers. After searching the application will provide a list of all OM-93 devices that can be connected from your mobile device. Select one of these.

 Upon successful connection the logger's Bluetooth® Connected LED turns blue. On the application the connected icon turns green. Also, the application starts showing in real time the temperature and humidity from the logger.

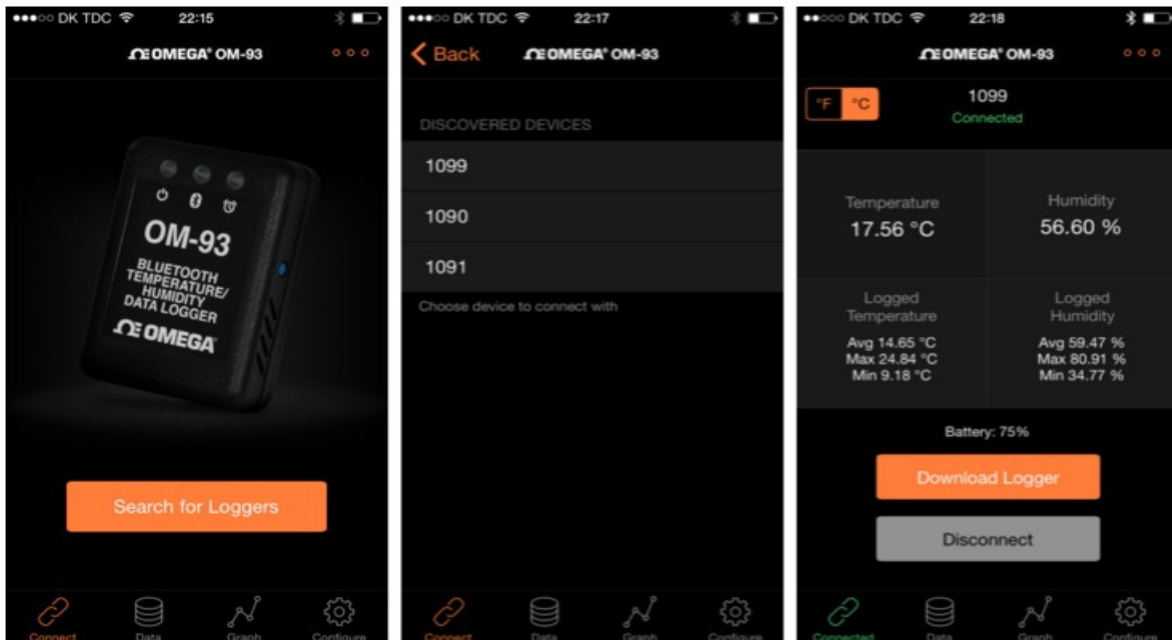

To configure a logger to go to the configure screen. Fill out all desired settings including:

 
- the name of the logger
- the logging start mode
  - on disconnection
  - by button press
  - at specified start time
- the logging interval
- enabling/disabling of temperature logging
- enabling/disabling of humidity logging
- temperature units (Fahrenheit or Celsius)
- temperature alarms levels (upper and lower)
- humidity alarms levels (upper and lower)

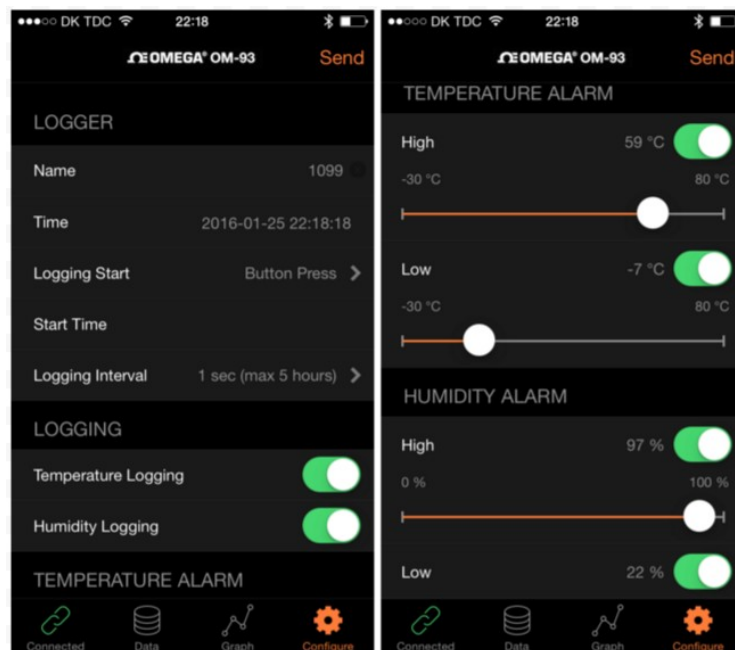


Once all configuration is as required then press Send to download all settings to the logger.

 After connecting to a logger that has collected data for download, select Download Logger from the connected screen. The application then moves to the Data screen and all data appears as a list of sample points collected. Once data is read into the application it is possible to view the data graphically from the Graph screen.



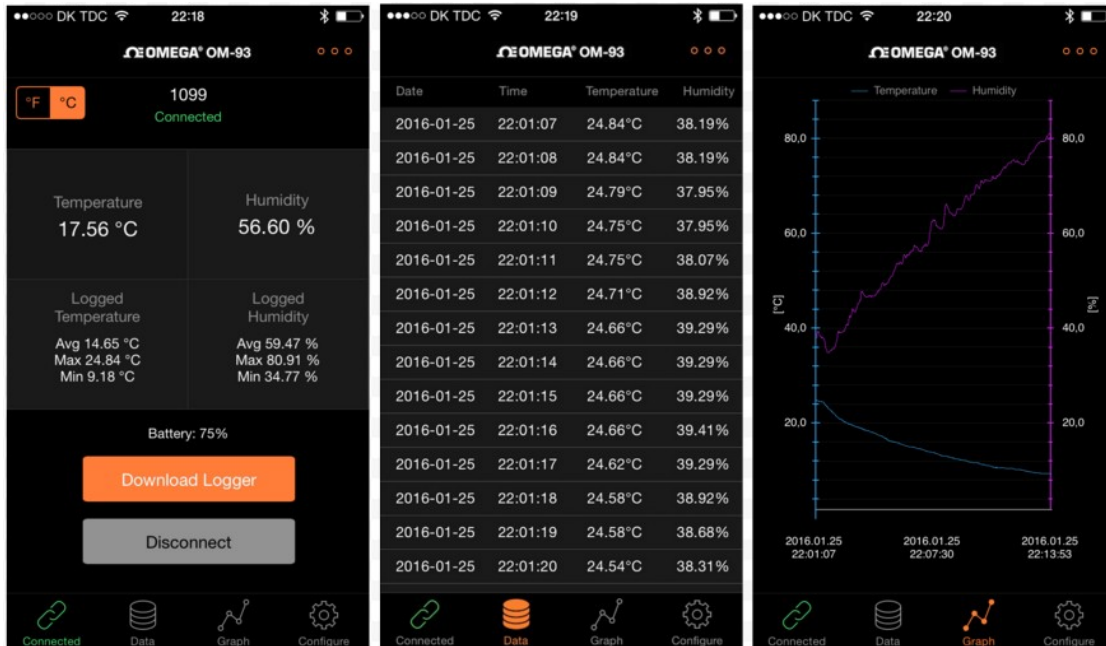

 

Data can be saved to the iPhone from the Data screen. Data can be read back into the application at some later point in time. Data can also be forwarded as an email in the form of a Comma Separated Data file (CSV).

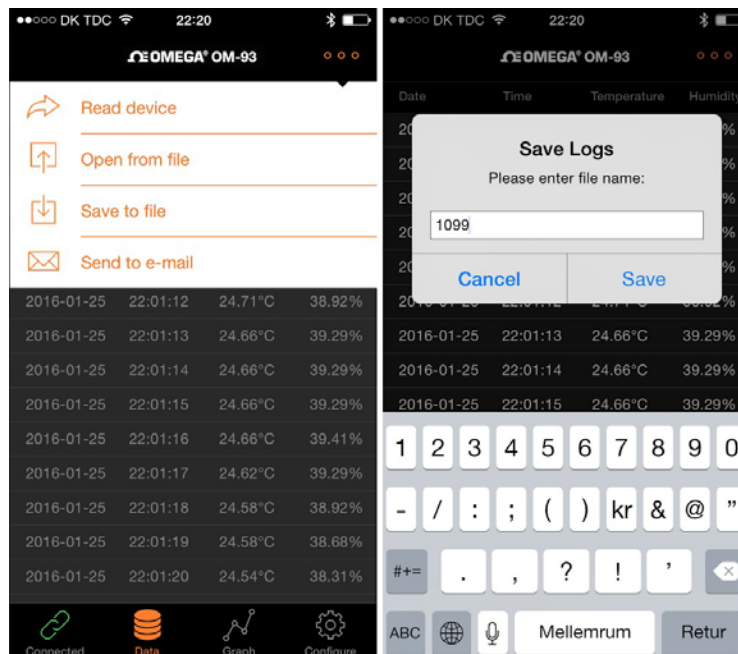

To disconnect from the logger either select Disconnect on the Connected screen or just close the application. The Blue LED will turn off indicating the logger is disconnected. Having the application sent to the background is also sufficient to close the connection to the logger.

### ***More Advanced Topics***

 This document has shown the most basic way to configure the OM-93 logger in order for you to get started very quickly.

There are other logger start modes such as button press, start at a defined time and real time logging. It is also possible to open Microsoft® Excel® directly from the GUI  and write out PDF reports . For a more exhaustive description of all features of the logger then please consult the full OM-93 User Guide included on the CD.

### ***Product Support***

For technical support questions please contact Omega at:

1-800-USA-WHEN (1-800-872-9436)

or via email to [das@omega.com](mailto:das@omega.com)

## WARRANTY/DISCLAIMER

OMEGA ENGINEERING, INC. warrants this unit to be free of defects in materials and workmanship for a period of **13 months** from date of purchase. OMEGA's WARRANTY adds an additional one (1) month grace period to the normal **one (1) year product warranty** to cover handling and shipping time. This ensures that OMEGA's customers receive maximum coverage on each product.

If the unit malfunctions, it must be returned to the factory for evaluation. OMEGA's Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective, it will be repaired or replaced at no charge. OMEGA's WARRANTY does not apply to defects resulting from any action of the purchaser, including but not limited to mishandling, improper interfacing, operation outside of design limits, improper repair, or unauthorized modification. This WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of having been damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA's control. Components in which wear is not warranted, include but are not limited to contact points, fuses, and triacs.

**OMEGA is pleased to offer suggestions on the use of its various products. However, OMEGA neither assumes responsibility for any omissions or errors nor assumes liability for any damages that result from the use of its products in accordance with information provided by OMEGA, either verbal or written. OMEGA warrants only that the parts manufactured by the company will be as specified and free of defects. OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESSED OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. LIMITATION OF LIABILITY: The remedies of purchaser set forth herein are exclusive, and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.**

CONDITIONS: Equipment sold by OMEGA is not intended to be used, nor shall it be used: (1) as a "Basic Component" under 10 CFR 21 (NRC), used in or with any nuclear installation or activity; or (2) in medical applications or used on humans. Should any Product(s) be used in or with any nuclear installation or activity, medical application, used on humans, or misused in any way, OMEGA assumes no responsibility as set forth in our basic WARRANTY/DISCLAIMER language, and, additionally, purchaser will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the Product(s) in such a manner.

## RETURN REQUESTS/INQUIRIES

Direct all warranty and repair requests/inquiries to the OMEGA Customer Service Department. BEFORE RETURNING ANY PRODUCT(S) TO OMEGA, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OMEGA'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS). The assigned AR number should then be marked on the outside of the return package and on any correspondence.

The purchaser is responsible for shipping charges, freight, insurance and proper packaging to prevent breakage in transit.

FOR **WARRANTY** RETURNS, please have the following information available BEFORE contacting OMEGA:

1. Purchase Order number under which the product was PURCHASED,
2. Model and serial number of the product under warranty, and
3. Repair instructions and/or specific problems relative to the product.

FOR **NON-WARRANTY** REPAIRS, consult OMEGA for current repair charges. Have the following information available BEFORE contacting OMEGA:

1. Purchase Order number to cover the COST of the repair,
2. Model and serial number of the product, and
3. Repair instructions and/or specific problems relative to the product.

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering.

OMEGA is a registered trademark of OMEGA ENGINEERING, INC.

© Copyright 2016 OMEGA ENGINEERING, INC. All rights reserved. This document may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without the prior written consent of OMEGA ENGINEERING, INC.

# Where Do I Find Everything I Need for Process Measurement and Control? OMEGA...Of Course! Shop online at [omega.com](http://omega.com)<sup>SM</sup>

## TEMPERATURE

- ☑ Thermocouple, RTD & Thermistor Probes, Connectors, Panels & Assemblies
- ☑ Wire: Thermocouple, RTD & Thermistor
- ☑ Calibrators & Ice Point References
- ☑ Recorders, Controllers & Process Monitors
- ☑ Infrared Pyrometers

## PRESSURE, STRAIN AND FORCE

- ☑ Transducers & Strain Gages
- ☑ Load Cells & Pressure Gages
- ☑ Displacement Transducers
- ☑ Instrumentation & Accessories

## FLOW/LEVEL

- ☑ Rotameters, Gas Mass Flowmeters & Flow Computers
- ☑ Air Velocity Indicators
- ☑ Turbine/Paddlewheel Systems
- ☑ Totalizers & Batch Controllers

## pH/CONDUCTIVITY

- ☑ pH Electrodes, Testers & Accessories
- ☑ Benchtop/Laboratory Meters
- ☑ Controllers, Calibrators, Simulators & Pumps
- ☑ Industrial pH & Conductivity Equipment

## DATA ACQUISITION

- ☑ Data Acquisition & Engineering Software
- ☑ Communications-Based Acquisition Systems
- ☑ Plug-in Cards for Apple, IBM & Compatibles
- ☑ Data Logging Systems
- ☑ Recorders, Printers & Plotters

## HEATERS

- ☑ Heating Cable
- ☑ Cartridge & Strip Heaters
- ☑ Immersion & Band Heaters
- ☑ Flexible Heaters
- ☑ Laboratory Heaters

## ENVIRONMENTAL MONITORING AND CONTROL

- ☑ Metering & Control Instrumentation
- ☑ Refractometers
- ☑ Pumps & Tubing
- ☑ Air, Soil & Water Monitors
- ☑ Industrial Water & Wastewater Treatment
- ☑ pH, Conductivity & Dissolved Oxygen Instruments