


Series 626 & 628 Pressure Transmitters

QUICK START GUIDE


Position: For best accuracy, **mount** with the pressure connection facing downward and use suitable sealants to prevent leaks when making pressure connections.

Maintenance: Series 626 and 628 transmitters are not field repairable but can be if repaired or recalibrated through Dwyer Calibration Services.

Current output

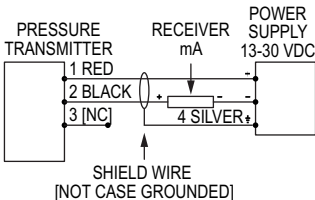

Voltage output

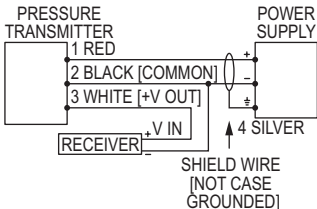

CAUTION

Do not exceed specified supply voltage ratings. Permanent damage not covered by warranty will result. This device is not designed for 120 or 240 VAC operation.



For more information, refer to the user's manual.

Full Manual

Printed in U.S.A. 11/23
FR# 443271-55

©Copyright 2023 Dwyer Instruments, LLC