


Series 626/628-CB Industrial Pressure Transmitters

QUICK START GUIDE


For best accuracy, **install** in a location with the pressure connection downward and use suitable sealants to prevent leaks at the pressure connections.

Wire Length: The maximum length of wire connecting the transmitter and receiver is a function of wire size and receiver resistance (wiring should not contribute to more than 10% of the resistance).

Current output

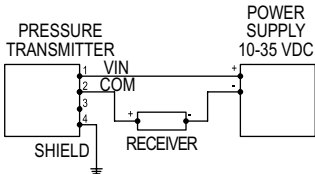

Voltage output

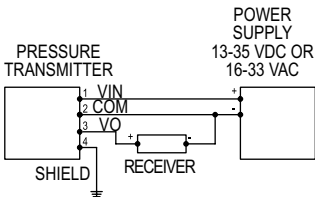

For more information, refer to the user's manual.

CAUTION

Do not exceed specified supply voltage ratings. Permanent damage not covered by warranty will result. This device is not designed for 120 or 240 VAC operation.



Full Manual

Printed in U.S.A. 9/23
FR# 443271-56

©Copyright 2023 Dwyer Instruments, LLC