MEGA ENGINEERING, INC.

Digital Pressure Gauges

DPG1100B Series, NEMA 4X, Battery Powered DPG1100BBL Series, NEMA 4X, Battery Powered w. Backlighting




M3757/1101

Description

The **DPG1100B** and **DPG1100BBL** are designed for portable use or permanent installations where a display of pressure (or vacuum) is required at the press of a button. The temperature compensated piezoresistive transducer features 316 stainless steel wetted parts. All models feature a 3½ digit display with ½" high digits.

Installation Precautions

Tighten/remove with wrench on hex fitting only. Do not attempt to rotate gauge by turning housing. Use fittings appropriate for the pressure range of the gauge. Do not apply vacuum to gauges not designed for vacuum operation. **NEVER** insert objects into the gauge port or blow out with compressed air. Permanent damage not covered by warranty will result.

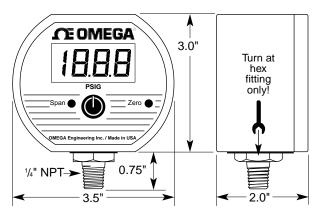

Operation

Press the round button on the front of the gauge to activate the display. It will stay on for a period of time determined by the auto-shutoff time. The gauge can be shut off at any time by pressing the button again. **DPG1100BBL** display backlighting is on whenever the gauge is on.

"LOBAT" will be indicated in the upper left-hand corner of the display when the battery voltage falls sufficiently. The battery should be replaced soon after the LOBAT indicator comes on or unreliable readings may result.

Calibration

Remove the calibration potentiometer covers on the front of the unit to access the zero and span controls.

GAUGE reference units may be rezeroed without affecting the span calibration. The gauge port must be open to the ambient with no pressure or vacuum applied. Adjust the Zero control until the gauge reads zero with the minus (–) sign occasionally flashing.

Span calibration should only be attempted if the user has access to a pressure reference of known accuracy. The calibration equipment should be at least four times the gauge accuracy. Zero calibration

must be done before span calibration. Record readings at three to five points over the range of gauge and adjust span control to minimize error and meet specifications.

○E OMEGA

ABSOLUTE reference gauges require vacuum generation and atmospheric pressure measurement equipment for accurate calibration and thus are more difficult to calibrate in the field.

Gauges may be returned to Omega Engineering for recalibration. N.I.S.T. traceability is available.

Battery Replacement

Remove the 6 Phillips head screws on the back of the unit. Carefully remove batteries from the holders by lifting up the positive end of the battery (opposite the spring). Take care not to bend or distort the battery retention springs. DO NOT discard the old batteries into fire, any other sources of extreme heat, or in any other hazardous manner.

Always replace both batteries at the same time with high quality alkaline batteries. Observe the polarity of the batteries when replacing them. The negative (flat) end of each battery should be inserted first and should face the spring in the battery holder. Replace the back cover, including the rubber sealing gasket.

SPECIFICATIONS

Ranges & Resolution

-30.0 inHg vac to 100.0 psig -30.0 inHg vac to 15.0 psig 30.0 inHg vacuum, ±15.00 psig 3.00, 5.00, 15.00 psig 30.0, 100.0, 199.9 psig 300, 500, 1000 psig Absolute reference: 15.00, 100.0 psia

Optional Units

Most engineering units such as kPa, atm, bar, mbar, inHg, mmHg, inH $_2$ O, ftH $_2$ O, torr, kg/cm 2 , cmH $_2$ O, oz/in 2

Display (type, size, update rate)
3½ digit LCD, ½" digit height
3 readings per second nominal display update
BBL: Red LED backlight

Accuracy (linearity, hysteresis, repeatability) ±0.25% of full scale or better, ±1 least significant digit

Temperature Stability (rel. to 77°F or 25°C)

±1% FS for offset & span, 32 to 158°F (0 to 70°C) typical

±2% FS for offset & span, 32 to 158°F (0 to 70°C) typical for 3 and 5 psi ranges

Controls & Location

Front button turns gauge on or off BBL: Backlighting on when gauge is on Front-accessible calibration potentiometers Non-interactive zero & span, ±10% range

Batteries and Battery Life

Two AA alkaline

B series: approximately 2500 hours BBL series: approximately 180 hours

Low Battery Indication

"LOBAT" on display when batteries must be replaced

Auto Shutoff (5 minutes standard) Factory set to 5, 10, 30 min., or ON/OFF

Weight (approximate)

Gauge: 9 ounces, Shipping weight: 1 pound

Housing

NEMA 4X

UV-stabilized polycarbonate/ABS case Clear polycarbonate window to protect display Gasketed rear cover, 6 captive stainless steel screws

Pressure/Vacuum Connection & Material

 $\ensuremath{^{1\!/}}$ " NPT male, all wetted parts are 316 SS

Overpressure & Burst

5000 psig for equivalent of 3000 psig range 7500 psig for equivalent of 5000 psig range All others 2x rated pressure minimum Burst: 4x rated pressure minimum or 10,000 psi, whichever is less

Storage Temp.: -40 to 203°F (-40 to 95°C)
Operating Temp.: -4 to 185°F (-20 to 85°C)
Compensated Temp.: 32 to 158°F (0 to 70°C)



OMEGAnet On-Line Service www.omega.com

Internet e-mail info@omega.com

FAX: (203) 359-7700

Servicing North America:

USA: One Omega Drive, P.O. Box 4047

ISO 9001 Certified Stamford CT 06907-0047

Canada:

TEL: (203) 359-1660

e-mail: info@omega.com

976 Bergar

Laval (Quebec) H7L 5A1

TEL: (514) 856-6928 e-mail: canada@omega.com

FAX: (514) 856-6886

For immediate technical or application assistance:

USA and Canada: Sales Service: 1-800-826-6342 / 1-800-TC-OMEGA®

Customer Service: $1-800-622-2378 / 1-800-622-BEST^{\circ}$ Engineering Service: $1-800-872-9436 / 1-800-USA-WHEN^{\circ}$ TELEX: 996404 EASYLINK: 62968934 CABLE: OMEGA

Mexico: Tel: (001) 800-826-6342 FAX: (001) 203-359-7807

En Español: (001) 203-359-7803 e-mail: español@omega.com info@omega.com.mx

intoeomega.com

Servicing Europe:

Benelux: Postbus 8034, 1180 LA Amstelveen, The Netherlands

Tel: +31 (0)20 6418405 FAX: +31 (0)20 6434643

Toll Free in Benelux: 06 0993344 e-mail: nl@omega.com

Czech Republic: Rudé armády 1868,73301 Karviná

TEL: +420 (0)69 6311899 FAX: +420 (0)69 6311114

Toll Free in Czech Rep.: 0800-1-66342

e-mail: czech@omega.com

France: 9, rue Denis Papin, 78190 Trappes

TEL: +33 (0)130 621 400 FAX: +33 (0)130 699 120

Toll Free in France: 0800-4-06342 e-mail: france@omega.com

e-man. trance@onlega.com

Germany/Austria: Daimlerstrasse 26, D-75392 Deckenpfronn, Germany TEL: +49 (0)7056 3017 FAX: +49 (0)7056 8540

Toll Free in Germany: 0800 TC OMEGASM

e-mail: germany@omega.com

United Kingdom: P.O. Box 7, Omega Drive,

ISO 9002 Certified Irlam, Manchester,

M44 5EX, United Kingdom

TEL: +44 (0)161 777 6611 FAX: +44 (0)161 777 6622

Toll Free in England: 0800 488 488 e-mail: sales@omega.co.uk

It is the policy of OMEGA to comply with all worldwide safety and EMC/EMI regulations that apply.

OMEGA is constantly pursuing certification of its products to the European New Approach Directives.

OMEGA will add the CE mark to every appropriate device upon certification.

The information contained in this document is believed to be correct but OMEGA Engineering, Inc. accepts no liability for any errors it contains, and reserves the right to alter specifications without notice. WARNING: These products are not designed for use in, and should not be used for, patient connected applications.



WARRANTY/DISCLAIMER

OMEGA ENGINEERING, INC. warrants this unit to be free of defects in materials and workmanship for a period of 13 months from date of purchase. OMEGA's Warranty adds an additional one (1) month grace period to the normal one (1) year product warranty to cover handling and shipping time. This ensures that OMEGA's customers receive maximum coverage on each product.

If the unit should malfunction, it must be returned to the factory for evaluation. OMEGA's Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective it will be repaired or replaced at no charge. OMEGA's WARRANTY does not apply to defects resulting from any action of the purchaser, including but not limited to mishandling, improper interfacing, operation outside of design limits, improper repair, or unauthorized modification. This WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of being damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA's control. Components which wear are not warranted, including but not limited to contact points, fuses, and triacs.

OMEGA is pleased to offer suggestions on the use of its various products. However, OMEGA neither assumes responsibility for any omissions or errors nor assumes liability for any damages that result from the use of its products in accordance with information provided by OMEGA, either verbal or written. OMEGA warrants only that the parts manufactured by it will be as specified and free of defects. OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESSED OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. LIMITATION OF LIABILITY: The remedies of purchaser set forth herein are exclusive and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.

CONDITIONS: Equipment sold by OMEGA is not intended to be used, nor shall it be used: (1) as a "Basic Component" under 10 CFR 21 (NRC), used in or with any nuclear installation or activity; or (2) in medical applications or used on humans. Should any Product(s) be used in or with any nuclear installation or activity, medical application, used on humans, or misused in any way, OMEGA assumes no responsibility as set forth in our basic WARRANTY/DISCLAIMER language, and additionally, purchaser will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the Product(s) in such a manner.

RETURN REQUESTS / INQUIRIES

Direct all warranty and repair requests/inquiries to the OMEGA Customer Service Department. BEFORE RETURNING ANY PRODUCT(S) TO OMEGA, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OMEGA'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS). The assigned AR number should then be marked on the outside of the return package and on any correspondence.

The purchaser is responsible for shipping charges, freight, insurance and proper packaging to prevent breakage in transit.

FOR <u>WARRANTY</u> RETURNS, please have the following information available BEFORE contacting OMEGA:

- 1. P.O. number under which the product was PURCHASED,
- 2. Model and serial number of the product under warranty, and
- 3. Repair instructions and/or specific problems relative to the product.

FOR <u>NON-WARRANTY</u> REPAIRS, consult OMEGA for current repair charges. Have the following information available BEFORE contacting OMEGA:

- 1. P.O. number to cover the COST of the repair,
- 2. Model and serial number of product, and
- Repair instructions and/or specific problems relative to the product.

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering.

OMEGA is a registered trademark of OMEGA ENGINEERING, INC.

© Copyright 2001 OMEGA ENGINEERING, INC. All rights reserved. This document may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without prior written consent of OMEGA ENGINEERING, INC.