

CE

MADE IN
USA

iSeries

User's Guide

Shop on line at

omega.com[®]

Ω OMEGA[®]

omega.com

e-mail: info@omega.com

iSeries info:

www.omega.com/specs/iseries



**iDRA Monitor
iDRA0x-AL Limit Alarm
DIN Rail Temperature/Process
with Isolated Analog Output**



OMEGAnet® On-Line Service www.omega.com	Internet e-mail info@omega.com
--	---

Servicing North America:

USA:
ISO 9001 Certified

One Omega Drive, P.O. Box 4047
Stamford CT 06907-0047
TEL: (203) 359-1660 FAX: (203) 359-7700
e-mail: info@omega.com

Canada:

976 Bergar
Laval (Quebec) H7L 5A1
TEL: (514) 856-6928 FAX: (514) 856-6886
e-mail: info@omega.ca

For immediate technical or application assistance:

USA and Canada:

Sales Service: 1-800-826-6342 / 1-800-TC-OMEGA®
Customer Service: 1-800-622-2378 / 1-800-622-BEST®
Engineering Service: 1-800-872-9436 / 1-800-USA-WHEN®

**Mexico and
Latin American:**

TEL: (001)800-TC-OMEGA® FAX: (001) 203-359-7807
En Español: (001) 203-359-7803
e-mail: espanol@omega.com

Servicing Europe:

Czech Republic:

Frystatska 184, 733 01 Karviná
TEL: +420 59 6311899 FAX: +420 59 6311114
e-mail: info@omegashop.cz

Germany/Austria:

Daimlerstrasse 26, D-75392 Deckenpfronn, Germany
TEL: +49 7056 9398-0 FAX: +49 7056 9398-29
Toll Free in Germany: 0800 639 7678
e-mail: info@omega.de

United Kingdom:
ISO 9002 Certified

One Omega Drive
River Bend Technology Centre
Northbank, Irlam Manchester M44 5BD United Kingdom
TEL: +44 161 777 6611 FAX: +44 161 777 6622
Toll Free in England: 0800 488 488
e-mail: sales@omega.co.uk

It is the policy of OMEGA to comply with all worldwide safety and EMC/EMI regulations that apply. OMEGA is constantly pursuing certification of its products to the European New Approach Directives. OMEGA will add the CE mark to every appropriate device upon certification.

The information contained in this document is believed to be correct, but OMEGA Engineering, Inc. accepts no liability for any errors it contains, and reserves the right to alter specifications without notice.

WARNING: These products are not designed for use in, and should not be used for, patient-connected applications.



This device is marked with the international caution symbol. It is important to read the Setup Guide before installing or commissioning this device as the guide contains important information relating to safety and EMC.

TABLE OF CONTENTS

Part 1: Introduction.....	2
1.1 Description	2
1.2 Safety Considerations	3
1.3 Before You Begin	4
Part 2: Setup.....	5
2.1 Optional Remote Programmer Front Panel View	5
2.2 Front Panel Connections.....	6
2.3 Electrical Installation	7
2.3.1 Power Connections.....	7
2.3.2 Thermocouple - Input Connection.....	8
2.3.3 Two / Three / Four Wire RTD-Hookup.....	9
2.3.4 Process Current - Wiring Hookup.....	10
2.3.5 Process Voltage - Wiring Hookup.....	10
2.3.6 Wiring Outputs - Wiring Hookup.....	11
Part 3: Operation: Configuration Mode	14
3.1 Introduction	14
Turning your Instrument On for the First Time	
Buttons Functions in Configuration Mode	
3.2 Menu Configuration	15
3.2.1 ID Number	16
3.2.2 Set Points.....	17
3.2.3 Configuration Menu	18
3.2.4 Input Type Menu	18
Input Type (Thermocouple)	19
Input Type (RTD).....	20
Input Type (Process)	21
3.2.5 Reading Configuration Menu	22
3.2.6 Analog Output (Retransmission)	26
3.2.7 Alarm 1 Menu (not available).....	28
3.2.8 Alarm 2 Menu.....	28
3.2.9 Reading Adjust Menu/Field Calibration.....	32
3.2.10 ID Code Menu	33
3.2.11 Communication Options Menu	35
3.2.12 Display Color Selection Menu.....	42
Part 4: Specifications	45
Part 5: Factory Preset Values	48
Part 6: CE Approval Information	49

LIST OF FIGURES:

Figure 2.1	Optional Remote Programmer Front Panel Display	5
Figure 2.2	Input and Output Connections	6
Figure 2.3	Main Power Connections	7
Figure 2.4	Thermocouple Wiring Hookup	8
Figure 2.5	Two/Three/Four-wire RTD a) RTD-1000 ohm and 500 ohm Wiring Hookup.....	9
	b) RTD-100 ohm Wiring Hookup.....	9
Figure 2.6	Process Current Wiring Hookup (Internal and External Excitation).....	10
Figure 2.7	Process Voltage Wiring Hookup (with Sensor Excitation and without Sensor Excitation.....	10
Figure 2.8	a) SSR Output – Wiring Hookup.....	11
	b) Mechanical Relay Output – Wiring Hookup	11
Figure 2.9	Pulse Output – Wiring Hookup	11
Figure 2.10	Isolated Analog Output Wiring Hookup	11
Figure 2.11	Snubber Circuits Wiring Hookup.....	12
Figure 2.12	Typical Applications.....	12
Figure 2.13	Communication Outputs: a) RS-232 Output – Wiring Hookup.....	13
	b) RS-485 Output – Wiring Hookup.....	13
Figure 2.14	Excitation Output	13
Figure 3.1	Flow Chart for ID and Set Points Menu.....	15
Figure 3.2	Flow Chart for Configuration Menu.....	18
Figure 3.3	Flow Chart for Input Type Menu	18
Figure 3.4	Flow Chart for Reading Configuration Menu.....	22
Figure 3.5	Flow Chart for Analog Output Retransmission	26
Figure 3.6	Flow Chart for Alarm 2 Menu	28
Figure 3.7	Flow Chart for Reading Adjust Menu/Field Calibration	32
Figure 3.8	Flow Chart for ID Code Menu.....	33
Figure 3.9	Flow Chart for Communication Option Menu.....	35
Figure 3.10	Flow Chart for Display Color Selection Menu	42

LIST OF TABLES:

Table 2.1	Optional Remote Programmer Front Panel Annunciators	5
Table 2.2	Connectors	6
Table 2.3	Fuse Requirements.....	7
Table 2.4	TC Wire Color Chart.....	8
Table 3.1	Button Function in Configuration Mode	14
Table 3.2	Conversion Table	25
Table 4.1	Input Properties.....	47
Table 5.1	Factory Preset Values.....	48

NOTES, WARNINGS and CAUTIONS

Information that is especially important to note is identified by following labels:

- **NOTE**
- **WARNING or CAUTION**
- **IMPORTANT**
- **TIP**



Note E3

NOTE: Provides you with information that is important to successfully setup and use the Programmable Digital Meter.



CAUTION or WARNING: Tells you about the risk of electrical shock.



CAUTION, WARNING or IMPORTANT: Tells you of circumstances or practices that can effect the instrument's functionality and must refer to accompanying documents.



Tip E3

TIP: Provides you helpful hints.

PART 1

INTRODUCTION

1.1 Description

Note

This device can be purchased as a controller, with outputs or as a signal conditioner.

- The iSeries offers unparalleled flexibility in process measurement. Each unit allows the user to select the input type, from 10 thermocouple types (J, K, T, E, R, S, B, C, N and J DIN), Pt RTDs (100, 500 or 1000 Ω , with either 385 or 392 curve), DC voltage, or DC current. The voltage/current inputs are fully scalable to virtually all engineering units, with selectable decimal point, perfect for use with pressure, flow or other process input.
- The standard features include isolated analog voltage and current output. Options include programmable RS-232 or RS-485 serial communication or excitation. Analog Output is fully scaleable and configured as retransmission to follow your display. Universal power supply accepts 90 to 240 Vac. Low voltage power option accepts 24 Vac or 20 to 36 Vdc.
- The optional Remote Programmer features a large, three color programmable display with capability to change a color every time the Alarm is triggered.

1.2 Safety Considerations



This device is marked with the **International Caution Symbol**. It is **important to read** this manual before installing or commissioning this device as it contains important information relating to **Safety and EMC** (Electromagnetic Compatibility).

This instrument is a panel mount device protected in accordance with EN 61010-1:2001, electrical safety requirements for electrical equipment for measurement, control and laboratory. Installation of this instrument should be done by qualified personnel. In order to ensure safe operation, the following instructions should be followed.



This instrument has **no power-on switch**. An external **switch or circuit-breaker** shall be included in the building installation as a disconnecting device. It shall be marked to indicate this function, and it shall be in close proximity to the equipment within easy reach of the operator. The switch or circuit-breaker shall meet the relevant requirements of IEC 947-1 and IEC 947-3 (International Electrotechnical Commission). The switch shall not be incorporated in the main supply cord.



Furthermore, to provide protection against **excessive energy** being drawn from the main supply in case of a fault in the equipment, an **overcurrent** protection device shall be installed.



- Do not exceed voltage rating on the label located on the top of the instrument housing.
- Always disconnect power before changing signal and power connections.
- Do not use this instrument on a work bench without its case for safety reasons.
- Do not operate this instrument in flammable or explosive atmospheres.
- Do not expose this instrument to rain or moisture.
- Unit mounting should allow for adequate ventilation to ensure instrument does not exceed operating temperature rating.
- Use electrical wires with adequate size to handle mechanical strain and power requirements. Install without exposing bare wire outside the connector to minimize electrical shock hazards.

EMC Considerations

- Whenever EMC is an issue, always use shielded cables.
- Never run signal and power wires in the same conduit.
- Use signal wire connections with twisted-pair cables.
- Install Ferrite Bead(s) on signal wires close to the instrument if EMC problems persist.

Failure to follow all instructions and warnings may result in injury!

1.3 Before You Begin

Inspecting Your Shipment:

Remove the packing slip and verify that you have received everything listed. Inspect the container and equipment for signs of damage as soon as you receive the shipment. Note any evidence of rough handling in transit. Immediately report any damage to the shipping agent. The carrier will not honor damage claims unless all shipping material is saved for inspection. After examining and removing the contents, save the packing material and carton in the event reshipment is necessary.

Customer Service:

If you need assistance, please call the nearest Customer Service Department, listed in this manual.

Manuals, Software:

The latest Operation and Communication Manual as well as free configuration software are available at **the website listed on the cover page of this manual or on the CD-ROM enclosed with your shipment.**




For first-time users: Refer to the QuickStart Manual for basic operation and set-up instructions.




The following steps in this manual for configuring your device are explained by using the optional **Remote Programmer Display (iDRP)**. If you have the **Serial Communications Option (-C24)** you can easily configure the controller on your computer or on-line.

To Reset the Meter:

When the monitor is in the "MENU" Mode, **push  once** to direct monitor one step backward of the top menu item.



Push  twice to reset monitor, prior to resuming "Run" Mode except after "Set Points" and "Alarms", that will go to the "Run" Mode without resetting the monitor.

PART 2 SETUP

2.1 Optional Remote Programmer Front Panel

Note Refer to the Quick Start Guide for assembly and disassembly instructions.

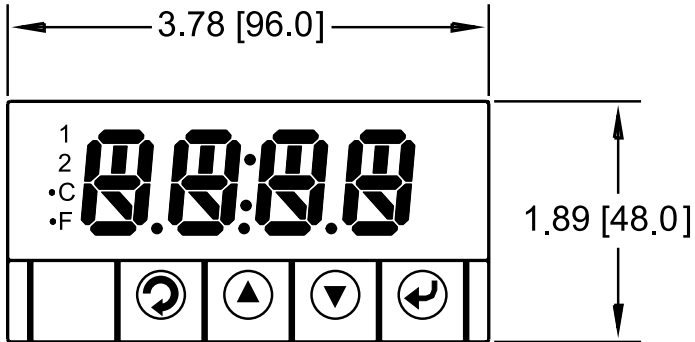






Figure 2.1 Optional Remote Programmer Front Panel Display

Table 2.1
Optional Remote Programmer Front Panel Annunciators

1	Setpoint 1/ Alarm 1 indicator (inactive)
2	Setpoint 2/ Alarm 2 indicator
°C	°C unit indicator
°F	°F unit indicator
	Changes display to Configuration Mode and advances through menu items*
	Used in Program Mode and Peak Recall*
	Used in Program Mode and Valley Recall*
	Accesses submenus in Configuration Mode and stores selected values*

* See Part 3 Operation: Configuration Mode

2.2 Front Panel Connections

The front panel connections are shown in **Figures 2.2 and 2.3**.

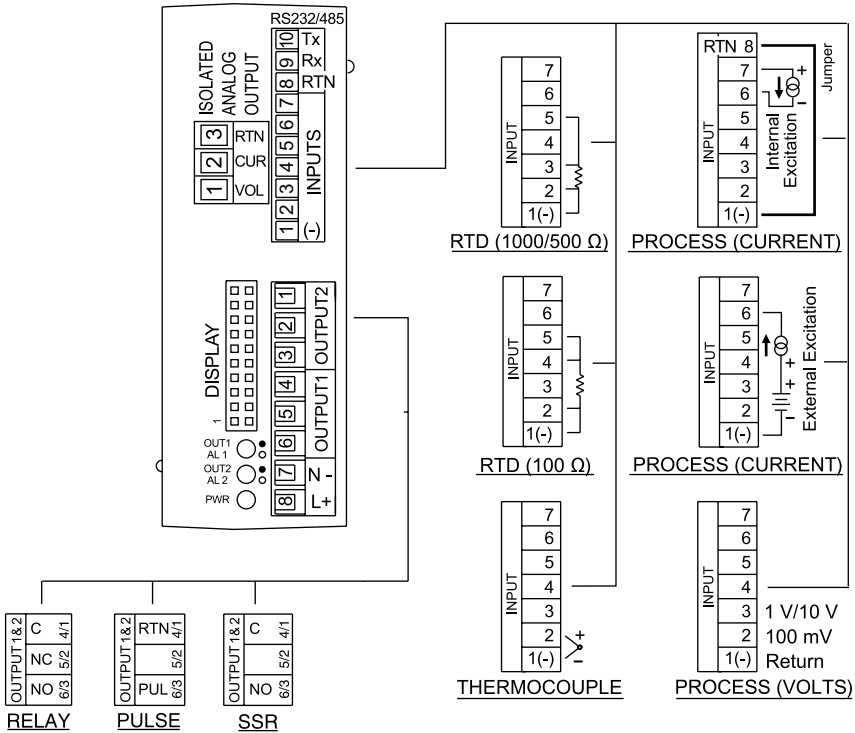


Figure 2.2 Input and Output Connections

Table 2.2 Connectors

POWER	AC/DC Power Connector: All models
INPUT	Input Connector: All models TC, PR (Process), RTD
OUTPUT 1	Not available.
OUTPUT 2	Based on one of the following models: Relay SPDT Solid State Relay Pulse For -AL Alarm Option only
OUTPUT 3	Isolated Analog (Output Voltage and Current)
OPTION	Based on one of the following models: RS-232C and RS-485 Excitation



Note Output 2 is for -AL Alarm Option only.

2.3 Electrical Installation

2.3.1 Power Connections

Caution: Do not connect power to your device until you have completed all input and output connections. Failure to do so may result in injury!

Connect the main power connections as shown in the figure below.

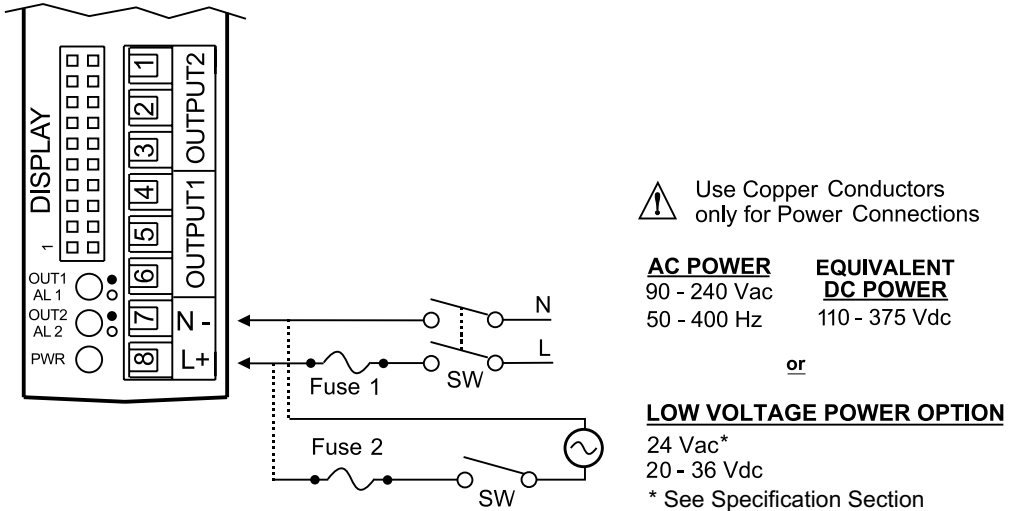


Figure 2.3 Main Power Connections

Table 2.3 Fuse Requirement (see specifications)

FUSE	Connector	Output Type	For 115Vac	For 230Vac	DC
FUSE 1	Power	N/A	100 mA(T)	63 mA(T)	63 mA(T)
FUSE 2	Power	N/A	N/A	N/A	400 mA(T)

Caution: For the low voltage power option, in order to maintain the same degree of protection as the standard high voltage input power units (90 - 240 Vac), always use a Safety Agency Approved DC or AC source with the same Overvoltage Category and pollution degree as the standard AC unit (90 - 240 Vac).

Note The Safety European Standard EN61010-1 for measurement, control, and laboratory equipment requires that fuses must be specified based on IEC127. This standard specifies for a Time-lag fuse, the letter code "T". The above recommended fuses are of the type IEC127-2-sheet III. Be aware that there are significant differences between the requirements listed in the UL 248-14/CSA 248.14 and the IEC 127 fuse standards. As a result, no single fuse can carry all approval listings. A 1.0 Amp IEC fuse is approximately equivalent to a 1.4 Amp UL/CSA fuse. It is advised to consult the manufacturer's data sheets for a cross-reference.

2.3.2 Thermocouple Input

The figure below shows the wiring hookup for any thermocouple type.

For example, for Type K hookup, connect the yellow wire to the "2" terminal and the red wire to the "1(-)" terminal.

When configuring your controller, select **Thermocouple** and **Thermocouple Type** in the Input Type menu (see **Part 3**).

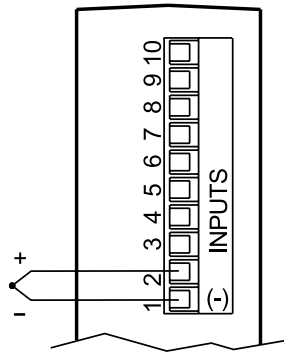


Figure 2.4 Thermocouple Wiring Hookup

Table 2.4 TC Wire Color Chart

TYPE	Input Connector		Jacket (external insulation)	
	Terminal 1 (-)	Terminal 2 (+)	Extension	Grade
J	Red	White	dark-Brown	Black
K	Red	Yellow	dark-Brown	Yellow
T	Red	Blue	dark-Brown	Blue
E	Red	Purple	dark-Brown	Purple
N	Red	Orange	dark-Brown	Brown
R	Red	Black	-	Green
S	Red	Black	-	Green
B	Red	Gray	-	Black



If the input wires of the meter get disconnected or broken, it will display **LOPIN** "Input (+) Open" message. For safety purpose you may want to set up your alarm to be triggered when input is open. See Alarm 1 and 2 chapters for details.

2.3.3 Two/Three/Four-Wire RTD

The figures below show the input connections and input connector jumpers (shown in bold lines) required to hookup a 2-, 3- or 4-wire RTD.

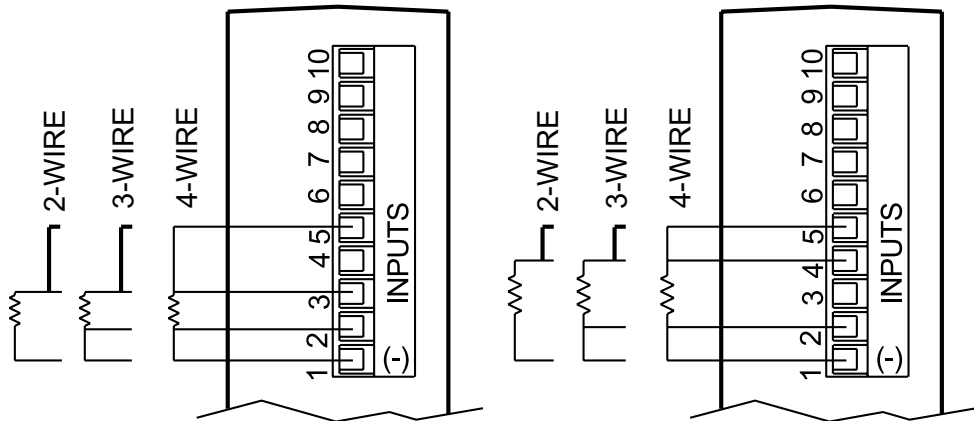


Figure 2.5 a) RTD-1000 ohm and 500 ohm Wiring Hookup

b) RTD-100 ohm Wiring Hookup

The **two-wire** connection is simplest method, but does not compensate for lead-wire temperature change and often requires calibration to cancel lead-wire resistance offset.

The **three-wire** connection works best with RTD leads closely equal in resistance. The device measures the RTD, plus upper and lower lead drop voltage and the subtracts twice the measured drop in the lower supply current lead producing excellent lead-resistance cancellation for balanced measurements.

The **four-wire** RTD hookup is applicable to unbalanced lead resistance and enables the device to measure and subtract the lead voltage, which produces the best lead-resistance cancellation.


When configuring your controller, select **RTD Type** and **RTD value** in the Input Type menu (see **Part 3**).

Note

If the input wires of the meter get disconnected or broken, it will display **-OPN** "Input (+) Open" message except in case of 500/1000 Ω 2-wire RTD. In this case the display shows **-OPN** "Input (-) Open" message. For safety purpose you may want to set up your alarm to be triggered when input is open. See Alarm 1 and 2 chapters for details.

2.3.4 Process Current

The figure below shows the wiring hookup for Process Current 0 – 20 mA.

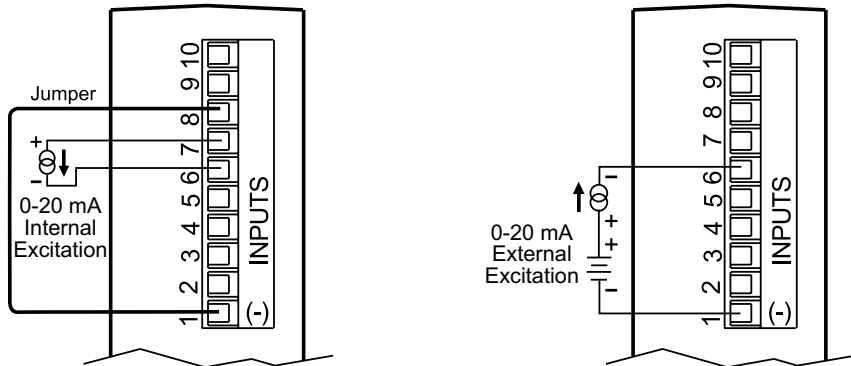


**Figure 2.6 Process Current Wiring Hookup
(Internal and External Excitation)**

When configuring your instrument, select **Process Type** in the Input Type Menu (see **Part 3**).

2.3.5 Process Voltage

The figure below shows the wiring hookup for Process Voltage 0 – 100 mV, 0 – 1 V, 0 – 10 V.

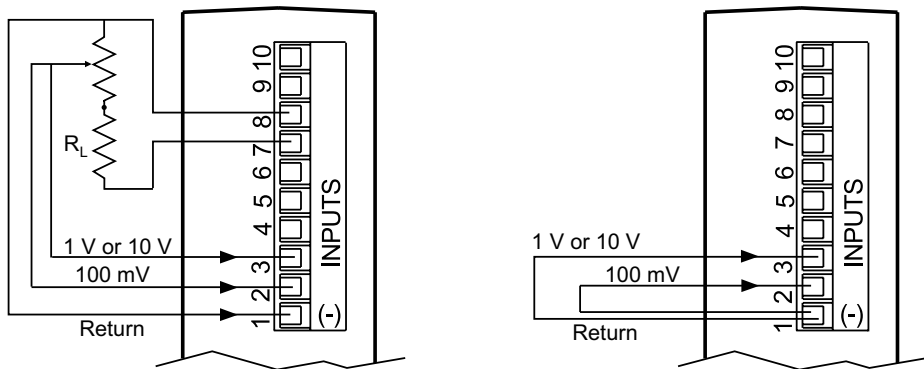

**Figure 2.7 Process Voltage Wiring Hookup
(with Sensor Excitation and without Sensor Excitation)**

R_L - Voltage limited resistor, which allows to convert 24 Vdc internal excitation voltage to the appropriate process input value. For instance: if the potentiometer value is equal to 10 k Ω , the minimum R_L is 14 k Ω for 10 V process input.

When configuring your instrument, select **Process Type** in the Input Type Menu (see **Part 3**).

2.3.6 Wiring Outputs

This meter, if ordered with the -AL Alarm Option has one factory installed output, located at "Output 2". The SPDT Mechanical Relay, SPST Solid State Relay and Pulse Output Connection are shown below.

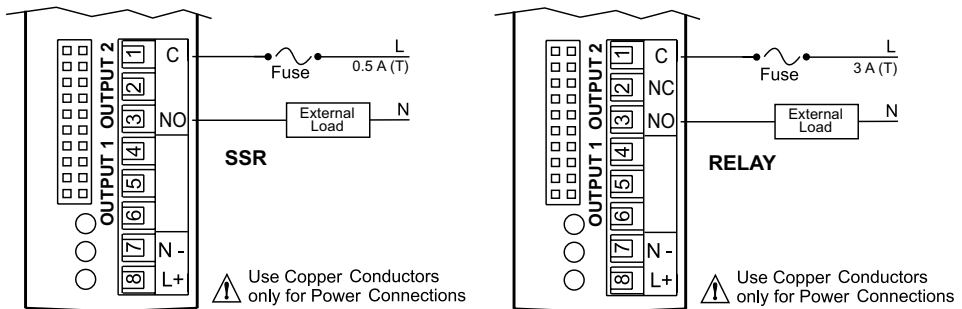


Figure 2.8
a) SSR Outputs Wiring Hookup

b) Mechanical Relay Wiring Hookup

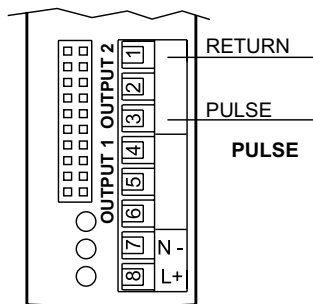


Figure 2.9 Pulse Outputs Wiring Hookup

The standard factory installed Isolated Analog Output (retransmission) voltage and current connections are shown below.

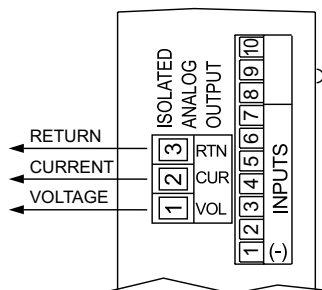


Figure 2.10 Isolated Analog Output Wiring Hookup.

This device has snubber circuits designed to protect the contacts of the mechanical relays when it switches to inductive loads (i.e. solenoids, relays). These snubbers are internally connected between the Common (C) and Normally Open (NO) relay contacts of Output 2.

Note If you have an inductive load connected between Common (C) and Normally Closed (NC) contacts of the mechanical relays and you want to protect them from the rush current during the switching period, you have to connect an external snubber circuit between Common (C) and Normally Closed (NC) contacts as indicated in the figure below.



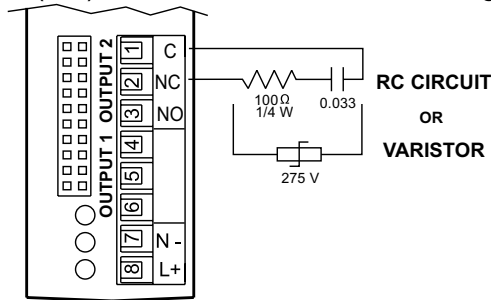


Figure 2.11 Snubber Circuits Wiring Hookup

dc CONTROLLED SSR USED WITH TEMPERATURE CONTROLLER WITH dc VOLTAGE SSR DRIVER OUTPUT

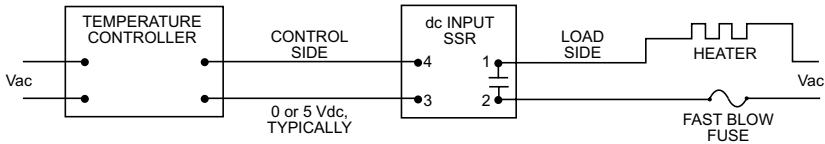

ac CONTROLLED SSR USED WITH TEMPERATURE CONTROLLER WITH MECHANICAL RELAY OUTPUT

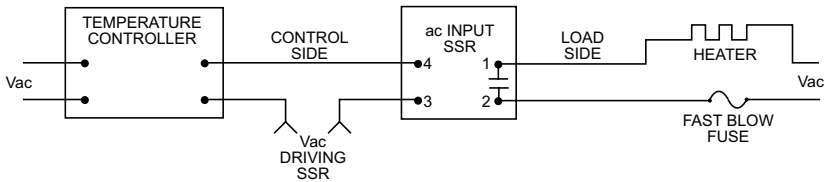

ac CONTROLLED SSR USED WITH TEMPERATURE CONTROLLER WITH TRIAC OUTPUT

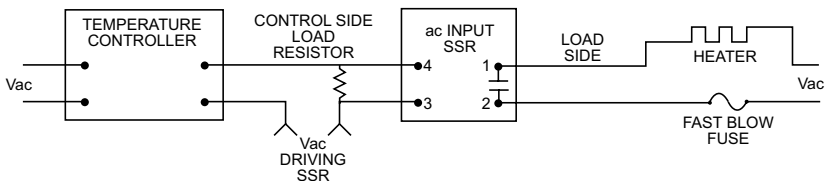


Figure 2.12 Typical Applications

This device may have a programmable serial communication output. The RS-232 and RS-485 Output Connections are shown below.


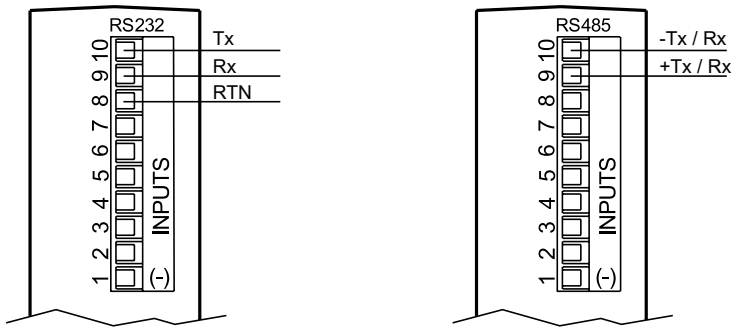


Figure 2.13 Serial Communication
a) RS-232 Output Wiring Hookup b) RS-485 Output Wiring Hookup

This device has built-in excitation. The connections are shown below.

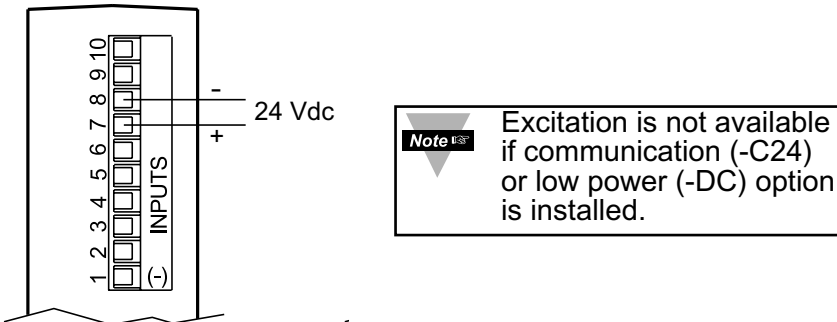

Note ¹⁰³² Excitation is not available if communication (-C24) or low power (-DC) option is installed.

Figure 2.14 Excitation Output

PART 3

OPERATION: Configuration Mode

3.1 Introduction



The instrument has two different modes of operation. The first, Run Mode, is used to display values for the Process Variable, and to display or clear Peak and Valley values. The other mode, Menu Configuration Mode, is used to navigate through the menu options and configure the instrument. Part 3 of this manual will explain the Menu Configuration Mode. For your instrument to operate properly, the user must first "program" or configure the menu options.

Turning your Instrument On for the First Time



















The device becomes active as soon as it is connected to a power source. It has no On or Off switch. The device at first momentarily shows the software version number, followed by reset **RESET**, and then proceeds to the Run Mode.



For first-time users: Refer to the QuickStart Manual for basic operation and set-up instructions.

If you have the Serial Communications Option you can easily configure the controller on your computer.

Table 3.1 Button Function in Configuration Mode

 MENU	<ul style="list-style-type: none">• To enter the Menu, the user must first press  button.• Use this button to advance/navigate to the next menu item. The user can navigate through all the top level menus by pressing .• While a parameter is being modified, press  to escape without saving the parameter.
 (UP)	<ul style="list-style-type: none">• Press the up  button to scroll through "flashing" selections. When a numerical value is displayed press this key to increase value of a parameter that is currently being modified.• Holding the  button down for approximately 3 seconds will speed up the rate at which the set point value increments.• In the Run Mode press  causes the display to flash the PEAK value – press again to return to the Run Mode.
 (DOWN)	<ul style="list-style-type: none">• Press the down  button to go back to a previous Top Level Menu item.• Press this button twice to reset the monitor to the Run Mode.• When a numerical value is flashing (except set point value) press  to scroll digits from left to right allowing the user to select the desired digit to modify.• When a setpoint value is displayed press  to decrease value of a setpoint that is currently being modified. Holding the  button down for approximately 3 seconds will speed up the rate at which the setpoint value is decremented.• In the Run Mode press  causes the display to flash the VALLEY value – press again to return to the Run Mode.
 ENTER	<ul style="list-style-type: none">• Press the enter  button to access the submenus from a Top Level Menu item.• Press  to store a submenu selection or after entering a value — the display will flash a SET message to confirm your selection.• To reset flashing Peak or Valley press .



Reset: Except for Alarms, modifying any settings of the menu configuration will reset the instrument prior to resuming Run Mode.

3.2 Menu Configuration

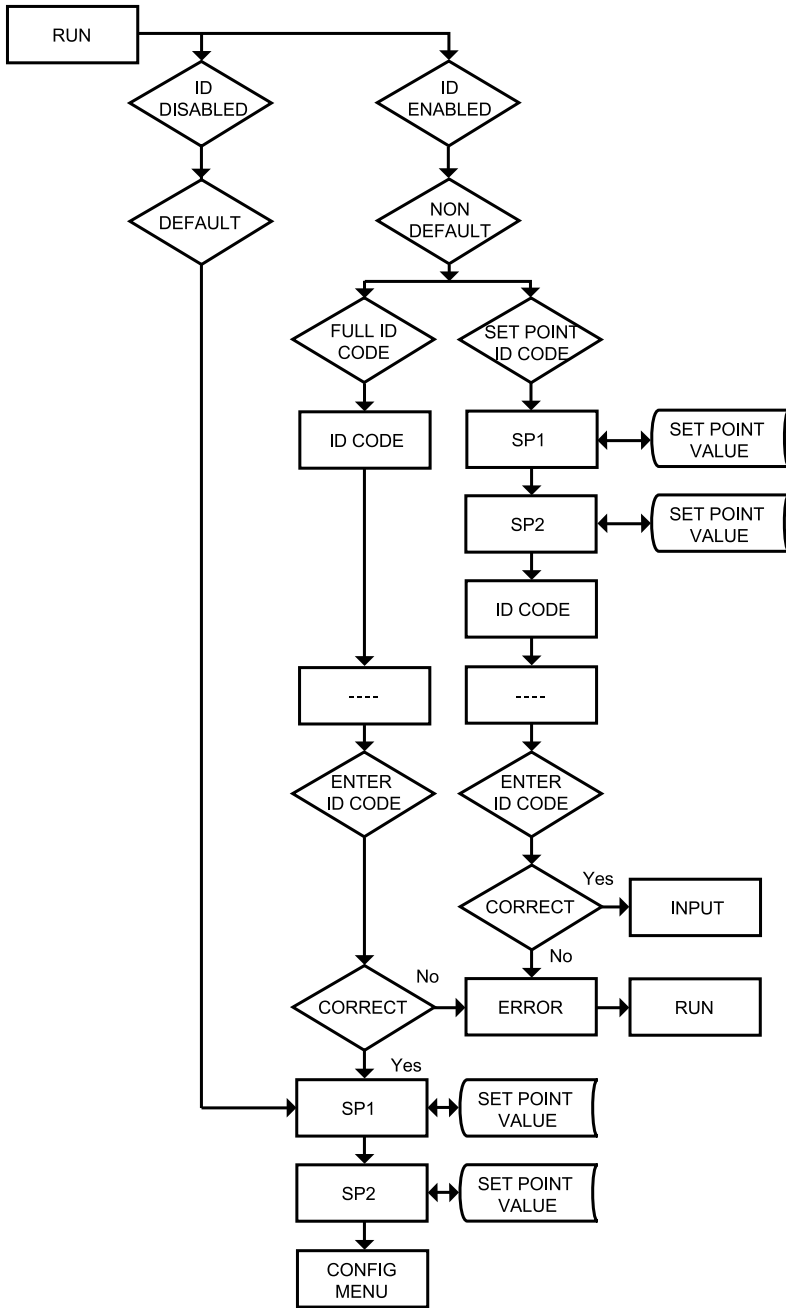


Figure 3.1 Flow Chart for ID and Set Points

3.2.1 ID Number

SEE ID MENU SELECTION IN CONFIGURATION SECTION FOR ENABLE/DISABLE OR CHANGE ID CODE.










Note 

If ID Code is **Disabled** or set as **Default** **0000** the menu will skip ID step to Set Point Menu.

If ID Code is set to **Full Security Level** and user attempts to enter the Main Menu, they will be prompted for an ID Code.

If ID Code is set to **Setpoint/ID Security Level** and user attempts to enter the Configuration Menu, they will be prompted for an ID Code.









ENTERING YOUR NON-DEFAULT FULL SECURITY ID NUMBER.

- Press  1) Display shows **ID**.
- Press  2) Display advances to **----**.
- Press  &  3) Press  to increase digit 0-9. Press  to activate next digit (flashing). Continue to use  and  to enter your 4-digit ID code.
- Press  4) If the correct ID code is entered, the menu will advance to the Setpoint 1 Menu, otherwise an error message **ERR** will be displayed and the instrument will return to the Run Mode.

Note 

To change ID Code, see ID Menu in the Configuration section.

ENTERING YOUR NON-DEFAULT SETPOINT/ID SECURITY ID NUMBER.

- Press  5) Display shows **SP2** Setpoint 2 Menu.
- Press  6) Display shows **ID** ID Code Menu.
- Press  7) Display advances to **----**.
- Press  &  8) Use  and  to change your ID Code.
- Press  9) If correct ID Code is entered, the display will advance to the **INPE** Input Menu, otherwise the error message **ERR** will be displayed and the instrument will return to the Run Mode.

Note 

To prevent unauthorized tampering with the setup parameters, the instrument provides protection by requiring the user to enter the ID Code before allowing access to subsequent menus. If the ID Code entered does not match the ID Code stored, the instrument responds with an error message and access to subsequent menus will be denied.

Tip 

Use numbers that are easy for you to remember. If the ID Code is forgotten or lost, call customer service with your serial number to access and reset the default to **0000**.

3.2.2 Set Points

SETPOINT 2:

Note

For this model with isolated Analog Output the Setpoint 1 is inactive.

- Press **↻** 1) Press **↻**, if necessary until **SP2** prompt appears.
Press **↻** 2) Display shows previous value of "Setpoint 2" with 1st digit flashing.
Press **▲** & **▼** 3) Press **▲** and **▼** to increase or decrease Setpoint 2 respectively.

Note

Holding **▲** & **▼** buttons down for approximately 3 seconds will speed up the rate at which the setpoint value increments or decrements.

- Press **↻** 4) Display shows **SEtP** stored message momentarily and then advances to **CONF** only, if a change was made, otherwise press **↻** to advance to **CONF** Configuration Menu.

3.2.3 Configuration Menu

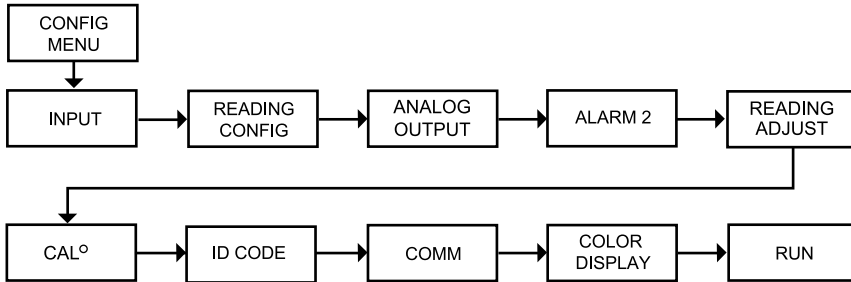


Figure 3.2 Flow Chart for Configuration Menu

Enter Configuration Menu:

- Press 1) Press , if necessary, until **ENFG** prompt appear.
 Press 2) Display advance to **INPE** Input Menu.
 Press 3) Pressing and releasing to scroll through all available menus of Configuration section.

3.2.4 Input Type Menu

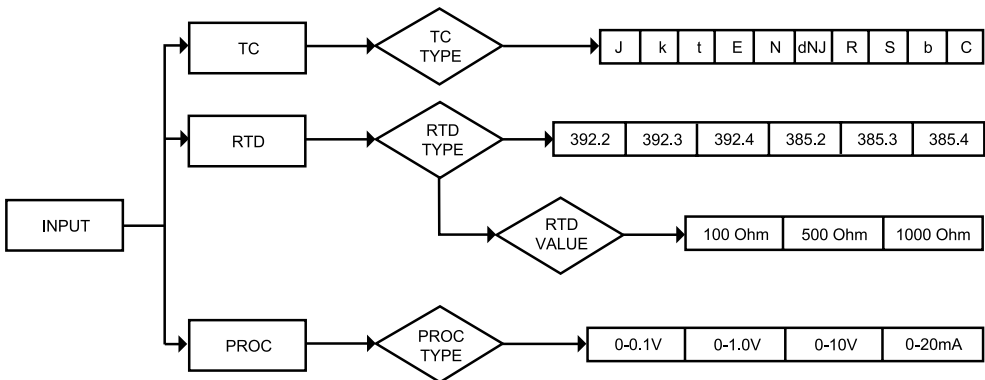












Figure 3.3 Flow Chart for Input Type Menu

Input Type (Thermocouple)

ENTER INPUT TYPE MENU:

- Press  1) Press , if necessary, until **CONF** prompt appears.
- Press  2) Display advance to **INPE** Input Menu.
- Press  3) Display flashes **E.c**, **RTd** or **PROC** (Thermocouple, RTD or Process). If the displayed input type is **E.c**, press  to skip to step 6 (**E.c** stops flashing).

THERMOCOUPLE SUBMENU:

- Press  4) Scroll through the available selection to **E.c** (flashing).
- Press  5) Display shows **SEEd** stored message momentarily and then **E.c** (not flashing).
- Press  6) Display flashes previous thermocouple type selection. i.e. **J** (see below for types).
- Press  7) Scroll through the available thermocouple types to the selection of your choice.
- Press  8) Display shows **SEEd** stored message momentarily and then advances to the **RDG** Reading Configuration Menu.

Note 

Use the Input Type (Thermocouple) (RTD) or (Process) and verify your Electrical Installation (see **Section 2.3**). See the following pages for (TC), (RTD), (Process) menus.

Thermocouple Types: J, K, T, E, N, DIN J, R, S, B, C
Display:           

Input Type (RTD)

ENTER INPUT TYPE MENU:

- Press 1) Press , if necessary, until **CNF0** prompt appears.
- Press 2) Display advances to **INPE** Input Menu.
- Press 3) Display flashes **E.C**, **RTd** or **PROC** (Thermocouple, RTD or Process). If the displayed input type is **RTd**, press to skip to step 6 (**RTd** stops flashing).

RTD SUBMENU:

- Press 4) Scroll through the available selection to **RTd** (flashing).
- Press 5) Display shows **SERTd** stored message momentarily and then **RTd** (not flashing).
- Press 6) Display flashes previous RTD type selection i.e. **392.2** (see below for RTD types selection).
- Press 7) Scroll through the available RTD types to the selection of your choice.
- Press 8) Display shows **SERTd** stored message momentarily and then advances to **RTd** RTD value.

RTD Types: 392 385 Two, Three or Four-wire
 Display: **392.2**, **392.3**, **392.4**, **385.2**, **385.3**, **385.4**



Last digit indicates: 2-, 3- or 4-wire input.

RTD VALUE SUBMENU:

- Press 9) Display flashes previous RTD value selection i.e. **100.** (see below for RTD value selection).
- Press 10) Scroll through the available RTD values to the selection of your choice.
- Press 11) Display shows **SERTd** stored message momentarily and then advances to **RDG** Reading Configuration Menu.

RTD Values: 100 ohm 500 ohm 1000 ohm
 Display: **100.** **500.** **1000**

Input Type (Process)

ENTER INPUT TYPE MENU:

- Press **↻** 1) Press **↻**, if necessary, until **CONF** prompt appears.
- Press **↻** 2) Display advance to **INPE** Input Menu.
- Press **↻** 3) Display flashes **t.c.**, **Rtd** or **PROC** (Thermocouple, RTD or Process). If the displayed input type is **PROC**, press **↻** to skip to step 6 (**PROC** stops flashing).

PROCESS SUBMENU:

- Press **▲** 4) Scroll through the available selection to **PROC** (flashing).
- Press **↻** 5) Display shows **SEEd** stored message momentarily and then **PROC** (not flashing).
- Press **↻** 6) Display flashes previous Process type selection. i.e. **0-10** (see below for Process types selection).
- Press **▲** 7) Scroll through the available Process types to the selection of your choice.
- Press **↻** 8) Display shows **SEEd** stored message and then advances to **RdC** Reading Configuration Menu.

Process Types: 100 mV 1 V 10 V 0 – 20 mA
Display: **0-0.1** **0-1.0** **0-10** **0-20**

For 4-20 mA Input select 0-20 mA and adjust the Input/Reading accordingly.
To adjust 4-20 mA input, see example under Input/Reading Submenu.

3.2.5 Reading Configuration Menu

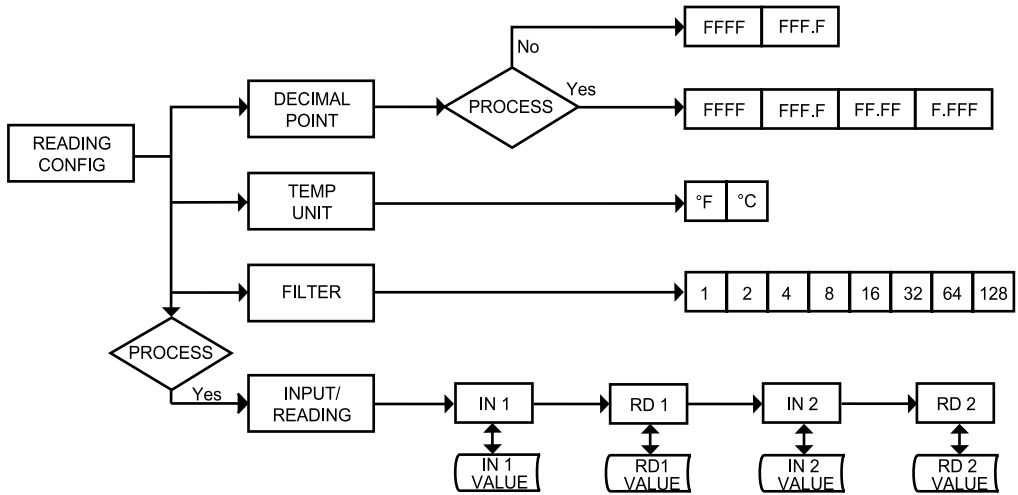


Figure 3.4 Flow Chart for Reading Configuration Menu

ENTER READING CONFIGURATION MENU:

- Press **⏪** 1) Press **⏪**, if necessary, until **ENFG** prompt appears.
- Press **⏩** 2) Display advances to **INPE** Input Menu.
- Press **⏪** 3) Display advances to **RdG** Reading Configuration Menu.
- Press **⏪** 4) Display advances to **DEC** Decimal Point.




DECIMAL POINT SUBMENU:

- Press **⏪** 5) Display flashes previous selection for Decimal location.
- Press **⏩** 6) Scroll through the available selections and choose Decimal location: **FFFF** or **FFF.F** (also **FF.FF** and **F.FFF** — if **PROC** Process type was selected in the Input Type Menu).
- Press **⏪** 7) Display shows **SErD** stored message momentarily and then advances to **TEMP** Temperature Unit.







Decimal Point for Process Input Type is passive.

TEMPERATURE UNIT SUBMENU:

- Press  8) Display flashes previous Temperature Unit selection.
- Press  9) Scroll through the available selections to the Temperature Unit of your choice: **F** or **C**.
- Press  10) Display shows **SEtRd** stored message momentarily and then advances to **FLtR** Filter Constant.

FILTER CONSTANT SUBMENU:

- Press  11) Display flashes previous selection for Filter Constant.
- Press  12) Scroll through the available selections: **0001**, **0002**, **0004**, **0008**, **0016**, **0032**, **0064**, **0128**. - Default is **0004**
- Press  13) Display shows **SEtRd** stored message momentarily only, if a change was made, otherwise press  to advance to the next menu.



If Process was selected in the Input Type Menu the display will advance to **IN.Rd** Input/Reading Submenu, otherwise the display advances to the **ALR 1** Alarm Menu.

The Filter Constant Submenu allows the user to specify the number of readings stored in the Digital Averaging Filter.




For PID control select filter value 0001-0004. A filter value of 2 is approximately equal to 1 second RC low pass time constant.








Reading Configuration (If Process was selected)


INPUT/READING (SCALE AND OFFSET) SUBMENU:

Input Voltage or Current can be converted or scaled into values appropriate for the process or signal being measured. So, a reading may be displayed, for example, in units of weight or velocity instead of in amperes or volts.



















The instrument determines Scale and Offset values based on two user-provided input values entered with the corresponding readings. Note that **IN 1** Input 1 and **IN 2** Input 2 are represented and entered as a product of the input voltage/current and the conversion number from the **Table 3.2**.

 The following instructions include details for a specific scenario in which a **4-20 mA** input (in the 20 mA Process Mode) is to be represented as a measurement of **0-100 percent**.

- Press  **14)** Press  at the **IN.Rd** prompt. Display shows **IN 1** Input 1 Submenu.
- Press  **15)** Display shows Input 1 value with 1st digit flashing.
- Press  &  **16)** Use  and  buttons to enter **IN 1** value.
The **IN 1** value = min. input value * conversion number.

 Disregard the position of the decimal point (2000 counts may actually appear as **2000**, **200.0**, **20.00**, or **2.000**).

Example: 4 mA as $4(\text{mA}) \times 500 = 2000$.

- Press  **17)** Display advances to **Rd 1** Reading 1 Submenu.
- Press  &  **18)** Use  and  buttons to enter **Rd 1** value.
This value represents **IN 1** in terms of some meaningful engineering units. To show the 4 mA as zero percent enter **Rd 1** value = 0000.
Example: **Rd 1** value = 0000.
- Press  **19)** Display **IN 2** Input 2 Submenu.
- Press  **20)** Display shows Input 2 value with 1st digit flashing.
The **IN 2** value = max. input value * conversion number.
Example: $20(\text{mA}) \times 500 = 10000$ (9999).
- Press  &  **21)** Use  and  buttons to enter **IN 2** value.
- Press  **22)** Display advances to **Rd 2** Reading 2 Submenu.
- Press  &  **23)** Use  and  buttons to enter **Rd 2** value.
Example: **Rd 2** value = 0100.
- Press  **24)** Display flashes **SErD** stored message momentarily and then advances to **ALR 1** only, if change was made, otherwise press  to advance to **ALR 1** Alarm Menu.



Conversion number is a coefficient of conversion between input values and real full display range (10000 counts, shown as 9999). See **Table 3.2** below for proper conversion number.

Table 3.2 Conversion Table

RANGE	CONVERSION NUMBER
100 mV	$10000 / (100 \times 1) = 100$
1 V	$10000 / (1000 \times 1) = 10$
10 V	$10000 / (1000 \times 10) = 1$
0 -20 mA	$10000 / (20 \times 1) = 500$

Example =

$$0 - 1 \text{ V} = 0 - 100.0$$

$$\text{In } 1 = 0$$

$$\text{Rd } 1 = 0$$

$$\text{Inp } 2 = 9999$$

$$\text{Rd } 2 = 100.0$$

3.2.6 Analog Output (Retransmission)

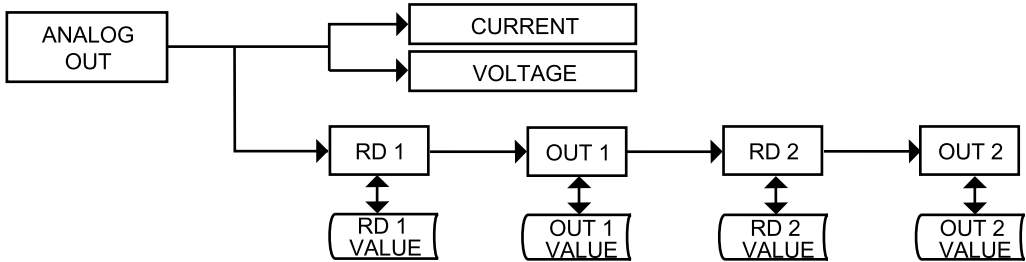


Figure 3.5 Flow Chart for Analog Output (Retransmission)

ENTER ANALOG OUTPUT MENU:

- Press **⏏** 1) Press **⏏**, if necessary, until **CONF** prompt appears.
- Press **⏏** 2) Display advances to **INPT** Input Menu.
- Press **⏏** 3) Press **⏏**, if necessary, until Display advances to **ANLG** Analog Output Menu.
- Press **⏏** 4) Display advances to Analog Output **CURR** or **VOLT** Current/Voltage Submenu and flashes the previous selection.

CURRENT/VOLTAGE SUBMENU:

- Press **⏏** 5) Display flashes **CURR** Current or **VOLT** Voltage.
- Press **⏏** 6) Scroll through the available selection: Current or Voltage. (Example **VOLT**).
- Press **⏏** 7) Display shows **STRD** stored message momentarily and then advances to **Rd 1** Submenu only if it was changed, otherwise press **⏏** to advance to **Rd 1** Reading 1 Submenu.





READING 1:

- Press **⏏** 8) Display flashes 1st digit of previous "Reading 1" value.
- Press **⏏** & **⏏** 9) Enter "Reading 1" value. (Example **0000**).
- Press **⏏** 10) Display advances to **OUT. 1** Out 1 Submenu.





OUT 1:

- Press **⏏** 11) Display flashes 1st digit of previous "Out 1" value.
- Press **⏏** & **⏏** 12) Enter "Out 1" value. (Example **00.00**).
- Press **⏏** 13) Display advances to **Rd 2** Reading 2 Submenu.

READING 2:

- Press  14) Display flashes 1st digit of previous “Reading 2” value.
- Press  &  15) Enter “Reading 2” value. (Example **9999**).
- Press  16) Display advances to **OUT.2** Out 2 Submenu.

OUT 2:

- Press  17) Display flashes 1st digit of previous “Out 2” value.
- Press  &  18) Enter “Out 2” value. (Example **10.00**)
- Press  19) Display advances to the **ALR2** Alarm 2 Menu.

 **Note**

The above example is for 0-10 V output of the entire range of the Process Input and Analog Output. For 0-20 mA output you need to set “Analog Type” to Current and OUT 2 to 20.00.

3.2.7 Alarm 1



For this model with Isolated Analog Output, Alarm 1 is inactive.

3.2.8 Alarm 2

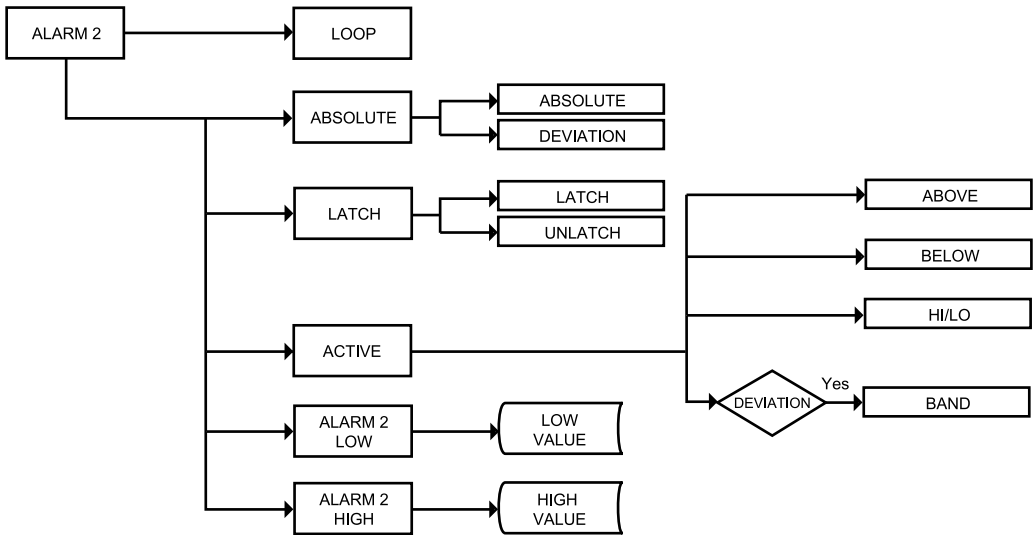






Figure 3.6 Flow Chart for Alarm 2

ENTER ALARM MENU:

- Press 1) Press , if necessary, until **ENFC** prompt appears.
- Press 2) Display advances to **INPE** Input Menu.
- Press 3) Press , if necessary, until Display advances to **ALR2** Alarm Menu.
- Press 4) Display advances to the **AbSo** Absolute/Deviation Submenu.





ALARM ABSOLUTE/DEVIATION SUBMENU:



- Press  5) Display flashes previous selection. Press  to **ABS** Absolute or **DEV** Deviation.
- Press  6) Display shows **STORd** stored message momentarily and then advances to **LtCH** only, if it was changed, otherwise press  to advance to **LtCH** Alarm Latch/Unlatch Submenu.

Absolute Mode allows Alarm to function independently from Setpoint 1. If the process being monitored does not change often, then "Absolute" Mode is recommended.

Deviation Mode allows changes to Setpoint 1 to be made automatically to Alarm. Deviation Mode is typically the ideal mode if the process temperature changes often. In Deviation Mode, set Alarm a certain number of degrees or counts away from Setpoint 1 — this relation remains fixed even if Setpoint 1 is changed.





ALARM 2 LATCH/UNLATCH SUBMENU:

- Press  7) Display flashes previous selection. Press  to **LtCH** Latched or **UNL** Unlatched.
- Press  8) Display shows **STORd** stored message momentarily and then advances to **CC.LL** only, if it was changed, otherwise press  to advance to **CC.LL** Contact Closure Submenu.

Latched Mode: Relay remains "latched" until reset. To reset already latched alarm, select Alarm Latch and press Max twice (i.e. Unlatch and then back to Latch) or from a Run Mode, push  twice to put the instrument in Standby Mode and then push  one more time to return to the Run Mode.

Unlatched Mode: Relay remains latched only as long as the alarm condition is true.

ACTIVE SUBMENU:

- Press  9) Display flashes previous selection. Press  to scroll through the available selections: **Above**, **Below**, **Hi/Low** HI/Low and **BAND** Band. (Band is active if **Deviation** was selected).
- Press  10) Display shows **SEtPt** stored message momentarily and then advances to **ALR.L** only, if it was changed, otherwise press  to advance to **ALR.L** Alarm Low Value Submenu.

Above: Alarm 2 condition triggered when the process variable is greater than the Alarm Hi Value (Low value ignored).

Below: Alarm 2 condition triggered when the process variable is less than the Alarm Low Value (Hi value ignored).

Hi/Low: Alarm 2 condition triggered when the process variable is less than the Alarm Low Value or above the Hi Value.

Band: Alarm 2 condition triggered when the process variable is above or below the "band" set around Setpoint 2. Band equals Hi Value (Low Value ignored). A "band" is set around the Setpoint by the instrument only in the "Deviation" Mode. The Band for the AL 2 would be following the Setpoint 2 value.

The Band or the Deviation Value should be entered under:

AL2 High (if they want Alarm 2)

AL Low value is ignored in the Band mode.

Example: if customer requires a Deviation Value of ± 10 degrees around a setpoint (using Output 2 as alarm)

Output 2: disabled (this enables the Alarm 2)

Alarm 2: - Deviation

Contact Closure type: Deviation---Band

AL2 High: 10 (Band they want around Setpoint 2)

ALARM LOW VALUE SUBMENU:






- Press **↵** 11) Display flashes 1st digit of previous value. Use **▲** and **▼** to enter new value.
- Press **▲** & **▼** 12) Use **▲** and **▼** to enter Alarm Low Value.
- Press **↵** 13) Display shows **SErD** storage message momentarily and then advances to **ALR.H** only, if it was changed, otherwise press **↵** to advance to **ALR.H** Alarm Hi Value Submenu.

ALARM HI VALUE SUBMENU:







- Press **↵** 14) Display flashes 1st digit of previous value. Use **▲** and **▼** to enter new value.
- Press **▲** & **▼** 15) Use **▲** and **▼** to enter Alarm Hi Value.
- Press **↵** 16) Display shows **SErD** stored message momentarily and then advances to the next menu only, if it was changed, otherwise press **↵** to advance to the next menu.

3.2.9 Reading Adjust Menu / Field Calibration

ENTER READING ADJUST MENU:

- Press  1) Press , if necessary, until **ENFG** prompt appears.
- Press  2) Display advances to **INPE** Input Menu.
- Press  3) Press , if necessary, until Display advances to **R.ADJ** Reading Adjust Menu.

READING ADJUST VALUE SUBMENU:

- Press  4) Display flashes 1st digit of previous Reading Adjust value.
- Press  &  5) Press  and  buttons to enter a new Reading Adjust value (-1999 to 9999).
- Press  6) Display shows **STORd** stored message momentarily and then advances to the **CAL*** Menu.

Reading Offset Adjust allows the user to fine tune a minor error of the transducer, however some applications may require a large offset adjust. (Displayed Process Value = Measured Process Value \pm R.ADJ). Reading Adjust value is adjustable between -1999 to 9999.

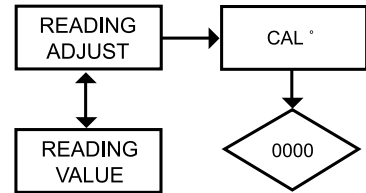


Figure 3.7 Flow Chart for Reading Adjust Menu / Field Calibration

THERMOCOUPLE FIELD CALIBRATION SUBMENU:



CAUTION: Do not perform the following steps until you fully understand this entire section.





Note 

RTD and Process are perfectly calibrated. This section is applicable to Thermocouple (TC) calibration *only*.

Be sure that the TC being used to calibrate the meter is of the type selected in the TC submenu. Place the TC in an ice-bath (or other **0°C / 32°F** environment). In ambient temperature conditions: connect the TC to the meter, apply power to the meter.



CAUTION: Do not proceed with TC calibration unless the above conditions have been in effect for at least one hour.

- Press  7) Display shows **CAL***.
- Press  8) Display shows flashing **0000**.
- Press  9) Display will still show flashing **0000**.
- Press  10) Display shows **0UE 1** (meaning Calibration is complete)

* If you accidentally engage the flashing **0000** (CAL* alert) simply re-press the last button you pressed, to avoid unintentionally mis-calibrating your meter.

3.2.10 ID CODE

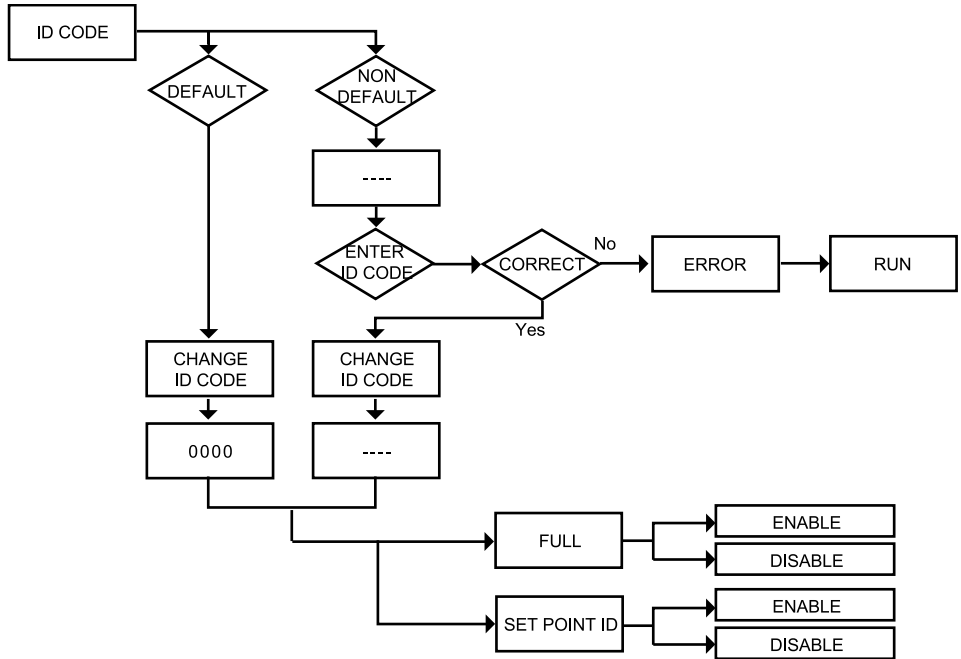


Figure 3.8 Flow Chart for ID Code Menu

ENTER ID CODE MENU:

- Press 1) Press , if necessary, until **CHFD** prompt appears.
- Press 2) Display advances to **INPE** Input Menu.
- Press 3) Press , if necessary, until Display advances to **Id** ID Code Menu.

ENTERING OR CHANGING YOUR (NON-DEFAULT) ID CODE:



- Press 4) Display advances to **----** with 1st under score flashing.
- Press & 5) Press and to enter your 4-digit "ID Code" number.
- Press 6) Display advances to **CH.Id** Change ID Code Submenu.

Note If entered "ID Code" is incorrect display shows **ERR** Error message momentarily and then skips to the Run Mode.


- Press 7) Display flashes the first digit of previous entered "ID Code" number.
- Press & 8) Press and buttons to enter your new "ID Code" number.
- Press 9) Display shows **STRD** stored message momentarily and then advances to the **FULL** Full Security Submenu.

ENTERING OR CHANGING YOUR (DEFAULT) ID CODE:

Enter **Id** menu (Repeat steps from 1 to 3).

- Press  10) Display advances to **CH.Id** Change ID Code Submenu.
Press  11) Display shows **0000** message with flashing 1st digit.



If you want to change your default "ID Code" you can do it now, otherwise press  and menu will skip to **FULL** Full Security Submenu.

- Press  &  12) Press  and  buttons to enter your new "ID Code" number.
Press  13) Display shows **SErD** stored message momentarily and then advances to the **FULL** Full Security Submenu.

FULL SECURITY LEVEL SUBMENU:

- Press  14) Display flashes **ENbL** Enable or **DNbL** Disable.
Press  15) Scroll through the available selections: "Enable" or "Disable".
Press  16) Display shows **SErD** stored message momentarily and then advances to **SP.Id** Setpoint/ID Submenu.



If "Full" Security Level is "Enabled" and the user attempts to enter the Main Menu, they will be prompted for an ID Code. The ID Code should be correct to enter the instrument Menu item.

SETPOINT/ID SECURITY LEVEL SUBMENU:



This Security Level can be functional only if **FULL** Security Level is Disabled.

- Press  17) Display flashes **ENbL** Enable or **DNbL** Disable.
Press  18) Scroll through the available selections: "Enable" or "Disable".
Press  19) Display shows **SErD** stored message momentarily and then advances to **COMM** Communication Submenu.



If "**Setpoint/ID**" Security Level is "**Enabled**" and the user attempts to advance into the **ENFD** Configuration Menu, he will be prompted for ID Code number. The ID Code should be correct to proceed into the Configuration Menu, otherwise display will show an Error and skip to the Run Mode.



If "**Full**" and "**Setpoint/ID**" Security Levels are "**Disabled**", the ID code will be "Disabled" and user will not be asked for ID Code to enter the Menu items ("ID" Submenu will not show up in "ID/Setpoint" Menu).

3.2.11 COMMUNICATION OPTION

Purchasing the device with Serial Communications permits an instrument to be configured or monitored from an IBM PC compatible computer using software available at **the website listed on the cover of this manual or on the CD-ROM enclosed with your shipment**. For complete instructions on the use of the Communications Option, refer to the Serial Communications Reference Manual.

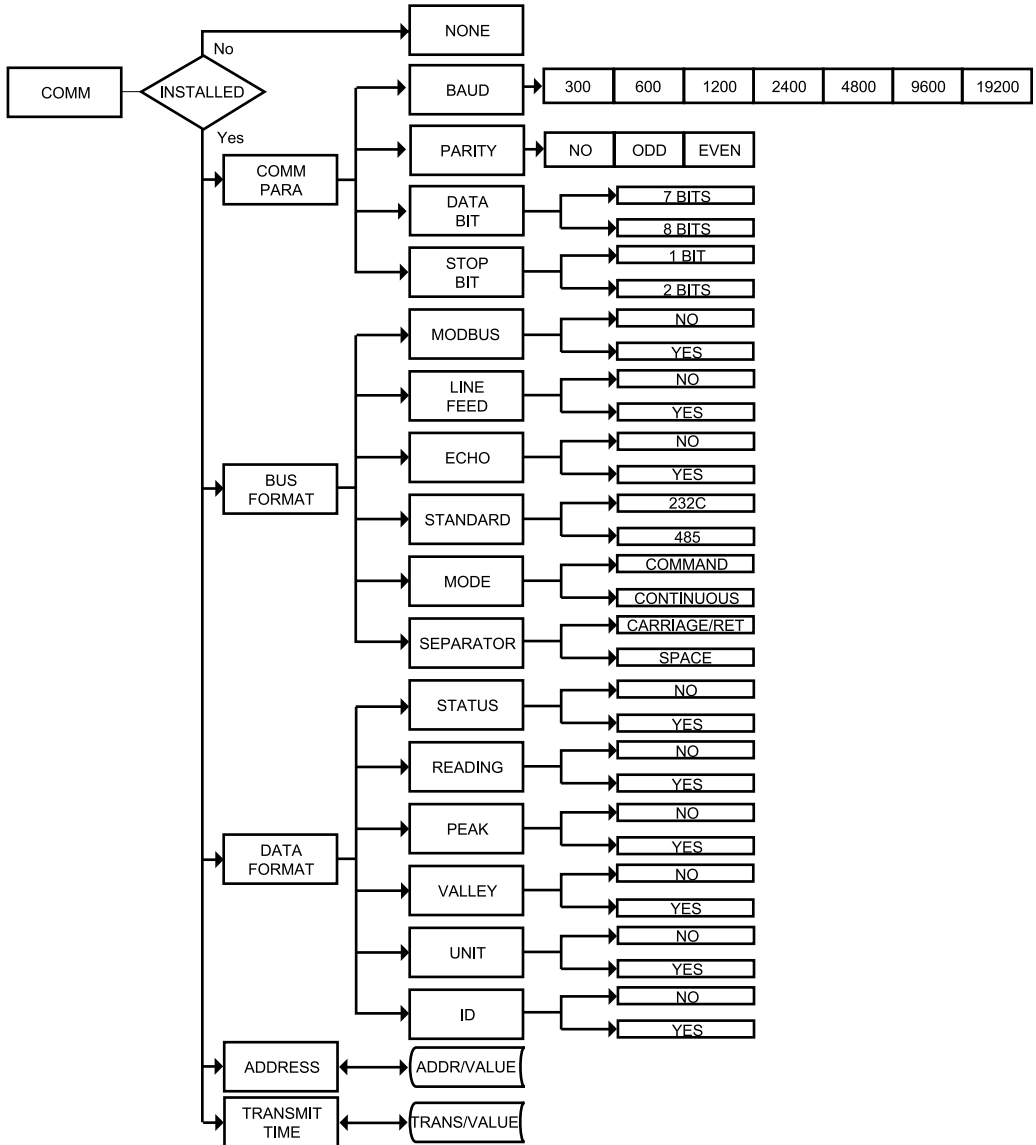








Figure 3.9 Flow Chart for Communication Option

ENTER COMMUNICATION OPTION MENU:

- Press  1) Press , if necessary, until **CNFG** prompt appears.
- Press  2) Display advances to **INPE** Input Menu.
- Press  3) Press , if necessary, until Display advances to **COMM** Communication Options Menu.
- Press  4) Display advances to **CPAR** Communication Parameters Submenu.

Note





If Communication Option is not installed, the display shows **NONE** and skips to the Color Display Menu.

COMMUNICATION PARAMETERS SUBMENU:





Allows the user to adjust Serial Communications Settings of the instrument. When connecting an instrument to a computer or other device, the Communications Parameters must match. Generally the default settings (as shown in Section 5) should be utilized.

- Press  5) Display advances to **BAUD** Baud Submenu.





BAUD SUBMENU:

- Press  6) Display flashes previous selection for **BAUD** value.
- Press  7) Scroll through the available selections: **300**, **600**, **1200**, **2400**, **4800**, **9600**, **19.2K**.
- Press  8) Display shows **SEEd** stored message momentarily and then advances to **PREY** only, if it was changed, otherwise press  to advance to **DATA** Parity Submenu.





PARITY SUBMENU:

- Press  9) Display flashes previous selection for "Parity".
- Press  10) Scroll through the available selections: NO, ODD, EVEN.
- Press  11) Display shows **SEEd** stored message momentarily and then advances to **DATA** only, if it was changed, otherwise press  to advance to **DATA** Data Bit Submenu.

DATA BIT SUBMENU:

- Press  12) Display flashes previous selection for "Data Bit".
- Press  13) Scroll through the available selections: 7-BIT, 8-BIT.
- Press  14) Display shows **SEEd** stored message and then advances to **SEOP** only, if it was changed, otherwise press  to advance to **SEOP** Stop Bit Submenu.

STOP BIT SUBMENU:





- Press  15) Display flashes previous selection for “Stop Bit”.
- Press  16) Scroll through the available selections: 1-BIT, 2-BIT.
- Press  17) Display shows **SERd** stored message momentarily and then advances to **BUS.F** only, if it was changed, otherwise press  to advance to **BUS.F** Bus Format Submenu.

BUS FORMAT SUBMENU:

Determines Communications Standards and Command/Data Formats for transferring information into and out of the instrument via the Serial Communications Bus. Bus Format submenus essentially determine how and when data can be accessed via the Serial Communications of the device.

- Press  18) Display advances to **m.BUS** Modbus Submenu.

MODBUS PROTOCOL SUBMENU:

- Press  19) Display flashes previous selection for **m.BUS**.
- Press  20) Scroll through the available selections: NO, YES.
- Press  21) Display shows **SERd** stored message momentarily and then advances to **LF** only, if it was changed, otherwise press  to advance to **LF** Line Feed submenu.

 **Note**





To select iSeries Protocol, set Modbus submenu to “No”.
To select Modbus Protocol, set Modbus submenu to “Yes”.

 **Note**

If Modbus Protocol was selected, the following Communications Parameters must be set as: No Parity, 8-bit Data Bit, 1-Stop Bit. Do not attempt to change these parameters.





LINE FEED SUBMENU:

Determines if data sent from the instrument will have a Line Feed appended to the end - useful for viewing or logging results on separate lines when displayed on communications software at a computer.

- Press  22) Display flashes previous selection for “Line Feed”.
- Press  23) Scroll through the available selections: NO, YES.
- Press  24) Display shows **SERd** stored message momentarily and then advances to **ECHO** only, if it was changed, otherwise press  to advance to **ECHO** Echo Submenu.





ECHO SUBMENU:

When valid commands are sent to the instrument, this determines whether the command will be echoed to the Serial Bus. Use of echo is recommended in most situations, especially to help verify that data was received and recognized by the instrument.

- Press  25) Display flashes previous selection for “Echo”.
- Press  26) Scroll through the available selections: NO, YES.
- Press  27) Display flashes **SENd** stored message momentarily and then advances to **SENd** only if it was changed, otherwise press  to advance to **SENd** Communication Standard Submenu.





COMMUNICATION INTERFACE STANDARD SUBMENU:

Determines whether device should be connected to an RS-232C serial port (as is commonly used on IBM PC-compatible computers) or via an RS-485 bus connected through appropriate RS-232/485 converter. When used in RS-485 Mode, the device must be accessed with an appropriate Address Value as selected in the Address Submenu described later.

- Press  28) Display flashes previous selection for “Standard”.
- Press  29) Scroll through the available selections: 232C, 485.
- Press  30) Display shows **SENd** stored message momentarily and then advances to **MoDE** only, if it was changed, otherwise press  to advance to **MoDE** Data Flow Mode Submenu.





DATA FLOW MODE SUBMENU:

Determines whether the instrument will wait for commands and data requests from the Serial Bus or whether the instrument will send data automatically and continuously to the Serial Bus. Devices configured for the RS-485 Communications Standard operate properly only under Command Mode.

- Press  31) Display flashes previous selection for “Mode”.
- Press  32) Scroll through the available selections: **Cmd** “Command”, **CoNE** “Continuous”.
- Press  33) Display shows **SENd** stored message momentarily and then advances to **SEPR** only, if it was changed, otherwise press  to advance to **SEPR** Data Separation Submenu.

DATA SEPARATION CHARACTER SUBMENU:

Determines whether data sent from the device in Continuous Data Flow Mode will be separated by spaces or by Carriage Returns.

- Press  **34)** Display flashes previous selection for “Separation” Submenu.
- Press  **35)** Scroll through the available selections: **S P C E** “Space” or **_ C R _** “Carriage Return”.
- Press  **36)** Display shows **S E R d** stored message momentarily and then advances to **D A T F** only, if it was changed, otherwise press  to advance to **D A T F** Data Format Submenu.

DATA FORMAT SUBMENU:

Preformatted data can be sent automatically or upon request from the instrument. Use the Data Format Submenus to determine what data will be sent in this preformatted data string. Refer to the iSeries Communications Manual for more information about the data format. At least one of the following suboptions must be enabled and hence output data to the Serial Bus.





Note

This menu is applicable for Continuous Mode of RS-232 communication.

- Press  **37)** Display advances to **S E A L E** Alarm Status Submenu.





ALARM STATUS SUBMENU:

Includes Alarm Status bytes in the data string.

- Press  **38)** Display flashes previous selection for “Status” (alarm status).
- Press  **39)** Scroll through the available selections: NO, YES.
- Press  **40)** Display shows **S E R d** stored message momentarily and then advances to **R d N U** only, if it was changed, otherwise press  to advance to **R d N U** Reading Submenu.





MAIN READING SUBMENU:

Includes Main Reading in the data string.

- Press  **41)** Display flashes previous selection for “Reading”.
- Press  **42)** Scroll through the available selections: NO, YES.
- Press  **43)** Display shows **S E R d** stored message momentarily and then advances to **P E A R K** only, if it was changed, otherwise press  to advance to **P E A R K** Peak Submenu.





PEAK VALUE SUBMENU:

Includes Peak Value in the data string.

- Press  44) Display flashes previous selection for **PEAK** Submenu.
- Press  45) Scroll through the available selections: NO, YES.
- Press  46) Display shows **SERR** stored message momentarily and then advances to **VALY** only, it was changed, otherwise press  to advance to **VALY** Valley Submenu.





VALLEY VALUE SUBMENU:

Includes Valley Value in the data string.

- Press  47) Display flashes previous selection for "Valley".
- Press  48) Scroll through the available selections: NO, YES.
- Press  49) Display shows **SERR** stored message momentarily and then advances to **UNTE** only, if it was changed, otherwise press  to advance to **UNTE** Temperature Unit Submenu.

TEMPERATURE UNIT SUBMENU:

Includes a byte in the data string to indicate whether reading is in Celsius or Fahrenheit.

- Press  50) Display flashes previous selection for **UNTE**.
- Press  51) Scroll through the available selections: NO, YES.
- Press  52) Display shows **SERR** stored message momentarily and then advances to **ADDR** only, if it was changed, otherwise press  to advance to **ADDR** Address Setup Submenu.








ADDRESS SETUP SUBMENU:

 **Note**

This menu is applicable to the RS-485 Option only.

- Press  53) Display advances to "Address Value" (0000 to 0199) Submenu.

ADDRESS VALUE SUBMENU:

- Press  54) Display flashes 1st digit of previously stored Address Value.
- Press  &  55) Press  and  to enter new "Address Value".
- Press  56) Display shows **SERR** stored message momentarily and then advances to **TRTM** only, if it was changed, otherwise press  to advance to **TRTM** Transmit Time Interval Submenu.

TRANSMIT TIME INTERVAL SUBMENU:



This menu is applicable if “Continuous” Mode was selected in the “Data Flow Mode” Submenu and the device is configured as an RS-232C Standard device. Also, one or more options under the Data Format Submenu must be enabled.

Press **↵** 57) Display advances to “Transmit Time Value” Submenu.

TRANSMIT TIME INTERVAL VALUE SUBMENU:

Determines the interval at which data will be emitted to the RS-232 Serial Bus when the instrument is in Continuous Data Flow Mode.

Press **↵** 58) Display flashes 1st digit of previous “Transmit Time Value” in seconds.

Press **▲** & **▼** 59) Press **▲** and **▼** to enter new “Transmit Time Value”, e.g. 0030 will send the data every 30 seconds in Continuous Mode.

Press **↵** 60) Display shows **SEEd** stored message momentarily and then advances to **COLR** only, if it was changed, otherwise press **↵** to advance to **COLR** Color Display Selection Menu.



For more details, refer to the Communication Manual available at the website listed on the cover page of this manual or on the CD-ROM enclosed with your shipment.

3.2.12 DISPLAY COLOR SELECTION

This submenu allows the user to select the color of the display.

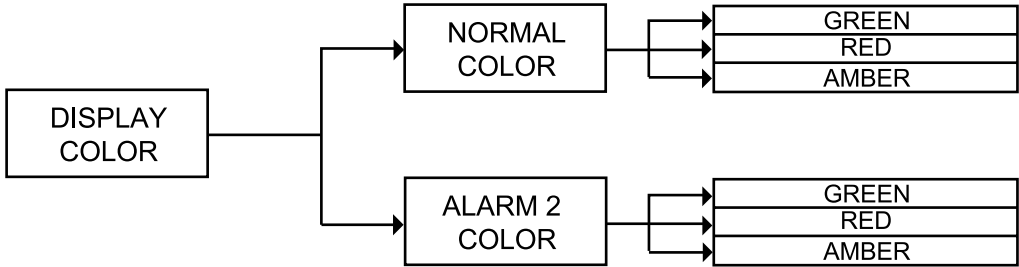


Figure 3.10 Flow Chart for Display Color Selection

ENTER DISPLAY COLOR SELECTION MENU:

- Press 1) Press , if necessary, until **ENFD** prompt appears.
- Press 2) Display advances to **INPE** Input Menu.
- Press 3) Press , if necessary, until Display advances to **COLR** Display Color Selection Menu.
- Press 4) Display advances to **N.CLR** Normal Color Submenu.




NORMAL COLOR DISPLAY SUBMENU:

- Press 5) Display flashes the previous selection for “Normal Color”.
- Press 6) Scroll through the available selections: **GRN**, **RED** or **AMBR**.
- Press 7) Display shows **SEED** stored message momentarily and then advances to **E.CLR** only, if it was changed, otherwise press to advance to **E.CLR** Alarm 2 Display Color Submenu.



The menu below allows the user to change the color of display when alarm is triggered.

ALARM 2 DISPLAY COLOR SUBMENU:

- Press  8) Display flashes previous selection for "Alarm Color Display".
- Press  9) Scroll through the available selections: **GRN**, **RED** or **AMBR**.
- Press  10) Display shows **SEEd** stored message momentarily and then momentarily shows the software version number, followed by **RSt** Reset, and then proceeds to the Run Mode.




IN ORDER TO DISPLAY ONE COLOR, SET THE SAME DISPLAY COLOR ON BOTH SUBMENUS ABOVE.

Example 1:

Alarm 2 Setup: Absolute, Above, Alarm 2 HI Value "ALR.H" = 200,
Color Display Setup: Normal Color "N.CLR" = Green, Alarm 2 Color "2.CLR" = Red


Display Colors change sequences:

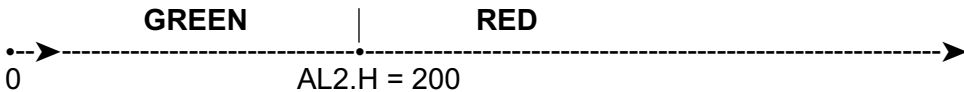

Example 2:

Alarm 2 Setup: Absolute, Below, Alarm 2 Low Value "ALR.L" = 300,
Color Display Setup: "N.CLR" = Green, "2.CLR" = Red

Display Colors change sequences:

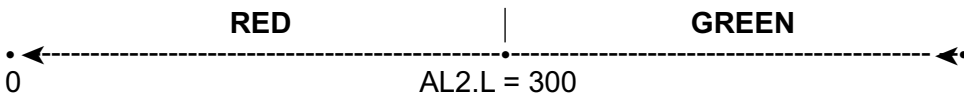


Example 3:

Setpoint 2: 200

Alarm 2 Setup: Deviation, Band, "ALR.H" = 10

Color Display Setup: "N.CLR" = Green, "2.CLR" = Amber

Display Colors change sequences:

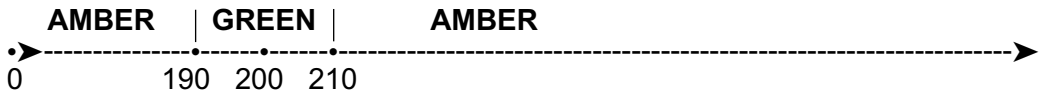

Example 4:

Setpoint 2: 200

Alarm 2 Setup: Deviation, Hi/Low, "ALR.H" = 10, "ALR.L" = 5

Color Display Setup: "N.CLR" = Green, "2.CLR" = Red

Display colors change sequences:



Reset: The instrument automatically resets after the last menu of the Configuration Mode has been entered. After the instrument resets, it advances to the Run Mode.

PART 4 SPECIFICATIONS

Accuracy

±0.5°C temp; 0.03% reading process

Resolution

1°/0.1°; 10 µV process

Temperature Stability

- 1) RTD: 0.04°C/°C
 - 2) TC @ 25°C (77°F): 0.05°C/°C
- Cold Junction Compensation
- 3) Process: 50 ppm/°C

NMRR

60 dB

CMRR

120 dB

A/D Conversion

Dual slope

Reading Rate

3 samples per second

Digital Filter

Programmable

Display

Single 4-digit, 9-segment LED,
21 mm (0.83")
red, green and amber programmable
colors for process variable, set point
and temperature units

Warm up to Rated Accuracy

30 min.

INPUT

Input Types

Thermocouple, RTD, Analog Voltage,
Analog Current

Thermocouple Type (ITS90)

J, K, T, E, R, S, B, C, N, L

Thermocouple Lead Resistance

100 ohm max

RTD Input (ITS 68)

100/500/1000 Ω Pt sensor, 2-, 3- or
4-wire; 0.00385 or 0.00392 curve

Voltage Input

0 to 100 mV, 0 to 1 V, 0 to 10 Vdc

Input Impedance

10 MΩ for 100 mV
1 MΩ for 1 or 10 Vdc

Current Input

0 to 20 mA (5 ohm load)

Configuration Single-ended

Polarity Unipolar

Step Response 0.7 sec for 99.9%

Decimal Selection

None, 0.1 for temperature
None, 0.1, 0.01 or 0.001 for process

Setpoint Adjustment

-1999 to 9999 counts

Span Adjustment

0.001 to 9999 counts

Offset Adjustment

-1999 to +9999

ANALOG OUTPUT (programmable)

Isolated, Retransmission 0 to 10 Vdc or
0 to 20 mA, 500 Ω max.
Accuracy is 1% of FS, for Scaling Gain
from 0.03 to 100 mV per count
Isolation is 1000 Vdc
Linearity is 0.2%

EXCITATION

(optional in place of Communication)

24 Vdc @ 25 mA

Not available for Low Power Option

COMMUNICATIONS

(Optional in place of excitation)

RS-232/RS-422/RS-485/MODBUS:

Selectable from menu; both ASCII and modbus protocol selectable from menu. Programmable 300 to 19.2 K baud; complete programmable setup capability; program to transmit current display, alarm status, min/max, actual measured input value and status.

RS-485

Addressable from 0 to 199

ALARM 2 (programmable):

Type

Programmable to display color change

Relay*

250 Vac or 30 Vdc @ 3 A
(Resistive Load)

Output 1: not available

Output 2*: SPDT type, can be configured as Alarm 2 output

SSR*

20-265 Vac @ 0.05-0.5 A
(Resistive Load); continuous

DC Pulse*

Non-Isolated; 10 Vdc @ 20 mA

* Only with -AL Alarm Option

Operation

High/low, above/below, latch/unlatch, normally open/normally closed and process/deviation; front panel configurations

INSULATION

Power to Input/Output,

2300 Vac per 1 min. test,
1500 Vac per 1 min. test,
(Low Power Option)

Power to Relays/SSR Outputs,

2300 Vac per 1 min. test

Relays/SSR to Relay/SSR Outputs,

2300 Vac per 1 min. test

RS-232/485 to Inputs/Outputs,

500 Vac per 1 min. test

GENERAL

Line Voltage/Power

90-240 Vac +/-10%, 50-400 Hz*

110-375 Vdc, equivalent voltage

5 W, power consumption

* No CE compliance above 60 Hz

Low Voltage/Power Option

20-36 Vdc, **4 W****, power consumption

External power source must meet

Safety Agency Approvals.

** Units can be powered safely with 24 Vac

but, no Certification for CE/UL are claimed.

External Fuse Required

Time-Delay, UL 248-14 listed:

100 mA/250 V

400 mA/250 V (Low Voltage/Power Option)

Time-Lag, IEC 127-3 recognized:

100 mA/250 V

400 mA/250 V (Low Voltage/Power Option)

Environmental Conditions

0 to 55°C (32 to 131°F),
90% RH non-condensing

0 to 50°C (32 to 122°F) for UL only.
90% RH non-condensing

Approvals

UL, C-UL, and

see CE Approval Section

Dimensions iDRA

92.5H x 125.2D x 32.1W mm
(3.64 x 4.93 x 1.27")

204g (0.45lb)

Optional Remote Programmer iDRP

48H x 96W x 39D mm (1.89 x 3.78 x 1.55")

159g (0.35lb)

1/8 DIN Panel Cutout

Optional Remote Programmer iDRP:

45H x 92W mm (1.772" x 3.622 ")

Table 4.1 Input Properties

TC	Input Type	Range	Accuracy
J	Iron-Constantan	-210 to 760°C -346 to 1400°F	0.4°C 0.7°F
K	CHROMEGA®- ALOMEGA®	-270 to -160°C -160 to 1372°C -454 to -256°F -256 to 2502°F	1.0°C 0.4°C 1.8°F 0.7°F
T	Copper-Constantan	-270 to -190°C -190 to 400°C -454 to -310°F -310 to 752°F	1.0°C 0.4°C 1.8°F 0.7°F
E	CHROMEGA- Constantan	-270 to -220°C -220 to 1000°C -454 to -364°F -364 to 1832°F	1.0°C 0.4°C 1.8°F 0.7°F
R	Pt/13%Rh-Pt	-50 to 40°C 40 to 1788°C -58 to 104°F 104 to 3250°F	1.0°C 0.5°C 1.8°F 0.9°F
S	Pt/10%Rh-Pt	-50 to 100°C 100 to 1768°C -58 to 212°F 212 to 3214°F	1.0°C 0.5°C 1.8°F 0.9°F
B	30%Rh-Pt/ 6%Rh-Pt	200 to 640°C 640 to 1820°C 212 to 1184°F 1184 to 3308°F	1.0°C 0.5°C 1.8°F 0.9°F
C	5%Re-W/ 26%Re-W	0 to 2354°C 32 to 4253°F	0.4°C 0.7°F
N	Nicrosil-Nisil	-250 to -100°C -100 to 1300°C -418 to -148°F -148 to 2372°F	1.0°C 0.4°C 1.8°F 0.7°F
L	J DIN	-200 to 900°C -328 to 1652°F	0.4°C 0.7°F
RTD	Pt, 0.00385, 100 Ω, 500 Ω, 1000 Ω	200 to 900°C -328 to 1652°F	0.4°C 0.7°F
RTD	Pt, 0.00392, 100 Ω, 500 Ω, 1000 Ω	-200 to 850°C -328 to 1562°F	0.4°C 0.7°F
PROCESS	Voltage	0 to 100 mV, 0 to 1 V, 0 to 10 Vdc	0.03% rdg 0.03% rdg
PROCESS	Current	0 to 20 mA, 4 to 20 mA	0.03% rdg

PART 5 FACTORY PRESET VALUES

Table 5.1 Factory preset value

MENU ITEMS	FACTORY PRESET VALUES	NOTES
Set Point 2 (SP2)	000.0	
Input:		
Input Type (INPT)	TC, type K	
Reading Configuration (RDG):		
Decimal Point (DEC.P)	FFF.F	
Temperature unit (TEMP)	°F	
Filter value (FLTR)	0004	
ANALOG OUTPUT (Retransmission):		
Current/Voltage (CURR/VOLT)	Voltage (VOLT)	
Scale and Offset	Reading: 0 - 999.9 cts, Output: 0 - 10 V	
Alarm:		
Alarm 2 (ALR2)	Enable (ENBL)	
Absolute/Deviation (ABSO/DEV)	Absolute (ABSO)	
Latch/Unlatch (LTCH/UNLT)	Unlatch (UNLT)	
Active (ACTV)	Above (ABOV)	
Alarm Low (ALR.L)	-100.0	
Alarm High (ALR.H)	400.0	
Reading Adjust Value (R.ADJ):	000.0	
Field Calibration (CAL°)	0000	
ID:		
ID Value	0000	
Full ID (FULL)	Disable (DSBL)	
Set Point ID (ID.SP)	Disable (DSBL)	
Communication Parameters:		
Baud Rate (BAUD)	9600	
Parity (PRTY)	Odd	
Data bit (DATA)	7 bit	
Stop Bit	1 bit	
Modbus Protocol (M.BUS)	No	
Line Feed (LF)	No	
Echo (ECHO)	Yes	
Standard Interface (STND)	RS-232 (232C)	
Command Mode (MODE)	Command (CMD)	
Separation (SEPR)	Space (SPCE)	
Alarm Status (STAT)	No	
Reading (RDNG)	Yes	
Peak	No	
Valley (VALY)	No	
Units (UNIT)	No	
Multipoint Address (ADDR)	0001	
Transmit Time (TR.TM)	0016	
Display Color (COLR):		
Normal Color (N.CLR)	Green (GRN)	
Alarm 2 Color (2.CLR)	Amber (AMBR)	

PART 6 CE APPROVALS INFORMATION

 This product conforms to the EMC directive 89/336/EEC amended by 93/68/EEC, and with the European Low Voltage Directive 72/23/EEC.

Electrical Safety EN61010-1:2001

Safety requirements for electrical equipment for measurement, control and laboratory.

Double Insulation

Pollution Degree 2

Dielectric withstand Test per 1 min

- Power to Input/Output: 2300Vac (3250Vdc)
- Power to Input/Output: 1500Vac (2120Vdc)
(Low Voltage dc Power Option*)
- Power to Relays/SSR Output: 2300Vac (3250Vdc)
- Ethernet to Inputs: 1500Vac (2120Vdc)
- Isolated RS232 to Inputs: 500Vac (720Vdc)
- Isolated Analog to Inputs: 500Vac (720Vdc)
- Analog/Pulse to Inputs: No Isolation

Measurement Category I

Category I are measurements performed on circuits not directly connected to the Mains Supply (power). Maximum Line-to-Neutral working voltage is 50Vac/dc. This unit should not be used in Measurement Categories II, III, IV.

Transients Overvoltage Surge (1.2 / 50uS pulse)

- Input Power: 2500V
- Input Power: 1500V
(Low Voltage dc Power Option*)
- Ethernet: 1500V
- Input/Output Signals: 500V

Note: *Units configured for external low power dc voltage, 20-36Vdc

EMC EN61326:1997 + and A1:1998 + A2:2001

Immunity and Emissions requirements for electrical equipment for measurement, control and laboratory.

- EMC Emissions Table 4, Class B of EN61326
- EMC Immunity** Table 1 of EN61326

Note: **I/O signal and control lines require shielded cables and these cables must be located on conductive cable trays or in conduits. Furthermore, the length of these cables should not exceed 30 meters



Refer to the EMC and Safety installation considerations (Guidelines) of this manual for additional information.



WARRANTY/DISCLAIMER

OMEGA ENGINEERING, INC. warrants this unit to be free of defects in materials and workmanship for a period of **one (1) year** from the date of purchase. In addition to OMEGA's standard warranty period, OMEGA Engineering will extend the warranty period for **four (4) additional years** if the warranty card enclosed with each instrument is returned to OMEGA.

If the unit malfunctions, it must be returned to the factory for evaluation. OMEGA's Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective, it will be repaired or replaced at no charge. OMEGA's WARRANTY does not apply to defects resulting from any action of the purchaser, including but not limited to mishandling, improper interfacing, operation outside of design limits, improper repair, or unauthorized modification. This WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of having been damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA's control. Components which wear are not warranted, including but not limited to contact points, fuses, and triacs.

OMEGA is pleased to offer suggestions on the use of its various products. However, OMEGA neither assumes responsibility for any omissions or errors nor assumes liability for any damages that result from the use of its products in accordance with information provided by OMEGA, either verbal or written. OMEGA warrants only that the parts manufactured by it will be as specified and free of defects. OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESS OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. LIMITATION OF LIABILITY: The remedies of purchaser set forth herein are exclusive, and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.

CONDITIONS: Equipment sold by OMEGA is not intended to be used, nor shall it be used: (1) as a "Basic Component" under 10 CFR 21 (NRC), used in or with any nuclear installation or activity; or (2) in medical applications or used on humans. Should any Product(s) be used in or with any nuclear installation or activity, medical application, used on humans, or misused in any way, OMEGA assumes no responsibility as set forth in our basic WARRANTY/DISCLAIMER language, and, additionally, purchaser will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the Product(s) in such a manner.

RETURN REQUESTS/INQUIRIES

Direct all warranty and repair requests/inquiries to the OMEGA Customer Service Department. BEFORE RETURNING ANY PRODUCT(S) TO OMEGA, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OMEGA'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS). The assigned AR number should then be marked on the outside of the return package and on any correspondence.

The purchaser is responsible for shipping charges, freight, insurance and proper packaging to prevent breakage in transit.

FOR WARRANTY RETURNS, please have the following information available BEFORE contacting OMEGA:

1. Purchase Order number under which the product was PURCHASED,
2. Model and serial number of the product under warranty, and
3. Repair instructions and/or specific problems relative to the product.

FOR NON-WARRANTY REPAIRS, consult OMEGA for current repair charges. Have the following information available BEFORE contacting OMEGA:

1. Purchase Order number to cover the COST of the repair,
2. Model and serial number of product, and
3. Repair instructions and/or specific problems relative to the product.

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering.

© Copyright 2006 OMEGA ENGINEERING, INC. All rights reserved. This document may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without the prior written consent of OMEGA ENGINEERING, INC.

TRADEMARK NOTICE:  , omega.com ,  OMEGA , and  are Trademarks of OMEGA ENGINEERING, INC.

PATENT NOTICE: This product is covered by one or more of the following patents: U.S. Pat. No. Des. 336,895; 5,274,577; 6,243,021 / CANADA 2052599; 2052600 / ITALY 1249456; 1250938 / FRANCE BREVET No. 91 12756 / SPAIN 2039150; 2048066 / UK PATENT No. GB2 249 837; GB2 248 954 / GERMANY DE 41 34398 C2. The "Meter Bezel Design" is a Trademark of NEWPORT Electronics, Inc. Used under License. Other US and International Patents pending or applied for.

Where Do I Find Everything I Need for Process Measurement and Control? **OMEGA...Of Course!** *Shop on line at omega.com*

TEMPERATURE

- Thermocouple, RTD & Thermistor Probes, Connectors, Panels & Assemblies
- Wire: Thermocouple, RTD & Thermistor
- Calibrators & Ice Point References
- Recorders, Controllers & Process Monitors
- Infrared Pyrometers

PRESSURE, STRAIN AND FORCE

- Transducers & Strain Gauges
- Load Cells & Pressure Gauges
- Displacement Transducers
- Instrumentation & Accessories

FLOW/LEVEL

- Rotameters, Gas Mass Flowmeters & Flow Computers
- Air Velocity Indicators
- Turbine/Paddlewheel Systems
- Totalizers & Batch Controllers

pH/CONDUCTIVITY

- pH Electrodes, Testers & Accessories
- Benchtop/Laboratory Meters
- Controllers, Calibrators, Simulators & Pumps
- Industrial pH & Conductivity Equipment

DATA ACQUISITION

- Data Acquisition & Engineering Software
- Communications-Based Acquisition Systems
- Plug-in Cards for Apple, IBM & Compatibles
- Datalogging Systems
- Recorders, Printers & Plotters

HEATERS

- Heating Cable
- Cartridge & Strip Heaters
- Immersion & Band Heaters
- Flexible Heaters
- Laboratory Heaters

ENVIRONMENTAL MONITORING AND CONTROL

- Metering & Control Instrumentation
- Refractometers
- Pumps & Tubing
- Air, Soil & Water Monitors
- Industrial Water & Wastewater Treatment
- pH, Conductivity & Dissolved Oxygen Instruments