


M-4399/1206-MATH



User's Guide

OPTIONS
[MATH FUNCTION]
[TOTALIZER]
[FLOW CORRECTION]

**FOR RD200/RD2800 SERIES
RECORDER**

INSTRUCTION MANUAL

Shop online at

omega.com[®]

Ω OMEGA[®]

omega.com

e-mail: info@omega.com

***For latest product manuals:
omegamanual.info***

ISO 9001
CERTIFIED
CORPORATE QUALITY

STAMFORD, CT

ISO 9002
CERTIFIED
CORPORATE QUALITY

MANCHESTER, UK

Retain this manual apart from the
instrument and in an easily accessible.

Please make sure that this manual is handed to the final user of the instrument.

Ω OMEGA[®]



OMEGAnet® Online Service
omega.com

Internet e-mail
info@omega.com

Servicing North America:

U.S.A.:
ISO 9001 Certified

One Omega Drive, P.O. Box 4047
Stamford, CT 06907-0047
TEL: (203) 359-1660
FAX: (203) 359-7700
e-mail: info@omega.com

Canada:

976 Bergar
Laval (Quebec) H7L 5A1, Canada
TEL: (514) 856-6928
FAX: (514) 856-6886
e-mail: info@omega.ca

For immediate technical or application assistance:

U.S.A. and Canada: Sales Service: 1-800-826-6342/1-800-TC-OMEGA®
Customer Service: 1-800-622-2378/1-800-622-BEST®
Engineering Service: 1-800-872-9436/1-800-USA-WHEN®

Mexico:

En Español: (001) 203-359-7803
FAX: (001) 203-359-7807
e-mail: espanol@omega.com
info@omega.com.mx

Servicing Europe:

Czech Republic:

Frystatska 184, 733 01 Karviná, Czech Republic
TEL: +420 (0)59 6311899
FAX: +420 (0)59 6311114
Toll Free: 0800-1-66342
e-mail: info@omegashop.cz

Germany/Austria:

Daimlerstrasse 26, D-75392 Deckenpfronn, Germany
TEL: +49 (0)7056 9398-0
FAX: +49 (0)7056 9398-29
Toll Free in Germany: 0800 639 7678
e-mail: info@omega.de

United Kingdom:

ISO 9002 Certified

One Omega Drive, River Bend Technology Centre
Northbank, Irlam, Manchester
M44 5BD United Kingdom
TEL: +44 (0)161 777 6611
FAX: +44 (0)161 777 6622
Toll Free in United Kingdom: 0800-488-488
e-mail: sales@omega.co.uk

It is the policy of OMEGA Engineering, Inc. to comply with all worldwide safety and EMC/EMI regulations that apply. OMEGA is constantly pursuing certification of its products to the European New Approach Directives. OMEGA will add the CE mark to every appropriate device upon certification.

The information contained in this document is believed to be correct, but OMEGA accepts no liability for any errors it contains, and reserves the right to alter specifications without notice.

WARNING: These products are not designed for use in, and should not be used for, human applications.

WARRANTY/DISCLAIMER

OMEGA ENGINEERING, INC. warrants this unit to be free of defects in materials and workmanship for a period of **13 months** from date of purchase. OMEGA's WARRANTY adds an additional one (1) month grace period to the normal **one (1) year product warranty** to cover handling and shipping time. This ensures that OMEGA's customers receive maximum coverage on each product.

If the unit malfunctions, it must be returned to the factory for evaluation. OMEGA's Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective, it will be repaired or replaced at no charge. OMEGA's WARRANTY does not apply to defects resulting from any action of the purchaser, including but not limited to mishandling, improper interfacing, operation outside of design limits, improper repair, or unauthorized modification. This WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of having been damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA's control. Components in which wear is not warranted, include but are not limited to contact points, fuses, and triacs.

OMEGA is pleased to offer suggestions on the use of its various products. However, OMEGA neither assumes responsibility for any omissions or errors nor assumes liability for any damages that result from the use of its products in accordance with information provided by OMEGA, either verbal or written. OMEGA warrants only that the parts manufactured by it will be as specified and free of defects. OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESS OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. LIMITATION OF LIABILITY: The remedies of purchaser set forth herein are exclusive, and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.

CONDITIONS: Equipment sold by OMEGA is not intended to be used, nor shall it be used: (1) as a "Basic Component" under 10 CFR 21 (NRC), used in or with any nuclear installation or activity; or (2) in medical applications or used on humans. Should any Product(s) be used in or with any nuclear installation or activity, medical application, used on humans, or misused in any way, OMEGA assumes no responsibility as set forth in our basic WARRANTY/DISCLAIMER language, and, additionally, purchaser will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the Product(s) in such a manner.

RETURN REQUESTS/INQUIRIES

Direct all warranty and repair requests/inquiries to the OMEGA Customer Service Department. BEFORE RETURNING ANY PRODUCT(S) TO OMEGA, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OMEGA'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS). The assigned AR number should then be marked on the outside of the return package and on any correspondence.

The purchaser is responsible for shipping charges, freight, insurance and proper packaging to prevent breakage in transit.

FOR **WARRANTY** RETURNS, please have the following information available BEFORE contacting OMEGA:

1. Purchase Order number under which the product was PURCHASED,
2. Model and serial number of the product under warranty, and
3. Repair instructions and/or specific problems relative to the product.

FOR **NON-WARRANTY** REPAIRS, consult OMEGA for current repair charges. Have the following information available BEFORE contacting OMEGA:

1. Purchase Order number to cover the COST of the repair,
2. Model and serial number of the product, and
3. Repair instructions and/or specific problems relative to the product.

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering.

OMEGA is a registered trademark of OMEGA ENGINEERING, INC.

© Copyright 2006 OMEGA ENGINEERING, INC. All rights reserved. This document may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without the prior written consent of OMEGA ENGINEERING, INC.

Where Do I Find Everything I Need for Process Measurement and Control? **OMEGA...Of Course!** *Shop online at omega.com*

TEMPERATURE

- ✓ Thermocouple, RTD & Thermistor Probes, Connectors, Panels & Assemblies
- ✓ Wire: Thermocouple, RTD & Thermistor
- ✓ Calibrators & Ice Point References
- ✓ Recorders, Controllers & Process Monitors
- ✓ Infrared Pyrometers

PRESSURE, STRAIN AND FORCE

- ✓ Transducers & Strain Gages
- ✓ Load Cells & Pressure Gages
- ✓ Displacement Transducers
- ✓ Instrumentation & Accessories

FLOW/LEVEL

- ✓ Rotameters, Gas Mass Flowmeters & Flow Computers
- ✓ Air Velocity Indicators
- ✓ Turbine/Paddlewheel Systems
- ✓ Totalizers & Batch Controllers

pH/CONDUCTIVITY

- ✓ pH Electrodes, Testers & Accessories
- ✓ Benchtop/Laboratory Meters
- ✓ Controllers, Calibrators, Simulators & Pumps
- ✓ Industrial pH & Conductivity Equipment

DATA ACQUISITION

- ✓ Data Acquisition & Engineering Software
- ✓ Communications-Based Acquisition Systems
- ✓ Plug-in Cards for Apple, IBM & Compatibles
- ✓ Datalogging Systems
- ✓ Recorders, Printers & Plotters

HEATERS

- ✓ Heating Cable
- ✓ Cartridge & Strip Heaters
- ✓ Immersion & Band Heaters
- ✓ Flexible Heaters
- ✓ Laboratory Heaters

ENVIRONMENTAL MONITORING AND CONTROL

- ✓ Metering & Control Instrumentation
- ✓ Refractometers
- ✓ Pumps & Tubing
- ✓ Air, Soil & Water Monitors
- ✓ Industrial Water & Wastewater Treatment
- ✓ pH, Conductivity & Dissolved Oxygen Instruments

TABLE OF CONTENTS

Introduction	1
1. Separate manuals	1
2. 'Data communications input' by keys	1
[1] Math functions	1
1. Types of math functions	1
2. Programming	3
2.1 Printing channel for computed result	3
2.2 Printing range	3
2.3 Decimal place for display and printing	3
2.4 Computation of maximum, minimum and average values	3
3. Programming flow chart	4
3.1 Types of math function and their flow chart	4
3.2 Square root, logarithm, exponential, absolute value and data communications input	5
3.3 Arithmetic computation 1	6
3.4 Arithmetic computation 2	8
3.5 Computation of maximum, minimum and average values	10
3.6 Computation of temperature/humidity	12
[2] Totalizing	14
1. Math expression for totalizing computation	14
2. Programming	14
2.1 Resetting of totalizing computation	14
2.2 Overflow of totalized value	14
2.3 Operation at power failure recovery	15
2.4 Interval time	15
2.5 Starting time of totalizing computation	15
2.6 Printing range	15
2.7 Decimal place for display and printing	15
3. Programming flow chart	16
[3] Flow correction	18
1. Correction computation types and math expressions	18
1.1 Flow correction computation 1 (FloW1)	18
1.2 Flow correction computation 2 (FloW2)	18
1.3 Flow correction computation 3 (FloW3)	18
1.4 Flow correction computation 4 (FloW3)	19
1.5 Flow correction computation 5 (FloW5)	19
1.6 Flow correction computation 6 (FloW6)	19
1.7 Flow correction computation 7 (FloW7)	19
2. Programming	20
2.1 Printing range	20
2.2 Decimal place for display and printing	20
2.3 Abnormal data	20
3. Programming flow chart	22
[4] List printing	24
[Appendix] Conversion table for temperature/humidity computation	25

Introduction

This manual is only for the optional specifications of 'Math function', 'Totalizer' and 'Flow correction' of RD200 /RD2800 series recorders. For the standard functions and other optional specifications, please refer the separate manuals.

1. Separate manuals

1) Standards

RD200 series (Multi-point type)	M-4342/0606
RD2800 series (Multi-point type)	M-4343/0606
RD200 series (Pen type)	}	M-4341/0606
RD2800 series (Pen type)		

2) Option

Communications interface	M-4344/0606
--------------------------	-------	-------------

2. 'Data communications input' by keys

'Data communications input' can be programmed with keys when the 'Math function' (option) and 'Communications interface' (option) are combined. However, for the option of 'Communications interface', it is programmed through communications only.

[1] Math functions

The measured data of each channel can be computed and their results are displayed and printed.

The alarm setpoints in the channel Nos. for computed results are programmed for the computed values.

1. Types of math functions

TYPE	MATH EXPRESSION	SET VALUE * 1
1. non (no computation)	-	-
2. mUL (Arithmetical computation 1)	$Ax + By + Cxy + D$ A, B, C, D : Constant x, y : Measured values	<ul style="list-style-type: none">• Channel No. for computed result• Constant (A, B, C, D)• Channel No. for measured values (x, y)
3. diV * 2 (Arithmetical computation 2)	$Ax / y + B$ A, B : Constant x, y : Measured values	<ul style="list-style-type: none">• Channel No. for computed result• Constant (A, B)• Channel No. for measured values (x, y).
4. LoGE (Natural Logarithm)	$\text{LOG}_e x$ x : Measured value	<ul style="list-style-type: none">• Channel No. for measured value (x)• (= Channel No. for computed result)
5. LoG10 (Logarithm)	$\text{LOG}_{10} x$ x : Measured value	<ul style="list-style-type: none">• Channel No. for measured value (x)• (= Channel No. for computed result)
6. PoWEr (Exponential)	e^x x : Measured value	<ul style="list-style-type: none">• Channel No. for measured value (x)• (= Channel No. for computed result)

TYPE	MATH EXPRESSION	SET VALUE * 1
7. root * 3 (Square root)	$(S_s - S_z) \sqrt{\frac{R_x - R_z}{R_s - R_z}} + S_z$ <div style="border: 1px solid black; padding: 5px; margin-top: 5px;"> R_x : Voltage value of measuring input R_s : Maximum limit for range setting R_z : Minimum limit for range setting S_s : Maximum limit for scale setting S_z : Minimum limit for scale setting </div>	<ul style="list-style-type: none"> Channel No. for voltage value of measuring input (R_x) (= Channel No. for computed result)
8. Humidity (Humidity)	Measured values of dry bulb (x) and wet bulb (y) and humidity is computed by the relative humidity table. x, y : Measured values	<ul style="list-style-type: none"> Channel No. for computed result Channel No. for measured values (x, y).
9. Hi PEAK (Maximum value)	Maximum value of measured values (x) during an interval	<ul style="list-style-type: none"> Channel No. for computed result Interval Starting time Channel No. for measured value (x)
10. Lo PEAK (Minimum value)	Minimum value of measured values (x) during an interval	
11. AVERAGE (Average value)	Average value of measured values (x) during an interval	
12. AbS * 6 (Absolute value)	$ x $ x : Measured value	<ul style="list-style-type: none"> Channel No. for measured value (x) (= Channel No. for computed result)
13. int * 4 (Totalizer)	This is only applicable for the "Totalizer" (option). Refer to Section [2] for details.	
14. Comm in * 5 (Data communications input)	Nil [Only displayed for the "communications interface" (option)]	<ul style="list-style-type: none"> Channel for data communications input
15-21 * 6 FLoW1 to FLoW7 (Flow correction 1 to 7)	This is only applicable for the "Flow correction" (option). Refer to Section [3] for details.	

*1 : Setting of printing rage is necessary for all math functions from 2 to 21.

*2 : When the measured value (y) is 0, the value (Ax) becomes as bellow.

if $Ax > 0$ then OVER

if $Ax = 0$ then 0

if $Ax < 0$ then -OVER

*3 : The math expression shown in the right side is applied when the measuring input voltage (R_x) is 1% or more of the setting range ($R_s - R_z$). When it is less than 1%, it becomes and is fixed to the minimum value of scale setting (S_z).

*4 : Refer to Section 2 item 14 for the 'Totalizer' (option).

*5 : When the 'Math-function' (option) and 'Communications Interface' (option) are combined, the data communications input can be set by keys.

*6 : Only pen type.

2. Programming

2.1 Printing channel for computed result

1) Math functions of which computed results are only printed in the channels Nos. of measured value

The computed result by the math functions of square root, natural logarithm, logarithm, absolute value, and exponential is only printed in the channel No. of measured value (x). Therefore the measured value (x), which these 5 math functions are applied to, cannot be printed.

2) Math functions of which computed results can be printed in any channels

The computed result by other math functions than the above 5 kinds can be printed in any channels including the channel of measured value. However, if the channel of measured value is selected, the measured value cannot be printed.

2.2 Printing range

The printing range of the channel for computed result is "Printing range" programmed by math function programming, not by range programming.

2.3 Decimal place for display and printing

The decimal place is decided by "Printing range" programmed by math function programming. If the decimal place differs in the maximum and minimum values, the fewer decimal places is effective.

2.4 Computation of maximum, minimum and average values

1) Resetting of computation

The computation is automatically reset after the programmed interval time. Accordingly maximum, minimum and average values in each interval time are computed.

2) Operation at power failure recovery

1. If the power is recovered in the programmed interval time, the computation continues.
2. If the power is not recovered in the programmed interval time, the computation is canceled and starts again from the recovery time.
3. The judgment of power failure is within 24 hours. If the power failure continues longer than 24 hours, the computation is canceled irrespective the recovery time and starts again from the recovery time.

3) Starting time of computation

The starting time is only valid for the first operation after its setting. The computation starts from the starting time.

3. Programming flow chart


3.1 Types of math function and their flow charts

The programming flow chart differs on the type of math function.

Type of math function	Item No. (Page)
MuL (Arithmetic computation 1)	3.3 (page 6)
diV (Arithmetic computation 2)	3.4 (page 8)
LoGE (Natural logarithm)	3.2 (page 5)
LoG10 (Logarithm)	3.2 (page 5)
PoWER (Exponential)	3.2 (page 5)
Root (Square root)	3.2 (page 5)
Humidity (Humidity)	3.6 (page 12)
Hi PEAK (Maximum value)	3.5 (page 10)
Lo PEAK (Minimum value)	3.5 (page 10)
AVErAGE (Average value)	3.5 (page 10)
AbS (Absolute value)	3.2 (page 5)
Comm in (Data communications port)	3.2 (page 5)

3.2 Square root, logarithm, exponential, absolute value and data communications input

(Ex.) To execute the square root computation for the measured value of Channel 2 and program the printing range to 0.0 to 100.0

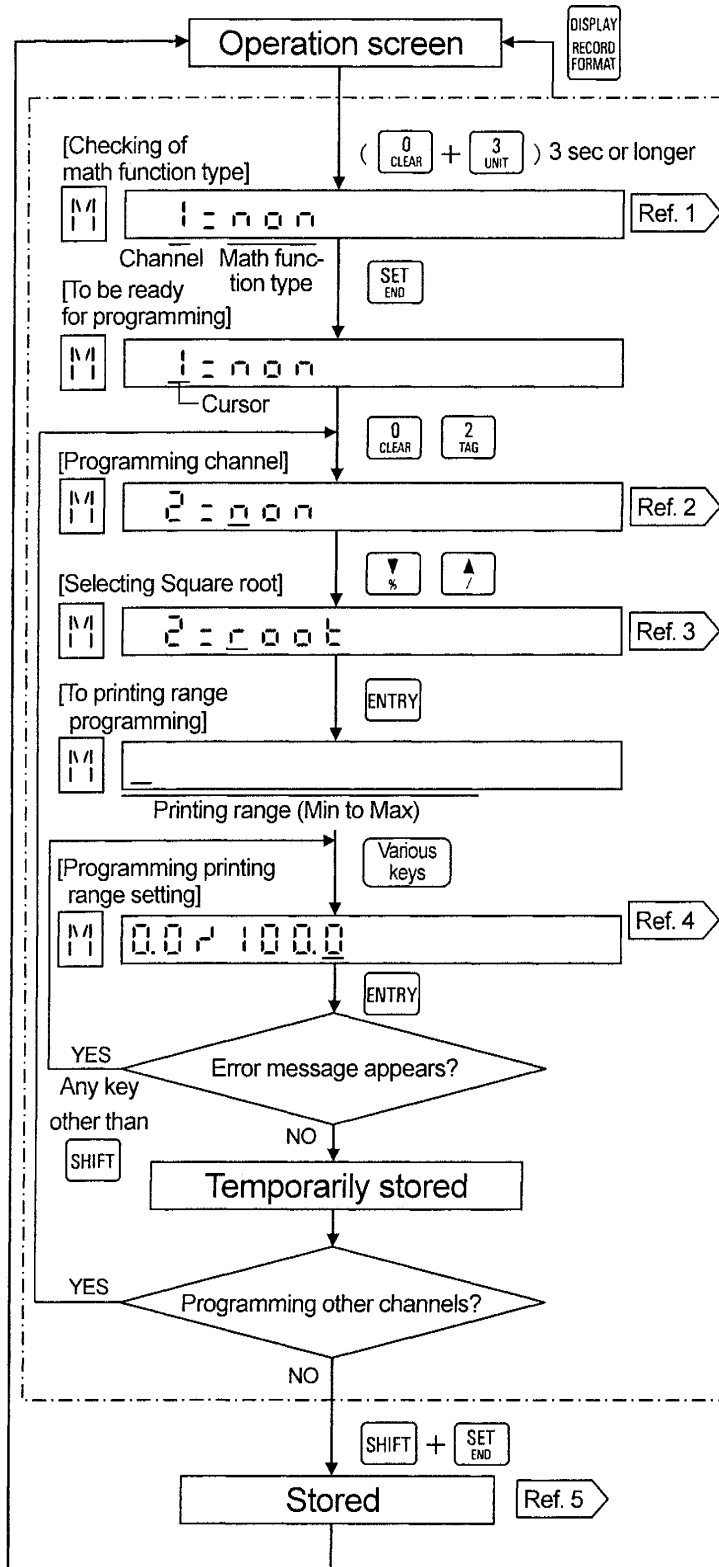

Ref. 1 Checking of other channels

You can check the math function type of other channels. Press or to change channels.

Ref. 2 Channel digit

In AH3000 series multi-point type, a channel is programmed by two digits (06/12/24).

Ref. 3 Math functions by this flow chart.

- This flow chart is applied to the following 3 math functions.
- When the communications interface is added, the data communications input can be set with keys.

LoGE	: Natural logarithm
Log10	: Logarithm
PoWEr	: Exponential
AbS	: Absolute value
Commin	: Data communications input

Ref. 4 Programming range of max. and min. values


Program the values within 5 digits including a sign. The remaining digits on the right side should be kept blank. For the initial programming, all digits are blank.

Ref. 5 Storing

Store "temporarily stored" parameters by pressing and simultaneously. If not, the parameters programmed earlier remain.

3.3 Arithmetic computation 1

(Ex.) $Ax + By + Cxy + D$: To multiply the measured value 'x' of Channel 2 by 2 and print its result on Channel 2
 $A = 2, B = C = D = 0, x = \text{Channel 2}, y = \text{not used}$, Printing range = 0.0 to 100.0

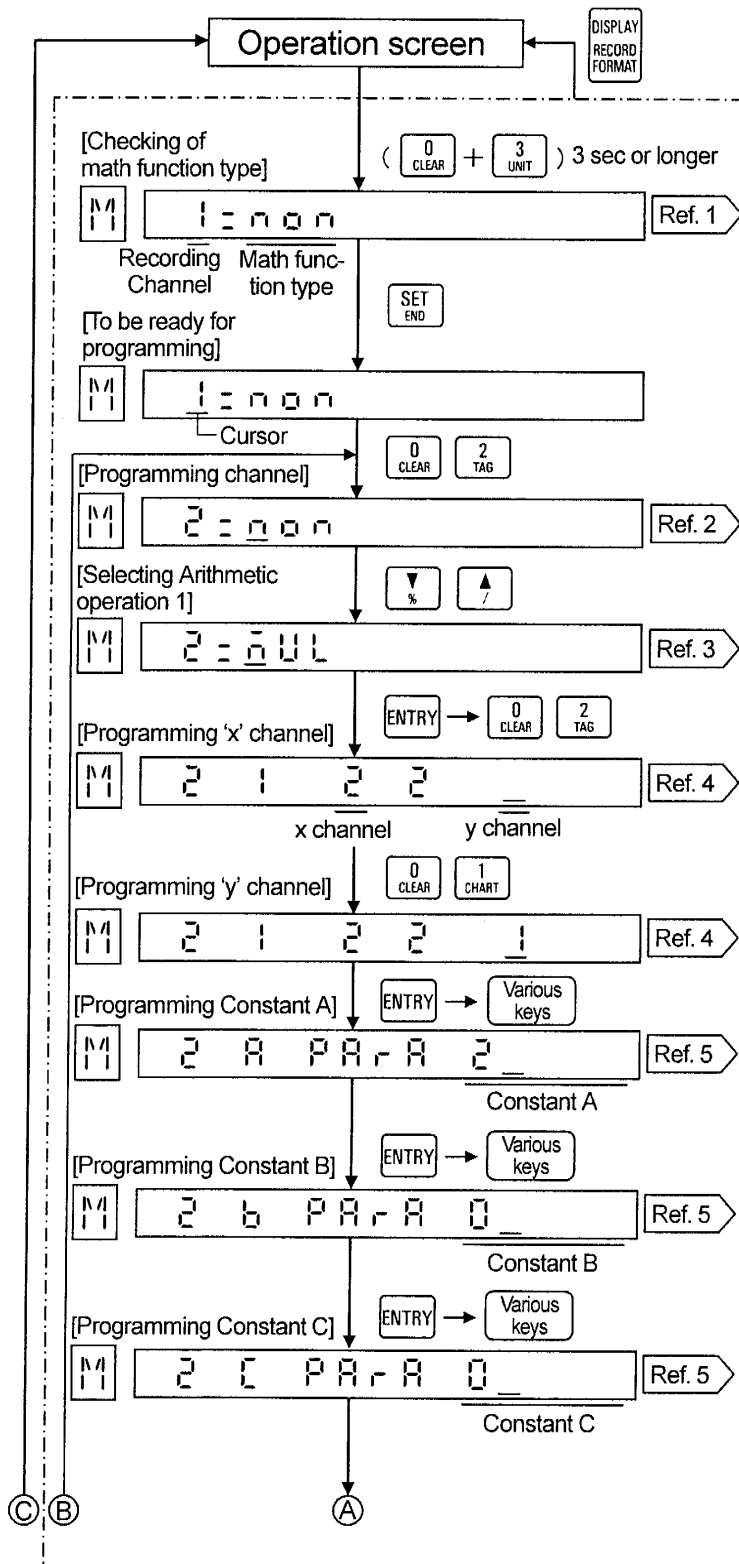

Ref. 1 Checking of other channels
 You can check the math function type of other channels. Press \downarrow or \uparrow to change channels.

Ref. 2 Channel digit
 In AH3000 series multi-point type, a channel is programmed by two digits (06/12/24).


Ref. 3 Math functions by this flow chart.
 This flow chart is only applied to Arithmetic computation 1 (mUL).

Ref. 4 'x' and 'y' channels

1. Not-used channel
 If the measured value of 'x' channel or 'y' channel is not used, make sure to program any channel number to the channel not used as a dummy input. (No programming of the channel not used will become an error.) Then program the appropriate constants to '0'.
2. For the initial programming, both 'x' and 'y' channels are blank.

Ref. 5 Constants of A, B, C and D

1. Not-used constants
 For the not-used constant, program it to '0'.
2. Programming of constants
 (1) 5 digits or less including a sign
 (2) Down to three decimal places
 Ex. $\square\square.\square\square\square$

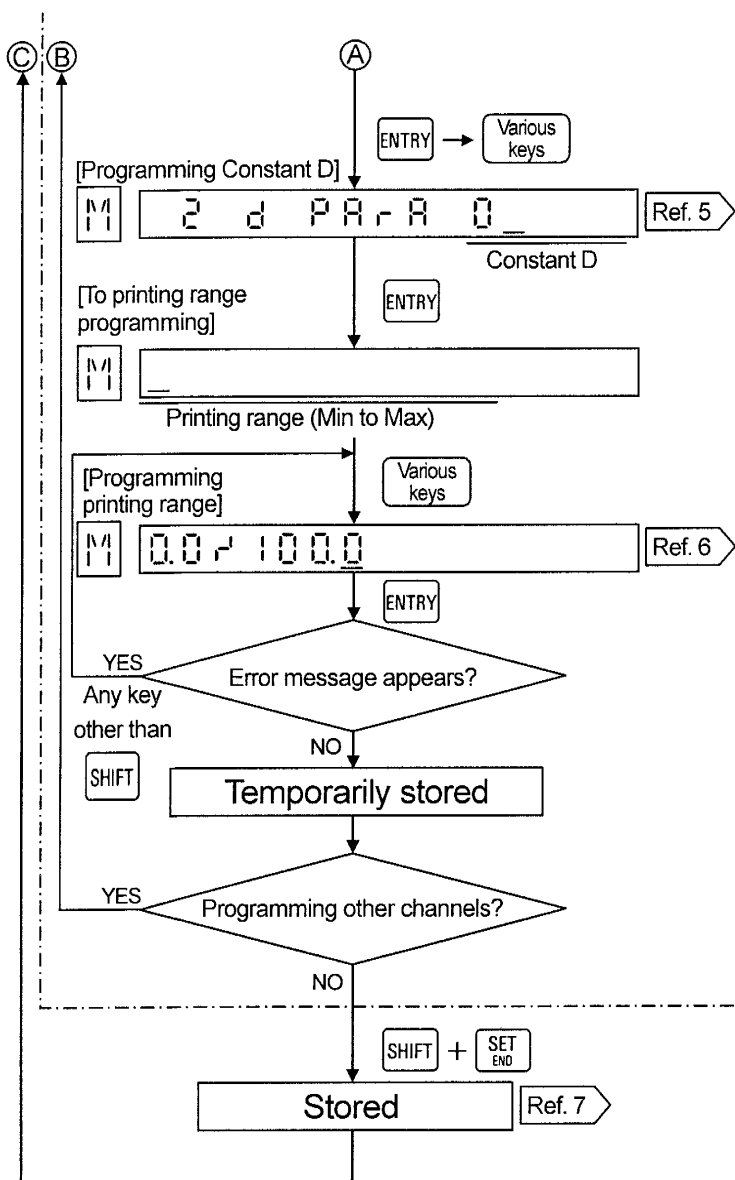

Ref. 6 Programming range of max. and min. values

Program the values within 5 digits including a sign. The remaining digits on the right side should be kept blank. For the initial programming, all digits are blank.


Ref. 7 Storing

Store "temporarily stored" parameters by pressing **SHIFT** and **SET END** simultaneously. If not, the parameters programmed earlier remain.

3.4 Arithmetic computation 2

(Ex.) $Ax / y + B$: To divide the measured value 'x' of Channel 2 by the measured value 'y' of Channel 1 and print its result on Channel 2

A = 1.0, B = 0, x = Channel 2, y = 1, Printing range = 0.0 to 100.0

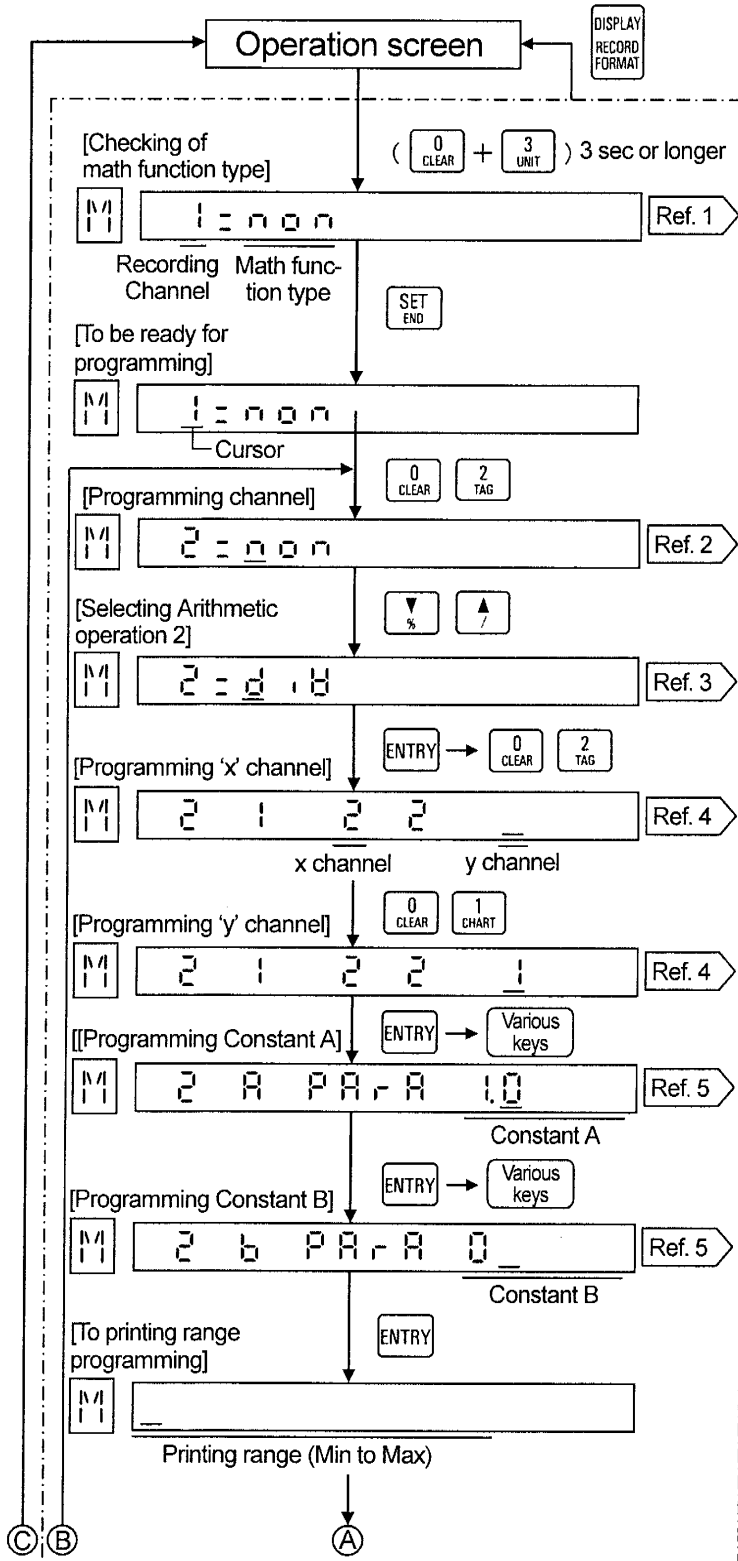

Ref. 1 Checking of other channels

You can check the math function type of other channels. Press \downarrow or \uparrow to change channels.

Ref. 2 Channel digit

In AH3000 series multi-point type, a channel is programmed by two digits (06/12/24).

Ref. 3 Math functions by this flow chart.


This flow chart is only applied to Arithmetic computation 2 (dIV).

Ref. 4 'x' and 'y' channels

For the initial programming, both 'x' and 'y' channels are blank.

Ref. 5 Constants of A and B

1. Not-used constants
For the not-used constant (B), program it to '0'.
2. Programming of constants
 - (1) 5 digits or less including a sign
 - (2) Down to three decimal places
Ex. $\square\square.\square\square\square$

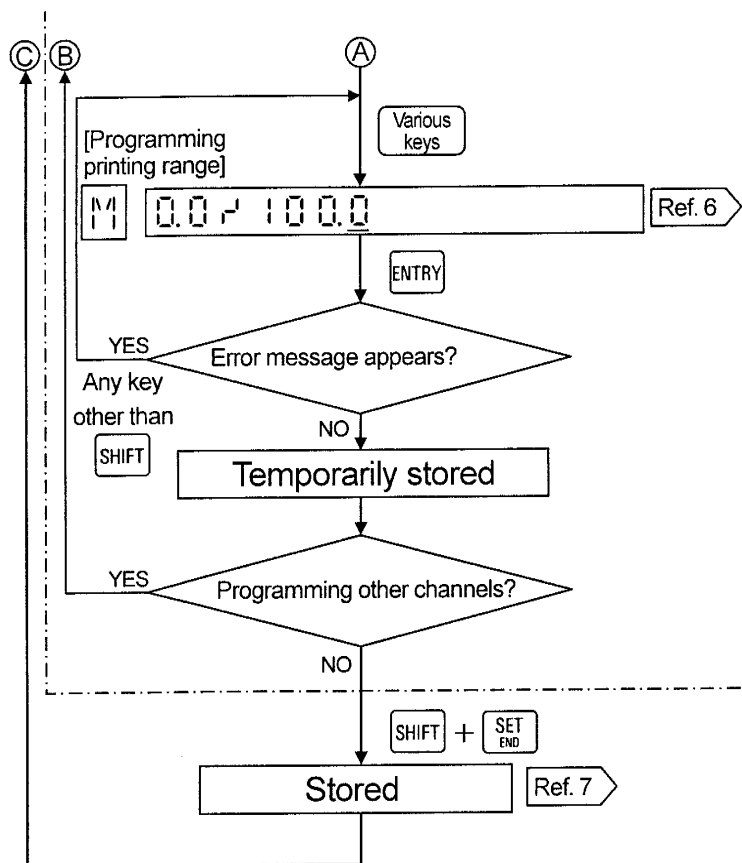

Ref. 6 Programming range of max. and min. values


Program the values within 5 digits including a sign. The remaining digits on the right side should be kept blank. For the initial programming, all digits are blank.


Ref. 7 Storing

Store "temporarily stored" parameters by pressing **SHIFT** and **SET END** simultaneously. If not, the parameters programmed earlier remain.

3.5 Computation of maximum, minimum and average values

(Ex.: Maximum value) To print, on Channel 3, the maximum value in the measured value of Channel 2
 A (Interval) = 30 min., B (Start time) = 08:00 am, Printing range = 0.0 to 100.0

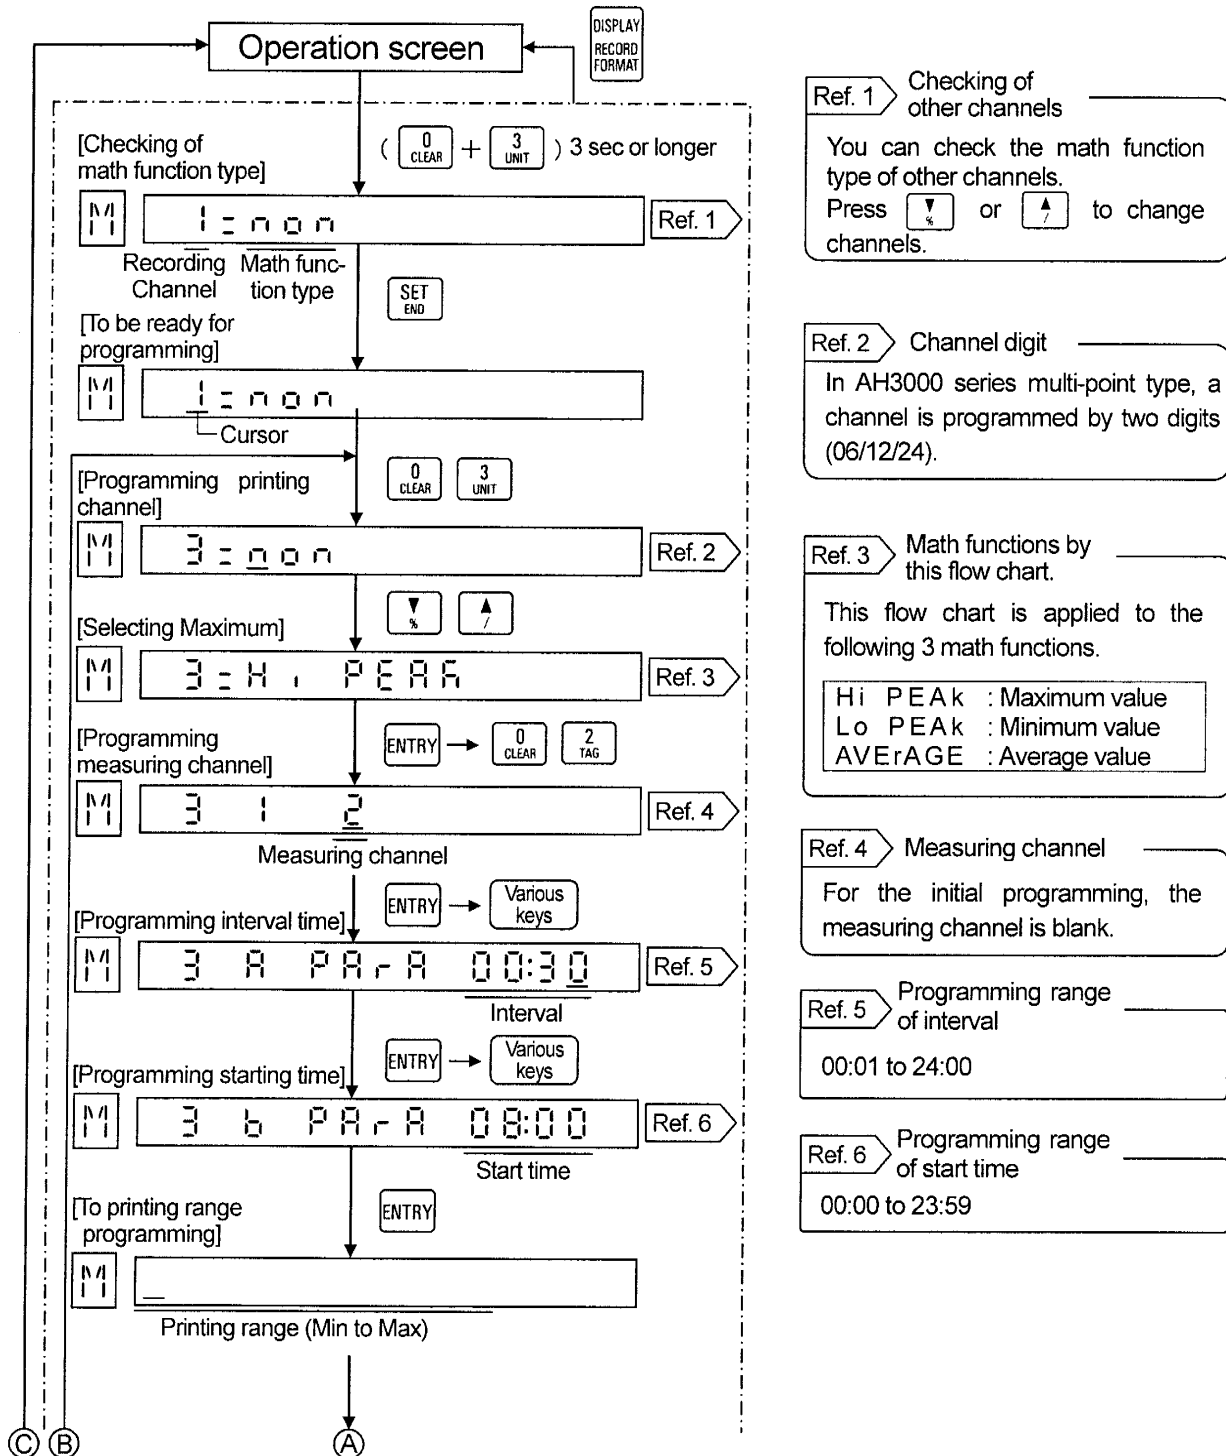

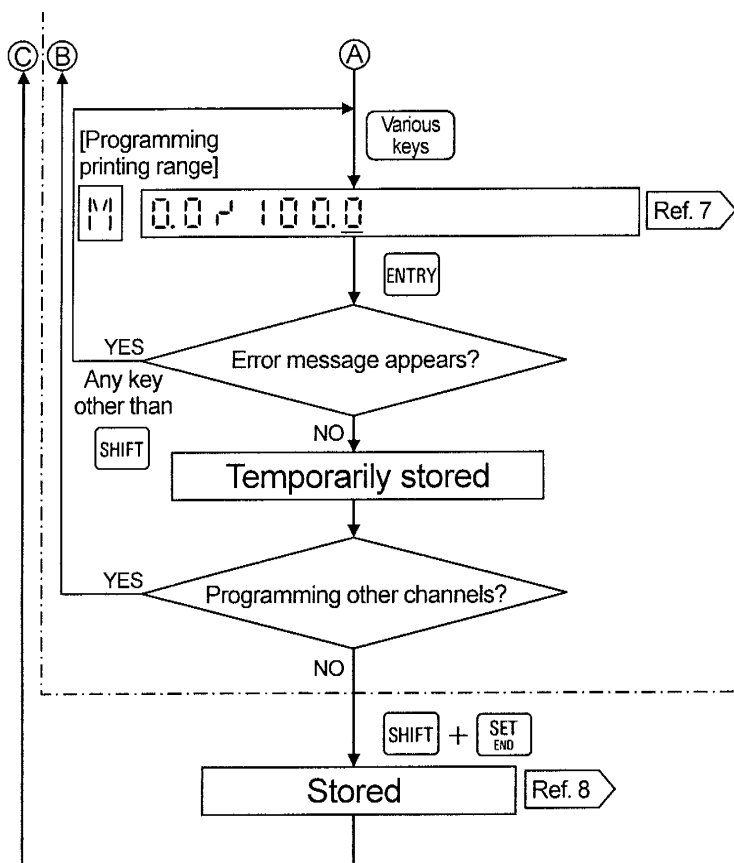

Ref. 7 Programming range of max. and min. values

Program the values within 5 digits including a sign. The remaining digits on the right side should be kept blank. For the initial programming, all digits are blank.


Ref. 8 Storing

Store "temporarily stored" parameters by pressing **SHIFT** and **SET END** simultaneously. If not, the parameters programmed earlier remain.

3.6 Computation of temperature/humidity

(Ex.) To print the humidity on Channel 2

Dry bulb (Temperature) = Channel 1, Wet bulb (Temperature) = Channel 2, Printing range = 0.0 to 100.0

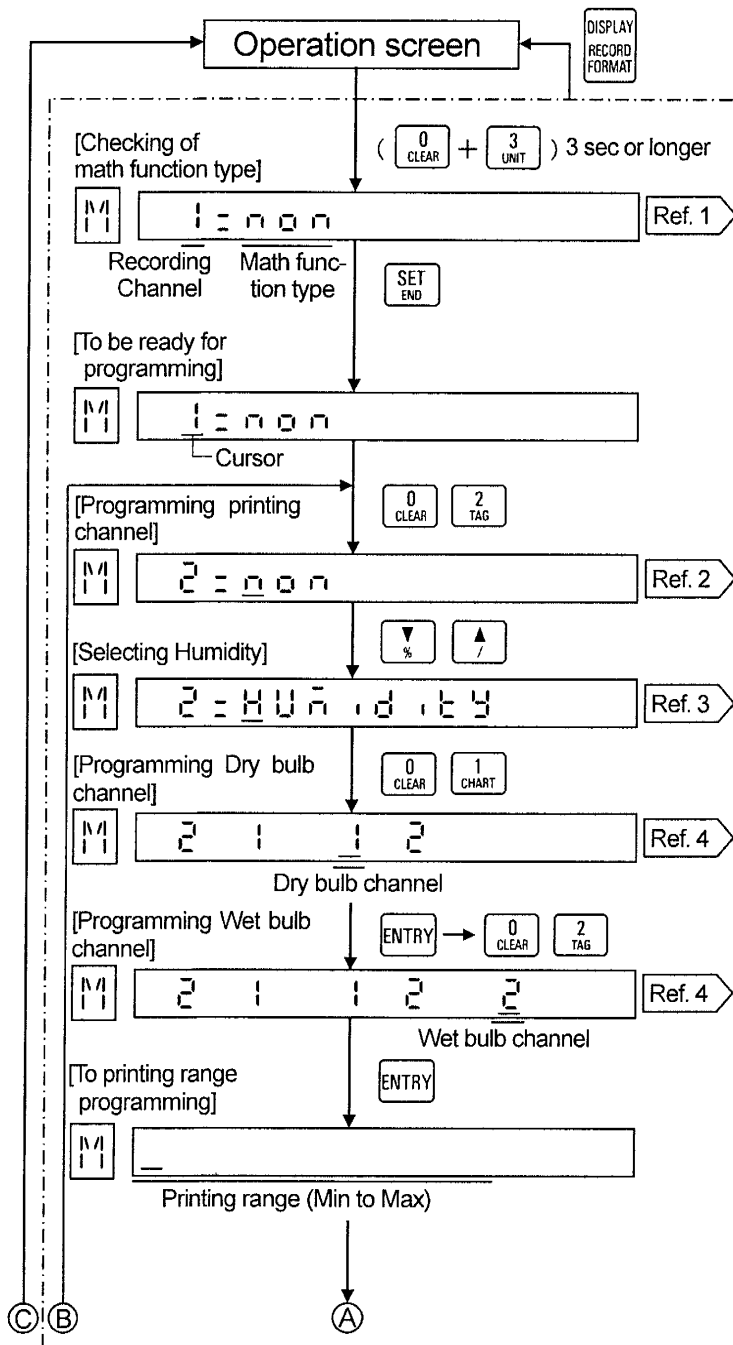

Ref. 1 Checking of other channels

You can check the math function type of other channels. Press or to change channels.

Ref. 2 Channel digit


In AH3000 series multi-point type, a channel is programmed by two digits (06/12/24).

Ref. 3 Math functions by this flow chart.

This flow chart is only applied to Humidity computation (Humidity).

Ref. 4 Dry and wet bulb channels

For the initial programming, both dry bulb and wet bulb channels are blank.

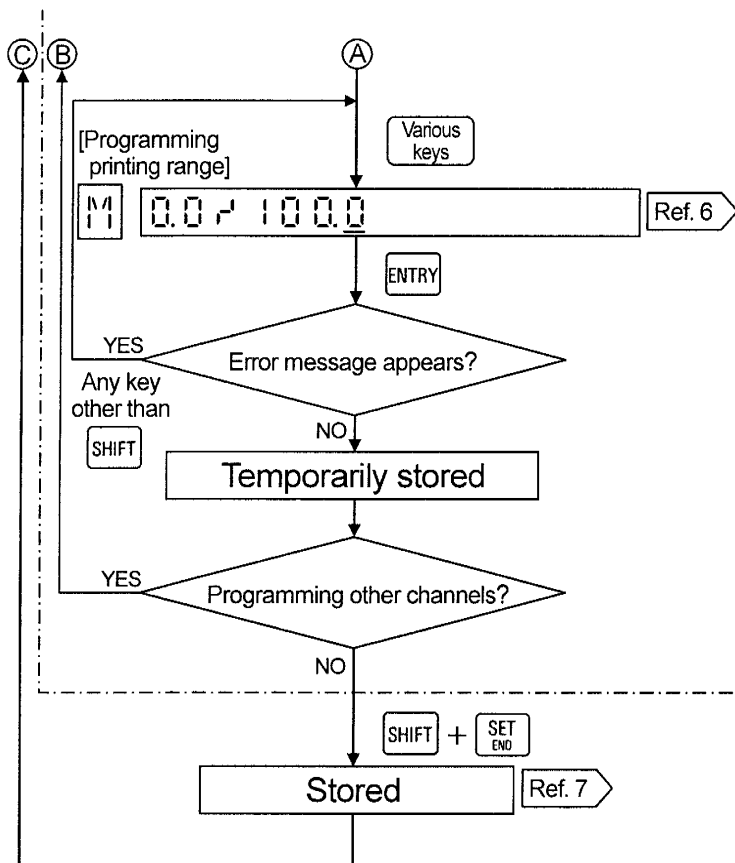

Ref. 6 Programming range of max. and min. values

Program the values within 5 digits including a sign. The remaining digits on the right side should be kept blank. For the initial programming, all digits are blank.

Ref. 7 Storing

Store "temporarily stored" parameters by pressing **SHIFT** and **SET END** simultaneously. If not, the parameters programmed earlier remain.

[2] Totalizing

The measured data of each channel can be totalized and their results are displayed and printed.

The alarm setpoints in the channel Nos. for totalized results is programmed for the totalized values.

1. Math expression for totalizing computation

$$INT_n = INT_{n-1} + \frac{(PV_n + PV_{n-1}) \times (T_n - T_{n-1})}{2} \div T_{base}$$

INT_n : Totalized value

T_n : Measured time at this time

INT_{n-1} : Last totalized value

T_{n-1} : Measured time at last time

PV_n : Measured value at this time *1

T_{base} : Time unit *2

PV_{n-1} : Measured value at last time *1

*1 : If the measured value exceeds the scale range, the minimum or maximum values of scale is taken as the measured value.

*2 : This time unit is for the measured value. If the unit is in second, the value is 1. If it is in minute, the value is 60. If it is in hour, the value is 3600. The unit is selected from second, minute or hour.

(Ex.) m3/min→60, m3/h→3600

Note) Measuring interval ($T_n - T_{n-1}$)

AL3000 Multi-point type (6-point input): approx. 5 seconds

AH3000 Multi-point type (6-point input): approx. 5 seconds

AH3000 Multi-point type (12-point input): approx. 10 seconds

AH3000 Multi-point type (24-point input): approx. 20 seconds

AL3000 pen type (1 to 4 point input): approx. 0.1 second

AH3000 pen type (1 to 4 point input): approx. 0.1 second

2. Programming

2.1 Resetting of totalizing computation

1) Start and resetting of totalized value by remote contacts reset

When the optional remote contacts function is added, the totalizing computation can be started or the totalized value can be reset by the remote contacts signal.

When the totalizing computation starts by the remote contacts reset, the totalized value is reset with each programmed interval, after the start.

For multi-point type, the EX4 terminal in remote contacts terminals EX1 to EX4 is used for the resetting of totalizing computation. The list printing is only executed by using this terminal when the totalizing computation is not required. For details, refer to the separate standard manual.

2) Resetting of totalized value by the programmed intervals

The totalized value is automatically reset after the programmed interval time from the start of the totalizing computation, and then restarts.

2.2 Overflow of totalized value

The maximum totalized value is limited to the maximum value of the printing range. When this totalized value exceeds its limitation, the value is reset to 0 and then the totalizing computation continues.

2.3 Operation at power failure recovery

1. If the power is recovered in the programmed interval time, the totalizing computation continues.
2. If the power is not recovered in the programmed interval time, the totalizing computation is canceled * and starts again from the recovery time.
3. The judgment of power failure is within 24 hours. If the power failure continues longer than 24 hours, the totalizing computation is canceled irrespective the recovery time and starts again from the recovery time.

* The totalizing computation is canceled and reset.

2.4 Interval time

The programming range of the interval time is 00:01 to 24:00. If the interval time is not required (in case of resetting of the totalized value by the remote contacts reset), program it to 99:00.

2.5 Starting time of totalizing computation

The programming range of the starting time is 00:00 to 23:59. This starting time is only valid for the first operation after its setting. The totalizing computation starts from the starting time. If the starting time is not required (starting by the remote contacts signal), program it to 99:00.

2.6 Printing range


The printing range of the channel for totalized result is "Printing range" programmed by totalizing computation programming, not by range programming.

2.7 Decimal place for display and printing

The decimal place is decided by "Printing range" programmed by totalizing computation programming. If the decimal place differs in the maximum and minimum values, the fewer decimal places is effective.

3. Programming flow chart

(Ex.) To execute the totalizing computation for measured value of Channel 1 and print its result on Channel 2
 Time unit = min, Totalizing interval = 1 hour, Start time = 08:00 am
 Printing range for totalized value = 0 to 1000

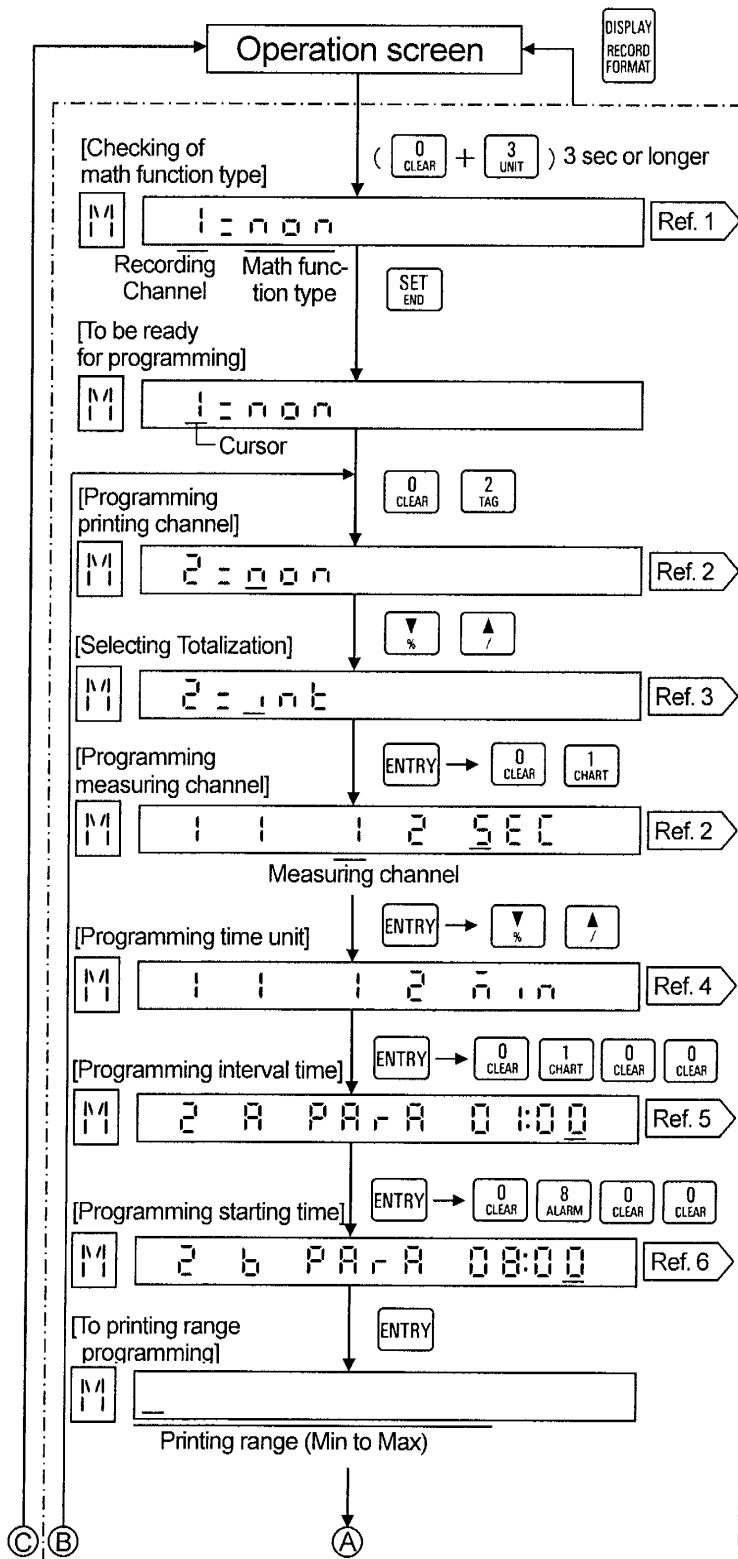

Ref. 1 Checking of other channels

You can check the math function type of other channels. Press (0 CLEAR) or (3 UNIT) to change channels.

Ref. 2 Channel digit

In AH3000 series multi-point type, a channel is programmed by two digits (06/12/24).

Ref. 3 Math functions by this flow chart.

This flow chart is only applied to Totalizing computation (int). For the combined option with math functions, various items are displayed.

Ref. 4 Time unit


3 types of time unit (sec, min, and hour) for measured value, are available.
 (Ex.) If m^3/min is required, select min.

Ref. 5 Programming range of interval

00:01 to 24:00
 If the interval time is not required, program it to 99:00.

Ref. 6 Programming range of start time

00:00 to 23:59
 If the starting time is not required, program it to 99:00.

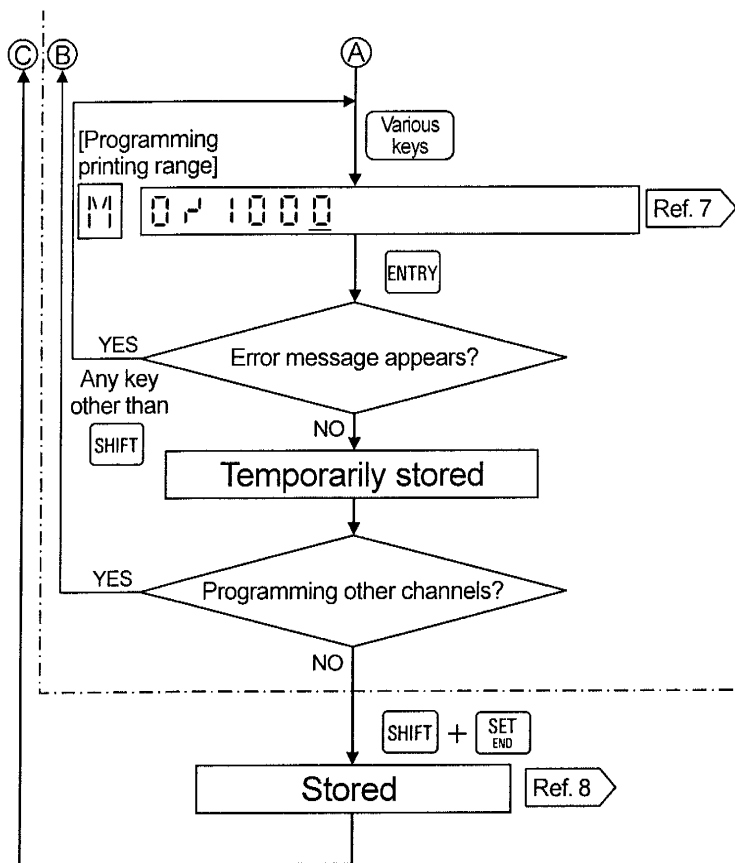

Ref. 7 Programming range of max. and min. values

Program the values within 5 digits including a sign. The remaining digits on the right side should be kept blank. For the initial programming, all digits are blank.

Ref. 8 Storing

Store "temporarily stored" parameters by pressing **SHIFT** and **SET END** simultaneously. If not, the parameters programmed earlier remain.

[3] Flow correction

1. Correction computation types and math expressions

1.1 Flow correction computation 1 (FLoW1):

Volume correction of gas (ideal gas)

$$A \cdot X \cdot (E + B) / (C \cdot (F + D))$$

A, B, C, D: Constants
E, F: Arbitrary channels
X: Measuring channel

(Basic formula)

$$Q_n = Q_i \times \frac{T_n}{T_i} \times \frac{P_i}{P_n} \times \frac{Z_n}{Z_i}$$

Q_n : Corrected result
 T_n : Reference temperature
 P_n : Reference pressure
 Z_n : Compression coefficient of measured fluid at reference temperature (T_n) and reference pressure (P_n).
 Z_i : Compression coefficient of measured fluid at measurement condition

Q_i : Volumetric flow rate at measurement condition of flow meter
 T_i : Temperature of measured fluid at measurement condition
 P_i : Pressure of measured fluid at measurement condition

1.2 Flow correction computation 2 (FloW2):

Volume correction of liquid (excluding petroleum)

$$X \cdot (1 - A \cdot (E - B)) \cdot (1 + C \cdot (F - D))$$

A, B, C, D: Constants
E, F: Arbitrary channels
X: Measuring channel

(Basic formula)

$$Q_n = Q_i \cdot (1 - \alpha \cdot (T_i - T_n)) \cdot (1 + \beta \cdot (P_i - P_n))$$

Q_n : Corrected result
 T_n : Reference temperature
 P_n : Reference pressure
 α : Cubic expansion coefficient of measured fluid
 β : Compressibility of measured fluid.

Q_i : Volumetric flow rate at measurement condition of flow meter
 T_i : Temperature of measured fluid at measurement condition
 P_i : Pressure of measured fluid at measurement condition

1.3 Flow correction computation 3 (FloW3):

Volume correction of liquid (petroleum)

$$E \cdot \exp(A \cdot (F - B) + C \cdot (F - B)^2)$$

A, B, C: Constants
E, F: Arbitrary channels

(Basic formula)

$$Q_n = Q_i \cdot \exp(-\alpha_t \cdot \Delta t \cdot (1.0 + 0.8\alpha_t \cdot \Delta t))$$

$$\alpha_t = \frac{K0}{(\rho_{15})^2} \times \frac{K1}{\rho_{15}}$$

Q_n : Corrected result
 Q_i : Volumetric flow rate at measurement condition of flow meter
 ρ_{15} : Density (15°C) [kg/m³]
K0, K1 : Constants

α_t : Thermal expansion coefficient at 15°C [°C⁻¹]
 Δt : Temperature difference [t = $T_i - 15$] [°C]

1.4 Flow correction computation 4 (FloW3):

Square root computation of flow correction 1

$$\sqrt{A \cdot X \cdot (E+B) / C \cdot (F+D)}$$

A, B, C, D: Constants
E, F: Arbitrary channels
X: Measuring channel

1.5 Flow correction computation 5 (FloW5):

Temperature/pressure correction of differential pressure type flow meter (ideal gas)

$$A \cdot X \cdot \sqrt{(B \cdot E + C) / (D \cdot F + 273.15)}$$

A, B, C, D: Constants
E, F: Arbitrary channels
X: Measuring channel

(Basic formula)

$$Q_d = Q_f \cdot \sqrt{\frac{P_f}{P_d}} \cdot \sqrt{\frac{T_d}{T_f}}$$

Q_d : Corrected result
 Q_f : Flow rate at measurement condition.
 P_d : Reference pressure
 T_d : Reference temperature
 P_f : Pressure of measured fluid at measurement condition
 T_f : Temperature of measured fluid at measurement condition

1.6 Flow correction computation 6 (FloW6):

Temperature correction of differential pressure type flow meter (ideal gas)

$$(A \cdot E + B) / \sqrt{C \cdot F + D}$$

A, B, C, D: Constants
E, F: Arbitrary channels

1.7 Flow correction computation 7 (FloW7):

Pressure correction of differential pressure type flow meter (ideal gas)

$$(A \cdot E + B) \cdot \sqrt{C \cdot F + D}$$

A, B, C, D: Constants
E, F: Arbitrary channels

2. Programming

2.1 Printing range

The printing range of the channel for flow correction computed result is "Printing range" programmed by flow correction computation programming, not by range programming.

2.2 Decimal place for display and printing

The decimal place is decided by "Printing range" programmed by flow correction computation programming. If the decimal place differs in the maximum and minimum values, the fewer decimal places is effective.

2.3 Abnormal data

1. When the data of each channel is abnormal (over-range, under-range, burnout, without range programming) or a denominator becomes zero (0), the flow correction computed result is treated as under-range.
2. The flow rate input before correction is computed with the limitation at 0.


memo

3. Programming flow chart

(Ex.) Flow correction 1: $A \cdot X \cdot (E + B) / (C \cdot (F + D))$

A = D = 273.15, B = 0, C = 1, E = Channel 3 (pressure input)

F = Channel 4 (temperature input), X = Channel 2 (flow input), Printing range = 0.0 to 100.0

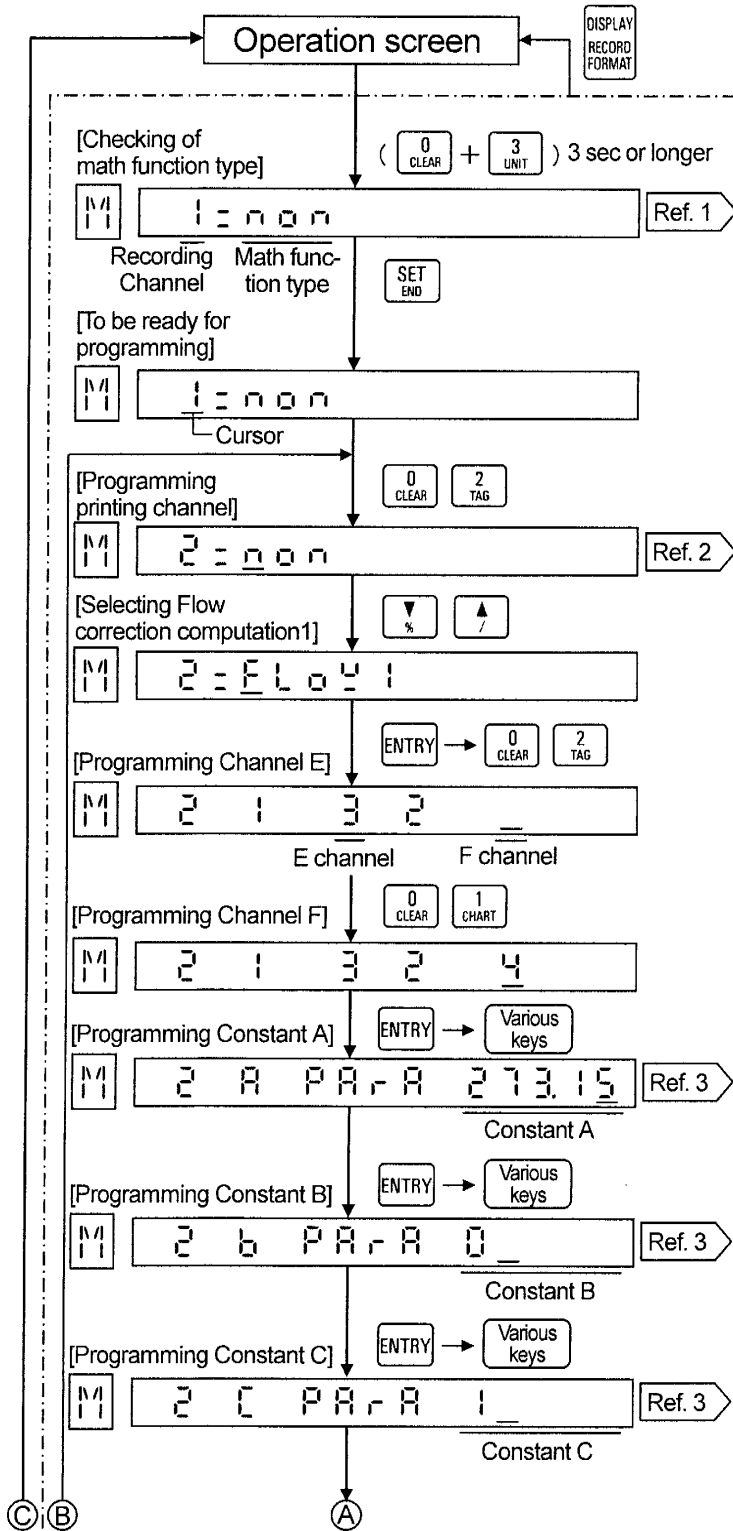

Ref. 1 Checking of other channels


You can check the math function type of other channels. Press or to change channels.

Ref. 2 Channel digit

In AH3000 series multi-point type, a channel is programmed by two digits (06/12/24).

Ref. 3 Constants of A, B, C and D

1. Not-used constants
For the not-used constant (B), program it to '0'.
2. Programming of constants
(1) 5 digits or less including a sign
(2) Down to three decimal places
Ex.
3. For FlowW3, the constant D is not existed.

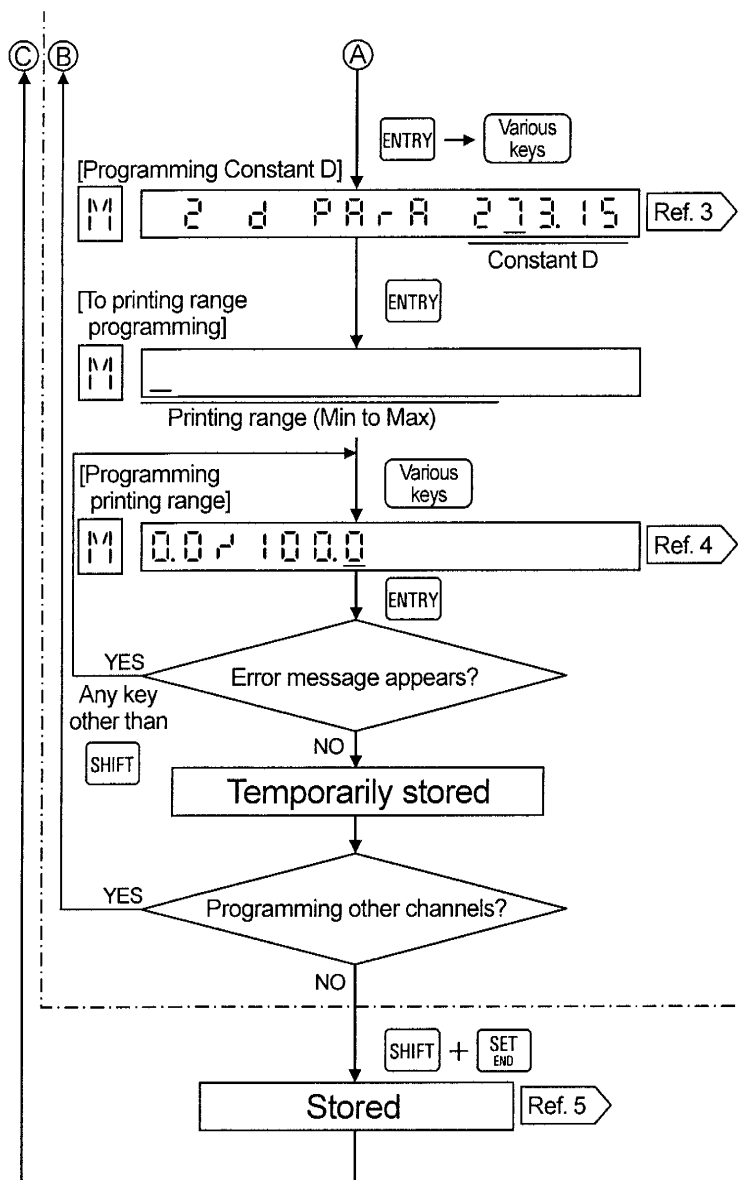

Ref. 4 Programming range of max. and min. values

Program the values within 5 digits including a sign. The remaining digits on the right side should be kept blank. For the initial programming, all digits are blank.

Ref. 5 Storing

Store "temporarily stored" parameters by pressing **SHIFT** and **SET END** simultaneously. If not, the parameters programmed earlier remain.

[4] List printing

If the channels that math computation, totalizing computation or flow correction computation is programmed exist, a list of these computations is printed after the scale printing (including engineering unit and tag).

[Example of list print]

CH	MATH	RECORD	PARAMETERS	
1	MUL	0.0~100.0	E:1 F:2	← Arithmetic computation 1
	A: 2, B: 0, C: 0, D: 0			
2	DIV	0.0~100.0	E:2 F:3	← Arithmetic computation 2
	A:2, B:1.5			
3	LOGE	0.00~100.00		← Natural logarithm computation
4	LOG10	0.0~200.0		← Logarithm computation
5	POWER	0.0~50.0		← Exponential computation
6	ROOT	0.0~100.0		← Square root computation
2	HUMID	0.0~100.0	E:1 F:2	← Temperature/humidity computation
3	H-PEAK	0~1000	E:3	← Maximum value computation
	A: 01:00, B: 08:00			
4	L-PEAK	-100.0~100.0	E:4	← Minimum value computation
	A: 00:30, B:12:00			
5	AVE	0.00~100.00	E:5	← Average value computation
	A: 01:00, B: 06:30			
6	ABS	0.00~100.00		←Absolute value computation
1	INT	0.0~1000.0	E:1 F:M	← Totalizing computation
	A: 00:30, B: 08:00			
2	COMM	0.0~1000.0		← Data communications input
1	FLOW1	0.0~100.0	E:2 F03	←Flow correction computation 1
	A: 273.15, B: 0, C: 1, D: 273.15			

[Remark 1]

The above example is for RD200.

For RD2800, Arithmetic computation 1, Arithmetic computation 2, Maximum value computation, Minimum value computation, Average value computation and Totalizing computation are printed in a single line.

[Remark 2]

Parameters E and F

E is for x channel and F is for y channel.

For the totalizing computation, E is for a measuring channel and F is for a time unit.

[Remark3]

The printing format for FLoW2 to FLoW7 is same as FLoW1.

For FLoW3, the constant D is not printed because it does not exist.

[Appendix] Conversion table for temperature/humidity computation

$\Delta\theta$ θ_w	0.0	0.2	0.4	0.6	0.8	1.0	1.2	1.4	1.6	1.8	2.0	2.2	2.4	2.6	2.8	3.0	3.5	4.0	4.5	5.0	5.5	6.0	6.5	7	8	9	10	11	12	13	14
40	94	99	98	96	95	94	93	92	91	89	88	87	86	85	84	83	81	78	76	73	71	69	67	65	61	57	54	51	48	45	43
38	94	99	97	96	95	94	93	91	90	89	88	87	86	85	84	83	80	78	75	73	71	68	66	64	60	56	53	50	47	44	42
36	94	99	97	96	95	94	92	91	90	89	88	87	85	84	83	82	79	77	74	72	70	68	65	63	59	56	52	49	46	43	41
34	93	99	97	96	95	94	92	91	90	88	87	86	85	84	83	82	79	76	74	71	69	67	64	62	58	55	51	48	44	42	39
32	93	99	97	96	95	94	92	91	89	88	87	86	84	83	82	81	78	76	73	70	68	66	63	61	57	53	50	46	43	41	38
30	93	99	97	96	94	93	92	90	89	88	86	85	84	83	82	80	77	75	72	69	67	65	62	60	56	52	48	45	42	39	36
28	93	99	97	96	94	93	91	90	89	87	86	85	83	82	81	80	77	74	71	68	66	63	61	59	55	51	47	43	40	37	35
26	92	99	97	95	94	92	91	90	88	87	85	84	83	81	80	79	76	73	70	67	65	62	60	57	53	49	45	42	39	36	33
24	92	99	97	95	94	92	91	89	88	86	85	83	82	81	79	78	75	72	69	66	63	61	58	56	51	47	43	40	37	34	31
22	92	99	97	95	93	92	90	89	87	86	84	83	81	80	78	77	74	71	68	65	62	59	57	54	50	45	41	38	35	31	29
20	91	99	96	95	93	91	90	88	86	85	83	82	80	79	77	76	73	69	66	63	60	58	55	52	48	43	39	35	32	29	26
18	91	98	96	94	93	91	89	87	86	84	83	81	79	78	76	75	71	68	65	62	59	56	53	50	45	41	37	33	30	27	24
16	90	98	96	94	92	90	89	87	85	83	82	80	78	77	75	74	70	66	63	60	57	54	51	48	43	38	34	30	27	24	21
14	90	98	96	94	92	90	88	86	84	82	81	79	77	75	74	72	68	64	61	57	54	51	48	45	40	35	31	27	24	20	17
12	89	98	96	93	91	89	87	85	83	81	79	77	76	74	72	70	66	62	59	55	52	48	45	42	37	32	28	24	20	17	14
10	88	98	95	93	91	88	86	84	82	80	78	76	74	72	70	69	64	60	56	52	49	45	42	39	33	28	24	20	16	13	10
8	88	97	95	92	90	88	85	83	81	79	76	74	72	70	68	66	62	57	53	49	46	42	39	35	29	24	19	15	11		
6	87	97	94	92	89	87	84	82	79	77	75	72	70	68	66	64	59	54	50	46	42	38	34	31	25	19	15	10			
4	86	97	94	91	88	86	83	80	78	75	73	70	68	66	63	61	56	51	46	42	37	33	30	26	20	14					
2	84	97	93	91	87	84	81	78	76	73	70	68	65	63	60	58	52	47	42	37	33	28	24	21	14						
0	83	96	93	89	86	83	80	76	73	70	67	65	62	59	57	54	48	42	37	31	27	22	18	14							
-2	81	96	92	88	85	81	78	74	71	68	64	61	58	55	52	50	43	37	31	25	20	15	11								
-4	79	95	91	87	83	79	75	71	68	64	61	57	54	51	48	45	37	30	24	18	13										
-6	77	95	90	86	81	77	72	68	64	60	56	53	49	45	42	39	30	23	16	10											
-8	74	95	89	84	79	74	69	64	60	56	51	47	43	39	35	32	23	14													
-10	71	94	88	82	76	71	65	60	55	50	45	40	36	32	27	23	13														

$\Delta\theta$: Temperature difference between dry bulb and wet bulb θ_w : Temperature of wet bulb (°C)