

# Where Do I Find Everything I Need for Process Measurement and Control? OMEGA... Of Course!

## TEMPERATURE

- Thermocouple, RTD & Thermistor Probes, Connectors, Panels & Assemblies
- Wire: Thermocouple, RTD & Thermistor
- Calibrators & Ice Point References
- Recorders, Controllers & Process Monitors
- Infrared Pyrometers

## PRESSURE, STRAIN AND FORCE

- Transducers & Strain Gauges
- Load Cells & Pressure Gauges
- Displacement Transducers
- Instrumentation & Accessories

## FLOW/LEVEL

- Rotameters, Gas Mass Flowmeters & Flow Computers
- Air Velocity Indicators
- Turbine/Paddlewheel Systems
- Totalizers/Batch Controllers

## pH/CONDUCTIVITY

- pH Electrodes, Testers & Accessories
- Benchtop/Laboratory Meters
- Controllers, Calibrators, Simulators & Pumps
- Industrial pH & Conductivity Equipment

## DATA ACQUISITION

- Data Acquisition & Engineering Software
- Communications-Based Acquisition Systems
- Plug-in Cards for Apple, IBM & Compatibles
- Datalogging Systems
- Recorders, Printers & Plotters

## HEATERS

- Heating Cable
- Cartridge & Strip Heaters
- Immersion & Band Heaters
- Flexible Heaters
- Laboratory Heaters

## ENVIRONMENTAL MONITORING AND CONTROL

- Metering & Control Instrumentation
- Refractometers
- Pumps & Tubing
- Air, Soil & Water Monitors
- Industrial Water & Wastewater Treatment
- pH, Conductivity & Dissolved Oxygen Instruments



# User's Guide



**Shop online at**

**omega.com®**  
**OMEGA®**

[omega.com](http://omega.com)

e-mail: [info@omega.com](mailto:info@omega.com)

For latest product manuals:  
[omegamannual.info](http://omegamannual.info)



## HHT31R and HHT32R Deluxe Stroboscopes

**omega.com**™

©OMEGA®

OMEGAnet™ On-Line Service  
http://www.omega.com

Internet e-mail  
info@omega.com

### Servicing North America:

**USA:**  
ISO 9001 Certified

One Omega Drive, Box 4047  
Stamford, CT 06907-0047  
Tel: (203) 359-1660  
e-mail: info@omega.com

FAX: (203) 359-7700

**Canada:**

976 Berger  
Laval (Quebec) H7L 5A1  
Tel: (514) 856-6928  
e-mail: info@omega.com

FAX: (514) 856-6886

### For immediate technical or application assistance:

**USA and Canada:**

Sales Service: 1-800-826-6342 / 1-800-TC-OMEGA™  
Customer Service: 1-800-622-2378 / 1-800-622-BEST™  
Engineering Service: 1-800-872-9436 / 1-800-USA-WHEN™  
TELEX: 996404 EASYLINK: 62968934 CABLE: OMEGA

**Mexico and Latin America:**

Tel: (95) 800-TC-OMEGA™  
En Español: (203) 359-7803

FAX: (95) 203-359-7807

e-mail: espanol@omega.com

### Servicing Europe:

**Benelux:**

Postbus 8034, 1180 LA Amstelveen, The Netherlands  
Tel: (31) 20 6418405  
FAX: (31) 20 6434643  
Toll Free in Benelux: 06 0993344  
e-mail: nl@omega.com

**Czech Republic:**

ul. Rude armady 1868, 733 01 Karvina-Hranice, Czech Republic  
Tel: 420 (69) 6311627  
FAX: 420 (69) 6311114  
e-mail: cz@omega.com

**France:**

9, rue Denis Papin, 78190 Trappes  
Tel: (33) 130-621-400  
FAX: (33) 130-699-120  
Toll Free in France: 0800-4-06342  
e-mail: france@omega.com

**Germany/Austria:**

Daimlerstrasse 26, D-75392, Deckenpfronn, Germany  
Tel: 49 (07056) 3017  
FAX: 49 (07056) 8540  
Toll Free in Germany: 0130 11 21 66  
e-mail: germany@omega.com

**United Kingdom:**  
ISO 9002 Certified

25 Swannington Road,  
Broughton Astley, Leicestershire,  
LE9 6TU, England  
Tel: 44 (1455) 285520  
FAX: 44 (1455) 283912  
e-mail: uk@omega.com

Toll Free in England: 0800-488-488  
e-mail: uk@omega.com

**It is the policy of OMEGA to comply with all worldwide safety and EMC/EMI regulations that apply. OMEGA is constantly pursuing certification of its products to the European New Approach Directives. OMEGA will add the CE mark to every appropriate device upon certification.**

The information contained in this document is believed to be correct but OMEGA Engineering, Inc. accepts no liability for any errors it contains, and reserves the right to alter specifications without notice.

**WARNING:** These products are not designed for use in, and should not be used for, patient connected applications.

**MAPE  
USA**

### WARRANTY/ DISCLAIMER

OMEGA ENGINEERING, INC. warrants this unit to be free of defects in materials and workmanship for a period of 25 months from date of purchase. OMEGA Warranty adds an additional one (1) month grace period to the normal two (2) years product warranty to cover handling and shipping time. This ensures that OMEGA's customers receive maximum coverage on each product.

If the unit malfunctions, it must be returned to the factory for evaluation. OMEGA's Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective, it will be repaired or replaced at no charge. OMEGA's WARRANTY does not apply to defects resulting from any action of the purchaser, including but not limited to mishandling, improper interfacing, operation outside of design limits, improper repair, or unauthorized modification. This WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of having been damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA's control. Components which wear are not warranted, including but not limited to contact points, fuses, and triacs.

OMEGA is pleased to offer suggestions on the use of its various products. However, OMEGA neither assumes responsibility for any omissions or errors nor assumes liability for any damages that result from the use of its products in accordance with information provided by OMEGA, either verbal or written. OMEGA warrants only that the parts manufactured by it will be as specified and free of defects. OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESS OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. LIMITATION OF LIABILITY: The remedies of purchaser set forth herein are exclusive, and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.

**CONDITIONS:** Equipment sold by OMEGA is not intended to be used, nor shall it be used: (1) as a "Basic Component" under 10 CFR 21 (NRC), used in or with any nuclear installation or activity; or (2) in medical applications or used on humans. Should any Product(s) be used in or with any nuclear installation or activity, medical application, used on humans, or misused in any way, OMEGA assumes no responsibility as set forth in our basic WARRANTY / DISCLAIMER language, and, additionally, purchaser will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the Product(s) in such a manner.

### RETURN REQUESTS / INQUIRIES

Direct all warranty and repair requests/inquiries to the OMEGA Customer Service Department. BEFORE RETURNING ANY PRODUCT(S) TO OMEGA, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OMEGA'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS). The assigned AR number should then be marked on the outside of the return package and on any correspondence.

The purchaser is responsible for shipping charges, freight, insurance and proper packaging to FOR WARRANTY RETURNS, please have the following information available BEFORE contacting OMEGA:

1. Purchase Order number under which the product was PURCHASED,
2. Model and serial number of the product under warranty, and
3. Repair instructions and/or specific problems relative to the product.

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering.

OMEGA is a registered trademark of OMEGA ENGINEERING, INC.

© Copyright 1998 OMEGA ENGINEERING, INC. All rights reserved. This document may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without the prior written consent of OMEGA ENGINEERING, INC.

FOR NON-WARRANTY REPAIRS, consult OMEGA for current repair charges. Have the following information available BEFORE contacting OMEGA:

1. Purchase Order number to cover the COST of the repair,
2. Model and serial number of the product, and
3. Repair instructions and/or specific problems relative to the product.

## 9.0 OPTIONS AND ACCESSORIES

HHT32-LAMP	Digital Stroboscope replacement lamp
HHT32R-URC	Universal Recharger, 115/230 Vac with USA, U.K., AUS, Euro Adapter Plugs for battery operated Nova-Strobes (one supplied with battery strobe)
HHT20-ROS	Remote Optical Sensor with 8 foot [2.5 m] cable for triggering strobe
HHT-RT-5	Reflective tape - 5 foot [1.5 m] roll, 0.5 inch [12.7 mm] wide
HHT32-SPC	Splash proof Protective Cover for Battery Powered Strobe ONLY



## Safeguards and Precautions



1. Read and follow all instructions in this manual carefully, and retain this manual for future reference.
2. Do not use this instrument in any manner inconsistent with these operating instructions or under any conditions that exceed the environmental specifications stated.
3. Use of this product may induce an epileptic seizure in persons prone to this type of attack.
4. Objects viewed with this product may appear to be stationary when in fact they are moving at high speeds. Always keep a safe distance from moving machinery and do no touch the target.
5. There are lethal voltages present inside this product. Refer to the section on Lamp Replacement before attempting to open this product.



AC Stroboscopes that have three wire mains cable must have the earth wire connected to a suitable Earth point.

6. Do not allow liquids or metallic objects to enter the ventilation holes on the stroboscope as this may cause permanent damage and void the warranty.
7. Do not allow cables extending from unit to come into contact with rotating machinery, as serious damage to the equipment, or severe personal injury or death may occur as a result.
8. Do not direct strobe flash toward certain data collectors, as it may temporarily interrupt data collector operation, and could result in loss of stored data.
9. This instrument may not be safe for use in certain hazardous environments, and serious personal injury or death could occur as a result of improper use. Please refer to your facility's safety program for proper precautions.

10. The HHT32R contains Nickel Metal Hydride batteries which must be disposed of in accordance with Federal, State, & Local Regulations. Do not incinerate. Batteries should be shipped to a reclamation facility for recovery of the metal and plastic components as the proper method of waste management. Contact distributor for appropriate product return procedures.
11. This instrument is not user serviceable. For technical assistance, contact the sales organization from which you purchased the product.



**In order to comply with EU Directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE):** This product may contain material which could be hazardous to human health and the environment. DO NOT DISPOSE of this product as unsorted municipal waste. This product needs to be RECYCLED in accordance with local regulations, contact your local authorities for more information. This product may be returnable to your distributor for recycling - contact the distributor for details.

#### HHT32R Specific:

<b>Trigger to Flash Delay</b>	13 $\mu$ sec typical
<b>Input Power</b>	<b>Battery powered:</b> Internal Rechargeable Batteries 6 Vdc, External AC recharger (100 Vac to 240 Vac, 50/60 Hz)
<b>Light Output</b>	<b>Average:</b> 13 Watts typical > 4000 FPM <b>Instantaneous</b> (per flash): 230 mJoule typical to 4000 FPM
<b>Run Time</b>	2 hours typical at 1800 FPM, and over 1 hour at 6000 FPM with fully charged batteries
<b>Charge Time</b>	4-5 hours typical with PSC-2U
<b>Weight</b>	1.875 lbs [0.8505 kg] including batteries

#### HHT31R Specific:

<b>Trigger to Flash Delay</b>	16 $\mu$ sec typical
<b>Input Power</b>	<b>AC powered:</b> 115 Vac OR 230 Vac, 35VA (as ordered)
<b>Light Output</b>	<b>Average Power:</b> 15.5 Watts typical > 4000 FPM <b>Instantaneous</b> (per flash): 230 mJoule typical to 4000 FPM
<b>Run Time</b>	Continuous within temperature limitations. Vents must not be restricted. Unit must be horizontal.
<b>Weight</b>	1.55 lbs [0.70 kg]

<b>External Input</b>	TTL Compatible (24V pk max), 500 nanosec min pulse width, Positive or Negative edge triggered (menu selectable)
<b>Output Pulse</b>	40 $\mu$ sec positive/negative pulse (menu selectable), 3.3 Vdc typical <b>Note:</b> HHT31R – Input/Output connectors isolated from AC power
<b>Time Base Display</b>	Ultra Stable Crystal Oscillator LCD display with 6 numeric 0.506 inch [12.85 mm] high digits and 5 alphanumeric 0.282 inch [7.17 mm] high digits
<b>Indicators</b>	Battery level, On Target, ALT, TACH, and EXT icons
<b>Knob Adjustment</b>	Digital Rotary switch with 36 detents per revolution; velocity sensitive
<b>Memory</b>	Last setting before power down is remembered and restored on next power up. 9 user settable flash rates.
<b>Flash Duration</b>	10-25 microseconds (auto adjust with flash rate)
<b>Flash Tube (Lamp) Life</b>	100 million flashes
This product is designed to be safe for indoor use under the following conditions (per IEC61010-1).	
<b>Operating Temperature</b>	32-104 °F [0-40 °C]
<b>NOTE:</b> Safety thermal fuse will set unit into TACH Mode (stops flashing) in the event of internal overheating.	
<b>Humidity</b>	Maximum relative humidity 80% for temperature up to 88 °F [31 °C] decreasing linearly to 50% relative humidity at 104 °F [40 °C]

## TABLE OF CONTENTS

<b>1.0</b>	<b>OVERVIEW</b>	1
1.1	Display Panel / Definition of Buttons	1
<b>2.0</b>	<b>PREPARATION FOR USE</b>	3
2.1	Power	3
2.2	Input / Output Connections	3
<b>3.0</b>	<b>MENU</b>	5
<b>4.0</b>	<b>OPERATION</b>	6
4.1	Internal Mode - Standard Strobe Operation	6
4.2	Internal Mode - TACH Frequency Generator	9
4.3	External Mode - External Input Required	9
4.4	Tachometer Mode - External Input Required	10
4.5	Power Up Features	10
<b>5.0</b>	<b>USING THE STROBOSCOPE TO MEASURE RPM</b>	11
<b>6.0</b>	<b>LAMP AND FUSE REPLACEMENT</b>	13
6.1	Lamp Replacement	13
6.2	Fuse Replacement	15
<b>7.0</b>	<b>BATTERY POWERED MODELS ONLY</b>	16
7.1	Low Battery Indication	16
7.2	Charging the Batteries	17
7.3	Battery Disposal	18
<b>8.0</b>	<b>SPECIFICATIONS</b>	18
<b>9.0</b>	<b>OPTIONS AND ACCESSORIES</b>	21

# 1.0 OVERVIEW


All descriptions in this manual apply to both the battery powered (HHT32R) and AC mains powered (HHT31R) digital stroboscopes except where noted.

## 1.1 Display Panel / Definition of Buttons

The display panel consists of a backlit liquid crystal display with six numeric digits on top and five alphanumeric digits on the bottom, which indicate modes, flash rates, etc. (see Figure 1).

Additional information displayed include:

<b>TIME</b>	Unused
<b>AUTO</b>	Unused
<b>ALT.</b>	Indicates alternate (lower) function of each button and knob will be used
<b>TACH</b>	Tachometer Mode active (strobe won't flash)
<b>LOCK</b>	Unused
<b>EXT</b>	External Mode active
	On Target Indicator for Tachometer Mode and Remote Sensor in External Mode
-----	Indicates input frequency exceeds the limit of the stroboscope
	<b>(Battery Powered Model Only)</b> Battery indication, see section 7.0

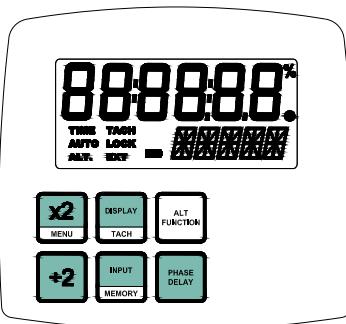

**Figure 1 Display Panel**

## 7.3 Battery Disposal

Prior to disposing of the battery-powered strobe, the user must remove the Nickel Metal Hydride batteries. To do this, remove the lens, reflector and lamp as detailed in the Lamp Replacement section. This will expose four (4) screws that must be removed so the reflector housing can be dismantled. There are four (4) additional screws in the case half opposite the input and output jacks that must be removed. The case halves can now be separated, exposing the batteries. Remove the cables from the batteries and place tape over the battery terminals to prevent them from shorting. The batteries should be sent to a recycling center or returned to the factory. The rest of the parts may now be disposed of.

# 8.0 SPECIFICATIONS

### Internal Mode:

<b>Flash Range</b>	30 - 20,000 FPM (Flashes Per Minute)
<b>Flash Rate Accuracy</b>	0.002% of setting or $\pm$ last digit
<b>Flash Rate Resolution</b>	0.01 to 1 FPM (menu selectable), 0.1 FPM max resolution above 9,999.99 FPM
<b>Display Update Rate</b>	Instantaneous

### External Modes:

<b>Flash Range and Display</b>	same as internal mode - External flash rates to 0 are acceptable
<b>Tachometer Measurements</b>	5 to 250,000 RPM Accuracy: $\pm 0.001\%$ of reading or $\pm$ last digit
<b>Display Update Rate</b>	0.5 second typical

The strobe has a protection feature that prevents the strobe from operating if the battery voltage is too low. **This condition is indicated by no flash and the display shows “LO BAT”.** At this time the batteries must be recharged. Remember to release the trigger switch.

## 7.2 Charging the Batteries

The unit may be recharged at any time. You do not need to wait until the low battery condition is indicated.

### To charge the battery powered strobe with the recharger:

1. Release the trigger so the strobe is off.
2. Plug the recharger cable into the recharger socket (located below the display panel behind the handle).
3. Plug the recharger into an AC mains wall outlet.

**CAUTION: Use of rechargers other than the one supplied (HHT32R-URC) will damage the stroboscope and void the warranty.**

The strobe will display the current battery charge percent and the recharger will fast charge the batteries for about 4-5 hours. Once the fast charge is completed, the recharger will trickle charge the batteries.

Allow the recharger to charge the batteries until the display shows DONE for peak battery life performance. If the batteries are not charged to 100% regularly, the batteries will lose capacity.

When the recharger plug is inserted into the recharger jack, the strobe will go into the Charging Mode. Make sure the trigger switch is not depressed. The strobe will not do anything else when charging (e.g. it will not flash and the buttons have no function).

Below the display are six membrane buttons which control the operation of the Stroboscope. They are:



Multiples flash rate by 2 times  
ALT Function - Starts Menu (See section 3.0)  
Hold when powering up to show all segments, then Rev # and display test



Divides flash rate by 2  
Hold when powering up to reset factory defaults



Toggles display between RPM and RPS  
ALT Function - Toggles Tach Mode (flashing) on/off



Manually toggles between Internal and External Modes  
ALT Function - Reads and Stores 9 preset flash rates



Activates Alternate Function for buttons (lower color) and knob



In Internal Mode, toggles between normal flash rate adjust and “phase” adjust

The **ALT FUNCTION** button toggles **ALT**. In the display. When **ALT**. is displayed, the buttons will perform their secondary function listed in the lower section of each button. It also changes how the tuning knob works.

## 2.0 PREPARATION FOR USE

The Strobe may be hand held or mounted on a tripod or other user supplied bracket using the 1/4-20 UNC bushing at the base of the handle.

### 2.1 Power

The AC powered strobe must have its power cord plugged into an AC outlet (115Vac or 230Vac).

The battery powered strobe has internal rechargeable batteries. The unit should be charged before use (see section 7.0). The actual operating time of the stroboscope depends on the flash rate and duty cycle of operation. Slower flash rates (below 4,000 FPM) increase the operating time. Note that the strobe will not operate from the recharger supplied with the unit.

### 2.2 Input / Output Connections

The strobe has input and output jacks on the left side of the stroboscope. These can be used for external triggering or synchronization (daisy chaining two or more strobes). These jacks accept 1/8" (3.5mm) phone plugs (input - stereo, output - mono). The input and output are TTL compatible. See Figures 2 and 3 for connector connection detail.

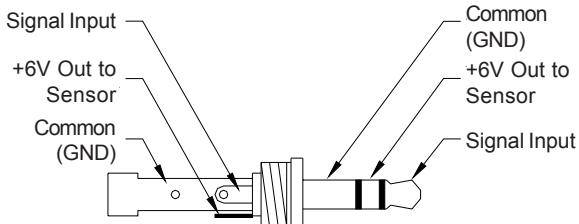


Figure 2 Input Connector Detail (Stereo plug)

## 7.0 BATTERY POWERED MODELS ONLY

The HHT32R is fitted with rechargeable NiMH (Nickel Metal Hydride) batteries. These batteries contain fewer toxic metals than NiCd (Nickel Cadmium) and are currently classified "environmentally friendly". They also have 30% more capacity than NiCd batteries of the same size.

Like NiCds, NiMH batteries are prone to self-discharge - 10 to 15% of charge is lost in the first 24 hours then continues at a rate of 0.5 to 1% per day. For maximum performance, charge the batteries just prior to use.

When not in use, the batteries should be charged at least every three months, otherwise the battery capacity will be reduced or the batteries may become unusable.

**Charge the batteries before use and allow 3-5 cycles of charging and discharging for batteries to reach full capacity.**

The enclosure contains control electronics to properly and safely charge the batteries. Never remove the batteries from the enclosure and attempt to charge externally. **Always use the charger supplied (HHT32R-URC).**

### 7.1 Low Battery Indication

The Low Battery icon will be displayed differently depending on the battery voltage. If the Low Battery icon is not displayed, the batteries are full. Otherwise, the Low Battery icon will indicate that the battery voltage is decreasing as follows:

█ Half solid	¾ Full
█ Half with block blinking	½ Full
█ Outline only solid	¼ Full
█ Outline blinking	Low battery (very little time left)


## 6.2 Fuse Replacement

Under normal operating conditions, the fuse within the stroboscope should never blow. Examples of abnormal operating conditions would be foreign materials entering the strobe, such as water, pulp, ink, etc.

The AC Powered stroboscope has a replaceable fuse inside the unit, which may be accessed by removing the lens and reflector - refer to Figure 4. If the fuse needs to be replaced, replace only with a fuse of the same type and value: Fast Blow - 750mA, 2AG.

**WARNING:** Before attempting to replace the fuse, make sure the stroboscope is turned off and any mains cord is removed from the AC outlet. Allow the lamp to cool waiting at least 5 minutes.

The Battery Powered stroboscope has a resettable fuse, which will reset once conditions are normal again.

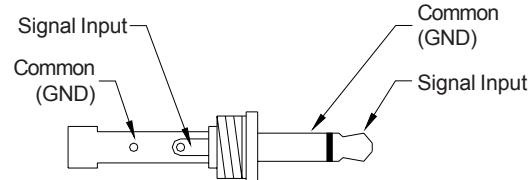

**Figure 3 Output Connector Detail (Mono plug)**

The input jack is the one with the arrowhead pointing toward it ( $\blacktriangle$  closest to the black knob) and enables an external signal to trigger the strobe. Inserting a plug into the input jack will automatically put the strobe into the External Mode. When the plug is removed, the strobe will be put back into the Internal Mode. The Internal Mode can be forced by pressing the INPUT button. The polarity of the input pulse can be set in the MENU options.

The output jack is the one with the arrowhead pointing away from it ( $\blacktriangledown$  closest to the reflector). With no external input this output provides a TTL compatible pulse from the strobe's internal oscillator. If an external input is applied, the output pulse is in sync with the input pulse. This output pulse may be used to trigger a second stroboscope synchronously to illuminate larger areas. Many strobes can be "daisy chained". The output jack of one strobe is connected to the input jack of the next strobe causing all the strobes to flash together and be controlled by the first strobe in the chain. The polarity of the output pulse can be set in the MENU options.

## 3.0 MENU

The strobe has a Menu which allows the user to select settings such as number of decimal places, backlight on or off, pulse width and positive or negative edge for input and output signal.

### To enter the MENU:

1. Press the ALT FUNCTION button and then the MENU button.
2. SetUP and the menu option will be displayed.
3. Turn the tuning knob to cycle through the main menu selections.
4. Once the desired menu option is displayed, press the MENU button to select it. Press any other button to cancel.
5. Turn the tuning knob to edit the menu option.
6. Press the MENU button to save your changes. Press any other button to cancel.
7. Press any button other than MENU to exit the Main Menu.
8. **DONE** will be displayed.

Below is a list of the menu items:

**DECPT**- Decimal Point (none, 1 or 2)


**B LITE**- Backlight (Yes=On or No=Off)

**INPUT**- Positive (pos) or Negative (neg) Edge for Input Signal

**OUTPT**- Positive (pos) or Negative (neg) Edge for Output Signal

while pushing it into place (see Figure 4). Make sure the lamp is in straight and centered in the reflector hole.

**CAUTION: Do NOT allow the reflector to contact the lamp.**

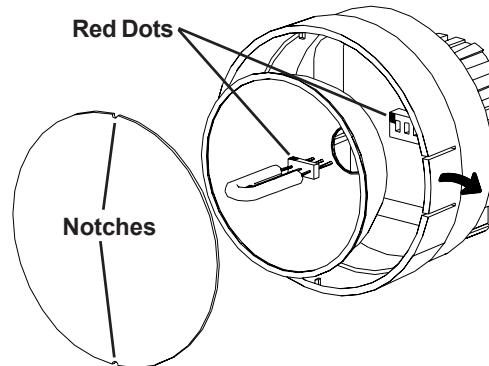

**Figure 4 Lamp Replacement**

4. Reinstall the reflector and then position the front lens in place matching up the notches on the lens with the two small tabs on the housing to prevent lens rotation (see Figure 4). Push the tabs on the front rim outward and press the lens into place.

## 6.0 LAMP AND FUSE REPLACEMENT

### 6.1 Lamp Replacement

**WARNING:** Before attempting to remove the lamp, make sure the stroboscope is turned off and any mains cord is removed from the AC outlet. Allow the lamp to cool waiting at least 5 minutes.

The stroboscope is designed to discharge the internal high voltages within 30 seconds. However, caution should be exercised when replacing the lamp.

The lamp can be replaced by using just a pocket screwdriver. **It is not necessary to remove any screws to replace the lamp.**

#### To change the lamp:

1. Push apart the two tabs on the side of the reflector housing and remove the lens using a small screwdriver to help pry one tab and lift the lens. Take care not to pry the tab any more than is necessary to free the lens. The reflector is held in place by the front lens and will come loose, but it is not necessary to remove the reflector.
2. Hold the lamp with a cloth between your forefinger and thumb and rock it back and forth gently while pulling out. Do not attempt to rotate the lamp. The lamp is socketed and will come out easily when pulled straight out.

**WARNING: Do NOT touch the new lamp with bare fingers.**

3. The lamps are polarized and must be put into the socket matching polarity. **Using a lint free cloth, match up the red dot on the plug with the red dot on the socket** and gently rock the lamp

## 4.0 OPERATION

To turn on the stroboscope, depress and hold the trigger. The trigger may be locked in position using the side locking button. To lock the stroboscope on, depress the trigger as far as it will go and then press the locking button. Once the locking button is set you may release the trigger and the trigger will be held in place. To unlock the stroboscope, simply depress the trigger and then release.

There are three major operating modes for the Strobe. These are **Internal**, **External** and **Charging** (Battery powered model only). In the **Internal Mode**, the knob adjusts the flash rate. In the **External Mode**, an external signal from a remote sensor is used to trigger the flash and the knob has no effect. The **Charging Mode** (Battery powered model only) is when the strobe has the battery recharger plugged into it. The strobe will continuously display the state of the battery charge while being recharged.

### 4.1 Internal Mode - Standard Strobe Operation

In the **Internal Mode** the stroboscope generates its own signals and functions like a tunable stroboscope. The strobe is in the Internal Mode when nothing is plugged into the input jack or when manually set using the INPUT button.

#### To change the flash rate:

With the power on, turn the knob counter clockwise to increase the flash rate and clockwise to decrease it. The knob is velocity sensitive. Turn the knob slowly to have each “click” is equal to 0.01 FPM. Turning the knob more quickly will adjust the FPM by larger steps. When adjusting flash rate, quickly turn the knob (or use the **x2** or **÷2** buttons) to coarsely change the FPM. Then slowly turn the knob for fine adjustments.

**NOTE:** There are maximum and minimum values in each mode beyond which you cannot adjust. If you are adjusting the rate and you reach a value which on the next increment would exceed the maximum flash rate, the display will not increment. The same is true if you try to adjust the flash rate below the minimum flash rate.


### To multiply or divide the current flash rate by 2:

In addition to the knob, there are two buttons on the back panel marked **x2** and **-2**. This enables the user to instantly double or halve the reading on the display to the maximum or minimum values allowed. This feature is useful for checking harmonics in the internal flashing mode.

### Alternate Knob Function (multiple by 2, 3, 4, 5, etc.)

The tuning knob functions differently when **ALT.** is displayed. The current flash rate is used as an adder. The knob will add (counter clockwise) or subtract (clockwise) that initial flash rate for each “click” the knob is turned. This in effect allows the user to multiply the initial flash rate by 2, 3, 4, 5, etc up to the maximum flash rate. This is very helpful on fan blades. Using this feature, one can superimpose the blades on top of each other and check for blade tracking, bent blades, lead and lag tests, etc.

For example: A 3 bladed fan is spinning at 3600 RPM. The strobe is flashing at 3600 FPM. Press the **ALT FUNCTION** button to display **ALT.**. Then turn the knob counter clockwise 2 clicks. The strobe will now flash at 10,800 FPM (effectively 3600 times 3). The fans blades will be all superimposed on each other. One can now see if the blades are out of alignment, bent, etc. by viewing the blades from the front or viewing from the side edge of the blades.

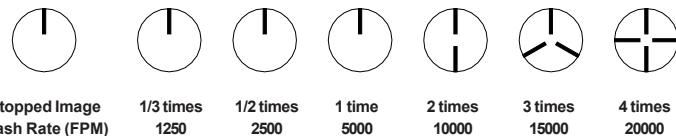

### Example: object rotating at 5000 RPM

If the speed is outside the full scale range of the stroboscope (20,000 FPM), it can be measured using the method of harmonics and multipoint calculation. Start at the highest flash rate and adjust the flash rate down. You will encounter multiple images so be aware of these. Note the flash rate of the first SINGLE image you encounter, call this speed “A”. Continue decreasing the flash rate until you encounter a second SINGLE image. Note this speed as “B”. Continue decreasing the speed until you reach a third SINGLE image at speed “C”.

For a two point calculation the actual speed is given by:

$$\text{RPM} = AB/(A-B)$$

For a three point calculation:

$$\text{RPM} = 2XY(X+Y)/(X-Y)^2 \text{ where}$$

$$X = (A-B) \text{ and}$$

$$Y = (B-C)$$

If a Remote Optical Sensor or Magnetic Sensor is used to sense one pulse per revolution (External mode), the readout will display directly in RPM (FPM) without any adjustment required.

In instances when you can shut down the device and install a piece of reflective tape, then an optical tachometer is easier to use for RPM measurement. **Stroboscopes must be used when you can't shut down the device.** The human eye is not easily tricked into seeing a stopped image by a stroboscope when the flash rate is slower than 300 FPM. Therefore, stroboscopes are just about impossible to use below 300 FPM for inspection or to measure RPM.

## 5.0 USING THE STROBOSCOPE TO MEASURE RPM

The primary use for a stroboscope is to stop motion for diagnostic inspection purposes. However the stroboscope can be used to measure speed (in RPM / RPS). In order to do this several factors need to be considered. First, the object being measured should be visible for all 360° of rotation (e.g. The end of a shaft). Second, the object should have some unique part on it, like a bolt, key way or imperfection to use as a reference point. If the object being viewed is perfectly symmetrical, then the user needs to mark the object with a piece of tape or paint in a single location to be used as a reference point. **Look only at the reference point.**

If the speed of rotation is within the range of the stroboscope, start at the highest flash rate and adjust the flash rate down. At some point you will stop the motion with only a single reference point of the object in view. Note that at a flash rate twice the actual speed of the image you will see two images (reference points). As you approach the correct speed you may see three, four or more images at harmonics of the actual speed. The first SINGLE image you see is the true speed. To confirm the true speed, note the reading and adjust the stroboscope to exactly half this reading, or just press the  $\pm 2$  button. You should again see a single image (which may be phase shifted with respect to the first image seen).

For example, when viewing a shaft with a single key way you will see one stationary image of the key way at the actual speed and at  $1/2, 1/3, 1/4$ , etc, of the actual speed. You will see 2 images of the key way at 2 times the actual speed, 3 key way at 3 times, etc. **The FPM equals the shafts Revolutions Per Minute (RPM) at the highest flash rate that gives only one stationary image of the key way.**

### To select a flash rate from a Preset (memory) location:

1. Press the ALT FUNCTION button and then the MEMORY button.
2. *READ* will be displayed.
3. Turn the tuning knob to cycle through the preset flash rates.
4. Once the desired flash rate is displayed, press the MEMORY button to select it. Press any other button to cancel.
5. *DONE* will be displayed.

### To store the current flash rate in a Preset (memory) location:

1. Press the ALT FUNCTION button and then the MEMORY button.
2. *READ* will be displayed.
3. Do NOT turn the knob and press the MEMORY button again.
4. *STORE* will be displayed.
5. Turn the tuning knob to cycle through the memory locations.
6. Once the desired memory location is displayed, press the MEMORY button to store the current flash rate in that location. Press any other button to cancel.
7. *DONE* will be displayed.

### Internal “Phase” Delay

Once the flash rate has been adjusted to give a stopped motion image, the PHASE DELAY button may be used with the knob to increase or decrease the phase of the reference mark location. Use the PHASE DELAY button and knob to bring a reference mark, such as a key way, into your line of sight.

### To adjust the “Phase” Delay:

1. Press the PHASE DELAY button.
2. *PHASE* will be displayed on the bottom line and the current flash rate will be displayed on the top line.

3. Turn the tuning knob to adjust the location (phase) of the reference mark.
4. Press the PHASE DELAY button again to turn the “Phase” Delay mode off.

## 4.2 Internal Mode - TACH Frequency Generator

In the Internal Mode, the strobe can be used as a frequency generator (outputting TTL pulses) without having the strobe flash. The pulse output will still occur at the flash rate; the strobe is just not flashing.

### To stop flashing:

1. Press the ALT FUNCTION button and then the TACH button.
2. The TACH icon will be displayed.

### To start flashing again:

3. Press the ALT FUNCTION button and then the TACH button.
4. The TACH icon will go away and the strobe will start flashing again.

## 4.3 External Mode - External Input Required

The strobe is in the External Mode whenever there is a plug in the input jack. When the strobe is in the External Mode, **EXT** will be displayed.

In the External Mode the user can't make any flash rate adjustments. The flash rate is a function of the input trigger signal. This mode is used to synchronize the flash to an external event (for example, from an optical sensor) to stop or freeze motion. The flash will be triggered on the rising or falling edge (menu selectable) of the external input pulse.

## 4.4 Tachometer Mode - External Input Required

When an external input is supplied to the unit and the strobe is put in the Tachometer Mode, the unit will read the signal from the external input (sensor) and display the reading on the LCD display without flashing the lamp. **The strobe will not flash in the Tachometer Mode.**

### To enter the Tachometer Mode:

1. Press the ALT FUNCTION button and then the TACH button.
2. The TACH icon will be displayed.

**NOTE:** If the external input signal exceeds the maximum flash rate, the strobe will go into the Tachometer Mode automatically.

### To exit the Tachometer Mode:

1. Press the ALT FUNCTION button and then the TACH button.
2. The TACH icon will go away.

## 4.5 Power Up Features

When the strobe is powered up it will remember the last settings.

Press and hold the **x2/MENU** button, then turn on the strobe by depressing the trigger switch. This will turn on all the display segments for two seconds or until you release the button. It will then show the software revision, “REV x.x” and then go through a display diagnostic.

Press and hold the **÷2** button, then turn on the strobe by depressing the trigger switch. This will restore the factory programmed presets.