

User's Guide

Shop online at

omega.com

Ω OMEGA

omega.com

e-mail: info@omega.com

**For latest product manuals:
omegamanual.info**

ISO 9001
CERTIFIED
CORPORATE QUALITY

STAMFORD, CT

ISO 9001
CERTIFIED
CORPORATE QUALITY

MANCHESTER, UK

MADE IN JAPAN



OSXL-101 Compact Thermal Image Sensor Application Software



OMEGAnet® Online Service
omega.com

Internet e-mail
info@omega.com

Servicing North America:

U.S.A.:
ISO 9001 Certified

Omega Engineering, Inc., One Omega Drive, P.O. Box 4047
Stamford, CT 06907-0047 USA
Toll Free: 1-800-826-6342
FAX: (203) 359-7700
TEL: (203) 359-1660
e-mail: info@omega.com

Canada:

976 Bergar
Laval (Quebec), Canada H7L 5A1
Toll-Free: 1-800-826-6342
FAX: (514) 856-6886
TEL: (514) 856-6928
e-mail: info@omega.ca

For immediate technical or application assistance:

U.S.A. and Canada: Sales Service: 1-800-826-6342/1-800-TC-OMEGA®
Customer Service: 1-800-622-2378/1-800-622-BEST®
Engineering Service: 1-800-872-9436/1-800-USA-WHEN®

Mexico:

En Español: 001 (203) 359-7803
info@omega.com.mx
FAX: (001) 203-359-7807
e-mail: espanol@omega.com

Servicing Europe:

Benelux:

Managed by the United Kingdom Office
Toll-Free: 0800 099 3344
FAX: +31 20 643 46 43
TEL: +31 20 347 21 21
e-mail: sales@omega.nl

Czech Republic:

Frystatska 184
733 01 Karviná, Czech Republic
Toll-Free: 0800-1-66342
FAX: +420-59-6311114
TEL: +420-59-6311899
e-mail: info@omegashop.cz

France:

Managed by the United Kingdom Office
Toll-Free: 0800 466 342
FAX: +33 (0) 130 57 54 27
TEL: +33 (0) 161 37 29 00
e-mail: sales@omega.fr

Germany/Austria:

Daimlerstrasse 26
D-75392 Deckenpfronn, Germany
Toll-Free: 0 800 6397678
FAX: +49 (0) 7056 9398-29
TEL: +49 (0) 7059 9398-0
e-mail: info@omega.de

United Kingdom:
ISO 9001 Certified

OMEGA Engineering Ltd.
One Omega Drive, River Bend Technology Centre, Northbank
Irlam, Manchester M44 5BD England
Toll-Free: 0800-488-488
FAX: +44 (0)161 777-6622
TEL: +44 (0)161 777-6611
e-mail: sales@omega.co.uk

It is the policy of OMEGA Engineering, Inc. to comply with all worldwide safety and EMC/EMI regulations that apply. OMEGA is constantly pursuing certification of its products to the European New Approach Directives. OMEGA will add the CE mark to every appropriate device upon certification.

The information contained in this document is believed to be correct, but OMEGA accepts no liability for any errors it contains, and reserves the right to alter specifications without notice.

WARNING: These products are not designed for use in, and should not be used for, human applications.

■ Introduction

Thank you for purchasing a compact thermal image sensor. In order to use this product safely, please read this instruction manual completely before use and confirm the correct handling and instructions. In addition, please retain this instruction manual for future reference.

Before using

Please confirm the contents of packing. If something is missing, please contact your nearest distributor.

Names	Quantity
Compact thermal image sensor	1
Custom Power/Alarm output cable	1
Custom Network cable	1
Universal head	1
Lens cap	1
Connector cap	1
Mounting screw (already mounted to the product)	1
Application software (CD)	1
Instruction manual (Sensor/application software) (CD)	
Power supply w/cable 2.5 m (8.2 ft)	1
Quick manual	1

About this instruction manual

Under absolutely no circumstances may the contents of this instruction manual, in part or in whole, be transcribed or copied without permission.

The contents in this instruction manual are subject to change without notice in future.

The figures in this instruction manual may be emphasized, simplified or omitted.

Every effort has been made to ensure that the details of this manual are accurate. However, should any errors be found or important information be omitted, please inform your nearest distributor.

The company names and brand names used in this manual are the trademarks or registered trademarks of respective companies.

About exemption from responsibility

Unless otherwise specified in the guarantee clauses, we do not offer any guarantee about this product.



We shall not be liable to a customer or a third party for any damages or indirect damages by using this product or by unpredictable defects of the product.

Hardware requirements


- Compatible PC : DOS/V compatible
 - * .NET Framework 2.0 or later has been installed and runs correctly.
 - * Display resolution: 800 x 600 pixels or more (recommended)
 - OS : Windows 2000 (SP4 or later)/XP/Vista_ (Windows XP or later recommended)
 - * .NET Framework 2.0 or later (required)
 - Communication port : LAN
 - Hard disk : 150MB or more free space for installation
 - Memory : Windows 2000/XP ... 1GB recommended (512MB or more)
 - : Windows Vista ... 2GB or more recommended
 - CPU : Windows 2000/XP ... 1.5GHz or faster recommended
 - : Windows Vista_... 2GHz or faster recommended
- “Microsoft” and “Windows” are either trademarks or registered trademarks of Microsoft Corporation, USA.
 - “Intel” and “Pentium” are either trademarks or registered trademarks of Intel Corporation, USA.


■ Safety precautions

- The safety precautions shown in this manual indicate the important contents about safety. Please be sure to understand and follow these precautions.
- In this manual, in order to use this product safely, the precautions are described with the following indications and marks.

 Warning	This indicates a potentially hazardous situation that, if not avoided, will result in death or serious injury.
 Caution	This indicates a potentially hazardous situation that, if not avoided, may result in minor or moderate injury or cause property damage.

[Safety precautions]

 Warning
<ul style="list-style-type: none">• Do not use the connecting cable other than the original use.• Do not connect the connecting cable by wet hands. It may cause an electric shock.• Do not connect the connecting cable when the thermal image sensor or the connecting cable is wet. It may cause an electric shock or fire by a short circuit.• When the connecting cable is connected, be careful not to wet the thermal image sensor or the connecting cable with water, etc. It may cause an electric shock or fire by a short circuit.

 Caution
<ul style="list-style-type: none">• Do not place the connecting cable or the CD to a place subjected to direct sunlight or a high temperature place. In addition, do not leave them in a car of which temperature become high for a long time. It may cause discoloration, deformation or damage of them.• Furthermore, when you connect products to be used by combining with this product, follow the instruction manual for this product. If you do not follow the instructions, we do not guarantee safety.

■ Precautions for use

- Store the CD in a place not subjected to direct sunlight and protect it against dust/dirt or liquid like water, etc.
- Handle the CD carefully. Data cannot be read if its data side and label side are scratched.
- Do not apply too much force on the connecting cable. For the connection and removal of the cable, straight insert or pull out it by holding the connector. It may cause damage of the cable or the thermal image sensor.
- Do not wet the connecting cable by water, etc. When the cable is wet, dry it fully to use.


Contents

■ Introduction	I
■ Safety precautions	II
■ Precautions for use	II
■ Outline of product	1
■ Operation flowchart	2
■ Preparation before using	3
■ Installation of application software	4
■ Starting application software	7
■ Uninstall of application software	8
■ LAN setting of thermal image sensor	
1. Initialization of thermal Image sensor...	9
2. PC settings	10
3. Connection of thermal image sensor and PC	13
4. Network settings of thermal image sensor	14
■ Initial settings of application software	16
■ Display of thermal images	18
■ Screen configuration and explanation	20
1. Image/Data File (F)	22
2. Sensor Setup (S)	
• Network(Sensor)	23
• IP Address	23
• Alarm(Sensor)	24
• Procedure for setting alarms to sensor	28
• Emissivity settings	32
3. Function (D)	
• Temp Range	33
• Image Filter	33
• Rotation	33
• Max Temp/Min Temp	34
• Zone Trend	34
• Pixel EQ	35
• Windows Size	36
• Beep[On/Off]	36
• Zone Setup	37
4. Help (H)	42
■ Connection error	43
■ Troubleshooting	44

■ Outline of product

1. Main screen

Once the Network settings are properly set between PC and the thermal image sensor(s) (hereinafter called sensor(s)) and the communication between PC and the sensor(s) starts, the thermal image screen in the main window start displaying the image. The thermal images up to 4 sensors can be displayed with this application software. You can choose each individual image from the sensor(s) or all 4 images at the same time by clicking the tabs with the sensor name.

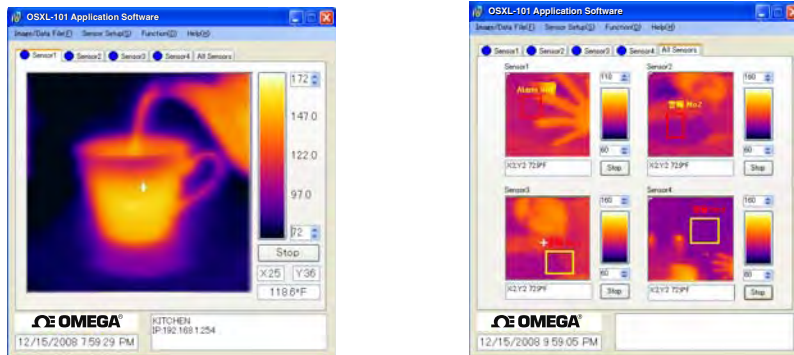

2. Setup of the sensor(s)

You can set up various settings on the sensor(s) from this software, such as Network settings Alarm settings) Emissivity setting

3. Data storage

Image temperature data for 2256 pixels as a .csv file Thermal image screen as a .jpg file

4. Image processing

Screen averaging Spatial smoothing Median filter Rotation Maximum/minimum values indications

5. Trend graph

By specifying a graph area, data can be displayed by the trend graph and the graph data can be stored by setting. (Max. 8 zones)


6. Alarm settings within the application software

By specifying a zone, alarms can be set. (Max. 8 areas as shown below)


The zone alarm as set in the application software are separate and in addition to alarms set in the sensor.



The sensor alarm has a contact outputs but the PC application software has no contact outputs.

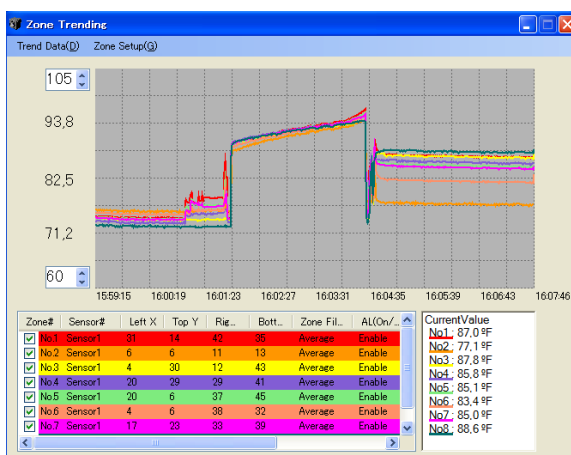


Trend graph

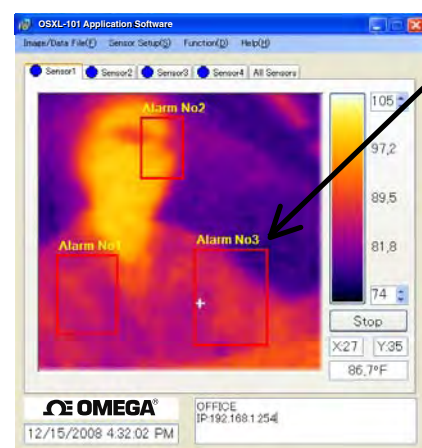

Alarm

Alarm judgment

■ Operation flowchart

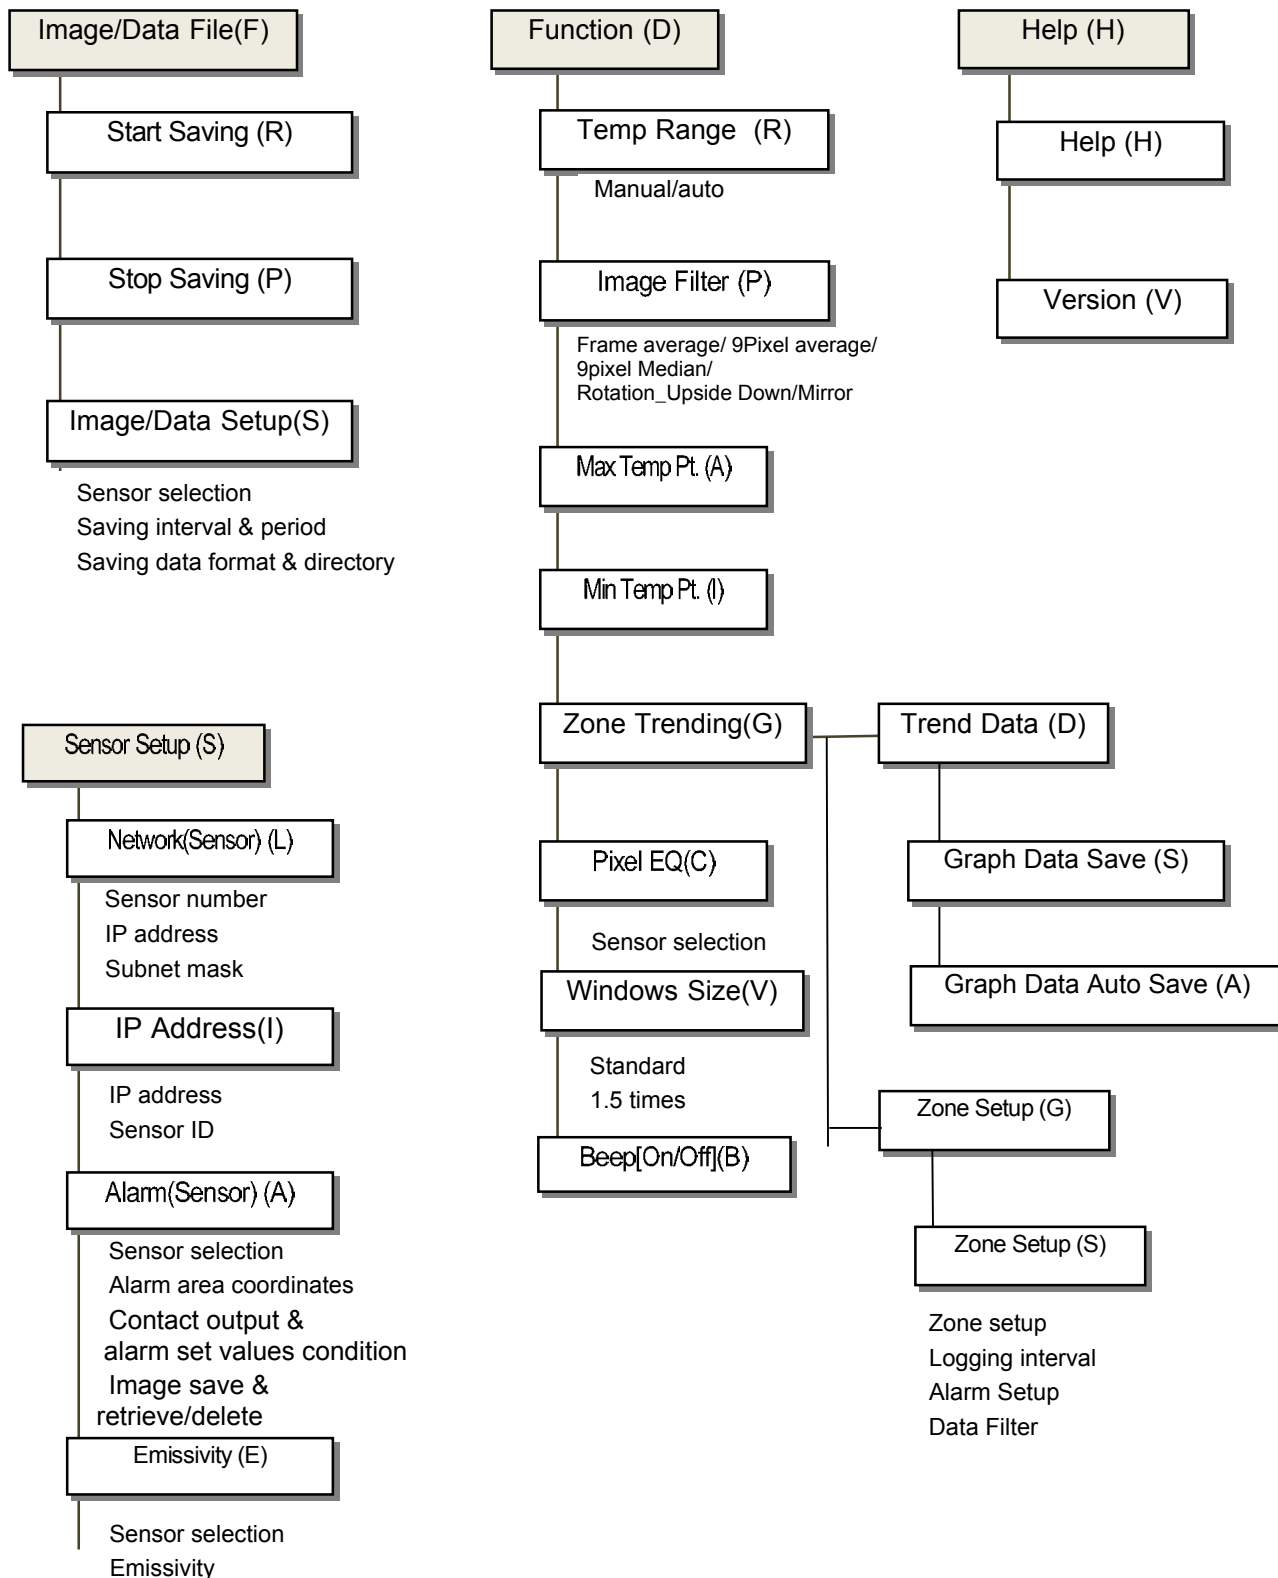

■ Preparation before using

Installation of this application software to your PC

Application software installation

Page 4 ~



Connection of the thermal image sensor and the PC
with supplied custom network cable

Thermal image sensor LAN setting

Page 9 ~



Running of the application software for initial settings

Application software activation

Page 7 ~



Application software initial settings

Page 15 ~




Ready to use

■ Installation of application software


The following is the installation procedure of the application software. (The procedure is for Windows XP.)

1. Start your PC and launch Windows.

 Before this application software is installed, close all other applications that are running. If not, the installation may be affected from them.


2. Insert the CD with the OMEGA application software

Setup Wizard should start automatically. If not, double-click the setup program in the CD to start.


 When the OS of your PC is Windows2000, Update Rollup 1 for SP4 and Internet Explorer (IE) 5.01 or later are required.



The setup screen will appear.

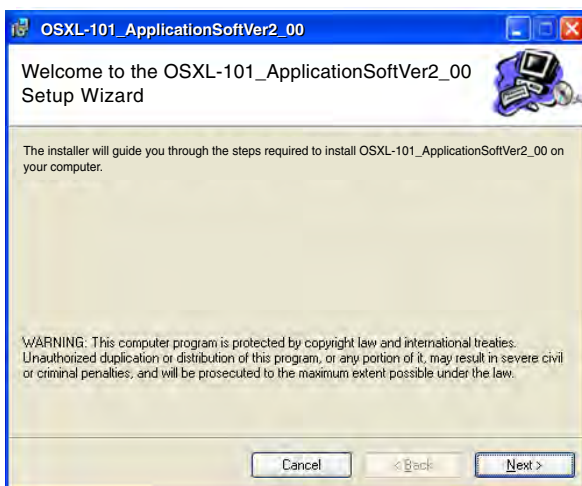


Click [Next] button.

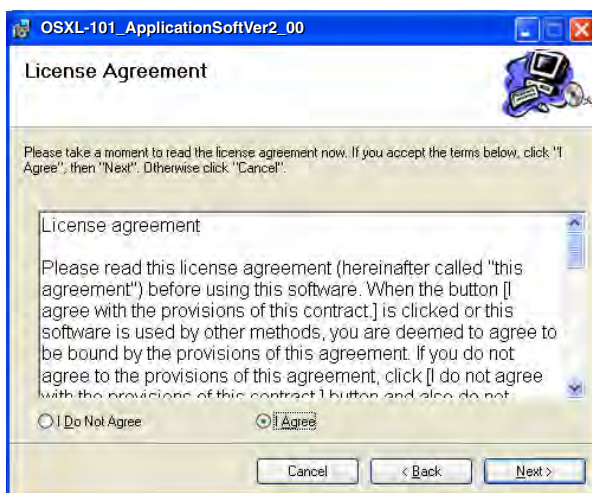

3. [Installation folder selection]

The following screen will appear.

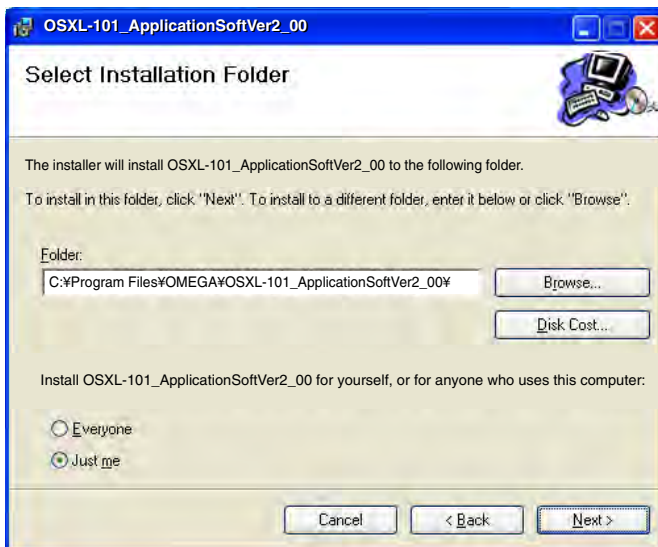

Specify directory and folder you want to install. The default folder is [C:/program file/OMEGA/OSXL-010 Application Soft].

In addition, select users who can use this application software.


After the selections are completed, click [Next] button.



The drive number ([C:/], etc.) indicated may be changed depending on types of PC. Read the drive indications on the environment of the PC you are using.

4. [Confirmation of installation]


The following confirmation screen will appear. Click [Next] button to start the installation.

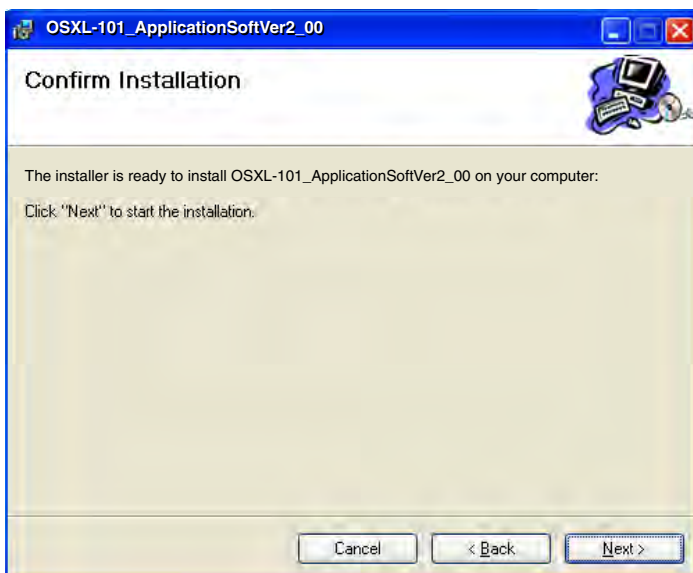


Before the installation, close all other applications that are running. If not, the installation may be affected by them.

5. [The OSXL-101 application software is installed.]

The installation will start.

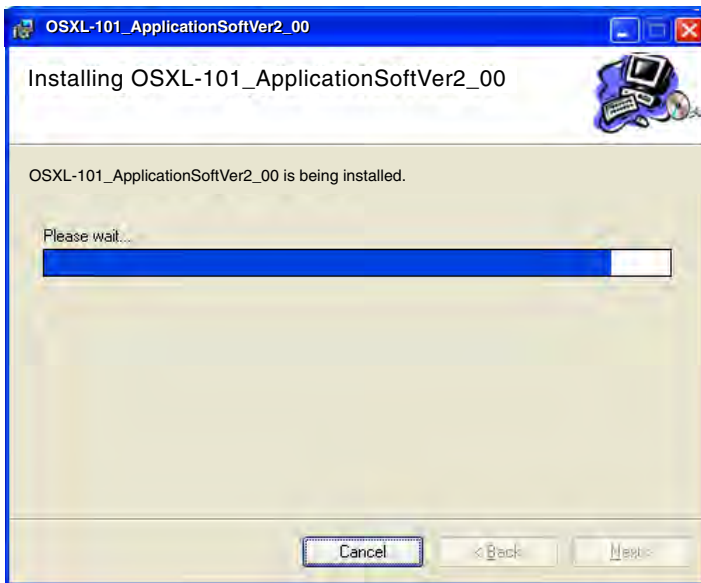

After the installation is completed, the following screen will appear. After you confirm it, press [Close] button to quit.

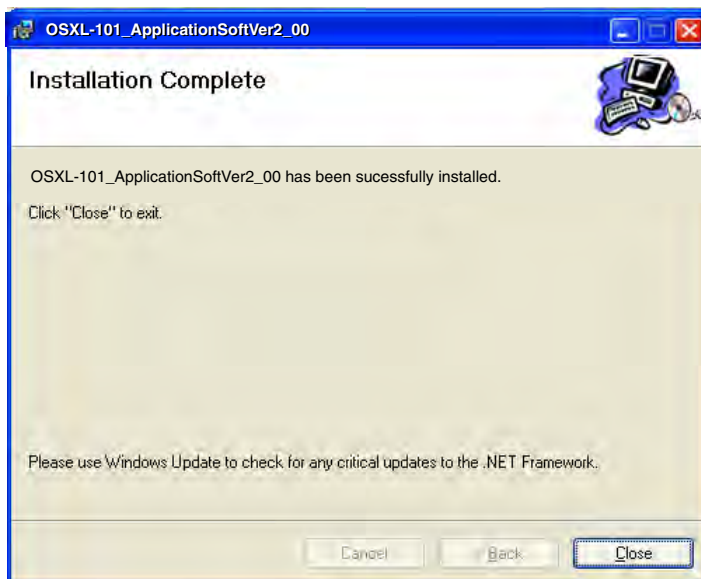


Starting application software

Start the application software installed for the thermal image sensor.
For starting the application software, do the following procedure.

[Method 1] Double-click the icon on the desktop.



[Method 2] Select from [Start] _ [Programs] _ [OSXL-101].

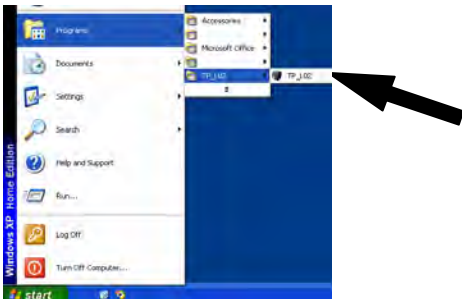

By using either method, the application will start.
The Preference window will appear. Select [LAN] _ Click [Apply] button.




A warning by security software may appear at the initial startup. Set it up to allow the communication via this application software.
(For the details of this setting, refer to the instruction manual for the security software you are using.)

■ Uninstallation of application software

The following is the uninstall procedure of the OSXL-101 application software from a PC. (The procedure is for Windows XP.)


1. Select [Control Panel] from [Start] button.

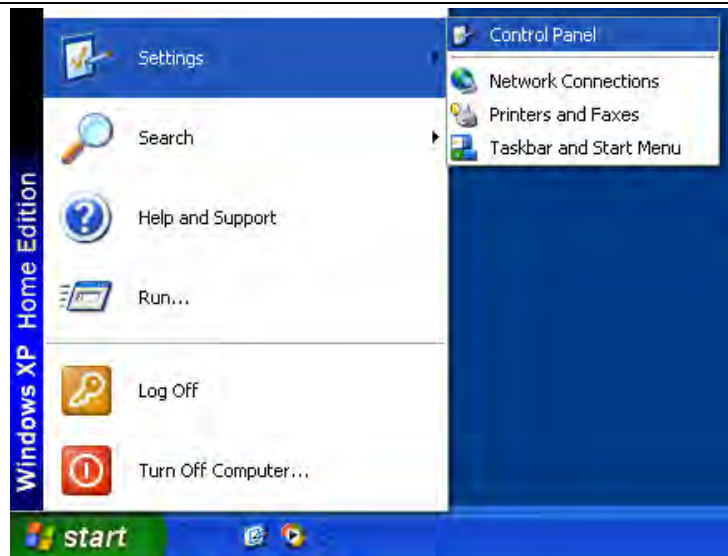


2. Start [Add or Remove Programs].



3. Select [OSXL-101 Application Soft] and click [Remove] button.

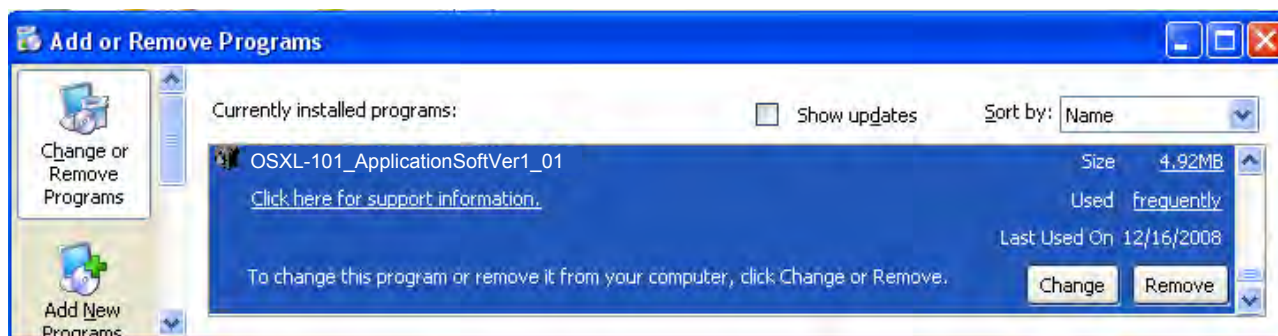


4. Confirm the program name to be removed and click [Yes] button.

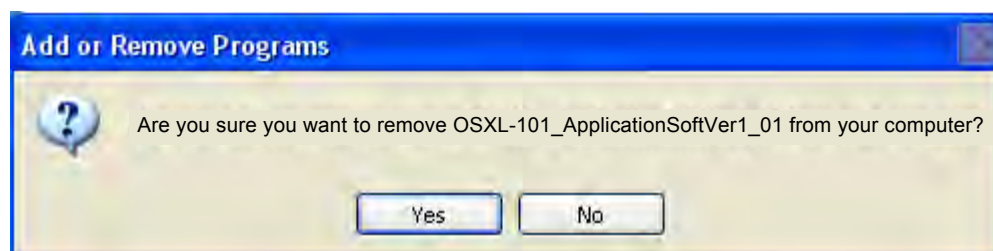

When the above procedure is completed, the application software will be removed from the list in [Add/Remove Programs] dialog box. Close the dialog box to quit.

■ LAN settings of thermal image sensor


The setting for the thermal image sensor is performed through the LAN in order to use sensors and connected PC properly.

 When the sensor is used first time, the LAN settings of the sensor is required.


1. Initialization of thermal image sensor

As received from factory, no initialization is required since all settings have been initialized.



In case of an error, etc. at the LAN environment settings, the set values can be reset to the default values as shipped from factory by removing the mounting screw and then pushing the reset switch.

 Turn the power on while pushing the initial switch for 1 second continuously. Resetting to the default values becomes effective (The violet monitor lamp flashes 2 times.) By re-power-on, the set values are reset to the default values at the shipment from factory. Usually do not push the initial switch.

Remove the mounting screw.

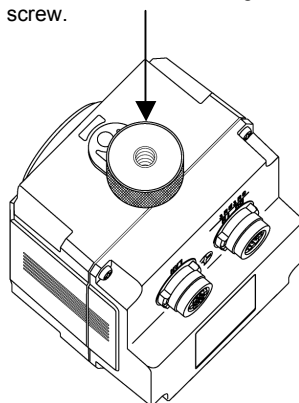

Reset switch (behind the screw)

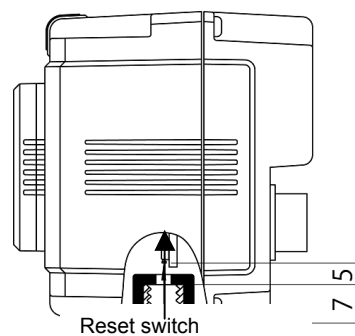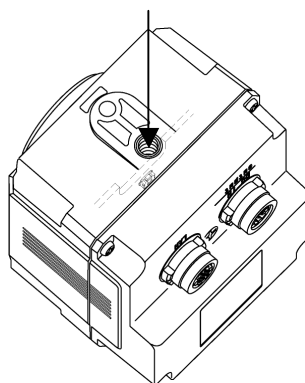

[Factory default settings]

Items	Specifications
IP address	192.168.1.254
Subnet mask	255.255.255.0
Gateway address	0.0.0.0 (Invalidation)
Sensor number	1
UDP port address	50828 (fixed) *1
Emissivity	1.00 (for all pixels)
Alarm setting	Alarm disabled



*1 If you use UDP port on your PC and the UDP port address that you are using is overlapping with this address, change the UDP address that you are using.

[MEMO]

2. PC settings


In order to communicate with the sensor(s), you need to set IP Address in your PC.

If PC has already been connected to the network, remove it from the network.

According to the following procedure, you will need to change the IP Address of your TCP/IP connection.

Start the PC.

Select [Control Panel] from Start in the menu.

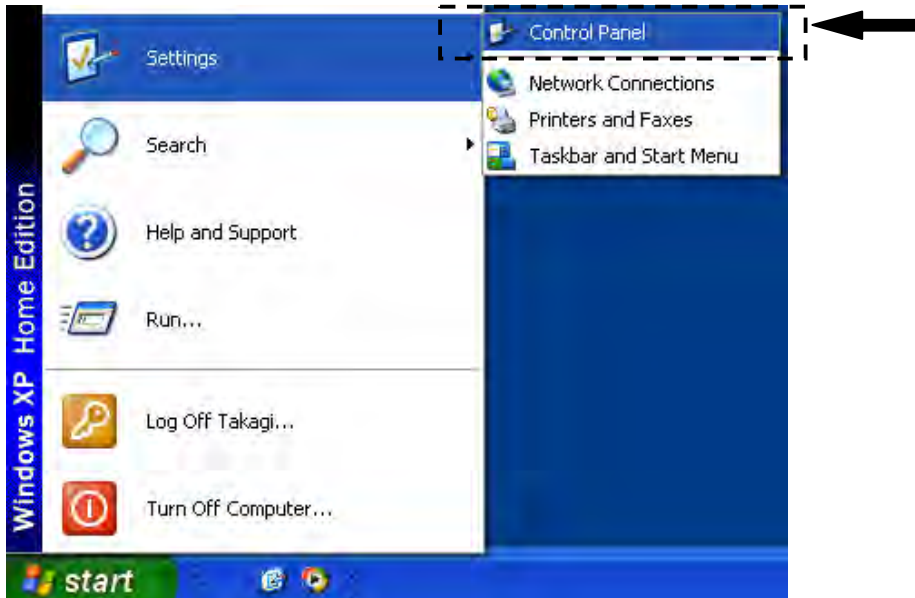


The PC that you're using now disconnected from the network. Take a note of the IP address, etc. and also consult with your network administrator.


Select [Network Connections].




Select the icon of the LAN network connection (Local area connection here) and right-click it to open a submenu. Select Properties in the menu.

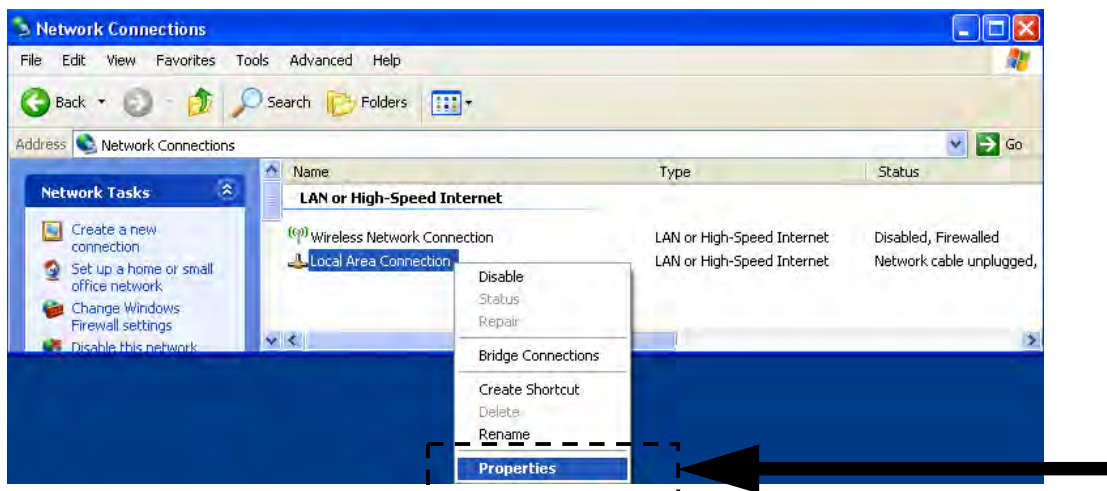

Select [Internet Protocol (TCP/IP)] in the list and click [Properties].

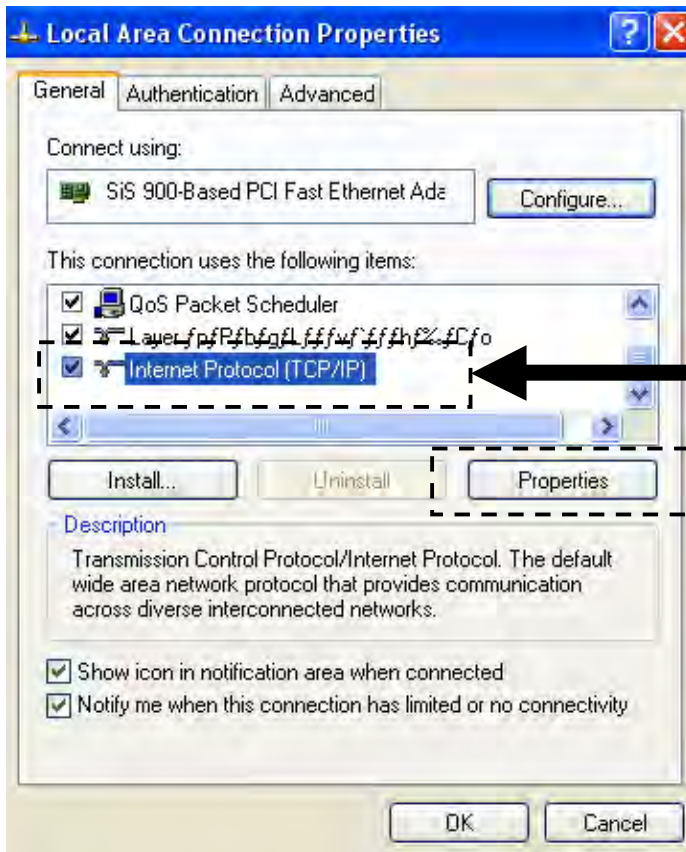

Check [Use the following IP address:] and set the IP address, subnet mask and default gateway.

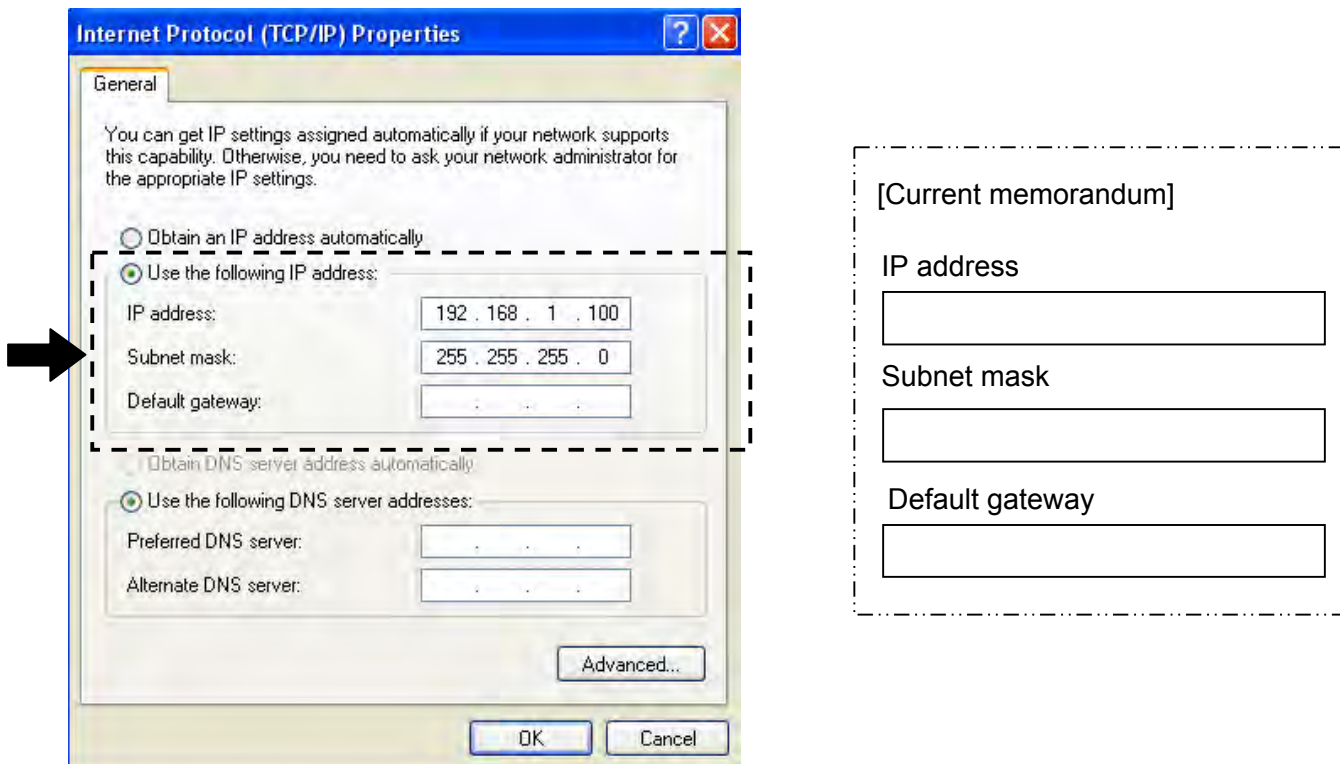


Assign an IP address not to conflict with other instruments.
Set the following, [IP address: 192.168.1.100, Subnet mask: 255.255.255.0, Default gateway: Blank] are set. By clicking [OK], the IP settings are entered.

3. Connection of thermal image sensor and PC


- Connect the custom power/alarm output cable and the custom Network cable to the sensor.
Connect them to align the marks on [p] back of the sensor and [Arrow] on the cable connectors.

⚠ To avoid misconnections, the custom Network cable is designed not to connect to the power/alarm output connector of the sensor. Similarly, the custom power/alarm output cable cannot be connected to the LAN connector of the sensor.

⚠ The connections are a quick-disconnect locking type. Insert the plug until it clicks.
To unplug, hold the sliding part (that has the [Arrow] marking on) and pull it outward. .
If the "A" part is pulled, the plugs may be damaged.

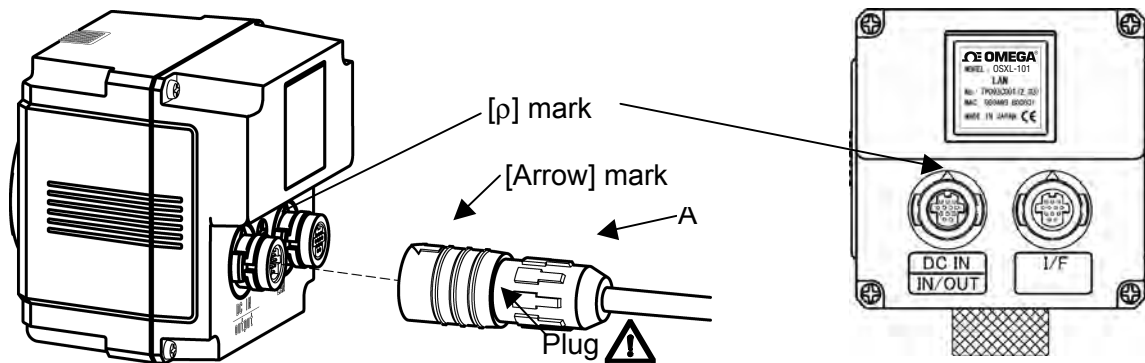

- Plug the connector of the custom Network cable to the Ethernet port of a master unit (PC, etc.).
And connect the O-tip terminals of the custom power/alarm output cable to the terminal block of 12VDC Power Supply.

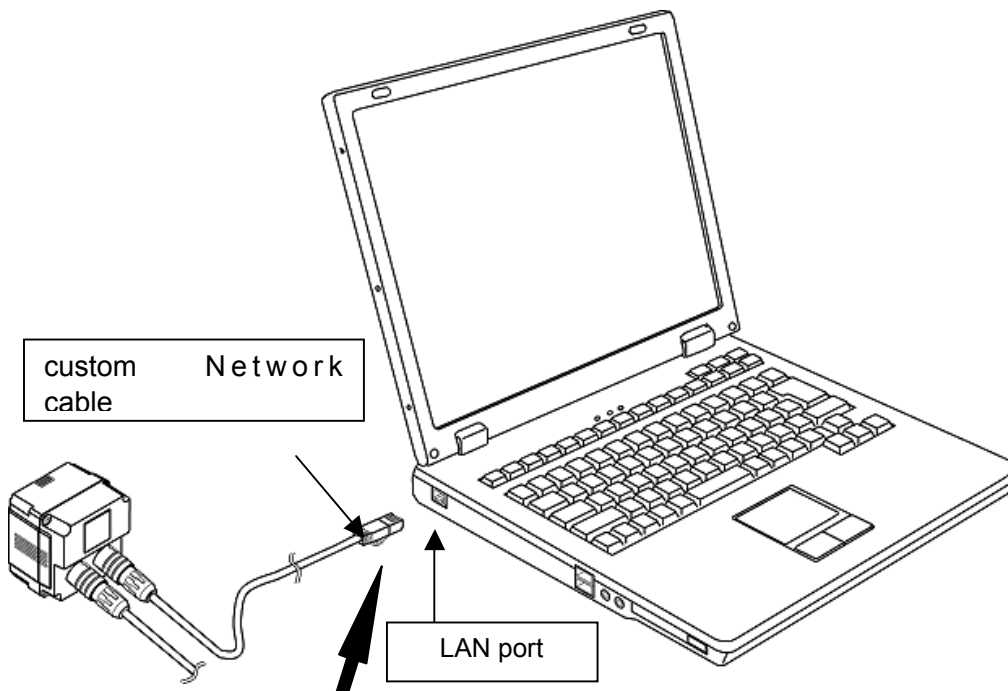

Connect the thermal image sensor directly to the PC by supplied cable.

Make sure to connect the thermal image sensor to the PC directly for LAN settings. When other instruments (including other thermal image sensors) are connected via a hub, etc., remove them from the network to configure so that one set of the thermal image sensor is only connected to the PC on the network.

If the LAN settings are performed when multiple thermal image sensors have been connected on the network, the settings of the thermal image sensor may not be configured correctly.

4. Network settings of thermal image sensor


Following steps will set up Network parameters on each sensor you are about to connect to your PC and use in conjunction with the application software. Setup parameters are all entered on the application software and saved onto the internal built-in memory of the sensor(s).




Before performing this procedure, be sure that you have only one sensor connected to your PC. When you have multiple sensors among other network compatible equipments connected via a hub, be sure that other equipments are all disconnected than the sensor you are about to do this procedure.

Start this application software. Refer to Page 7 [Starting application software] for the startup.

Select [Sensor Setup] → [Network(Sensor)] in the menu.

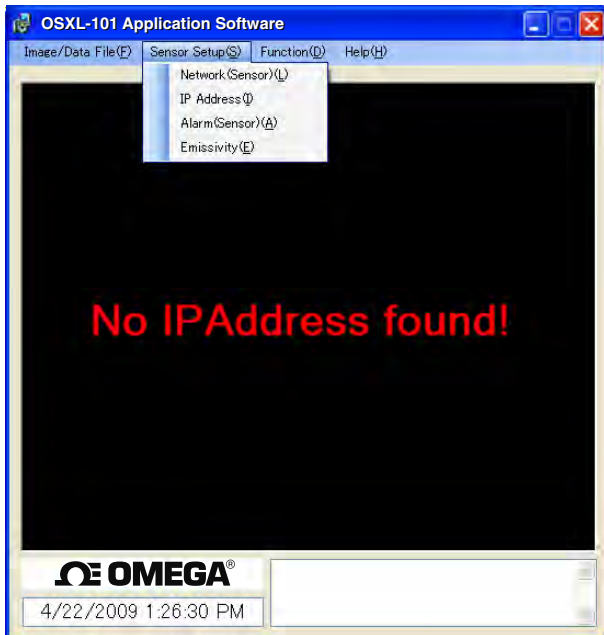

The following screen will appear.

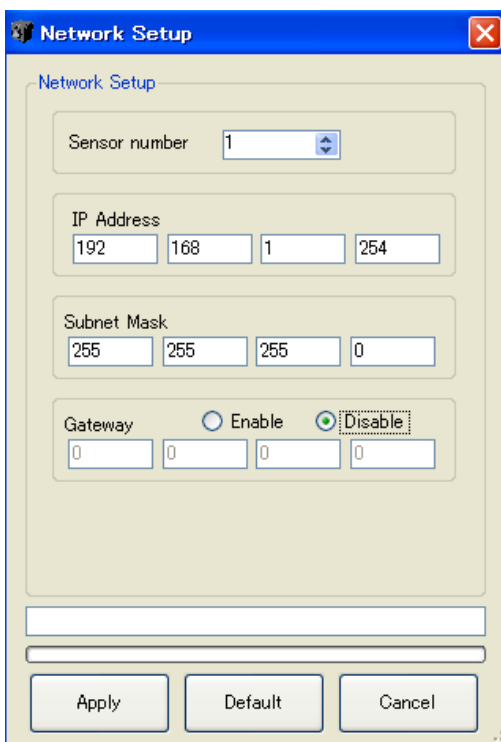


Enter information into the following setting items.

- Sensor number
A Number to be assigned to each sensor
Enter the numbers from 1 to 4.
When one sensor is only used, enter 1.
When multiple sensors are used, assign the numbers from 1 to 4 not to overlap each other.
- IP address
IP addresses to be allocated to sensors
Assign a unique IP Address to the sensor(s) not to conflict with other instruments.
- Subnet mask
Data to specify the address of network from the IP address.
Enter an arbitrary subnet mask.
- Gateway
IP address of a relaying unit in case that there is not the designation IP address on the subnet.
When the gateway is not used, select [Disable].


After entering addresses, click [Apply].

By clicking the [Apply] button, the data is transferred to the sensor.
The transmission of the data is displayed on the progress bar.

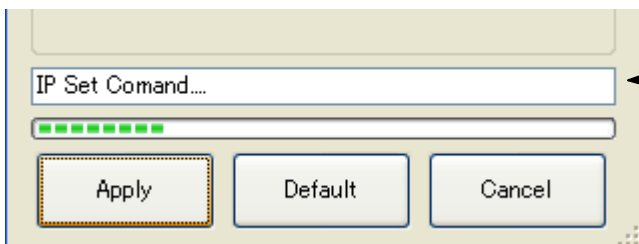

Message box:
Messages for the settings are displayed.

When the transmission is completed properly, [ALL SET OK!] is displayed on the message box.

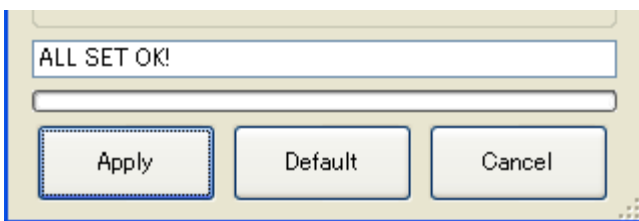

If the data is not transmitted, confirm the connection of network and click [Apply] button again.


By the above procedure, the LAN settings of the thermal image sensor are completed.




When multiple thermal image sensors are used, perform the same settings for each thermal image sensor.
In case of multiple sensors being used, perform the LAN settings of each sensor connected to the PC separately.

■ Initial settings of application software

These steps described here will register the sensor to be connected to the application software.
Select [Sensor Setup]→[IP Address] in the menu.

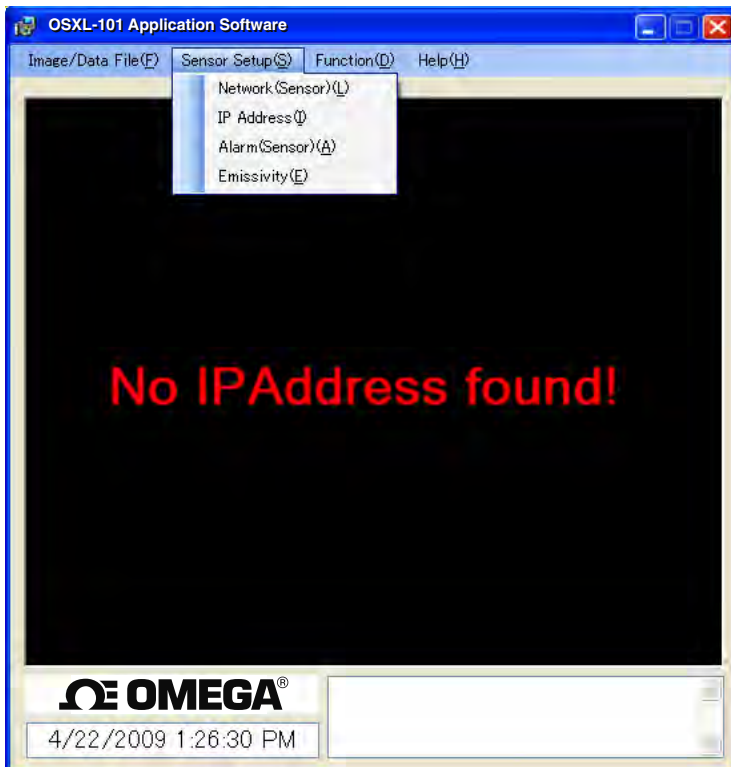

The following screen will appear.

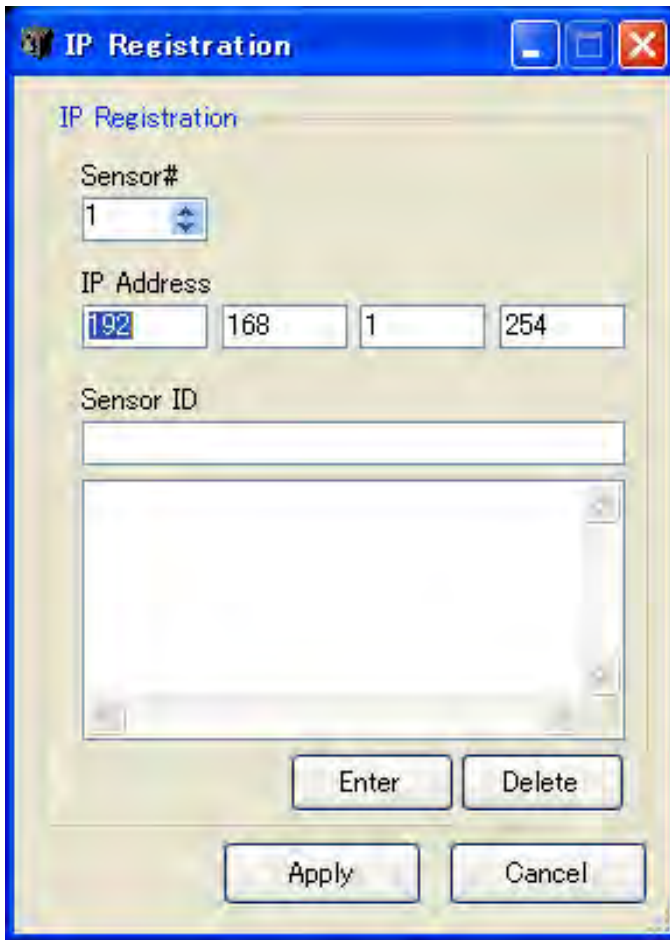The image shows a Windows-style dialog box titled "IP Registration". It has a blue title bar with standard minimize, maximize, and close buttons. The main area is light yellow. At the top, it says "IP Registration" in blue. Below that, there are three input sections: "Sensor#" with a dropdown menu showing "1"; "IP Address" with four separate text boxes containing "192", "168", "1", and "254"; and "Sensor ID" with a single-line text box and a larger multi-line text box below it. At the bottom, there are four buttons: "Enter", "Delete", "Apply", and "Cancel".

Enter the following items.

- Sensor number input
Select the menu of the sensor numbers that you want to communicate with.
- IP address
Enter the IP addresses assigned to each sensor with the Network settings procedure.
- Sensor ID
You can give each sensor a name here.
For example, you can use location names such as furnace-1, furnace-2, etc.

After completing steps above, click [Enter].

Go from the sensor number input again when you register two or more.

Click the [Apply] button when ending registration.

Select the registration item, and click the [Delete] button when registering by mistake.

By the above procedure, the initial settings of the application software are completed.



When the Network settings of the sensors are changed, change these settings as well, otherwise, image and data will not be displayed correctly.

■ Displaying thermal images


For displaying thermal images, perform the following procedure.

Start the application software.




When the Network settings (Ref. Page 13) to the sensors and the IP registration (Ref. Page 15) to the application software has not been performed yet, complete these settings first.

[1] The following screen will appear. Click [Run] button on the screen.

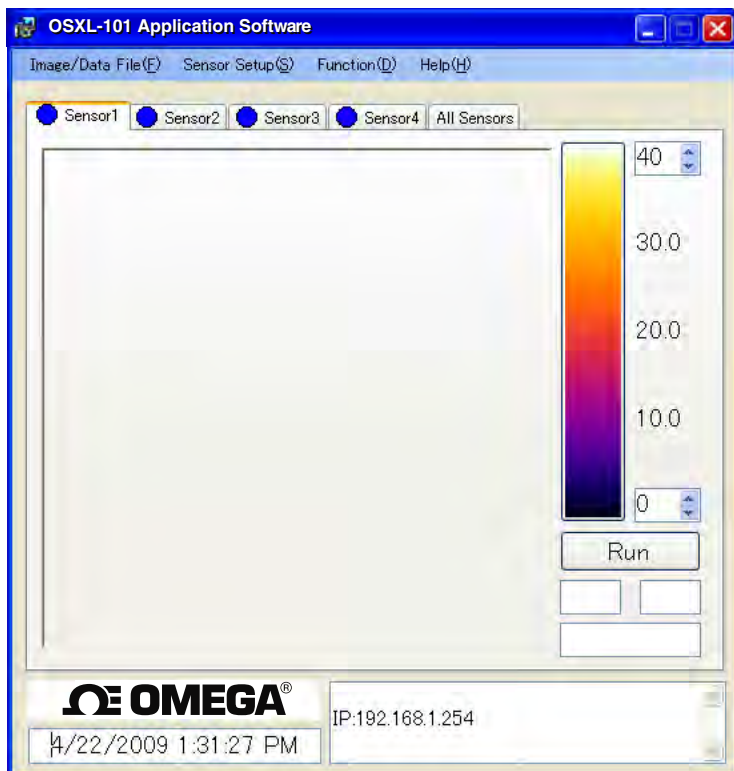


When the IP registration_(Ref. Page 15) to the application software is not completed yet, the message of [No IP Address found] will appear. Complete the registration of IP.

[2] The thermal image will appear on the screen.

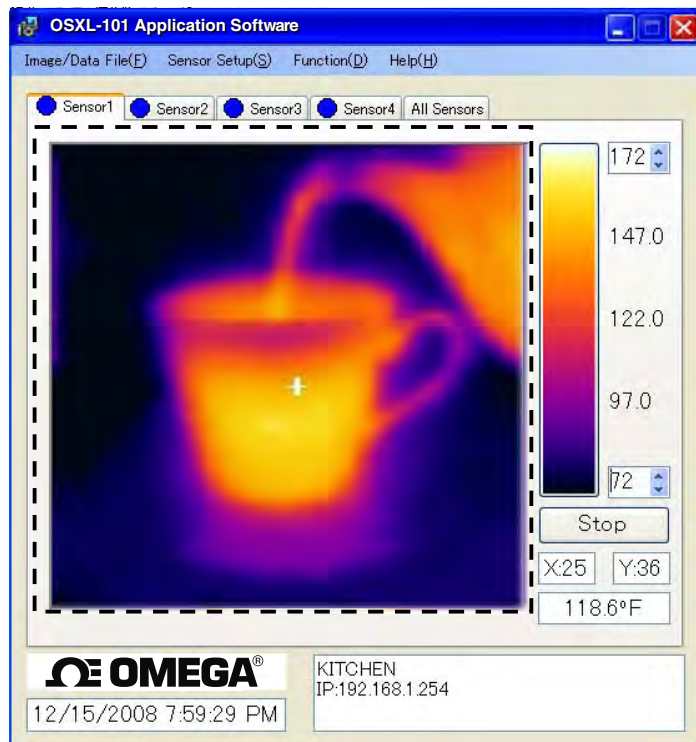


[When multiple sensors are connected]

When multiple sensors are connected, click the tab of the sensor number you want to display and then perform the above [1] and [2].

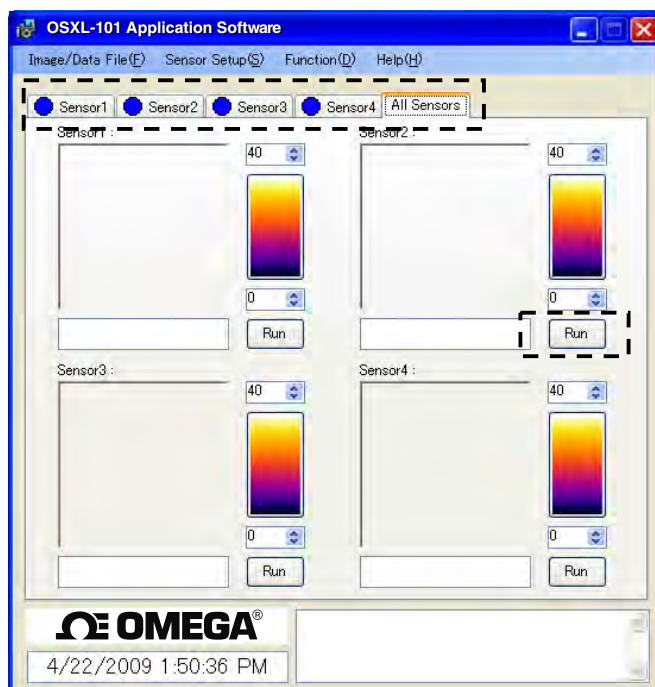

Click the tab of the sensor number you want to display the thermal image and then click [Run] button on each screen.

Screen configuration and explanation

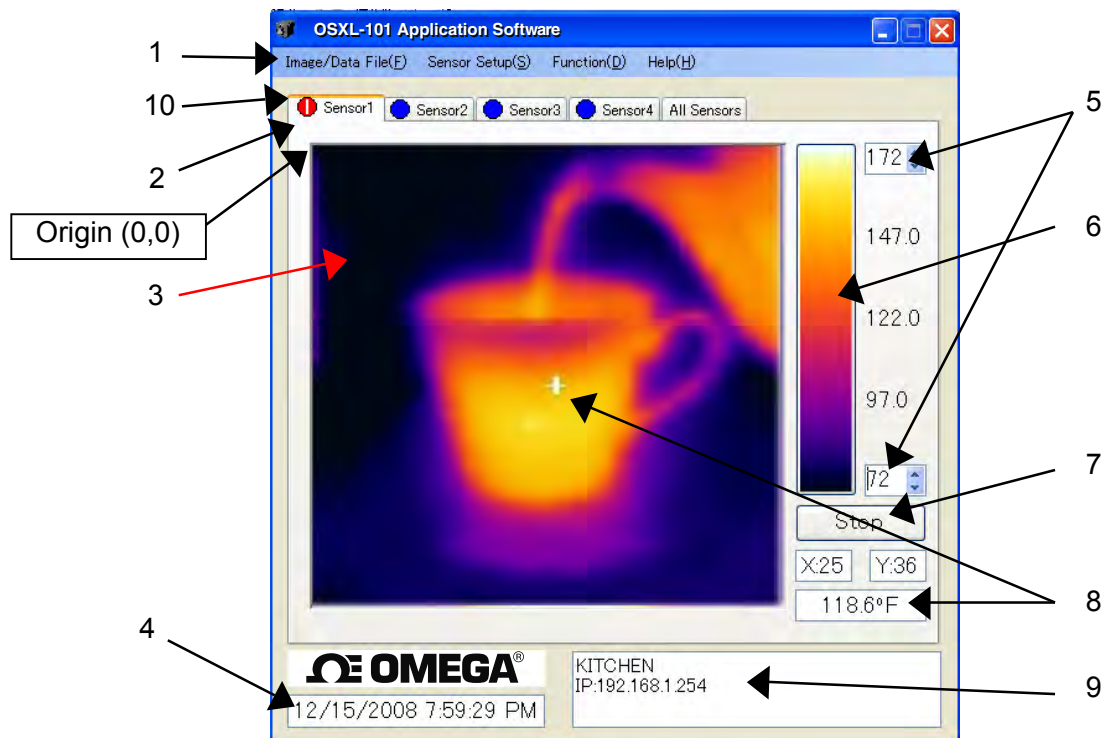

No.	Names	Explanations
1	Main Menu Bar	Various functions can be selected. Refer to the next page.
2	Sensor Tabs	For selecting the sensor to be displayed
3	Thermal Image screen	Display a 2-dimensional thermal image based on temperature from each pixel in a 48x47 array. The frame rate of the display is 3fps. *Note 1 The coordinates of pixels displaying temperature values are (X=0, Y=0) as the origin at the top-left and (X=47, Y=46) at the bottom-right. *Note 2
4	Current Time	The current time of the PC is displayed.
5	Temperature Scale	Maximum and minimum values of the temperature scale being displayed currently To change values, click the up/down arrows or enter values from the keyboard after clicking the box.
6	Color Palette	Color resolution is 256 colors. By clicking the color palette, the displayed pattern of thermal image can be changed. The default is Iron. There are 4 pallets available. Iron, Rainbow, Gradation and Gray Scale. *Note 3
7	Thermal Image Run/Stop	Run/Stop for communication
8	Temperature Value and Coordinate of the Pixel	The coordinate and temperature value selected by the cursor are displayed.
9	Sensor ID	The name and IP address of the sensor displaying the thermal image are indicated. (Enter the sensor name in the sensor IP registration screen.)
10	Indicator for Alarm from Sensor	The red/yellow colors are flashed when the alarm set on the sensor(s) is activated. (The alarms are displayed at the upper side of the tab of sensor.)

Menu bar and its functions

1. Image/Data File (F)

Functions under this menu are to Start/stop the saving function of image files (.jpg) and temperature value files (.csv). You can assign different modes of saving files and download location of data and images.

2. Sensor Setup(S)

The IP address, Network configuration and Emissivity setting of sensor(s) can be set here. In addition, you can activate the Sensor Alarm functions.

3. Function (D)

The sub menus here offer a variety of data processing functions on the application software.

Auto/Manual temperature scaling, Image filters, On/Off of Maximum/Minimum temperature point display, Zone Trending, Simple Pixel Equalizer as well as Preferences of the software such as Language and Degree F or C. In the Zone Trending function, you can set Alarm function on designated zone(s).

4. Help (H)

You will find the software manual and software version information.



Note 1) Frame rate of Image display

If the alarm function is enabled, the frame rate will drop to 1fps or slower if using image filter.)




Note 2) Coordinates of Pixels

The coordinates of Pixels are fixed to absolute locations on the image screen, thus they do not get changed by mirroring or flipping images upside down.




Note 3) Color Pallet


[Iron]

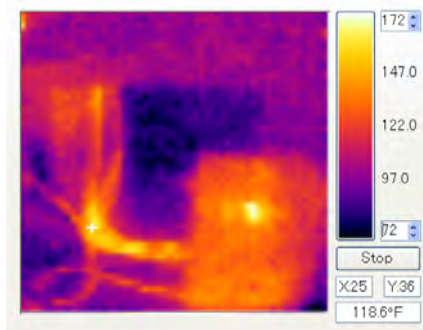

[Rainbow]

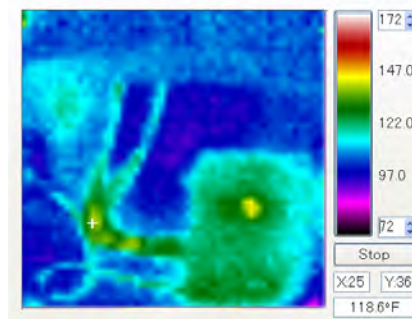

[Gradation]

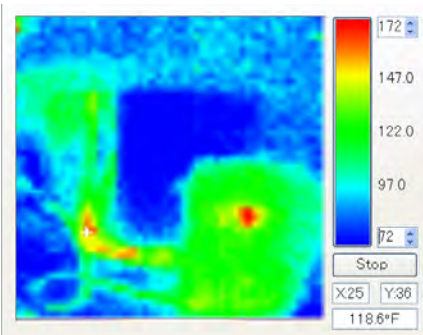

[Gray Scale]



1. Image/Data File (F)

Start Saving(R)

Selecting [Start Saving] will start saving temperature value data files (.csv) and thermal image files (.jpg) into designated folder.

Stop Saving (P)

Selecting [Stop Saving] will stop saving.

Image/Data Setup (S)

By selecting [Image/Data Setup], Saving Setup window will appear.

[Sensor Selection]

Check (✓) the checkbox for the sensor(s) that you need to save data from..

[Saving Interval]

You can specify the interval of saving files here in hour/minute/second format. The minimum interval is 1 second.

[Saving Mode Setup]

<Continuous>

This sets the duration of data saving to infinite. Once you select [Start Saving], selecting [Stop Saving] from Image/Data File(F) menu is the only way to stop saving.

<Duration>



This sets the period of time in hour/minute/second format that image and data files will be saved after you select [Start Saving]. You can start saving by selecting [Start Saving] from Image/Data File(F) menu. This function will stop saving at the end of the set duration time.

<Saving Schedule>

You can schedule time and date by clicking the down arrow on time setting window here to start and stop saving files. In order to start saving, however, you need to select [Start Saving] from the Image/Data File(F) menu.

[Data Format]


Check (✓) the checkbox for the data you want to save. You can specify a directory and folder that you want to save these files into by clicking [Brows] button at Directory section. The default location is [OSXL-101] folder under My Documents. These settings are activated only by clicking [OK]. button at the bottom. To cancel these settings, click [Cancel] button.

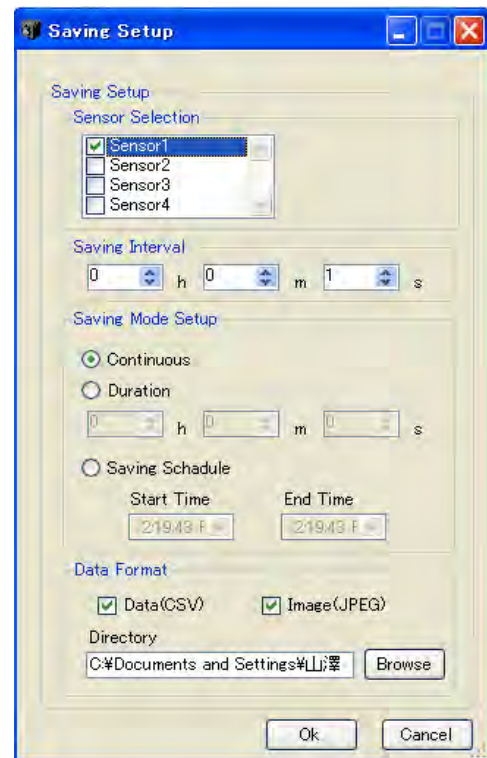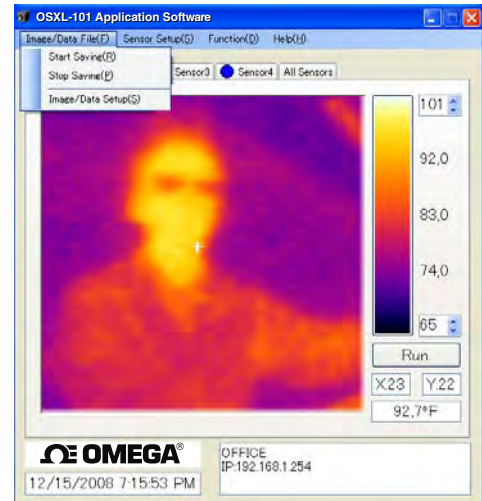

Example of CSV file display

Date		A1 DATA										
Sensor No.		A	B	C	D	E	F					
1	2008.12.15.19.23.48											
3	Sensor1											
4	xy	0	0	1	2	3	4					
5		0	73.9	75.7	75.4	76.1	76.3					
6	1		76.1	76.1	76.5	77	76.5					
7	2		78.4	76.1	76.1	77.7	77.9					
8	3		78.3	77.5	77.7	76.6	76.3					
9	4		77.5	78.3	77.5	78.8	77.9					
10	5		77.7	77.9	78.3	79.5	79.5					
11	6		78.4	77.7	78.4	78.4	80.2					
12	7		79.7	78.6	77.7	81.7	81					
13	8		79	78.6	79.5	80.6	82.6					
14	9		79	79	81.1	82.6	82.6					

Example of JPEG file display

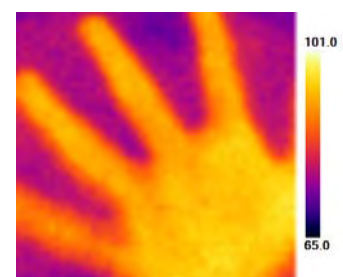

2. Sensor Setup (S)

Network (Sensor)

Selecting [Network(Sensor)] will bring up Network Setup window.

Here, you can set or modify network communication parameters including IP Address on the connected sensor(s).



Refer to [Network settings of the thermal image sensor] (Page 13) for details.

IP Address

Selecting [IP Address] will bring up IP Registration window.

Here, you can register IP Address and sensor ID name of the connected sensor(s) into OSXL-101 Application Software.


Refer to [Initial settings of the application software] (Page 15) for details.

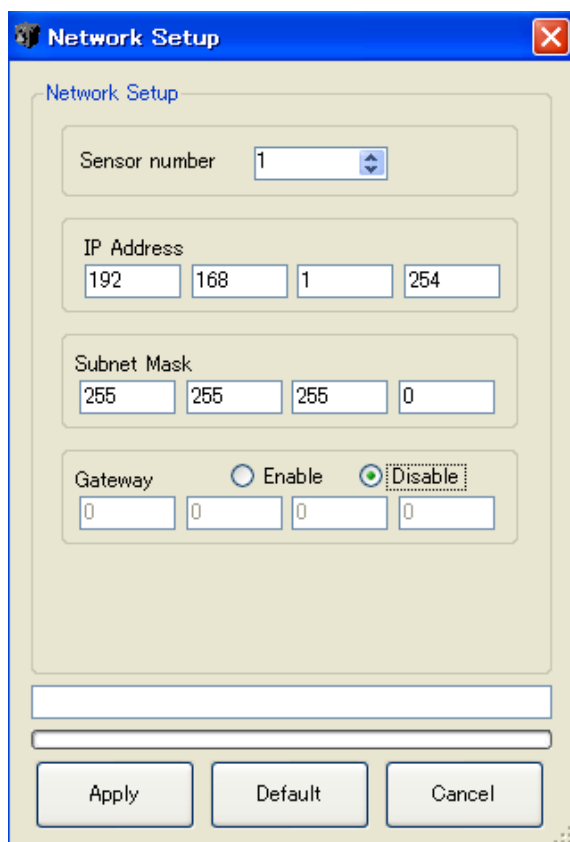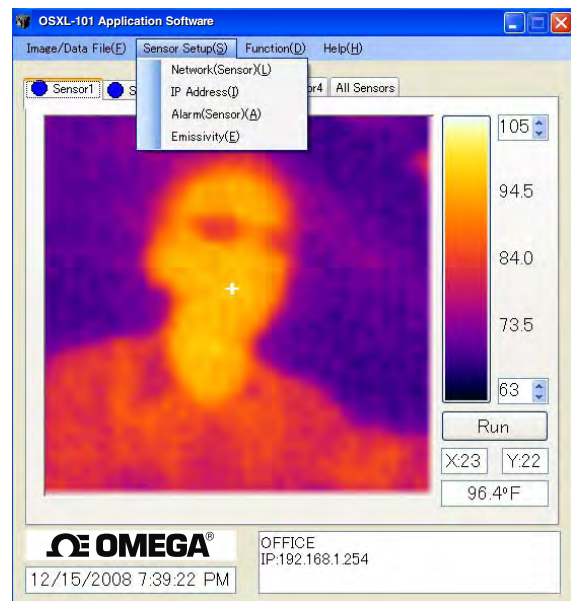

Alarm (Sensor)

Selecting [Alarm(Sensor)] will bring up Alarm Setup window. This window uploads alarm setup to the selected sensor(s). You can have one area per sensor and two alarms per area.

⚠ Alarm will be activated when consecutive 4 frames have met the alarm condition you have set.

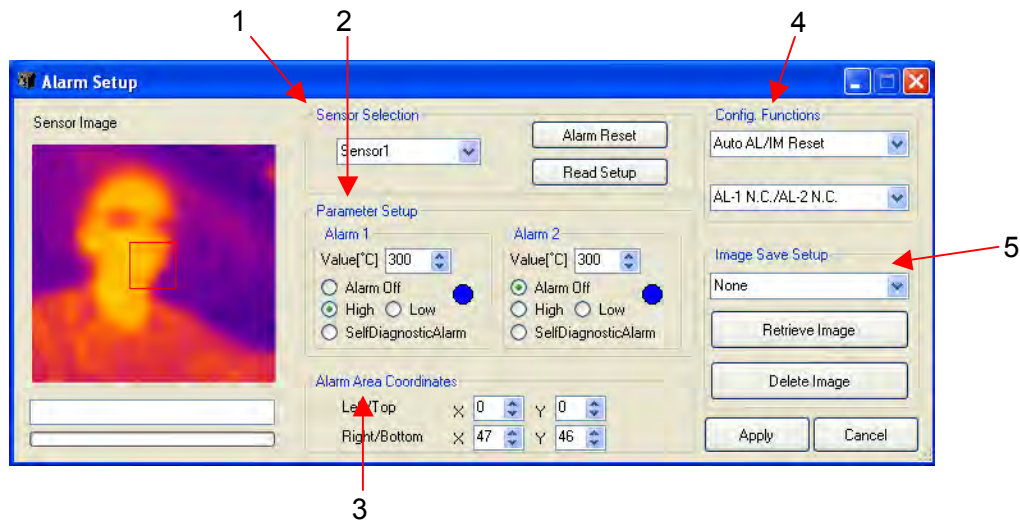

[1: Sensor Selection]

You can choose the sensor you want to set Alarm for by clicking the radio buttons for the sensor1-4 in this section. You can perform Alarm setup only on one sensor at a time but you can perform different Alarm setup on each sensor individually. Clicking [Read Setup] button will download all current setting parameters from the selected sensor onto this window for your review.

[2: Parameter Setup]

You can enter the set point (temperature) of each Alarm, activate or deactivate each one of them as well as choose High Alarm or Low Alarm or Self Diagnostic Alarm for each one here. Maximum 2 alarm values (Alarm 1, 2) can be set.

Alarm 1 is allocated to the contact output (AL-1) and Alarm 2 is allocated to the contact output (AL-2) of the selected sensor.

[3: Alarm Area Coordinates]

You can designate Alarm Area for the selected sensor by either entering coordinate numbers or using click and drag method drawing a rectangle on the image screen to the left in this window. The coordinates of pixels are (X=0, Y=0) as the origin at the top-left and (X=47, Y=46) at the bottom-right of the Sensor Image screen.

[4: Config.Functions]

<Auto AL/IM Reset and Manual AL/IM Reset>

You can choose two types of Alarm Reset method here. "Auto Reset" resets the Alarm every time the Alarm clears itself. "Manual Reset" keeps the initial Alarm state unless you click [Alarm Reset] button in Sensor Selection.

<Normally-Open/Normally-Closed >

Here, you can specify either Normally-Open type or Normally-Closed type for each Contact Output.

[5: Image Save Setup]

This sensor can save a thermal image and temperature data on its built-in memory when Alarm condition occurs.

You have three choices for this function as follows;

☐ None


No data or thermal image will be saved under an alarm condition.

☐ Alarm 1

Thermal Image will be saved when Alarm 1 is activated.

☐ Alarm 2

Thermal Image will be saved when Alarm 2 is activated.

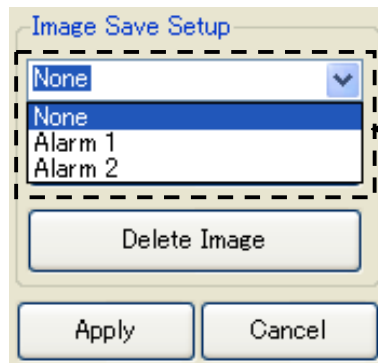

Select the condition for storing thermal image from the dropdown menu.




For the storing timing, etc., refer to [Alarm output and saving image] (Page 26).



No images will be saved when the Self Diagnostic Alarm is activated.

◆ Reviewing Thermal Image saved in the sensor memory.

To retrieve and review saved thermal image, click [Retrieve Image] button.

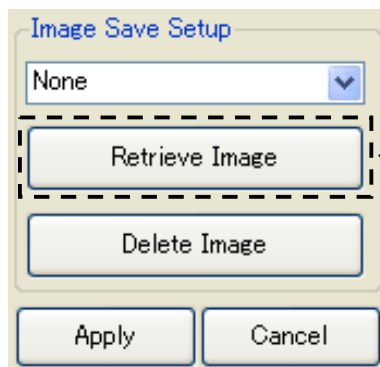


Click this Retrieve Image button.

When there's no image saved in the sensor memory, the error message [No Image Data Found] will appear.

If the thermal image has been saved in the sensor memory, the application software begins downloading the image data from the sensor after clicking the [Retrieve Image] button. The progress bar indicates the download status. Wait until the downloading completes.

Upon completion of downloading, the thermal image will be displayed in a new window. Adjust temperature scale and/or change color scheme palette for better image resolution.

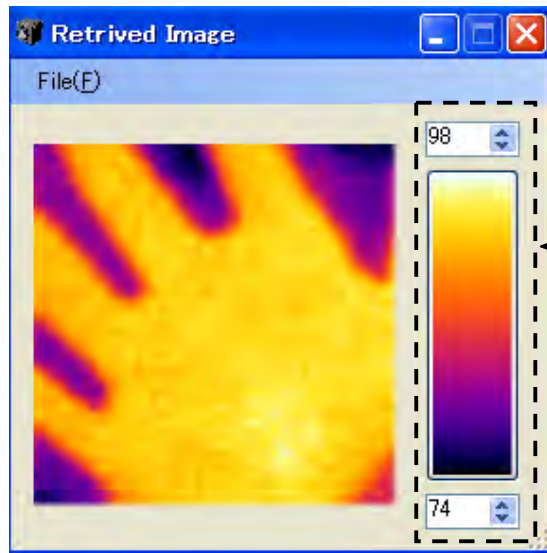


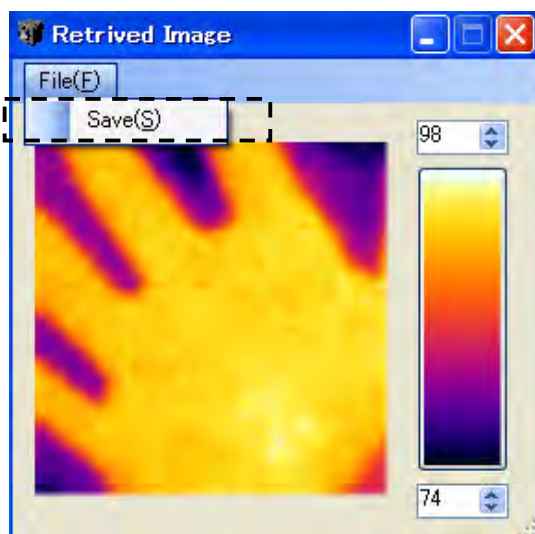
The temperature scale and the color palette can be adjusted here.
The color palette can be changed by clicking the color bar.

◆ Saving retrieved image and temperature data

To save the image and temperature data that have been retrieved from the sensor, click [Save] under File(F) on this window.

A temperature data file (.csv) and a thermal image file (.jpg) will be saved into a folder called "mm/dd/yyyy_Alarm" in the folder you have specified in Saving Setup window (Under Image/Data File(F) -> Image/Data Save(S))

 The date (mm/dd/yyyy) on the folder name that this saving function creates is not the time of the Alarm. It is the date the folder is created during saving function.




- Alarm output and saving image



The following figure shows the logic between alarming state (alarm on/Alarm off) and contact output condition.


Alarm turns on/off when consecutive 4 frames have satisfied the alarm condition you have set.

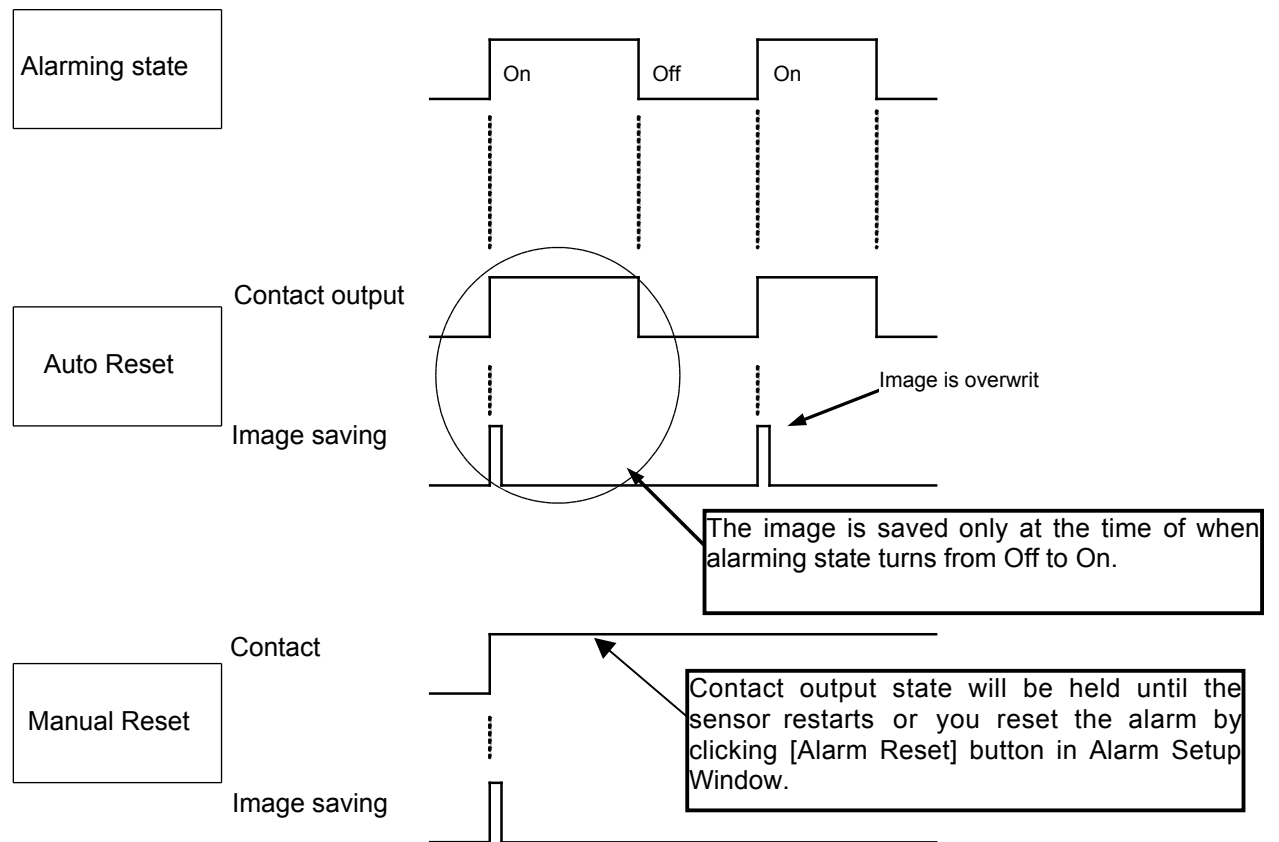

An image will be overwritten if a new alarm turns on before retrieving previous image completes.

◆ Procedure for setting alarms to sensor ◆


This paragraph explains steps for alarm settings on the selected sensor. By using these steps, you can configure the contact outputs of the sensor or saving thermal image data.

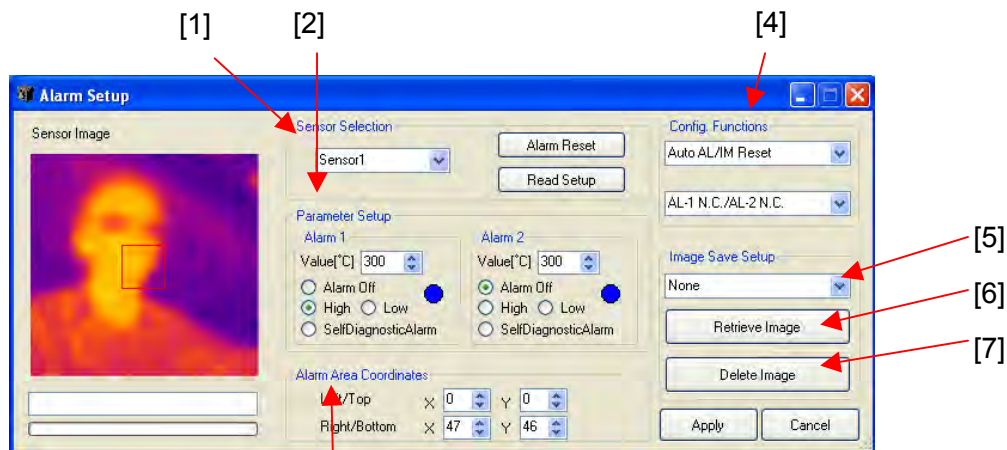

Steps

[1] Selecting sensor

In [Sensor Selection] section, click one of the radio buttons of the sensor1-4 you want to set alarms.

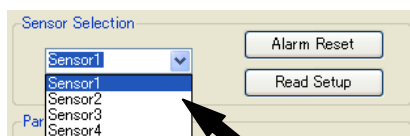

Select the sensor for setting.



If IP Address has not been registered, you cannot do the setup. Refer to [IP Address](Page15).


[2] Parameter Setup

You can have 2 alarms per area.

Select the one of the following alarm conditions.

- (1) Alarm off ... Alarm is disabled. All settings are not valid. (e.g. Value, Area, etc.)
- (2) High ... When the temperature reading in the specified area is higher than the set value, the contact output turns on.
- (3) Low ... When the temperature reading in the specified area is lower than the set value, the contact output turns on.
- (4) Self Diagnostic Alarm ... When sensor detects an abnormal state on its internal memory or internal temperature, the contact output turns on. (Page 8 of Sensor Manual)


The following is an example of Alarm 1 with High Alarm and Set Value of 150°F.

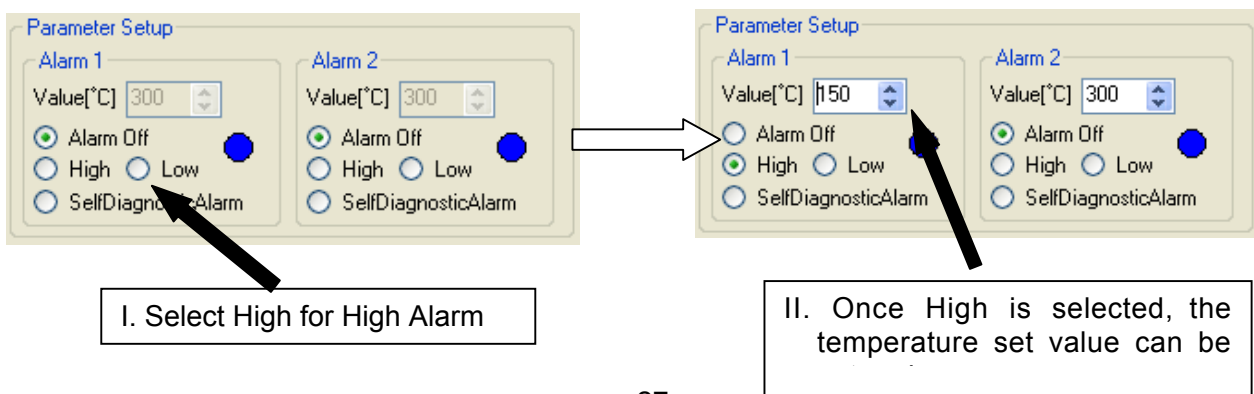

[3] Designation of Alarm Area


Here you can set the Alarm Area.

When there is a pixel in this area that meets the conditions of the alarm settings specified by [2], the contact output signal goes out. Specify the area by using your mouse on the Sensor Image screen to the left of Alarm Setup window.

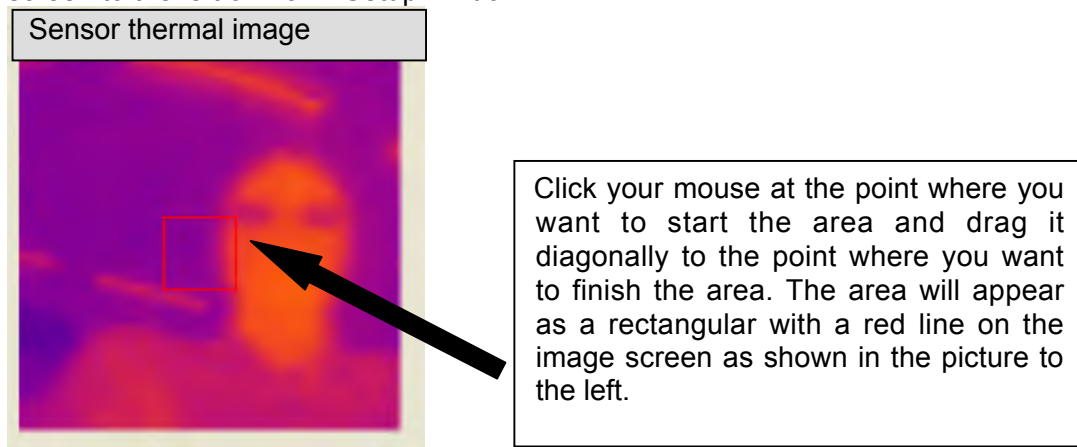

If any pixel within the alarm area meets the set value, the alarm will be triggered and provide contact outputs.

Once the area is specified, the coordinate numbers of Left/Top point and Right/Bottom point are displayed in Alarm Area Coordinates section of the window. You can also perform fine adjustments of the area coordinates by changing the numbers in these boxes directly.

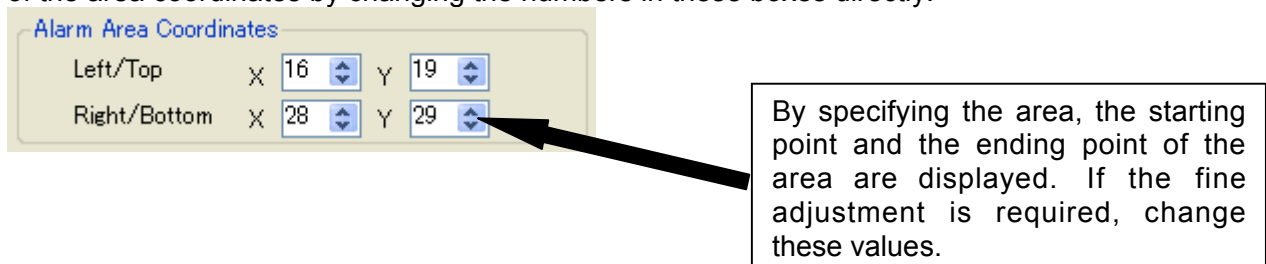

[4] Configuration Functions

This section of the window is used to configure the type of alarm reset and alarm output configuration.

There are 2 functions available.

(1) Auto Reset

Alarm automatically resets when alarm condition is no longer present.


(2) Manual Reset

Alarm condition will be active until the [Alarm Reset] button is clicked.



For image and data storage logic, refer to [Alarm output and saving image] (Page 26).

The following is an example of [Auto Reset].

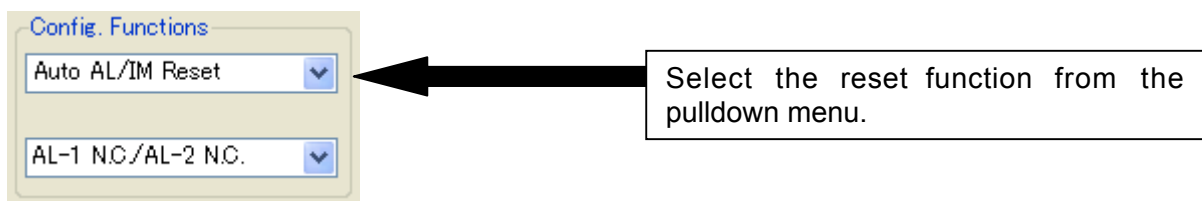


Next, select the output logic of contact.

The output logic can be specified for both the alarm 1 and alarm 2.

The following logic is available.

- (1) N.O ... Normally open
- (2) N.C ... Normally closed

The following is an example for selecting [AL-1 N.C/ AL-2 N.C].

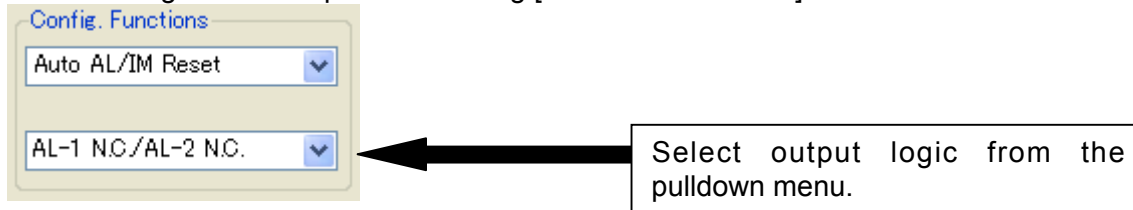


[5] Image Save setup

This sensor can save 1 thermal image in its memory when the alarm is activated.

The following 3 choices are available.

- (1) None
Thermal image will not be saved even if the alarm is activated.
- (2) Alarm 1
Thermal Image will be saved when Alarm 1 is activated.
- (3) Alarm 2
Thermal Image will be saved when Alarm 2 is activated.

The following is an example for selecting [Alarm 1].

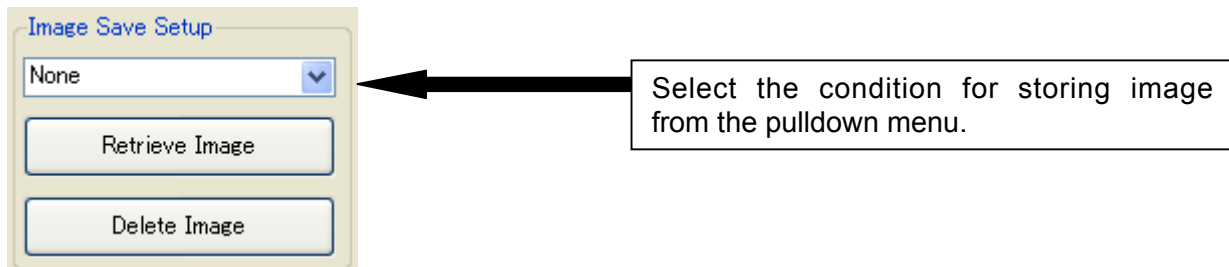

For reviewing the image saved, refer to [5: Image Save Setup] (Page 24)
For the storing timing, etc., refer to [Alarm output and saving image] (Page 26).




No images will be saved when the Self Diagnostic Alarm is activated.

[6] Uploading Alarm Setup parameters.

Once the settings from [1] to [5] are all complete, click [Apply] button.


The setting information will be transferred to the sensor. When the transfer completes, the message will indicate [OK!].

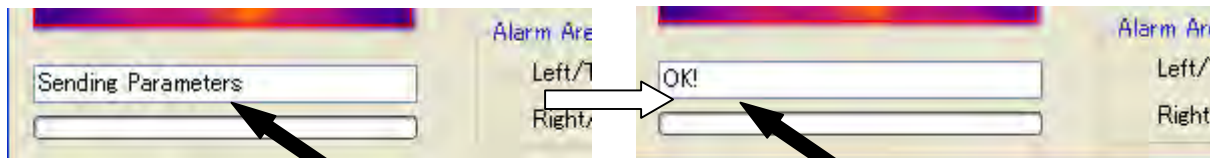


If the transfer failed, [Update Failed] error message pops up and the message box displays [Retry Error!]. Your PC and the sensor may not be communicating. Check the connection between your PC and the sensor thoroughly and try again.

After you've completed the steps above, alarm settings in the sensor are set.

When an alarm occurs the LED indicator on the front of the sensor turns red and based on your settings, the contact for AL1 and/or AL2 are activated.

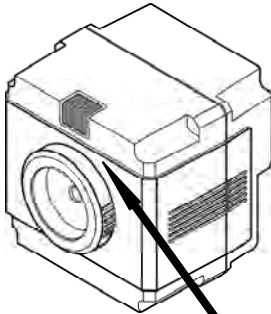

The LED lights in red when alarm is activation.

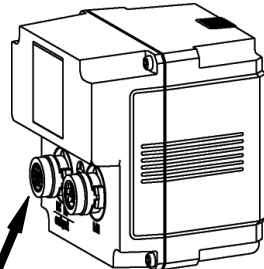

The contacts are activated on under a alarm condition



For the alarm output logic and rating, see [Alarm output] (Page 9 of Sensor Manual) and [Specifications] (Page 12 of Sensor Manual).

In addition, alarm indication is provided on the main application software window.

Red / yellow flashes when alarm is activated.
It is displayed above the tab of each sensor.




Emissivity Setup

Selecting [Emissivity] brings up Emissivity Setup window with the current Emissivity value indicated. (Default is set to 1.00)

To change the value, click the Up/Down arrow mark or enter a numerical value directly from the keyboard.

The setting range is 0.10 to 1.00 with the increment of 0.01.

The Emissivity can be set for each sensor independently. The emissivity is the same for the entire pixel array (image) of 48x47.

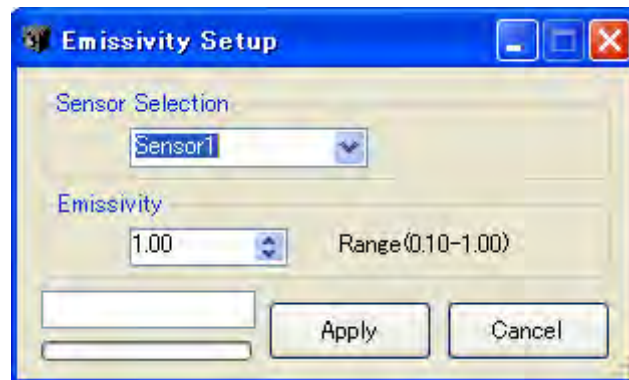

3. Functions (D)

Temp Range

Select either [Manual] or [Auto] temperature span scaling.

[Manual]

Allows you to set manually set the temperature span between -20 to 300°C (-4 to 572°F).

[Auto]

Automatically sets the span based on the highest and lowest temperature in the image.

(Continuously changes as the maximum and minimum temperature of the image changes)

The default scale is manual with a span of 0 to 40 degree

(You can also enter a full scale temperature number which is lower than the 0 scale temperature number, and the color pallet will reverse itself.)

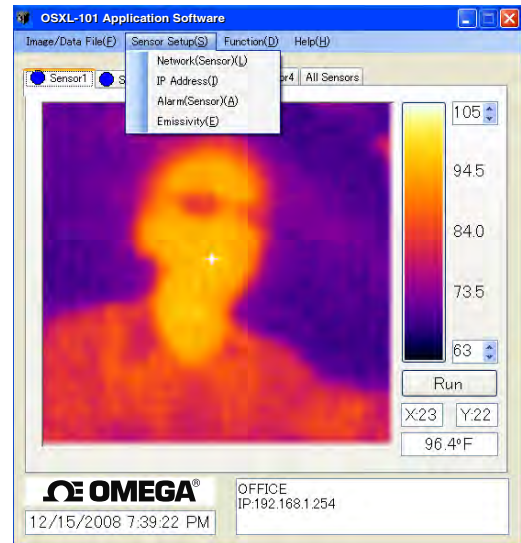


Image Filter

Selecting [Image Filter] bring up a window for choosing various image processing functions. These filters are to improve the image quality or eliminate unwanted noise. You can choose appropriate filter depending on your application.

[Frame Average] (For improving temperature resolution)


This function averages the temperature reading over a number of frames specified in the frame number box. Each pixel simply calculates the average of its readings based on the number of frames. The maximum number of frames for averaging is 10. (It allows image response.)

[9pixelAverage] (For stabilizing quality of image)

This function averages the temperature reading on each given pixel with the reading of surrounding 8 pixels. (Better edge definition for objects in image)

[9pixelmedian] (For eliminating noise.)

This function averages the temperature reading for each pixel by picking the median value out of 9 pixels. Each pixel value is assigned the 5th highest temperature from within the 8 pixels adjacent to it.

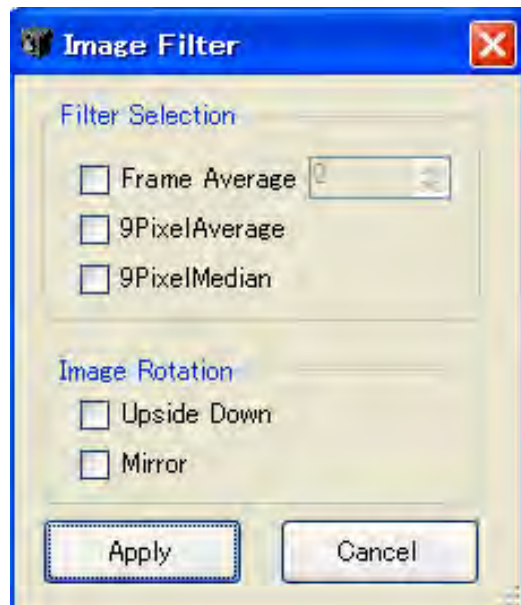

Rotation




[Upside Down] The thermal image rotates top to bottom.

[Mirror] The thermal image rotates right to left.



The coordinate origin (X = 0, Y = 0) is always at the Top/Left corner and does not change when this function is used..

Therefore, you will have to readjust the coordinates for any area or zone alarms after using this function.

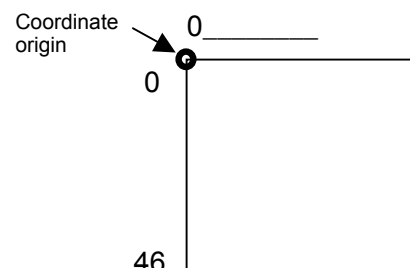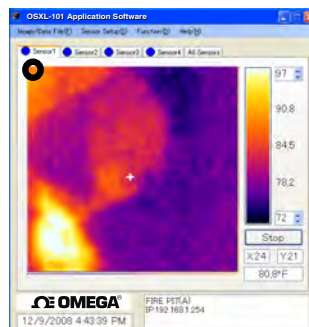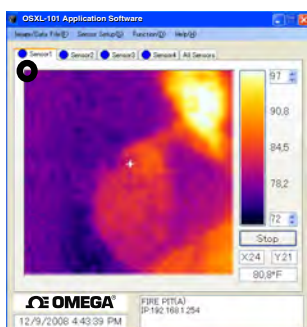

Max Temp Pt.

By selecting (✓) [Max Temp Pt.], you can display a maximum temperature point and its temperature value in the image window. The maximum temperature point will be indicated by “H” and its value will be displayed at the upper left corner of the window.

Min Temp Pt.

By selecting (✓) [Min Temp Pt.], you can display a minimum temperature point and its temperature value in the image window. The minimum temperature point will be indicated by “L” and its value will be displayed at the upper left corner of the window.



the maximum/minimum values are displayed.

Zone Trending



Selecting [Zone Trending] brings up the trend display window.

You can have up to 8 zones. The temperature value of up to 8 points in the pixel or zone (domain) specified can be displayed on this trend logging screen.

The vertical axis is for temperature scale and can be set for desired temperature span. (The default is 0 to 40°C).

The horizontal axis is time. The data is scrolled automatically from right to left. (Maximum 512 data points are plotted for each pixel or zone.) No historical data function is available on the screen.

The corresponding set parameters for each pixel or zone are listed in a section below the trending graph screen.

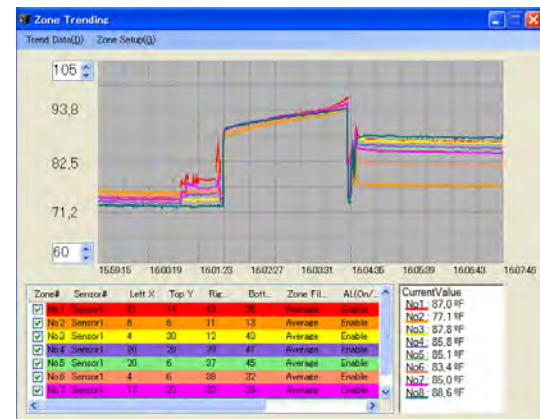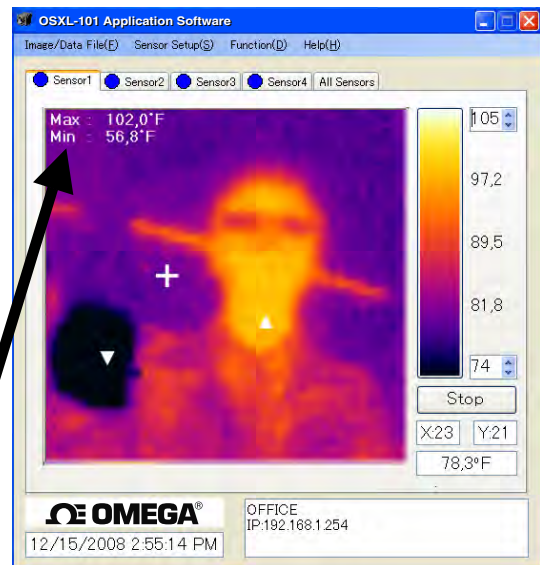

There are 2 dropdown setup in this window. [Trend Data(D)] and [Zone Setup(G)].

[Trend Data(D)]

You can save the current plotted trend data into a .csv file. By selecting [Save(S)] under [Trend Data(D)], the data will be saved into the folder designated in the Section-1 “Image/Data File(F). The maximum number of data points for each pixel or zone is 4096. After the 4096 points the data is overwritten. (Last In First Out).

You can also automatically save the current plotted trend data into a .csv file. By selecting [AutoSave(A)] under [Trend Data(D)], the data will be saved up to 4096 data per zone and will be overwritten if the number of saved data exceeds 4096.

Example of CSV file display

Graph setting information

Time

Data in area of each point

	A	B	C	D	E	F	G	H	I
	No1	No2	No3	No4	No5	No6	No7	No8	
70									
71									
72									
73									
74									
75									
76									
77									
78									
79									
80									
81	Time	No1	No2	No3	No4	No5	No6	No7	No8
82	16:23:06	79.3	78.4	97.2	78.6	82.4	85.5	100	79
83	16:23:07	79	78.4	98.1	78.3	81.9	86	99.7	79.2
84	16:23:08	80.4	78.4	97.2	78.6	83.7	85.9	100	79.3
85	16:23:09	79	78.8	97.7	79.2	82.9	85.1	99	79
86	16:23:10	79.5	78.6	98.4	78.3	84.4	85.8	99.1	79.3
87	16:23:11	79.7	78.3	97.7	78.6	84	85.3	99.3	79
88	16:23:12	79.3	78.1	98.4	78.4	83.5	85.5	100	79.3
89	16:23:13	79.3	78.4	97.9	78.4	83.3	85.3	100	79.8
90	16:23:14	79.2	79.2	97.7	78.4	84.7	85.5	99.9	79.2
91	16:23:15								
92									
93									

[Zone Setup]

Selecting [Zone Setup] brings a new window where you can specify areas (or points) for the Zone Trending.

Here, you can specify zones, filter for each zone as well as sampling interval setting. You can also assign Alarm for each zone. (The alarm function for zone trending is only a visual alarm and does not provide any contact outputs.)



This application software can accommodate 4 sensors but maximum amount of alarm zone/area is 8. These 8 alarms are shared by the 4 sensors. (For instance, you can assign as many alarms to each sensor as you wish, but you cannot exceed the maximum 8 alarms.)

[Zone Setup]

Set the area of the zone by entering pixel coordinates for the starting and ending points. The zone becomes a rectangle with the starting point at the top-left and the ending point at the bottom-right. You can also enter the coordinate values by dragging the cursor on the sensor thermal image or by entering the coordinate values directly. The coordinates of pixels are (X=0, Y=0) as the origin at the top-left and (X=47, Y=46) at the bottom-right.



[Data Filter]

Plotted temperature value on each zone for the trending will be based on selection of one of the following filters. If you have chosen a single pixel (spot), filters cannot be selected.

[Logging Interval]

Set the sampling time for each trended data point.

[Alarm Setup]

You can select either to enable or disable the alarm on each zone. You can also select High Alarm or Low Alarm and a set point.




Unlike the alarm that is set on the sensor, this software alarm works only within the application software. This visual alarm is indicated on the main thermal image screen.

Pixel EQ

This function equalizes any variation and/or calibration of each detector element in the array.

[Pixel EQ procedure]


- (1) Cover the lens of the sensor you've chosen with the lens cap that came with the package.
- (2) Select [Image Filter]. Click Frame Average and adjust the frame average value to 10. Click [Apply].
- (3) Wait for 5 seconds or more and then select [Pixel EQ] and select sensor you want to perform this EQ on.
- (4) Change parameter of the Frame Average or cancel it as needed after performing (1) to (3).

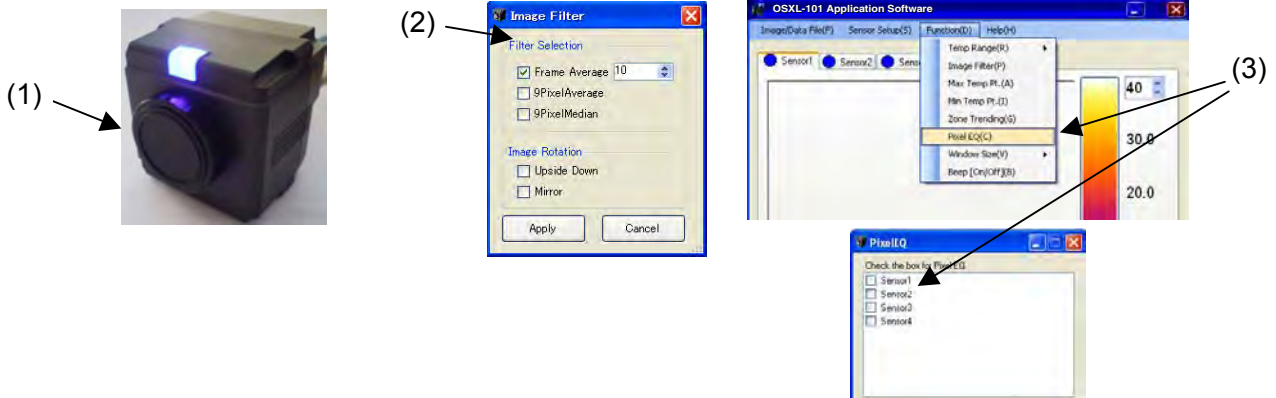


◆ Zone Setup ◆

The following procedure is used for setting up Zone Trending and the software alarms.

[1] Select a sensor number by clicking one of the radio buttons.

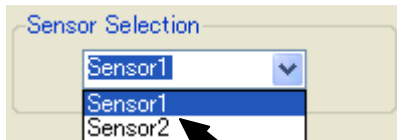


Select the sensor.

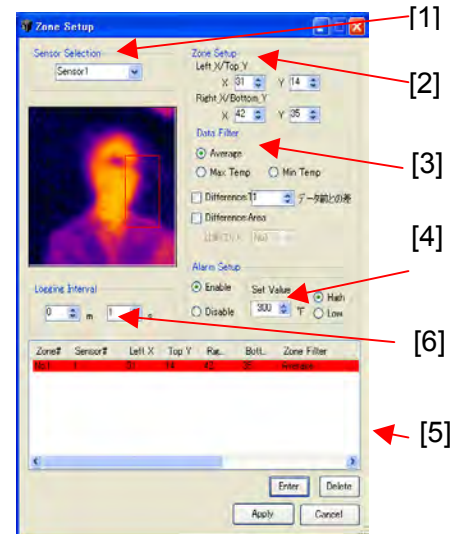

Make sure that you've registered the IP Address of the connected sensors.


[2] Creation of Spots and Zones

You can create zones by click and drag with your mouse on the thermal image in the Zone Setup window. The zone can be as big as the full screen and as small as just one pixel. Temperature data value used for trending is a function of the filter asset in step [3].

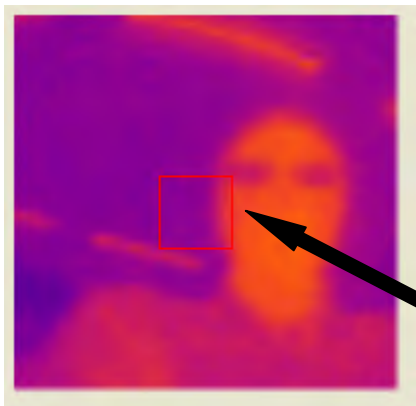

Click your mouse at the point where you want to start the zone and drag it to the point where you want to finish the zone. The zone will appear as a rectangular with a red border on the image screen as shown here.

Once the area is specified, the coordinate numbers of Left/Top points and Right/Bottom points are displayed in Zone Setup section. You can also perform fine adjustments of the area coordinates by changing the numbers in these boxes directly.

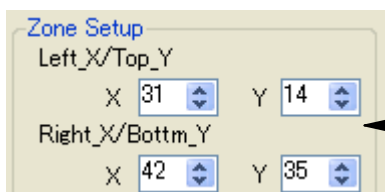


By creating the zone, the coordinates of the zone are displayed.

[3] Zone Data Filter

The following choices are available;

- (1) Average
Calculated average value of all the data points in the zone.
- (2) Max Temp
Pixel with the maximum value in the zone.
- (3) Min Temp
Pixel with the minimum value in the zone.
- (4) Difference : Time
Trend the temperature difference between the current temperature and the temperature that was taken “N” times before.
- (5) Difference : Area
Trend the temperature difference between the zone that you are setting now and the zone that you set in “Comparing Zone”.

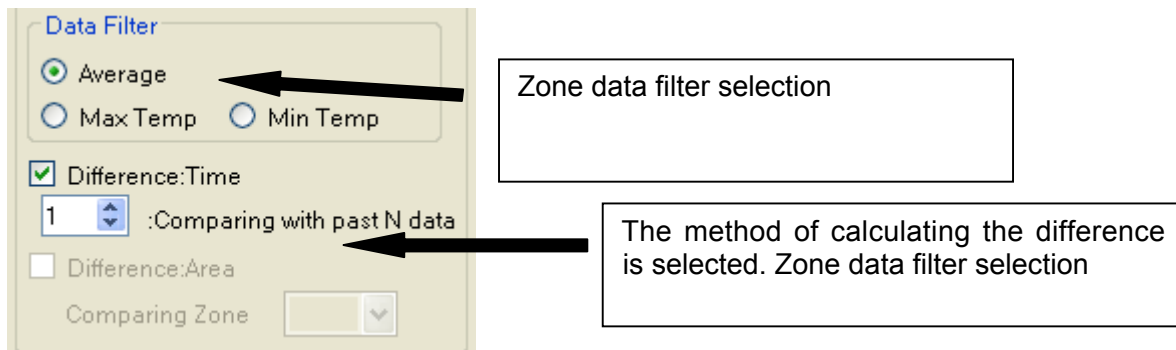


If only one pixel is chosen as a zone, the zone becomes a spot. No data filter is available for a one pixel zone..

[4] Alarm Setup

You can setup software alarm set in this section. You can activate the alarm by clicking the radio button of [Enable] and specify the set value for the alarm. You can also choose this alarm to be either a High Alarm or a Low Alarm as described below.


- (1) High: When the temperature exceeds the set point in the zone, the zone box will flash.
- (2) Low: When the temperature drops below the set point in the zone, the zone box will flash.

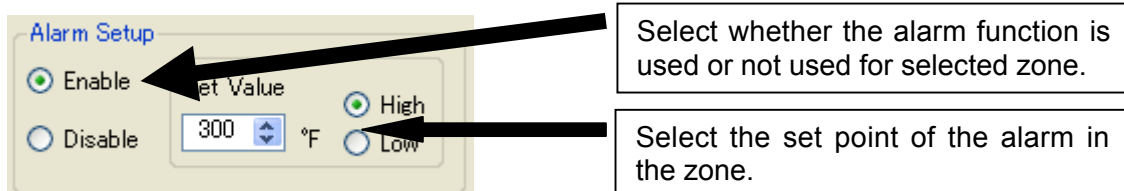

Make sure that you've registered the IP Address of the connected sensors.

[5] Registering the Zones

By clicking [Enter] button, you can register the zone with all the parameters you have set on [1] through [4] in this window. All parameters will be listed in the window as shown below. You can have up to 8 zones and thus you can have up to 8 trending graphs in the Zone Trending window.

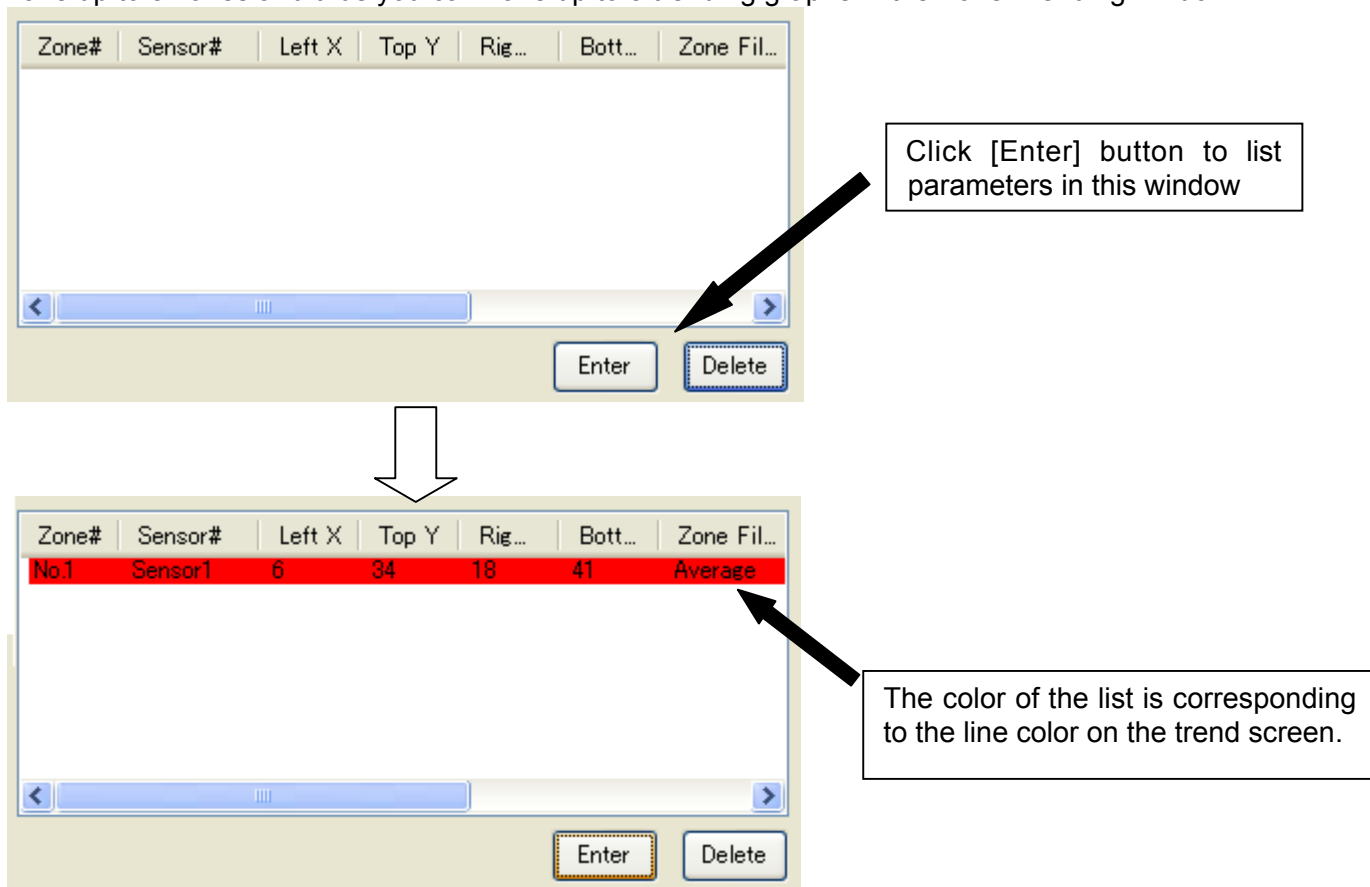


For adding additional zones, repeat the steps [1] to [5].

▼ For deleting the registered zone

To delete zones from the list, click the number of the zone you want to delete, then click the [Delete] button. The selected zone is now deleted.

The following figure is an example of deleting the settings for Zone [No. 2].

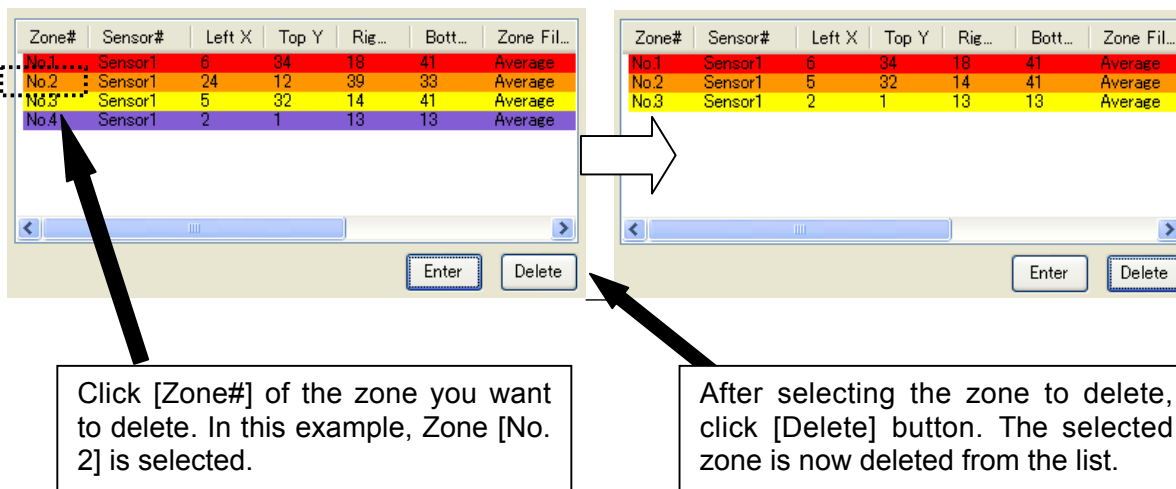

▼ For changing the settings of registered zone

To change the parameters of the zone you have registered, perform the steps [1] to [4] again and

click the number of the zone that you want to change, then click [Enter]. The setting information of the zone selected is now modified.

The following figure is an example for modifying the setting parameters for Zone No. 2.

After performing the step [1] ~ [4], click [Zone#] of the zone that you want to change. In this example, Zone [No. 2] is selected .

After selecting the zone for, click [Enter]. The parameter for the zone have been modified.

[6] Logging Interval

Enter the sample acquisition interval for the trending graph.
Data will be plotted at this interval in the trending screen.

[7] Start zone data trending.


After performing the above steps [1] to [6], click [Apply] button at the bottom of this window. Now, data trending process will start.




CAUTION!

If you have been logging data, for any zones or spots, if you hit the [Apply] button, the previous zone data will be deleted if you have not saved it.

The picture shown below is an example Zone Trend window.
 You can select to either display or not display the zone data by checking the box for that zone.
 Current temperature value of each zone is also displayed in the current value box.

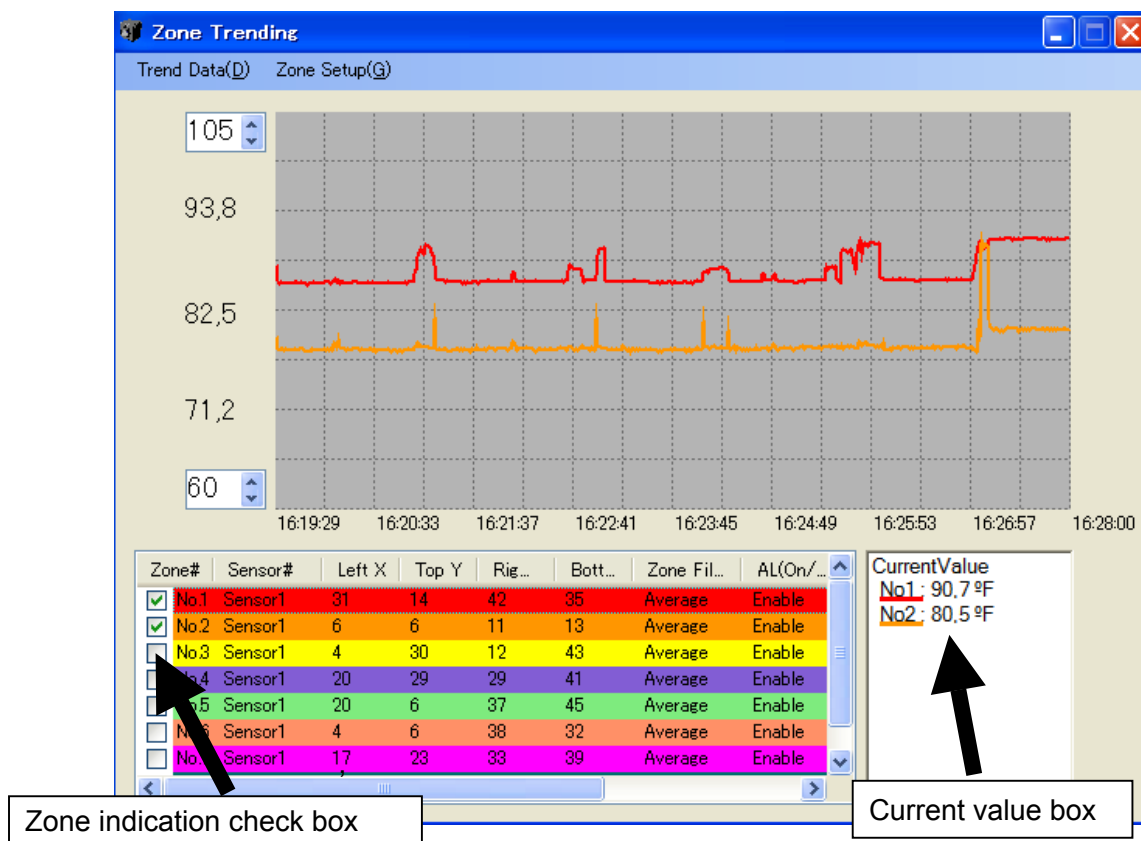

Once you have setup the zone corresponding colored zone boxes will appear in the main thermal image window. If you have set software alarms for any of the zones, the zone box will blink when the alarm is activated as shown in the picture below.

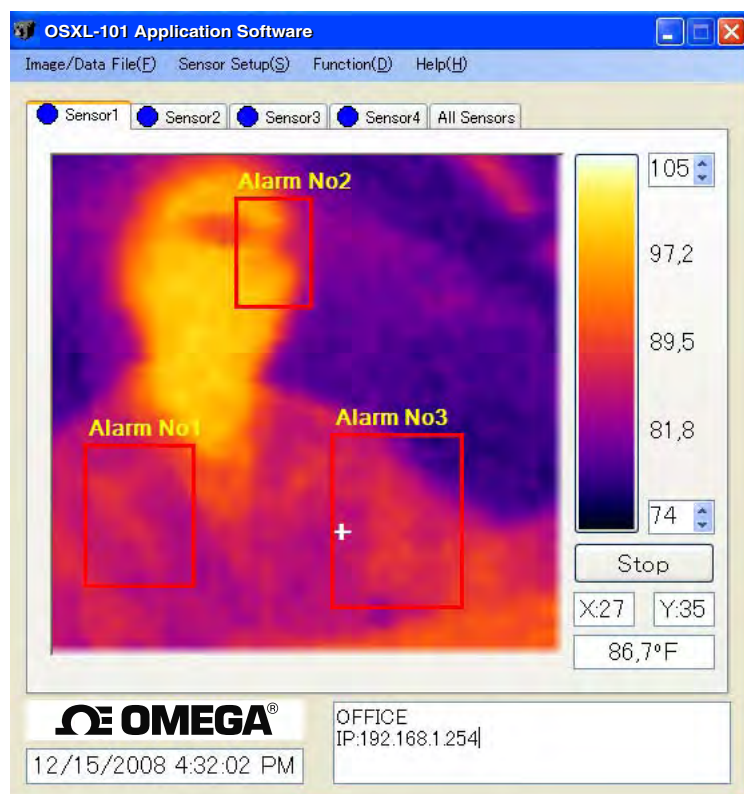

4. Help (H)

Help

Manual is displayed.

Version

The version information of the application software is shown.

■ Connection error


When there's no communications between the PC and the sensor for 30 seconds, [Connection Error!] is displayed on the main screen.

The information through the network connection may not be correctly transferred to the under such condition.

If this happens, check if the LAN Ethernet connector is connected properly.



When this type of connection error occurs, both thermal image and trending graph retain the last data that was received from the sensor(s) before the occurrence of the error.

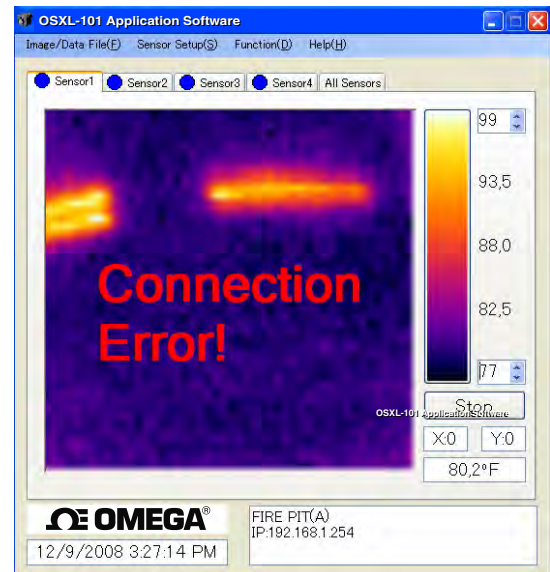

■ Troubleshooting

Symptoms	Causes	Measures
Cannot complete software installation	OS version may not be the latest.	Update it to the latest version. Refer to the instruction manual (Page 4) for installation.
No Communications	The custom Network cable is not connected properly.	Check the connection of the cable and Connect the custom network cable properly.
	The application software has not been installed.	Install the application software. Refer to the instruction manual (Page 4).
	The IP address has not been set.	Refer to the instruction manual (Page 16).
	A HUB is in place between PC and the sensor(s). (1) Check whether the HUB has automatic crossing/straight cable converting function. (2) Check the cable being used.	If the HUB has no automatic crossing/straight converting function, use a crossing/straight converting connector. Refer to the instruction manual for the compact thermal image sensor (Page 2).
Indicator lamp is not lit	The custom power cable is not connected properly.	Connect the custom power cable properly.
	The power supply has not been turned on.	Turn the power supply on.
Indicator lamp flashes Red once	Internal memory problem	Contact to the nearest distributor.
Indicator lamp flashes Red twice	Abnormal Internal temperature	Use the sensor within its operating ambient temperature range. Contact to the nearest distributor.

WARRANTY/DISCLAIMER

OMEGA ENGINEERING, INC. warrants this unit to be free of defects in materials and workmanship for a period of **13 months** from date of purchase. OMEGA's WARRANTY adds an additional one (1) month grace period to the normal **one (1) year product warranty** to cover handling and shipping time. This ensures that OMEGA's customers receive maximum coverage on each product.

If the unit malfunctions, it must be returned to the factory for evaluation. OMEGA's Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective, it will be repaired or replaced at no charge. OMEGA's WARRANTY does not apply to defects resulting from any action of the purchaser, including but not limited to mishandling, improper interfacing, operation outside of design limits, improper repair, or unauthorized modification. This WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of having been damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA's control. Components in which wear is not warranted, include but are not limited to contact points, fuses, and triacs.

OMEGA is pleased to offer suggestions on the use of its various products. However, OMEGA neither assumes responsibility for any omissions or errors nor assumes liability for any damages that result from the use of its products in accordance with information provided by OMEGA, either verbal or written. OMEGA warrants only that the parts manufactured by it will be as specified and free of defects. OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESS OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. LIMITATION OF LIABILITY: The remedies of purchaser set forth herein are exclusive, and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.

CONDITIONS: Equipment sold by OMEGA is not intended to be used, nor shall it be used: (1) as a "Basic Component" under 10 CFR 21 (NRC), used in or with any nuclear installation or activity; or (2) in medical applications or used on humans. Should any Product(s) be used in or with any nuclear installation or activity, medical application, used on humans, or misused in any way, OMEGA assumes no responsibility as set forth in our basic WARRANTY/DISCLAIMER language, and, additionally, purchaser will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the Product(s) in such a manner.

RETURN REQUESTS/INQUIRIES

Direct all warranty and repair requests/inquiries to the OMEGA Customer Service Department. BEFORE RETURNING ANY PRODUCT(S) TO OMEGA, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OMEGA'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS). The assigned AR number should then be marked on the outside of the return package and on any correspondence.

The purchaser is responsible for shipping charges, freight, insurance and proper packaging to prevent breakage in transit.

FOR **WARRANTY** RETURNS, please have the following information available BEFORE contacting OMEGA:

1. Purchase Order number under which the product was PURCHASED,
2. Model and serial number of the product under warranty, and
3. Repair instructions and/or specific problems relative to the product.

FOR **NON-WARRANTY** REPAIRS, consult OMEGA for current repair charges. Have the following information available BEFORE contacting OMEGA:

1. Purchase Order number to cover the COST of the repair,
2. Model and serial number of the product, and
3. Repair instructions and/or specific problems relative to the product.

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering.

OMEGA is a registered trademark of OMEGA ENGINEERING, INC.

© Copyright 2009 OMEGA ENGINEERING, INC. All rights reserved. This document may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without the prior written consent of OMEGA ENGINEERING, INC.

Where Do I Find Everything I Need for Process Measurement and Control? **OMEGA...Of Course!** *Shop online at omega.comsm*

TEMPERATURE

- ☑ Thermocouple, RTD & Thermistor Probes, Connectors, Panels & Assemblies
- ☑ Wire: Thermocouple, RTD & Thermistor
- ☑ Calibrators & Ice Point References
- ☑ Recorders, Controllers & Process Monitors
- ☑ Infrared Pyrometers

PRESSURE, STRAIN AND FORCE

- ☑ Transducers & Strain Gages
- ☑ Load Cells & Pressure Gages
- ☑ Displacement Transducers
- ☑ Instrumentation & Accessories

FLOW/LEVEL

- ☑ Rotameters, Gas Mass Flowmeters & Flow Computers
- ☑ Air Velocity Indicators
- ☑ Turbine/Paddlewheel Systems
- ☑ Totalizers & Batch Controllers

pH/CONDUCTIVITY

- ☑ pH Electrodes, Testers & Accessories
- ☑ Benchtop/Laboratory Meters
- ☑ Controllers, Calibrators, Simulators & Pumps
- ☑ Industrial pH & Conductivity Equipment

DATA ACQUISITION

- ☑ Data Acquisition & Engineering Software
- ☑ Communications-Based Acquisition Systems
- ☑ Plug-in Cards for Apple, IBM & Compatibles
- ☑ Datalogging Systems
- ☑ Recorders, Printers & Plotters

HEATERS

- ☑ Heating Cable
- ☑ Cartridge & Strip Heaters
- ☑ Immersion & Band Heaters
- ☑ Flexible Heaters
- ☑ Laboratory Heaters

ENVIRONMENTAL MONITORING AND CONTROL

- ☑ Metering & Control Instrumentation
- ☑ Refractometers
- ☑ Pumps & Tubing
- ☑ Air, Soil & Water Monitors
- ☑ Industrial Water & Wastewater Treatment
- ☑ pH, Conductivity & Dissolved Oxygen Instruments