



Ω OMEGA™ **User's Guide**



***Shop online at
omega.com***

***e-mail: info@omega.com
For latest product manuals:
www.omegamanual.info***

OM-240 **24-Channel Ethernet Data Logger with Embedded Web Server**



omega.com info@omega.com

Servicing North America:

U.S.A. Headquarters:

Omega Engineering, Inc.

Toll-Free: 1-800-826-6342 (USA & Canada only)

Customer Service: 1-800-622-2378 (USA & Canada only)

Engineering Service: 1-800-872-9436 (USA & Canada only)

Tel: (203) 359-1660 - Fax: (203) 359-7700

e-mail: info@omega.com

For Other Locations Visit omega.com/worldwide

SPECIFIC WARNINGS

To guarantee the IP protection during the installation, expect to seal the instrument cables (with silicone or foam) after having tightened the cable-gland. Through the installation expect suitable protections to avoid product overheating (eg. a shelter to avoid direct sunlight); similarly for low temperatures. Do not open in case of bad weather conditions (rain, snow, etc). Expect the recurring substitution of the hygroscopic salts. Do not install in small locations and/or without ventilation, with high humidity, in potentially dangerous areas or where is prescribed the use of explosion-proof components. Electrical connections on the product must be executed only from qualified and expert personnel, in compliance with actual rules and regulations.

For external network powering, the plug at the end of the cord has ground contact; the grounding of the powering is provided from the plug inserted in the socket. The product powering source must be divided from dangerous voltage parts with double insulation and must guarantee insulation of at least 3000 Vrms.

Be sure to have, in the plant, suitable protection from an electric short circuit (for example high sensitivity differential circuit-breaker at the root of the AC/DC power supply unit).

Before any maintenance on the product, the powering must be disconnected.

Avoid any action that can short-circuit the rechargeable battery poles.

To enable the product protections, expect a connection to the ground plant through a proper green-yellow grounding connector; this connector must be connected to the proper ground clamp (or to any bolt if it is a metal cabinet).

Verify periodically rechargeable battery voltage; expect a substitution after roughly 5 years and if the voltage measured on the poles is too low (eg. 10.5V for a battery with nominal voltage 12V) and investigate on the causes. Using the product differently from the one expected from the manufacturer can compromise safety conditions. The use of parts other than original spare parts could lead to irregular functioning or even dangerous situations for a person and things.

QUICK START	6	WEB INTERFACE	39
Overview	6	WEB PAGES FUNCTIONALITY	39
DEVICE OVERVIEW	6	Web interface Language setup	40
Connections	6	Configuration of local analog channels	40
Front Panel	6	Input Configuration	43
Rear Panel	8	Multiplexer Configuration	47
Cabling	8	MODBUS SENSORS	51
Overview	8	What's Modbus?	51
Power Supply	8	Digital Sensors Configuration	52
Connecting PSU	9	Output Configuration and Alarms 1&2	54
Analog Channels Connection	9	Virtual Channel Alarm	55
Examples	10	Tips	56
Digital Inputs Connection	18	DATALOGGER CONFIGURATION	58
Example	19	Overview	58
Digital Output Connection	20	Configuration -> Datalogger	58
RS485 SmartModbus Connection	20	ALARMS	61
Multiplexers Connection	21	Overview	61
		Configuration	61
SETUP	22	SMS Configuration	62
POWERING THE DATALOGGER	22	Email Configuration	63
Default OM-240 Settings	22	SMTP Configuration	64
Direct connection (LOCAL) to the Datalogger	22	FTP Configuration	64
REMOTE CONNECTION TO THE DATALOGGER	23	Channel Alarm Types	65
IP Computer Settings	23	Low and High Thresholds	65
Overview	23	Derivate	65
Description	23	Examples	65
WEB CONNECTION AND OPENING	25	DIGITAL INPUTS CONFIGURATION	66
Overview	25	Example of Digital Input IN1 Configuration	69
Description	25	Example of Digital Input IN2 Configuration	71
CONNECTION THROUGH DHCP	26	VIRTUAL CHANNELS	73
Overview	26	Overview	73
Description	26	Why are Virtual Channels Implemented?	73
Display and Keyboard Functionality	29	Scripts	74
Keyboard Overview	29	Virtual Channel Configuration	76
Display Overview	30	Common Errors and Warnings	77
Firmware and Web Updates – Vibrating Wire	32	ADVANCED CONFIGURATION	79
Firmware Update	32	Overview	79
Data Download	32	Connections	79
Datalogger Stop and Switch Off	35	Measure log data transfer	81
Display Language Setup	37	Account Management	82

Date and Time	83	TROUBLESHOOTING	103
Energy Management	84	BASIC TROUBLESHOOTING	103
Info	84	LOCAL/REMOTE COMMUNICATION	104
CHARTS	84	EMAIL SENDING	106
Overview	84	FTP SERVER SENDING DATA	108
Activation	85	MEASURE	109
Setup and use	85		
		APPENDIX	110
MODBUS TCP (SCADA INTEGRATION)	90	APPENDIX A: WIRING SCHEMES	110
Overview	90	2 WIRES SENSORS	110
COMMUNICATION	90	4 WIRES SENSORS	114
Communication Bus	90	6 WIRES SENSORS	119
Measure Register	90		
Timestamp details	91		
Flag's Register	91	MAINTENANCE	122
Sensor Acquired	92	SPECIFICATIONS	123
Examples	92		
Input X Valid	92		
Input X Alarm	92		
REGISTER MAP	92		
General	92		
Analog Sensors Locations	93		
Digital Sensors Locations	93		
Multiplexers Sensors Locations	94		
Digital Inputs Locations	96		
Virtual Channels Locations	97		
SENSOR BASE ADDRESS	98		
Local Sensors (Analog)	98		
Digital Sensors (Smart Modbus)	98		
Multiplexers sensors	98		
Digital Inputs	98		
Virtual Channels	98		
Event Log Registers	99		
STATUS REGISTERS	99		
Datalogger Status	100		
Next Acquisition	100		
Firmware Version	101		
Model Info	101		
Serial Number	101		
Device Name	102		
External Digital Input / Output Status	102		

QUICK START

Overview

This chapter is about different product's features, starting from a device overview, and it will show how to connect every available sensor:

1. Front and Rear panel

Connection for:

- 2.Power Supply
- 3.Analog sensors
- 4.Digital Inputs
- 5.RS485 SmartModbus Sensors
- 6.Multiplexer boards

DEVICE OVERVIEW

OM-240 is a universal datalogger, capable of reading 0..25mA Current Loop and Transmitter, -10..10V, Vibrating Wire, NTC, PT100, PT200, PT500, PT1000, Ratiometric, Wheatstone Bridge, Thermocouple, Potentiometer and SmartModbus RS485 Digital Sensors. It provides a maximum of 24 channels when using only 2 wires sensors. OM-240 is expandable with SmartMux device.

Connections

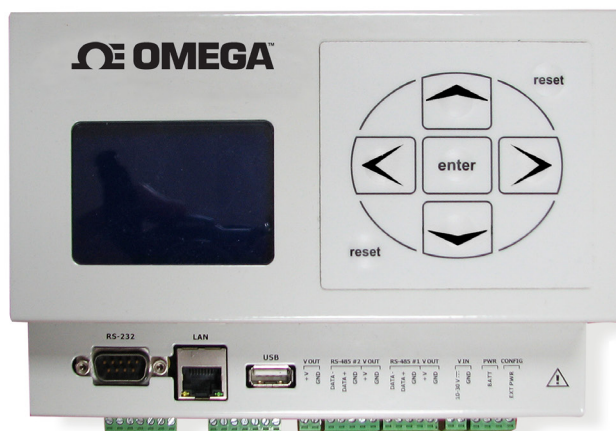


Figure 1

Front Panel



Figure 2

The majority of connections are located In OM-240's front panel:

- RS232: it can be used to connect a 3G Modem to expand connectivity
- Ethernet: This port is used to connect the device to an existing LAN. Internal Web Server can be browsed to configure and download acquired data. It can be used for Internet connection (Cloud, FTP and EMAIL connections)
- USB Host: it allows the user to download measures, events and alarm logs to a pendrive, or to update the firmware
- V OUT: this connector is designed to output the same voltage applied to V IN. It can be turned off automatically when logger is in sleep mode or be kept always on.
- RS485#2 – V OUT: This is SmartMux port, which allows the connection of 16 SmartMux in daisy chain and offers power supply.
- RS485#1 – V OUT: This is SmartModbus port, which allows digital sensors connections and offers power supply.
- V IN: This port is to power the datalogger. It's designed to work in 10-30V range.
- PWR-CONFIG: This port will allow the selection of Power supply. A jumper between two rightmost connections is needed to let the datalogger be powered up.
- ANALOG INPUTS: This 8 terminal blocks is used to connect analog sensors. Starting from bottom-left to bottom-right we find channels from 1 to 12, and from top-left to top-right we find channels from 13 to 24. Every 6 connections, there is a Ground connector designed to be the termination of shielded cables.

Rear Panel

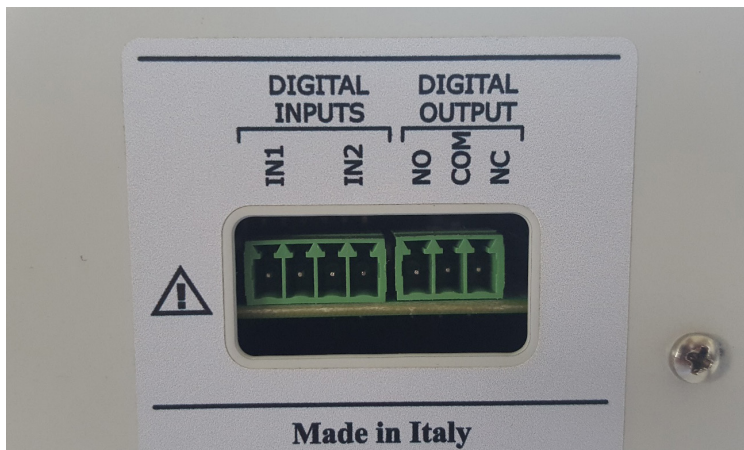


Figure 3

OM-240's rear panel has 2 Digital Inputs and 1 Digital Output.

- Digital Inputs IN1 IN2 can be configured to read rain meters and anemometers, or similar pulse sensors (optoisolated, Min input voltage is 5V and Min current input is 2mA, while Max input voltage is 24V and Max current is 10mA, Max frequency 1KHz, accuracy 0.1Hz).
- Digital Output is a relay output (for alarms), volt-free closure (low voltage, 30V 2A).

Cabling

Overview

This chapter will explain every connection to datalogger, how to optimize connections availability and to use proper connectors to avoid unexpected behavior (malfunctions).

Power Supply

OM-240 can be supplied with 10V to 30V. In order to grant correct functioning of every connected sensor or device, and its internal circuitry, at least 2A PSU is needed. If Analog Sensors, External Modems, RS485 SmartModbus Sensors are powered from OM-240, a more powerful PSU should be used.

Warning: ALL V-OUT connections on the front panel - in the upper terminal block - expose the same V-IN applied. If you apply 24V to V-IN, 24V will be exposed.

Since OM-240 can work in a wide range of voltage, use has to choose the right one to power external devices connected.

Connecting PSU


The logger should be configured before powering it up.

New datalogger are shipped already configured (as it follows) to be powered from external power source.

Rightmost pins of PWR CONFIG must be short-circuited to allow the datalogger to use V-IN source.

Connect V-IN to the right Power Supply Unit.

Picture below shows connections.

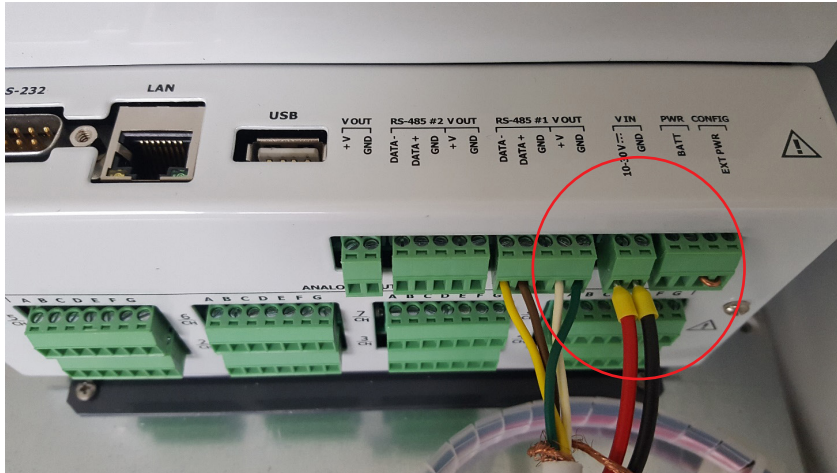

Analog Channels Connection

OM-240 can handle sensors up to a total of wires of 48

Examples:

2 wires sensors: up to 24 channels

4 wires sensors: up to 12 channels

6 wires sensors: up to 8 channels

User can also mix sensors type and the datalogger will shift positions with this rule:

- 6 Wires sensors first
- 4 Wires sensors middle
- 2 Wires sensors last

With this simple rule, it will maximize connection simplicity

Here are few examples:

Example 1 (2 wires sensors)

User connects 4 sensors, all of them are 2 wires:
First of all we configure the datalogger to read this sensors, as shown in Figure 4.

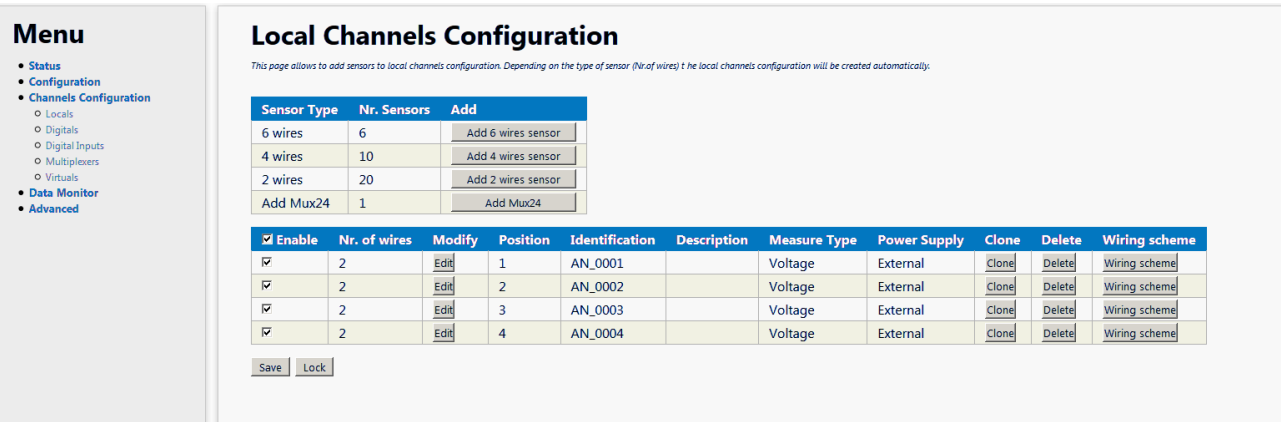


Figure 4

Now we can proceed with physical configuration.
SENSOR1 will be connected to channel 1, A and B terminals.
SENSOR2 will be connected to channel 2, A and B terminals.
SENSOR3 will be connected to channel 3, A and B terminals.
SENSOR4 will be connected to channel 4, A and B terminals.
Wiring schemes are available from web server, or in the APPENDIX of this manual.

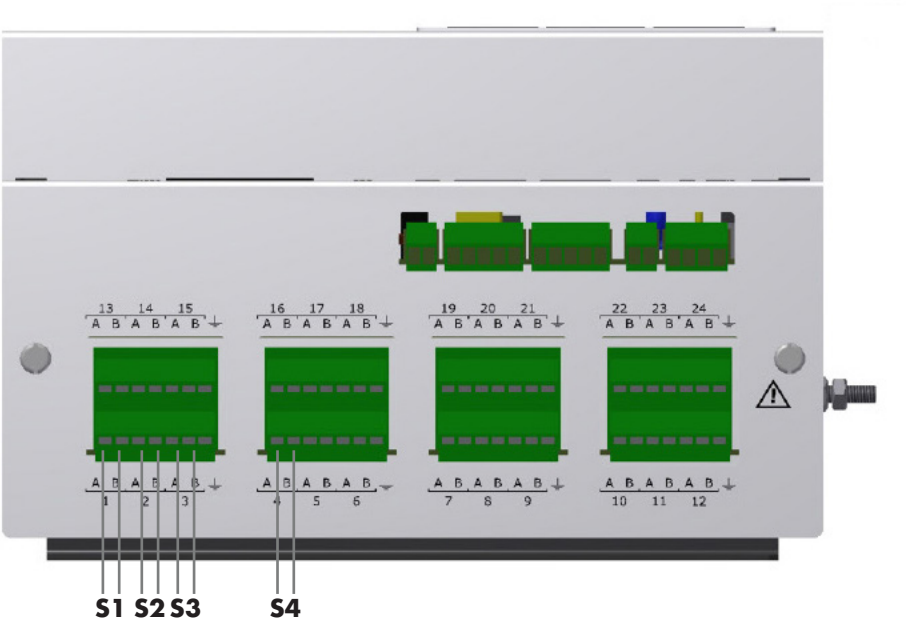


Figure 5

Example 2 (4 wires sensors)

User connects 3 sensors, all of them are 4 wires:

First of all we configure the datalogger to read this sensors, as shown in Figure 6.

Menu

- Status
- Configuration
 - Locals
 - Digitals
 - Digital Inputs
 - Multiplexers
 - Virtuals
- Data Monitor
- Advanced

Local Channels Configuration

This page allows to add sensors to local channels configuration. Depending on the type of sensor (Nr. of wires) the local channels configuration will be created automatically.

Sensor Type	Nr. Sensors	Add
6 wires	6	Add 6 wires sensor
4 wires	9	Add 4 wires sensor
2 wires	18	Add 2 wires sensor
Add Mux24	1	Add Mux24

<input checked="" type="checkbox"/> Enable	Nr. of wires	Modify	Position	Identification	Description	Measure Type	Power Supply	Clone	Delete	Wiring scheme
<input checked="" type="checkbox"/>	4	Edit	1-2	AN_0102		Voltage	24V	Clone	Delete	Wiring scheme
<input checked="" type="checkbox"/>	4	Edit	3-4	AN_0304		Voltage	24V	Clone	Delete	Wiring scheme
<input checked="" type="checkbox"/>	4	Edit	5-6	AN_0506		Voltage	24V	Clone	Delete	Wiring scheme

Save Lock

Figure 6

Now we can proceed with physical configuration.

SENSOR1 will be connected to channel 1, A and B terminals, and channel 2, A and B terminals.

SENSOR2 will be connected to channel 3, A and B terminals, and channel 4, A and B terminals.

SENSOR3 will be connected to channel 5, A and B terminals, and channel 6, A and B terminals.

Wiring schemes are available from web server, or in APPENDIX of this manual.

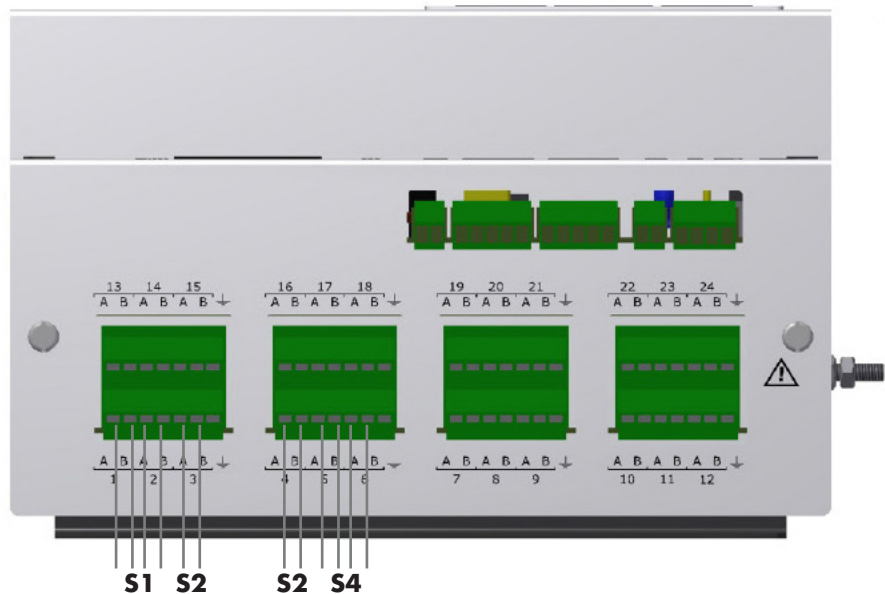


Figure 7

Example 3 (6 wires sensors)

User connects 3 sensors, all of them are 6 wires:

First of all we configure the datalogger to read this sensors, as shown in Figure 8.

Menu

- Status
- Configuration
- Channels Configuration
 - Locals
 - Digitals
 - Digital Inputs
 - Multiplexers
 - Virtuals
- Data Monitor
- Advanced

Local Channels Configuration

This page allows to add sensors to local channels configuration. Depending on the type of sensor (Nr. of wires) the local channels configuration will be created automatically.

Sensor Type	Nr. Sensors	Add
6 wires	5	Add 6 wires sensor
4 wires	7	Add 4 wires sensor
2 wires	15	Add 2 wires sensor
Add Mux24	1	Add Mux24

✓ Enable	Nr. of wires	Modify	Position	Identification	Description	Measure Type	Power Supply	Clone	Delete	Wiring scheme
✓	6	Edit	1-2-3	AN_0103		Voltage 2CH	External	Clone	Delete	Wiring scheme
✓	6	Edit	4-5-6	AN_0406		Voltage 2CH	External	Clone	Delete	Wiring scheme
✓	6	Edit	7-8-9	AN_0709		Voltage 2CH	External	Clone	Delete	Wiring scheme

Save Lock

Figure 8

SENSOR1 will be connected to channel 1, A and B terminals, channel 2, A and B terminals, and channel 3, A and B terminals.

SENSOR2 will be connected to channel 4, A and B terminals, channel 5, A and B terminals, and channel 6, A and B terminals.

SENSOR3 will be connected to channel 7, A and B terminals, channel 8, A and B terminals, and channel 9, A and B terminals.

Wiring schemes are available from web server, or in APPENDIX of this manual.

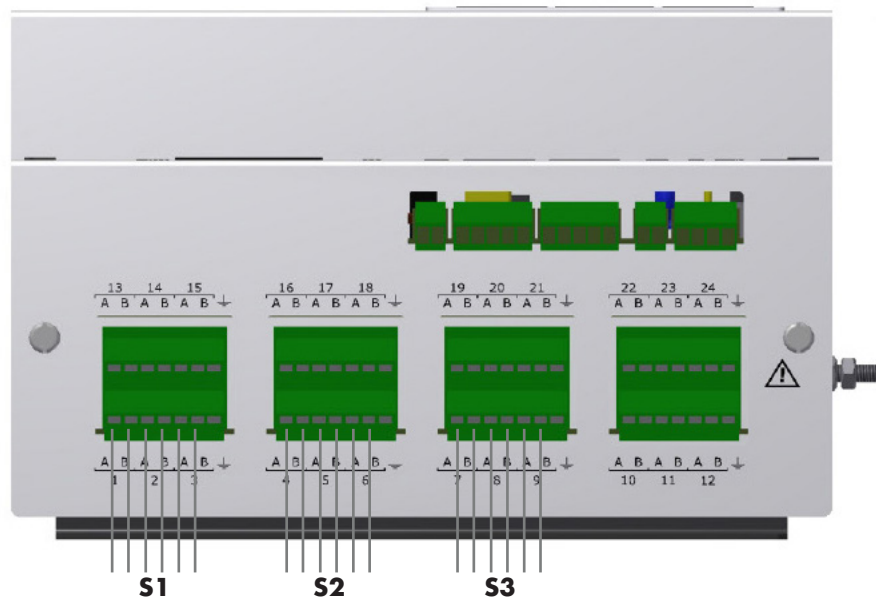


Figure 9

Example 4 (4 wires and 2 wires mix)

User connects 4 sensors, 2 of them are 4 wires, while the other 2 are 2 wires.
First of all we configure the datalogger to read this sensors, as shown in Figure 10.

Menu

- Status
- Configuration
 - Locals
 - Digital Inputs
 - Multiplexers
 - Virtuals
- Data Monitor
- Advanced

Local Channels Configuration

This page allows to add sensors to local channels configuration. Depending on the type of sensor (Nr.of wires) the local channels configuration will be created automatically.

Sensor Type	Nr. Sensors	Add
6 wires	6	<button>Add 6 wires sensor</button>
4 wires	9	<button>Add 4 wires sensor</button>
2 wires	18	<button>Add 2 wires sensor</button>
Add Mux24	1	<button>Add Mux24</button>

<input checked="" type="checkbox"/>	Enable	Nr. of wires	Modify	Position	Identification	Description	Measure Type	Power Supply	Clone	Delete	Wiring scheme
<input checked="" type="checkbox"/>		4	<button>Edit</button>	1-2	AN_0102		Voltage	24V	<button>Clone</button>	<button>Delete</button>	<button>Wiring scheme</button>
<input checked="" type="checkbox"/>		4	<button>Edit</button>	3-4	AN_0304		Voltage	24V	<button>Clone</button>	<button>Delete</button>	<button>Wiring scheme</button>
<input checked="" type="checkbox"/>		2	<button>Edit</button>	5	AN_0005		Voltage	External	<button>Clone</button>	<button>Delete</button>	<button>Wiring scheme</button>
<input checked="" type="checkbox"/>		2	<button>Edit</button>	6	AN_0006		Voltage	External	<button>Clone</button>	<button>Delete</button>	<button>Wiring scheme</button>

Save Lock

Figure 10

According to rules mentioned at the beginning of this chapter, we will start with 4 wires sensors, followed by 2 wires sensors.

SENSOR1 will be connected to channel 1, A and B terminals, and channel 2, A and B terminals.

SENSOR2 will be connected to channel 3, A and B terminals, and channel 4, A and B terminals.

SENSOR3 will be connected to channel 5, A and B terminals.

SENSOR4 will be connected to channel 6, A and B terminals.

Wiring schemes are available from web server, or in APPENDIX of this manual.

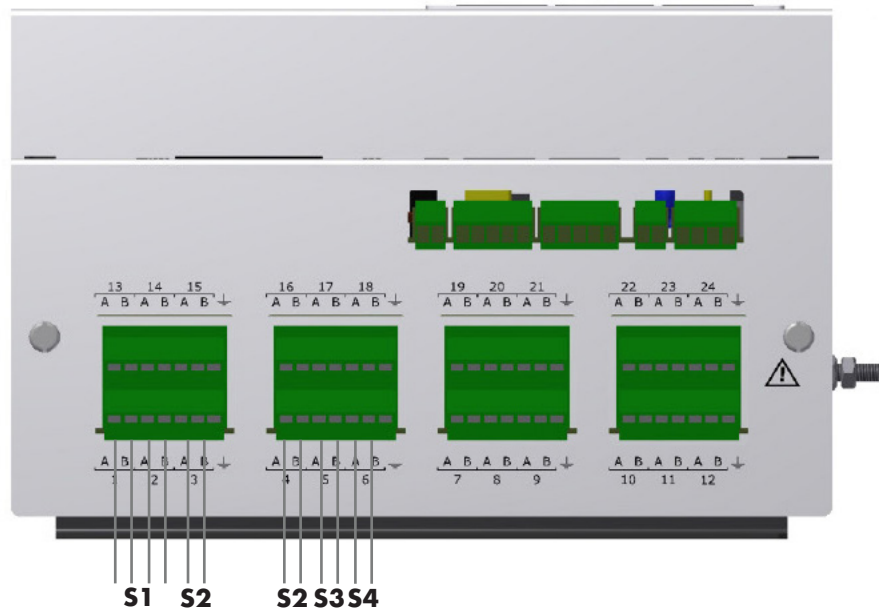


Figure 11

Example 5 (6 wires and 2 wires mix)

User connects 3 sensors, 1 of them is 6 wires, while the other 2 are 2 wires.
First of all we configure the datalogger to read this sensors, as shown in Figure 12.

Menu

- Status
- Configuration
 - Locals
 - Digitals
 - Digital Inputs
 - Multiplexers
 - Virtuals
- Data Monitor
- Advanced

Local Channels Configuration

This page allows to add sensors to local channels configuration. Depending on the type of sensor (Nr. of wires) the local channels configuration will be created automatically.

Sensor Type	Nr. Sensors	Add
6 wires	6	Add 6 wires sensor
4 wires	9	Add 4 wires sensor
2 wires	19	Add 2 wires sensor
Add Mux24	1	Add Mux24

✓ Enable	Nr. of wires	Modify	Position	Identification	Description	Measure Type	Power Supply	Clone	Delete	Wiring scheme
✓	6	Edit	1-2-3	AN_0103		Voltage 2CH	External	Clone	Delete	Wiring scheme
✓	2	Edit	4	AN_0004		Voltage	External	Clone	Delete	Wiring scheme
✓	2	Edit	5	AN_0005		Voltage	External	Clone	Delete	Wiring scheme

Save Lock

Figure 12

According to rules mentioned at the beginning of this chapter, we will start with 6 wires sensors, followed by 2 wires sensors.

SENSOR1 will be connected to channel 1, A and B terminals, channel 2, A and B terminals, and channel 3, A and B terminals.

SENSOR2 will be connected to channel 4, A and B terminals.

SENSOR3 will be connected to channel 5, A and B terminals.

Wiring schemes are available from web server, or in APPENDIX of this manual.

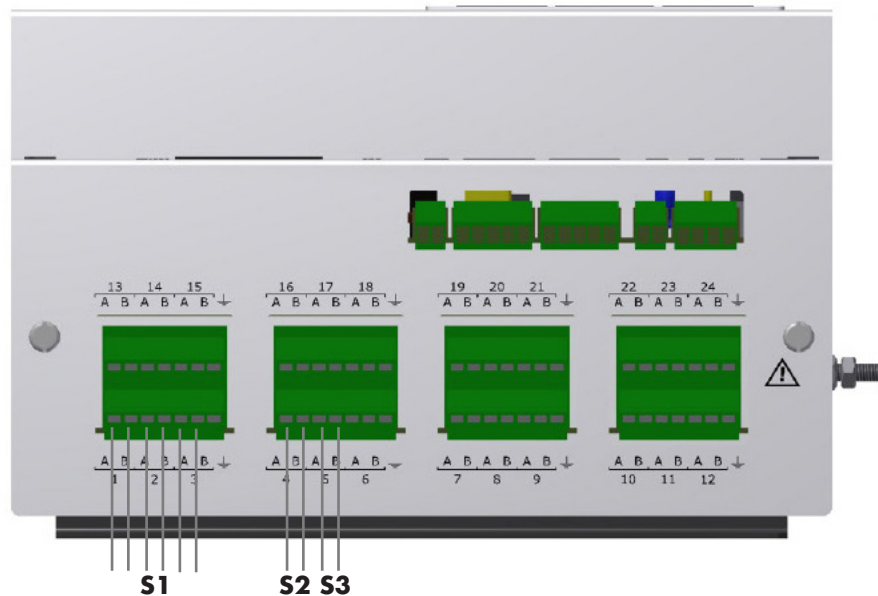


Figure 13

Example 6 (6 wires and 4 wires mix)

User connects 3 sensors, 1 of them is 6 wires, while the other 2 are 4 wires. First of all we configure the datalogger to read this sensors, as shown in Figure 14.

Menu

- Status
- Configuration
- Channels Configuration
 - Locals
 - Digitals
 - Digital Inputs
 - Multiplexers
 - Virtuals
- Data Monitor
- Advanced

Local Channels Configuration

This page allows to add sensors to local channels configuration. Depending on the type of sensor (Nr. of wires) the local channels configuration will be created automatically.

Sensor Type	Nr. Sensors	Add
6 wires	5	Add 6 wires sensor
4 wires	8	Add 4 wires sensor
2 wires	17	Add 2 wires sensor
Add Mux24	1	Add Mux24

Enable	Nr. of wires	Modify	Position	Identification	Description	Measure Type	Power Supply	Clone	Delete	Wiring scheme
<input checked="" type="checkbox"/>	6	Edit	1-2-3	AN_0103		Voltage 2CH	External	Clone	Delete	Wiring scheme
<input checked="" type="checkbox"/>	4	Edit	4-5	AN_0405		Voltage	24V	Clone	Delete	Wiring scheme
<input checked="" type="checkbox"/>	4	Edit	6-7	AN_0607		Voltage	24V	Clone	Delete	Wiring scheme

Save Lock

Figure 14

According to rules mentioned at the beginning of this chapter, we will start with 6 wires sensors, followed by 4 wires sensors.

SENSOR1 will be connected to channel 1, A and B terminals, channel 2, A and B terminals, and channel 3, A and B terminals.

SENSOR2 will be connected to channel 4, A and B terminals, and channel 5, A and B terminals.

SENSOR3 will be connected to channel 6, A and B terminals, and channel 7, A and B terminals. Wiring schemes are available from web server, or in APPENDIX of this manual.

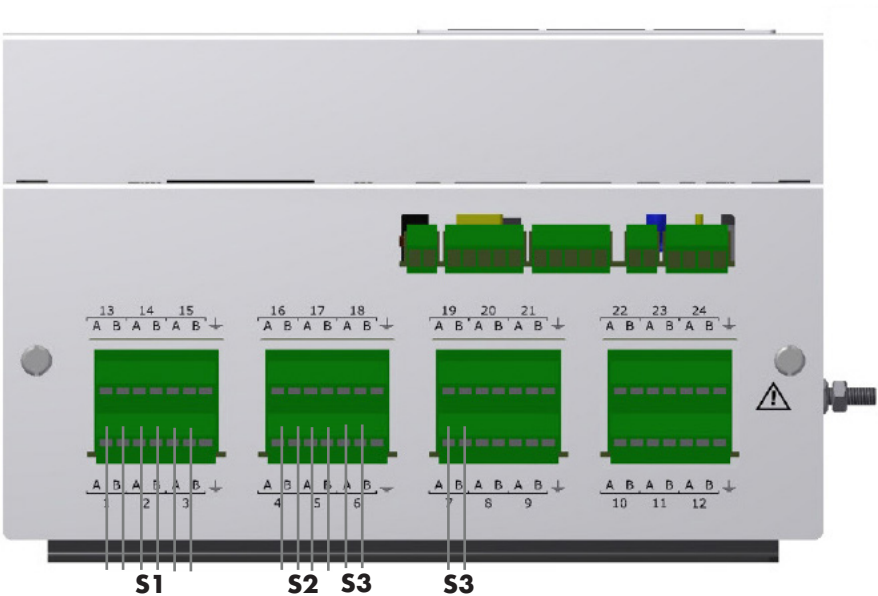


Figure 15

Menu

- Status
- Configuration
- Channels Configuration
 - Locals
 - Digital
 - Digital Inputs
 - Multiplexers
 - Virtuals
- Data Monitor
- Advanced

Local Channels Configuration

This page allows to add sensors to local channels configuration. Depending on the type of sensor (Nr. of wires) the local channels configuration will be created automatically.

Sensor Type	Nr. Sensors	Add
6 wires	5	Add 6 wires sensor
4 wires	7	Add 4 wires sensor
2 wires	15	Add 2 wires sensor
Add Mux24	1	Add Mux24

Enable	Nr. of wires	Modify	Position	Identification	Description	Measure Type	Power Supply	Clone	Delete	Wiring scheme
<input checked="" type="checkbox"/>	6	Edit	1-2-3	AN_0103		Voltage 2CH	External	Clone	Delete	Wiring scheme
<input checked="" type="checkbox"/>	4	Edit	4-5	AN_0405		Voltage	24V	Clone	Delete	Wiring scheme
<input checked="" type="checkbox"/>	4	Edit	6-7	AN_0607		Voltage	24V	Clone	Delete	Wiring scheme
<input checked="" type="checkbox"/>	2	Edit	8	AN_0008		Voltage	External	Clone	Delete	Wiring scheme
<input checked="" type="checkbox"/>	2	Edit	9	AN_0009		Voltage	External	Clone	Delete	Wiring scheme

Save Lock

Figure 16

According to rules mentioned at the beginning of this chapter, we will start with 6 wires sensors, followed by 4 wires and 2 wires. SENSOR1 will be connected to channel 1, A and B terminals, channel 2, A and B terminals, and channel 3, A and B terminals.

SENSOR2 will be connected to channel 4, A and B terminals, and channel 5, A and B terminals.
 SENSOR3 will be connected to channel 6, A and B terminals, and channel 7, A and B terminals.
 SENSOR4 will be connected to channel 8, A and B terminals.
 SENSOR5 will be connected to channel 9, A and B terminals.
 Wiring schemes are available from web server, or in APPENDIX of this manual.

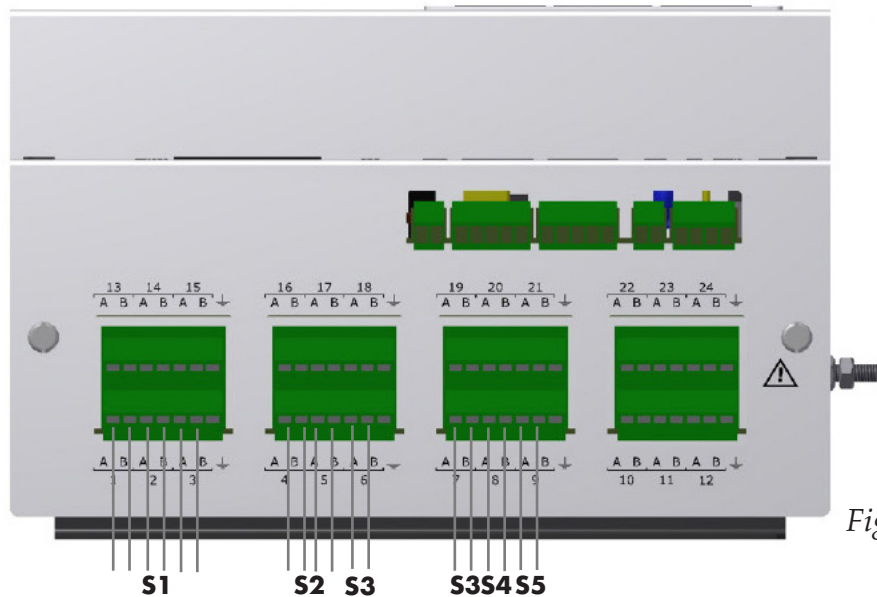


Figure 17

Digital Inputs Connection

OM-240 has 2 digital inputs (on rear panel) that can be configured, independently, as “Trigger” or “Rainmeter/Anemometer”.

If they are configured as Trigger, a pulse on the channel will start an acquisition of all configured channels.

If they are configured as Rainmeter/Anemometer, input frequency will be measured and logged in measure log.

Readable signal specifications:

- Min 5V (2mA max)
- Max 24V (10mA max)
- Max Frequency 1KHz
- Accuracy: 0.1Hz

Inputs are optoisolated.

Example

In order to configure a trigger, connect it to DIGITAL INPUTS IN1 (or IN2, not showed here):

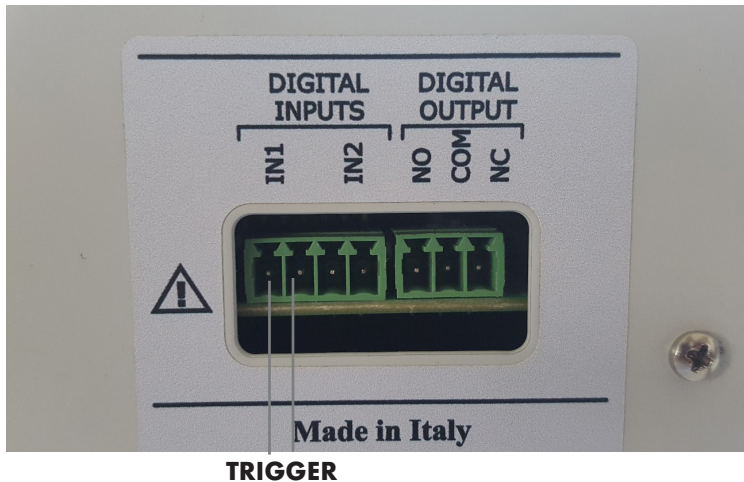


Figure 18

Open OM-240's web server, at "Channels Configuration -> Digital Inputs" page. Select Trigger in the IN1 Input field:

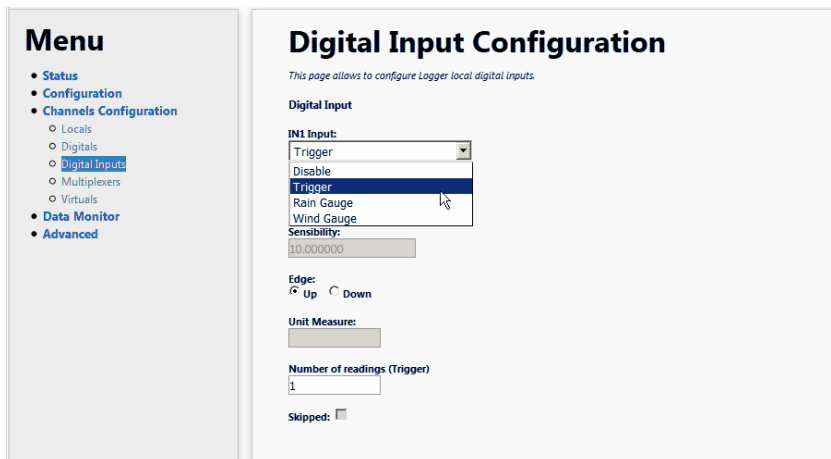


Figure 19

Edge parameter (Up and Down) indicates if the trigger will raise voltage between poles or drop it, or if it's a "rectangular" wave, you can choose to use rising front or falling front.

Number of reading indicates how many acquisition cycles will be performed after a trigger event.

In order to use Triggers the OM-240 should not go in sleep mode. Check Energy Management section to configure the datalogger to avoid switch off (by selecting Always ON). For more information about how to configure Digital Inputs, refer to Digital Inputs section.

Digital Output Connection

OM-240 is provided with a Digital Output (NC / NO), which can drive low voltage (max 30V, 2A). It's a relay, so it is a volt-free switch.

In order to handle higher voltages or currents, use internal relay to drive a rugged heavy duty relay.

RS485 SmartModbus Connection

OM-240 can read digital sensor over the RS485 SmartModbus port.

The port used for sensors connection is RS485#1.

WARNING: RS485#2 PORT DOES NOT WORK WITH DIGITAL SENSORS AS IT IS DESIGNED TO WORK ONLY WITH MULTIPLEXERS.

RS485#1 port presents 5 connections:

- Data - : can be named as B or “inverting pin” or TxD-/RxD-
- Data + : can be named as A or “non inverting pin” or TxD+/RxD+
- GND: it is the reference pin. It is recommended to use GND (SC, C, or reference pin) while connecting RS485 sensors.
- +V: OM-240 can power RS485 sensors. It provides the same power source applied to OM-240 VIN. Be careful to choose the right supply to power both datalogger and sensor.
- GND: same as +V, is the negative connection of power supply.

RS485 allows daisy chain connections. The example below shows an OM-240 datalogger with four temperature and humidity probes connected in daisy chain.

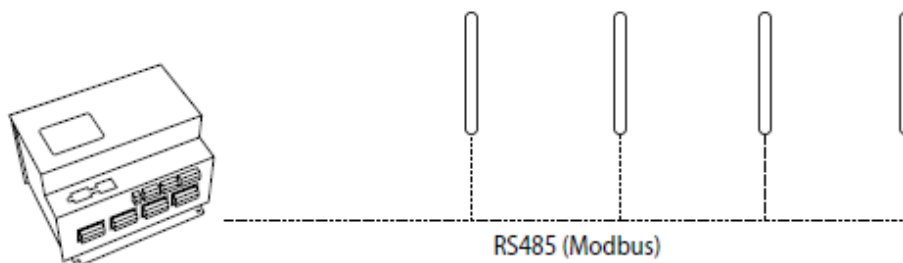


Figure 20

The **minimum distance** between two nodes (OM-240 to probe, or probe to probe) is **30 cm**.

WARNING: BE CAREFUL ON CABLE DIMENSIONS, AS THEY ARE AFFECTED FROM TOTAL LENGTH AND PROBE NUMBERS. BE SURE TO CHOOSE A CABLE OF THE RIGHT SIZE FOR YOUR PROJECT.

Example

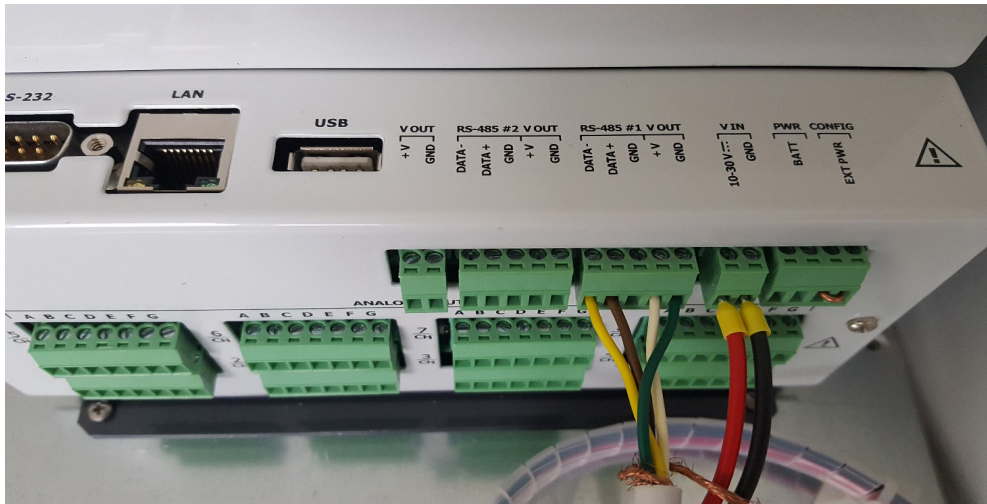


Figure 21

Not all probes have a signal GND (SC) pin, and in the example above, the probe was not connected to signal ground.

Multiplexers Connection

OM-240 offers Analog Sensors expandability through Multiplexers.

Multiplexers are expansion boards that can read up to 24 sensors each, with connections logic similar to OM-240 (explained in Multiplexer Section), which will be connected to channel 22/23/24 of OM-240

More than one Multiplexer can be connected to OM-240, up to 16 Units, daisy chained to RS485#2 and channels 22/23/24.

SETUP

POWERING THE DATA LOGGER

The OM-240 is supplied not powered to avoid that during transport the backup battery will discharge.

To begin working with the OM-240 proceed as follows:

- Connect external powering (battery charger or photovoltaic panel);

ATTENTION: Do not invert battery polarity, otherwise the data logger may be damaged or stop working.

Default OM-240 Settings

The network card is setup from as follows:

IP Address: **192.168.1.100**

Subnet Mask: 255.255.255.0

Gateway: 192.168.1.1

DNS1: 0.0.0.0

DNS2: 0.0.0.0

To connect with the OM-240 is necessary to setup PC network card in the same class of the data logger, but with different IP (eg. 192.168.1.200).

Direct connection (LOCAL) to the Datalogger

To connect and manage the OM-240 through its on-board web pages, after the proper configuration of PC network card, connect the PC to the OM-240 through an Ethernet crossover cable (supplied). Once connected through the supplied cable, open any internet browser and put, in the address bar, OM-240 IP address (default 192.168.1.100).

After a few seconds you will be asked for the data logger access credentials.

NOTES:

- The OM-240 is compatible with the main internet browsers (FireFox, IE9, Safari, Chrome). FireFox is recommended to manage the OM-240.
- First page upload can take some time.

Following are the default credentials:

User "Admin" **User "User"**

User: Admin User: User

Psw: Admin Psw: User

REMOTE CONNECTION TO THE DATALOGGER

This manual contains all basic information to properly connect the OM-240 to the network through ethernet connection.

There is also a description of the procedure to set the logger and connect it through DHCP.


IP Computer Settings

Overview


Here you will learn how to set the computer IP address to allow the connection with the OM-240.

Description

Open control panel and then: Network and Internet – Network Centre and Sharing

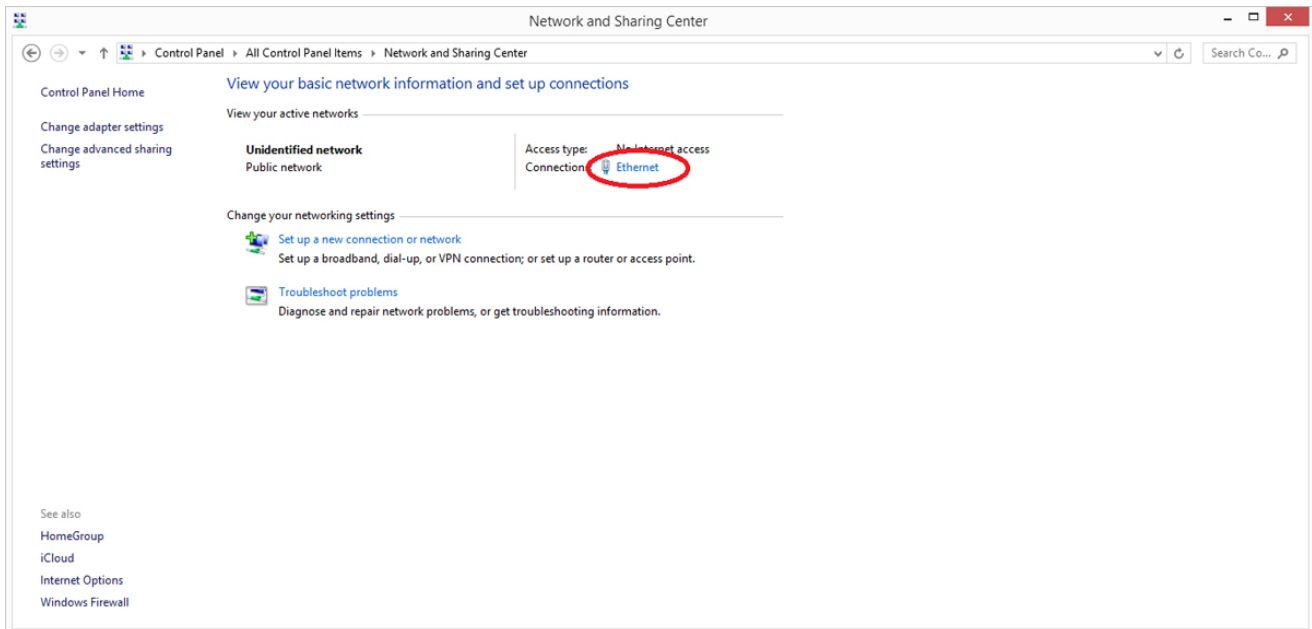


Then click on LAN connection and enter Properties (1)

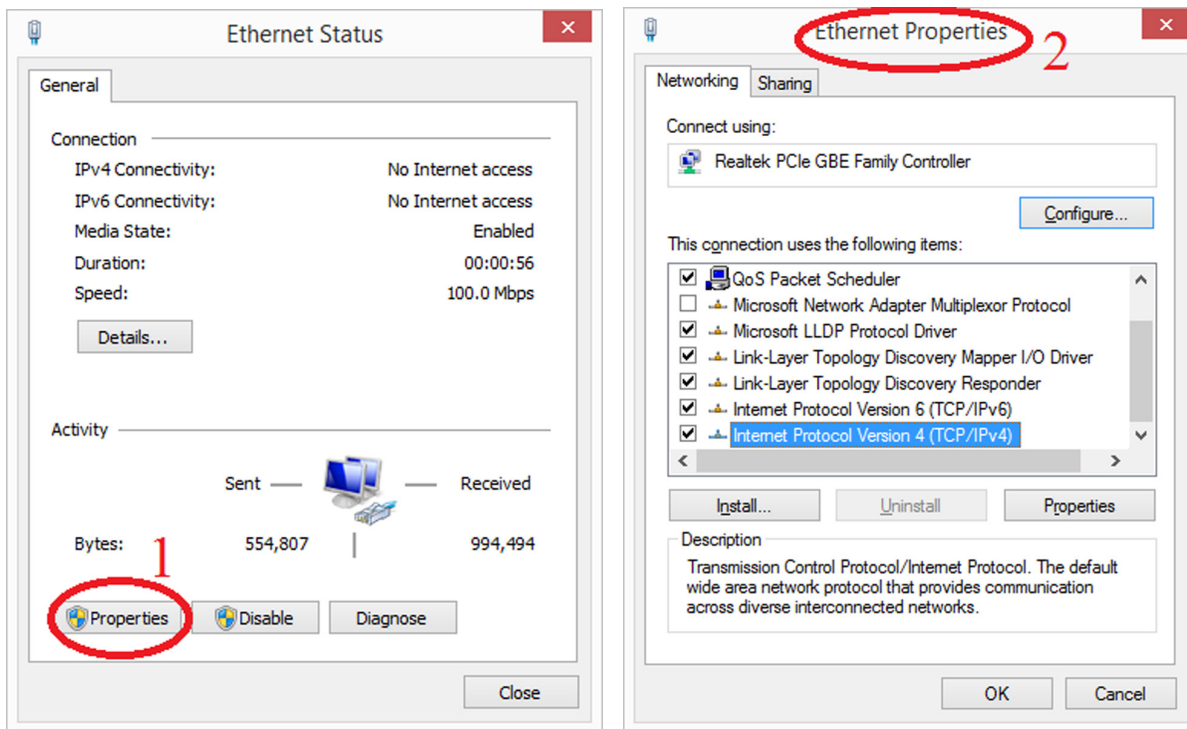


A new window will open "Properties-LAN connection" (2)

Select "Internet protocol version 4 (TCP /IPv4) (3), and click on Properties (4).

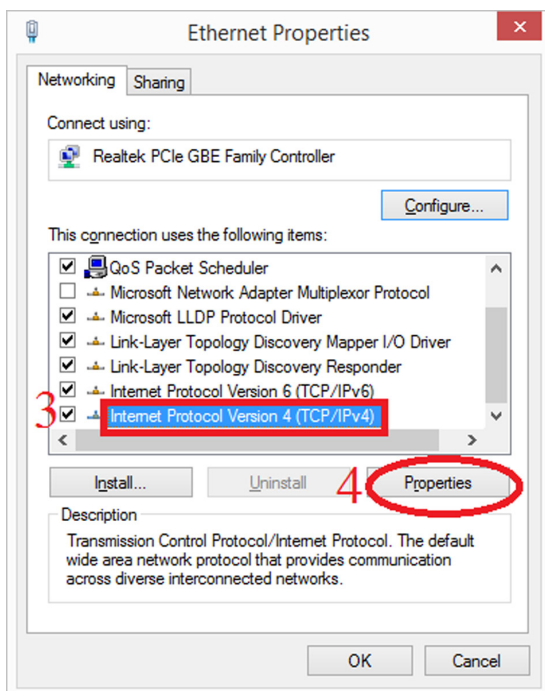

Select “Use this IP: “and write data you see in the picture below.

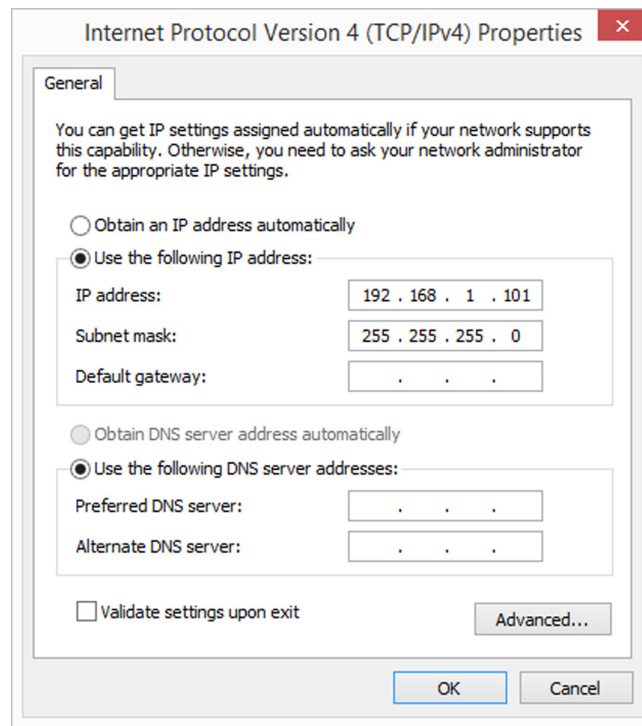


WEB CONNECTION AND OPENING

Overview

Here you will learn how to connect the OM-240 to the network and how to access the

WEB. **Description**

Connect the OM-240 through Ethernet cable (Look at the 2 different block diagrams)

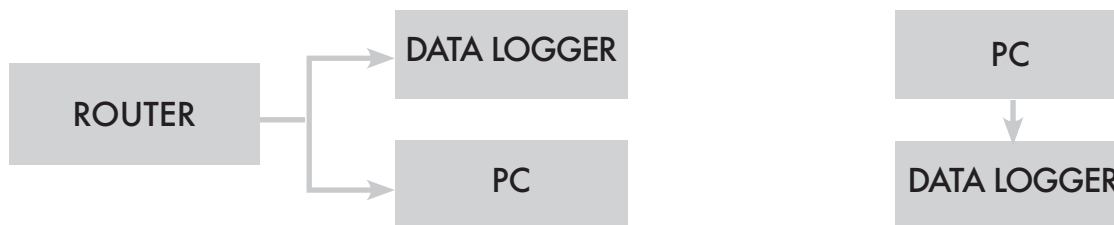

Open the browser and write in the search bar the OM-240 IP address “192.168.1.100” and then enter user and password:

User: *Admin*

Password: *Admin*

CONNECTION THROUGH DHCP

Overview

Here you will learn how to connect the OM-240 through DHCP. This option will allow the user to use either the OM-240 webserver and the usual Internet connection.

Note. The router must be connected to a DHCP server

Description


When you are connected to the OM-240 web server (192.168.1.100 IP address to be written in the search bar), select “Advanced” from left menu and then “Connections”.

The screenshot displays the OMEGA OM-240 web interface. At the top, there is a navigation bar with the OMEGA logo and several status icons: Datalogger, OM-240, No alarm, FW 21.42.66, Ext.Pwr Supply 12.3 V, and a clock showing 31/01/17 17:06. There are also Logout and Reboot buttons. On the left, a 'Menu' sidebar lists options: Status, Configuration, Channels Configuration, Data Monitor, and Advanced. Under 'Advanced', 'Connections' is selected. The main content area is titled 'Connections Configuration' and includes a descriptive paragraph about configuring network card parameters and remote connections. Below this, there are two tables. The first table, 'email and FTP port sending', shows 'Ethernet (Router)' as the selected option. The second table, 'Network Card Configuration', shows various network settings, with 'DHCP Enable' checked.

email and FTP port sending	
Ethernet (Router)	<input checked="" type="radio"/>
RS-232 (GSM/GPRS Modem)	<input type="radio"/>

Network Card Configuration	
DHCP Enable	<input checked="" type="checkbox"/>
MAC Address	0:1E:C0:F1:D1:28
IP Address	192.168.1.169
Subnet Mask	255.255.255.0
Default Gateway	192.168.1.1
Preferred DNS Server	8.8.8.8
Alternate DNS Server	8.8.4.4

1. Flag “ DHCP Enable” and then start OM-240 reboot.
2. After Rebooting, IP address has to be setted up – look at chapter “Computer IP settings”
3. In few steps (summary):
4. Open Control Panel and then “Network Centre and Sharing” window
5. Enter “LAN Connection” and open Properties
6. Select: Internet protocol version 4 (TCP/IPv4) and then click on Properties
7. This time – unlike before - select “Obtain an IP address automatically”.

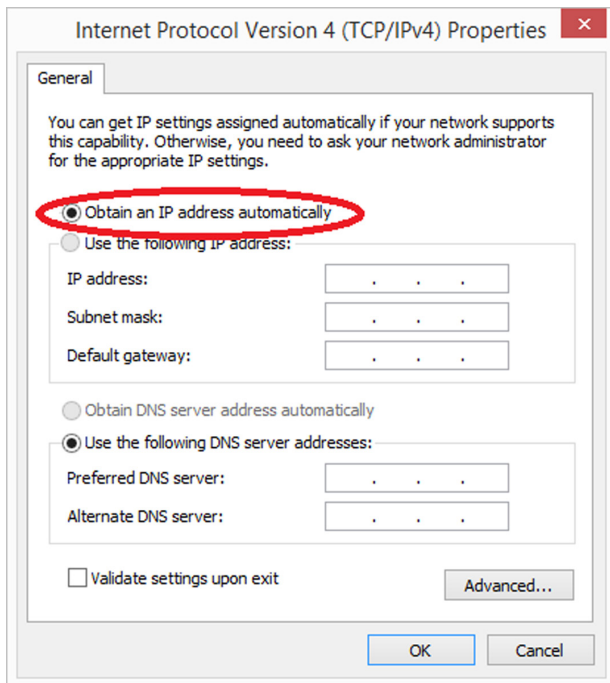

Click OK and close all windows.


Control from display the new IP address (see picture below).





NOTES


The IP address shown in the picture has been assigned by the router.


Now you should enter the IP address shown in the display – instead of default IP address 192.168.1.100 - in order to enter in the OM-240 web server.






Datalogger


OM-240


No alarm


FW
21.42.66


Ext.Pwr
Supply
12.2 V


31/01/17
17:07

[Logout](#)
[Reboot](#)

Menu

- [Status](#)
- [Configuration](#)
- [Channels Configuration](#)
- [Data Monitor](#)
- [Advanced](#)

Status

This page shows Logger current status. If you upload a new configuration it will be necessary to re-insert the passwords because, for the privacy, these are not saved in the configuration file. The page automatically refreshes every 60 seconds.

Description	Value	Measure Unit
Free Memory	96	%
Temperature	26.4	°C
Humidity	N.C.	%
Logger status	Config	

[STOP](#) [CONFIGURE](#) [START](#)

Download/Upload Configuration

[Configuration Download](#)

Select a configuration file:

[Sfoglia...](#) Nessun file selezionato. [Configuration Upload](#)


Display and keyboard functionality

Through the OM-240 keyboard and instructions shown on the display is possible to perform some simple operations without using a computer connected to OM-240.

NOTE:

Some operations (data download on USB key, FW update, network card enabling, etc...) can require the OM-240 to automatically restart; this is normal.

Keyboard Overview

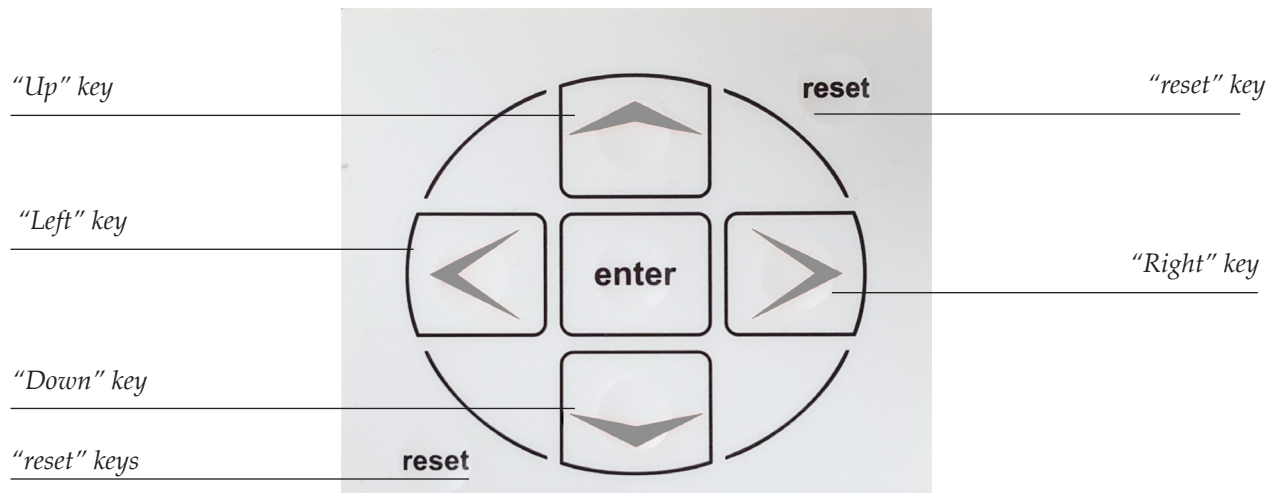

"Up", "Down", "Left" e "Right" keys are used to move within menus and submenus and to select the options. The "Enter" key is used to confirm the option.


The reset keys are used in case the OM-240 stops working. Pushing both keys at the same time, you reboot the datalogger.

Display Overview

Display main page has three icons in the middle and some information in the upper and lower part of the display.

The information shown in the main page are:

- Date and time
- IP address
- External powering voltage or internal batteries percentage.
- Internal temperature

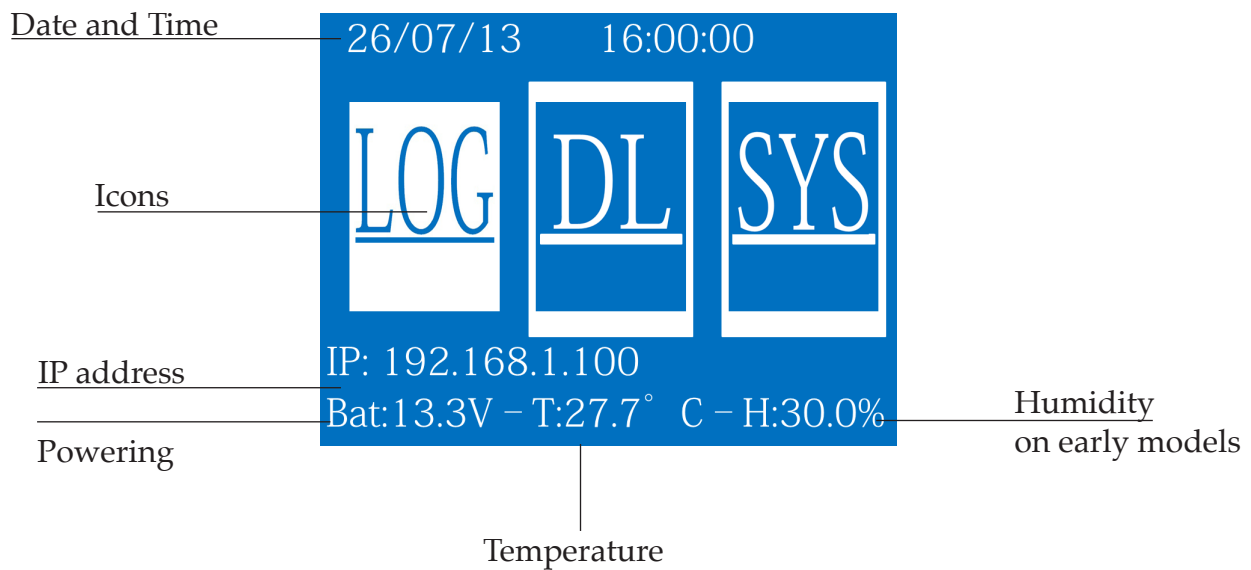


Icons in the main page have the following meaning:

LOG: It shows last reading stored for each sensor configured on the OM-240. Through “Right” and “Left” keys is possible to browse the different sensors.

26/07/2013 - 14:58:02
Mux 1 CH.1
INA: 2829

To return to main menu press “Enter” key.

DL: It shows OM-240 current status.

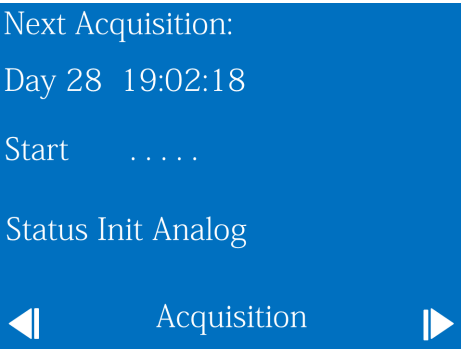

To return to main menu press

ACQUISITION	It is possible to see in real time the current acquired channel. Selecting “Acquisition” between one measuring cycle and the other, an extemporaneous acquisition will be instantly executed.
START DL	Start the data logger if not already running.
STOP DL	Stop the data logger if running.
TEST FTP	Test FTP parameters with sample file.
TEST MAIL	Test Mail parameters with sample email.
TEST ALL	Test both FTP and Mail.

SYS: Here you can find OM-240 connection parameters (network card), calibration values and functions to download data on USB pen drive, update firmware and OM-240 stop (in safety mode before cutting the power).

Status

Ethernet On

FW & WEB Update

Download data to USB

System shutdown

10mV CALIBRATION

INA INB

+FS: -3277085, -3276933

ZERO:+0000523, +0000878

-FS: +3278532, +3279045

DATE: 13/12/2012 3/6

NETWORK CARD

DHCP: OFF

IP: 192.168.1.100

Snet: 255.255.255.0

Gway: 192.168.1.1

MAC: 1e.30.6c.a2.45.bb 2/6

ATTENTION: Do not use at the same time the web interface and display functionality. When you select SYS menu, the OM-240 enters in configuration mode: in this status the OM-240 WILL NOT PERFORM THE CONFIGURED ACQUISITIONS. Once you ended the operations in SYS menu, you must return in the main page (with the three icons).

Firmware and Web Updates – Vibrating Wire Firmware Update

To update OM-240 web pages and firmware refer to “ *FW & WEB UPDATES – Vibr. Wire FW Update*” manual.


Data download

It is possible to download data (readings, log events and log alarms files) in two ways:


- PC (through web interface)
- USB (through USB pen drive)

To download data through a PC connected to the OM-240, first configure the PC network card (with the OM-240's same class but with different IP). Through the pages “Data Monitor – Measures, Events, Alarms” is possible to download files as CSV format (compatible with the most common spreadsheets eg. Microsoft Excel, Apple Numbers, Open Office Calc etc...)


To download data through USB pen-drive (supplied):

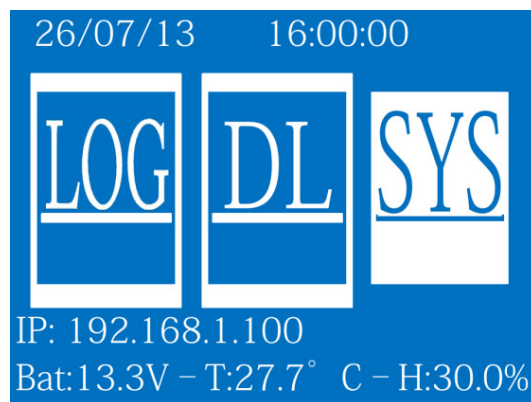


- Select through keyboard (“Right” and “Left” keys) the SYS menu and press “Enter” key;
If the OM-240 has an acquisition in progress, is necessary to wait its end. In this case will be displayed the following screen:

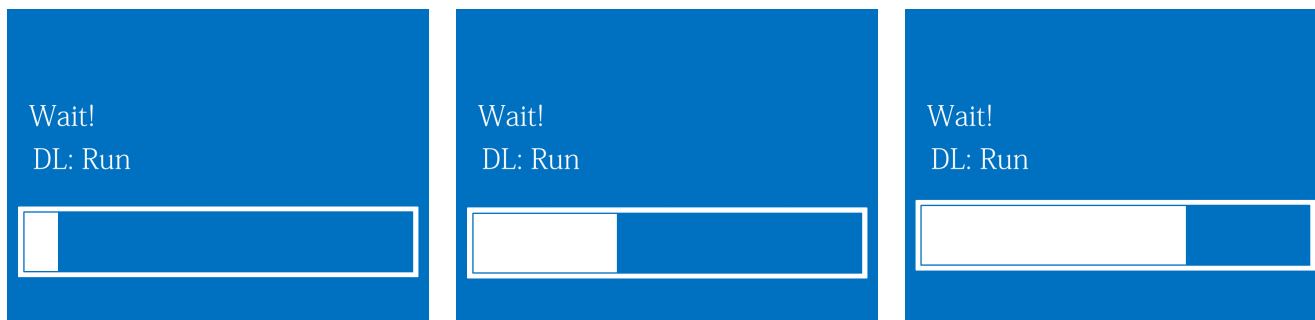

- When the acquisition ends, it will be displayed the following screen:

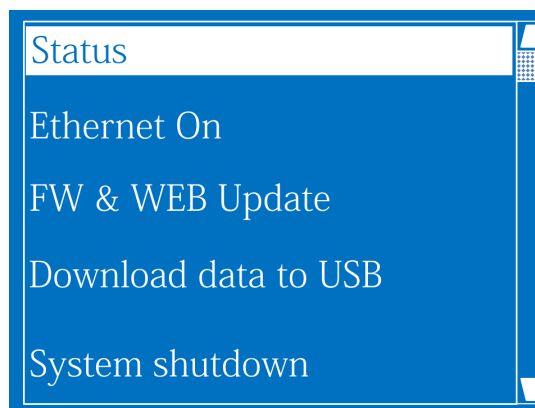

- Through “Up” and “Down” keys select the option “Download data on USB” and press “Enter” key;

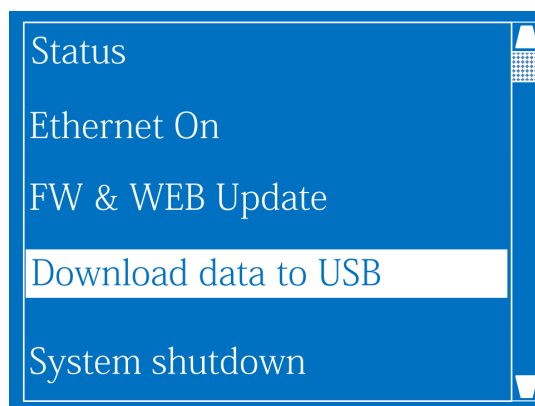

- The following screen will be displayed and the OM-240 will be automatically restarted;




At restart you will be asked to insert the USB pen-drive and to press “Enter” key to start data download;



NOTE: the USB pen-drive in the OM-240 must be FAT32 formatted. Other format will prevent the OM-240 to identify the USB pen-drive and the copy can't be executed.

- Once the USB pen-drive is mounted, data copy will start automatically (according to OM240 acquisitions quantity, the copy could take a few minutes).
- During the copy will be displayed the following screen:

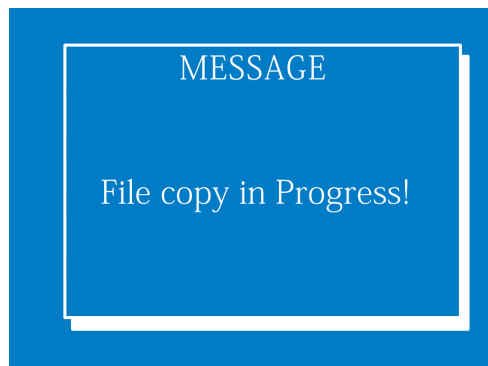


ATTENTION: Do not disconnect the USB pen-drive or cut off the OM-240 power during the copy, since the copy can be incomplete or corrupted.

- Once the copy is ended, the following message will be displayed; press “Enter” to proceed;



- Disconnect the USB pen-drive and press “Enter”. The OM-240 will be restarted and the acquisition will proceed as previously set.

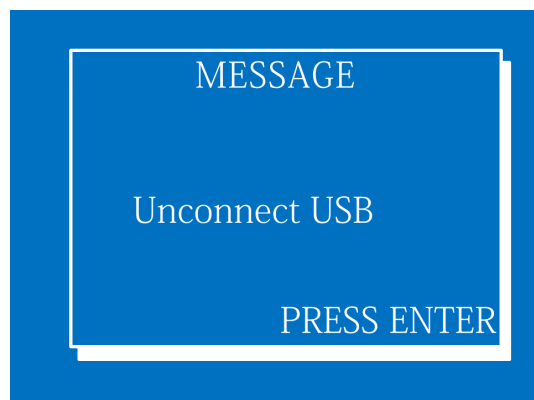


Datalogger Stop and Switch Off


When is necessary to cut off the power from the OM-240 (for maintenance or other) is strongly recommended to stop the OM-240 following these steps.

Select, through keyboard, DL -> Stop DL.


Select, through keyboard (Right and Left keys), the SYS menu and press “Enter”;

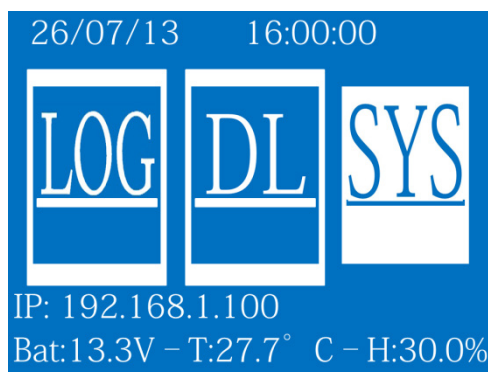


If the OM-240 has an acquisition in progress, it is necessary to wait its end. In this case will be displayed the following screen:

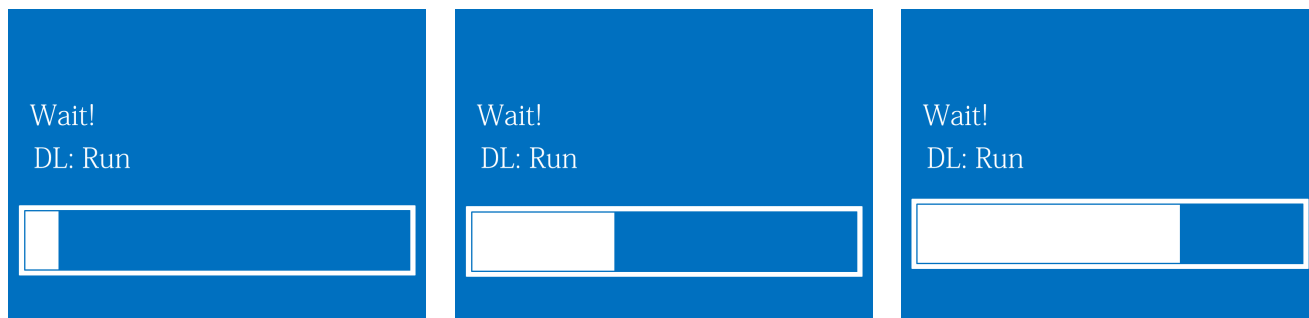


- When the acquisition ends, it will be displayed the following screen:

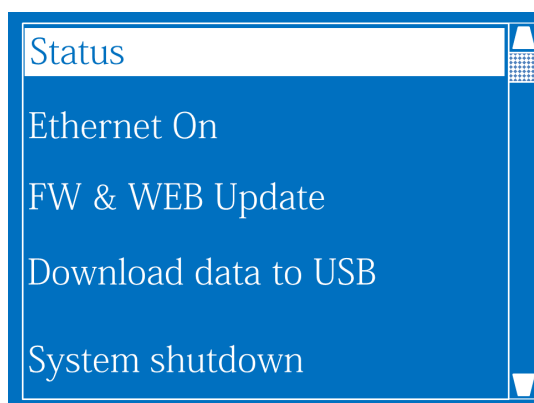

- Using “Up” and “Down” keys select “System shutdown” and press “Enter”:

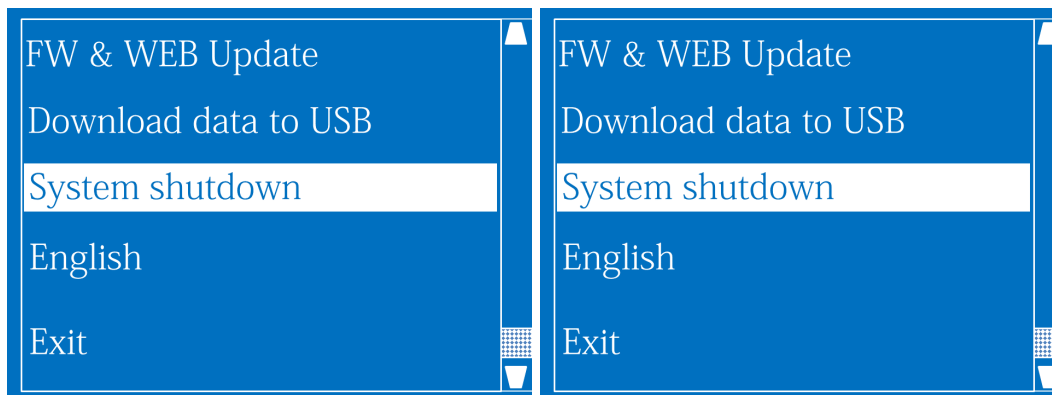

You will see the following screen:

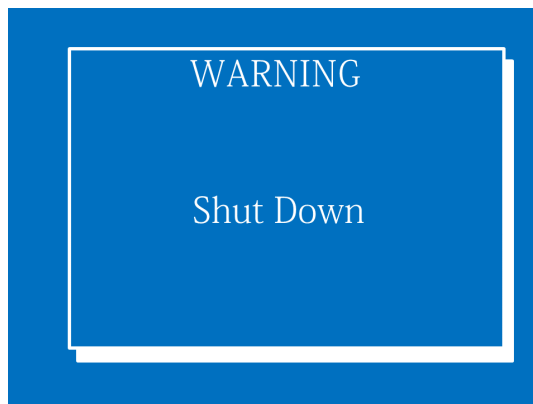

Now is possible to cut off the OM-240 power (eg. Extract the “V IN” clamp).


NOTE:

This switch off procedure allows OM-240 to end all the writing/reading cycles on the SD memory card. If OM-240 power is cut without software shutdown, a scandisk may occur at next boot.


Display language setup

To modify display language:


- Select “SYS” menu and press “Enter” key:

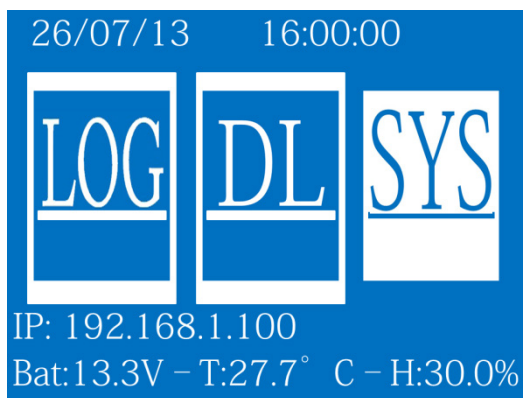

- Through “Up” or “Down” keys select “English” and press “Enter” key:

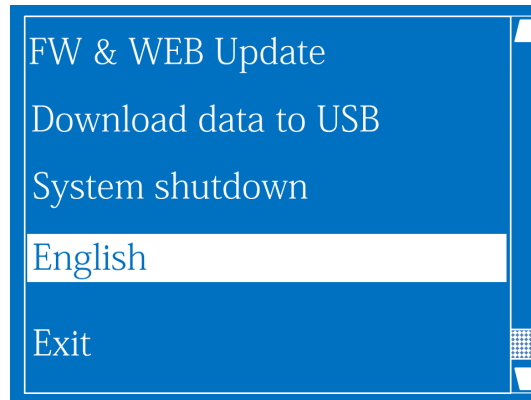

- The selected language will be displayed. Using “Left” and “Right” key is possible to slide among the different languages. Select the chosen language and press “Enter” key:

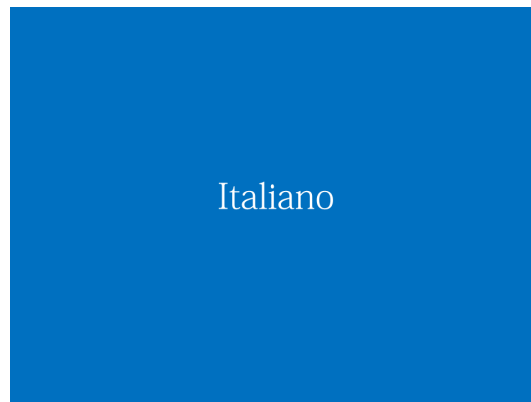

- Display interface language will be changed in the selected one.

NOTE:

actually the available languages are ITALIAN ENGLISH AND FRENCH

WEB INTERFACE

WEB PAGES FUNCTIONALITY

Follows a brief description of the main OM-240 web pages.

STATUS: Shows OM-240 status. In this page is shown the current OM-240 mode:

Run: OM-240 is set and started. It will start acquisitions according to selected configuration. *Config:* OM-240 is in configuration mode. No acquisitions are in progress. In this mode is possible to modify configuration parameters (channel configurations, acquisition time, etc...), delete and download logs.

“Config” mode is expected only for “Admin” user

Stop: OM-240 is stopped. No acquisitions are in progress. In this mode is possible to download logs but is not possible to change the configuration.

Moreover is possible to start, stop and set the OM-240 in configuration mode.

CONFIGURATION-ACQUISITIONS: in this page is possible to set acquisition frequency.

CHANNELS CONFIGURATION-LOCALS: in this page is possible to set local analog channels on the OM-240.

CHANNELS CONFIGURATION –MULTIPLEXER: in this page is possible to set multiplexer boards and their channels.

ATTENTION: For sensors wiring it is necessary refers to the schemes on the OM-240 web pages.

CHANNELS CONFIGURATION - DIGITALS: In this page is possible to set digital channels to allow the OM-240 to read digital instruments.

DATA MONITOR - MEASURE: In this page is possible to display last OM-240 acquisition cycle. It's also possible to download OM-240 executed and saved acquisitions.

Web interface language setup

To modify the web interface language, connect the OM-240 and access to web interface with the user (Admin or User) that needs to change the language

Then:

- Select , from left menu, “Advanced” and in the submenus “Account Management”;

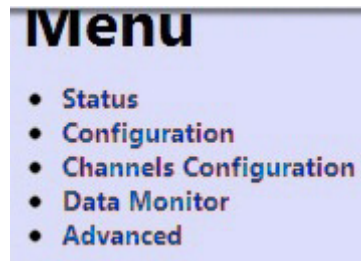


Figure 22

- In the page that will be displayed select “Language”;
- Insert the password in the field “Old password”;
- Press on “Save changes”.

Now the web interface will be converted in the selected language. To convert also the left menu is necessary to refresh the web page pressing F5 or the specific symbol on internet browser address bar.

NOTE:

To avoid that the browser will keep the old language is necessary to completely delete internet browser cache.

Configuration of local analog channels

In this manual is explained how to set up the local analog channels on the OM-240.

NOTE: *it is important to make sure that the software configuration of channels coincides with the physical wirings of sensors on channels. This is necessary to power correctly the sensors.*

To set up the local analog channels of the OM-240:

- enter the OM-240 with user **Admin**;
- make sure that the OM-240, in page **STATE**, is in **Config** mode before proceeding. If it is not in **Config** mode, **push on CONFIGURE** to set up the OM-240 in configuration mode;

Status

This page shows Logger current status. If you upload a new configuration it will be necessary to re-insert the passwords because, for the privacy, these are not saved in the configuration file. The page automatically refreshes every 60 seconds.

Description	Value	Measure Unit
Free Memory	98	%
Temperature	27.7	°C ▾
Humidity	N.C.	%
Logger status	Config	

STOP CONFIGURE START

Figure 23

- from the left menu, select the page **CHANNELS CONFIGURATION** and afterward the entry **LOCAL**;

Menu

- **Status**
- **Configuration**
- **Channels Configuration**
 - Locals
 - Digitals
 - Digital Inputs
 - Multiplexers
 - Virtuals
- **Data Monitor**
- **Advanced**

Figure 24

The page **LOCAL CHANNELS CONFIGURATION** opens. In this page it is possible to enable and edit the local analog channels of the OM-240.

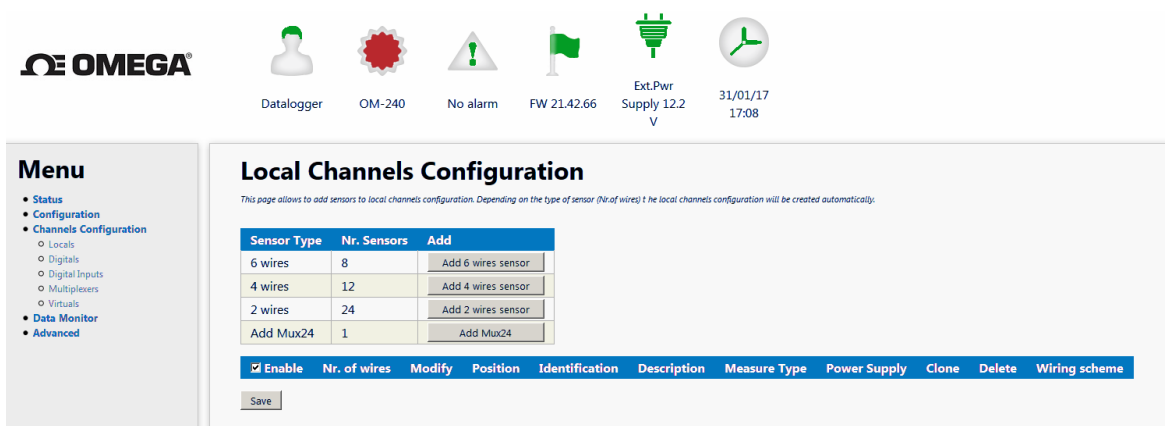


Figure 25

Add the proper sensor that you want to read.

- If your sensor requires two wires (for example a current loop 2W) Add 2 wires sensor
- If your sensor requires four wires (for example a volt 2ch with external supply) Add 4 wires sensor
- If your sensor requires six wires (for example a ratiometric sensor) Add 6 wires sensor

For example, if you push on button add 4 wires sensor in the underlying table a 4 wires sensors is added and it is possible to configure it.

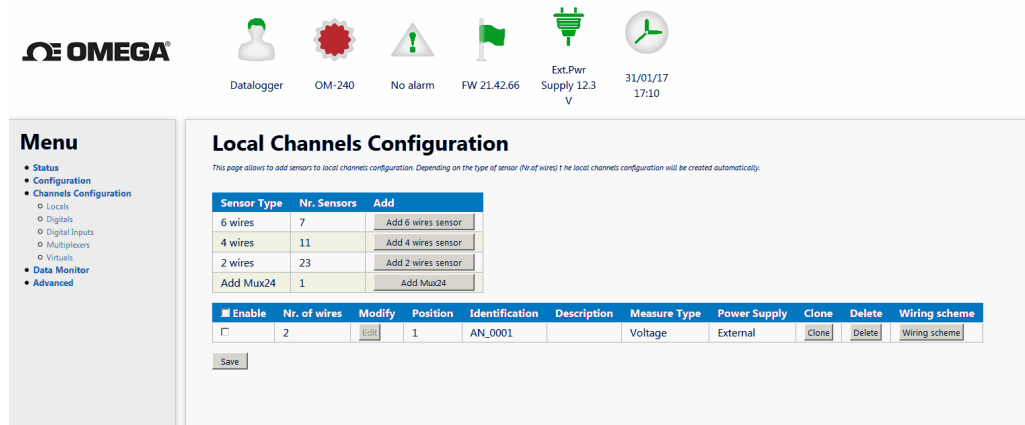



Figure 26


After this selection press **EDIT** to setup sensors channel. Then, the first page of configuration of the selected channel opens. In this page it is possible to select:


Figure 27


Input configuration


The page **INPUT CONFIGURATION** is composed by a table which contains all the input parameters of configuration.






Datalogger


OM-240


No alarm


FW 21.42.66


Ext.Pwr
Supply 12.3
V


31/01/17
17:09

Menu

- Status
- Configuration
- Channels Configuration
- Data Monitor
- Advanced

Local Channels Configuration

This page allows to configure local analog channels.

Sensor Position: 1

Axis A	Parameters
Description	AN_0001_A
Description	
Measure Type	Voltage
Power Supply	External
Acquisition	Default
Measure Unit	mV
Warm-Up [sec.]	5
Conversion	Nessuna <input type="checkbox"/> Auto Zero
Zero Reading (Ez)	0
Sensibility (S)	0
Poly. Coeff. A	0
Poly. Coeff. B	0
Poly. Coeff. C	0
Poly. Coeff. D	0
Engineering Units	
Excitation	05
Delay	10
Range	Autorange

Figure 28

Particularly:

INPUT	Non-editable field. It indicates the input that is configuring. The character “_A” or “_B” is added in case of a channel with 2 inputs (ex: 1_A, 1_B)
ACQUISITION:	the acquisition interval “personalized” for the channel
IDENTIFICATION	Field editable from the user. Name to assign to the sensor. This field is exported as the heading of the column containing the measurements of sensor in file .CSV type “Measurements”
DESCRIPTION	Field editable from the user. Description ascribable to the sensor for a better identification. This field is present only in file .CSV type “log measurements”
MEASURE TYPE	Type of measurements to read on this input.
POWER SUPPLY	Power supply (output voltage or current) that the OM-240 will supply to the connected sensor. In case it is present “external”, the OM-240 doesn’t supply any power supply. Different power supplies are proposed according to the “TYPE OF MEASUREMENT” selected.
MEASURE UNIT	Electrical unit of measure of the sensor. For some types of sensors it is possible to choose between different units of measure (ex for vibrating wire: digit, Hz, μ s).
WARM-UP [SEC]	Field editable from the user. “Warm-up” time of the sensor. It indicates how long the sensor is powered by the OM-240 before starting the measurement cycle. For some types of measurements, this field could be disabled.
CONVERSION	This field allows to select which conversion to realize between LINEAR and POLYNOMIAL. It is also possible to decide to realize NO conversion (in this case the reading is expressed in electrical unit). This field is necessary to convert the reading of the sensor from electrical unit (mA, mV, digit, etc.) to engineering unit (kPa, mm, mbar, etc.)
ZERO READING	This field is enabled if the linear conversion has been selected. For further information, please refer to manual “ <i>Linear and Polynomial Conversion Quick Start</i> ”
SENSIBILITY	This field is enabled if the linear conversion has been selected. For further information, please refer to manual “ <i>Linear and Polynomial Conversion Quick Start</i> ”
POLYNOMIAL COEFFICIENTS A-B-C-D	This field is enabled if the polynomial conversion has been selected. For further information, please refer to manual “ <i>Linear and Polynomial Conversion Quick Start</i> ”

ENGINEERING UNIT	Field editable from the user. This field is enabled if the linear or polynomial conversion is selected. It represents the acronym of the unit of measure of the reading after the conversion in engineering unit.
EXCITATION	This field is enabled only for the type of measurement “Vibrating Wire” or “Vibrating Wire + Thermistor”. It indicates (in msec) the period of each stimulation phase
DELAY	This field is enabled only for the type of measurement “Vibrating Wire” and “Vibrating Wire + Thermistor”. It indicates (in msec) the stabilization period, i.e. how long the OM-240 waits before starting the reading phase
RANGE	This field allows to set up the range of functioning of the sensor. If AUTORANGE is configured, the OM-240 decides automatically with which range it is going to do the measurement. This implies an increase in the reading time of the sensor.
START FREQUENCY	This field is enabled only for the type of measurement “Vibrating Wire” or “Vibrating Wire + Thermistor”. It indicates the frequency of the research start.
STOP FREQUENCY	This field is enabled only for the type of measurement “Vibrating Wire” or “Vibrating Wire + Thermistor”. It indicates the frequency of the research end.
GAIN	Amplification factor applied to sensors’ signal. Raise this parameter only if sensor is placed far from datalogger and datalogger provides unexpected or wrong readings.
EXCITATION FACTOR(%)	Maximum amplitude of sensor excitation signal. Lower this parameter only if sensor is placed close to datalogger and provides unexpected or wrong readings.
EXCITATION SCAUNG SPEED	This parameter sets adapting speed of excitation signal during vibrating wire reading.
NUMBER OF DECIMALS	Number of decimals recorded for this channel
SKIPPED	The Data logger does not read the channel, but CSV file will be populated with “skipped” values. This is to ensure compatibility with software population layer in case of sensor change / removal.

Some fields will be grayed out depending on chosen sensor.

NOTE: in case of a channel with 2 inputs, the second configuration webpage is completely identical to that described above. Other fields could be “blocked” because they are connected to the configuration executed on input 1.

The second table on the page it is necessary to set up the possible alarm thresholds for the selected input. In particular:

ALARM TYPE	High: the input is in alarm only if the reading exceeds the value indicated in field HIGH THRE SHOLD
	Low: the input is in alarm only if the reading is lower than the value indicated in field LOW THRE SHOLD
	Derivate: the input is in alarm only if the reading differs from the previous reading of a value greater than or equal to the value indicated in field DE RIVATE THRE SHOLD
HIGH THRE SHOLD	Field editable from the user. It indicates the numerical value to assign to the high threshold. The value has to be inserted taking into account the unit of measure of the reading.
LOW THRE SHOLD	Field editable from the user. It indicates the numerical value to assign to the low threshold. The value has to be inserted taking into account the unit of measure of the reading.
DE RIVATE THRE SHOLD	Field editable from the user. It indicates the numerical value to assign to the derived threshold. The value has to be inserted taking into account the unit of measure of the reading.
VC ALARM WITH LOGICAL OPERATIONS	Enabling this tick, the configured alarm is no longer connected to the single input. The channels that adopt this option will be “linked” to each other by logical operations (AND, OR, NOT and XOR). If this field is enabled, therefore it will be necessary to configure a virtual channel with an opportune logical operation.

NOTE: the values inserted in alarm thresholds have to take into account the possible linear or polynomial conversion that has been configured. If the user configured a conversion, the threshold values have to be inserted in engineering unit. If the user didn't configured any conversion, the thresholds values have to be inserted in electrical unit.

- Once the configuration of webpage ended, or of 2 webpages in case of a channel with 2 inputs, push **SAVE MODIFICATIONS** to confirm the created configuration.
- It is possible to visualize the scheme of connection of the just configured channel pushing on **WIRING SCHEME** in page **LOCAL CHANNELS CONFIGURATION**.

Menu

- Status
- Configuration
- Channels Configuration
 - Locals
 - Digitals
 - Digital Inputs
 - Multiplexers
 - Virtuals
- Data Monitor
- Advanced

Local Channels Configuration

This page allows to add sensors to local channels configuration. Depending on the type of sensor (Nr. of wires) the local channels configuration will be created automatically.

Sensor Type	Nr. Sensors	Add
6 wires	5	Add 6 wires sensor
4 wires	7	Add 4 wires sensor
2 wires	15	Add 2 wires sensor
Add Mux24	0	Add Mux24

<input checked="" type="checkbox"/> Enable	Nr. of wires	Modify	Position	Identification	Description	Measure Type	Power Supply	Clone	Delete	Wiring scheme
<input checked="" type="checkbox"/>	6	Edit	1-2-3	AN_0103		Voltage 2CH	External	Clone	Delete	Wiring scheme
<input checked="" type="checkbox"/>	4	Edit	4-5	AN_0405		Potentiometer	5V	Clone	Delete	Wiring scheme
<input checked="" type="checkbox"/>	2	Edit	6	AN_0006		Voltage	External	Clone	Delete	Wiring scheme
<input checked="" type="checkbox"/>	6	Edit	22-23-24			Multiplexer 24ch		Clone	Delete	Wiring scheme

Save

Figure 29

Multiplexer Configuration

Here is shown the standard configuration of an sensor connected to a channel of the multiplexer.

- Open page **LOCAL CHANNEL CONFIGURATION** and select the item **CHANNELS CONFIGURATION / LOCAL** from left menu;

Sensor Type	Nr. Sensors	Add
6 wires	6	Add 6 wires sensor
4 wires	9	Add 4 wires sensor
2 wires	18	Add 2 wires sensor
Add Mux24	1	Add Mux24

Figure 30

<input type="checkbox"/> Enable	Nr. of wires	Modify	Position	Identification	Description
<input type="checkbox"/>	6	Edit	1-2-3	AN_0103	
<input type="checkbox"/>	6	Edit	4-5-6	AN_0406	
<input type="checkbox"/>	4	Edit	7-8	AN_0708	
<input type="checkbox"/>	2	Edit	9	AN_0009	
<input type="checkbox"/>	2	Edit	10	AN_0010	
<input checked="" type="checkbox"/>	6	Edit	22-23-24		

Save

Figure 31

- Tick the field ADD MUX24 ;
- ENABLE THE NEW CHANNEL CREATED, WITH POSITION 22-23-24, AND CLICK EDIT;
- The page for the configuration of MULTIPLEXERS opens;

Multiplexer Enabling

This page allows to enable multiplexer connected to Logger.

Copy

Paste

<input type="checkbox"/> Enable	Modify	RS485 Address	Nr. of 6 wires sensors	Nr. of 4 wires sensors	Nr. of 2 wires sensors	<input type="checkbox"/> Selection
<input type="checkbox"/>	Edit	1	0	0	0	<input type="checkbox"/>
<input type="checkbox"/>	Edit	2	0	0	0	<input type="checkbox"/>
<input type="checkbox"/>	Edit	3	0	0	0	<input type="checkbox"/>
<input type="checkbox"/>	Edit	4	0	0	0	<input type="checkbox"/>
<input type="checkbox"/>	Edit	5	0	0	0	<input type="checkbox"/>
<input type="checkbox"/>	Edit	6	0	0	0	<input type="checkbox"/>
<input type="checkbox"/>	Edit	7	0	0	0	<input type="checkbox"/>
<input type="checkbox"/>	Edit	8	0	0	0	<input type="checkbox"/>
<input type="checkbox"/>	Edit	9	0	0	0	<input type="checkbox"/>
<input type="checkbox"/>	Edit	10	0	0	0	<input type="checkbox"/>
<input type="checkbox"/>	Edit	11	0	0	0	<input type="checkbox"/>
<input type="checkbox"/>	Edit	12	0	0	0	<input type="checkbox"/>
<input type="checkbox"/>	Edit	13	0	0	0	<input type="checkbox"/>
<input type="checkbox"/>	Edit	14	0	0	0	<input type="checkbox"/>
<input type="checkbox"/>	Edit	15	0	0	0	<input type="checkbox"/>
<input type="checkbox"/>	Edit	16	0	0	0	<input type="checkbox"/>

Save

Cancel

Figure 32

NOTE: selecting Mux 24ch on channel 22-23-24 it couldn't be possible to use them to connect a sensor

If you continue, multiplexer configuration will be reset. Continue?

OK

Annulla

Figure 33

- after you saved the configuration, select from left menu the entry CHANNELS CONFIGURATION / MULTIPLEXERS;
- the page MULTIPLEXERS opens. Here you could select MUX 24CH.

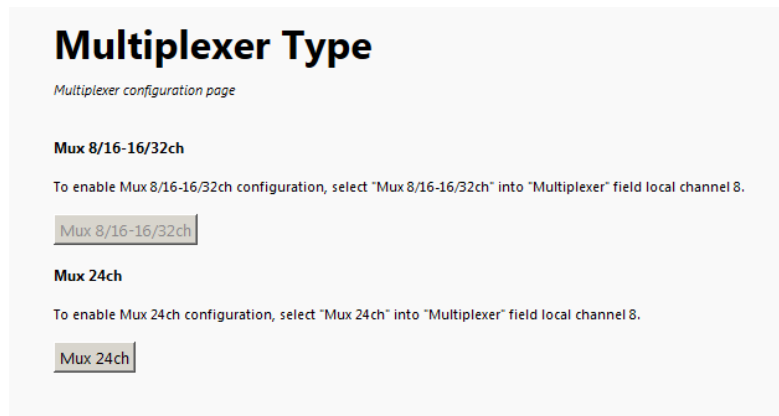


Figure 34

- thus, the page MULTIPLEXER ENABLING opens. Thanks to the tick ENABLE it is possible, pushing on edit, to configure the channels of the selected multiplexer-.

NOTE: it is possible to enable at most 16 multiplexers. We advise to enable only the multiplexers that are used.

Multiplexer Enabling

This page allows to enable multiplexer connected to Logger.

Copy Paste

Enable	Modify	RS485 Address	Nr. of 6 wires sensors	Nr. of 4 wires sensors	Nr. of 2 wires sensors	Selection
<input type="checkbox"/>	Edit	1	0	0	0	<input type="checkbox"/>
<input type="checkbox"/>	Edit	2	0	0	0	<input type="checkbox"/>
<input type="checkbox"/>	Edit	3	0	0	0	<input type="checkbox"/>
<input type="checkbox"/>	Edit	4	0	0	0	<input type="checkbox"/>
<input type="checkbox"/>	Edit	5	0	0	0	<input type="checkbox"/>
<input type="checkbox"/>	Edit	6	0	0	0	<input type="checkbox"/>
<input type="checkbox"/>	Edit	7	0	0	0	<input type="checkbox"/>
<input type="checkbox"/>	Edit	8	0	0	0	<input type="checkbox"/>
<input type="checkbox"/>	Edit	9	0	0	0	<input type="checkbox"/>
<input type="checkbox"/>	Edit	10	0	0	0	<input type="checkbox"/>
<input type="checkbox"/>	Edit	11	0	0	0	<input type="checkbox"/>
<input type="checkbox"/>	Edit	12	0	0	0	<input type="checkbox"/>
<input type="checkbox"/>	Edit	13	0	0	0	<input type="checkbox"/>
<input type="checkbox"/>	Edit	14	0	0	0	<input type="checkbox"/>
<input type="checkbox"/>	Edit	15	0	0	0	<input type="checkbox"/>
<input type="checkbox"/>	Edit	16	0	0	0	<input type="checkbox"/>

Save Cancel

Figure 35

- then, the page MULTIPLEXER CONFIGURATION opens. This page allows the sensors insertion thanks to three buttons: ADD 6 WIRES SENSOR, ADD 4 WIRES SENSOR and ADD 2 WIRES SENSOR.

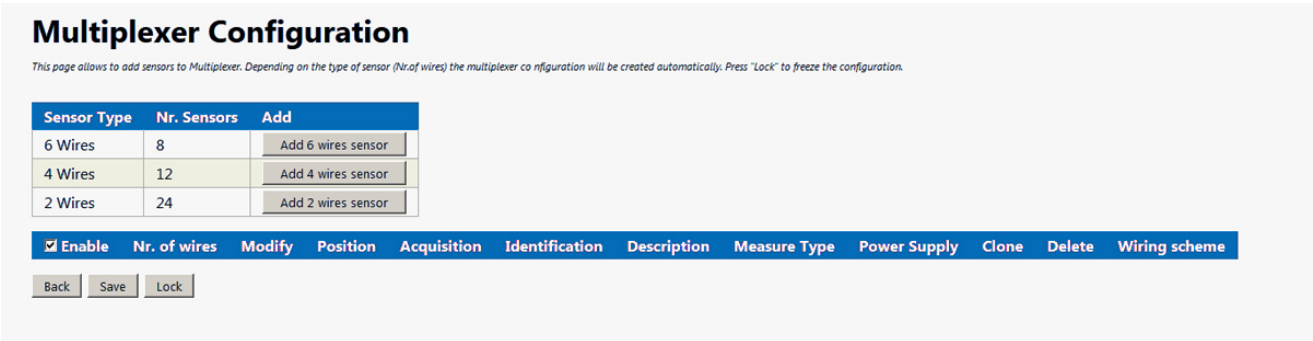


Figure 36

- for example, if you push on button ADD 4 WIRES SENSOR in the underlying table a 4 wires sensors is added and it is possible to configure it.

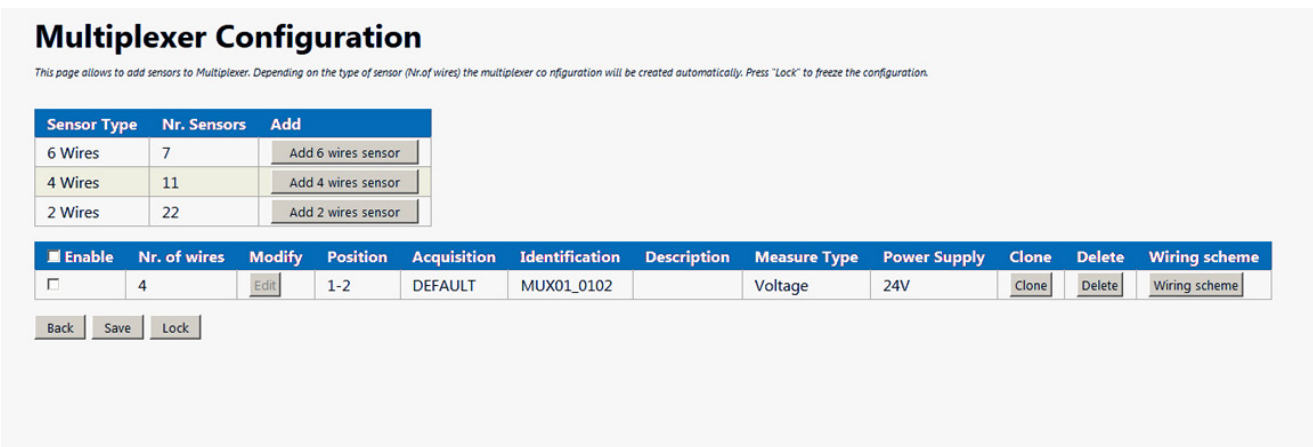


Figure 37

- pushing on EDIT it is possible to set up all sensor parameters, as you do for a local analog channel. The configuration of an analog channel on multiplexer is not different from that of a local analog channel.

NOTE: once the configuration of all channels of multiplexer ended, it is advised to push on LOCK. In this way, the configuration is “blocked” and the removal of one or more sensors doesn’t modify the position of those that are configured yet.

ATTENTION: the addition of a new sensor to a multiplexer that has been already configured could cause a change in sensors position on multiplexer channels. In case of sensors that are physically already connected to the multiplexer, it is necessary to check that their positions are the same. If the positions changed, it is necessary to re-wire the sensors to the multiplexer.”

MODBUS SENSORS

What's Modbus?

Modbus is a serial communication protocol, made by Modicon in 1979 to link their PLC. It has become a de facto standard in communication protocol, and it's now a commonly available means of connecting industrial electronic devices.

Advantages in industrial sectors are:

- developed with industrial applications in mind
- openly published and royalty-free
- easy to deploy and maintain
- moves raw bits or words without placing many restriction on vendors

Modbus enables communication among many devices connected to the same network, for example a system that measures temperature and humidity and communicates the results to a computer. Modbus is often used to connect a supervisory computer with a remote terminal unit (RTU) in supervisory control and data acquisition (SCADA) systems. Many of the data types are named from its use in driving relays: a single-bit physical output is called a coil, a single-bit physical input is called a discrete input or a contact.

Object Type	Access	Size
Coil	Read-Write	1-bit
Discrete Input/Contact	Read-Only	1-bit
Input Register	Read-Only	16-bits
Holding Register	Read-Write	16-bits

Digital Sensors Configuration

For digital sensors, the OM-240 family offers an in-depth configuration. After choosing Baudrate and Maximum RS485 Address (Fig.1), the User can “Save Changes” and start the con-figuration of the sensors.

Digital Channels Enabling

This page allows to enable Logger connected digital channels.

Baudrate:

9600 bps

Parity:

None

Stop Bits:

1

Maximum RS485 Address:

2

Power Supply mode:

Always ON

Incremental Delay [sec.]

0

Warm-up [sec.]

0

Acquisition Frequency

30 Minutes

Save Changes

Cancel

Wiring scheme

Copy

Paste

Sensor Number	Enable	Edit	Model	Address	Identification	Description	Type	Selection
1	<input checked="" type="checkbox"/>	Edit	SmartModBus	1	MDB_001_A			<input type="checkbox"/>
2	<input checked="" type="checkbox"/>	Edit	SmartModBus	2	MDB_002_A			<input type="checkbox"/>

<<Previous

Next>>

1/1

Figure 38

Copy

Paste

Sensor Number	Enable	Edit	Model	Address	Identification	Description	Type	Selection
1	<input checked="" type="checkbox"/>	Edit	SmartModBus	1	MDB_01_A			<input type="checkbox"/>
2	<input checked="" type="checkbox"/>	Edit	SmartModBus	2	MDB_02_A			<input type="checkbox"/>

<<Previous

Next>>

1/1

Figure 39

By clicking “Edit” (Fig.2) on the sensor row to configure, the system shows typical sensor (IPI, H-LEVEL, TILTMETER) and a SmartModbus element (Fig.3). SmartModbus is selected if the User has a generic modbus sensor.

Choose Model Sensor

Sensor Number

1

Model Type	Select
IPI	<input type="checkbox"/>
H-LEVEL	<input type="checkbox"/>
TILTMETER	<input type="checkbox"/>
SmartModbus	<input checked="" type="checkbox"/>

Note:

SMARTMODBUS: Generic Modbus Sensor

Figure 40

Click “Next” to proceed the configuration. Fig.4 shows MODBUS parameters. These are usually provided by the sensor’s manufacturer and reported in either the datasheet or instruction manual.

Smart Modbus Sensor Config

Sensor Number:

1

Modbus Address

1

Pre Measure Actions

Action	Enabled	Modbus Function	Reg Address (hex)	Comparision	Value	Endianness
Send Command	<input type="checkbox"/>	Force Multiple Reg (0x10)	0		0	Big
Wait Condition	<input checked="" type="checkbox"/>	Wait Time (in seconds)		=	3	Big

Acquire Measures

Action	Enabled	Modbus Function	Reg Address (hex)	Data Type	Registers Number&Order	Endianness
Measure 1	<input checked="" type="checkbox"/>	Read Holding (0x3)	1f78	Unsigned Integer	W2 W1 (32 bit)	Big
Measure 2	<input checked="" type="checkbox"/>	Read Holding (0x3)	0	Unsigned Integer	W2 W1 (32 bit)	Big

Post Measure Actions

Action	Enabled	Modbus Function	Reg Address (hex)	Value	Endianness
Send Command	<input type="checkbox"/>	Force Multiple Reg (0x10)	0	0	Big

Figure 41

Modbus Address is sensor’s modbus address, usually settable from the sensor.

Pre Measure Actions:

Some sensors require either a *command* or a *condition to be true* before actually pushing the data in the right register.

Send Command enabled orders the OM-240 to push data (Value field) in a sensor’s register (Reg Address (hex)). You can “Force Multiple Reg” o “Write Coil”.

Wait Condition enabled let the OM-240 check if Coil, Input or Holding are less, more, equal or different from a chosen Value. It allows also to wait for a certain time.

Endianess allows to select if the sensor use a Little Endian or Big Endian data type.

Acquire Measures:

This section is the actual data reading from the modbus sensor. On most sensors, this is the only section the User should care of.

Measure n enabled allows the OM-240 to read the register (Holding, Input or Coil) at the speci-fied “Reg Address (hex)”. Data Type is Signed or Unsigned Integer, Float and Fixend Point. **Register Number&Order** let the User choose which register and in which order data is stored in. Usually is reported in sensor’s datasheet or instruction manual.

Endianess allows to select if the sensor use a Little Endian or Big Endian data type.

Post Measure Actions:

As **Pre Measure Actions**, this is not always required, but some sensors need a register to be written in order to return in standby or reset. Settings are quite similar to **Pre Measure Ac-tions’ Send Command**, which can be enabled or not, and actions are **Force Multiple Reg, Write Coil** (Register Address is specified in Reg Address (hex) field) and Wait Time.

Endianess allows to select if the sensor use a Little Endian or Big Endian data type.

Output configuration and alarms 1 & 2

Measure 1

Output Configuration Measure 1	
Identification	MD8_01_A
Description	
Conversion	None <input type="checkbox"/> Auto Zero
Zero Reading	0
Sensibility	0
Poly. Coeff. A	0
Poly. Coeff. B	0
Poly. Coeff. C	0
Poly. Coeff. D	0
Engineering Units	
Number of Decimals	0
Skipped	<input type="checkbox"/>

Linear conversion: $Sx-Ez$
Polynomial conversion: $Ax^3+Bx^2+Cx+D-Ez$

Alarm Configuration Measure 1	
Alarm Type	None
High Threshold	0
Low Threshold	0
Derivate Threshold	0

Figure 42

Measure 2

Output Configuration Measure 2	
Identification	MD8_01_B
Description	
Conversion	None <input type="checkbox"/> Auto Zero
Zero Reading (Ez)	0
Sensibility (S)	0
Poly. Coeff. A	0
Poly. Coeff. B	0
Poly. Coeff. C	0
Poly. Coeff. D	0
Engineering Units	
Number of Decimals	0
Skipped	<input type="checkbox"/>

Linear conversion: $Sx-Ez$
Polynomial conversion: $Ax^3+Bx^2+Cx+D-Ez$

Alarm Configuration Measure 2	
Alarm Type	None
High Threshold	0
Low Threshold	0
Derivate Threshold	0

Figure 43

This are channel related settings. The user can specify channel name, a short description, and data conversion.

Conversion:

Linear: if sensor output is linear, the systems needs to know Zero Point (Ez) and Sensibility(S) and Number of Decimals (field will be enabled). The output will be equal to $Sx - Ez$

Polynomial: if sensor output is not linear this allows the user to specify sensor output curve, and enable Zero Reading (Ez), Poly.Coeff. A, B, C and D and Number of Decimals. The output will be equal to $Ax^3 + Bx^2 + Cx + D - Ez$

Engeneering Units: to complete data with the right engeneering unit like bar, °C, °F, %HR and so on.

Number of Decimals: after linear or poly conversion, here are the number of decimal digits the system will round the value at.

Skipped: the system will ignore this sensor

Virtual channel alarm

This section enables Logical Operations with Virtual Channels Alarm. Virtual Channels section allows logial operations between alarms, (AND, OR, XOR, NOT).

Tips

Multiple Sensor in one single Modbus Device

Our System allows the user to connect one single Modbus device providing information coming from different sensors.

What if a sensor has more than 2 channels?

The OM-240 allows to create another sensor with the same Modbus address (Fig.9,10,11), so user can select 4 (or more, creating other sensors) registers to read data from. Pre Measure Actions (if required) will be set only in first sensor (relative to the Modbus slave device) and Post Measure Actions will be set only in last sensor (always relative to the Modbus slave device)“

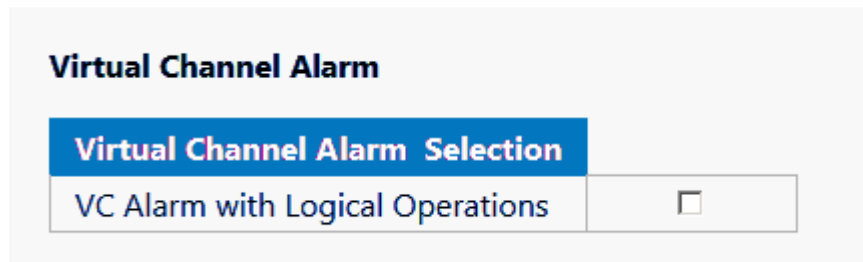



Figure 44

Sensor Number	Enable	Edit	Model	Address	Identification	Description	Type	Selection
1	<input checked="" type="checkbox"/>	Edit	SmartModBus	1	MDB_01_A			<input type="checkbox"/>
2	<input checked="" type="checkbox"/>	Edit	SmartModBus	1	MDB_01_B			<input type="checkbox"/>
3	<input checked="" type="checkbox"/>	Edit	SmartModBus	1	MDB_01_C			<input type="checkbox"/>

<< Previous Next >>

1/1

Figure 45

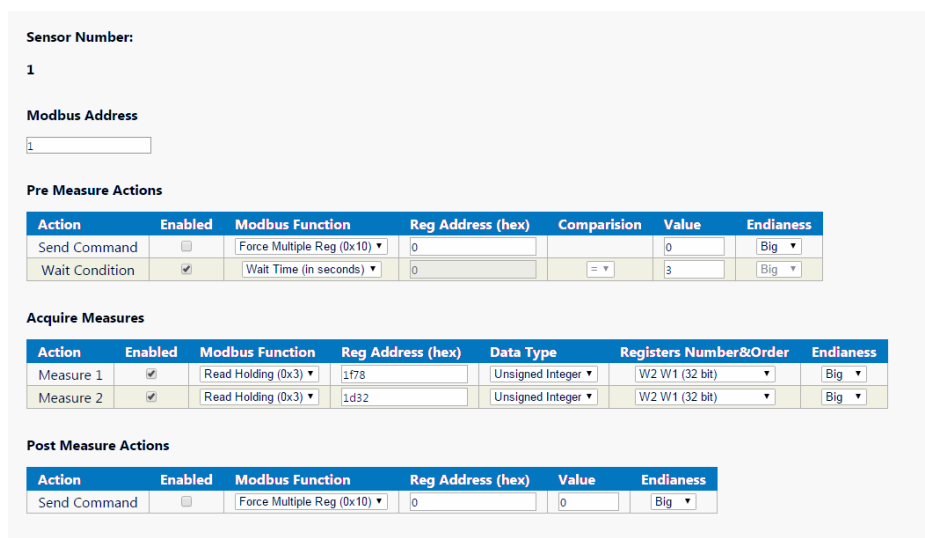

Sensor Number: 1

Modbus Address: 1

Pre Measure Actions

Action	Enabled	Modbus Function	Reg Address (hex)	Comparison	Value	Endianness
Send Command	<input type="checkbox"/>	Force Multiple Reg (0x10)	0		0	Big
Wait Condition	<input checked="" type="checkbox"/>	Wait Time (in seconds)	0	=	3	Big

Acquire Measures

Action	Enabled	Modbus Function	Reg Address (hex)	Data Type	Registers Number&Order	Endianness
Measure 1	<input checked="" type="checkbox"/>	Read Holding (0x3)	178	Unsigned Integer	W2 W1 (32 bit)	Big
Measure 2	<input checked="" type="checkbox"/>	Read Holding (0x3)	1d32	Unsigned Integer	W2 W1 (32 bit)	Big

Post Measure Actions

Action	Enabled	Modbus Function	Reg Address (hex)	Value	Endianness
Send Command	<input type="checkbox"/>	Force Multiple Reg (0x10)	0	0	Big

Figure 46

Sensor Number:

2

Modbus Address

1

Pre Measure Actions

Action	Enabled	Modbus Function	Reg Address (hex)	Comparision	Value	Endianness
Send Command	<input type="checkbox"/>	Force Multiple Reg (0x10) ▼	0		0	Big ▼
Wait Condition	<input type="checkbox"/>	Read Holding (0x3) ▼	0	= ▼	0	Big ▼

Acquire Measures

Action	Enabled	Modbus Function	Reg Address (hex)	Data Type	Registers Number&Order	Endianness
Measure 1	<input checked="" type="checkbox"/>	Read Holding (0x3) ▼	12b3	Unsigned Integer ▼	W1 (16 bit) ▼	Big ▼
Measure 2	<input checked="" type="checkbox"/>	Read Holding (0x3) ▼	13a5	Unsigned Integer ▼	W1 (16 bit) ▼	Big ▼

Post Measure Actions

Action	Enabled	Modbus Function	Reg Address (hex)	Value	Endianness
Send Command	<input type="checkbox"/>	Force Multiple Reg (0x10) ▼	0	0	Big ▼

Figure 47

Sensor Number:

3

Modbus Address

1

Pre Measure Actions

Action	Enabled	Modbus Function	Reg Address (hex)	Comparision	Value	Endianness
Send Command	<input type="checkbox"/>	Force Multiple Reg (0x10) ▼	0		0	Big ▼
Wait Condition	<input type="checkbox"/>	Read Holding (0x3) ▼	0	= ▼	0	Big ▼

Acquire Measures

Action	Enabled	Modbus Function	Reg Address (hex)	Data Type	Registers Number&Order	Endianness
Measure 1	<input checked="" type="checkbox"/>	Read Holding (0x3) ▼	12b5	Unsigned Integer ▼	W1 (16 bit) ▼	Big ▼
Measure 2	<input checked="" type="checkbox"/>	Read Holding (0x3) ▼	13b6	Unsigned Integer ▼	W1 (16 bit) ▼	Big ▼

Post Measure Actions

Action	Enabled	Modbus Function	Reg Address (hex)	Value	Endianness
Send Command	<input checked="" type="checkbox"/>	Force Multiple Reg (0x10) ▼	11a1	4	Big ▼

Figure 48

Serial Number: This is the device serial number. It is composed by 8 decimal digits.

Identification: A short string (16 characters maximum) to identify the datalogger. Identification is used for USB data export. Admitted characters are:

Letters (a-z, A-Z)

Numbers (0-9)

Only this special characters: . _ () [] - { }

Non-admitted characters will be substituted with _ (underscore) character.

Measurement Settings (Standard, High Precision, Fast): These are 3 different measure configurations. User can also modify settings, these are recommended settings.

Fast Measurement: The datalogger does not execute analog autocalibration.

Relay Warmup: Delay time between relay activation and acquisition process

ADC Average Number: Number of average computed by Analog to Digital Converter

Simultaneous Relay Number: number of simultaneously activated relays

Relay time Gain: Relay excitation time (tens of milliseconds)

ADC Speed: ADC Sample rate, in SPS (Sample per Seconds)

Relay Discharge: before acquisition process, all relays are set to short circuit to discharge capacitors.

Relay Reset: Optimization of relays movements

Turn Off Analog During Warm-up: during sensor's warm-up, analog board is temporarily turned off

Analog always on: Analog circuits are turned on at first acquisition cycle (in RUN) and then won't be turned off (except when CONFIG or STOP mode are set). This allows faster acquisition rates. In Test Measure mode, analog board is turned on temporarily then turned off again. If datalogger will go in sleep mode, analog circuit should be re-initialized at next acquisition cycle.

Polynomial digit: This field establishes number of decimal digits for channel with Linear or Polynomial conversions. This number is used if the channel is left at "DEFAULT". A single channel can override this setting in its own setting page.

Enable VW Tracking: This option will speed up Vibrating Wire Excitation by lowering the time needed for frequencies scan.

VW Noise subtraction: It performs a noise analysis of the channel, to have a better SNR after excitation.

VW Excitation: This field enables the excitation of Vibrating Wire. If it's disabled, no excitation will be applied while reading vibrating wire, thus making the reading impossible. It can be used to test with functions generators.

Thermocouple break check: before TC readings, OM-240 inspects TC circuitry to check total resistance. If value is out of thresholds, TC will be flagged as broken, and NAN, +FS or -FS will be recorded. If Thermocouple break check is disabled, this control won't be executed. It is useful to disable this control when using calibrators or mV sources connected as thermo-couple, since their behavior is not the same as Thermocouple's wire.

FTP file name format: it allows choice between different file name's formats.

Low Battery Alarm Threshold: An alarm will be triggered if V IN voltage drops below this threshold.

IOT Configuration

IOT Enable: This checkbox, enables the communication with Exosite cloud. Read dedicated chapter for more info.

WARNING: BEWARE OF ENABLING THIS FIELD. BEFORE ENABLING THIS FIELD, BE SURE TO DELETE ALL MEASURE LOG PRESENT IN MEMORY. IF MEMORY IS NOT CLEAR, AT THE FIRST ACQUISITION, THE DATALOGGER WILL PROCESS EXISTING DATA AND TRY TO EXPORT TO EXOSITE CLOUD. USUALLY THIS OPERATION REQUIRES FEW HOURS AND THE DATALOGGER WILL BE STRUCK PROCESSING THIS DATA FOR NECESSARY TIME.

IOT Cik: This field is dedicated to the CIK field, gathered from Exosite cloud after the creation of a device. Read dedicated chapter for more info.

Download/Upload Calibration: it allows logger calibration saving or restoring.

Default Settings Recover: It will restore default settings

Reboot: it reboots the datalogger

ALARMS

Overview

- OM-240 can handle alarms of both channel (reading out of a determined range) and device (malfunction, wrong configuration etc.)
- Alarms can be recorded on Alarm logs and can be sent via SMS, EMAIL, FTP or activate through OM-240's Digital Output (refer to Chapter1 for more info).
- A first configuration must be done in the Alarm Configuration page (on the web server, click on "Configuration" and "Alarms"). The following screen will be prompted.

Simple steps to configure alarms:

- Select Output
- Select "Delay"
- Select "End"

Configuration

Menu

- Status
- Configuration
 - Datalogger
 - Acquisitions
 - Alarms
- Channels Configuration
- Data Monitor
- Advanced

Alarm Configuration

This page allows to configure actions in case of alarm for both configured sensor and Datalogger.

SENSOR

Enable	Action	Event Nr.	End
<input type="checkbox"/>	Send SMS	1	2
<input type="checkbox"/>	Send email	1	2
<input type="checkbox"/>	Upload on FTP	1	2
<input type="checkbox"/>	Enable Digital Output	1	2
<input type="checkbox"/>	Frequency Increase	1	2

Datalogger

Enable	Action	Event Nr.	End
<input type="checkbox"/>	Send SMS	1	2
<input type="checkbox"/>	Send email	1	2
<input type="checkbox"/>	Upload on FTP	1	2
<input type="checkbox"/>	Enable Digital Output	1	2

Save Changes

Cancel

email Configuration

SMS Configuration

FTP Configuration

Figure 50

In the "SENSOR" section, it is possible to select how OM-240 will handle Sensor's alarm: Enabling any of this checkbox will modify datalogger's action:

- Send SMS will send an SMS (if RS232 modem is connected) with the Alarm

- Send email will send an email (if RS232 modem OR Ethernet connection with internet is connected) with the Alarm, to specified recipient (see next section)
- Upload on FTP will upload the Alarm Log's row (if RS232 modem OR Ethernet connection with internet is connected) with the alarm triggered
- Enable Digital Output will trigger the backpanel's terminal block to control an external Alarm system
- Frequency increase will increase acquisition frequency to gather more information about the event that has triggered the alarm. Acquisition Frequency is set at 1 minute when the channel is in ALARM. If the datalogger is configured to read different sensors, and more than one sensor is in alarm, reading frequency will probably be lower.

There are pretty much the same options in the "OM-240" Section, except for Frequency increase.

Event Nr. Dropdown menu will let you choose the number of events in alarm at which the datalogger triggers the alarm. 1 means at the first occurrence, 2 will skip first value in alarm, and if it still in alarm during next acquisition the alarm will be triggered, otherwise there will be no alarm event.

End Dropdown menu will let you choose the number of events after which the datalogger will cease to trigger. NEVER is the option to disable this feature, and let the datalogger trigger EVERY set alarm.

After configuration, click Save to proceed.

If you selected SMS, email or FTP, the relative configuration option will be activated.

SMS Configuration

SMS Configuration

This page allows to configure SMS for alarms notification both for configured sensor and Datalogger.

Number	Sensor Alarm	Datalogger Alarm	Add Measure in alarm
<input type="text" value="+393330000000"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
<input type="text" value="+393330000000"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
<input type="text" value="+393330000000"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
<input type="text" value="+393330000000"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
<input type="text" value="+393330000000"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>

Text (max.30 characters):

Tries:

Figure 51

This page will let you select SMS recipient for triggered alarms.

Number: the recipient(s) of the SMS

Sensor Alarm: if you have selected SMS in sensors alarms this will let you use the current recipient for the sensor alarm

OM-240 alarm: if you have selected SMS in OM-240 alarm this will let you use the current recipient for the datalogger's alarm

Add Measure in alarm: it will attach measure value to the SMS.

Text: it allows a small text writing (up to 30 characters) contained in the SMS

Tries: it makes you choose the number of tries if SMS send fail.

Click save to proceed.

Email Configuration

email Configuration

This page allows to configure email sending in case of alarm.

Address	Sensor Alarm	Datalogger Alarm
info@info.com	<input type="checkbox"/>	<input type="checkbox"/>
info@info.com	<input type="checkbox"/>	<input type="checkbox"/>
info@info.com	<input type="checkbox"/>	<input type="checkbox"/>
info@info.com	<input type="checkbox"/>	<input type="checkbox"/>
info@info.com	<input type="checkbox"/>	<input type="checkbox"/>

Object:
Logger Notifications

Text (max.30 characters):
Logger Report:

Save Changes Cancel

SMTP Configuration Back

Figure 52

This page will let you select the email recipient for triggered alarms.

Address: the email address of the recipient

Sensor Alarm: if you have selected email in sensors alarms this will let you use the current recipient for the sensor alarm

Datalogger alarm: if you have selected email in datalogger alarm this will let you use the current recipient for the datalogger's alarm

Object: email's object

Text: a small text (30 characters) to be sent with email

SMTP Configuration: it will open a new page to configure SMTP parameters

Save Changes to proceed

SMTP Configuration

Menu

- Status
- Configuration
 - Datalogger
 - Acquisitions
 - **Alarms**
- Channels Configuration
- Data Monitor
- Advanced

SMTP Server Configuration

This page allows to configure SMTP server access credentials needed to send alarms notification's email.

Parameter	
SMTP Server	192.168.0.1
Port	25
Username	info@info.com
Password	••••
Retry	1

Supported protocols: SMTP

Figure 53

This page allows the setup of SMTP parameter .

SMTP Server: the smtp server to send mail

Port: port used to communicate with SMTP Server

Username and Password: Credentials to be used to send email

Retry: number of retry(ies) in case of transmission errors.

Send test email: it will send an email to check if parameters are correct

WARNING: Only standard SMTP (not encrypted) is supported.

FTP Configuration

Sending Measures

This page allows to configure the parameters for the measure log on an FTP server or MAIL, scheduled sending (or in case of alarm). Select the type of protocol to enable measure log sending; if not enabled, if the alarms are configured, will be sent only the alarm. In case of FTP sending failure, Datalogger will send max. 2 delayed acquisition cycles. Selecting "Timed" in the "Energy Management" page in the "Communication Device Power Supply (V OUT)' field the FTP sending could take a few minutes. In "Server" field is highly recommended to insert the domain (i.e. www.domain.com) and NOT the IP address. In this case, you will need to configure the DNS in the "Network Card Configuration" table in the "Connections" page.

Sending Measures

Sending Enable: None

Sending Frequency: Daily (8:00 AM)

FTP Configuration

FTP parameters	
Server:	192.168.0.1
Folder (/folder):	/FTPFolder
Username:	admin
Password:	•••••
Port:	21
Tries:	1

Supported protocols: FTP

Figure 54

This page allows FTP connection configuration. Sending Measure Table is related to Measure log transfer and this is explained in the related section.

FTP Configuration table allows to setup all parameters for FTP server connection. If the server is not on the same LAN, a 3G modem or Internet connection is required.

Server: it is the server address

Folder: it allows to specify subfolder to be used. The directory **MUST** exist

Username and Password: credentials used to connect to the server

Port: port used to connect to the server

Tries: number of attempts in case of failure.

Save changes to continue

WARNING: Only standard FTP (not encrypted) is supported.

Channel Alarm Types

Thresholds in OM-240 alarm settings are here described.

WARNING: all alarms evaluations are computed **AFTER** linear or polynomial conversion, if any.

Low and High Thresholds

Thresholds are basically limits to sensor's ranges. If a threshold is overcome (lower value so low threshold, or higher value so high threshold), the alarm is triggered.

Derivate

Derivate alarm will analyze, at n sample, value of n-1 sample and compare to n sample.

If $\text{value}(n) - \text{value}(n-1) > \text{threshold}$, an alarm is triggered.

Examples

Derivate alarm, linear conversion

$(L_n * S + L_z) - (L_{n-1} * S + L_z) > \text{threshold}$

L_n is last sample, while L_{n-1} is second-last sample. S is sensibility parameter and L_z is offset (Zero reading) in linear conversion's channel settings.

DIGITAL INPUTS CONFIGURATION

The OM-240 has two digital inputs (IN1 & IN2) on its back side.



Figure 55

The digital inputs could be configured to acquire a **TRIGGER** or an **RAIN GAUGE** or an **ANEMOMETER**. The trigger could be used with a seismic station and it is used to start one or more acquisitions extemporaneous.

NOTE: in case of a rain gauge or anemometer, no elaboration of reading is considered (ex: average speed, maximum, instantaneous, daily storage, etc.)

To set up a digital input it is necessary:

- to select the entry CHANNEL CONFIGURATION, then DIGITAL INPUTS;
- the page DIGITAL INPUTS CONFIGURATION opens. In this page it is possible to set up 1 or both digital inputs independently;

The screenshot displays the OMEGA web interface. At the top, the OMEGA logo is on the left, and a status bar contains icons and text: a person icon for 'Datalogger', a red gear for 'OM-240', a green exclamation mark in a triangle for 'No alarm', a green flag for 'FW 21.42.66', a green plug for 'Ext.Pwr Supply 12.2 V', and a clock for '31/01/17 17:10'. On the left side, a 'Menu' sidebar lists 'Status', 'Configuration', 'Channels Configuration' (with sub-items 'Locals', 'Digitals', 'Digital Inputs' (highlighted), 'Multiplexers', 'Virtuals'), 'Data Monitor', and 'Advanced'. The main content area is titled 'Digital Input Configuration' with a subtitle 'This page allows to configure Logger local digital inputs.' Below this, the 'Digital Input' section contains the following fields: 'IN1 Input:' with a dropdown menu set to 'Disable'; 'Acquisition Frequency' with a dropdown menu set to 'Default'; 'Sensibility:' with a text input field containing '10.000000'; 'Edge:' with radio buttons for 'Up' (selected) and 'Down'; 'Unit Measure:' with an empty text input field; 'Number of readings (Trigger)' with a text input field containing '1'; and 'Skipped:' with an unchecked checkbox.

Figure 56

- in this page you could find the following fields:


INX INPUT (X is 1 or 2)	<p>Using the drop-down menu, it is possible to select the type of digital input between 4 possibilities:</p> <ul style="list-style-type: none"> - DISABLED - TRIGGER - RAIN GAUGE - WIND GAUGE <p>The input has to be configured according to the sensor that is connected.</p>
ACQUISITION FREQUENCY	Sampling rate of selected channel (wind gauge, rain gauge)
SENSIBILITY	This field enables only for RAIN GAUGE and ANEMOMETER. If it is well configured, it allows to transform the counts in engineering units (ex: from “counts” to “mm”)
EDGE	This field enables only for TRIGGER. It is possible to select between two entries: UP or DOWN . The state change could be high-low (DOWN) or low-high (UP). Therefore, if on the input generally there is no voltage and you want to do an acquisition with the OM-240, in case a voltage arrives on the input (ex: 5Vdc) it is necessary to select UP . This because you pass from a low (0Vdc) to a high (5Vdc) state.
UNIT MEASURE	This field enables only for RAIN GAUGE and WIND GAUGE. It indicates the unit of measure of the read value.
NUMBER OF READINGS (TRIGGER)	Editable field. Numerical value. This field enables only for TRIGGER. It indicates how many extemporaneous and consecutive acquisitions the OM-240 has to do with a trigger. Acquisitions are done independent-ly from the configured acquisition interval. These data are stored and so they could be exported in CSV file.

NOTE: If you enable the digital inputs, the OM-240 is in permanent acquisition. This means that, even if the OM-240 is in Timed, he will never go in “low consumption” mode. This situation has to be taken into account in case it is necessary to optimize the consump-tions (for example with batteries or solar panel)

Example of digital input in1 configuration

Here is shown the standard configuration of a digital input configured as TRIGGER.

- open page DIGITAL INPUT CONFIGURATION and select the entry CHANNELS CONFIGURATION / DIGITAL INPUTS from left menu;

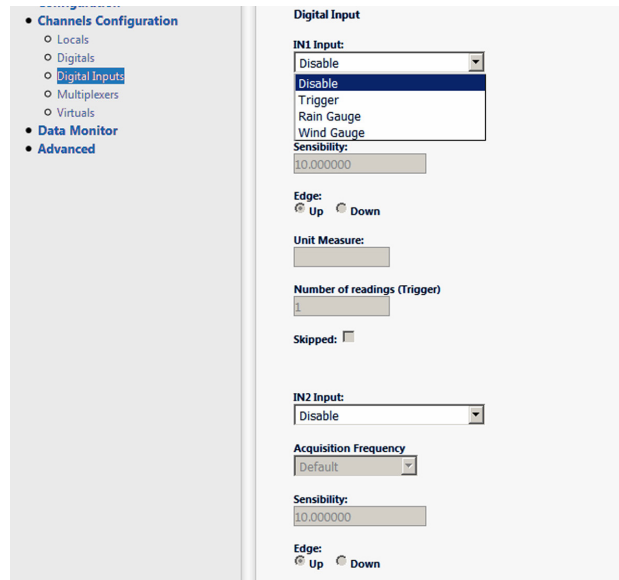


The screenshot shows the 'Digital Input' configuration window. On the left, a sidebar menu lists 'Channels Configuration' (selected), 'Locals', 'Digitals', 'Digital Inputs', 'Multiplexers', 'Virtuals', 'Data Monitor', and 'Advanced'. The main area is titled 'Digital Input' and contains the following settings:

- IN1 Input:** A dropdown menu with 'Disable' selected.
- Sensibility:** A text input field containing '10.000000'.
- Edge:** Radio buttons for 'Up' (selected) and 'Down'.
- Unit Measure:** A text input field.
- Number of readings (Trigger):** A text input field containing '1'.
- Skipped:** A checkbox.
- IN2 Input:** A dropdown menu with 'Disable' selected.
- Acquisition Frequency:** A dropdown menu with 'Default' selected.
- Sensibility:** A text input field containing '10.000000'.
- Edge:** Radio buttons for 'Up' (selected) and 'Down'.

Figure 57

- in field INPUT IN1 select TRIGGER;

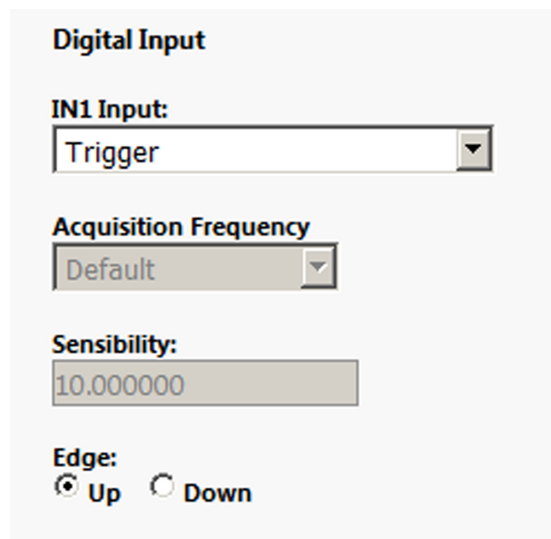

This close-up screenshot focuses on the 'IN1 Input' dropdown menu, which is now set to 'Trigger'. The other settings visible are:


- Acquisition Frequency:** A dropdown menu with 'Default' selected.
- Sensibility:** A text input field containing '10.000000'.
- Edge:** Radio buttons for 'Up' (selected) and 'Down'.

Figure 58

- in field EDGE select UP;

NOTE: in this example it has been selected UP because we supposed there is any voltage on digital input IN1 and that in case of a trigger, a voltage of 5Vdc is applied.

- In field **NUMBER OF READINGS (TRIGGER)** insert the number of acquisitions you want that the OM-240 does after a trigger signal (ex.5)

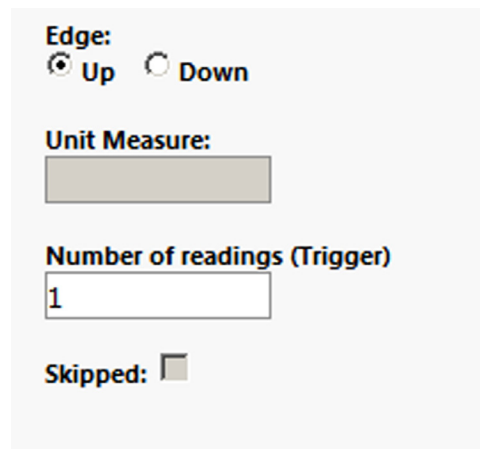

The screenshot shows a configuration window with the following elements:

- Edge:** Two radio buttons, "Up" (selected) and "Down".
- Unit Measure:** A text input field that is currently empty.
- Number of readings (Trigger):** A text input field containing the number "1".
- Skipped:** A checkbox that is currently unchecked.

Figure 59

- Push **SAVE CHANGES** to confirm the configuration.


The OM-240, with this configuration, in case it receives a positive voltage on **DIGITAL INPUT IN1**, does 5 consecutive acquisitions of all configured channels.

A practical example of the use of trigger function is that of associate OM-240 to a Seismic Station. The majority of Seismic Stations has the possibility, in case of a seismic event, to activate a digital output (an output voltage). If this signal is connected directly to the digital input IN1 of the OM-240, when a seismic event happens the Seismic Station furnishes a digital output on the digital input of the OM-240. The OM-240 starts to acquire all connected sensors to verify the monitoring area after the event.

Example of digital input in2 configuration

Here is shown the standard configuration of a digital input configured as RAIN GAUGE.


- open page DIGITAL INPUT CONFIGURATION and select the entry CHANNELS CONFIGURATION / DIGITAL INPUTS from left menu;

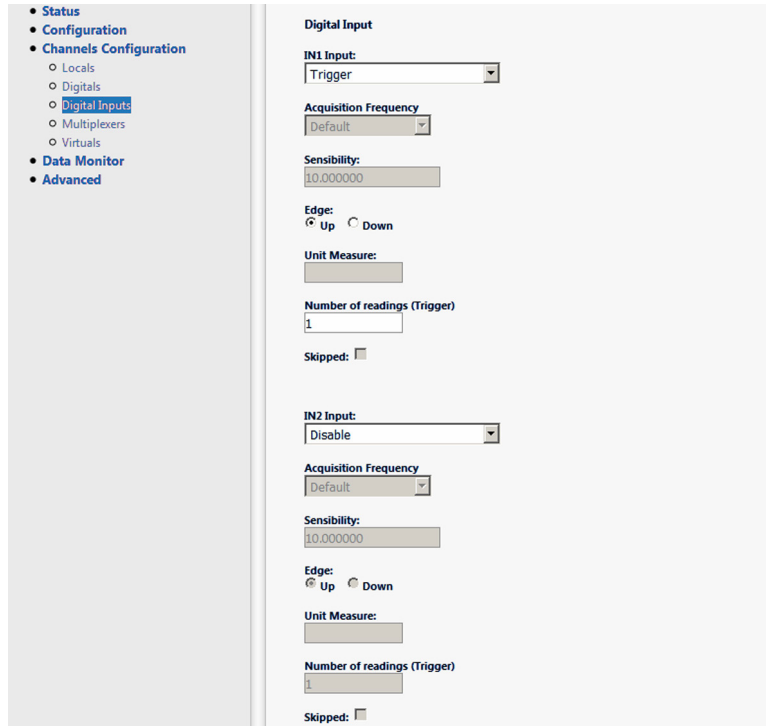

The screenshot displays the 'Digital Input' configuration window. On the left is a sidebar menu with the following items: Status, Configuration, Channels Configuration (expanded), Locals, Digitals, Digital Inputs (highlighted), Multiplexers, Virtuals, Data Monitor, and Advanced. The main area is titled 'Digital Input' and contains two identical configuration sections for 'IN1 Input' and 'IN2 Input'. For both channels, the 'IN1 Input' dropdown is set to 'Trigger' and the 'IN2 Input' dropdown is set to 'Disable'. The 'Acquisition Frequency' is set to 'Default' for both. The 'Sensibility' is set to '10.000000'. The 'Edge' is set to 'Up' (radio button selected). The 'Unit Measure' field is empty. The 'Number of readings (Trigger)' is set to '1'. The 'Skipped' checkbox is unchecked for both channels.

Figure 60

- in field INPUT IN2 select RAIN GAUGE;

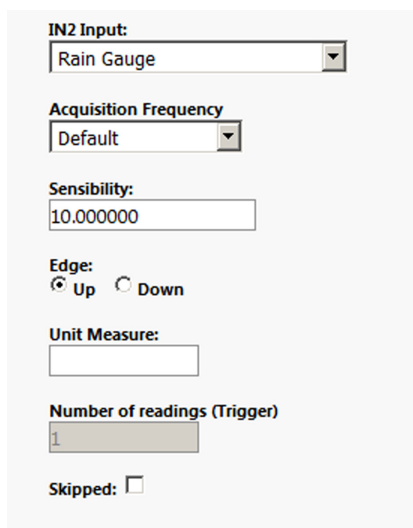

This is a close-up view of the 'IN2 Input' configuration section. The 'IN2 Input' dropdown menu is open, showing 'Rain Gauge' as the selected option. The 'Acquisition Frequency' is set to 'Default'. The 'Sensibility' is set to '10.000000'. The 'Edge' is set to 'Up' (radio button selected). The 'Unit Measure' field is empty. The 'Number of readings (Trigger)' is set to '1'. The 'Skipped' checkbox is unchecked.

Figure 61

- in field **SENSIBILITY** insert the sensibility of sensor (for example 0.2 mm / count);
- in field **UNIT OF MEASURE** insert the unit of measure of the done conversion (example “mm”)

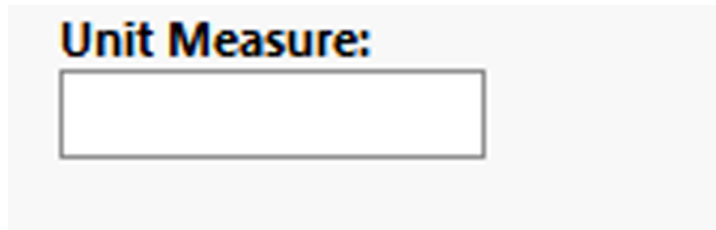


Figure 62

With this configuration, the OM-240 acquires the number of impulses for a period of a hour. Once this interval ends, the OM-240 memorizes the number of counts done during this period of time. If for example in one hour 5 counts are detached, the OM-240 applies the following conversion:

$$\mathbf{5 \text{ COUNT} * 0.2 \text{ MM/COUNT} = 1 \text{ MM}}$$

Once tche value is memorized, the counter sets to zero.

Alarm configuration is the same as all other channel types, with High, Low and Derivative Thresholds. VC alarm with Logical Operations is present, as a Virtual Channel alarm can be used in Virtual Channels Logical Alarms.

VIRTUAL CHANNELS

Overview

This chapter is focused on Virtual Channels (VC from now on), to understand why VC are implemented on OM datalogger and how to configure them.

1. Why are Virtual Channels implemented in OM Family? – This paragraph shows benefits of Virtual Channels
2. Scripts – Scripts are a fundamental section of Virtual Channels' architecture.
3. Virtual Channels configuration – "HOW TO" use and configure Virtual Channels' with analog and digital sensors, digital input and multiplexers.
4. Common Errors – Here are shown common errors made during virtual channels creation, and how to avoid them.

Why are Virtual Channels Implemented?

We usually use sensors to get a measure. Anyway, we could need a way to modify that number because we need either a derived measure (airflow/airspeed) or an expression calculated on more than 1 sensor (dewpoint or Δ_t between two zones for instance). We can calculate this with spreadsheet or just let our datalogger do the work.

OM Family has this feature with Virtual Channels.

Virtual Channels allows operations to be made on a single channel or between channels.

OM group them into Scripts, with a maximum of 5 scripts containing 16 virtual channels each. Each Virtual Channel can handle up to 9 elements (including Virtual Channel belonging to the same script).

New Script:

Name

1

Acquisition

Default

Create

Script	Acquisition	Edit	Delete
	DEFAULT	Edit	Delete
	DEFAULT	Edit	Delete
	DEFAULT	Edit	Delete
	DEFAULT	Edit	Delete
	DEFAULT	Edit	Delete

Figure 63

Scripts

OM-240 automatically provides the script name during its creation. Acquisition timing can be chosen between 1 second and 7 days, with “DEFAULT” option not overriding OM-240 global acquisition timing.

After selecting “Create” button the new script will be listed below:

New Script:

Name	<input type="text" value="2"/>
Acquisition	<div>Default ▾</div>
	<div>Create</div>

Script	Acquisition	Edit	Delete
Script_1	DEFAULT	<div>Edit</div>	<div>Delete</div>
	DEFAULT	<div>Edit</div>	<div>Delete</div>
	DEFAULT	<div>Edit</div>	<div>Delete</div>
	DEFAULT	<div>Edit</div>	<div>Delete</div>
	DEFAULT	<div>Edit</div>	<div>Delete</div>

Figure 64

Edit button allows the configuration of Virtual Channels contained by the selected Script. As we see in following Figure, OM-240 provides a large toolbox to program Virtual Channels.

New Script:

Name	<input type="text" value="1"/>
Acquisition	<div>Default ▾</div>
	<div>Create</div>

Script	Acquisition	Edit	Delete
	DEFAULT	<div>Edit</div>	<div>Delete</div>
	DEFAULT	<div>Edit</div>	<div>Delete</div>
	DEFAULT	<div>Edit</div>	<div>Delete</div>
	DEFAULT	<div>Edit</div>	<div>Delete</div>
	DEFAULT	<div>Edit</div>	<div>Delete</div>

Figure 65

Script Editor

This page allows to edit previously created script and create virtual channels. For each virtual channel can be added max. 9 elements; this check is executed pressing "Add" button.

Virtual Channel:

CV1

an	sin	and	+	1	2	3
dig	cos	or	-	4	5	6
mux	tan	xor	*	7	8	9
cv	pi	not	/	.	0	CE
()	<input type="checkbox"/> Logical				C

Add

Cancel

Virtual Channel Delete Edit Configure

Back Save

Figure 66

an: selects an analog channel (prompts a dialog box to input channel number)
dig: selects a digital channel (prompts a dialog box to input channel number)
mux: selects multiplexer position (prompts two dialog boxes, the 1st for channel number, the 2nd for mux address)
cv: selects a virtual channel (only those included in the same script, prompts a dialog box for CV number)

Apart from this we have mathematics operations, like +, -, *, /, sin, cos, tan, pi-value. Logical operations allow operations between alarms states. Every channel (analog, digital, virtual and mux) provides a checkbox in alarm configuration, VC Alarm with Logical Operations. This enables alarms to be handled by virtual channels.

VC Alarm with Logical Operations	<input checked="" type="checkbox"/>
----------------------------------	-------------------------------------

Figure 67

The following Virtual Channel will trigger an alarm only if one of the two channels is in alarm.

Virtual Channel	Delete	Edit	Configure
an(1.A)XORan(2.A)	Cancel	Edit	Config

Figure 68

an(1.A)	an(2.A)	an(1.A) XOR an(2.A)
F	F	F
F	V	V
V	F	V
V	V	F

an(1.A)	an(2.A)	an(1.A) AND an(2.A)
F	F	F
F	V	F
V	F	F
V	V	F

an(1.A)	an(2.A)	an(1.A) OR an(2.A)
F	F	F
F	V	V
V	F	V
V	V	V

an(1.A)	NOT an(1.A)
F	V
V	F

Virtual Channel Configuration

By clicking “config” in the Virtual Channel row (Figure 23) the user can edit Identification (channel name) and alarm properties.

Virtual Channel Configuration

This page allows to configure a virtual channel.

Description	Parameters
Virtual Channel	1
Identification	<input type="text"/>
Alarm Type	None ▾
High Threshold	<input type="text" value="0"/>
Low Threshold	<input type="text" value="0"/>
Derivative Threshold	<input type="text" value="0"/>
VC alarm with Logical Operations	<input type="checkbox"/>
Skipped	<input type="checkbox"/>

Figure 69

Alarm configuration is the same for all channel types, with High, Low and Derivative Thresholds. VC alarm with Logical Operation is present, as a Virtual Channel alarm can be used in Virtual Channels Logical Alarms.

Common Errors and Warnings

In order to write Virtual Channel’s formula correctly, you should avoid typing the whole formula in the dialog box prompted by the system.

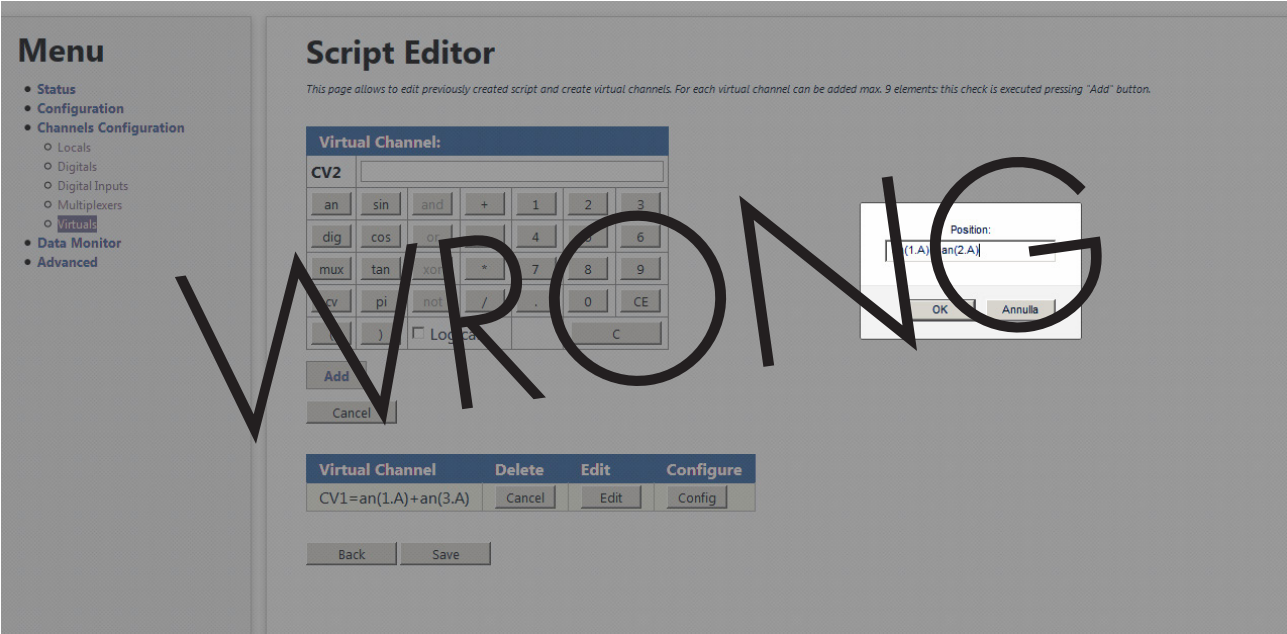


Figure 70

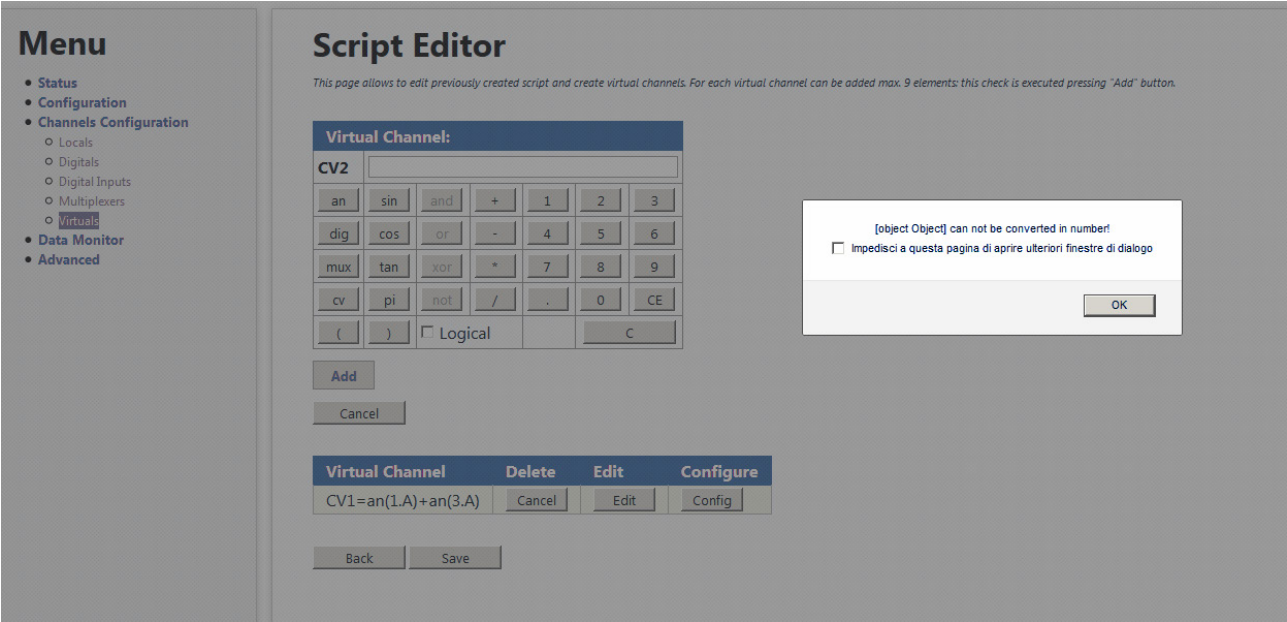


Figure 71

As you can see this causes an error.
Formula has to be written using keys printed on the screen. The prompt should be used ONLY to write channel number.
The same procedure applies for dig, mux and cv buttons.

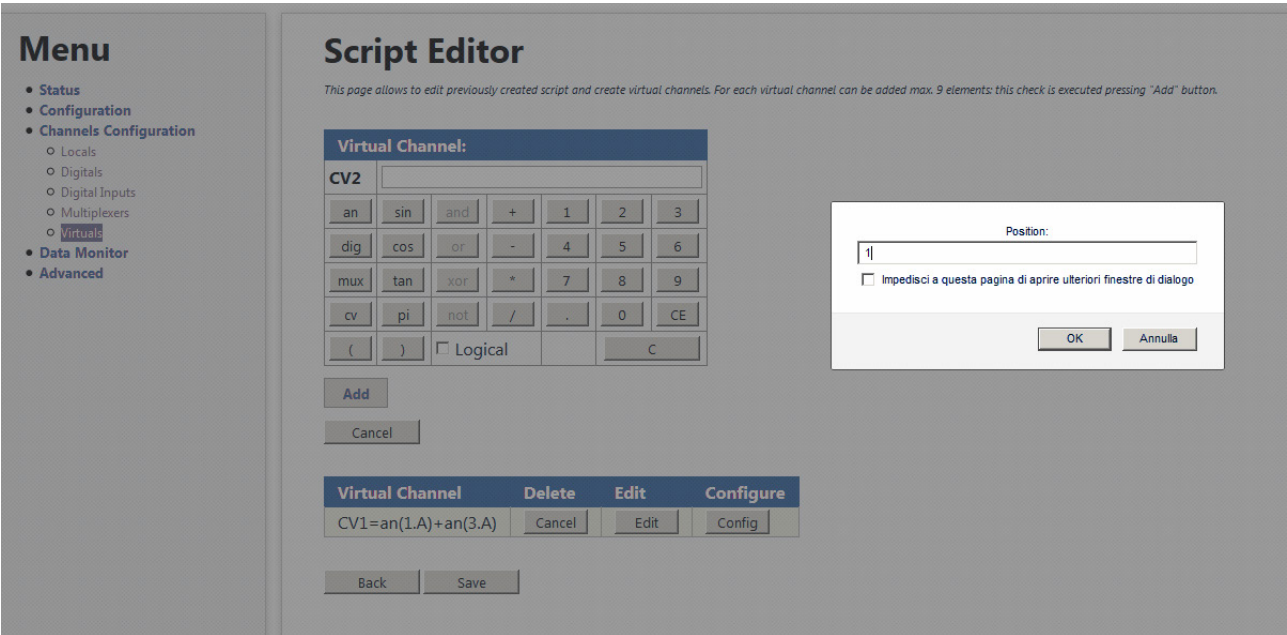


Figure 72

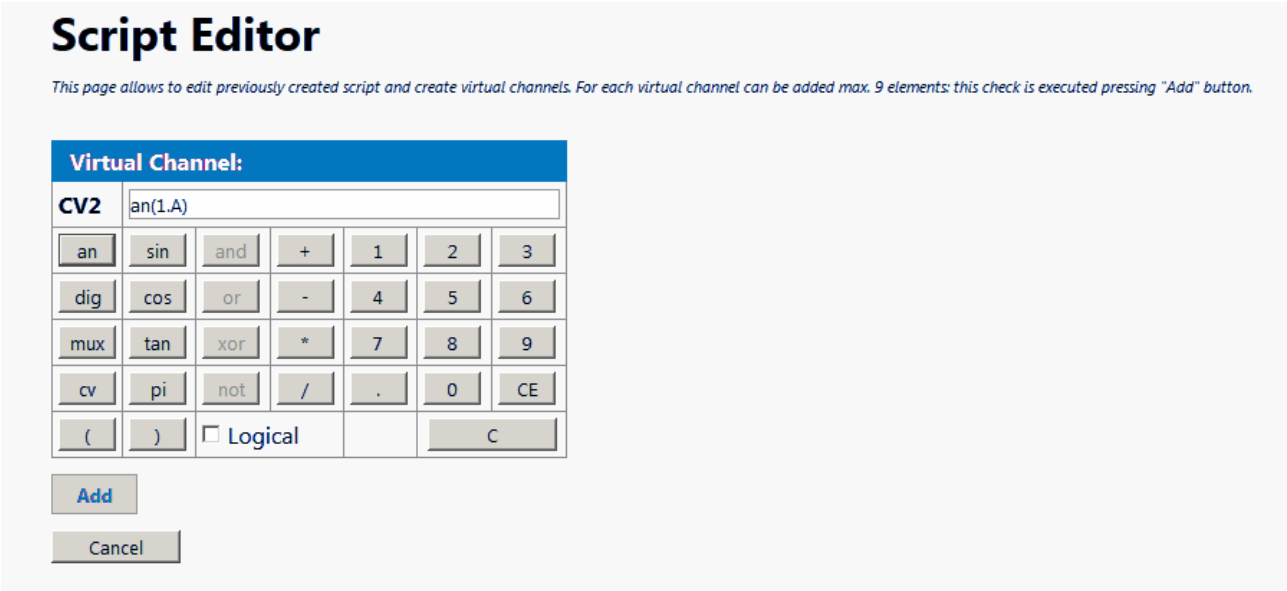


Figure 73

WARNING: Channel B (1.B, 2.B, and so on) can't be used on Virtual Channels. If you need to use the channel B of a multiaxis sensor, like Voltage 2CH, Vibrating Wire + Thermistor, and all others, you should use 2 separate channels during configuration.

ADVANCED CONFIGURATION

Overview

Advanced parameters are explained in this section.

- Connection configuration, for Ethernet and 3G modem parameters
- Measure log transfer, for FTP server configuration
- Account management, to change account passwords
- Date and Time, to change timezone or set daytime saving
- Energy management, to improve power consumption especially if battery powered
- Information about firmware versions, mac address, bootloader

This section will show how to configure Advanced parameters in the OM-240's web server.

Connections

Connections Configuration

This page allows to configure Datalogger network card parameters and Datalogger remote connection trough GSM/GPRS modem connected to RS-232 port. It's also possible to select the port (Ethernet o RS-232) for email and FTP sending. NOTE: After changing the configuration of the Datalogger network card or the port to send data by email or FTP a reboot is required to apply the changes.

email and FTP port sending	
Ethernet (Router)	<input checked="" type="radio"/>
RS-232 (2G/3G modem)	<input type="radio"/>

Network Card Configuration	
DHCP Enable	<input type="checkbox"/>
MAC Address	00:1E:C0:F1:D1:28
IP Address	192.168.1.100
Subnet Mask	255.255.255.0
Default Gateway	192.168.1.1

DNS	
Preferred DNS Server	0.0.0.0
Alternate DNS Server	0.0.0.0

Figure 74

This page allows to set network parameters.

In the first block you select which connection will be used by OM-240 to send Email and FTP files.

Network Card Configuration

DHCP Enable: to choose whether or not to use DHCP or specify network parameters

IP Address, Subnet Mask and Default Gateway, DNS Servers addresses depend on network infrastructure.

2G/3G Modem Parameters	
Baudrate	115200 bps
APN	
Dial-up string (ie.*99***1#)	*99***1#
Username	User
Password	*****
Confirm Password	*****
Allow roaming	<input type="checkbox"/>
Use modem configuration	<input type="checkbox"/>

M2M Password Configuration (Remote Comm. via 2G/3G modem)	
Username	User
Password	*****
Confirm Password	*****

DNS	
Preferred DNS Server	0.0.0.0
Alternate DNS Server	0.0.0.0

Figure 75

This settings are related to 3G modem. Parameters are usually provided by telephone operator. **WARNING: Remember to set DNS also on RS232 2G/3G modem.**

Measure log data transfer

Sending Measures

This page allows to configure the parameters for the measure log on an FTP server or MAIL scheduled sending (or in case of alarm). Select the type of protocol to enable measure log sending; if not enabled, if the alarms are configured, will be sent only the alarm. In case of FTP sending failure, Datalogger will send max. 2 delayed acquisition cycles. Selecting "Timed" in the "Energy Management" page in the "Communication Device Power Supply (V OUT)" field the FTP sending could take a few minutes. In "Server" field is highly recommended to insert the domain (i.e. www.domain.com) and NOT the IP address. In this case, you will need to configure the DNS in the "Network Card Configuration" table in the "Connections" page.

Sending Measures	
Sending Enable:	FTP
Sending Frequency:	Daily (8:00 AM)

FTP Configuration

FTP parameters	
Server:	192.168.0.1
Folder (/folder):	/FTPfolder
Username:	admin
Password:	•••••
Port:	21
Tries:	1

Supported protocols: FTP

Save Changes

Figure 76

This page contains data transfer settings.

Sending Measure block allows to choose the way to send data:

None: no data transfer

Email: data will be transferred via email

FTP: data will be transferred via FTP

FTP Configuration block contains the configuration to create an FTP connection with a user's server.

Account Management

Account Management

This page allows to change Datalogger access credentials and language. Language can be changed filling the "Old Password" field and leaving "New Password" and "Confirm New Password" fields blank.

Account:

Old Password:

New Password:

Confirm New Password:

Language:

Figure 77

Here it is possible to change the passwords for User and Admin accounts, and to change web language.

Date and Time

Date and Time Setting

This page allows to set Datalogger date and time.

Date (dd/mm/yy):

/ /

Hours (hh:mm):

:

Timezone

▼

☒ **Daylight saving time**

Figure 78

In this screen it's possible to change date, hour and Timezone.

Energy Management

Energy Management

This page allows Datalogger and communication devices energy management. The communication device are powered from Datalogger on "V OUT". Selecting "Timed" in "Datalogger (Switch On)" field, Datalogger will work in energy saving mode. Selecting "Timed" in "Communication Device Power Supply (V OUT)" field the communication device will be powered only when necessary (acquisition sending, alarm notification); in case is "Always ON" is selected at 00:00 the power will be cut off for a few seconds to allow the reset of the device. NOTE: After changing "Datalogger (switch on)" and/or "Communication Device Power Supply (V OUT)" a reboot is required to apply the changes

Datalogger (Switch On):

Always on

Communication Device Power Supply (V OUT):

Always On

Display Timeout [min]:

1

Logout (for Always ON and Timed) and LAN Switch Off (only for Timed) [min]:

30

Save Changes

Cancel

Figure 79

This page is about Energy Management.

OM-240 can work in 2 modes:

Always On: the datalogger does not turn off itself to save energy, Ethernet connection is available.

Timed: The datalogger turns off itself, waking up few minutes before acquisition starting.

VOOUT port can be kept always on, or timed.

Info

This page contains information about firmware, web, bootloader and model. Note this parameters in case of assistance enquiry.

CHARTS

Overview

OM240 is provided with a simple tool to generate Charts. It's available on request and need to be activated with a Purchased Key. Contact your dealer for more information.

It's possible to export data and save charts as pdf, png or vector files.

Activation

In order to activate charts, you have to buy a key from dealer. Load Data Monitor -> Charts page and insert the key in the right field and click Submit button.

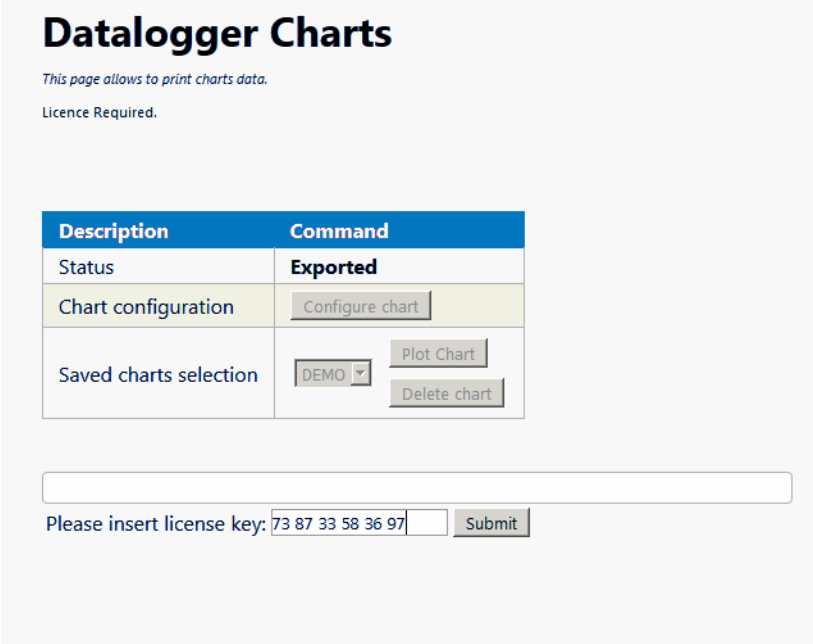


Figure 80

Setup and Use

From the Web Server pages go in “Data Monitor” and then click “Charts”. This screen will be loaded.

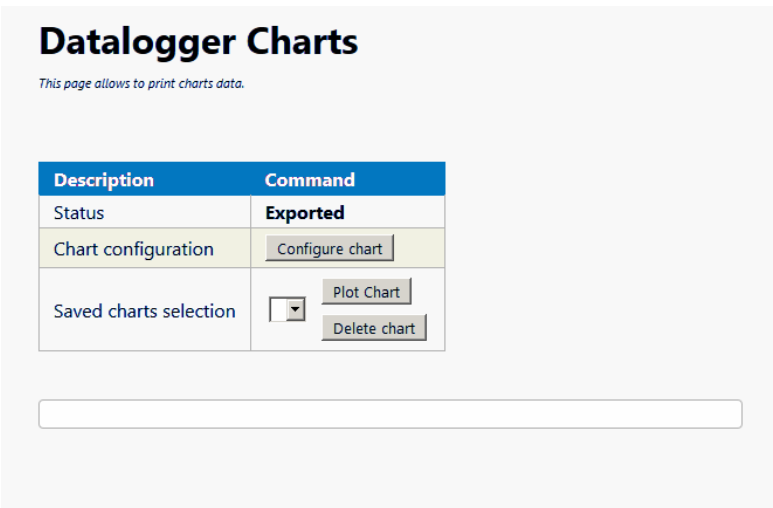


Figure 81

Figure 28

No chart is available at this time, and we need to create one.

Click on “Configure chart” to proceed.

The next screen will ask for Start and Stop date, and you will need a Logarithmic scale (Log scale check) to allow different unit channels to fit the same chart and be readable.

Chart Configuration - Mozilla Firefox

192.168.1.169/code/inputchartdatetime.html

Chart date configuration

This page allows to configure start and stop date for chart plotting.

Description	Parameters
Start date	2017/06/29 16:55 <input type="checkbox"/> Stone age
Stop date	2017/06/30 16:55 <input type="checkbox"/> Now
Log scale	<input type="checkbox"/>

Quit Next

Figure 82

Click Next to proceed.

Sensor select screen allows channels selection, so you choose which channel(s) you want to include in the chart. One or more sensors should be selected to go further on.

Axis selection create up to 3 vertical axis related to that channel. If different scales are presents, this solves readability troubles.

Configuration Chart to Plot - Mozilla Firefox

192.168.1.169/code/inputchartform.html

Sensor select

This page allows to select sensors to plot.

Analog Mux 1

Plottable sensors	Sensors to plot	Axis selection	Color	Marker
AN_0002_A AN_0003_A	AN_0001_A	axis 1	Orange	<input type="checkbox"/>

Back Next

Figure 83

Color window let the user select the color of that channels. A full palette is available.

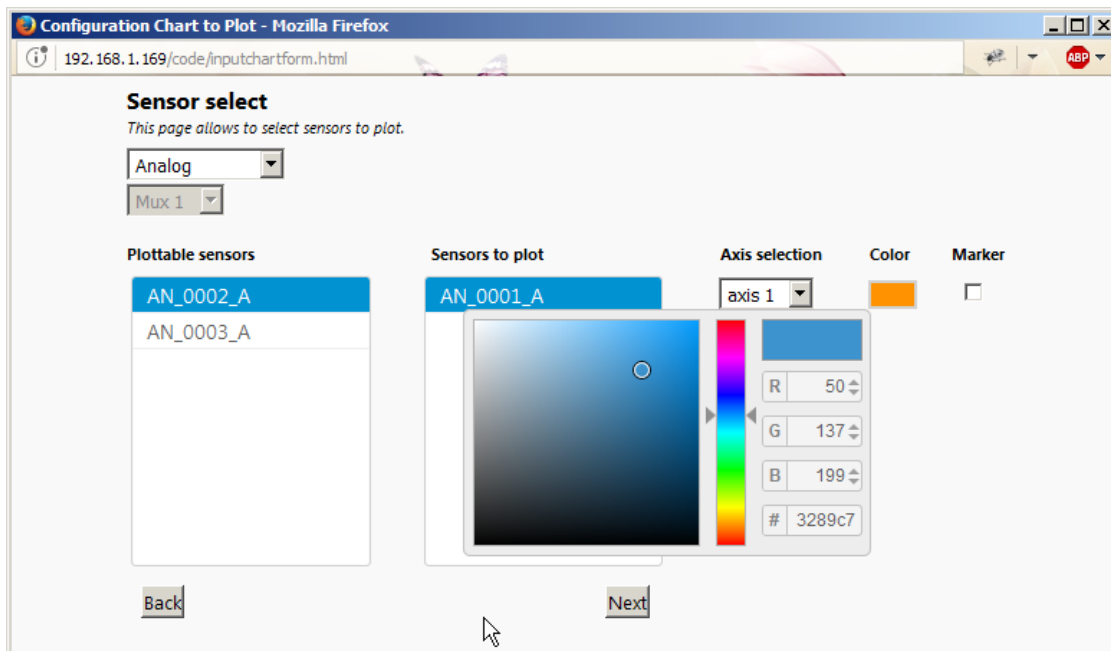


Figure 84

Marker checkbox, will put markes points on the charts as shown here (AN_0001 has Marker checked, other channels instead do not).

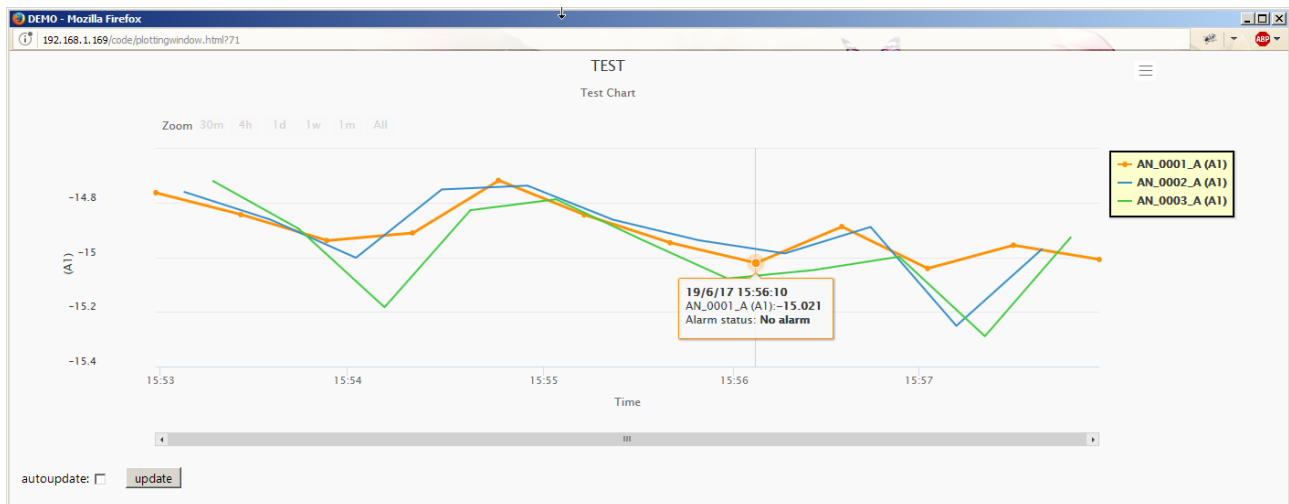


Figure 85

Click Next to go on last configuration screen.

Here it is possible to choose Chart's Title, Subtitle, Description and Name.

Title Chart Configuration - Mozilla Firefox

192.168.1.169/code/inputcharttitle.html

Title/subtitle
This page allows to configure a chart title or subtitle.

Description	Values
Chart title	Test chart
Chart subtitle	chart subtitle
Chart description	Chart used for demo purpose
Chart Name (required)	DEMO

[Back](#) [Plot data](#)

Figure 86

Click "Plot data" to load the chart.

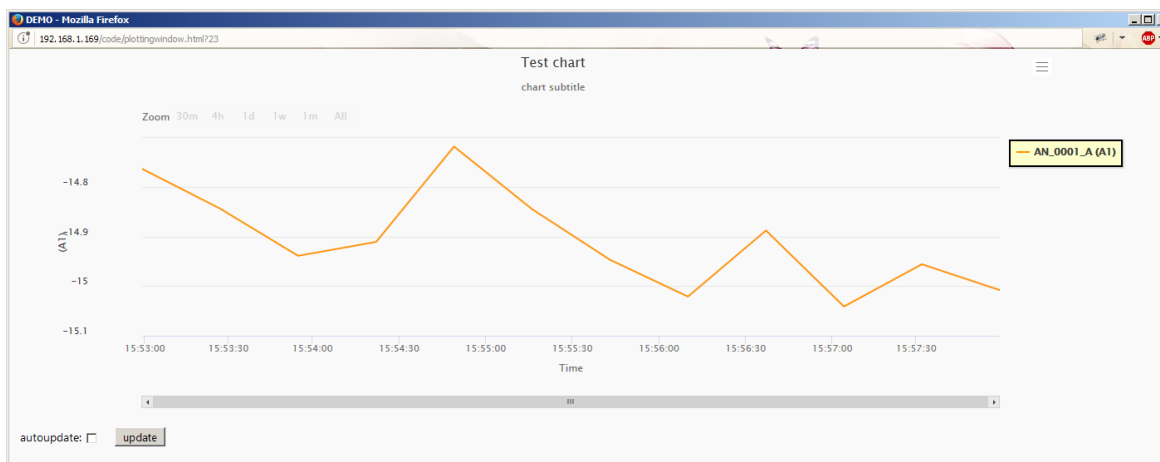


Figure 87

From this screen it's possible to print or download the chart:

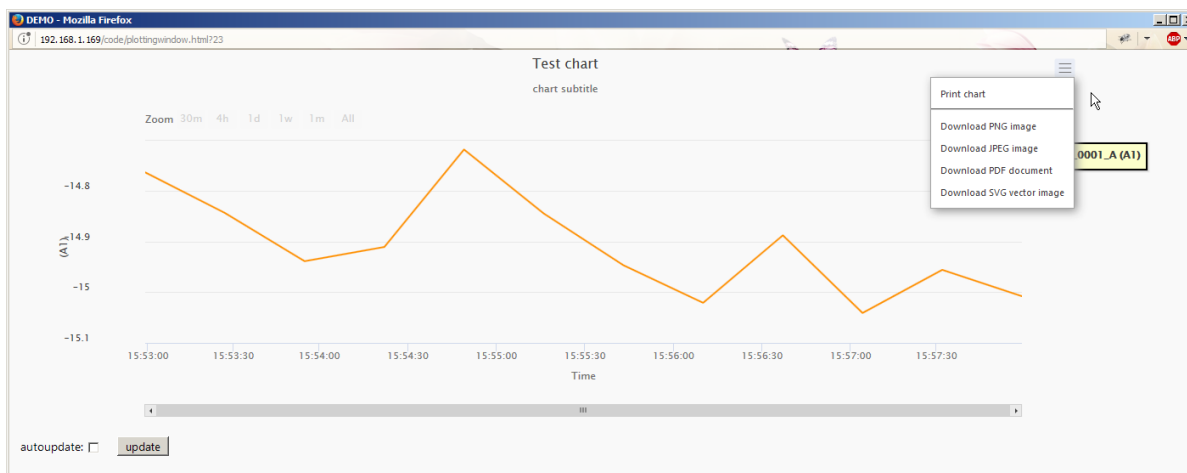


Figure 88

You can now select the new chart from “Saved charts selection” and Plot every time you need. It can be autoupdated after every new acquisition event by checking autoupdate flag, or manually updated with “update” button, in bottom left area of the window.

Datalogger Charts

This page allows to print charts data.

Description	Command
Status	Exported
Chart configuration	<button>Configure chart</button>
Saved charts selection	<div> <div>DEMO</div> <div>DEMO</div> </div> <div> <div>Plot Chart</div> <div>Delete chart</div> </div>

Figure 89

MODBUS TCP (SCADA INTEGRATION)

Overview

Modbus ADU (application data unit) is sent in form of TCP packets. All Modbus TCP ADU are sent via TCP to registered port 502.

Modbus over TCP allows OM-240 integration in LabVIEW and SCADA systems. By reading holding registers, it's possible to gather all sensors data (analog, smartmodbus, multiplexers, digital inputs), events and alarm, datalogger status and information.

- It's possible to read sensor's alarm status.
- By integrating OM-240 in a SCADA, industrial plant remote monitoring and logging are possible without the need on-site visits.
- Maintenance costs are reduced through centralized control and monitoring to minimize downtime.
- Centralized alarms to improve operational effectiveness.
- Data could be available in mobility (depending on used SCADA).

COMMUNICATION

Communication Bus

Communication bus for this module is **Ethernet** interface.

Port used for **TCP** communication is **502 (Modbus TCP Standard Port)**

Modbus function to use for registry reading is **ReadHoldingRegister**.

Measure Register

For each sensor (analog, digital, multiplexers and virtual channels), 16 registers will be exported. Input A's last acquired measure (Offset 0-1), input b (Offset 2-3), sensor's temperature (Offset 4-5), Acquisition's timestamp (Offset 6-7-8-9-10-11-12-13-14) and different flags to show acquisition status and alarm status (Offset 15).

Measures will be communicated in float IEEE754 standard.

Endianness can be user configured by writing 0-1-2-3 values into configuration register at 0x5000 address.

Following table will represent 4 endianless configurations:

IEEE754 = AA:BB:CC:DD

AA = MSB

DD = LSB

Configuration=0 (**default**)

AA	BB	CC	DD
MSB Modbus address 0	LSB Modbus address 0	MSB Modbus address 1	LSB Modbus address 1

Configuration=1

BB	AA	DD	CC
MSB Modbus address 0	LSB Modbus address 0	MSB Modbus address 1	LSB Modbus address 1

Configuration=2

CC	DD	BB	AA
MSB Modbus address 0	LSB Modbus address 0	MSB Modbus address 1	LSB Modbus address 1

Configuration=3

DD	CC	AA	BB
MSB Modbus address 0	LSB Modbus address 0	MSB Modbus address 1	LSB Modbus address 1

Timestamp details

Timestamp is composed by 9 registers, with offset 6 (MSB) to 15 (LSB). Timestamp is an ASCII string 18 bytes long, in the following format: “dd/mm/yy hh:mm:ss”

Flag's Register

Flag's register is mapped as it follows:

BIT	Content
0	Sensor acquired
1	A valid Input
2	B valid Input
3	Valid Temp input
4	A alarm Input
5	B alarm Input
6	Temp alarm Input

Sensor Acquired

This register is set to 1 when sensor is acquired and a new data is available. SCADA (or Modbus Master) reads the updated register and reset it to 0 by using Coils Functions. In this way the system is ready to note the presence of a new acquisition.

This BIT is also accessible through read/write coils functions.

Coils are mapped on flag "Sensor Acquired" having referral to base address of each sensor.

To obtain Coil address of a sensor, Use the following formula:

Coil Address = Base Address/10

Base Address computation will be shown in next pages.

Example 1

Channel: CH4

Base Address: 30

Coil Address: 3

Example 2

Channel: DIG2

Base Address: 90

Coil Address: 9

By using Coil functions, Modbus Master will be able to read the entire Coil Vector (858 sensors) in a single Modbus transaction, to understand acquired sensors and to read only updated measures, without the need to read the 10 registers block every time.

Input X Valid

It indicates if matching Inputs are valid or not.

If sensor is configured as Volt 1CH, registers status will be:

- Input A Valid: 1
- Input B Valid: 0
- Input temp Valid: 0

For a digital single channel sensor, registers status will be:

- Input A Valid: 1
- Input temp Valid: 1
- Input B Valid: 0

Input X Alarm

It indicates if matching inputs are in alarm.

REGISTER MAP

General

All this registers are read-only.

Only "Sensor Acquired" BIT is read-write, using Write single / multiple coils.

Analog Sensors Locations

Register Address (dec)	Description	Sensor
0-1	MSB-LSB Input A LOCAL CH1	CH1
2-3	MSB-LSB Input B LOCAL CH1	CH1
4-5	MSB-LSB Temperature LOCAL CH1	CH1
6-14	Timestamp acquisition LOCAL CH1	CH1
15	Flags LOCAL CH1	CH1
16-17	MSB-LSB Input A LOCAL CH2	CH2
18-19	MSB-LSB Input B LOCAL CH2	CH2
20-21	MSB-LSB Temperature LOCAL CH2	CH2
22-30	Timestamp acquisition LOCAL CH2	CH2
31	Flags LOCAL CH2	CH2
...		
...		
...		
...		
112-113	MSB-LSB Input A LOCAL CH8	CH8
114-115	MSB-LSB Input B LOCAL CH8	CH8
116-117	MSB-LSB Temperature LOCAL CH8	CH8
118-126	Timestamp acquisition LOCAL CH8	CH8
127	Flags LOCAL CH8	CH8

Digital Sensors Locations

BASE_DIG+0 -	MSB-LSB Input A DIGITAL 1	DIG1
BASE_DIG+1		
BASE_DIG+2 -	MSB-LSB Input B DIGITAL 1	DIG1
BASE_DIG+3		

BASE_DIG+2 - BASE_DIG+3	MSB-LSB Input B DIGITAL 1	DIG1
BASE_DIG+4 - BASE_DIG+5	MSB-LSB Temperature DIGITAL 1	DIG1
BASE_DIG+6 - BASE_DIG+14	Timestamp acquisition DIGITAL 1	DIG1
BASE_DIG+15	Flags DIGITAL 1	DIG1
...
...
...
BASE_DIG+4048 - BASE_DIG+4049	MSB-LSB Input A DIGITAL 254	DIG254
BASE_DIG+4050 - BASE_DIG+4051	MSB-LSB Input B DIGITAL 254	DIG254
BASE_DIG+4052 - BASE_DIG+4053	MSB-LSB Temperature DIGITAL 254	DIG254
BASE_DIG+4054 - BASE_DIG+4062	Timestamp acquisition DIGITAL 254	DIG254
BASE_DIG+4063	Flags DIGITAL 254	DIG254

Multiplexers Sensors Locations

BASE_MUX+0 - BASE_MUX+1	MSB-LSB Input A MUX 1- CH1	MUX1 - CH1
BASE_MUX+2 - BASE_MUX+3	MSB-LSB Input B MUX 1- CH1	MUX1 - CH1
BASE_MUX+4 - BASE_MUX+5	MSB-LSB Temperature MUX 1- CH1	MUX1 - CH1
BASE_MUX+6 - BASE_MUX+14	Timestamp acquisition MUX 1- CH1	MUX1 - CH1
BASE_MUX+15	Flags MUX 1- CH1	MUX1 - CH1

...
...
...
BASE_MUX+496 - BASE_MUX+497	MSB-LSB Input A MUX 1- CH32	MUX1 - CH32
BASE_MUX+498 - BASE_MUX+499	MSB-LSB Input B MUX 1- CH32	MUX1 - CH32
BASE_MUX+500 - BASE_MUX+501	MSB-LSB Temperature MUX 1- CH32	MUX1 - CH32
BASE_MUX+502 - BASE_MUX+510	Timestamp acquisition MUX 1- CH32	MUX1 - CH32
BASE_MUX+511	Flags MUX 1- CH32	MUX1 - CH32
BASE_MUX+512 - BASE_MUX+513	MSB-LSB Input A MUX 2- CH1	MUX2 - CH1
BASE_MUX+514 - BASE_MUX+515	MSB-LSB Input B MUX 2- CH1	MUX2 - CH1
BASE_MUX+516 - BASE_MUX+517	MSB-LSB Temperature MUX 2- CH1	MUX2 - CH1
BASE_MUX+518 - BASE_MUX+526	Timestamp acquisition MUX 2- CH1	MUX2 - CH1
BASE_MUX+527	Flags MUX 2- CH1	MUX2 - CH1
...
...
...	MUX3	MUX3
...	MUX4	MUX4
...

...
...	MUX15 CH1	MUX15 - CH1
...
BASE_MUX+8176 - BASE_MUX+8177	MSB-LSB Input A MUX_16 - CH_32	MUX16 - CH32
BASE_MUX+8178 - BASE_MUX+8179	MSB-LSB Input B MUX_16 - CH_32	MUX16 - CH32
BASE_MUX+8180 - BASE_MUX+8181	MSB-LSB Temperature MUX_16 - CH_32	MUX16 - CH32
BASE_MUX+8182 - BASE_MUX+8190	Timestamp acquisition MUX_16 - CH_32	MUX16 - CH32
BASE_MUX+8191	Flags MUX_16 - CH_32	MUX16 - CH32

Digital Inputs Locations

BASE_DIN+0 - BASE_DIN+1	MSB-LSB Input A DigIn1	DigIn1
BASE_DIN+2 - BASE_DIN+3	MSB-LSB Input B DigIn1	DigIn1
BASE_DIN+4 - BASE_DIN+5	MSB-LSB Temperature DigIn1	DigIn1
BASE_DIN+6 - BASE_DIN+14	Timestamp acquisition DigIn1	DigIn1
BASE_DIN+15	Flags DigIn1	DigIn1
BASE_DIN+16 - BASE_DIN+17	MSB-LSB Input A DigIn2	DigIn2
BASE_DIN+18 - BASE_DIN+19	MSB-LSB Input B DigIn2	DigIn2
BASE_DIN+20 - BASE_DIN+21	MSB-LSB Temperature DigIn2	DigIn2

Virtual Channels Locations

BASE_DIN+22 - BASE_DIN+30	Timestamp acquisition DigIn2	DigIn2
BASE_DIN+31	Flags DigIn2	DigIn2
BASE_VIRT+0 - BASE_VIRT+1	MSB-LSB Input A Script1 Ch1	Script1 - Ch1
BASE_VIRT+2 - BASE_VIRT+3	MSB-LSB Input B Script1 Ch1	Script1 - Ch1
BASE_VIRT+4 - BASE_VIRT+5	MSB-LSB Temperature Script1 Ch1	Script1 - Ch1
BASE_VIRT+6 - BASE_VIRT+14	Timestamp acquisition Script1 Ch1	Script1 - Ch1
BASE_VIRT+15	Flags Script1 Ch1	Script1 - Ch1
BASE_VIRT+16 - BASE_VIRT+17	MSB-LSB Input A Script1 Ch2	Script1 - Ch2
BASE_VIRT+18 - BASE_VIRT+19	MSB-LSB Input B Script1 Ch2	Script1 - Ch2
BASE_VIRT+20 - BASE_VIRT+21	MSB-LSB Temperature Script1 Ch2	Script1 - Ch2
BASE_VIRT+22 - BASE_VIRT+30	Timestamp acquisition Script1 Ch2	Script1 - Ch2
BASE_VIRT+31	Flags Script1 Ch2	Script1 - Ch2
...
...
...
BASE_VIRT+1264 - BASE_VIRT+1265	MSB-LSB Input A Script5 Ch16	Script5 - Ch16
BASE_VIRT+1266 - BASE_VIRT+1267	MSB-LSB Input B Script5 Ch16	Script5 - Ch16
BASE_VIRT+1268 - BASE_VIRT+1269	MSB-LSB Temperature Script5 Ch16	Script5 - Ch16

BASE_VIRT+1270 - BASE_VIRT+1278	Timestamp acquisition Script5 Ch16	Script5 - Ch16
BASE_VIRT+1279	Flags Script5 Ch16	Script5 - Ch16

SENSORS BASE ADDRESS

Following formulas will show how to get every connected sensor's base address.

Local Sensors (Analog)

$\text{BASE_ANALOG} = 0$

$\text{Channel_ADDRESS} = (\text{Channel}-1) \times 16 + \text{BASE_ANALOG}$

8CH Channel = [1;8]

24CH Channel = [1;24]

Digital Sensors (Smart Modbus)

	8CH	24CH
BASE_128 DIG	128	384

$\text{Channel_ADDRESS} = (\text{Channel}-1) \times 16 + \text{BASE_DIG}$

Channel = [1;254]

Multiplexer Sensors

	8 CH	24 CH
BASE_MUX	4224	4480

$\text{Channel_ADDRESS} = ((\text{Address}-1) \times 32 \times 16) + ((\text{Channel}-1) \times 16) + \text{BASE_MUX}$

Address = [1;16], Channel = [1;24]

Digital Inputs

	8 CH	24 CH
BASE_DIN	12416	12672

$\text{Channel_ADDRESS} = ((\text{Channel}-1) \times 16) + \text{BASE_DIN}$

Channel = [1;2]

Virtual Channels

	8 CH	24 CH
BASE_VIRT	12448	12704

$\text{Channel_ADDRESS} = ((\text{Script}-1)*16*16) + ((\text{Channel}-1)*16) + \text{BASE_VIRT}$
 $\text{Script} = [1;5], \text{Channel} = [1;16]$

Event Log Registers

This register set handles Event Log status.

For every log, timestamp, and code is exposed.

This register set starts at Modbus address 0x3800 (14336 DEC).

Register	Description	
14336 - 14344	Timestamp Event n	Event n
14346	Event Code n	Event n
14347-14410	Event String n	Event n
14411 – 14419	Timestamp Event n-1	Event n-1
14421	Event Code n -1	Event n-1
14422-14485	Event String n -1	Event n-1
...
...
...
15816 – 15824	Timestamp Event n -19	Event n-19
15826	Event Code n -19	Event n-19
15827-15890	Event String n -19	Event n-19

STATUS REGISTERS

This register exposes information about the datalogger. Base Address for this register is 0x4000 (16384 DEC)

It can be read in every way, as there is no bond on alignments or number of registers to read.

Register (dec)	Description
16384	Datalogger status
16385	Next acquisition MSB
16386	Next acquisition
16387	Next acquisition LSB
16388	Firmware version MSB
16389	Firmware version LSB
16390	Model info 1
16391	Model info 2
16392	Model info 3
16393	Model info 4
16394	Model info 5
16395	Model info 6
16396	Model info 7
16397	Model info 8
16398	Model info 9
16399	Model info 10
16400	Model info 11
16401	Model info 12
16402	Serial number 1
16402	Serial number 2
16403	Serial number 3
16404	Serial number 4
16405	Device name 1
16406	Device name 2
16407	Device name 3
16408	Device name 4
16405	Device name 5
16406	Device name 6
16407	Device name 7
16408	Device name 8
16409	External digital input status (LSB) + External digital output status (MSB)

Datalogger Status

This register contains datalogger status.

Register Value	Description
1	Ready
2	Run
3	Stop
4	Configuration
5	Alarm
6	Diagnostic
7	Error
8	Backup

Next Acquisition

This register, composed by 48 bits, exposes next acquisition's timestamp, when the datalogger acquires the next sensor.

Bit	Description
0-5	Seconds (0-59)
6-11	Minutes (0-59)
12-16	Hours (0-23)
17-21	Day (1-31)
22-25	Month (1-12)
26-32	Year (0-99)
33-47	Reserved

Firmware Version

These two registers, composed in the format A.B.CD, expose firmware version loaded on the datalogger

Register	Bits	Description
Firmware version MSB	15-8	A
Firmware version MSB	7-0	B
Firmware version LSB	15-8	C
Firmware version LSB	7-0	D

Letters A, B and C, contain binary value of versions (values from 0 to 99).

Letter D contains, if present, ASCII value of alphanumeric character that could be present at the end of the version string to identify special firmwares. If D is not present, its value will be 0.

Model Info

This register, when chained, forms a 24 character string to identify configured datalogger model.

Chaining should be executed starting from Model info 1 to Model info 12 registers.

Example:

Model info 1 MSB	Model info 1 LSB	Model info 2 MSB	Model info 2 LSB	Model info 3 MSB	Model info 3 LSB
M	A	X	L	O	G

Serial Number

This register, when chained, forms an 8 characters long string to identify datalogger's serial number. Chaining should be executed starting from Serial Number 1 to Serial Number 4 registers.

Example:

Serial num. 1 MSB	Serial num. 1 LSB	Serial num. 2 MSB	Serial num. 2 LSB	Serial num. 3 MSB	Serial num. 3 LSB	Serial num. 4 MSB	Serial num. 4 LSB
1	5	2	1	4	7	9	6

Device Name

This register, when chained, forms a 16 characters string which represents datalogger's name. Chaining must be executed starting from Device name 1 register to Device name 8 register.

Example of Device name register's chaining (Device name: Bridge_1)

Device name 1 MSB	Device name 1 LSB	Device name 2 MSB	Device name 2 LSB	Device name 3 MSB	Device name 3 LSB	Device name 4 MSB	Device name 4 LSB
B	r	i	d	g	e	_	1

External digital input/outputs status

This register contains digital input/output current status.

MSB

It contains external digital output status

LSB

It contains external digital input status

B15	B14	B13	B12	B11	B10	B9	B8	B7	B6	B5	B4	B3	B2	B1	B0
#	#	O6	O5	O4	O3	O2	O1	#	#	I6	I5	I4	I3	I2	I1

TROUBLESHOOTING

In case of OM-240 malfunctioning or irregular behavior, read the following pages and carry out the indicated attempts before contacting our Assistance Department.

BASIC TROUBLESHOOTING

This paragraph provides basic OM-240 troubleshooting tips.

ARE YOU UP-TO-DATE?

1. Verify that you installed the last version of firmware
2. Verify that you have an adequate power supply (from photovoltaic module or external power supply) on the V IN clamp of the OM-240; check if the voltage is within the range accepted by the OM-240 and stable.

IF THE OM-240 DOESN'T TURN

ON. Follow this step, testing after each:

1. remove power supply on V IN clamp for 10 seconds and try to reconnect.
2. verify the presence of jumper cables on the "PWR CONFIG" clamp
3. control that the power supply system works, is correctly sized and respects the character-istic declared on datasheet
4. make sure you hadn't set the OM-240 in Timed mode using the webpage "Energy management"

NOTE: if on the display appears TELNET MODE, contact directly OMEGA Assistancetechnical support for assistance.

IF THE OM-240 DISPLAY STOPS RESPONDING

Follow this step, testing after each:

1. remove power supply on V IN clamp for 10 seconds and try to reconnect.

IT IS IMPOSSIBLE TO UPLOAD THE CONFIGURATION

Follow this step, testing after each:

1. on webpage STATUS verify that the OM-240 is in "Config"
2. make sure that the configuration you are trying to upload has been created with the same major release of the firmware on the OM-240.

NOTE: if what is written above is correct, the configuration file could be damaged. In this case, the OM-240 warns with an error message and the file is no more usable. We suggest to repeat the configuration.

IF THE OM-240 STOPS DURING AN ACQUISITION

Follow this step, testing after each:

1. verify the events log and refer to manual “Codes Alarms-Events” to understand the eventual logs
2. verify that the OM-240 is correctly supplied. If the power supply is below the minimum threshold or over the maximum threshold of power supply, the OM-240 blocks every activity in progress;
3. verify the alarm log to identify the problem and refer to manual “Codes Alarms-Events” to understand the eventual logs
4. Verify if in alarm logs there is an “overcurrent” error. In case of overcurrent, the OM-240 stops the acquisition.
5. verify the available memory. In case of full memory, the OM-240 stops the acquisition.

IT IS IMPOSSIBLE TO HAVE ACCESS TO SYS MENU

Follow this step, testing after each::

1. verify that the OM-240 is not acquiring. In this case, wait until the end of the acquisition or go in “DL” menu and select “Stop DL”

IT IS NOT POSSIBLE TO DOWNLOAD DATA ON USB FLASH-DRIVE

Follow this step, testing after each:

1. verify that the USB flash-drive is formatted in FAT32;
2. verify with the PC that the USB flash-drive is read without any errors.
3. try with a different USB flash-drive

LOCAL/REMOTE COMMUNICATION

This paragraph provides OM-240 local communication (from PC through a LAN cable) and remote communication (from PC through internet) troubleshooting tips.

ARE YOU UP TO DATE?

1. Verify that you installed the last version of firmware
2. Verify that you have the correct power supply (from photovoltaic module or external power supply) on the V IN clamp of the OM-240

IF YOU ARE NOT ABLE TO ESTABLISH THE CONNECTION WITH THE OM-240 .

Follow this step, testing after each:

1. remove the power supply on V IN clamp for 10 seconds and try to reconnect.
2. reboot the PC and try to connect
3. make sure you configured appropriately the network card of the PC, that is it is part of the same subnet mask of the OM-240.
4. make sure you are using the correct LAN cable according to the type of network you chose.
5. make sure the OM-240 is not configured in "Timed". In this case the network card remains switched off. It is necessary to turn it on manually from SYS menu.
6. make sure the OM-240 is not used by another user. The OM-240 accepts only one connection at a time.
7. make sure that the last user that logged on the OM-240 had logged out. Otherwise, it is necessary to wait until the automatic log out. This happens after the time configured in page "Energy management" has passed. You could also reboot the OM-240, in order to not wait for the log out.
8. in case of use of remote communication devices (ex: HSPA router connected to the OM-240), remove them and do a test of direct connection between PC and the OM-240. This is necessary in order to exclude problems with communication interfaces.

IF USER CANNOT HAVE ACCESS TO THE OM-240 WITH AN USER Follow this step, testing after each:

1. make sure that the access credentials are correct
2. if you logged out with a user and you are trying to enter again with a different user, delete the browser cache, close and re-open the browser (some browsers are configured in order to memorize passwords)
3. make sure that the last user that logged on the OM-240 had logged out. Otherwise, it is necessary to wait until the automatic log out. This happens after the time configured in page "Energy management" has passed. You could also reboot the OM-240, in order to not wait for the log out.
4. in case of use of remote communication devices (ex: HSPA router connected to OM-240), remove them and do a test of direct connection between PC and OM-240. This is necessary in order to exclude problems with communication interfaces.

THE CONNECTION THROUGH THE OM-240 AND COMPUTER GOES

DOWN. Follow this step, testing after each:

1. be sure that your PC is not set on Energy Saving mode
2. Try to change the LAN cable
3. Try using another LAN port of your PC or using another PC
4. verify that the OM-240 is not in Timed mode. In this case, once ended the timeout time configured in webpage "Energy management", the network card turns off if there isn't any data exchange.

E-MAIL SENDING

ARE YOU UP TO DATE?

1. Verify that you installed the last version of firmware
2. Verify that you have the correct power supply (from photovoltaic module or external power supply) on the V IN clamp of the OM-240

This paragraph provides OM-240 e-mail sending troubleshooting tips.

THE E-MAIL TRANSMISSION INVOLVES DIFFERENT DEVICES. IN THIS DOCUMENT, WE TRY TO DETERMINE WHICH DEVICE COULD CAUSE THE PROBLEM AND THEN WE TRY TO SOLVE IT.

The “system” is composed as follows:

1. OM-240
2. Internet Service Provider (ISP): allows the communication between OM-240 and the e-mail server
3. E-mail Server (ESP): allows to send and to receive e-mails

NOTE: it may be that the ISP (Telecom, Vodafone, AT&T, Verizon, etc.) doesn't coincide with the ESP (Gmail, AOL, etc.)

Resolution

FIRST OF ALL, INSURE WITH YOUR IPSP THAT:

1. The SIM card or your network is enabled to the internet
2. The e-mail transmission is allowed on the used APN or on the used network

SECONDLY, INSURE WITH YOUR ESP THAT:

1. there are no momentary breakdowns on ESP server
2. the username and password of your e-mail account are valid and accepted
3. that the e-mail account you want to use is active

THESE POINTS DO NOT DEPEND ON OMEGA ENGINEERING AND NEED TO BE RESOLVED THROUGH YOUR ISP OR ESP.

If you don't have any problem with the ISP and the ESP, you could proceed looking for causes on the OM-240.

IF THE OM-240 DOESN'T SEND ANY E-MAIL ALTHOUGH IT IS

CONFIGURED. Follow this step, testing after each:

1. verify the events log and refer to manual "Codes Alarms-Events" to understand eventual logs
2. verify that the SIM is properly inserted in its slot into the communication device (HSPA router or 2G modem) or that your network devices are properly configured to permit the e-mail sending (firewall, port, etc)
3. verify that you inserted your SMTP server account correctly ("SMTP Server Configuration" page)
4. verify that the SMTP account is a simple authentication. The OM-240 doesn't support SSL.
5. If you use a communication device base on mobile network, verify that there is a mobile coverage (according to the adopted technology e.g: 2G, 3G or 4G) on the site where the OM-240 is installed.
6. If you use a 2G (GSM/GPRS) modem, verify that there is a good 2G signal where the OM-240 is installed. In some place there is only a 3G or 4G coverage. 2G modem is not compatible with 3G, 4G and CDMA networks.

FTP SERVER SENDING DATA

ARE YOU UP-TO-DATE?

1. Verify that you installed the last version of firmware
2. Verify that you have the correct power supply (from photovoltaic module or external power supply) on the V IN clamp of the OM-240

THIS PARAGRAPH PROVIDES FTP SERVER SENDING DATA TROUBLESHOOTING TIPS.

The FTP transmission involves different devices. In this document, we try to determine which device could cause the problem and then we try to solve it.

The “System” is composed as follows:

1. OM-240
2. Internet Service Provider (ISP): allows the communication between the OM-240 and FTP server
3. server FTP: physical space in which it is possible to memorize files

NOTE: the FTP server could be completely transferred to societies that offer an hosting FTP service. It could also be internal. In this second case, you have to ask for information to your IT manager.

FIRST OF ALL, INSURE WITH YOUR ISP THAT:

1. The SIM card or your network is enabled to the internet traffic through APN
2. The data transmission on FTP server is allowed on the used APN or on the used network

INSURE WITH YOUR SYSTEM ADMINISTRATOR OR WITH THE SOCIETY THAT SUPPLIES THE HOSTING FTP SERVICE THAT:

1. there are no momentary breakdowns on FTP server
2. the username and password of FTP account are valid and accepted
3. the FTP account and the same FTP server that will be used are active

THESE POINTS DO NOT DEPEND ON OMEGA ENGINEERING AND NEED TO BE RESOLVED THROUGH YOUR ISP OR ESP

If you don't have any problem with the ISP and the FTP server, you could proceed looking for causes on the OM-240.

IF THE OM-240 DOESN'T SEND ANY DATA ON FTP SERVER ALSO IF CONFIGURED.

Follow this step, testing after each:

1. verify the events log and refer to manual “Codes Alarms-Events” to understand the possible logs
2. if you use a HSPA router or 2G modem verify that the SIM card is properly inserted in its slot.
3. verify that you have inserted your FTP server account correctly (“Measure log data transfer” page)
4. verify that the FTP server is a basic authentication FTP (for example not MD5, KERBEROS etc.) and that doesn’t utilize any secure layer (for example SSH/SSL, FTPS/SFTP etc.). The OM-240 does not support secure layer and encrypted authentication (encrypted username and password).
5. if you use a mobile device, verify that there is a good coverage on the site where the OM-240 is installed.
6. if you use 2G (GSM/GPRS) modem, verify that there is a good 2G (GSM/GPRS) signal on the site where the OM-240 is installed. In some place there is only a 3G or 4G coverage. 2G modem is not compatible with 3G, 4G and CDMA networks .

MEASURE

ARE YOU UP-TO-DATE?

1. Verify that you installed the last version of firmware
2. Verify that you have the correct power supply (from photovoltaic module or external power supply) on the V IN clamp of the OM-240

This paragraph provides measure instruments troubleshooting tips.

ONE OR MORE VIBRATING WIRE INSTRUMENTS ARE NOT READ.

Follow this step, testing after each:

1. verify the events log and refer to the manual “Codes Alarms-Events” to understand the eventual logs;
2. verify the instrument with a portable OM-240;
3. verify the connection of instruments on the OM-240 inputs;
4. change the parameters “Excitation time” (accepted values from 5 to 100) and “Delay Time” (accepted values from 20 to 100) focusing on this last one;
5. try to contract the parameters “Start Frequency” and “End Frequency” according to the value read with the portable OM-240,
6. consult the reference manual of the instrument

ONE OR MORE ANALOG INSTRUMENTS ARE NOT READ.

Follow this step, testing after each:

1. verify the events log and refer to the manual “Codes Alarms-Events” to understand the eventual logs;
2. verify the instrument with a portable OM-240;
3. verify the connection of instruments on the OM-240 screw clamps;
4. verify that the configured parameters are coherent and correct according to the type of connected instrument (power supply, warm-up time etc)
5. consult the reference manual of the instrument

APPENDIX

APPENDIX A: WIRING SCHEMES

This appendix will show how to connect different sensor types to OM-240 datalogger. Connection schemes are sorted by number of wires (2,4,6 wires).

2 WIRES SENSORS

Current Loop 2 Wires

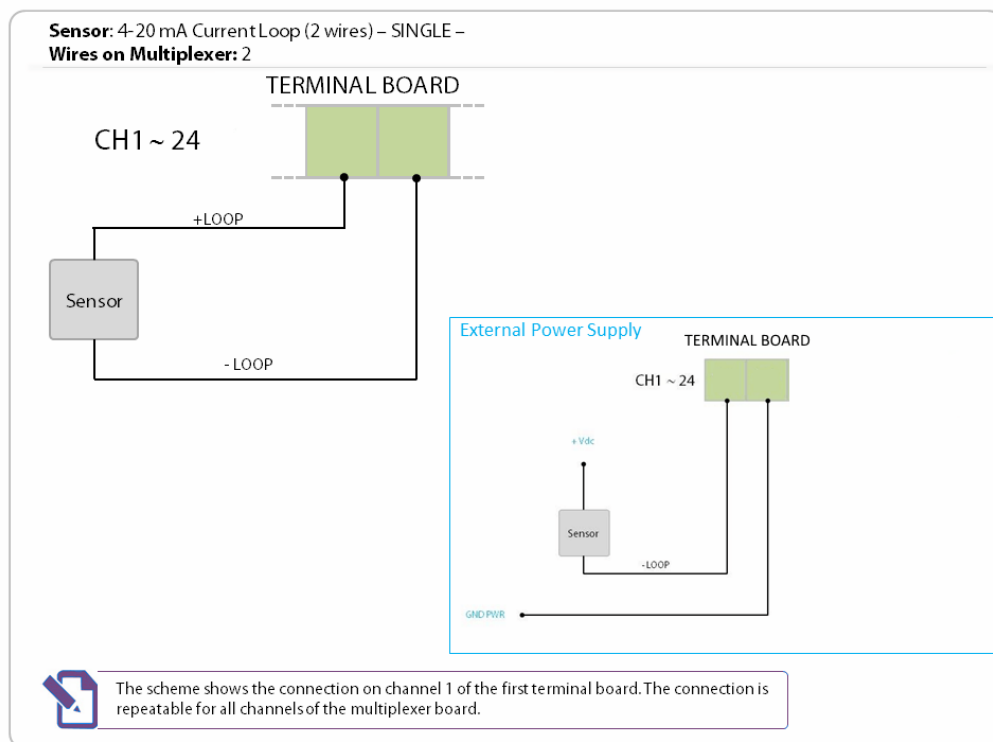


Figure 116

4..20mA Transmitter (External Supply)

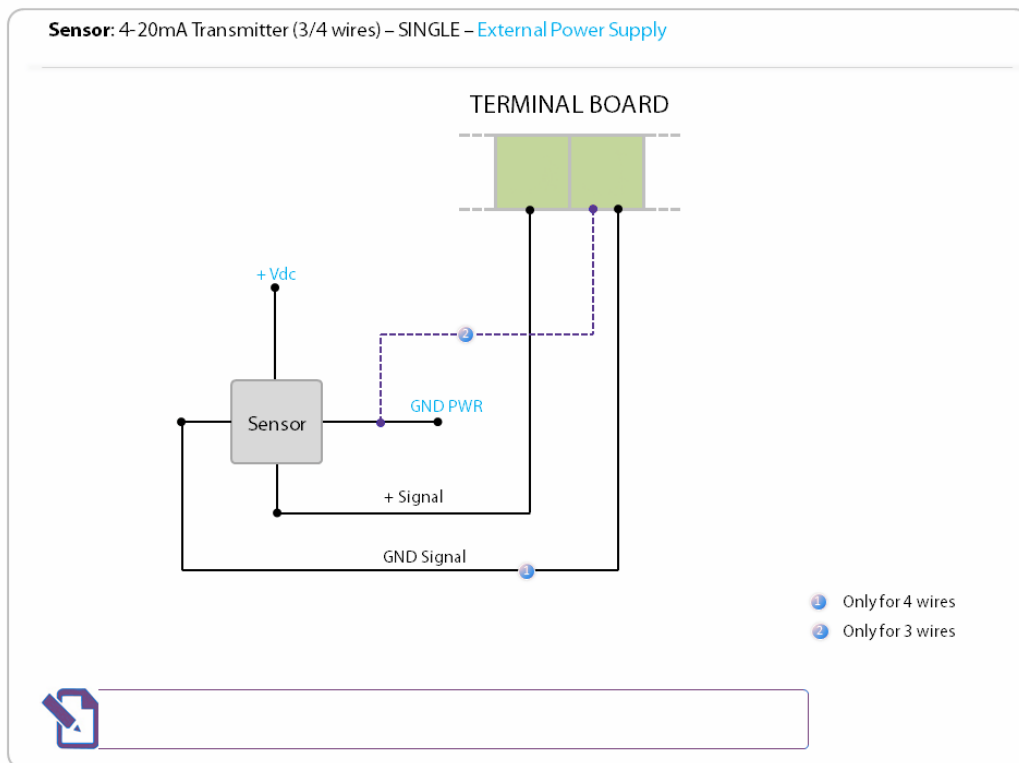


Figure 117

Servo Uni Axial (External Supply)

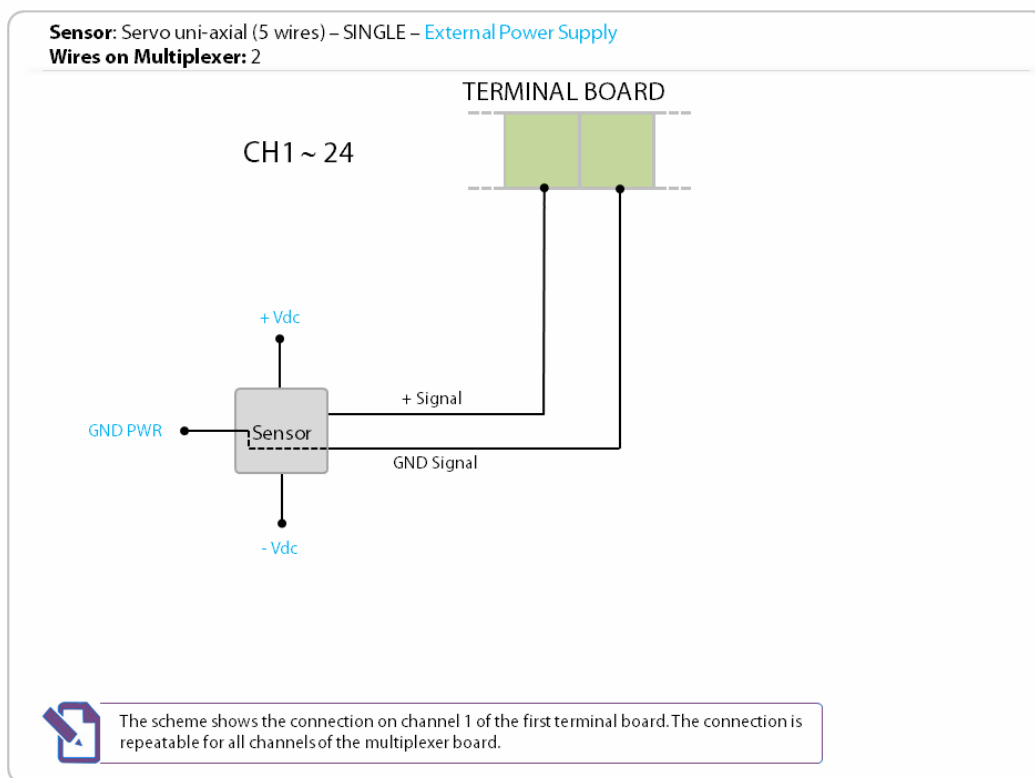


Figure 118

Thermistor

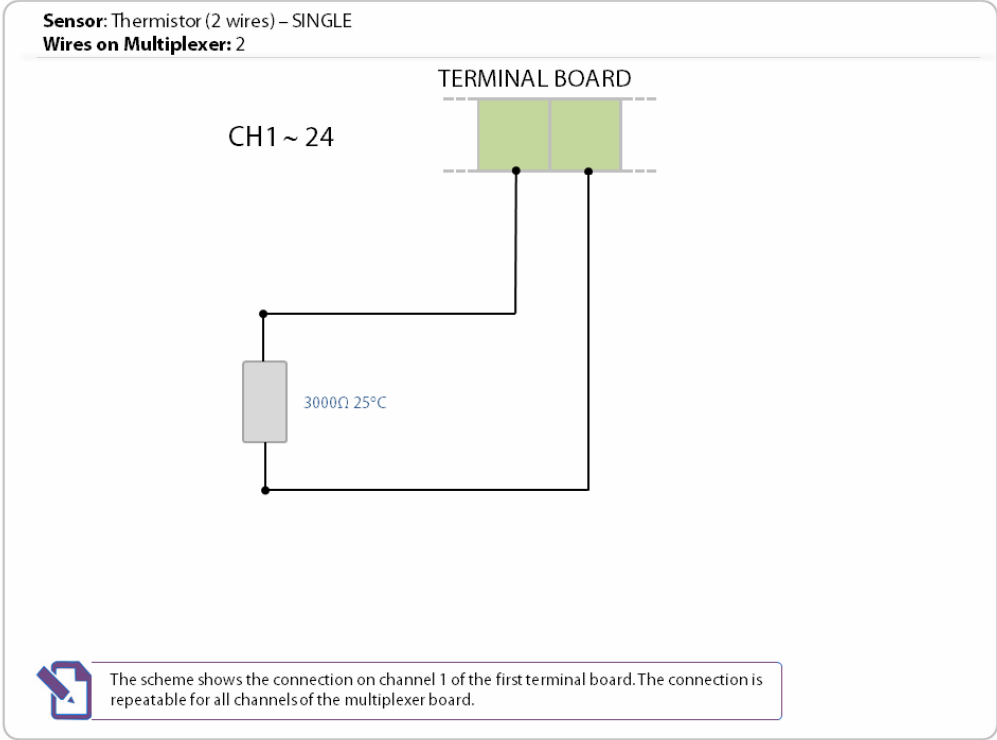


Figure 119

Thermocouple

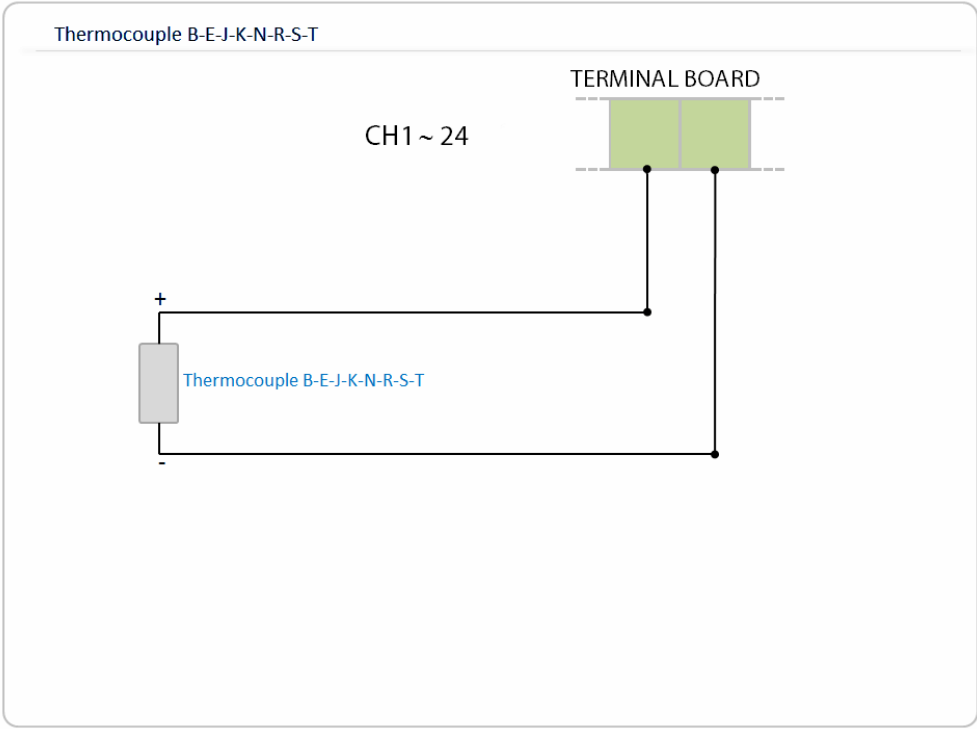


Figure 120

Vibrating Wire

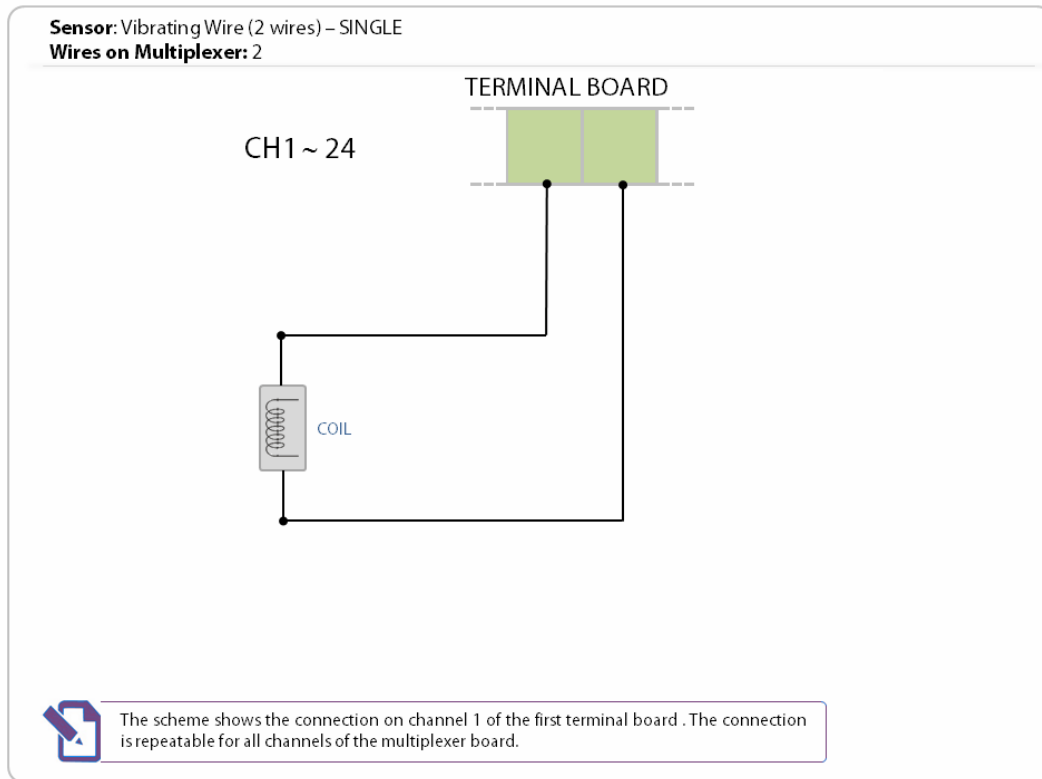


Figure 121

Voltage (External Supply)

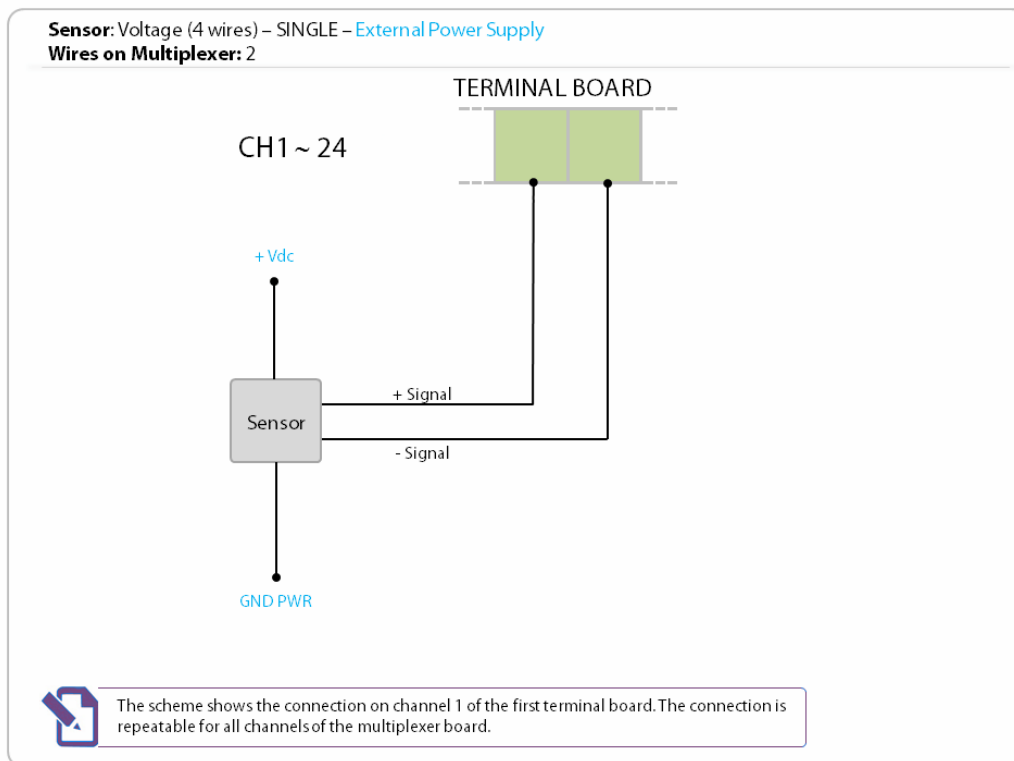


Figure 122

4 Wires

4..20 Transmitter

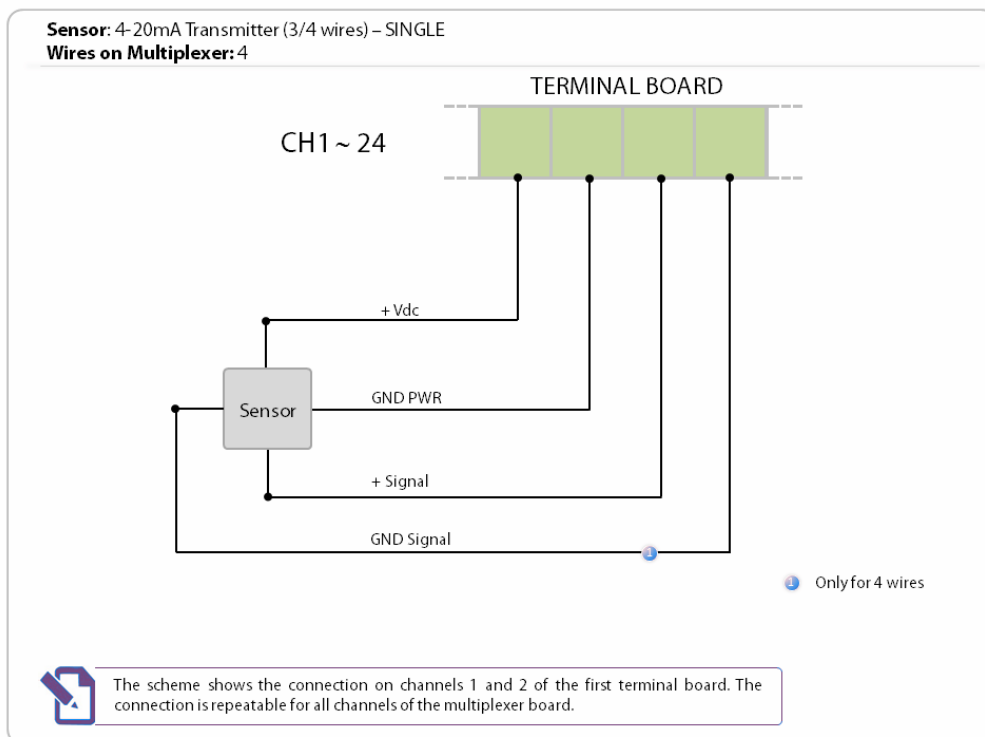


Figure 123

4..20 Transmitter 2 channel (External Supply)

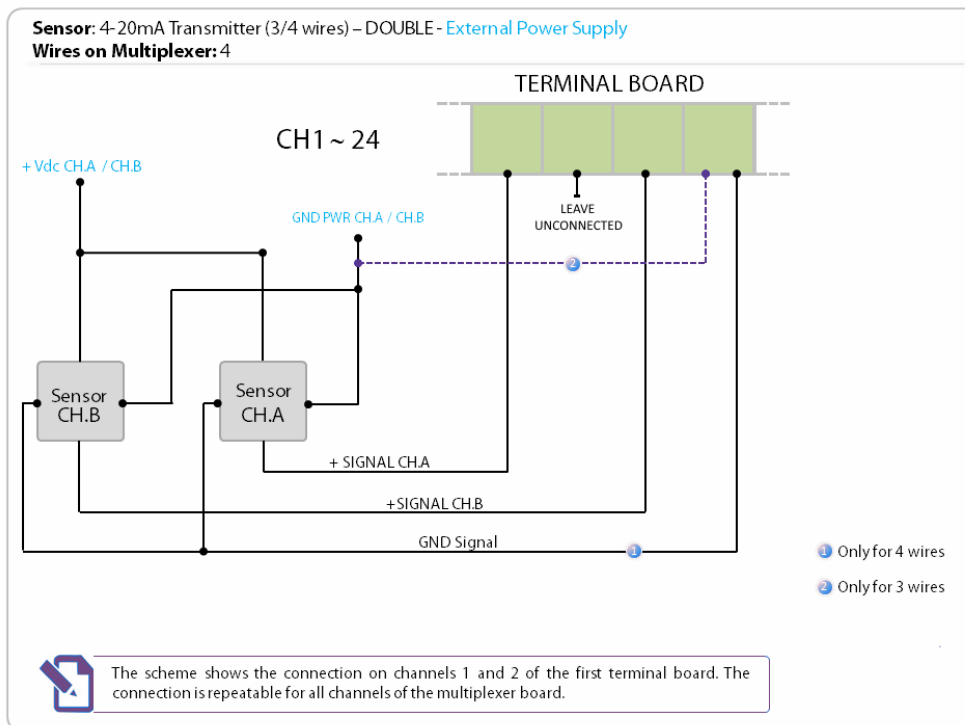


Figure 124

Current Loop 2 Channels (Internal and External Supply)

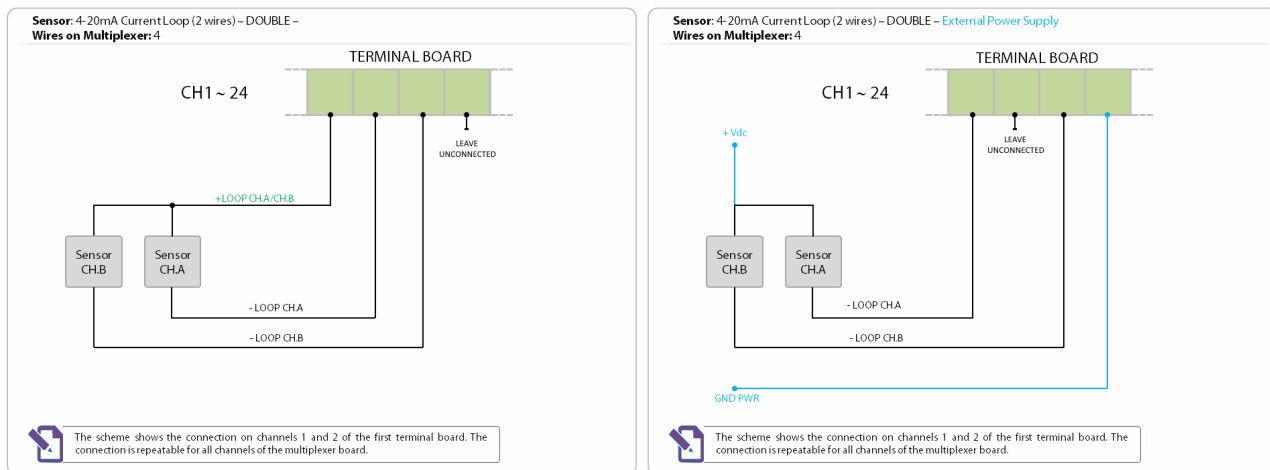


Figure 125

Potenziometer 4 Wires

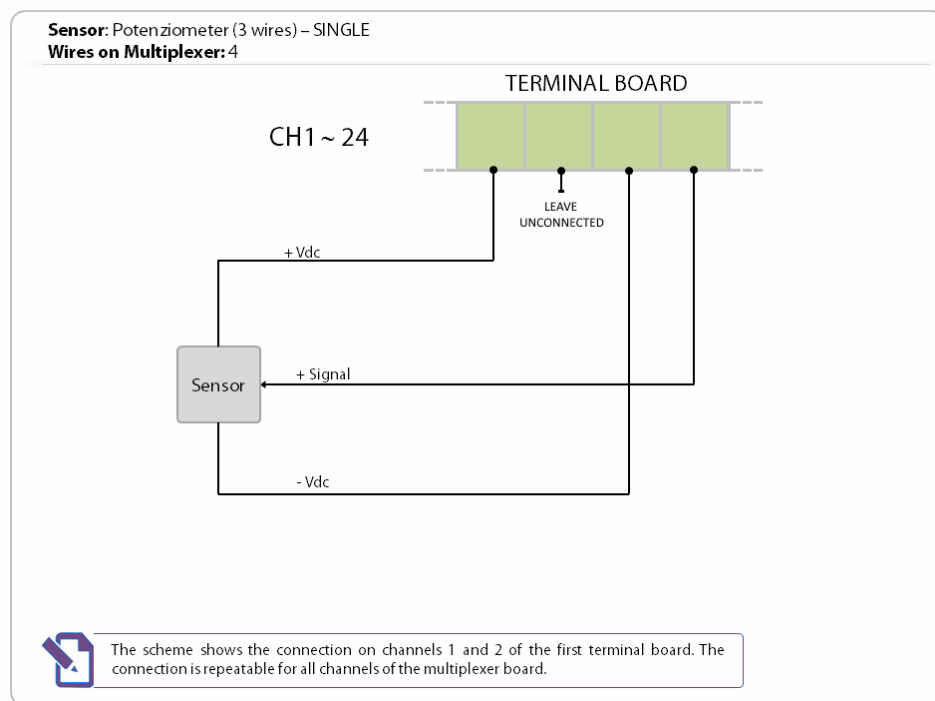


Figure 126

Potenziometer (2 Channel)

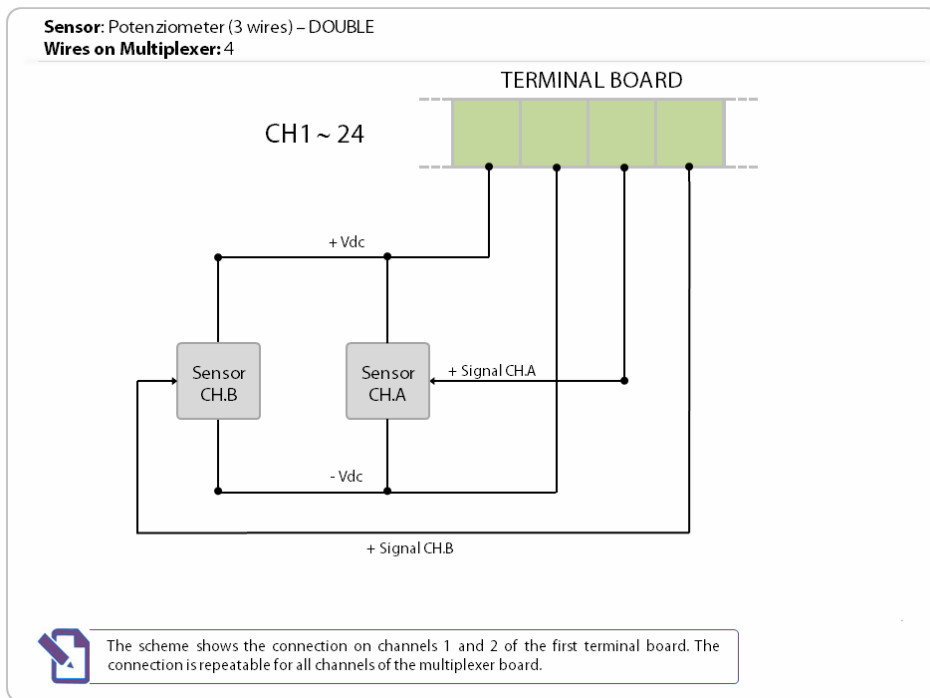


Figure 127

PT100/PT200/PT500/PT1000

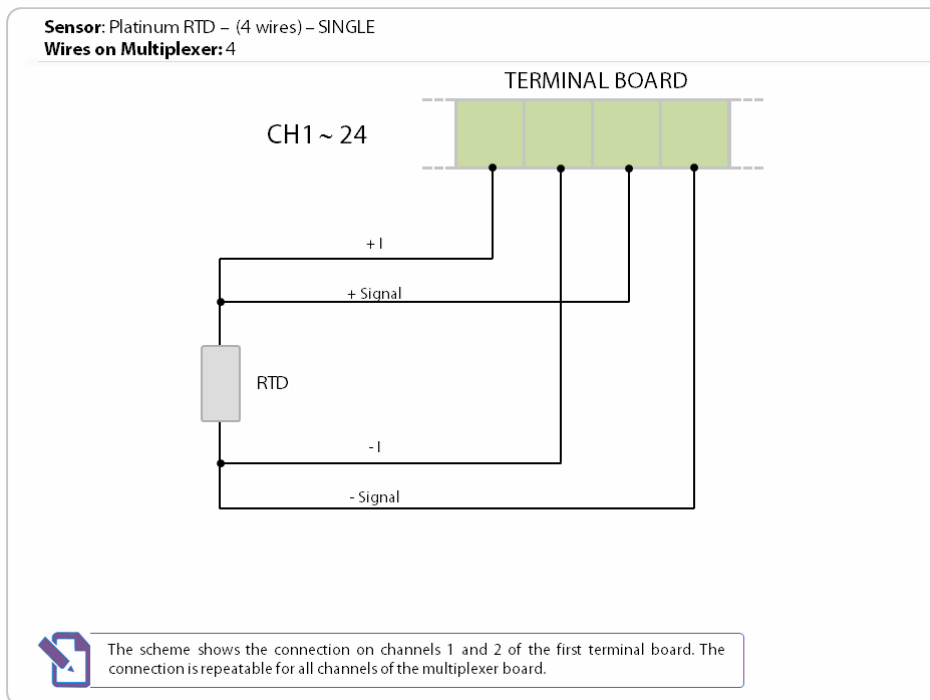


Figure 128

Ratiometric (External Supply)

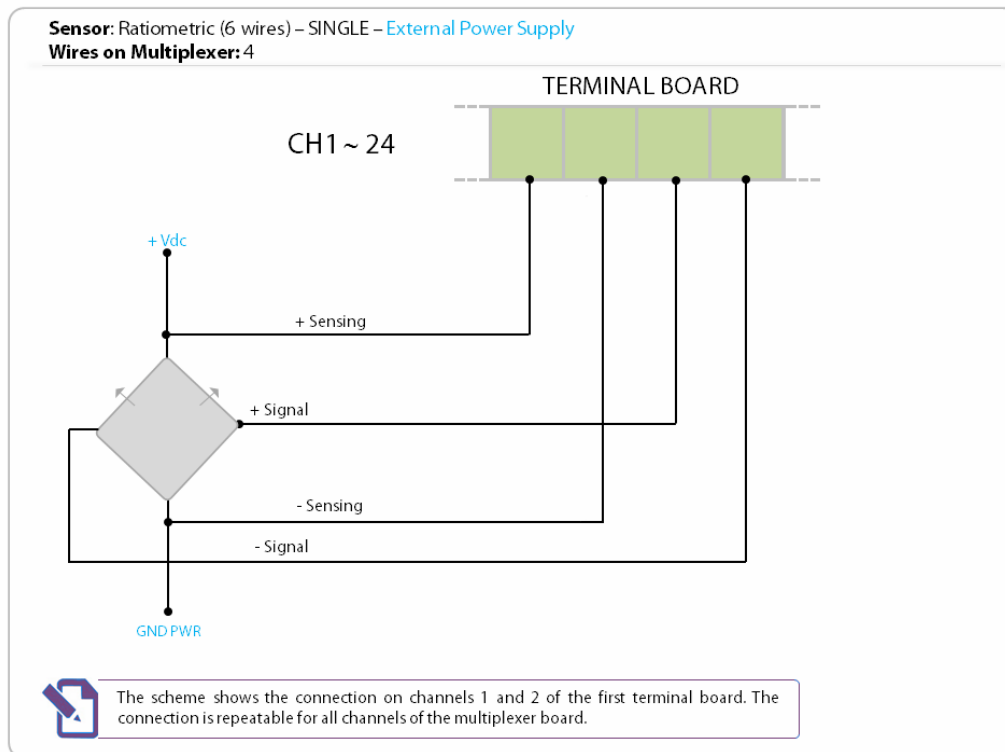


Figure 129

Servo BiAxial (External Supply)

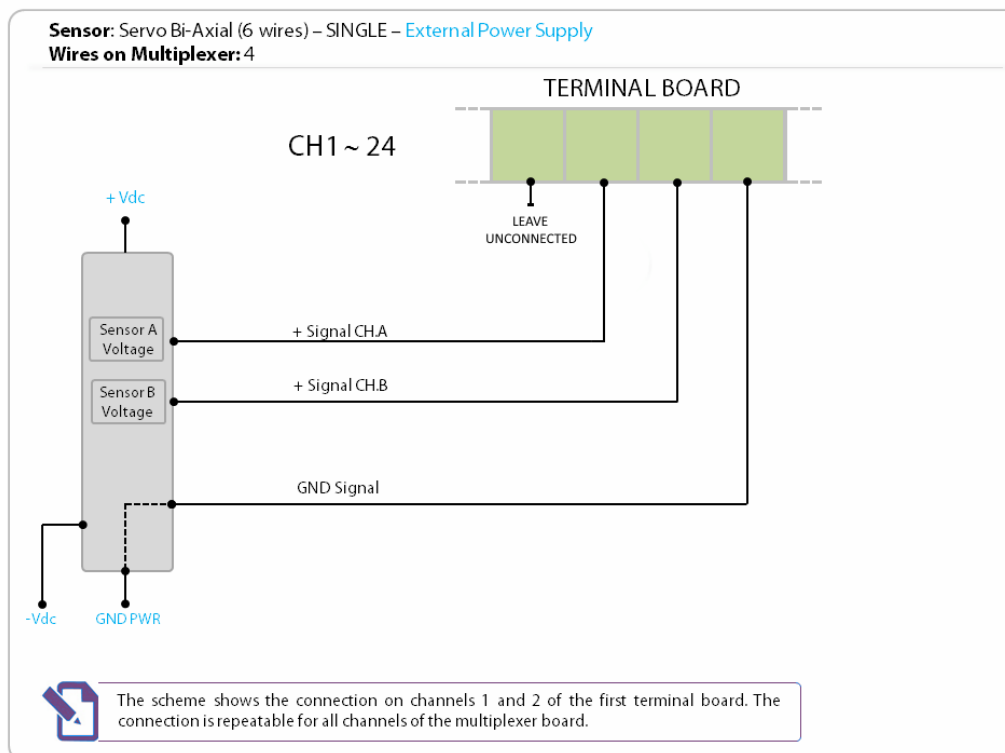


Figure 130

Vibrating Wire with Thermistor (NTC)

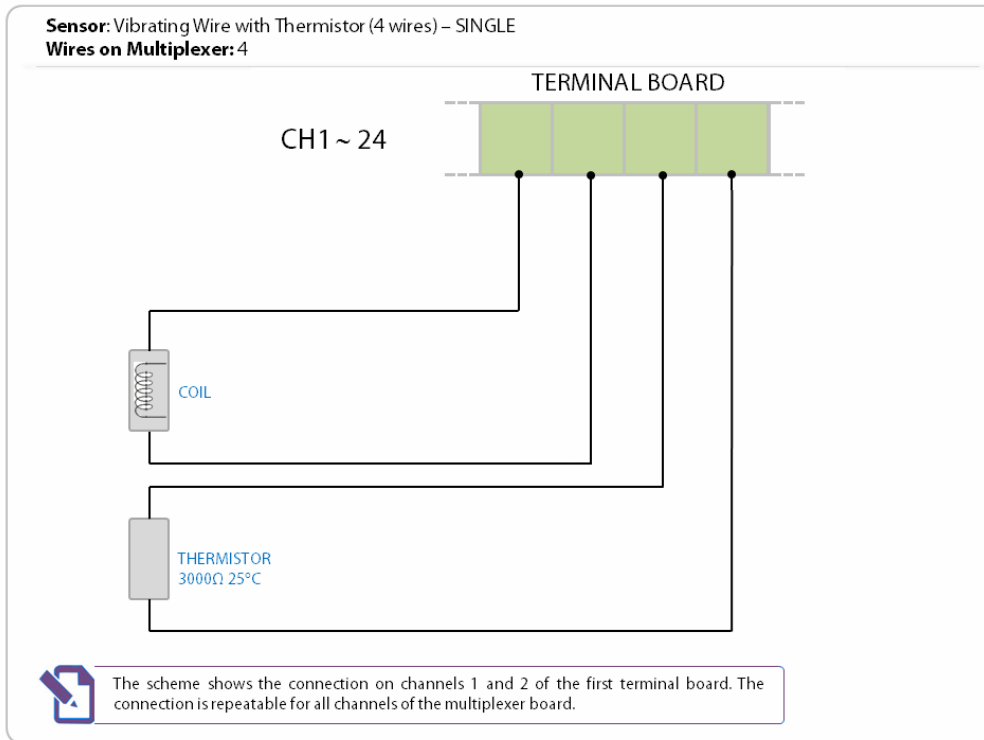


Figure 131

Voltage

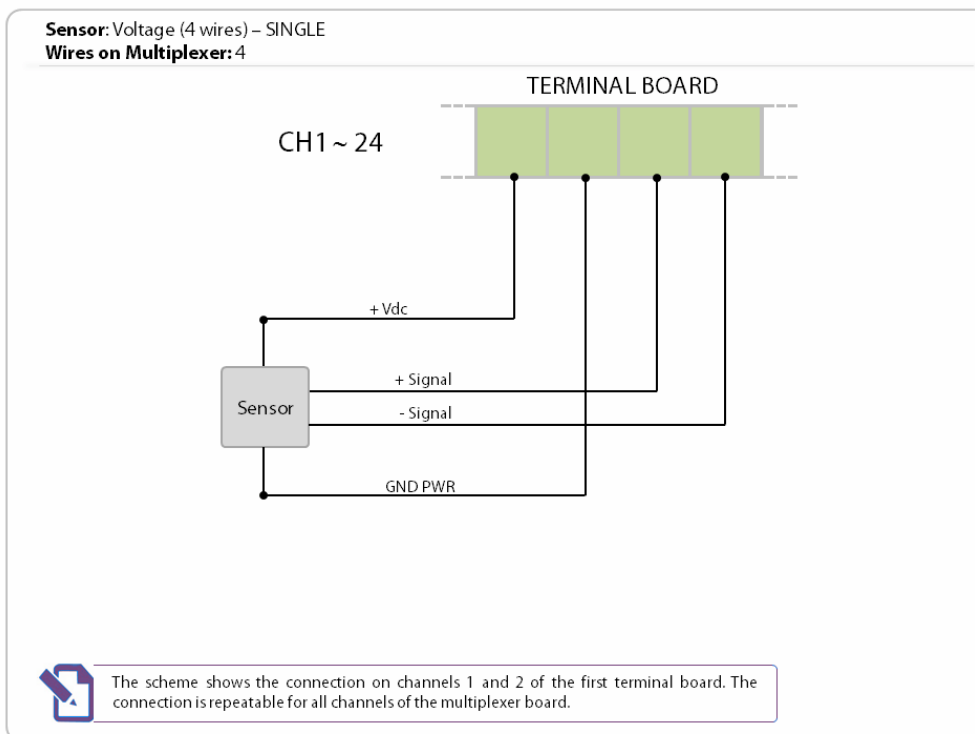


Figure 132

Voltage 2 channels (External supply)

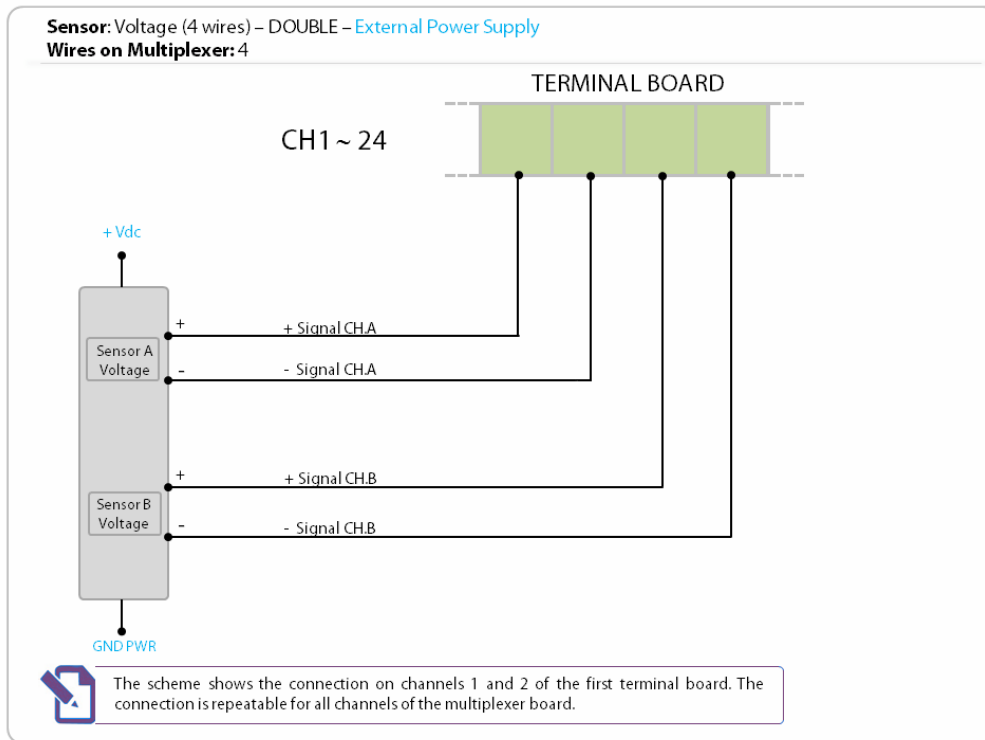


Figure 133

6 Wires

2..40mA Transmitter 2 channels

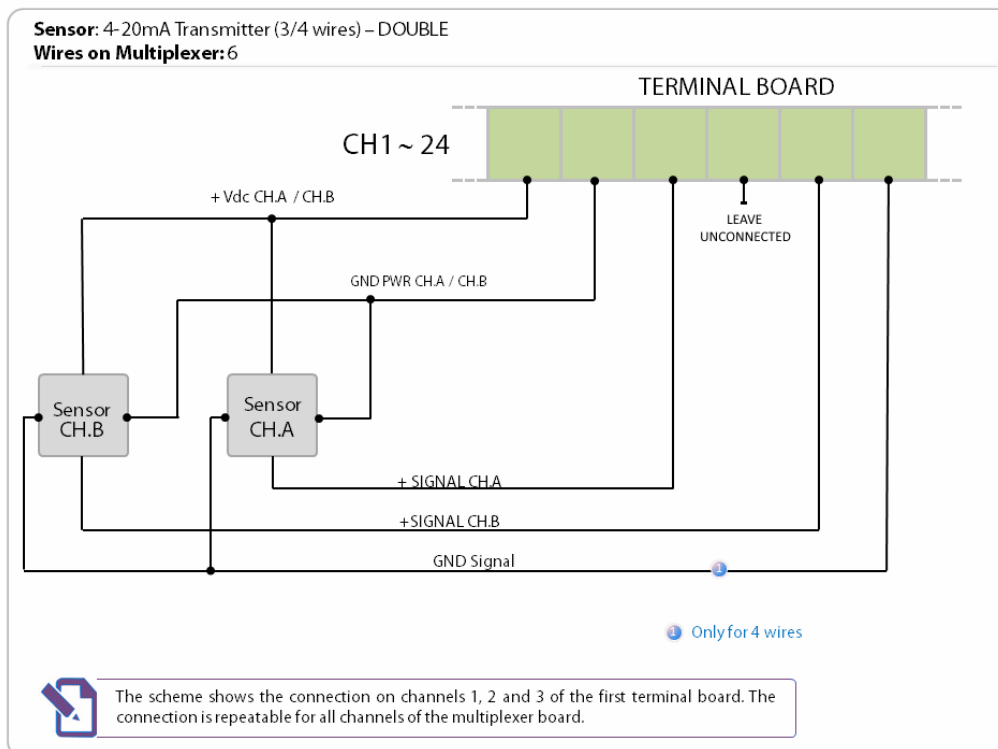


Figure 134

Ratiometric

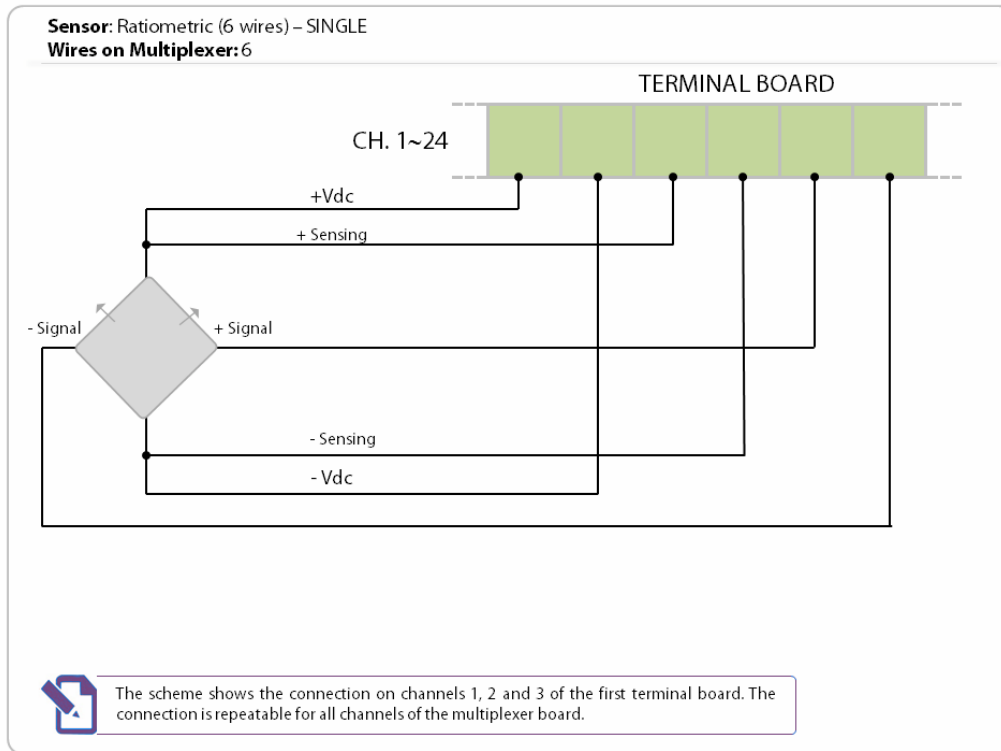


Figure 135

Servo Biaxial

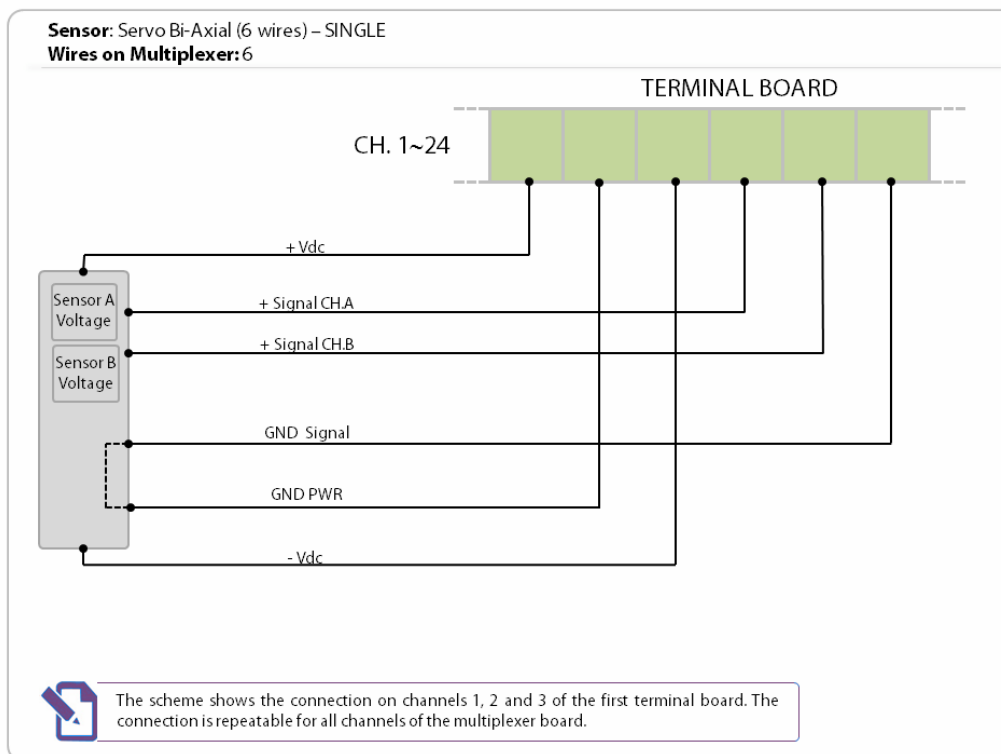


Figure 136

Figure 136

Servo UniAxial (5 Wires)

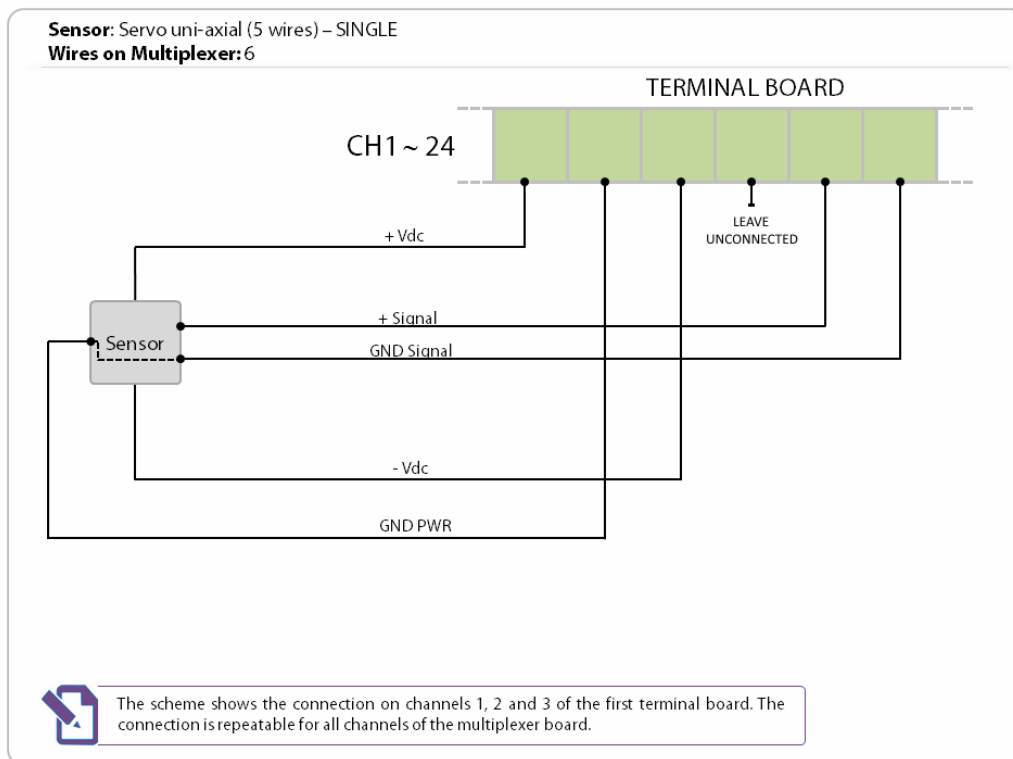


Figure 137

Voltage 2 channel

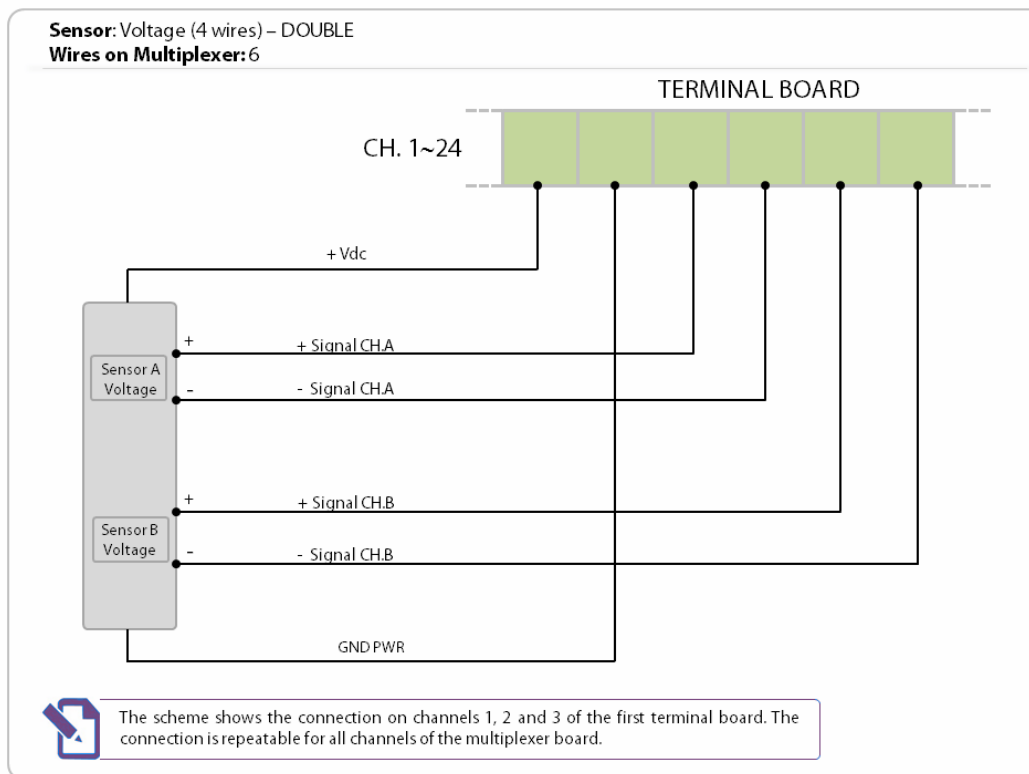


Figure 138

MAINTENANCE

In the event that you need after-sale calibration, service or repair of your OM-240, please contact Omega's Customer Service Department for an Authorized Return (AR) No.

Omega Customer Service
email: cservice@omega.com
Phone: 1-800-622-2378

SPECIFICATIONS



- On-Board Web Server
- 24 Differential Analog Input Channels
- Measures: Thermocouples, PT100 RTD, NTC Thermistor, mV, mA, mV/V
- View Data in real Time or Store to 2 GB Internal Memory
- Available GPRS Modem
- Expandable up to 384 channels with multiplexers
- Ethernet, RS485, RS232 and USB Connections
- SMS and e-mail Alerts

The OM-240 is a versatile, high accuracy “smart” data acquisition system with 24 analog inputs. It can be used in a wide range of applications including HVAC, oil and gas, water quality, energy and building monitoring. With the OM-240 no other configuration/analysis software package is needed as it is provided with a Web server on board; just use a standard Web browser and it is ready to use. Logged data is ready to be shown in graphic “real time” mode (License required) or exported in a CSV file.

CPU AND MEMORY

- *Processor:* ARM Cortex-M3 MCU with 1 MB Flash, 120 MHz CPU, ART Accelerator, Ethernet
- *RAM Memory:* 1 Mbyte RAM
- *Mass Storage:* 2 GB SD card for data (about 5 Mega data points) and Web pages
- *Clock accuracy:* High precision RTC (real time clock with battery back-up) temperature compensated
- *On-Board Sensors:* Temperature (accuracy $\pm 1\%$), measured inside the datalogger

ANALOG INPUTS

Number of Inputs: 24 differential analog inputs, individually configured. Channel expansion provided by multiplexers. There are 8 terminal blocks (each terminal block can handle up to 3 sensors). The OM-240 is designed to work with 2 to 6-wire sensors. You can connect 2-wire sensors on each channel and read 24 sensors, or 4-wire sensor and read 12 channels. The system will order sensors depending on how many wires they use, placing 6 wires sensors first, 4 wires in the middle, and 2 wires last.

Once software configuration is done, clicking on “Wiring scheme” button on the web interface near the sensors will show how to physically connect the chosen sensor to the block. It shows “relative” position, so if you start connecting sensors from the first you will not have to leave “unused” positions (except for the ground connection of every block, if not used).

Multiplexers are needed if the total “wires” from sensors exceeds the 48 provided by the OM-240.

ANALOG MEASUREMENTS

Measurement Rate

	Maximum Speed	Standard Speed
Analog Initialization ($\pm 10\text{V}$ range)	1.70 sec	7.10 sec
Instrument Warm-Up	Depends on sensor configuration	
Measurement ($\pm 10\text{V}$ range)	80 ms	1.57 sec

Times indicated are not valid for vibrating wire measures
Init analog phase is made only once before measurement cycle

ADC: 24-bit (22 true bit) differential analog-to-digital converters, 5SPS to 1000SPS, 0-24 average function, auto-calibration and auto-range

ANALOG INPUT TYPES

Current Loop (2 Wires): 0 to 25 mA range; power supply: 24/10 Vdc, external

Transmitter (3-4 Wires): 0 to 25 mA range; power supply: 24/10 Vdc, external

Voltage (4 Wires): ± 10 mV, ± 100 mV, $\pm 1\text{V}$, $\pm 10\text{V}$ ranges; power supply: 24/20/10/5Vdc, external

Servo Inclinator: $\pm 5\text{V}$ range; power supply: ± 12 Vdc (dual), external

Wheatstone Bridge (6 Wires, With Sensing): $\pm 10\text{mV/V}$ range; power supply: 10/5 Vdc, external (max 10 Vdc)

Minimum bridge resistance: 200 Ω ; power supply: 10/5 Vdc, external (max 10 Vdc)

Potentiometer: $\pm 2.5\text{V}$ range; power supply: 10/5 Vdc

Thermocouple Input Types and Ranges

THERMOCOUPLE (LOGGER @ 25 °C AMBIENT TEMPERATURE)		
TC TYPE	RANGE	ERROR
TC-K	From -200 °C to 1370 °C	±1,24 °C
TC-B	From 600 °C to 1820 °C	±1,22 °C
TC-J	From -200 °C to 1200 °C	±1,04 °C
TC-T	From -200 °C to 400 °C	±1,99 °C
TC-E	From -200 °C to 1000 °C	±0,93 °C
TC-R	From -20 °C to 1760 °C	±1,64 °C
TC-N	From -260 °C to 1300 °C	±1,24 °C
TC-S	From -20 °C to 1760 °C	±1,64 °C

RTD Input: 100Ω Platinum (Pt100/200/500/1000)

RTD: range -195 to 847 °C (-319 to 1556 °F);

Power supply: 1.2 mA

Thermistor (3000 Ω@25 °C NTC):

Range: -50 to 0 °C (-58 to 32 °F) maximum error ± 2 °C (± 3,6 °F)

Range: 0 °C to 150 °C (32 to 302 °F) maximum error ± 1 °C (± 1,8 °F)

Power supply: 0.05 mA / 0.1 mA / 1.2 mA

Reading Resolution:

1 μA at FS for 20 mA range;

1 μV at FS for ±10 mV range;

10 μV at FS for ±100 mV range;

100 μV at FS for ±1 V range;

1 mV at FS for ±10 V range;

0.1 °C for Pt100 RTD;

0.1 °C for NTC thermistor;

0.1 Hz for 6000 Hz range;

0.001 mV / V at FS for ±10 mV / V (Wheatstone bridge)

Measurement Accuracy:

0.01% mV/mA FS (0.17% FS for Pt100/Pt200/Pt500/Pt1000) - with Standard Measurement

Temperature Drift: < 10 ppm/°C, range -30 to 70°C

Input Noise Voltage: 5.42 μ V pp

Input Limits : \pm 12V

DC Common Mode Rejection: >105 dB

Normal Mode Rejection: >90 dB

Input Impedance: 20 M Ω typical

Switched Output Power Supply: The voltage 'V OUT' is switched on and off under program control. V OUT is the unregulated input power supply 'V IN' (2 A)

DIGITAL I/O

Digital Output: One relay output (for alarm, etc.): volt-free closure (low voltage 30V, 2A)

Digital Inputs: Two opto-isolated digital inputs individually selectable for switch closure.

Max Input Voltage: 24V (max current: 10mA)

Min Input Voltage: 5V (max current: 2mA)

Measurement Rate (MR): max frequency 1 kHz

Accuracy: 0.1 Hz

PROTECTION:

- Electro-Mechanical Relays for Measuring Each Channel:

Electrical Endurance: min 2×10^5 operations

Mechanical Endurance: 100×10^6 operations.

- Circuit Protection (Gas Discharge Tubes):

DC Breakdown Voltage (@100V/s): 75V

Tolerance of DCBV: \pm 20%

Impulse Breakdown Voltage (@100v/ μ s): 250V

Impulse Breakdown Voltage (@1kv/ μ s): 525V

- Overvoltage and Reverse Polarity Protection

Short Circuit Protection on Every Output

INTERFACES

Display & Keyboard: Small backlight graphic LCD 128 x 64 dpi with membrane keyboard for the minimal local management without the PC. Keyboard for starting a data acquisition scan, sequential display of the last stored readings for each channel (sensor ID, converted unit reading, unit of measure), device status, data download and firmware/Web pages update by USB pen drive, safe mode (back-up/format/restore internal SD card).

LAN Ethernet Isolated: 10/100 Mbps, RJ45

RS232: 9-pin, DE9: DCE port for optional GSM/GPRS modem connection

Baud Rates: selectable from 9600 bps to 115.2 kbps

Default Format: 8 data bits; 1 stop bits; no parity

USB: USB 2.0 pen drive only (FAT 32), 5 V 200 mA

RS485#1 OPTO-ISOLATED:

Connection: 5 screw clamp port for max. No.254 Modbus RS485 digital bus sensors

Communication Interface: RS485

Communication Protocol: MODBUS RTU

Voltage 'V OUT': Switched on and off under program control. V OUT is the unregulated input power supply 'V IN' (1 A).

Power supply management: Always on or energy safe

RS485#2 OPTO-ISOLATED:

Connection: 5 screw clamp port for max. 16 multiplexer boards connection.

Communication interface: RS485

Communication protocol: MODBUS RTU

Voltage 'V OUT': Switched on and off under program control. V OUT is the unregulated input power supply 'V IN' (1 A).

Every channel of each multiplexer board is completely independent.

SOFTWARE & FIRMWARE:

- Web server on board (independent OS platform)
- Live update (firmware and web pages)
- Acquisition Time Interval: selectable from 1 second up to 1 week (depends on the number of channels acquired)
- FTP client to send data/alarms on an FTP server (SFTP not supported)

- MAIL to send data / alarms to max 5 email address (SMTPS / SSL not supported)
- SMS to send alarms to max 5 telephone numbers
- Data download (readings, logs) in .csv file (compatible with Microsoft Excel)
- Virtual channels management
- Languages: Italian, English and French

SYSTEM POWER REQUIREMENTS

Voltage (External Power Supply): 10 to 30 Vdc (reverse polarity protected), max 5A

External Rechargeable Batteries: 12 Vdc nominal

Typical Current Drain (@12 Vdc, External Power Supply):

Sleep Mode(MAX): 315 μ A

ON: 62 mA - ON with ethernet connected: 87 mA - ON with display ON: 115 mA

ON with display ON and ethernet connected: 142 mA

Analog Initialization: 115 mA

Measurement: 123 mA (with 12 mA @ 24 V sensor consumption)

ENVIROMENTAL CONDITIONS

Operating Temperature: -30 to 60°C (display -20 to 60°C)

Storage Temperature: -40 to 85°C (display -30 to 80°C)

Relative Humidity: 80 %RH

Overvoltage Category: II

Pollution Degree: 2

Sound Levels: < 74 dBA

Maximum Height of Use: 3000 m (9800 ft)


PHYSICAL CHARACTERISTICS

Weight: 980 g (2.16 lb)

Dimensions: 231 L x 138 W x 117 mm H (9.09 x 5.43 x 4.61")

Material: Plastic and metal

Wiring: Removable screw terminal connectors

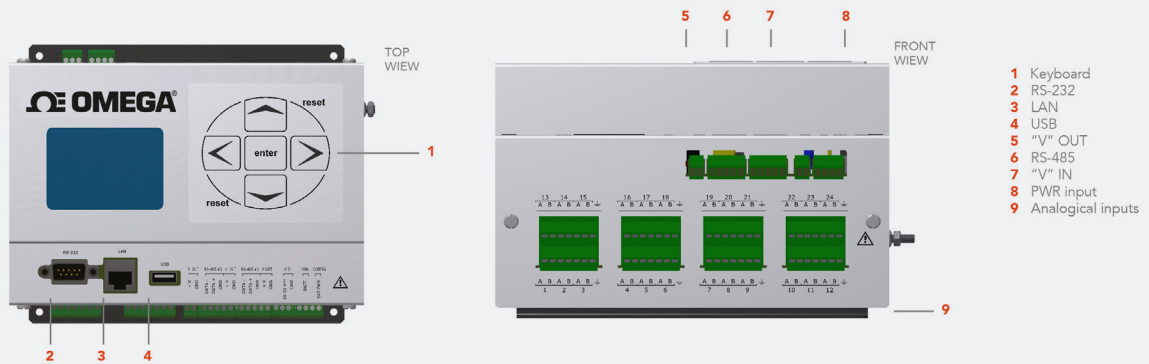

To Order

Model No.

Description

OM-240	24-channel Ethernet data logger with embedded web server
OM-240-MODEM	GSM/3G modem for OM-240
OM-240-PS	Spare 12 Vdc power supply for OM-240

Comes complete with 12 Vdc power supply, Ethernet cable, USB thumb drive.

Ordering Example: OM-240 24-channel Ethernet data logger with embedded web server.

WARRANTY/DISCLAIMER

OMEGA ENGINEERING, INC. warrants this unit to be free of defects in materials and workmanship for a period of **13 months** from date of purchase. OMEGA's WARRANTY adds an additional one (1) month grace period to the normal **one (1) year product warranty** to cover handling and shipping time. This ensures that OMEGA's customers receive maximum coverage on each product.

If the unit malfunctions, it must be returned to the factory for evaluation. OMEGA's Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective, it will be repaired or replaced at no charge. OMEGA's WARRANTY does not apply to defects resulting from any action of the purchaser, including but not limited to mishandling, improper interfacing, operation outside of design limits, improper repair, or unauthorized modification. This WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of having been damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA's control. Components in which wear is not warranted, include but are not limited to contact points, fuses, and triacs.

OMEGA is pleased to offer suggestions on the use of its various products. However, OMEGA neither assumes responsibility for any omissions or errors nor assumes liability for any damages that result from the use of its products in accordance with information provided by OMEGA, either verbal or written. OMEGA warrants only that the parts manufactured by the company will be as specified and free of defects. OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESSED OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. LIMITATION OF LIABILITY: The remedies of purchaser set forth herein are exclusive, and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.

CONDITIONS: Equipment sold by OMEGA is not intended to be used, nor shall it be used: (1) as a "Basic Component" under 10 CFR 21 (NRC), used in or with any nuclear installation or activity; or (2) in medical applications or used on humans. Should any Product(s) be used in or with any nuclear installation or activity, medical application, used on humans, or misused in any way, OMEGA assumes no responsibility as set forth in our basic WARRANTY/DISCLAIMER language, and, additionally, purchaser will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the Product(s) in such a manner.

RETURN REQUESTS/INQUIRIES

Direct all warranty and repair requests/inquiries to the OMEGA Customer Service Department. BEFORE RETURNING ANY PRODUCT(S) TO OMEGA, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OMEGA'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS). The assigned AR number should then be marked on the outside of the return package and on any correspondence.

The purchaser is responsible for shipping charges, freight, insurance and proper packaging to prevent breakage in transit.

FOR **WARRANTY** RETURNS, please have the following information available BEFORE contacting OMEGA:

1. Purchase Order number under which the product was PURCHASED,
2. Model and serial number of the product under warranty, and
3. Repair instructions and/or specific problems relative to the product.

FOR **NON-WARRANTY** REPAIRS, consult OMEGA for current repair charges. Have the following information available BEFORE contacting OMEGA:

1. Purchase Order number to cover the COST of the repair,
2. Model and serial number of the product, and
3. Repair instructions and/or specific problems relative to the product.

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering.

OMEGA is a trademark of OMEGA ENGINEERING, INC.

© Copyright 2018 OMEGA ENGINEERING, INC. All rights reserved. This document may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without the prior written consent of OMEGA ENGINEERING, INC.

Where Do I Find Everything I Need for Process Measurement and Control? **OMEGA...Of Course!** *Shop online at omega.com*

TEMPERATURE

- ☑ Thermocouple, RTD & Thermistor Probes, Connectors, Panels & Assemblies
- ☑ Wire: Thermocouple, RTD & Thermistor
- ☑ Calibrators & Ice Point References
- ☑ Recorders, Controllers & Process Monitors
- ☑ Infrared Pyrometers

PRESSURE, STRAIN AND FORCE

- ☑ Transducers & Strain Gages
- ☑ Load Cells & Pressure Gages
- ☑ Displacement Transducers
- ☑ Instrumentation & Accessories

FLOW/LEVEL

- ☑ Rotameters, Gas Mass Flowmeters & Flow Computers
- ☑ Air Velocity Indicators
- ☑ Turbine/Paddlewheel Systems
- ☑ Totalizers & Batch Controllers

pH/CONDUCTIVITY

- ☑ pH Electrodes, Testers & Accessories
- ☑ Benchtop/Laboratory Meters
- ☑ Controllers, Calibrators, Simulators & Pumps
- ☑ Industrial pH & Conductivity Equipment

DATA ACQUISITION

- ☑ Communications-Based Acquisition Systems
- ☑ Data Logging Systems
- ☑ Wireless Sensors, Transmitters, & Receivers
- ☑ Signal Conditioners
- ☑ Data Acquisition Software

HEATERS

- ☑ Heating Cable
- ☑ Cartridge & Strip Heaters
- ☑ Immersion & Band Heaters
- ☑ Flexible Heaters
- ☑ Laboratory Heaters

ENVIRONMENTAL MONITORING AND CONTROL

- ☑ Metering & Control Instrumentation
- ☑ Refractometers
- ☑ Pumps & Tubing
- ☑ Air, Soil & Water Monitors
- ☑ Industrial Water & Wastewater Treatment
- ☑ pH, Conductivity & Dissolved Oxygen Instruments