

WARRANTY/DISCLAIMER

OMEGA ENGINEERING, INC. warrants this unit to be free of defects in materials and workmanship for a period of **13 months** from date of purchase. OMEGA's WARRANTY adds an additional one (1) month grace period to the normal **one (1) year product warranty** to cover handling and shipping time. This ensures that OMEGA's customers receive maximum coverage on each product.

If the unit malfunctions, it must be returned to the factory for evaluation. OMEGA's Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective, it will be repaired or replaced at no charge. OMEGA's WARRANTY does not apply to defects resulting from any action of the purchaser, including but not limited to mishandling, improper interfacing, operation outside of design limits, improper repair, or unauthorized modification. This WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of having been damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA's control. Components in which wear is not warranted, include but are not limited to contact points, fuses, and triacs.

OMEGA is pleased to offer suggestions on the use of its various products. However, OMEGA neither assumes responsibility for any omissions or errors nor assumes liability for any damages that result from the use of its products in accordance with information provided by OMEGA, either verbal or written. OMEGA warrants only that the parts manufactured by the company will be as specified and free of defects. OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESSED OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. LIMITATION OF LIABILITY: The remedies of purchaser set forth herein are exclusive, and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.

CONDITIONS: Equipment sold by OMEGA is not intended to be used, nor shall it be used: (1) as a "Basic Component" under 10 CFR 21 (NRC), used in or with any nuclear installation or activity; or (2) in medical applications or used on humans. Should any Product(s) be used in or with any nuclear installation or activity, medical application, used on humans, or misused in any way, OMEGA assumes no responsibility as set forth in our basic WARRANTY/DISCLAIMER language, and, additionally, purchaser will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the Product(s) in such a manner.

RETURN REQUESTS/INQUIRIES

Direct all warranty and repair requests/inquiries to the OMEGA Customer Service Department. BEFORE RETURNING ANY PRODUCT(S) TO OMEGA, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OMEGA'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS). The assigned AR number should then be marked on the outside of the return package and on any correspondence.

FOR WARRANTY RETURNS,

please have the following information available BEFORE contacting OMEGA:

- Purchase Order number under which the product was PURCHASED,
- Model and serial number of the product under warranty, and
- Repair instructions and/or specific problems relative to the product.

FOR NON-WARRANTY REPAIRS,

consult OMEGA for current repair charges. Have the following information available BEFORE contacting OMEGA:

- Purchase Order number to cover the COST of the repair or calibration,
- Model and serial number of the product, and
- Repair instructions and/or specific problems relative to the product.

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering.

OMEGA is a registered trademark of OMEGA ENGINEERING, INC.

© Copyright 2016 OMEGA ENGINEERING, INC. All rights reserved. This document may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without the prior written consent of OMEGA ENGINEERING, INC.

5

Mounting Cont'd.

To install the DIN Rail Mounting Bracket accessory (UWM-DINRAIL) you must first remove the one screw located on the lid of the enclosure. This will allow you access to the mounting holes.

Place all four #4-40 screws with threaded standoffs into each mounting hole. Screw on the DIN Rail Mounting Bracket sub assembly including the DIN Rail Adaptors to the bottom of the enclosure using the #4-40 screws.

Close the unit by threading the one screw located on the lid of the enclosure to the bottom enclosure.

Input Connections

For input connections, refer to the Main Transmitter Board/Input Connections diagram.

Battery Replacement

To install or replace the battery in your device you must first loosen the one screw located on the lid of the enclosure. This will allow you to access the battery compartment.


Your device is equipped with a "C" size lithium power cell assembly. To install a replacement battery assembly follow steps outlined here.

- Remove the old power cell from the battery holder.
- Install your new battery assembly into the housing in the same position as the old battery was located.
- Installation complete.


System Operation

A basic wireless system is comprised of only two main components; a signal conditioner with a built-in battery powered 2.4 GHz radio transmitter (End Device), and a USB powered 2.4 GHz radio receiver.

END DEVICE

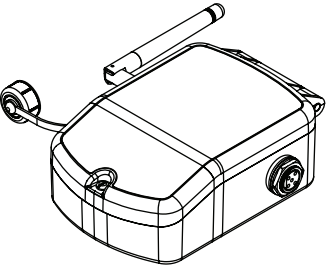

RECEIVER

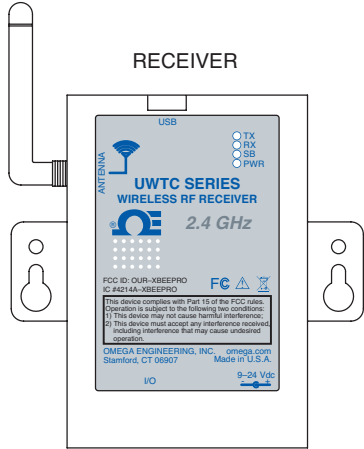

End Device/Receiver

NOTE:

Up to 48 end devices can be used with one receiver.

6

Transmit Rate vs. Battery Life

Many factors such as ambient temperature conditions and transmitting rate can have a large effect on the life of the battery used in your end device. Transmitting data places a large demand on the battery in your unit. The transmit rate is the single most contributing factor in the life of your battery. The slower the transmit rate you set, the longer the battery in your device will last. The table below gives some estimates on how long the battery should last vs. the transmit rate you selected when you setup your end device and under normal operating conditions.

Transmission Interval	Battery Life (Months)
2 Seconds	4
10 Seconds	7.5
30 Seconds	16.5
60 Seconds	30

Specifications

Temperature Measurement Range:
-18 to 538°C (0 to 1000°F)

Accuracy @ 22°C (72°F) Ambient Temperature and Emissivity of 0.95 or Greater:
±2% rdg or 2.2°C (4°F), whichever is greater

Optical Field of View: 6:1 (distance/spot size)

Spectral Response: 5 to 14 microns

Response Time: 100 ms (0 to 63% of final value)

Emissivity Range: 0.1 to 1.00, adjustable

Resolution: 1°C (1°F)


Operating Temperature

Wireless Transmitter: -10 to 70°C (14 to 158°F)

Sensor Head: 0 to 70°C (32 to 158°F)


Sensor Head (-HT Model): 0 to 85°C (32 to 185°F)

QUICK START



For complete product manual:

www.omega.com/manuals/manualpdf/M5044-UWIR-2A.pdf



UWIR-2A-NEMA

Weather Resistant Non-Contact Infrared Temperature Sensor With Wireless Transmitter

OMEGA

omega.com info@omega.com

Servicing North America:

OMEGA Engineering, Inc., One Omega Dr.
P.O. Box 4047, Stamford, CT 06905-0047 USA
Toll-Free: 1-800-826-6342 (USA & Canada Only)
Customer Service: 1-800-622-2378 (USA & Canada Only)
Engineering Service: 1-800-872-9436 (USA & Canada Only)
Tel: (203) 359-1660 Fax: (203) 359-7700
e-mail: info@omega.com

For Other Locations Visit omega.com/worldwide

The information contained in this document is believed to be correct, but OMEGA accepts no liability for any errors it contains, and reserves the right to alter specifications without notice.


MQS5044-UWIR/0216

Using This Quick Start Manual

Use this Quick Start Manual with your UWIR-2A-NEMA Temperature-to-Wireless Transmitter for easy installation and basic operation. For detailed information, refer to the User's Guide M5044-UWIR-2A).

General Description

The UWIR-2A-NEMA, and UWIR-2A-NEMA-HT Wireless Infrared Transmitter provides non-contact temperature measurement for industrial applications. The miniature sensor head design at 2.5 Dia x 6.3 cm L (1 x 2.5") is ideal for measuring temperature in confined, and hard to reach places. The aluminum sensor head, as well as the rugged electronic housing, are NEMA 4 rated. The sensor head is connected to the electronic housing via a 1.82 m (6') shielded cable.

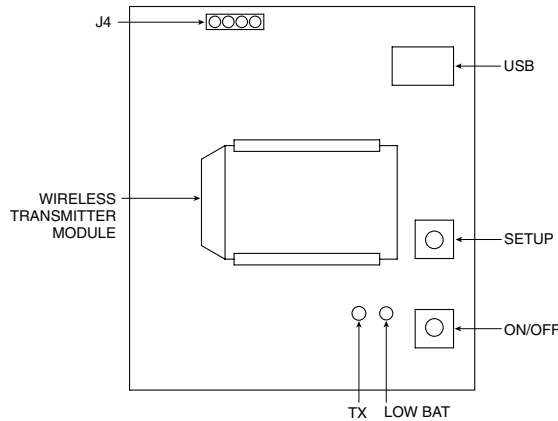

Main Transmitter Board

Software Installation

System Minimum Requirements:

- Pentium Class processor
- Hard Drive Space: 210 MB
- RAM: 256 MB
- 1 Available USB Port
- 1 CD-ROM Drive
- Windows 2000, XP, Vista, 7, 8, 10

To install the TC-Central PC application on your computer follow these steps:

1. Download the latest version of the TC-Central PC application from the Omega website.
2. After download is completed, open the directory where the download was saved.
3. Extract all of the files for the downloaded .zip file.
4. Double click on the setup file, "setup.exe".

The "Welcome to the TC Central Setup Wizard" screen should be visible on your computer screen. The installer will guide you through the steps required to install TC Central on your computer.

Device Configuration

First, connect the provided USB cable to your connector/transmitter unit and also to an available USB port on your computer. Now that you have connected your USB cable to your PC and transmitter you will complete the following steps to configure your device before placing the unit into operation. You will be using the configuration software utility (TC Central>>End Device Configuration Wizard) that you installed onto your PC in the previous section. If you have not installed the configuration software utility you should do so now. During this procedure you will be setting the following parameters in your transmitter.

Emissivity

This sets the emissivity value based on the material being measured. It allows the sensor to compensate for the different emissivity values of various material.

Address

This sets a unique address number into your transmitter. Later, when you set up your measurement software you will again set channel numbers to receive readings from the corresponding unit(s). Each unit must be set for a different channel number for your system to operate correctly.

Sample Rate:

This will program your device to transmit 1 data reading to your receiver at a specified time interval. Available settings are 2, 3, 5, 15, 30, 45, 60, 75 or 90.

STEP 1. Enter the "SETUP" mode.

To place your transmitter into the "SETUP" mode for programming follow this procedure:

Press and hold the "ON/OFF" button. While the "ON/OFF" button is being held, press the "SETUP" button one time and then release the "ON/OFF" button. The green (TX) indicator on the front of your device should be blinking at a steady rate. This indicates that your device is ready to run the configuration utility software. (Refer to **Main Transmitter Board** diagram for button locations)

STEP 2. Launch Setup Utility Program. To launch the **End Device Configuration Wizard**, begin by accessing the "Programs" list under your "Start Menu". Scroll through the list to find the Omega "TC-Central" folder, and then select the **End Device Configuration Wizard**.

STEP 3. Programming the device settings. After starting the setup utility program, the "Welcome to the Universal Wireless End Device Configuration Wizard" screen should be visible on your screen. The software will guide you through the steps required to program your device settings.

Button Operation


1. "ON/OFF" The "ON/OFF" button on the main board of your transmitter and is used to turn your unit "ON" or "OFF".
2. "SETUP" The "SETUP" button on the main board of your transmitter and is only used during the setup and configuration of your unit.

Indicator Lights

1. **Transmit (TX) Green Indicator Light** The green indicator light marked "TX" on the front of your connector/transmitter will blink every time the unit sends data to the receiving unit. Example: If you selected a 5 second sample rate the green TX LED will blink one time every 5 seconds.
2. **Low Battery (Low Bat) Red Indicator Light** The red indicator light marked "Low Bat" on the front of the connector/transmitter will turn on when the battery reaches a level at or below the power level required for normal operation. When this indicator turns on it's time to install a fresh battery in your unit. For procedures on how to change your battery see the later section **Battery Replacement**

Device Installation

When installing your device it is important to position your device in such a way as to optimize the antenna location within what is known as the "Fresnel Zone". The Fresnel Zone can be thought of as a football-shaped invisible tunnel between two locations that provides a path for RF signals between your device and your receiver.

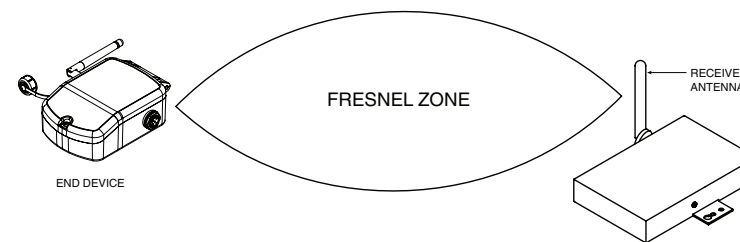

Fresnel Zone


In order to achieve maximum range, the football-shaped path in which radio waves travel must be free of all obstructions. Obstacles in the path (especially metal) will decrease the communication range between your device and your receiver. Also, if the antennas are mounted just barely off the ground, over half of the Fresnel zone ends up being obstructed by the earth resulting in significant reduction in range. To avoid this problem, the antennas should be mounted high enough off of the ground so that the earth does not interfere with the central diameter of the Fresnel Zone.

NOTE:


No co-location with other radio transmitters is allowed. By definition co-location is when another radio device or the device's antenna is located within 20 cm of your unit.

Mounting

When mounting your end device, care should be taken to make sure it is as far away from any metal objects. If nearby metal gets too close to your unit, it has the potential to interfere with the way the unit radiates and may cause signal loss or possibly even the inability to communicate at all with your receiver.

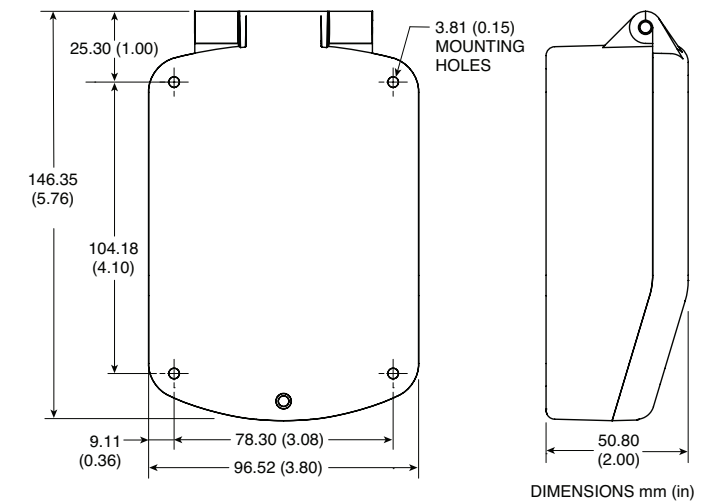

Mounting Dimensions

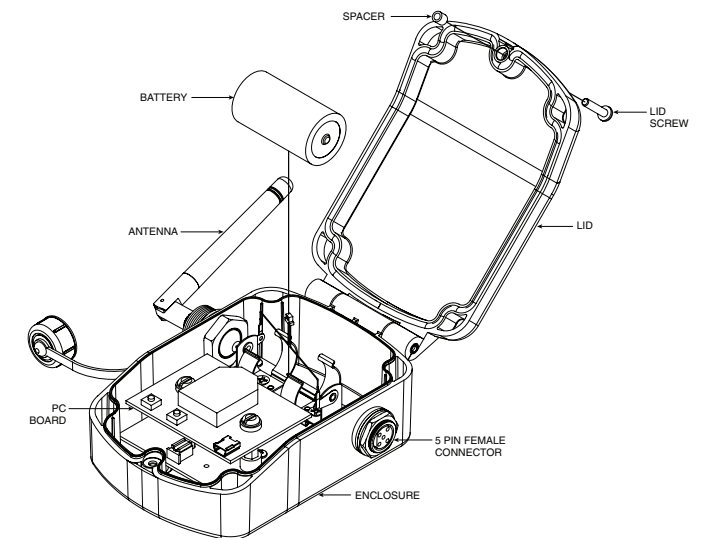

DIN Rail Mounting Bracket Installation