

Certifications and Compliance

Safety: EN 62368-1:2014 +A11:2017 (Second Edition)

EMC: EN 301 489-1 V2.2.3 (2019-11)

Radio: EN 300 220-2 V3.1.1 (2017-02)

CE: Radio Equipment Directive 2014/53/EU
EMC Directive 2014/30/EU
RoHS Directive EU 2015/863

UKCA: Radio Equipment Regulations 2017
Electromagnetic Compatibility Regulations 2016
RoHS Regulations 2012

WARRANTY/DISCLAIMER

OMEGA ENGINEERING, INC. warrants this unit to be free of defects in materials and workmanship for a period of **13 months** from date of purchase. OMEGA's WARRANTY adds an additional one (1) month grace period to the normal **one (1) year product warranty** to cover handling and shipping time. This ensures that OMEGA's customers receive maximum coverage on each product.

If the unit malfunctions, it must be returned to the factory for evaluation. OMEGA's Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective, it will be repaired or replaced at no charge. OMEGA's WARRANTY does not apply to defects resulting from any action of the purchaser, including but not limited to mishandling, improper interfacing, operation outside of design limits, improper repair, or unauthorized modification. This WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of having been damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA's control. Components in which wear is not warranted, include but are not limited to contact points, fuses, and triacs.

OMEGA is pleased to offer suggestions on the use of its various products. However, OMEGA neither assumes responsibility for any omissions or errors nor assumes liability for any damages that result from the use of its products in accordance with information provided by OMEGA, either verbal or written. OMEGA warrants only that the parts manufactured by the company will be as specified and free of defects. OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESSED OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. LIMITATION OF LIABILITY: The remedies of purchaser set forth herein are exclusive, and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.

CONDITIONS: Equipment sold by OMEGA is not intended to be used, nor shall it be used: (1) as a "Basic Component" under 10 CFR 21 (NRC), used in or with any nuclear installation or activity; or (2) in medical applications or used on humans. Should any Product(s) be used in or with any nuclear installation or activity, medical application, used on humans, or misused in any way, OMEGA assumes no responsibility as set forth in our basic WARRANTY/DISCLAIMER language, and, additionally, purchaser will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the Product(s) in such a manner.

RETURN REQUESTS/INQUIRIES

Direct all warranty and repair requests/inquiries to the OMEGA Customer Service Department. BEFORE RETURNING ANY PRODUCT(S) TO OMEGA, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OMEGA'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS). The assigned AR number should then be marked on the outside of the return package and on any correspondence.

FOR **WARRANTY** RETURNS, please have the following information available BEFORE contacting OMEGA:

1. Purchase Order number under which the product was PURCHASED,
2. Model and serial number of the product under warranty, and
3. Repair instructions and/or specific problems relative to the product.

FOR **NON-WARRANTY** REPAIRS, consult OMEGA for current repair charges. Have the following information available BEFORE contacting OMEGA:

1. Purchase Order number to cover the COST of the repair or calibration,
2. Model and serial number of the product, and
3. Repair instructions and/or specific problems relative to the product.

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering.

OMEGA is a trademark of OMEGA ENGINEERING, INC.

© Copyright 2019 OMEGA ENGINEERING, INC. All rights reserved. This document may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without the prior written consent of OMEGA ENGINEERING, INC.



SS-001 (-EU)

Omega Link Environmental Smart Sensor

OMEGA™

omega.com info@omega.com

Omega Engineering, Inc:

800 Connecticut Ave. Suite 5N01, Norwalk, CT 06854, USA
Toll-Free: 1-800-826-6342 (USA & Canada only)
Customer Service: 1-800-622-2378 (USA & Canada only)
Engineering Service: 1-800-872-9436 (USA & Canada only)
Tel: (203) 359-1660 Fax: (203) 359-7700
e-mail: info@omega.com

Omega Engineering, Limited:

1 Omega Drive, Northbank, Irlam
Manchester M44 5BD
United Kingdom

Omega Engineering, GmbH:

Daimlerstrasse 26 75392
Deckenpfronn, Germany

For Other Locations Visit omega.com/worldwide

The information contained in this document is believed to be correct, but OMEGA accepts no liability for any errors it contains, and reserves the right to alter specifications without notice.

Introduction

Important: Do not power on the Omega Link Gateway or Smart Sensor before Gateway registration is complete.

Use this Quick Start Guide to set up your Omega Link SS-001 Environmental Smart Sensor.

Materials

Included with your SS-001

- Omega Link SS-001 unit
- Quick start guide
- 2x AA alkaline batteries
- Sub GHz Antenna

Additional Materials Needed

- A Windows 7,8, 9, 10, or 11 OS PC or laptop with Omega's free SYNC configuration software
- A compatible Omega Link Gateway
- An Omega Link Cloud account or a qualifying Omega Enterprise Gateway license tier (Pro, Business, or Business Pro)

Optional Materials

- Micro USB 2.0 (for SYNC configuration)
- SYNC Configuration software
-Downloadable on the OMEGA website

Before you Begin



Before you begin setting up your SS-001, ensure you have created an Omega Link Cloud or Omega Enterprise Gateway account and registered the Omega Link Gateway that will be paired with the SS-001 device.

During the gateway setup process, the gateway will automatically download the latest firmware and re-boot. Once the gateway is registered and the pairing button LED is green you may continue with the SS-001 installation.

SS-001 Hardware Setup

Step 1: Install the antenna to the side of the connector on the SS-001 unit.

Step 2: Insert the 2x AA batteries into the battery compartment located on the underside of the SS-001 unit.

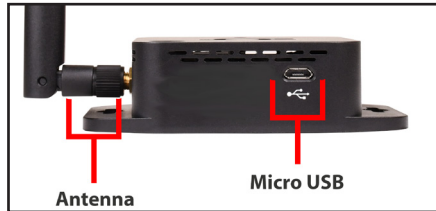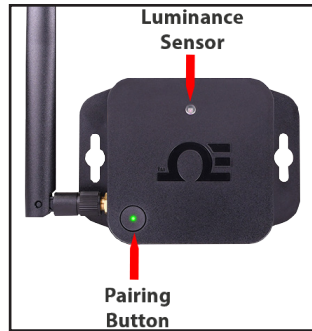

Note

Important: The battery polarity is marked inside the compartment. Promptly remove dead batteries to prevent loss of data or potential damage due to leaking batteries.

The **Pairing Button** of the Smart Sensor will power up to a solid orange LED light in the center of the pairing button indicating that the device has been successfully powered on. Refer to the LED Status indicator table below:

LED Color	Status
Amber/Orange (solid)	SS-001 is powered on; not connected to a Gateway
Green (blinking repeatedly)	SS-001 is in Pairing Mode
Amber/Orange (blinking repeatedly)	SS-001 is reconnecting to a paired Gateway
Green (flash periodically)	SS-001 is communicating to a Gateway
Green (solid)	SS-001 is performing a radio firmware update
Red (solid)	The reset button has been held for a radio factory reset
Red and Green (blinking)	A password error has occurred
No Light	The SS-001 is asleep or the battery is drained

Pairing to your Omega Link Gateway

Once the **Pairing Button** displays a solid orange LED light in the center of the pairing button, your Smart Sensor is ready to be connected to an Omega Link Gateway. Pairing your SS-001 with an Omega Link Gateway is made easy with a one-button pairing system between the two devices.

Step 1: Push the pairing button once on your SS-001 unit. The LED status indicator will blink green indicating the device is in Pairing Mode.

Note

Note: The pairing instructions for the SS-001-RUG differ from the standard wireless pairing procedure. The Pairing Button for the SS-001-RUG is located in a pinhole on the underside of the unit. Press the pinhole button once to enable Pairing Mode.

Step 2: Quickly push the pairing button on the Omega Link Gateway. The LED on the gateway will blink green indicating the gateway is in Pairing Mode.


When the Smart Sensor has been successfully paired to your Omega Link Gateway, the green LEDs on both devices will stop flashing within 2 minutes.

The Smart Sensor LED will periodically flash green each time data is transmitted to the gateway.

As measurements are transmitted, you will begin to see data appearing on the Omega Link Cloud or OEG interface. The transmission interval can be adjusted from the Omega Link Cloud Interface or from the OEG interface, depending on which platform the Gateway is connected to.

View Readings on Omega Link Cloud or OEG

Once your SS-001 has successfully paired to your registered Omega Link Gateway, the SS-001 will appear on the Omega Link Cloud interface or the OEG interface and begin transmitting data.

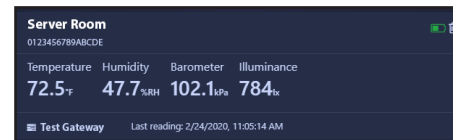

For additional information on the customizable features made available through the micro USB connector, continue to the sections titled **Advanced Configuration with SYNC** and **Smart Sensor USB Connector**.

Advanced Configuration with SYNC

Note

Note: SYNC configuration software is downloadable on the OMEGA website.


The SS-001 can be configured using SYNC configuration software by connecting through the micro USB 2.0 port. SYNC can be used to configure alarms in the sensor, set device passwords, and update firmware.


SS-001 Sensor Configuration

The SS-001 internal sensors offer fixed readings for temperature, humidity, and barometric pressure. **Gain** and **Offset** settings can be configured by clicking **Advanced Scaling** in the SYNC interface.


Setting Alarms

To configure the alarms in your SS-001 using SYNC, follow these steps:

Step 1: Click the  icon next to the input you wish to set an alarm for.

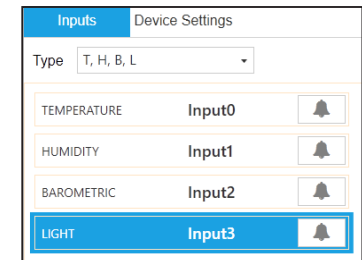

Step 2: Set the parameters for your alarm and click Save.

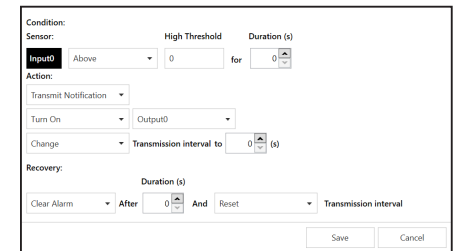

SYNC - Device Settings

Users can perform functions such as firmware updates and factory resets of the SS-001 by navigating to the **Device Settings** tab of SYNC configuration software.