



User's Guide



$$y = mx + b$$

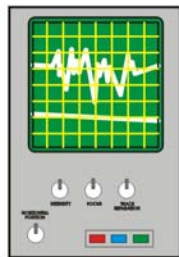

Shop online at

omega.com[®]

Ω OMEGA[®]

omega.com

e-mail: info@omega.com

**For latest product manuals:
omegamanual.info**

ISO 9001
CERTIFIED
CORPORATE QUALITY

STAMFORD, CT

ISO 9002
CERTIFIED
CORPORATE QUALITY

MANCHESTER, UK

$$y = mx + b$$

A Guide to Calibration and Unit Conversion



OMEGAnet® Online Service
omega.com

Internet e-mail
info@omega.com

Servicing North America:

U.S.A.: One Omega Drive, P.O. Box 4047
ISO 9001 Certified Stamford, CT 06907-0047
TEL: (203) 359-1660 FAX: (203) 359-7700
e-mail: info@omega.com

Canada: 976 Bergar
Laval (Quebec) H7L 5A1, Canada
TEL: (514) 856-6928 FAX: (514) 856-6886
e-mail: info@omega.ca

For immediate technical or application assistance:

U.S.A. and Canada: Sales Service: 1-800-826-6342 / 1-800-TC-OMEGA®
Customer Service: 1-800-622-2378 / 1-800-622-BEST®
Engineering Service: 1-800-872-9436 / 1-800-USA-WHEN®

Mexico: En Español: (001) 203-359-7803 e-mail: espanol@omega.com
FAX: (001) 203-359-7807 info@omega.com.mx

Servicing Europe:

Benelux: Postbus 8034, 1180 LA Amstelveen, The Netherlands
TEL: +31 (0)20 3472121 FAX: +31 (0)20 6434643
Toll Free in Benelux: 0800 0993344
e-mail: sales@omegaeng.nl

Czech Republic: Frystatska 184, 733 01 Karviná, Czech Republic
TEL: +420 (0)59 6311899 FAX: +420 (0)59 6311114
Toll Free: 0800-1-66342 e-mail: info@omegashop.cz

France: 11, rue Jacques Cartier, 78280 Guyancourt, France
TEL: +33 (0)1 61 37 2900 FAX: +33 (0)1 30 57 5427
Toll Free in France: 0800 466 342
e-mail: sales@omega.fr

Germany/Austria: Daimlerstrasse 26, D-75392 Deckenpfronn, Germany
TEL: +49 (0)7056 9398-0 FAX: +49 (0)7056 9398-29
Toll Free in Germany: 0800 639 7678
e-mail: info@omega.de

United Kingdom: One Omega Drive, River Bend Technology Centre
ISO 9002 Certified Northbank, Irlam, Manchester
M44 5BD United Kingdom
TEL: +44 (0)161 777 6611 FAX: +44 (0)161 777 6622
Toll Free in United Kingdom: 0800-488-488
e-mail: sales@omega.co.uk

It is the policy of OMEGA Engineering, Inc. to comply with all worldwide safety and EMC/EMI regulations that apply. OMEGA is constantly pursuing certification of its products to the European New Approach Directives. OMEGA will add the CE mark to every appropriate device upon certification.

The information contained in this document is believed to be correct, but OMEGA accepts no liability for any errors it contains, and reserves the right to alter specifications without notice.

WARNING: These products are not designed for use in, and should not be used for, human applications.

System Calibration & Engineering Units Conversion Using $mx + b$

In many data acquisition software programs, the $mx + b$ application is a powerful tool, which can be used to adjust displayed readings and/or values obtained from stored data. Using this software computational feature, it is possible to convert voltage readings to any more useful or appropriate engineering units, and simultaneously accomplish channel calibration to reduce or eliminate offset and gain errors. The following examples demonstrate how either or both objectives are accomplished for:

- [Engineering Units Conversion \(1 example\)](#)
- [System Channel Calibration \(2 examples\)](#)
- [Combined System Channel Calibration and Engineering Units Conversion \(1 example\)](#)

Engineering Units Conversion

A pressure transducer with a 0-600 psi range has a 4-20mA output and is connected in a closed loop to drop 1-5 volts across a 250-ohm resistor. The theoretical nameplate relationship establishes that 1 V = 0 psi and 5 volts = 600 psi.

A units conversion equation can be written in the following form:

$$\text{Desired Reading} = m(\text{Available Reading}) + b$$

Write a pair of equations, representing the two *known* points.

$$\begin{aligned} 0 &= m(1) + b && (1) \\ 600 &= m(5) + b && (2) \end{aligned}$$

Solve for m by multiplying equation (1) by -1 and adding to equation (2).

$$\begin{aligned} 0 &= m(1) - b \\ 600 &= m(5) + b \\ \hline 600 &= m(5 - 1) && (3) \end{aligned}$$

$$\begin{aligned} m &= 600/(5 - 1) && (4) \\ m &= 150 \end{aligned}$$

Substitute the value for m into equation (1) to determine the value for b .

$$\begin{aligned} 0 &= 150(1) + b && (5) \\ b &= -150 \end{aligned}$$

Write the correction equation using the previously determined values for m and b .

$$\text{Desired Reading in psi} = 150(\text{Available Reading in volts}) - 150$$

Check the result with the two original voltage readings.

$$\begin{aligned} \text{Correct Reading for } 600 &= 150(5) - 150 \\ &= 600.00 \end{aligned}$$

$$\begin{aligned} \text{Correct Reading for } 0 &= 150(1) - 150 \\ &= 0.00 \end{aligned}$$

Any readings in the region between these two points provide the proportional psi reading as provided by the transducer.

System Channel Calibration

(Example 1 of 2)

A DBK9 and a DaqBook are connected to a precision 100.0 ohm resistor and read 0.2 °C; However, in this instance we know that 0.0 °C is the correct value. When connected to a 350.1 ohm resistor, the channel reads 719 °C. In this second instance we know that 716 °C is the correct value. From these two “points,” a correction [or calibration] equation can be derived. The equation has the $mx + b$ form of:

Correct Reading = $m(\text{Erroneous Reading}) + b$

Write a pair of equations, representing the two *known* points.

$$0 = m(0.2) + b \quad (1)$$

$$716 = m(719) + b \quad (2)$$

Solve for m by multiplying equation (1) by -1 and adding to equation (2).

$$0 = m(-0.2) - b$$

$$716 = m(719) + b$$

$$716 = m(719 - 0.2) \quad (3)$$

$$m = 716/(719 - 0.2) \quad (4)$$

$$m = 0.9961$$

Substitute the value for m into equation (1) to determine the value for b .

$$0 = 0.9961(0.2) + b \quad (5)$$

$$b = -0.1992$$

Write the correction equation using the previously determined values for m and b .

$$\text{Correct Reading} = 0.9961(\text{Erroneous Reading}) - 0.1992$$

Check the result with the two original erroneous values.

$$\begin{aligned} \text{Correct Reading for } 716 &= 0.9961(719) - 0.1992 \\ &= 715.99 \end{aligned}$$

$$\begin{aligned} \text{Correct Reading for } 0 &= 0.9961(0.2) - 0.1992 \\ &= 0.00002 \end{aligned}$$

Any readings in the region of these two points should be much more accurate after being adjusted by the *correction equation*.

System Channel Calibration

(Example 2 of 2)

A DBK8 and a DaqBook are configured for a 50 volt range. Shorting the inputs together delivers a reading of 0.022 volts and applying a DC calibrator set at 47.5 volts produces a reading of 48.3 volts. From these two “points” a correction or calibration equation can be derived which has the form:

Correct Reading = m(Erroneous Reading) + b

Write a pair of equations, representing the two *known* points.

$$\begin{aligned}0 &= m(0.022) + b & (1) \\47.5 &= m(48.3) + b & (2)\end{aligned}$$

Solve for m by multiplying equation (1) by -1 and adding to equation (2).

$$\begin{aligned}0 &= m(-0.022) - b \\47.5 &= m(48.3) + b \\47.5 &= m(48.3 - 0.022) & (3) \\m &= 47.5/(48.3 - 0.022) & (4) \\m &= 0.9839\end{aligned}$$

Substitute the value for m into equation (1) to determine the value for b.

$$\begin{aligned}0 &= 0.9839(0.022) + b & (5) \\b &= -0.0216\end{aligned}$$

Write the correction equation using the previously determined values for m and b.

$$\text{Correct Reading} = 0.9839(\text{Erroneous Reading}) - 0.0216$$

Check the result with the two original erroneous values.

$$\begin{aligned}\text{Correct Reading for } 47.5 &= 0.9839(48.3) - 0.0216 \\&= 47.501 \\ \text{Correct Reading for } 0 &= 0.9839(0.022) - 0.0216 \\&= 0.00004\end{aligned}$$

Any readings in the region of these two points should be much more accurate after being adjusted by the *correction equation*.

Combined System Channel Calibration and Engineering Units Conversion

A DBK15 and a DaqBook are connected to a string pot to measure the open position of a vertical bay door. When the door is closed, the voltage reading given by the DaqBook is 0.175 volts. When the door is raised to a height of 12 feet, the voltage reading provided by the DaqBook is 4.572 volts. From these two “points” a correction [or calibration] equation can be derived which has the form:

$$\text{Correct Reading} = m(\text{Erroneous Reading}) + b$$

Write a pair of equations, representing the two *known* points.

$$0 = m(0.175) + b \quad (1)$$

$$12 = m(4.572) + b \quad (2)$$

Solve for *m* by multiplying equation (1) by -1 and adding to equation (2).

$$0 = m(-0.175) - b$$

$$12 = m(4.572) + b$$

$$12 = m(4.572 - 0.175) \quad (3)$$

$$m = 12 / (4.572 - 0.175) \quad (4)$$

$$m = 2.729$$

Substitute the value for *m* into equation (1) to determine the value for *b*.

$$0 = 2.729(0.175) + b \quad (5)$$

$$b = -0.478$$

Write the correction equation using the previously determined values for *m* and *b*.

$$\text{Correct Reading} = 2.729(\text{Erroneous Reading}) - 0.478$$

Check the result with the two original erroneous values.

$$\begin{aligned} \text{Correct Reading for 12} &= 2.729(4.572) - 0.478 \\ &= 12.00 \end{aligned}$$

$$\begin{aligned} \text{Correct Reading for 0} &= 2.729(0.175) - 0.478 \\ &= 0.00 \end{aligned}$$

Any readings in the region of these two points should be much more accurate after being adjusted by the *correction equation*.

WARRANTY/DISCLAIMER

OMEGA ENGINEERING, INC. warrants this unit to be free of defects in materials and workmanship for a period of **13 months** from date of purchase. OMEGA's WARRANTY adds an additional one (1) month grace period to the normal **one (1) year product warranty** to cover handling and shipping time. This ensures that OMEGA's customers receive maximum coverage on each product.

If the unit malfunctions, it must be returned to the factory for evaluation. OMEGA's Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective, it will be repaired or replaced at no charge. OMEGA's WARRANTY does not apply to defects resulting from any action of the purchaser, including but not limited to mishandling, improper interfacing, operation outside of design limits, improper repair, or unauthorized modification. This WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of having been damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA's control. Components in which wear is not warranted, include but are not limited to contact points, fuses, and triacs.

OMEGA is pleased to offer suggestions on the use of its various products. However, OMEGA neither assumes responsibility for any omissions or errors nor assumes liability for any damages that result from the use of its products in accordance with information provided by OMEGA, either verbal or written. OMEGA warrants only that the parts manufactured by the company will be as specified and free of defects. OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESSED OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. LIMITATION OF LIABILITY: The remedies of purchaser set forth herein are exclusive, and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.

CONDITIONS: Equipment sold by OMEGA is not intended to be used, nor shall it be used: (1) as a "Basic Component" under 10 CFR 21 (NRC), used in or with any nuclear installation or activity; or (2) in medical applications or used on humans. Should any Product(s) be used in or with any nuclear installation or activity, medical application, used on humans, or misused in any way, OMEGA assumes no responsibility as set forth in our basic WARRANTY/DISCLAIMER language, and, additionally, purchaser will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the Product(s) in such a manner.

RETURN REQUESTS/INQUIRIES

Direct all warranty and repair requests/inquiries to the OMEGA Customer Service Department. BEFORE RETURNING ANY PRODUCT(S) TO OMEGA, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OMEGA'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS). The assigned AR number should then be marked on the outside of the return package and on any correspondence.

The purchaser is responsible for shipping charges, freight, insurance and proper packaging to prevent breakage in transit.

FOR **WARRANTY** RETURNS, please have the following information available BEFORE contacting OMEGA:

1. Purchase Order number under which the product was PURCHASED,
2. Model and serial number of the product under warranty, and
3. Repair instructions and/or specific problems relative to the product.

FOR **NON-WARRANTY** REPAIRS, consult OMEGA for current repair charges. Have the following information available BEFORE contacting OMEGA:

1. Purchase Order number to cover the COST of the repair,
2. Model and serial number of the product, and
3. Repair instructions and/or specific problems relative to the product.

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering.

OMEGA is a registered trademark of OMEGA ENGINEERING, INC.

© Copyright 2006 OMEGA ENGINEERING, INC. All rights reserved. This document may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without the prior written consent of OMEGA ENGINEERING, INC.

Where Do I Find Everything I Need for Process Measurement and Control? **OMEGA...Of Course!** *Shop online at omega.com*

TEMPERATURE

- ☑ Thermocouple, RTD & Thermistor Probes, Connectors, Panels & Assemblies
- ☑ Wire: Thermocouple, RTD & Thermistor
- ☑ Calibrators & Ice Point References
- ☑ Recorders, Controllers & Process Monitors
- ☑ Infrared Pyrometers

PRESSURE, STRAIN AND FORCE

- ☑ Transducers & Strain Gages
- ☑ Load Cells & Pressure Gages
- ☑ Displacement Transducers
- ☑ Instrumentation & Accessories

FLOW/LEVEL

- ☑ Rotameters, Gas Mass Flowmeters & Flow Computers
- ☑ Air Velocity Indicators
- ☑ Turbine/Paddlewheel Systems
- ☑ Totalizers & Batch Controllers

pH/CONDUCTIVITY

- ☑ pH Electrodes, Testers & Accessories
- ☑ Benchtop/Laboratory Meters
- ☑ Controllers, Calibrators, Simulators & Pumps
- ☑ Industrial pH & Conductivity Equipment

DATA ACQUISITION

- ☑ Data Acquisition & Engineering Software
- ☑ Communications-Based Acquisition Systems
- ☑ Plug-in Cards for Apple, IBM & Compatibles
- ☑ Datalogging Systems
- ☑ Recorders, Printers & Plotters

HEATERS

- ☑ Heating Cable
- ☑ Cartridge & Strip Heaters
- ☑ Immersion & Band Heaters
- ☑ Flexible Heaters
- ☑ Laboratory Heaters

ENVIRONMENTAL MONITORING AND CONTROL

- ☑ Metering & Control Instrumentation
- ☑ Refractometers
- ☑ Pumps & Tubing
- ☑ Air, Soil & Water Monitors
- ☑ Industrial Water & Wastewater Treatment
- ☑ pH, Conductivity & Dissolved Oxygen Instruments