

1 YEAR
WARRANTY



User's Guide

Shop online at

omega.com®

CE OMEGA®

omega.com

e-mail: info@omega.com

*For latest product manuals:
omegamanual.info*

ISO 9001
CERTIFIED
CORPORATE QUALITY

STAMFORD, CT

ISO 9001
CERTIFIED
CORPORATE QUALITY

MANCHESTER, UK



FTB3000 Series Positive Displacement Meters



OMEGAnet® Online Service
omega.com

Internet e-mail
info@omega.com

Servicing North America:

U.S.A.:
ISO 9001 Certified

Omega Engineering, Inc., One Omega Drive, P.O. Box 4047
Stamford, CT 06907-0047
Toll-Free: 1-800-826-6342
FAX: (203) 359-7700

Tel: (203) 359-1660
e-mail: info@omega.com

Canada:

976 Bergar
Laval (Quebec), H7L 5A1 Canada
Toll-Free: 1-800-826-6342
FAX: (514) 856-6886

TEL: (514) 856-6928
e-mail: info@omega.ca

For immediate technical or application assistance:

U.S.A. and Canada: Sales Service: 1-800-826-6342/1-800-TC-OMEGA®
Customer Service: 1-800-622-2378/1-800-622-BEST®
Engineering Service: 1-800-872-9436/1-800-USA-WHEN®

**Mexico
Latin America**

En Español: 001 (203) 359-7803
info@omega.com.mx

FAX: 001 (203) 359-7807
e-mail: espanol@omega.com

Servicing Europe:

Benelux:

Managed by the United Kingdom Office
Toll-Free: 0800 099 3344
FAX: +31 20 643 46 43

TEL: +31 20 347 21 21
e-mail: sales@omegaeng.nl

Czech Republic:

Frystatska 184
733 01 Karviná, Czech Republic
Toll-Free: 0800-1-66342
FAX: +420-59-6311114

TEL: +420-59-6311899
e-mail: info@omegashop.cz

France:

Managed by the United Kingdom Office
Toll-Free: 0800 466 342
FAX: +33 (0) 130 57 54 27

TEL: +33 (0) 161 37 29 00
e-mail: sales@omega.fr

Germany/Austria:

Daimlerstrasse 26
D-75392 Deckenpfronn, Germany
Toll-Free: 0800 6397678
FAX: +49 (0) 7056 9398-29

TEL: +49 (0) 7056 9398-0
e-mail: info@omega.de

United Kingdom:

ISO 9001 Certified

OMEGA Engineering Ltd.
One Omega Drive, River Bend Technology Centre, Northbank
Irlam, Manchester M44 5BD United Kingdom
Toll-Free: 0800-488-488
FAX: +44 (0) 161 777-6622

TEL: +44 (0) 161 777-6611
e-mail: sales@omega.co.uk

It is the policy of OMEGA Engineering, Inc. to comply with all worldwide safety and EMC/EMI regulations that apply. OMEGA is constantly pursuing certification of its products to the European New Approach Directives. OMEGA will add the CE mark to every appropriate device upon certification.

The information contained in this document is believed to be correct, but OMEGA accepts no liability for any errors it contains, and reserves the right to alter specifications without notice.

WARNING: These products are not designed for use in, and should not be used for, human applications.

Contents

1.	Introduction.....	3
2.	Specifications.....	5
3.	Operation	7
	3.1 Principle.....	7
	3.2 Precautions.....	7
4.	Installation	9
5.	Maintenance.....	11
	5.1 General.....	11
	5.2 Trouble Shooting	11
	5.3 Spare Parts	12

This page intentionally left blank.

1. Introduction

The FTB3000 Series of positive displacement meters incorporates smooth oval rotors in their design. The oval rotor principle has proven to be a reliable and highly accurate method of measuring flow. Along with the smooth oval rotors, exceptional repeatability and high accuracy over a wide range of viscosities and flow rates are features of the FTB3000 Series flow meter design.

The low pressure drop and high pressure rating means the Omega FTB3000 Series flow meter is suitable for both gravity and pump (in line) applications.


Please take a few minutes to read through this manual before installing and operating your meter. If you have any problems with the meter, refer to the maintenance and troubleshooting sections of this manual.

If you need further assistance, contact Omega's customer service department by telephone or fax for advice.

This page intentionally left blank.

2. Specifications

Service Fluids:	Clean liquids, max particle size .125"
Accuracy:	± 0.25% of reading or better above 100 cstk
Repeatability:	± 0.05%
Flow Range:	
w/ Mag Coil Pickup	2 to 20 GPM
w/ Hall Effect Pickup	0.02 to 20 GPM
K-factor:	460 pulses per gallon (approximate)
Operating Temperature:	
w/ Mag Coil Pickup:	-268°C to +232°C (-450°F to +450°F)
w/ Hall Effect Pickup:	-40°C to +150°C (-40°F to +302°F)
Operating Pressure:	3000 PSIG standard
Minimum Fluid Viscosity:	100 cstk
Wetted Parts:	316 SS body and gears with peek gear seats
Bearings:	Shielded, self lubricating 440 SS ball bearings
Connections:	
Flange Option:	1" MNPT STD
Pickup Coil:	Magnetic Type or Hall Effect (6 to 24 vdc power)
Calibration:	10-point calibration traceable to NIST @ 100 cstsks

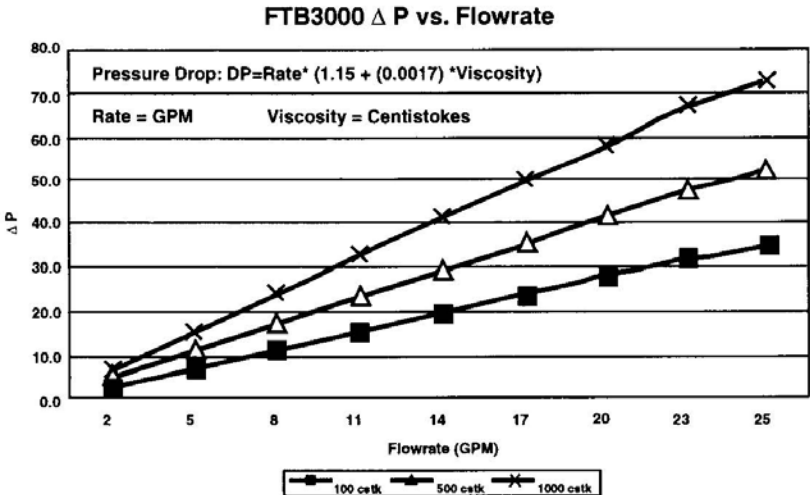


This page intentionally left blank.

3. Operation

3.1 Principle

The FTB3000 Series of positive displacement meters use a pair of smooth oval rotors to provide a reliable and highly accurate measurement of flow. The smooth oval rotors displace a precise volume of fluid which is passed through the measurement chamber during each revolution. The smooth oval rotor design along with the viscosity of the fluid provides a complete viscous seal within the measurement chamber.

The unique patented design of Omega's Oval Gear meter incorporates two smooth oval rotors 90 degrees out of phase. The phase relationship of the rotors is maintained by two oval timing gears which are out of the flow path. The oval timing gears have a pitch diameter equal to the outside diameter of the smooth oval rotors.

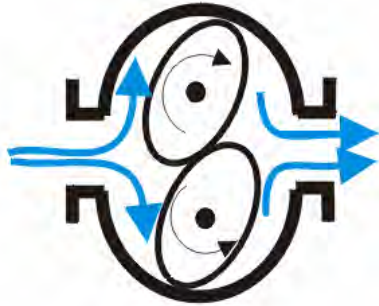

The flow through the meter measurement chamber follows the path of least resistance. Therefore no liquid passes through the center cavity between the rotors. The fluid is displaced from the inlet to the outlet via the area between the smooth oval rotors and the inner diameter of the meter housing.


3.2 Precautions

- Before use, confirm the fluid to be used is compatible with the meter and make certain that the operating conditions conform to the meter specifications.
- To prevent damage to the meter slowly fill the system with fluid (this will prevent damage that may be caused by air purge).
- Keep the flowrate within the meter ratings.
- Remove meter from the piping, replacing with a short pipe, when cleaning the piping system by flushing. Costly damage to the meter may result if the assembly is cleaned by flushing with the meter installed.

This page intentionally left blank.


4. Installation

- Use thread sealant on all pipe threads.
- Install the meter carefully to avoid pipe strains.
- The meter must be installed on the discharge side of the pump.
- In tank-head operation, the head of the fluid must be higher than the pressure loss of the meter.
- The flow direction must conform to the arrow mark on the meter body.
- The meter must be installed in the correct orientation (see figure below).

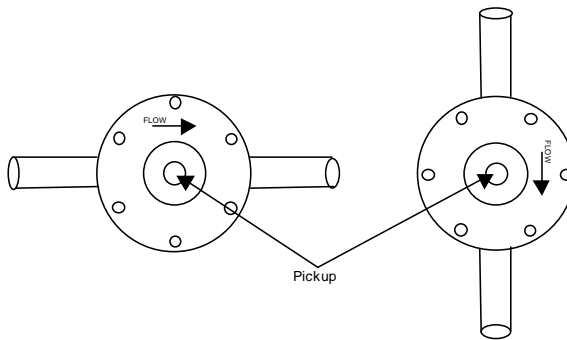


- Connect appropriate connector from pick-up from DCS or electronics.

Pickup Connections




**Standard
MAG**

A - Signal (+)
B - Common (-)



**Redi-Pulse
(Open Collector)**

A - 8 - 30 Vdc (+)
B - Common (-)
C - Pulse Output



**Hall Effect
(Open Collector)**

A - 3.5 - 24 Vdc (+)
B - Common (-)
C - Pulse Output

This page intentionally left blank.

5. Maintenance

5.1 General

The Omega FTB3000 Series flowmeters do not require routine maintenance and do not contain any field serviceable or replaceable parts.

5.2 Trouble Shooting

Refer to the following troubleshooting guide for assistance with possible meter malfunctions:

TROUBLE	CAUSE	REMEDY
Fluid will not flow through the meter	<ul style="list-style-type: none">▪ Meter installed with incorrect orientation.▪ Line to meter blocked.▪ Insufficient differential pressure.	Re-orientate the meter. Clear line to meter. Increase upstream pressure.
Reduced flow through the meter	<ul style="list-style-type: none">▪ Line to meter partially blocked.▪ Insufficient differential pressure.	Clear line to meter. Increase upstream pressure.
Meter readings inaccurate	<ul style="list-style-type: none">▪ Fluid flowrate is too low.▪ Fluid viscosity too low.▪ Air in fluid.▪ Meter drag due to incorrect installation.	See "Specifications" for min and max flowrates. Check fluid specifications. Bleed air from system. Re-adjust meter installation.
Meter not giving pulse signal	<ul style="list-style-type: none">▪ Faulty pickup sensor.	Replace pickup sensor.

Due to the precision alignment of the Omega FTB3000 Series flowmeter internals, field repairs are not recommended. Should the meter require internal repairs, return the meter to the factory.

5.3 Spare Parts

The following table contains the recommended spare parts for the Omega FTB3000 Series flowmeters:

Item No.	Qty	Part No.	Part Description
1	1	300-6005	MAG Coil Pickup; PC24-45G
1	1	300-6026	Intrinsically Safe MAG Pickup; ISM-001
1	1	300-6041	MAG Redi-Pulse Pickup; RPM01S
1	1	300-6052	Hall Effect Pickup; HE01S

NOTE: The meter pickup must be replaced with a pickup of the same type. Refer to the meter model number for the type of pickup being used.



WARRANTY/DISCLAIMER

OMEGA ENGINEERING, INC. warrants this unit to be free of defects in materials and workmanship for a period of **13 months** from date of purchase. OMEGA's WARRANTY adds an additional one (1) month grace period to the normal **one (1) year product warranty** to cover handling and shipping time. This ensures that OMEGA's customers receive maximum coverage on each product.

If the unit malfunctions, it must be returned to the factory for evaluation. OMEGA's Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective, it will be repaired or replaced at no charge. OMEGA's WARRANTY does not apply to defects resulting from any action of the purchaser, including but not limited to mishandling, improper interfacing, operation outside of design limits, improper repair, or unauthorized modification. This WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of having been damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA's control. Components in which wear is not warranted, include but are not limited to contact points, fuses, and triacs.

OMEGA is pleased to offer suggestions on the use of its various products. However, OMEGA neither assumes responsibility for any omissions or errors nor assumes liability for any damages that result from the use of its products in accordance with information provided by OMEGA, either verbal or written. OMEGA warrants only that the parts manufactured by the company will be as specified and free of defects. OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESSED OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. LIMITATION OF LIABILITY: The remedies of purchaser set forth herein are exclusive, and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.

CONDITIONS: Equipment sold by OMEGA is not intended to be used, nor shall it be used: (1) as a "Basic Component" under 10 CFR 21 (NRC), used in or with any nuclear installation or activity; or (2) in medical applications or used on humans. Should any Product(s) be used in or with any nuclear installation or activity, medical application, used on humans, or misused in any way, OMEGA assumes no responsibility as set forth in our basic WARRANTY/DISCLAIMER language, and, additionally, purchaser will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the Product(s) in such a manner.

RETURN REQUESTS/INQUIRIES

Direct all warranty and repair requests/inquiries to the OMEGA Customer Service Department. **BEFORE RETURNING ANY PRODUCT(S) TO OMEGA, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OMEGA'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS).** The assigned AR number should then be marked on the outside of the return package and on any correspondence.

The purchaser is responsible for shipping charges, freight, insurance and proper packaging to prevent breakage in transit.

FOR **WARRANTY** RETURNS, please have the following information available BEFORE contacting OMEGA:

1. Purchase Order number under which the product was PURCHASED,
2. Model and serial number of the product under warranty, and
3. Repair instructions and/or specific problems relative to the product.

FOR **NON-WARRANTY** REPAIRS, consult OMEGA for current repair charges. Have the following information available BEFORE contacting OMEGA:

1. Purchase Order number to cover the COST of the repair,
2. Model and serial number of the product, and
3. Repair instructions and/or specific problems relative to the product.

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering.

OMEGA is a registered trademark of OMEGA ENGINEERING, INC.

© Copyright 2011 OMEGA ENGINEERING, INC. All rights reserved. This document may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without the prior written consent of OMEGA ENGINEERING, INC.

Where Do I Find Everything I Need for Process Measurement and Control? **OMEGA...Of Course!**

Shop online at omega.comSM

TEMPERATURE

- ☑ Thermocouple, RTD & Thermistor Probes, Connectors, Panels & Assemblies
- ☑ Wire: Thermocouple, RTD & Thermistor
- ☑ Calibrators & Ice Point References
- ☑ Recorders, Controllers & Process Monitors
- ☑ Infrared Pyrometers

PRESSURE, STRAIN AND FORCE

- ☑ Transducers & Strain Gages
- ☑ Load Cells & Pressure Gages
- ☑ Displacement Transducers
- ☑ Instrumentation & Accessories

FLOW/LEVEL

- ☑ Rotameters, Gas Mass Flowmeters & Flow Computers
- ☑ Air Velocity Indicators
- ☑ Turbine/Paddlewheel Systems
- ☑ Totalizers & Batch Controllers

pH/CONDUCTIVITY

- ☑ pH Electrodes, Testers & Accessories
- ☑ Benchtop/Laboratory Meters
- ☑ Controllers, Calibrators, Simulators & Pumps
- ☑ Industrial pH & Conductivity Equipment

DATA ACQUISITION

- ☑ Data Acquisition & Engineering Software
- ☑ Communications-Based Acquisition Systems
- ☑ Plug-in Cards for Apple, IBM & Compatibles
- ☑ Data Logging Systems
- ☑ Recorders, Printers & Plotters

HEATERS

- ☑ Heating Cable
- ☑ Cartridge & Strip Heaters
- ☑ Immersion & Band Heaters
- ☑ Flexible Heaters
- ☑ Laboratory Heaters

ENVIRONMENTAL MONITORING AND CONTROL

- ☑ Metering & Control Instrumentation
- ☑ Refractometers
- ☑ Pumps & Tubing
- ☑ Air, Soil & Water Monitors
- ☑ Industrial Water & Wastewater Treatment
- ☑ pH, Conductivity & Dissolved Oxygen Instruments