


1 YEAR
WARRANTY



User's Guide

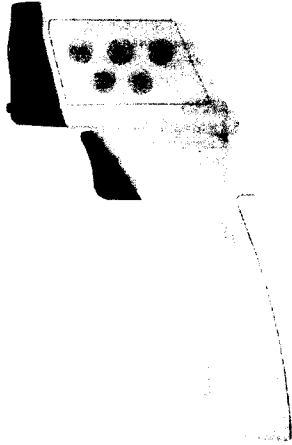

Shop online at

omega.com
THE OMEGA

omega.com

e-mail: info@omega.com

For latest product manuals:

omega.manual.info



DTG-500 Coating Thickness Gauge

Calibration:

1. Turn on the power.
2. Select unit (mils or um).
3. Press and hold "CAL" key (for about 4 sec) until "—1" flashes on the LCD and "CAL", "HOLD" indicated at middle-lower of LCD. These mean the gauge is in calibration mode. Press and hold "CAL" key for about 4 seconds. To exit the calibration mode.
4. Press the sensor onto the metal calibration plate, pull and release trigger. There is a measured reading hold on LCD. Adjust the reading to "00.0" (for mils, "000" for um) with "▲" and "▼" keys. Then press "CAL" key, LCD shows "—2" 3 times, and LCD shows "—2". Press and hold "CAL" key for about 4 seconds. To abort the input data and exit the calibration mode.
5. Place the foil with known thickness on the metal calibration plate, press the sensor onto the foil, pull the trigger and release. There is a measured reading hold on LCD. Adjust the reading to the thickness of the foil with "▲" and "▼" keys. Then press "CAL" key, LCD shows "—3" 3 times, and LCD shows "—3".
6. Remove the gauge from the foil and calibration plate.
7. Press and hold the "CAL" key for 4 seconds to exit the calibration mode, the power will go off and the calibration is completed.
8. If it exits the calibration mode, the procedure is not completed. The power does not go off, and the calibration data keep the previous calibration settings.

INTRODUCTION

This instrument is a portable easy to use 3 1/2 digit, coating thickness gauge for the non-destructive measurement of non-magnetic coatings on a ferrous surface. Useful applications of this gauge include measuring the thickness of paint, enamel, plating, galvanizing, etc on a ferrous surface. Designed for simple one hand operation, the meter has a backlit LCD display, Auto-Hold function and auto power down (15 seconds approx.) after releasing trigger to extend battery life.

CAUTION

- Do not use the unit near any device which generates strong electromagnetic radiation or near a static electrical charge, as these may cause errors.
- Do not use the unit where it may be exposed to corrosive or explosive gases. The unit may be damaged, or explosion may occur.
- Do not keep or use this unit in an environment where it will be directly illuminated by sunshine, or where it condensation. If you do, it may be deformed, its insulation may be damaged, or it may no longer function according to specification.
- Do not place the meter on or around hot objects (70°C 158°F). It may cause damage to the case.
- If the meter is exposed to significant changes in ambient temperature (hot to cold or cold to hot). Allow 30 minutes for temperature stabilization, before taking measurement.

"☉" button

Use "☉" button to select turn on or off the Back-Light.

mils/um button

1. Press "mils/um" key to switch between mils and um. (1 mils = 25.4 um)
2. Selected unit is shown in LCD above the reading.

OPERATION

1. Pull the trigger to turn on the meter.
2. Press the sensor on the object.
3. Pull the trigger to the measuring the thickness, releasing trigger to stop measuring the thickness.

MAINTENANCE

Battery Replacement

1. Power is supplied by a 9 volt "transistor" battery (NEDA 1604, IEC 6F22).
2. Pull off battery cover "☐".
3. Remove the battery cover by gently sliding it on wards the bottom of the meter.
4. Remove and disconnect the old battery from the meter and replace with a new unit. Wind the excess lead length and put the top of battery beneath the battery chamber. Install the battery and put the battery cover.

- **Condensation** may form on the sensor when going from a cold to hot environment-wait 10 minutes for condensation to dissipate before taking measurements.
- This unit is not constructed to be waterproof or dust-proof, so do not use it in a very dusty environment or in one where it will get wet.

SPECIFICATIONS

GENERAL

Display: 3 1/2 digit liquid crystal display (LCD) with maximum reading of 1999.

Low battery indication: The "E" is displayed when the battery voltage drops below the operating level.

Measurement rate: 1 second, nominal.

Operating Environment: 32°F to 122°F (0°C to 50°C) at < 75% R.H.

Storage Temperature: -4°F to 140°F (-20°C to 60°C), 0 to 80% R.H. with battery removed from meter.

Auto power off: 15 seconds.

Standby consuming current: <6μA.

Battery: Standard 9V battery (NEDA 1604, IEC 6F22 006P).

Battery Life: 9 hours (continuity) typical (contain Backlit).

Dimensions: 148mm(H) x 105mm(W) x 42mm(D).

Weight: Approx. 157g (including battery).

Applications: All non-magnetic coatings such as paint, enamel, cadmium, chrome, teflon, on a ferrous surface.

ELECTRICAL

Thickness Range: 0 to 40.0mils(0 to

Display Resolution: 0.1mils/1um.

Accuracy:

±4dpts on 0 to 7.8mils

±7dpts on 0 to 199um

±(3%+4dpts) on 7.9mils to 40mils(20

Temperature Coefficient: ±0.1% of reading is greater, change in accuracy per °F/°C ambient operating temperature above 82.4 low 64.4°F/18°C.

Response Time: 1 second.

OPERATING INSTRUCTIONS

Turn on and off power:


1. Pull the trigger to turn on power, LCD
2. Auto Power Off (APO) function: LCD without operation for 15 seconds, power automatically.

Measuring:

1. Turn on the power.
2. Pull the trigger to the measuring the thickness of the foil.
3. Releasing trigger to stop measuring and hold the display reading.
4. During the trigger being pulled, read every second.
5. During the trigger being pulled, APO

Cleaning

Periodically wipe the case with a damp cloth and detergent, do not use abrasives or solvents.

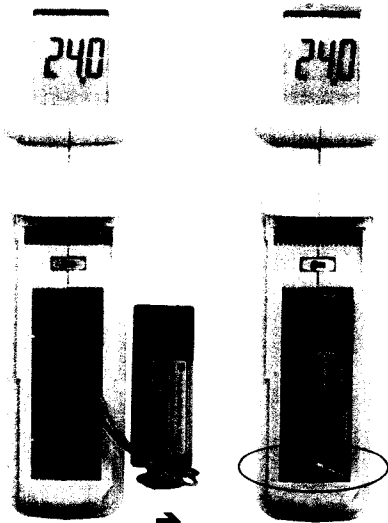

Please Attention



OMEGAnet® On-Line Service
 omega.com Internet e-mail
 info@omega.com

Servicing North America:

U.S.A.: One Omega Drive, Box 4047
 Stamford, CT 06907-0047
ISO 9001 Tel: (203) 359-1660
Certified FAX: (203) 359-7700
 e-mail: info@omega.com

Canada: 976 Bergar
 Laval (Quebec) H7L 5A1, Canada
 Tel: (514) 856-6928
 FAX: (514) 856-6886
 e-mail: info@omega.ca

For immediate technical or application assistance:

U.S.A. and Sales Service: 1-800-826-6342/1-800-TC-OMEGA*
Canada: Customer Service: 1-800-622-2378/1-800-622-BEST*
 Engineering Service: 1-800-872-9436/1-800-USA-WHEN*
Mexico: En Español: (001) 203-359-7803
 FAX: (001) 203-359-780
 e-mail: espanol@omega.com
 info@omega.com.mx

Servicing Europe:

Czech Republic:
 Frysavská 288, 259 01 Koutná, Czech Republic
 Tel: +42 029 6331899 FAX: +42 029 6311114
 Toll Free: 0800-1-66302
 e-mail: info@omegacp.cz

Germany/Austria:
 Dammstrasse 26, D-75202
 Dechingen, Germany
 Tel: +49 07056 9398-0
 FAX: +49 07056 9398-29
 Toll Free in Germany: 0800 639 7678
 e-mail: info@omega.de

United Kingdom:
 ISO 9002 Certified
 One Omega Drive
 River Bend Technology Centre
 Northbank, Irlam, Manchester
 M44 5BD United Kingdom
 Tel: +44 (0)161 777 6611
 FAX: +44 (0)161 777 6622
 Toll Free in United Kingdom:
 0800-488-488
 e-mail: sales@omega.co.uk

It is the policy of OMEGA Engineering, Inc. to comply with all worldwide safety and EMC/EMI regulations that apply. OMEGA is constantly pursuing certification of its products to the European New Approach Directives. OMEGA will add the CE mark to every appropriate device upon certification.

The information contained in this document is believed to be correct, but OMEGA accepts no liability for any errors it contains, and reserves the right to alter specifications without notice. **WARNING:** These products are not designed for use in, and should not be used for, human applications.

RETURN REQUESTS/INQUIRIES

Direct all warranty and repair requests/inquiries to the OMEGA Customer Service Department. **BEFORE RETURNING ANY PRODUCT(S) TO OMEGA, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OMEGA'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS).** The assigned AR number should then be marked on the outside of the return package and on any correspondence. The purchaser is responsible for shipping charges, freight, insurance and proper packaging to prevent breakage in transit.

FOR WARRANTY RETURNS, please have the following information available **BEFORE** contacting OMEGA:

1. Purchase Order number under which the product was PURCHASED.
2. Model and serial number of the product under warranty, and
3. Repair instructions and/or specific problems relative to the product.

FOR NON-WARRANTY REPAIRS, consult OMEGA for current repair charges. Have the following information available **BEFORE** contacting OMEGA:

1. Purchase Order number to cover the COST of the repair,
2. Model and serial number of the product, and
3. Repair instructions and/or specific problems relative to the product.

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering. OMEGA is a registered trademark of OMEGA ENGINEERING, INC.
 © Copyright 2006 OMEGA ENGINEERING, INC. All rights reserved. This document may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without the prior written consent of OMEGA ENGINEERING, INC.

WARRANTY/DISCLAIMER

OMEGA ENGINEERING, INC. warrants this unit to be free of defects in materials and workmanship for a period of **13 months** from date of purchase. OMEGA's WARRANTY adds an additional one (1) month grace period to the normal **one (1) year product warranty** to cover handling and shipping time. This ensures that OMEGA's customers receive maximum coverage on each product.

If the unit malfunctions, it must be returned to the factory for evaluation. OMEGA's Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective, it will be repaired or replaced at no charge. OMEGA's WARRANTY does not apply to defects resulting from any action of the purchaser, including but not limited to mishandling, improper interfacing, operation outside of design limits, improper repair, or unauthorized modification. This WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of having been damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA's control. Components in which wear is not warranted, include but are not limited to contact points, fuses, and triacs.

OMEGA is pleased to offer suggestions on the use of its various products. However, OMEGA neither assumes responsibility for any omissions or errors nor assumes liability for any damages that result from the use of its products in accordance with information provided by OMEGA, either verbal or written. OMEGA warrants only that the parts manufactured by the company will be as specified and free of defects. OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESSED OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. LIMITATION OF LIABILITY: The remedies of purchaser set forth herein are exclusive, and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.

CONDITIONS: Equipment sold by OMEGA is not intended to be used, nor shall it be used: (1) as a "Basic Component" under 10 CFR 21 (NRC), used in or with any nuclear installation or activity; or (2) in medical applications or used on humans. Should any Product(s) be used in or with any nuclear installation or activity, medical application, used on humans, or misused in any way, OMEGA assumes no responsibility as set forth in our basic WARRANTY/DISCLAIMER language, and, additionally, purchaser will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the Product(s) in such a manner.

Where Do I Find Everything I Process Measurement and Control OMEGA...Of Course! Shop online at omega.co

TEMPERATURE

- Thermocouple, RTD & Thermistor Probes, Connectors, Panels & Assemblies
- Wire: Thermocouple, RTD & Thermistor
- Calibrators & Ice Point References
- Recorders, Controllers & Process Monitors
- Infrared Pyrometers

PRESSURE, STRAIN AND FORCE

- Transducers & Strain Gages
- Load Cells & Pressure Gages
- Displacement Transducers
- Instrumentation & Accessories

FLOW/LEVEL

- Rotameters, Gas Mass Flowmeters & Flow Computers
- Air Velocity Indicators
- Turbine/Paddlewheel Systems
- Totalizers & Batch Controllers

pH/CONDUCTIVITY

- pH Electrodes, Testers & Accessories
- Benchtop/Laboratory Meters
- Controllers, Calibrators, Simulators & Pumps
- Industrial pH & Conductivity Equipment

DATA ACQUISITION

- Data Acquisition Engineering Software
- Communicative Acquisition Systems
- Plug-in Cards & Compatible Datalogging Systems
- Recorders, Printers

HEATERS

- Heating Cable
- Cartridge & Strip
- Immersion & Laboratory Heaters
- Flexible Heaters

ENVIRONMENTAL MONITORING / CONTROL

- Metering & Control Instrumentation
- Refractometers
- Pumps & Tubing
- Air, Soil & Water Treatment
- pH, Conductivity, Oxygen Instrumentation