

Where Do I Find Everything I Need for Process Measurement and Control?

OMEGA...Of Course!

Shop online at omega.comSM

TEMPERATURE

- ☑ Thermocouple, RTD & Thermistor Probes, Connectors, Panels & Assemblies
- ☑ Wire: Thermocouple, RTD & Thermistor
- ☑ Calibrators & Ice Point References
- ☑ Recorders, Controllers & Process Monitors
- ☑ Infrared Pyrometers

PRESSURE, STRAIN AND FORCE

- ☑ Transducers & Strain Gages
- ☑ Load Cells & Pressure Gages
- ☑ Displacement Transducers
- ☑ Instrumentation & Accessories

FLOW/LEVEL

- ☑ Rotameters, Gas Mass Flowmeters & Flow Computers
- ☑ Air Velocity Indicators
- ☑ Turbine/Paddlewheel Systems
- ☑ Totalizers & Batch Controllers

pH/CONDUCTIVITY

- ☑ pH Electrodes, Testers & Accessories
- ☑ Benchtop/Laboratory Meters
- ☑ Controllers, Calibrators, Simulators & Pumps
- ☑ Industrial pH & Conductivity Equipment

DATA ACQUISITION

- ☑ Data Acquisition & Engineering Software
- ☑ Communications-Based Acquisition Systems
- ☑ Plug-in Cards for Apple, IBM & Compatibles
- ☑ Datalogging Systems
- ☑ Recorders, Printers & Plotters

HEATERS

- ☑ Heating Cable
- ☑ Cartridge & Strip Heaters
- ☑ Immersion & Band Heaters
- ☑ Flexible Heaters
- ☑ Laboratory Heaters

ENVIRONMENTAL MONITORING AND CONTROL

- ☑ Metering & Control Instrumentation
- ☑ Refractometers
- ☑ Pumps & Tubing
- ☑ Air, Soil & Water Monitors
- ☑ Industrial Water & Wastewater Treatment
- ☑ pH, Conductivity & Dissolved Oxygen Instruments

**.1 YEAR
WARRANTY**



User's Guide

Shop online at

omega.com[®]

CEOMEGA[®]

omega.com

e-mail: info@omega.com

For latest product manuals:

omegamanual.info



**Electronic Pressure Switch
PSW14 series**

M-5071/1111



OMEGAnet® Online Service omega.com	Internet e-mail info@omega.com
---------------------------------------	-----------------------------------

Servicing North America:

U.S.A.:
ISO 9001 Certified
Omega Engineering, Inc., One Omega Drive, P.O. Box 4047
Stamford, CT 06907-0047
Toll-Free: 1-800-826-6342
FAX: (203) 359-7700
Tel: (203) 359-1660
e-mail: info@omega.com

Canada:
976 Bergar
Laval (Quebec), Canada H7L 5A1
Toll-Free: 1-800-826-6342
FAX: (514) 856-6886
TEL: (514) 856-6928
e-mail: info@omega.ca

For immediate technical or application assistance:

U.S.A. and Canada: Sales Service: 1-800-826-6342/1-800-TC-OMEGA®
Customer Service: 1-800-622-2378/1-800-622-BEST®
Engineering Service: 1-800-872-9436/1-800-USA-WHEN®

Mexico: En Español: 001 (203) 359-7803
info@omega.com.mx
FAX: (001) 203-359-7807
e-mail: espanol@omega.com

Servicing Europe:

Benelux: Managed by the United Kingdom Office
Toll-Free: 0800 099 3344
FAX: +31 20 643 46 43
TEL: +31 20 347 21 21
e-mail: sales@omega.nl

Czech Republic: Frystatska 184
733 01 Karviná, Czech Republic
Toll-Free: 0800-1-66342
FAX: +420-59-6311114
TEL: +420-59-6311899
e-mail: info@omegashop.cz

France: Managed by the United Kingdom Office
Toll-Free: 0800 466 342
FAX: +33 (0) 130 57 54 27
TEL: +33 (0) 161 37 29 00
e-mail: sales@omega.fr

Germany/Austria: Daimlerstrasse 26
D-75392 Deckenpfronn, Germany
Toll-Free: 0 800 6397678
FAX: +49 (0) 7056 9398-29
TEL: +49 (0) 7059 9398-0
e-mail: info@omega.de

United Kingdom: OMEGA Engineering Ltd.
ISO 9001 Certified
One Omega Drive, River Bend Technology Centre, Northbank
Irlam, Manchester M44 5BD England
Toll-Free: 0800-488-488
FAX: +44 (0)161 777-6622
TEL: +44 (0)161 777-6611
e-mail: sales@omega.co.uk

It is the policy of OMEGA Engineering, Inc. to comply with all worldwide safety and EMC/EMI regulations that apply. OMEGA is constantly pursuing certification of its products to the European New Approach Directives. OMEGA will add the CE mark to every appropriate device upon certification.

The information contained in this document is believed to be correct, but OMEGA accepts no liability for any errors it contains, and reserves the right to alter specifications without notice.

WARNING: These products are not designed for use in, and should not be used for, human applications.



WARRANTY/DISCLAIMER

OMEGA ENGINEERING, INC. warrants this unit to be free of defects in materials and workmanship for a period of **13 months** from date of purchase. OMEGA's WARRANTY adds an additional one (1) month grace period to the normal **one (1) year product warranty** to cover handling and shipping time. This ensures that OMEGA's customers receive maximum coverage on each product.

If the unit malfunctions, it must be returned to the factory for evaluation. OMEGA's Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective, it will be repaired or replaced at no charge. OMEGA's WARRANTY does not apply to defects resulting from any action of the purchaser, including but not limited to mishandling, improper interfacing, operation outside of design limits, improper repair, or unauthorized modification. This WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of having been damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA's control. Components in which wear is not warranted, include but are not limited to contact points, fuses, and triacs.

OMEGA is pleased to offer suggestions on the use of its various products. However, OMEGA neither assumes responsibility for any omissions or errors nor assumes liability for any damages that result from the use of its products in accordance with information provided by OMEGA, either verbal or written. OMEGA warrants only that the parts manufactured by the company will be as specified and free of defects. OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESSED OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. LIMITATION OF LIABILITY: The remedies of purchaser set forth herein are exclusive, and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.

CONDITIONS: Equipment sold by OMEGA is not intended to be used, nor shall it be used: (1) as a "Basic Component" under 10 CFR 21 (NRC), used in or with any nuclear installation or activity; or (2) in medical applications or used on humans. Should any Product(s) be used in or with any nuclear installation or activity, medical application, used on humans, or misused in any way, OMEGA assumes no responsibility as set forth in our basic WARRANTY/DISCLAIMER language, and, additionally, purchaser will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the Product(s) in such a manner.

RETURN REQUESTS/INQUIRIES

Direct all warranty and repair requests/inquiries to the OMEGA Customer Service Department. **BEFORE RETURNING ANY PRODUCT(S) TO OMEGA, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OMEGA'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS).** The assigned AR number should then be marked on the outside of the return package and on any correspondence.

The purchaser is responsible for shipping charges, freight, insurance and proper packaging to prevent breakage in transit.

FOR **WARRANTY** RETURNS, please have the following information available BEFORE contacting OMEGA:

1. Purchase Order number under which the product was PURCHASED,
2. Model and serial number of the product under warranty, and
3. Repair instructions and/or specific problems relative to the product.

FOR **NON-WARRANTY** REPAIRS, consult OMEGA for current repair charges. Have the following information available BEFORE contacting OMEGA:

1. Purchase Order number to cover the COST of the repair,
2. Model and serial number of the product, and
3. Repair instructions and/or specific problems relative to the product.

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering.

OMEGA is a registered trademark of OMEGA ENGINEERING, INC.

© Copyright 2009 OMEGA ENGINEERING, INC. All rights reserved. This document may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without the prior written consent of OMEGA ENGINEERING, INC.

NOTES

TABLE OF CONTENTS

Electronic Pressure Switch PSW14 Series

1	Intended Applications.....	1
2	Safety Instructions.....	1
3	Standards.....	2
4	Warranty/Guaranty.....	2
5	Installation/Commissioning	2
6	Maintenance/Cleaning	3
7	Technical Data.....	4
8	Operation	5
9	Programming.....	5

1 Intended Applications

The pressure switch serves for monitoring a pressure system and has one or two switching outputs.

 DANGER
<p>The switch may only be used in the specified fields of application.</p> <p>The stated pressures and electrical load values must not be exceeded.</p> <p>Observe also the applicable national safety instructions for assembly, commissioning and operation of the switch.</p> <p>The switch is not designed to be used as the only safety relevant element in pressurized systems according to DGR 97/23/EC.</p>

2 Safety Instructions

The safety instructions are intended to protect the user from dangerous situations and/or material damage.

In the operating instructions the seriousness of the potential risk is designated by the following signal words:

 DANGER
<p>Refers to imminent danger to men.</p> <p>Nonobservance may result in fatal injuries.</p>
 WARNING
<p>Refers to a recognizable danger.</p> <p>Nonobservance may result in fatal injuries, and destroy the equipment or plant parts.</p>
 CAUTION
<p>Refers to a danger.</p> <p>Nonobservance may result in light injuries and material damage to the switch and/or to the plant.</p>
 IMPORTANT
<p>Refers to important information essential to the user.</p>
 Disposal
<p>The switch must be disposed of correctly in accordance with the local regulations for electric/electronic equipment.</p> <p>The switch must not be disposed of with the household garbage!</p>

Function	Membrane keys	LED
Activate/actuate Reset RS	Switch the pressure switch on while pressing the membrane key T2 . Press the membrane keys T1 and T2 for 4 s.	The LED flashes for 12 s green and red at the ratio of 1:3. Subsequently the LED shines green.
Error		The LED flashes alternately red and green. The LED shines green, when the fault has been eliminated.

 IMPORTANT
<p>SP > RS: increasing pressure evaluation</p> <p>SP < RS: decreasing pressure evaluation</p>

9.2 Version with two switch points

*** Re-actuation hysteresis 15 %, increasing pressure evaluation

Function	Membrane keys	LED
Activate teaching	Press the membrane keys ▲ (T1) and ▼ (T2) for 4 s.	The LED flashes alternately for 12 s red and green. During these 12 s SP1 and/or SP2 have to be taught. Subsequently the LED shines green.
SP1 teaching	Press the membrane key T1 for 4 s. The current value for SP1 is transferred to the pressure switch.  NOTE When the operation is aborted, SP1 is not updated.	The LED shines red for 4 s. The LED flashes red 3x, after the pressure switch has updated SP1. Subsequently the LED shines green.
SP2 teaching	Press the membrane key T2 for 4 s. The current value for SP2 is transferred to the pressure switch.  NOTE When the operation is aborted, SP2 is not updated.	The LED shines green for 4 s. The LED flashes green 3x, after the pressure switch has updated the SP2. Subsequently the LED shines green.
Activate/actuate Reset SP1	Switch the pressure switch on while pressing the membrane key T1 . Press the membrane keys T1 and T2 for 4 s.	The LED flashes for 12 s red and green at the ratio of 1:3. Subsequently the LED shines green.
Activate/actuate Reset SP2	Switch the pressure switch on while pressing the membrane key T2 . Press the membrane keys T1 and T2 for 4 s.	The LED flashes for 12 s green and red at the ratio of 1:3. Subsequently the LED shines green.
Error		The LED flashes alternately red and green. The LED shines green, when the fault has been eliminated.

8 Operation

The switch may only be put into service and operated by authorized persons. Do not use any hard objects for making entries. A self-test is performed on first commissioning.

The pressure switch is operated via two membrane keys. These must not be touched by means of hard objects.

	IMPORTANT
When power supply is switched on the operational status of the switch is indicated by a green LED. The switching function is not optically indicated.	

9 Programming

	IMPORTANT
The pressure switch is programmed by means of the membrane keys ▲ (T1) and ▼ (T2).	

9.1 Version with one switch point

- * The switch point SP is set to the measuring range end value.
- ** The re-actuation point RS is set to the measuring range end value.

Function	Membrane keys	LED
Activate teaching	Press the membrane keys ▲ (T1) and ▼ (T2) for 4 s.	The LED flashes alternately for 12 s red and green. Subsequently the LED shines green.
SP teaching	Press the membrane key T1 for 4 s. The current value for the SP is transferred to the pressure switch.  NOTE When the operation is aborted, the SP is not updated.	The LED shines red for 4 s. The LED flashes red 3x, after the pressure switch has updated the SP. Subsequently the LED shines green.
RS teaching	Press the membrane key T2 for 4 s. The current value for the RS is transferred to the pressure switch.  NOTE When the operation is aborted, the RS is not updated.	The LED shines green for 4 s. The LED flashes green 3x, after the pressure switch has updated the RS. Subsequently the LED shines green.
Activate/actuate Reset SP	Switch the pressure switch on while pressing the membrane key T1. Press the membrane keys T1 and T2 for 4 s.	The LED flashes for 12 s red and green at the ratio of 1:3. Subsequently the LED shines green.

3 Standards

The standards applied during development, manufacture and configuration are listed in the CE conformity and manufacturer's declaration.

4 Warranty/Guaranty

Warranty

Our scope of delivery and services is governed by the legal warranties and warranty periods.

Terms of guaranty

We guaranty for function and material of the pressure switch under normal operating and maintenance conditions in accordance with the statutory provisions.

Loss of guaranty

The agreed guaranty period will expire in case of:

- incorrect use
- incorrect installation or
- incorrect handling or operation contrary to the provisions of these operating instructions



No liability is assumed for any damage resulting there from, or any consequential damage.

5 Installation/Commissioning

	DANGER
Only install or uninstall the switch when deenergized (electrically and hydraulically/pneumatically). Pressure connection and electrical connection must be carried out by trained or instructed personnel according to state-of-the-art standards. The switch must only be installed in systems where the maximum pressure P_{max} is not exceeded (see type label).	
	WARNING
Be aware of the fact that in case of operation with higher temperatures the casing surface may become very hot!	
	CAUTION
Mount the pressure switch from the bottom to the •tting with a wrench SW 24 and tighten to a torque of 45 Nm torque. Do not put the switch into operation when the switch itself or the connection cable is damaged. Avoid impact and severe vibration during transport. Even if the switch housing remains undamaged inside parts may be damaged and cause malfunctions.	

Electrical connection is to be carried out dependent on the type of switch (see type label) according to the chart below. Wrong assignment of the connections may cause malfunctions or incorrect switch outputs.

Plug M 12x1 4-pin	Version with 1 switching output (1 switch point SP1)	Version with 2 switching outputs (2 switch points SP1/SP2)
Pin 1 brown	+Ub (15... 32 V DC)	+Ub (15... 32 V DC)
Pin 2 white	-	SP2 (0.2 A max.) NO
Pin 3 blue	0 V	0 V
Pin 4 black	SP1 (0.2 A max.) NO	SP1 (0.2 A max.) NO

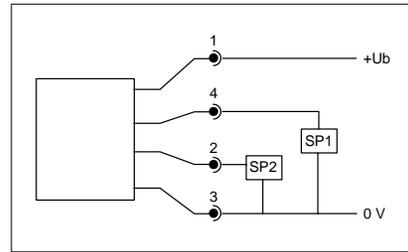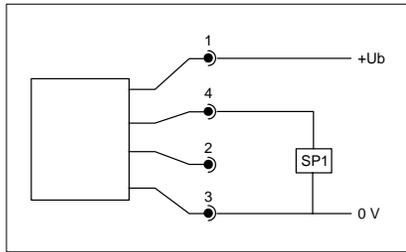


7 Technical Data

PSW14	
Measuring element	Piezoresistive silicon measuring cell with internal stainless steel diaphragm or ceramic measuring cell
Measuring ranges	0 ... 10 bar to 0 ... 600 bar 0 ... 150 psi to 0 ... 9000 psi relative pressure
Transistor switching outputs PNP	1 or 2 x NO contacts
Operating temperature range	-10... +70 C / +14... +158 °F
Media temperature range	-25 ... +100°C / -13 ... +212 °F
Process connection (fitting "A" without adapter)	G1/4
Protection system/class	IP65/III
Electrical connection	Plug 4-pin, M 12x1
Auxiliary power	15...*32 V DC
For further technical data and options please refer to the data sheets	

Operating and display elements/Dimensions

Dimensions (example) mm (in)

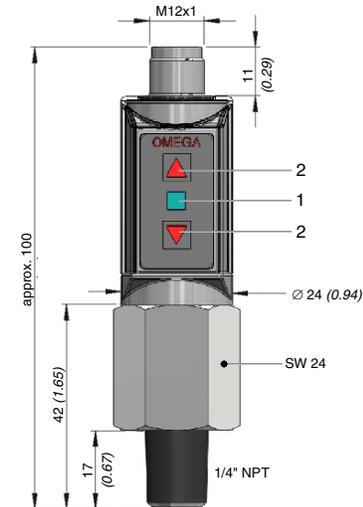

Item 1: LED	
green	Operational status indicator
red	

Item 2: Membrane keys	
▲ T1	Programming keys "Up" and "Down"
▼ T2	

WARNING

Check the operation of the switch regularly. If the switch does not work properly, stop operation immediately!

6 Maintenance/Cleaning

The switch requires no maintenance.

CAUTION

The membrane keys may be damaged by the use of unsuitable cleaning agents. Do not use any cleaning agents containing solvents or abrasive additives.