

**1 YEAR**  
WARRANTY



# **Ω OMEGA<sup>®</sup>** **User's Guide**



*Shop online at*  
**omega.com<sup>®</sup>**

*e-mail: [info@omega.com](mailto:info@omega.com)*  
*or latest product manuals:*  
**omegamannual.info**

**ISO 9001**  
CERTIFIED  
CORPORATE QUALITY

STAMFORD, CT

**ISO 9001**  
CERTIFIED  
CORPORATE QUALITY

MANCHESTER, UK

# **DPA1004 & DPA1044**

## **Relay & I/O Expansion Modules**



OMEGAnet® Online Service  
omega.com

Internet e-mail  
info@omega.com

### Servicing North America:

#### U.S.A.:

ISO 9001 Certified

Omega Engineering, Inc., One Omega Drive, P.O. Box 4047  
Stamford, CT 06907-0047 USA

Toll Free: 1-800-826-6342

FAX: (203) 359-7700

TEL: (203) 359-1660

e-mail: info@omega.com

#### Canada:

976 Bergar

Laval (Quebec), H7L 5A1 Canada

Toll-Free: 1-800-826-6342

FAX: (514) 856-6886

TEL: (514) 856-6928

e-mail: info@omega.ca

### For immediate technical or application assistance:

#### U.S.A. and Canada:

Sales Service: 1-800-826-6342/1-800-TC-OMEGA ®

Customer Service: 1-800-622-2378/1-800-622-BEST ®

Engineering Service: 1-800-872-9436/1-800-USA-WHEN ®

#### Mexico/ Latin America:

En Español: 001 (203) 359-7803

info@omega.com.mx

FAX: 001 (203) 359-7807

e-mail: espanol@omega.com

### Servicing Europe:

#### Benelux:

Managed by the United Kingdom Office

Toll-Free: 0800 099 3344

FAX: +31 20 643 46 43

TEL: +31 20 347 21 21

e-mail: sales@omegaeng.nl

#### Czech Republic:

Frystatska 184

733 01 Karviná, Czech Republic

Toll-Free: 0800-1-66342

FAX: +420-59-6311114

TEL: +420-59-6311899

e-mail: info@omegashop.cz

#### France:

Managed by the United Kingdom Office

Toll-Free: 0800 466 342

FAX: +33 (0) 130 57 54 27

TEL: +33 (0) 161 37 29 00

e-mail: sales@omega.fr

#### Germany/Austria:

Daimlerstrasse 26

D-75392 Deckenpfronn, Germany

Toll-Free: 0800 6397678

FAX: +49 (0) 7056 9398-29

TEL: +49 (0) 7056 9398-0

e-mail: info@omega.de

#### United Kingdom:

ISO 9001 Certified

OMEGA Engineering Ltd.

One Omega Drive, River Bend Technology Centre, Northbank

Irlam, Manchester M44 5BD United Kingdom

Toll-Free: 0800-488-488

FAX: +44 (0) 161 777-6622

TEL: +44 (0) 161 777-6611

e-mail: sales@omega.co.uk

It is the policy of OMEGA Engineering, Inc. to comply with all worldwide safety and EMC/EMI regulations that apply. OMEGA is constantly pursuing certification of its products to the European New Approach Directives. OMEGA will add the CE mark to every appropriate device upon certification.

The information contained in this document is believed to be correct, but OMEGA accepts no liability for any errors it contains, and reserves the right to alter specifications without notice.

**WARNING:** These products are not designed for use in, and should not be used for, human applications.

## WARRANTY/DISCLAIMER

OMEGA ENGINEERING, INC. warrants this unit to be free of defects in materials and workmanship for a period of **13 months** from date of purchase. OMEGA's WARRANTY adds an additional one (1) month grace period to the normal **one (1) year product warranty** to cover handling and shipping time. This ensures that OMEGA's customers receive maximum coverage on each product. If the unit malfunctions, it must be returned to the factory for evaluation. OMEGA's Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective, it will be repaired or replaced at no charge. OMEGA's WARRANTY does not apply to defects resulting from any action of the purchaser, including but not limited to mishandling, improper interfacing, operation outside of design limits, improper repair, or unauthorized modification. This WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of having been damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA's control. Components in which wear is not warranted, include but are not limited to contact points, fuses, and triacs.

**OMEGA is pleased to offer suggestions on the use of its various products. However, OMEGA neither assumes responsibility for any omissions or errors nor assumes liability for any damages that result from the use of its products in accordance with information provided by OMEGA, either verbal or written. OMEGA warrants only that the parts manufactured by the company will be as specified and free of defects. OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESSED OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. LIMITATION OF LIABILITY: The remedies of purchaser set forth herein are exclusive, and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.**

**CONDITIONS:** Equipment sold by OMEGA is not intended to be used, nor shall it be used: (1) as a "Basic Component" under 10 CFR 21 (NRC), used in or with any nuclear installation or activity; or (2) in medical applications or used on humans. Should any Product(s) be used in or with any nuclear installation or activity, medical application, used on humans, or misused in any way, OMEGA assumes no responsibility as set forth in our basic WARRANTY/DISCLAIMER language, and, additionally, purchaser will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the Product(s) in such a manner.

## RETURN REQUEST/INQUIRIES

Direct all warranty and repair requests/inquiries to the OMEGA Customer Service Department. BEFORE RETURNING ANY PRODUCT(S) TO OMEGA, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OMEGA'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS). The assigned AR number should then be marked on the outside of the return package and on any correspondence. The purchaser is responsible for shipping charges, freight, insurance and proper packaging to prevent breakage in transit.

FOR **WARRANTY** RETURNS, please have the following information available BEFORE contacting OMEGA:

1. Purchase Order number under which the product was PURCHASED.
2. Model and serial number of the product under warranty, and
3. Repair instructions and/or specific problems relative to the product.

FOR **NON-WARRANTY** REPAIRS, consult OMEGA for current repair charges. Have the following information available BEFORE contacting OMEGA:

1. Purchase Order number to cover the COST of the repair,
2. Model and serial number of the product, and
3. Repair instructions and/or specific problems relative to the product.

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering.

OMEGA is a registered trademark of OMEGA ENGINEERING, INC.

© Copyright 2012 OMEGA ENGINEERING, INC. All rights reserved. This document may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without the prior written consent of OMEGA ENGINEERING, INC.



**CAUTION:** Read complete instructions prior to installation and operation of the module.



**WARNING:** Risk of electric shock or personal injury.

Expansion modules **DO NOT** contain internal jumpers or user settings.



**WARNING!**

***Hazardous voltages exist within enclosure.  
Installation and service should be performed only by  
trained service personnel.***



**WARNING!**

***Do not connect or disconnect the expansion module  
with the power on!***

## Table of Contents

<b>INTRODUCTION</b> .....	<b>6</b>
Accessories .....	<b>6</b>
<b>SPECIFICATIONS</b> .....	<b>7</b>
General (applicable to both models) .....	<b>7</b>
DPA1004 4-Relay Expansion Module .....	<b>7</b>
DPA1044 Digital Input & Output Expansion Module .....	<b>8</b>
<b>INSTALLATION</b> .....	<b>9</b>
External Relays & Digital I/O Connections .....	<b>9</b>
Terminal Block Connections .....	<b>10</b>

## INTRODUCTION

These external expansion modules add functionality to any DP meter in the field. They can be added at any time and are easy-to-install.

Add a 4-relay expansion module and/or up to two I/O modules. The menu items for these modules do not appear until the module is connected, simplifying the basic menu.

The relay module consists of four 3 amp Form A (SPST) relays.

The I/O module has four digital inputs and four digital outputs per module. External digital inputs can function similarly to the front panel function keys. They can be configured to trigger certain events (i.e. acknowledge/reset alarms, reset max and/or min values, disable/enable all output relays, and hold current relay states), provide direct menu access point, or mimic front panel keys. Digital outputs can be used to remotely monitor DP meter alarm relay output states, or the states of a variety of actions and functions executed by the meter.

RS-232 or RS-422/485 communications modules are also available; refer to the accessories section for ordering details.

## Accessories

Model	Description
DPA1002	DIN-rail mounting kit for two expansion modules
DPA1200	Meter copy cable
DPA1232	RS-232 serial adapter
DPA1485	RS-422/485 serial adapter

## SPECIFICATIONS

*Except where noted all specifications apply to operation at +25°C.*


### General (applicable to both models)

<b>POWER</b>	Meter M-LINK connection
<b>CABLE</b>	Standard CAT5e cable; provided with module. <i>Note: To ensure optimum performance use only supplied cables.</i>
<b>CONNECTORS</b>	RJ45; identical and interchangeable Removable screw terminal blocks that accept 12 to 22 AWG wire.
<b>TIGHTENING TORQUE</b>	Screw terminal connectors: 5 lb-in (0.56 Nm)
<b>ENCLOSURE</b>	ABS-94HB material, UL94HB (Flame-Class Rating)
<b>OVERALL DIMENSIONS</b>	2.286" x .924" x 3.624" (W x H x D) 58.06 mm x 23.47 mm x 92.05 mm (W x H x D)

### DPA1004 4-Relay Expansion Module

<b>RELAYS</b>	Four Form A (SPST); Rated 3 A @ 30 VDC and 125/250 VAC for resistive loads 1/14 HP @ 125/250 VAC for inductive loads.
<b>WEIGHT</b>	2.4 oz (68 g)

## DPA1044 Digital Input & Output Expansion Module

<b>CHANNELS</b>	4 digital inputs & 4 digital outputs per module
<b>SYSTEM</b>	Up to 2 modules for a total of 8 inputs & 8 outputs <i>Note: The jumper located between the RJ45 connectors must be removed on the second module in order for the system to recognize it as module #2.</i>
<b>DIGITAL INPUT LOGIC HIGH</b>	3 to 5 VDC
<b>DIGITAL INPUT LOGIC LOW</b>	0 to 1.25 VDC
<b>DIGITAL OUTPUT LOGIC HIGH</b>	3.1 to 3.3 VDC
<b>DIGITAL OUTPUT LOGIC LOW</b>	0 to 0.4 VDC
<b>SOURCE CURRENT</b>	10 mA maximum output current
<b>SINK CURRENT</b>	1.5 mA minimum input current
<b>+5 V TERMINAL</b>	To be used as pull-up for digital inputs only. Connect normally open pushbuttons across +5 V & D11-4.  <b><i>DO NOT</i></b> use +5 V terminal (pin 1) to power external devices. <b>WARNING</b>
<b>WEIGHT</b>	2.2 oz (62 g)



## INSTALLATION

There is no need to remove the expansion module from its case to complete the installation, wiring, or setup of the unit.




***Do not connect or disconnect the expansion module with the power on!***

**WARNING!**

### External Relays & Digital I/O Connections

The relay and the digital I/O expansion modules DPA1004 & DPA1044 are connected to the meter using a CAT5e cable provided with each module (see Figure 1).

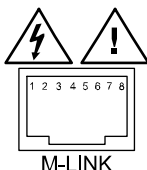

**Figure 1: M-Link Connector Location on the Meter**




**WARNING!**

***Do not connect any equipment other than OMEGA's expansion modules, cables, or meters to the RJ45 M-LINK connector. Otherwise damage will occur to the equipment and the meter.***

The two RJ45 connectors on the expansion modules are identical and interchangeable; they are used to connect additional modules to the system.


*Note: The jumper located between the RJ45 connectors of the DPA1044 (see Figure 2) must be removed on the second digital I/O module in order for the system to recognize it as module #2.*

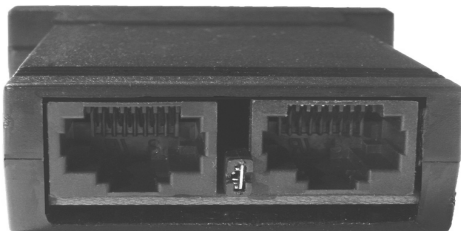


**Figure 2: Jumper Location**

## Terminal Block Connections


All connections are made to removable screw terminal connectors located at the front of the module.



Use copper wire with 60°C or 60/75°C insulation for all line voltage connections. Observe all safety regulations. Electrical wiring should be performed in accordance with all applicable national, state, and local codes to prevent damage to the meter and ensure personnel safety.

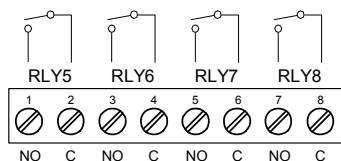

**Figure 3: External Relays Module Connections**

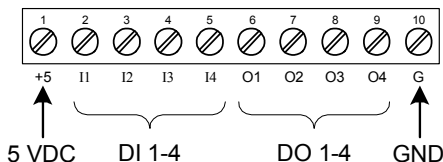

**Figure 4: Digital I/O Module Connections**



# Where Do I Find Everything I Need for Process Measurement and Control? **OMEGA...Of Course!** *Shop online at [omega.com](http://omega.com)<sup>SM</sup>*

## **TEMPERATURE**

- ✔ Thermocouple, RTD & Thermistor Probes, Connectors, Panels & Assemblies
- ✔ Wire: Thermocouple, RTD & Thermistor
- ✔ Calibrators & Ice Point References
- ✔ Recorders, Controllers & Process Monitors
- ✔ Infrared Pyrometers

## **PRESSURE, STRAIN AND FORCE**

- ✔ Transducers & Strain Gages
- ✔ Load Cells & Pressure Gages
- ✔ Displacement Transducers
- ✔ Instrumentation & Accessories

## **FLOW/LEVEL**

- ✔ Rotameters, Gas Mass Flowmeters & Flow Computers
- ✔ Air Velocity Indicators
- ✔ Turbine/Paddlewheel Systems
- ✔ Totalizers & Batch Controllers

## **pH/CONDUCTIVITY**

- ✔ pH Electrodes, Testers & Accessories
- ✔ Benchtop/Laboratory Meters
- ✔ Controllers, Calibrators, Simulators & Pumps
- ✔ Industrial pH & Conductivity Equipment

## **DATA ACQUISITION**

- ✔ Data Acquisition & Engineering Software
- ✔ Communications-Based Acquisition Systems
- ✔ Plug-in Cards for Apple, IBM & Compatibles
- ✔ Data Logging Systems
- ✔ Recorders, Printers & Plotters

## **HEATERS**

- ✔ Heating Cable
- ✔ Cartridge & Strip Heaters
- ✔ Immersion & Band Heaters
- ✔ Flexible Heaters
- ✔ Laboratory Heaters

## **ENVIRONMENTAL MONITORING AND CONTROL**

- ✔ Metering & Control Instrumentation
- ✔ Refractometers
- ✔ Pumps & Tubing
- ✔ Air, Soil & Water Monitors
- ✔ Industrial Water & Wastewater Treatment
- ✔ pH, Conductivity & Dissolved Oxygen Instruments