

# omega.com™

## Ω OMEGA®

PX602, PX603, PX605  
PX612, PX613, PX615  
Pressure Transducer  
M947/1009



PX602, PX603, PX605



PX612, PX613, PX615

### COMMON SPECIFICATIONS FOR ALL UNITS

ACCURACY: (Linearity, Hysteresis and Repeatability)	±0.4% FS (BFSL)	CONSTRUCTION:	Sealed units (All cables are vented. Sensor >300 PSI is not)
HYSTERESIS:	±0.2% FS	VIBRATION:	<±0.1% FS effect for 0-2000 Hz @ 20G's in any axis
REPEATABILITY:	±0.07% FS	SHOCK:	<±0.05% FS effect 100 G's, 20msec shock in any axis
ZERO BALANCE:	±1% FS	FATIGUE:	100 million cycles 20/80% FS with negligible performance loss
STORAGE TEMPERATURE:	-65° to 250°F (-53° to 121°C)	CIRCUIT TO CASE INSULATION:	100M ohms at 50Vdc
OPERATING TEMPERATURE:	-20° to 180°F (-28° to 82°C)	SENSOR TYPE:	Chemical vapor deposited polysilicon strain gages
COMPENSATED TEMPERATURE:	-20° to 160°F (-28° to 71°C)	WETTED PARTS:	17-4 PH SS, 300 Series SS
THERMAL EFFECTS: (Zero)	±0.04% FS/°F	PRESSURE PORT:	1/4-18 NPT (15,000-20,000 = 1/16-18 UNF Female Aminco)
PROOF PRESSURE:	±0.04% FS/°F	CASE:	NEMA 4X, 304 SS
BURST PRESSURE:	15-2000 PSI = 200% FS; 3000-5000 PSI = 150% FS; 7500-20,000 PSI = 120% FS; 15-2000 PSI = 800% FS; 3000-5000 PSI = 300% FS; 7500-20,000 PSI = 150% FS	RESPONSE TIME:	5ms

### PX602 & PX612 SERIES MILLIVOLT OUTPUT

EXCITATION:	10Vdc, (5-10Vdc limit @ 6mA max)	(PX612)	WIRING (PX602)	
OUTPUT:	100mV ±1mV	A	Red	+EXC
SENSITIVITY:	10mV/V	B	Green	+OUTPUT
OUTPUT IMPEDANCE:	100Ω	C	Black	-OUTPUT
WEIGHT:	2 oz (without cable)	D	White	-EXC

### PX603 & PX613 SERIES VOLTAGE OUTPUT

EXCITATION:	24Vdc, (10-36Vdc)	(PX613)	WIRING (PX603)	
OUTPUT:	1-5Vdc (3 wire)	A	Red	+EXC
SUPPLY CURRENT:	<3mA	B	Green	OUTPUT
OUTPUT IMPEDANCE:	1000Ω	D	White	COMMON
WEIGHT:	2 oz (without cable)			

### PX605 & PX615 SERIES CURRENT OUTPUT

EXCITATION:	24Vdc, (10-36Vdc)	(PX615)	WIRING (PX605)	
OUTPUT:	4-20mA (2 wire)	A	Red	+
MAX. LOOP RESISTANCE:	50 x (supply voltage -10)Ω	C	Black	-
WEIGHT:	2 oz (without cable)			

### WARNING! READ BEFORE INSTALLATION

Fluid hammer and surges can destroy any pressure transducer and must always be avoided. A pressure snubber should be installed to eliminate the damaging hammer effects. Fluid hammer occurs when a liquid flow is suddenly stopped, as with quick closing solenoid valves. Surges occur when flow is suddenly begun, as when pump is turned on to full power or a valve is quickly opened.

Liquid surges are particularly damaging to pressure transducers if the pipe is originally empty. To avoid damaging surges, fluid lines should remain full (if possible), pumps should be brought up to power slowly and valves opened slowly. To avoid damage from both fluid hammer and surges, a surge chamber should be installed and

a pressure snubber should be installed on every transducer.

Symptoms of fluid hammer and surge's damaging effects:

1. Pressure transducer exhibits an output at zero pressure (large zero offset). If zero offset is less than 10% FS, user can usually re-zero meter, install proper snubber and continue monitoring pressures.
2. Pressure transducer output remains constant regardless of pressure.
3. In severe cases, there will be no output.

# — NOTES —

## HANDLING

This instrument is susceptible to damage when exposed to static electrical charges. To avoid damage to the sensor observe the following:

- Ground the transducer body before making any electrical connections.
- When disconnecting, remove ground connection last.

**Note:** If supplied, the braided shield in the cable is not connected to the transducer's body and is not a suitable ground.

## MOUNTING

Although the units can withstand some vibration, it is always good practice to mount the sensor where there is minimum vibration. Use Teflon® tape on NPT threads and install the wrench on hex flats. **DO NOT** tighten by using a pipe wrench on the housing.

(Teflon is a registered trademark of E. I. Dupont de Nemours)

## CALIBRATION



All models are tested to meet or exceed the published specifications. The calibration and testing was performed using instrumentation and standards that are traceable to the U.S. National Institute of Standards and Technology (NIST). We further certify that our calibration systems complies with MIL-STD-45662.

Each sensor comes calibrated and does not require recalibration. The zero and span pots are accessible through the top of the case. Loosen the four screws and separate the top carefully. The zero pot is marked with a white dot. Some models have the span pot on the side of the pull out board. Be careful of static charges when touching the board (span pot will be on the opposite side from the zero pot).

PX602, PX603, PX605

DIMENSIONS

PX612, PX613, PX615


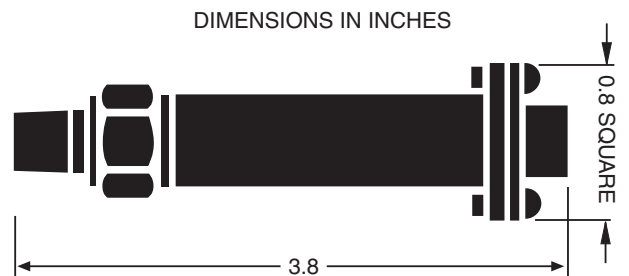
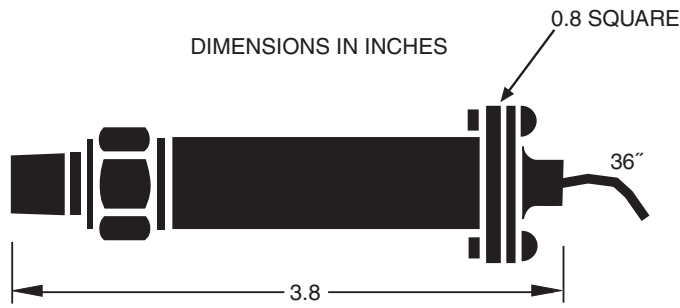


PX602, PX612

WIRING

PX603, PX613

PX605, PX615

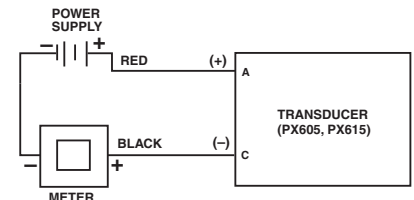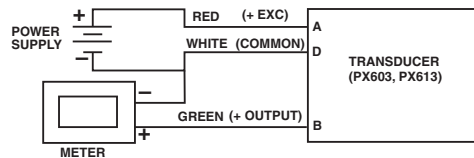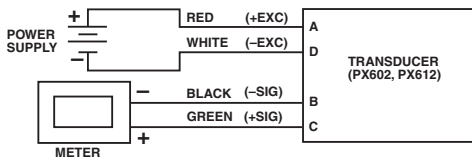

## WARRANTY

OMEGA warrants this unit to be free of defects in materials and workmanship and to give satisfactory service for a period of **13 months** from date of purchase. OMEGA's Warranty adds an additional one (1) month grace period to the normal **one (1) year product warranty** to cover handling and shipping time. This ensures that our customers receive maximum coverage on each product. If the unit malfunctions, it must be returned to the factory for evaluation. Our Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective, it will be repaired or replaced at no charge. However, this WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of being damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA's control. Components which wear or are damaged by misuse are not warranted. These include contact points, fuses, and triacs.

**We are glad to offer suggestions on the use of our various products. Nevertheless, OMEGA warrants only that the parts manufactured by it will be as specified and free of defects.**

**OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESS OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED.**

**LIMITATION OF LIABILITY:** The remedies of buyer set forth herein are exclusive, and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.

Every precaution for accuracy has been taken in the preparation of this manual, however, OMEGA ENGINEERING, INC. neither assumes responsibility for any omissions or errors that may appear nor assume liability for any damages that result from the use of the products in accordance with the information contained in the manual.

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering.

OMEGA is a registered trademark of OMEGA ENGINEERING, INC.

© Copyright 1992 OMEGA ENGINEERING, INC. All rights reserved including illustrations. Nothing in this manual may be reproduced in any manner, either wholly or in part for any purpose whatsoever without written permission from OMEGA ENGINEERING, INC. 2M807

Servicing USA and Canada: Call OMEGA Toll Free

**OMEGA Engineering, Inc.**

One Omega Drive, Box 4047

Stamford, CT 06907-0047 U.S.A.

Headquarters: (203) 359-1660

Sales: 1-800-826-6342 / 1800-TC-OMEGA

Customer Service: 1-800-622-2378 / 1-800-622-BEST

Engineering: 1-800-872-9436 / 1-800-USA-WHEN

FAX: (203) 359-7700 TELEX: 996404 EASYLINK: 62968934 CABLE: OMEGA

Servicing Europe: United Kingdom Sales and Distribution center

**OMEGA Technologies Ltd.**

P.O. Box 1, Broughton Astley, Leicestershire LE9 6XR, England

Telephone: (0455) 285520 FAX: (0455) 283912

## RETURN REQUESTS / INQUIRIES

Direct all warranty and repair requests/inquiries to OMEGA's Customer Service Department. Call toll free in the U.S. and Canada: 1-800-622-2378, Fax: 203-359-7811; International: 203-359-1660; Fax: 203-359-7807.

**BEFORE RETURNING ANY PRODUCT(S) TO OMEGA, YOU MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OUR CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS).** The assigned AR number should then be marked on the outside of the return package and on any correspondence.

Please have the following information available BEFORE contacting OMEGA:

1. P.O. number under which the product was purchased.
2. Model and serial number of the product, and
3. Repair instructions and/or specific problems you are having with the product.