


omega.com[®]

Ω OMEGA[®]

SPRTX SERIES

Industrial RTD Connector/Transmitter

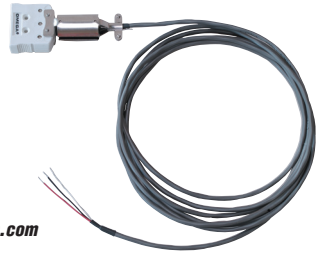

INSTRUCTION
SHEET

M3935/0311

Shop online at: omega.com e-mail: info@omega.com
For latest product manuals: omegamanual.info

General Description

The OMEGA[®] SPRTX Series is a high performance, low cost, Industrial RTD (Resistive Temperature Device) Connector/Transmitter. The SPRTX features a hermetically sealed micro miniature signal conditioner built into a RTD Connector that converts the resistive change of any 100 ohm, $\alpha = 0.00385$ RTD sensor or probe across a dedicated temperature range to an industry standard 2-wire, 4-20mA analog output. This analog output can be sent hundreds of feet away from the location of your sensor (probe) to an indicating device, controller, PLC, computer, data logger or chart recorder. Your SPRTX Connector/Transmitter has been factory calibrated to provide maximum performance and requires no field adjustments..

Note: Patented

Unpacking

Remove the packing list and verify that you have received all your equipment. If you have any questions about the shipment, please call Customer Service at: **1-800-622-2378** or **203-359-1660**.

On the web you can find us at:

omega.com e-mail: cservice@omega.com

When you receive the shipment, inspect the container and equipment for any signs of damage. Note any evidence of rough handling in transit. Immediately report any damage to the shipping agent.

NOTE: The carrier will not honor any damage claims unless all shipping material is saved for inspection. After examining and removing contents, save packing material and carton in the event reshipment is necessary.

The following items are supplied in the box with your SPRTX Connector/Transmitter.

- This User's Manual, # M-3935 (1 ea.)
- Probe/Connector Locking Clips (2 ea.)

SPRTX Series RTD Connector/Transmitter Models Available

Model No.	Description	Range
SPRTX-S1	with Standard Size Connector	-99 to 208°C (-146 to 406°F)
SPRTX-S2	with Standard Size Connector	2 to 569°C (36 to 1056°F)
SPRTX-M1	with Miniature Size Connector	-99 to 208°C (-146 to 406°F)
SPRTX-M2	with Miniature Size Connector	2 to 569°C (36 to 1056°F)

Recommended Accessories

Power Supply, OMEGA[®] Part No.: **PSU-93**

Shielded 2-conductor cable (100 ft), OMEGA[®] Part No.: **TX2-100**



Introduction/Safety

Your SPRUX RTD Connector/Transmitter has been designed for ease of use and flexibility. It is important that you read this users manual completely and follow all safety precautions before operating your unit.

Precautions

1. FOLLOW ALL SAFETY PRECAUTIONS AND OPERATING INSTRUCTIONS OUTLINED IN THIS MANUAL.
2. INSURE PROBE/CONNECTOR SAFETY CLIPS ARE ALWAYS INSTALLED DURING USE.
3. ADD ADDITIONAL SAFE GUARDS TO YOUR SYSTEM IN CRITICAL APPLICATIONS WHERE DAMAGE OR INJURY MAY RESULT FROM PROBE/CONNECTOR SEPARATION OR FAILURE.
4. NEVER EXPOSE THE CONNECTOR/MODULE BODY TO AMBIENT TEMPERATURES ABOVE 85°C (185°F) OR BELOW -40°C (-40°F). DAMAGE MAY RESULT.
5. DO NOT OPERATE IN FLAMMABLE OR EXPLOSIVE ENVIRONMENTS.
6. DO NOT USE IN HUMAN MEDICAL OR NUCLEAR APPLICATIONS.
7. NEVER OPERATE WITH A POWER SOURCE OTHER THAN WHAT IS SPECIFIED IN THIS MANUAL.
8. REMOVE AND OR DISCONNECT POWER SOURCE BEFORE ATTEMPTING INSTALLATION OR MAINTENANCE.
9. ALWAYS OPERATE YOUR UNIT WITH THE SHIELD WIRE CONNECTED TO EARTH GROUND.
10. INSTALLATION AND WIRING SHOULD BE DONE BY TRAINED PROFESSIONALS ONLY.
11. DO NOT OPEN OR DISASSEMBLE YOUR UNIT.

NOTE: There are no user serviceable parts inside your unit. Attempting to open, repair or service your unit will void your warranty.




Theory of Operation

A 4-20 mA loop is a series loop in which a transmitter will vary the current flow depending on the input to the transmitter. With the SPRTX the amount of current allowed to flow in the loop will vary depending on the resistance change, due to changes in the temperature being measured by the RTD sensor (probe). Some advantages of a current output over a voltage output is that the signal measured is less susceptible to electrical noise interference and the loop can support more than one measuring instrument as long as the maximum loop resistance is not exceeded.

A typical application utilizing a current loop will normally consist of a power supply, the transmitter and a meter, recorder or controller to measure the current flow. The loop resistance is the sum of the measuring instruments and wire used. The maximum allowable loop resistance for the SPRTX to function properly is found by using the following formula:

$$R_{max} = (\text{power supply voltage} - 9 \text{ volts}) / .02 \text{ amps}$$


For applications that require a voltage output, the 4-20mA signal from the SPRTX can be converted in the field by adding a 250 Ohm shunt resistor that will convert the transmitters output to a 1-5 Vdc signal when wired correctly. See "Transmitter Wiring Examples" in this manual.

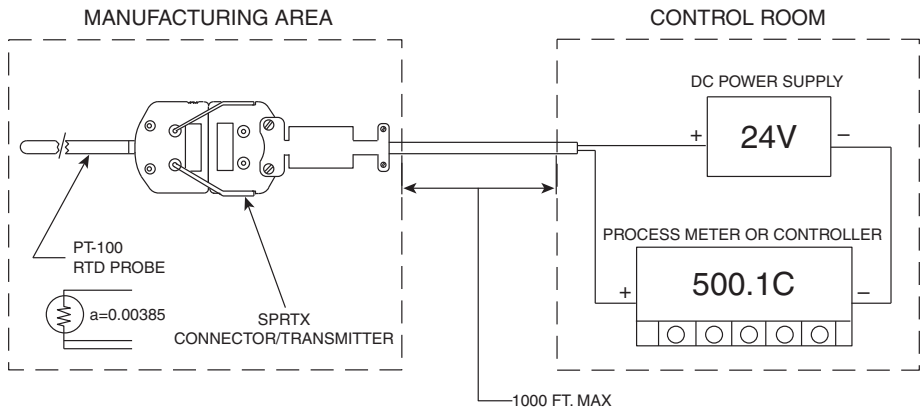




Mounting Your SPRUX to Probes

The SPRUX Series of connector/transmitters are designed for quick connection to RTD sensors and probes. The SPRUX will connect to all industry RTD probes that feature “Omega Style” standard or miniature RTD connectors such as Omega OTP-U-M standard size connector or MTP-U-M miniature size connector. See below for correct usage.

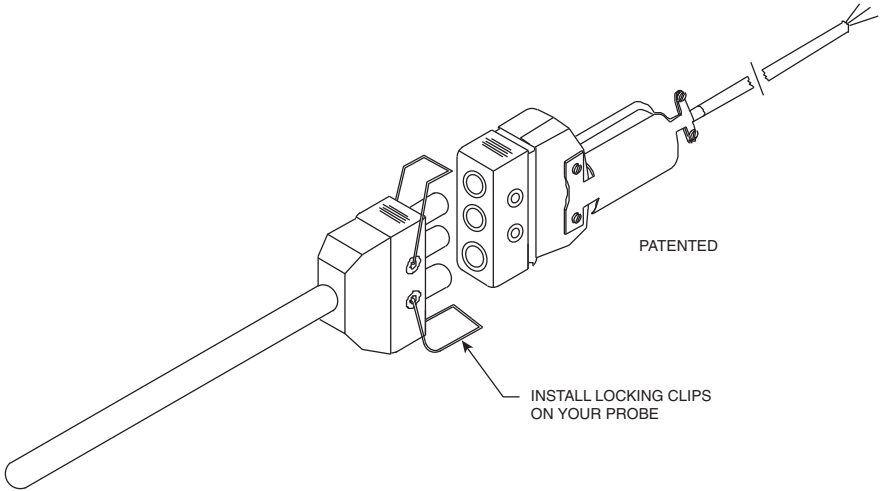

Probe Locking Clips

Probe locking clips are also provided to help secure your probe to the SPRUX Connector/Transmitter.

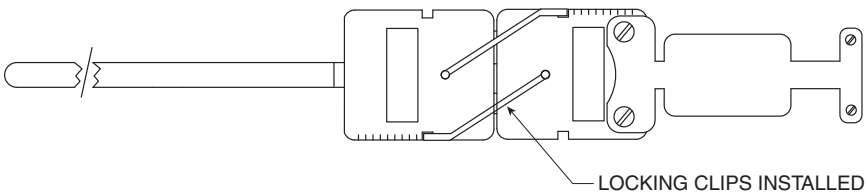


Caution: All though your SPRUX Connector/Transmitter will work with any RTD sensor or probe, It is recommended that you use only OMEGA® RTD probes with you SPRUX unit to insure proper installation and use of the probe locking clips. Probe locking clips are provided to offer added protection against the separation of your probe and connector/transmitter. In critical applications were separation of the RTD probe from the connector/transmitter during normal operation could cause damage or harm, it is recommended that you install additional safety and locking devices to prevent the units from separating and/or shut down your process.




Protection from High Ambient Temperatures

Note: Your SPRTX Connector/Transmitter Assembly can be damaged if exposed to ambient temperatures above 85°C (185°F). Some applications may require that you shield the SPRTX unit from radiated heat as shown below. You should always use a probe where the length allows for a safe distance of 76 mm (3") or more between the body of the SPRTX and your source of heat.

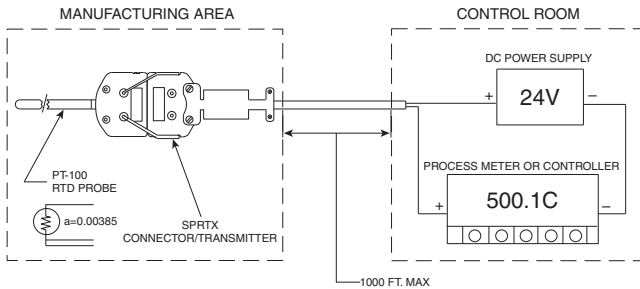


Transmitter Wiring Examples

4 to 20mA Output (2-wire)

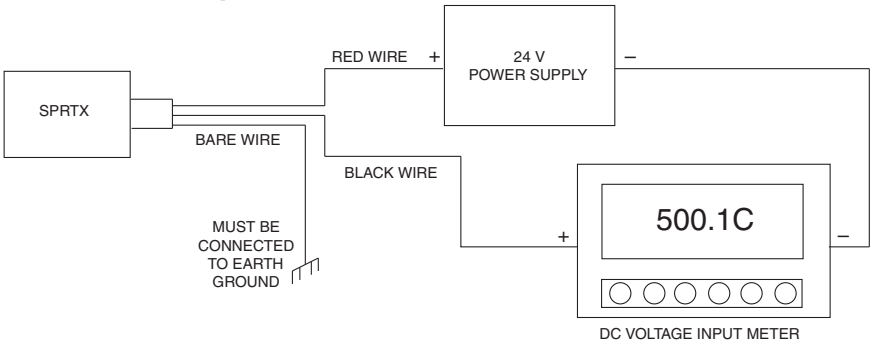

Converting from 4 to 20mA Output to 1 to 5Vdc Output (3-wire)

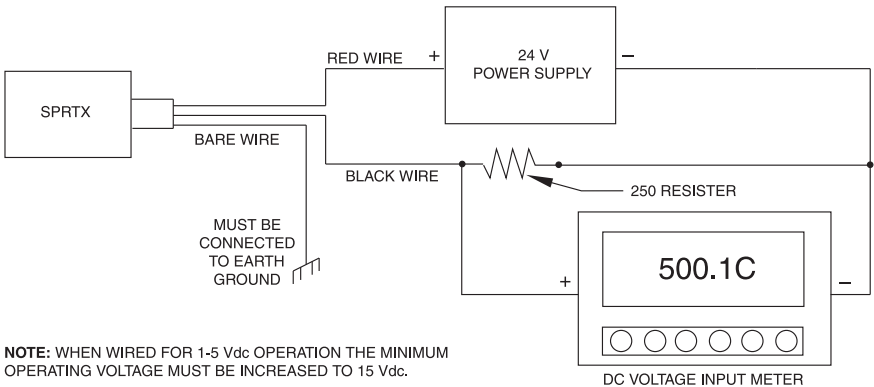

NOTE: WHEN WIRED FOR 1-5 Vdc OPERATION THE MINIMUM OPERATING VOLTAGE MUST BE INCREASED TO 15 Vdc.



Temperature to Analog Output Calculations

Models: SPRUX-S1, SPRUX-M1

Temp deg. C	Temp deg. F	RTD Resistance	Output mA
-99	-146	60.67	4.00
-50	-58	80.31	6.55
0	32	100.00	9.16
25	77	109.73	10.46
50	122	119.40	11.77
75	167	128.99	13.07
100	212	138.51	14.37
125	257	147.95	15.67
150	302	157.33	16.98
175	347	166.62	18.28
208	406	178.80	20.00

Models: SPRUX-S2, SPRUX-M2

Temp deg. C	Temp deg. F	RTD Resistance	Output mA
-18	0	92.95	3.54
2	36	100.78	4.00
25	77	109.73	4.65
50	122	119.40	5.35
100	212	138.51	6.77
150	302	157.33	8.18
200	392	175.86	9.59
250	482	194.10	11.00
300	572	212.05	12.41
400	752	247.09	15.23
500	932	280.98	18.10

Calibration/Service

Your transmitter has been factory calibrated to meet or exceed the specifications outlined in this manual. No field adjustments are needed or possible on your unit. If your unit should become damaged or malfunction, please contact Omega Customer Service at:

On the web you can find us at:

omega.com e-mail: cservice@omega.com



Specifications

Temperature Input Range by model

SPRTX-S1, SPRTX-M1: -99 to 208°C (-146 to 406°F)

SPRTX-S2, SPRTX-M2: 2 to 569°C (36 to 1056°F)

Accuracy: ±0.5% of full scale @ 23°C

Repeatability: ± 0.25°C (.5°F)

Output Stability/Temp Drift: ± 0.0022mA/°C

Max Ambient Temperature: -40 to 85 °C (-40 to 185°F)

Output: 2-Wire, 4 – 20 mA

Power Supply: 9 to 24 Vdc @ 30mA max

Max Loop Resistance: Ohms = (V supply – 9 V)/.02 A

Sensor Input Type: PT-100 (ohms) $\alpha = 0.00385$ (2 or 3-wire)

Open Sensor Wire Indication:

Leg One: Open Wire = 27 mA

Leg Two: Open Wire = 2.2 mA

Leg Three: Open Wire = 2.2 mA

Connector Style/Material

Standard Size: Omega Model OTP-U-F (Glass Filled Nylon)

Miniature Size: Omega Model MTP-U-F (Glass Filled Nylon)

Dimensions

SPRTX-M1, SPRTX-M2: 79 x 18 x 24 mm (3.12 L x .70 W x .96" H)

SPRTX-S1, SPRTX-S2: 83 x 18 x 36 mm (3.25 L x .70 W x 1.43" H)

Weight

SPRTX-M1, SPRTX-M2: 106 g. (.24 lbs)

SPRTX-S1, SPRTX-S2: 110 g. (.25 lbs)

Response Time: 120ms (0-63% of full scale)

Note: The SPRTX Series is not designed for use in medical or nuclear applications, nor flammable or explosive environments.

Note: Patented.



OMEGAnet® Online Service omega.com	Internet e-mail info@omega.com
--	--

Servicing North America:

U.S.A.: Omega Engineering, Inc., One Omega Drive, P.O. Box 4047
ISO 9001 Certified Stamford, CT 06907-0047
 Toll-Free: 1-800-826-6342 Tel: (203) 359-1660
 FAX: (203) 359-7700 E-mail: info@omega.com

Canada: 976 Bergar
 Laval (Quebec), H7L 5A1 Canada
 Toll-Free: 1-800-826-6342 TEL: (514) 856-6928
 FAX: (514) 856-6886 e-mail: info@omega.ca

Servicing Europe:

Benelux: Managed by the United Kingdom Office
 Toll-Free: 0800 099 3344 TEL: +31 20 347 21 21
 FAX: +31 20 643 46 43 e-mail: sales@omegaeng.nl

Czech Republic: Frystatska 184
 733 01 Karviná, Czech Republic
 Toll-Free: 0800-1-66342 TEL: +420-59-6311899
 FAX: +420-59-6311114 e-mail: info@omegashop.cz

France: Managed by the United Kingdom Office
 Toll-Free: 0800 466 342 TEL: +33 (0) 161 37 29 00
 FAX: +33 (0) 130 57 54 27 e-mail: sales@omega.fr

Germany/Austria: Daimlerstrasse 26, D-75392 Deckenpfronn, Germany
 Toll-Free: 0800 6397678 TEL: +49 (0) 7056 9398-0
 FAX: +49 (0) 7056 9398-29 e-mail: info@omega.de

For immediate technical or application assistance:

U.S.A. and Canada: Sales Service: 1-800-826-6342/1-800-TC-OMEGA®
 Customer Service: 1-800-622-2378/1-800-622-BEST™
 Engineering Service: 1-800-872-9436/1-800-USA-WHEN®

Mexico/Latin America: En Español: 001 (203) 359-7803 FAX: 001 (203) 359-7807
 info@omega.com.mx e-mail:espanol@omega.com

United Kingdom: OMEGA Engineering Ltd.
 One Omega Drive, River Bend Technology Centre, Northbank
ISO 9001 Irlam, Manchester M44 5BD United Kingdom
 Toll-Free: 0800-488-488 TEL: +44 (0) 161 777-6611
 FAX: +44 (0) 161 777-6622 e-mail: sales@omega.co.uk

It is the policy of OMEGA Engineering, Inc. to comply with all worldwide safety and EMC/EMI regulations that apply. OMEGA is constantly pursuing certification of its products to the European New Approach Directives. OMEGA will add the CE mark to every appropriate device upon certification.

The information contained in this document is believed to be correct, but OMEGA accepts no liability for any errors it contains, and reserves the right to alter specifications without notice.

WARNING: These products are not designed for use in, and should not be used for, human applications.

**WARRANTY/DISCLAIMER**

OMEGA ENGINEERING, INC. warrants this unit to be free of defects in materials and workmanship for a period of **13 months** from date of purchase. OMEGA's WARRANTY adds an additional one (1) month grace period to the normal **one (1) year product warranty** to cover handling and shipping time. This ensures that OMEGA's customers receive maximum coverage on each product.

If the unit malfunctions, it must be returned to the factory for evaluation. OMEGA's Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective, it will be repaired or replaced at no charge. OMEGA's WARRANTY does not apply to defects resulting from any action of the purchaser, including but not limited to mishandling, improper interfacing, operation outside of design limits, improper repair, or unauthorized modification. This WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of having been damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA's control. Components in which wear is not warranted, include but are not limited to contact points, fuses, and triacs.

OMEGA is pleased to offer suggestions on the use of its various products. However, OMEGA neither assumes responsibility for any omissions or errors nor assumes liability for any damages that result from the use of its products in accordance with information provided by OMEGA, either verbal or written. OMEGA warrants only that the parts manufactured by the company will be as specified and free of defects. OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESSED OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. LIMITATION OF LIABILITY: The remedies of purchaser set forth herein are exclusive, and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.

CONDITIONS: Equipment sold by OMEGA is not intended to be used, nor shall it be used: (1) as a "Basic Component" under 10 CFR 21 (NRC), used in or with any nuclear installation or activity; or (2) in medical applications or used on humans. Should any Product(s) be used in or with any nuclear installation or activity, medical application, used on humans, or misused in any way, OMEGA assumes no responsibility as set forth in our basic WARRANTY/DISCLAIMER language, and, additionally, purchaser will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the Product(s) in such a manner.

RETURN REQUESTS / INQUIRIES

Direct all warranty and repair requests/inquiries to the OMEGA Customer Service Department. BEFORE RETURNING ANY PRODUCT(S) TO OMEGA, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OMEGA'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS). The assigned AR number should then be marked on the outside of the return package and on any correspondence.

The purchaser is responsible for shipping charges, freight, insurance and proper packaging to prevent breakage in transit.

FOR **WARRANTY** RETURNS, please have the following information available BEFORE contacting OMEGA:

1. Purchase Order number under which the product was PURCHASED,
2. Model and serial number of the product under warranty, and
3. Repair instructions and/or specific problems relative to the product.

FOR **NON-WARRANTY** REPAIRS, consult OMEGA for current repair charges. Have the following information available BEFORE contacting OMEGA:

1. Purchase Order number to cover the COST of the repair,
2. Model and serial number of the product, and
3. Repair instructions and/or specific problems relative to the product.

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering.

OMEGA is a registered trademark of OMEGA ENGINEERING, INC.

© Copyright 2011 OMEGA ENGINEERING, INC. All rights reserved. This document may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without the prior written consent of OMEGA ENGINEERING, INC.