

Where Do I Find Everything I Need for Process Measurement and Control? OMEGA ... Of Course!

TEMPERATURE

- ☞ Thermocouple, RTD & Thermistor Probes, Connectors, Panels & Assemblies
- ☞ Wire: Thermocouple, RTD & Thermistor
- ☞ Calibrators & Ice Point References
- ☞ Recorders, Controllers & Process Monitors
- ☞ Infrared Pyrometers

PRESSURE / STRAIN FORCE

- ☞ Transducers & Strain Gauges
- ☞ Load Cells & Pressure Gauges
- ☞ Displacement Transducers
- ☞ Instrumentation & Accessories

FLOW / LEVEL

- ☞ Rotameters, Gas Mass Flowmeters & Flow Computers
- ☞ Air Velocity Indicators
- ☞ Turbine / Paddlewheel Systems
- ☞ Totalizers & Batch Controllers

pH/CONDUCTIVITY

- ☞ pH Electrodes, Testers & Accessories
- ☞ Benchtop / Laboratory Meters
- ☞ Controllers, Calibrators, Simulators & Pumps
- ☞ Industrial pH & Conductivity Equipment

DATA ACQUISITION

- ☞ Data Acquisition & Engineering Software
- ☞ Communications-Based Acquisition Systems
- ☞ Plug-in Cards for Apple, IBM & Compatibles
- ☞ Datalogging Systems
- ☞ Recorders, Printers & Plotters

HEATERS

- ☞ Heating Cable
- ☞ Cartridge & Strip Heaters
- ☞ Immersion & Band Heaters
- ☞ Flexible Heaters
- ☞ Laboratory Heaters

ENVIRONMENTAL MONITORING AND CONTROL

- ☞ Metering & Control Instrumentation
- ☞ Refractometers
- ☞ Pumps & Tubing
- ☞ Air, Soil & Water Monitors
- ☞ Industrial Water & Wastewater Treatment
- ☞ pH, Conductivity & Dissolved Oxygen Instruments

Thermocouple Loggers

Model OM-SL-L610
Model OM-SL-L620
Model OM-SL-L630

USER MANUAL

M-3442/0899



Ω OMEGA®

WARRANTY/DISCLAIMER

OMEGA ENGINEERING, INC. warrants this unit to be free of defects in materials and workmanship for a period of **13 months** from date of purchase. OMEGA Warranty adds an additional one (1) month grace period to the normal **one (1) year product warranty** to cover handling and shipping time. This ensures that OMEGA's customers receive maximum coverage on each product.

If the unit should malfunction, it must be returned to the factory for evaluation. OMEGA's Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective it will be repaired or replaced at no charge. OMEGA's WARRANTY does not apply to defects resulting from any action of the purchaser, including but not limited to mishandling, improper interfacing, operation outside of design limits, improper repair, or unauthorized modification. This WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of being damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA's control. Components which wear are not warranted, including but not limited to contact points, fuses, and triacs.

OMEGA is pleased to offer suggestions on the use of its various products. However, OMEGA neither assumes responsibility for any omissions or errors nor assumes liability for any damages that result from the use of its products in accordance with information provided by OMEGA, either verbal or written. OMEGA warrants only that the parts manufactured by it will be as specified and free of defects. OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESSED OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. LIMITATION OF LIABILITY: The remedies of purchaser set forth herein are exclusive and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.

CONDITIONS: Equipment sold by OMEGA is not intended to be used, nor shall it be used: (1) as a "Basic Component" under 10 CFR 21 (NRC), used in or with any nuclear installation or activity; or (2) in medical applications or used on humans. Should any Product(s) be used in or with any nuclear installation or activity, medical application, used on humans, or misused in any way, OMEGA assumes no responsibility as set forth in our basic WARRANTY/ DISCLAIMER language, and additionally, purchaser will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the Product(s) in such a manner.

RETURN REQUESTS/ INQUIRIES

Direct all warranty and repair requests/inquiries to the OMEGA Customer Service Department. BEFORE RETURNING ANY PRODUCT(S) TO OMEGA, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OMEGA'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS). The assigned AR number should then be marked on the outside of the return package and on any correspondence.

The purchaser is responsible for shipping charges, freight, insurance and proper packaging to prevent breakage in transit.

FOR **WARRANTY** RETURNS, please have the following information available BEFORE contacting OMEGA:

1. P.O. number under which the product was PURCHASED,
2. Model and serial number of the product under warranty, and
3. Repair instructions and/or specific problems relative to the product.

FOR **NON-WARRANTY REPAIRS**, consult OMEGA for current repair charges. Have the following information available BEFORE contacting OMEGA:

1. P.O. number to cover the COST of the repair,
2. Model and serial number of product, and
3. Repair instructions and/or specific problems relative to the product.

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering.

OMEGA is a registered trademark of OMEGA ENGINEERING, INC.

© Copyright 1996 OMEGA ENGINEERING, INC. All rights reserved. This document may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without prior written consent of OMEGA ENGINEERING, INC..

OMEGAnetSM On-Line Service: <http://www.omega.com>

Internet e-mail: info@omega.com

Servicing North America:

USA: One Omega Drive, Box 4047
ISO 9001 Certified Stamford, CT 06907-0047
Tel: (203) 359-1660 FAX: (203) 359-7700
e-mail: info@omega.com

Canada: 976 Bergar
Laval (Quebec) H7L 5A1
Tel: (514) 856-6928 FAX: (514) 856-6886
e-mail: canada@omega.com

For Immediate Technical or Application Assistance:

USA and Canada: Sales Service: 1-800-826-6342 1-800-TC-OMEGASM
Customer Service: 1-800-622-2378 / 1-800-622-BESTSM
Engineering Service: 1-800-872-9436 / 1-800-USA-WHENSM
TELEX: 996404 EASYLINK 62968934 CABLE: OMEGA

Mexico and Latin America: Tel: (95) 800-TC-OMEGASM FAX: (95) 203-359-7807
En Espanol: (203) 359-1660 ext: 2203 e-mail: espanol@omega.com

Servicing Europe:

Benelux: Postbus 8034,1180 LA Amstelveen, The Netherlands
Tel: (31) 20 6418405 FAX: (31) 20 6434643
Toll Free in Benelux: 06 0993344
e-mail: nl@omega.com

Czech Republic: **Ostravska 767, 733 01 Karvina**
Tel: 420 (69) 6311899 FAX: 420 (69) 6311114
e-mail: czech@omega.com

France: **9, rue Denis Papin, 78190 Trappes**
Tel: (33) 130-621-400 FAX: (33) 130-699-120
Toll Free/France: 0800-4-06342 e-mail: france@omega.com

Germany/Austria: **Daimlerstrasse 26, D-75392 Deckenpfronn, Germany**
Tel: 49 (07056) 3017 FAX: 49 (07056) 8540
Toll Free in Germany: 0130 11 21 66
e-mail: germany@omega.com

United Kingdom: 25 Swannington Road, P.O. Box 7, Omega Drive,
150 9002 Certified Broughton Astley, Leicestershire, Irlam, Manchester,
LE9 6TU, England M44 5EX, England
Tel: 44 (1455) 285520 Tel: 44 (161) 777-6611
FAX: 44 (1455) 283912 FAX: 44 (161) 777-6622
Toll Free in England: 0800-488-488 e-mail: uk@omega.com

It is the policy of OMEGA to comply with all worldwide safety and EMC/EMI regulations that apply. OMEGA is constantly pursuing certification of its products to the European New Approach Directives. OMEGA will add the CE mark to every appropriate device upon certification.

The information contained in this document is believed to be correct but OMEGA Engineering, Inc. accepts no liability for any errors it contains, and reserves the right to alter specifications without notice.

WARNING: These products are not designed for use in, and should not be used for, patient connected applications.

4. The setup program will temporarily load onto your computer.
5. Next the setup program will offer C:\ DATALOG as location where the software will be installed. Click on "Next" to use this directory or type in a new name, then click on "Next".
6. A bar graph will appear showing the progress of installation. When installation is complete a message screen will appear stating that the program has been installed. Click on "OK". You are now ready to use the data logger software.

USING THE SOFTWARE

Launch the software and connect the RS-232 cable from your computer to the logger.

Select "FILE", "Baud rate" and "4800" then select "PORT", Com1, Com2, Com3 or Com4 (see your computer manual). The logger must now communicate with your computer (ID number of the logger and number of points recorded displayed).

Select "FUNCTION", to choose the unit °F or °C. Select download to display the graph. (Download takes about 60 seconds).

Cleaning

The body of the logger should be cleaned with a cloth moistened with soapy water. Rinse with a cloth moistened with clean water. Do not use solvent.

Table of Contents

| | |
|--|---|
| Warning..... | 3 |
| International Electrical Symbols | 3 |
| Receiving Your Shipment..... | 4 |
| Packaging..... | 4 |
| Specifications | 4 |
| Features | 6 |
| Indicators and Buttons | 6 |
| Inputs and Outputs | 6 |
| Mounting | 6 |
| Battery Installation | 7 |
| Operation | 7 |
| Software | 8 |
| Minimum Computer Requirements..... | 8 |
| Installation..... | 8 |
| Using the Software | 9 |
| Cleaning..... | 9 |

Warning

These safety warnings are provided to ensure the safety of personnel and proper operation of the instrument.

- Read the instruction manual completely and follow all the safety information before attempting to use or service this instrument.
- Use caution on any circuit: Potentially high temperatures, voltages or currents may be present.
- Read the ~~safety~~ specifications section prior to using the data logger. Never exceed the maximum voltage ratings given.
- Safety is the responsibility of the operator.
- For maintenance, use only original replacement parts.
- NEVER open the back of the instrument while connected to any circuit or input.
- ALWAYS connect the logger to the probe before inserting the probe into the sample being tested.
- ALWAYS inspect the instrument and leads prior to use. Replace any defective parts immediately.
- NEVER use the Models OM-SL-L610, L620 and L630 on electrical conductors rated above 30 V in overvoltage category III (CAT III).

International Electrical Symbols



This symbol signifies that the loggers are protected by double or reinforced insulation. Use only specified replacement parts when servicing the instrument.



This symbol signifies CAUTION! and requests that the user refer to the user manual before using the instrument.



For more information about the datalogger, refer to disk 2: USER GUIDE

Software

This model requires software version 5.0 and above.

MINIMUM COMPUTER REQUIREMENTS

Processor: 386 or higher

RAM Storage: 4 MB minimum

Hard Drive Space:

700K for application, approximately 400K for each stored file

Environment: Windows 3.1 or Windows 95

Port Access: 1 available 9 pin serial port
1 parallel port for printer support

INSTALLATION

Your data logger software is supplied on a single 3½" floppy disk. To install the program on your Windows based computer, proceed as follows: The software is Multilanguage. A prompt will ask you to select the language at the end of the installation process.

Windows 3.1 Systems

1. Insert the floppy disk containing the data logger software in your computer's floppy drive (usually Drive A).
2. From the Program Manager select "File" on the command line.
3. Select "Run" from the pull-down menu and type **a:setup** in the dialog box then click on "OK".
4. The set up program will temporarily load onto your computer.
5. Next the setup program will offer C:\DATALOG as location where the software will be installed. Click on "Next" to use this directory or type in a new name, then click on "Next".
6. A bar graph will appear showing the progress of installation. When installation is complete a message screen will appear stating that the program has been installed. Click on "OK". You are now ready to use the data logger software.

Windows 95 Systems

1. Insert the floppy disk containing the data logger software in your computer's floppy drive (usually Drive A).
2. Click on the "Start" button on the bottom left side of the screen.
3. Select "Run" from the menu and type **a:setup** in the dialog box then click on "OK".

Battery Installation

Under normal conditions, the battery will last up to a year of continuous recording unless the logger is restarted very frequently.

In the OFF mode, the logger puts almost no load on the battery. Use the OFF mode when the logger is not in use. Replace the battery once a year in normal use.

If the logger will be used at temperatures below 32°F (0°C) or is frequently turned on and off, replace the battery every six to nine months.

1. Make sure your logger is turned off (no light blinking) and all inputs are disconnected.
2. Turn the data logger upside down. Remove the four Phillips head screws from the base plate of the data logger and take off the base plate.
3. Locate the two wire (red/black) battery connector and attach the 9 V battery to it. Make sure that you observe polarity by lining up the battery posts to the proper terminals on the connector.
4. Once the connector is plugged onto the battery, insert the battery into the holding clip on the circuit board.
5. If the unit is not in record mode after installing the new battery, disconnect it and press the button twice then reinstall the battery.
6. Reattach the base plate using the four screws removed in step two.

Your data logger is now recording (LED blinking). Press the test button for 5 seconds to stop the instrument.

Note: For long term storage, remove the battery to prevent discharge effects.

Operation

Connect the temperature probe to the data logger. Make sure that the temperature sensor is set where you want to measure before starting a recording session.

Next, press the start/stop button on the front of the unit to begin the recording session. The indicator light will double blink to indicate that the recording session has started.

When the recording session has been completed, press the start/stop button to end the recording. The indicator light will single blink to indicate that the recording session has ended and the unit is in stand-by. Connect the logger to the computer for data downloading. See Section 2 of the user guide for downloading.

Note: If no T.C. element is connected to the logger, an overload condition will occur when in record mode or connected to the PC. To eliminate overload condition, press the "PRESS" button once to place the instrument into standby.

Receiving Your Shipment

Upon receiving your shipment, make sure that the contents are consistent with the packing list. Notify OMEGA of any missing items. If the equipment appears to be damaged, file a claim immediately with the carrier and notify OMEGA at once, giving a detailed description of any damage.

Packaging

The Loggers OM-SL-L610, L620 and L630 include the following:

- User manual
- One 9 V battery
- Two 3½" disks containing the window-based download and graphic software and a generic user guide
- Six ft. long RS-232 cable
- Set of velcro mounting pads

Specifications

ELECTRICAL

Number of Channels: 1

Measurement Range:

OM-SL-L610: 32° to 1380°F (0° to 750°C)

OM-SL-L620: -325° to +2280°F (-200° to +1250°C)

OM-SL-L630: -325° to +660°F (-200° to +350°C)

Input: OM-SL-L610: J Thermocouple
OM-SL-L620: K Thermocouple
OM-SL-L630: T Thermocouple

Input Connection: Miniature color-coded thermocouple jacks
Black - J, Yellow - K, Blue - T

Input Impedance: N/A

***Accuracy:** ± (0.5%R + 1°C + T/C Accuracy)

Resolution: 12 Bit (better than 0.5°C)

Sample Rate: 4096/hr max. decreases by 50% each time memory is full

Data Storage: 16,384 readings

Data Storage Technique: TXR Time Extension Recording.

Power: 9V Alkaline NEDA 1604, 6LF22, 6LR61

Battery Life Recording: up to 1 year continuous recording @ 25°C

Output: 4800 Baud RS-232 via DB9 connector

INDICATORS

Operation Mode Indicator: One Red LED

- Single Blink in stand-by mode
- Double Blink in RECORD mode
- Continuously on: Overload condition
- No Blinks in OFF mode

CONTROLS: One button used to start and stop recording sessions and to turn the data logger ON and OFF.

ENVIRONMENTAL

Operating Temperature: -4 to + 158°F (-20 to +70°C)

Storage Temperature: -4 to + 174°F (-20 to +80°C)

Relative Humidity: 5 to 95% non-condensing

Temperature Influence: 0.1%/°C over full temperature range

MECHANICAL

Size: 2-7/8" W x 2-5/16" H x 1-5/8" D (73mm x 59mm x 41mm)

Weight (with battery): 5 oz. (140g)

Mounting: Base plate mounting holes or Velcro® pads

Case Material: Polystyrene UL V0

SAFETY

Working Voltage: IEC 1010-1, 30V, Cat III

ORDERING INFORMATION

Thermocouple Logger (Type J)..... Model OM-SL-L610

Thermocouple Logger (Type K)..... Model OM-SL-L620


Thermocouple Logger (Type T)..... Model OM-SL-L630

Accessories:

Replacement 6ft RS-232 cable with DB9FOM-SL-RS-232-DB9

*Reference condition: 23°C ± 3K, 20 to 70% RH, Frequency 50/60Hz, No AC external magnetic Field, DC magnetic field ≤ 40A/m, battery voltage 9V ± 10%.

Features

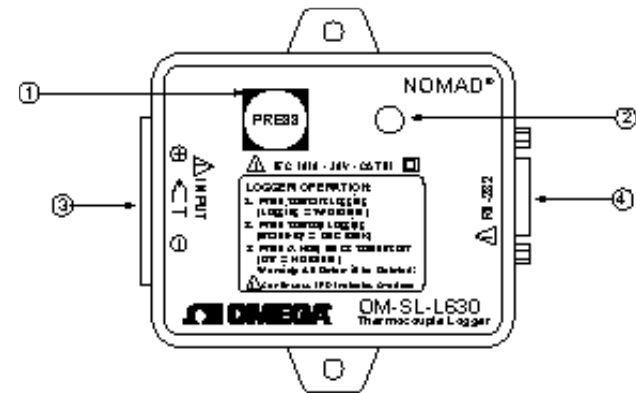

(1) Start/Stop Button

(2) Indicator Light

(3) Miniature T.C. Connector

(4) RS-232 Interface

Indicators and Buttons

The data logger has only one button and one indicator. Both are located on the front panel.

The button is used to start and stop recordings and to turn the data logger on and off. The red LED indicates the status of the data logger; OFF, STANDBY or RECORDING. When the LED is lit continuously it indicates an overload condition.

Inputs and Outputs

The left side of the data logger incorporates a color-coded miniature T.C. connector that is compatible with the thermocouple for which your data logger was designed.

The right side of the data logger has a female 9 pin "D" shell serial connector used for data transmission from the data logger to your computer.

Mounting

Your data logger is equipped with clearance holes in the base plate tabs for mounting. For less permanent mounting, the Velcro pads (supplied loose) can be attached to the data logger and the surface to which the logger will be mounted.