



# Shop online at

omega.com®

**∩**EOMEGA®\_

omega.com e-mail: info@omega.com For latest product manuals: omegamanual.info







RD100B Programmable Recorder



# OMEGAnet® Online Service omega.com

Internet e-mail info@omega.com

## **Servicing North America:**

**U.S.A.:** One Omega Drive, P.O. Box 4047

ISO 9001 Certified Stamford, CT 06907-0047

TEL: (203) 359-1660 FAX: (203) 359-7700

e-mail: info@omega.com

Canada: 976 Bergar

Laval (Quebec) H7L 5A1, Canada

TEL: (514) 856-6928 FAX: (514) 856-6886

e-mail: info@omega.ca

## For immediate technical or application assistance:

U.S.A. and Canada: Sales Service: 1-800-826-6342 / 1-800-TC-OMEGA®

Customer Service: 1-800-622-2378 / 1-800-622-BEST® Engineering Service: 1-800-872-9436 / 1-800-USA-WHEN®

**Mexico:** En Español: (001) 203-359-7803 e-mail: espanol@omega.com

FAX: (001) 203-359-7807 info@omega.com.mx

**Servicing Europe:** 

**Benelux:** Postbus 8034, 1180 LA Amstelveen, The Netherlands

TEL: +31 (0)20 3472121 FAX: +31 (0)20 6434643

Toll Free in Benelux: 0800 0993344

e-mail: sales@omegaeng.nl

Czech Republic: Frystatska 184, 733 01 Karviná, Czech Republic

TEL: +420 (0)59 6311899 FAX: +420 (0)59 6311114
Toll Free: 0800-1-66342 e-mail: info@omegashop.cz

**France:** 11, rue Jacques Cartier, 78280 Guyancourt, France

TEL: +33 (0)1 61 37 2900 FAX: +33 (0)1 30 57 5427

Toll Free in France: 0800 466 342

e-mail: sales@omega.fr

**Germany/Austria:** Daimlerstrasse 26, D-75392 Deckenpfronn, Germany

TEL: +49 (0)7056 9398-0 FAX: +49 (0)7056 9398-29

Toll Free in Germany: 0800 639 7678

e-mail: info@omega.de

United Kingdom: One Omega Drive, River Bend Technology Centre

ISO 9002 Certified Northbank, Irlam, Manchester

M44 5BD United Kingdom

TEL: +44 (0)161 777 6611 FAX: +44 (0)161 777 6622

Toll Free in United Kingdom: 0800-488-488

e-mail: sales@omega.co.uk

It is the policy of OMEGA Engineering, Inc. to comply with all worldwide safety and EMC/EMI regulations that apply. OMEGA is constantly pursuing certification of its products to the European New Approach Directives. OMEGA will add the CE mark to every appropriate device upon certification.

The information contained in this document is believed to be correct, but OMEGA accepts no liability for any errors it contains, and reserves the right to alter specifications without notice.

WARNING: These products are not designed for use in, and should not be used for, human applications.

#### **Foreword**

Thank you for purchasing the OMEGA RD100B Recorder.

This manual describes the functions (excluding the communication functions), installation and wiring procedures, operating procedures, and lists the handling precautions of the RD100B Recorder. To ensure correct use, please read this manual thoroughly before beginning operation.

The following three manuals including this manual are available for the RD100B Recorder.

#### Electronic Manuals Provided on the Accompanying CD-ROM

Manual Title	Manual No.	Description
RD100B Recorder User's Guide	M-4231	This manual.
RD100B/RD1800B Communication Interface User's Manual	M-4233	Explains the communication functions of the RD100B Recorder using Ethernet interface and the RS-422A/485 communication interface.

#### Paper Manual

Manual Title	Manual No.	Description
RD100B Recorder Operation Guide	M-4232	Explains concisely the operations of the RD100B Recorder.

#### **Notes**

- The contents of this manual are subject to change without prior notice as a result of continuing improvements to the instrument's performance and functions.
- Every effort has been made in the preparation of this manual to ensure the accuracy
  of its contents. However, should you have any questions or find any errors, please
  contact OMEGA.
- Copying or reproducing all or any part of the contents of this manual without permission is strictly prohibited.
- The TCP/IP software of this product and the document concerning the TCP/IP software have been developed/created based on the BSD Networking Software, Release 1 that has been licensed from the University of California.

#### **Trademarks**

- Microsoft, MS-DOS, Windows, Windows NT, and Windows XP are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- Adobe, Acrobat, and PostScript are trademarks of Adobe Systems incorporated.
- For purposes of this manual, the TM and ® symbols do not accompany their respective trademark names or registered trademark names.
- Company and product names that appear in this manual are trademarks or registered trademarks of their respective holders.

#### Revisions

1st Edition December 2004 2nd Edition March 2005 3rd Edition August 2005

# Recorder's Version and Functions Described in This Manual

The contents of this manual corresponds to the recorder with version 1.11.

#### **RD100B Versions and Functions**

Version	Suffix Code	Added or N	Modified Functions	Reference
1.02 or earlier	_	_		_
1.11	_	(Added)	The printout/display format of the date can be changed.	Section 7.19
	_	(Added)	Key operation to move the printer carriage near the center	Section 3.4
			position so that the ribbon cassette can be replaced with	
			the power turned ON (dot model)	
	_	(Changed)	Selectable range of alarm values during linear scaling	Section 5.2
			(including 1-5V and SQRT) is -5% to 105% of the scale	
			span.	
	_	(Changed)	Specify the date/time for switching DST and standard time	Sections 5.5
			by the month, the nth day of the week of that month, and	and 6.13
			time.	
	/C3	(Added)	Modbus slave protocol	Communication
			Two-wire system	manual
	/C7	(Changed)	Users with the same user name cannot be registered.	Communication
				manual

· Checking the Version Number

You can check the version number on the System display.

The System display cannot be shown at the factory default condition.

First, register the System display to the display screen.

- Procedure of registering the System display to the display screen: See section 8.2.
- Procedure of displaying the System display: The screen switches each time the DISP key is pressed. Press the DISP key repeatedly until System display is shown. The displayed contents on the System display switches every 3 seconds. Check the number shown by the "Version:" item.

#### Software (Sold Separately)

The RD100B Configuration Software cannot set the new functions (indicated above) available on RD100B version 1.11. The new functions are planned to be supported on the configuration software to be released after November 2005.

## **Safety Precautions**

The general safety precautions described here must be observed during all phases of operation.

#### Safety Standards and EMC Standards

This recorder conforms to IEC safety class I (provided with terminal for protective grounding), Installation Category II, Measurement Category II (CAT II), and EN61326-1 (EMC standard), class A (use in a commercial, industrial, or business environment). This recorder is designed for indoor use.

#### **About This Manual**

- This manual should be read by the end user.
- Read this manual thoroughly and have a clear understanding of the product before operation.
- This manual explains the functions of the product. OMEGA does not guarantee that the product will suit a particular purpose of the user.
- Under absolutely no circumstances may the contents of this manual be transcribed or copied, in part or in whole, without permission.
- The contents of this manual are subject to change without prior notice.
- Every effort has been made in the preparation of this manual to ensure the accuracy of its contents. However, should you have any questions or find any errors or omissions, please contact OMEGA.

#### Precautions Related to the Protection, Safety, and Alteration of the Product

· The following safety symbols are used on the product and in this manual.



"Handle with care." To avoid injury and damage to the instrument, the operator must refer to the explanation in the manual.



Protective ground terminal



AC



"High temperature." To avoid injury caused by hot surface, do not touch locations where this symbol appears.

- For the protection and safe use of the product and the system controlled by it, be sure to follow the instructions
  and precautions on safety that are stated in this manual whenever you handle the product. Take special note
  that if you handle the product in a manner that violate these instructions, the protection functionality of the
  product may be damaged or impaired. In such cases, OMEGA does not guarantee the quality, performance,
  function, and safety of the product.
- When installing protection and/or safety circuits such as lightning protection devices and equipment for the
  product and control system or designing or installing separate protection and/or safety circuits for fool-proof
  design and fail-safe design of the processes and lines that use the product and the control system, the user
  should implement these using additional devices and equipment.
- · If you are replacing parts or consumable items of the product, make sure to use parts specified by OMEGA.
- This product is not designed or manufactured to be used in critical applications that directly affect or threaten
  human lives. Such applications include nuclear power equipment, devices using radioactivity, railway facilities,
  aviation equipment, air navigation facilities, aviation facilities, and medical equipment. If so used, it is the user's
  responsibility to include in the system additional equipment and devices that ensure personnel safety.
- Do not modify this product.

### WARNING

#### Power Supply

Ensure that the source voltage matches the voltage of the power supply before turning ON the power.

#### • Protective Grounding

Make sure to connect the protective grounding to prevent electric shock before turning ON the power.

#### Necessity of Protective Grounding

Never cut off the internal or external protective earth wire or disconnect the wiring of the protective earth terminal. Doing so invalidates the protective functions of the instrument and poses a potential shock hazard.

#### • Defect of Protective Grounding

Do not operate the instrument if the protective earth or fuse might be defective. Make sure to check them before operation.

#### Do Not Operate in an Explosive Atmosphere

Do not operate the instrument in the presence of flammable liquids or vapors. Operation in such environments constitutes a safety hazard.

#### Do Not Remove Covers

The cover should be removed by OMEGA's qualified personnel only. Opening the cover is dangerous, because some areas inside the instrument have high voltages.

#### External Connection

Connect the protective grounding before connecting to the item under measurement or to an external control unit.

#### • Damage to the Protective Structure

Operating the recorder in a manner not described in this manual may damage its protective structure.

#### **Exemption from Responsibility**

- OMEGA makes no warranties regarding the product except those stated in the WARRANTY that is provided separately.
- OMEGA assumes no liability to any party for any loss or damage, direct or indirect, caused by the user or any unpredictable defect of the product.

#### **Handling Precautions of the Software**


- OMEGA makes no warranties regarding the software accompanying this product except those stated in the WARRANTY that is provided separately.
- Use the software on a single PC.
- · You must purchase another copy of the software, if you are to use the software on another PC.
- Copying the software for any purposes other than backup is strictly prohibited.
- · Please store the original media containing the software in a safe place.
- Reverse engineering, such as decompiling of the software, is strictly prohibited.
- No portion of the software supplied by OMEGA may be transferred, exchanged, sublet, or leased for use by any third party without prior permission by OMEGA.

## **Checking the Contents of the Package**

Unpack the box and check the contents before operating the recorder. If some of the contents are not correct or missing or if there is physical damage, contact the dealer from which you purchased them.

#### **Checking the Model**

A name plate is affixed to the recorder. Check that the model name and suffix code given on the name plate on the rear panel match those on your order.

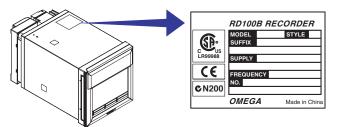

#### **MODEL and SUFFIX Code**


Model	Suffix Code	Optional Code	Description
RD101B			RD100B 1 pen recorder
RD102B			RD100B 2 pen recorder
RD103B			RD100B 3 pen recorder
RD104B			RD100B 4 pen recorder
RD106B			RD100B 6 dot recorder
	-1		Japanese
	-2		English & deg F / DST
		/A1	Alarm output relay 2 points <sup>1</sup>
		/A2	Alarm output relay 4 points <sup>1</sup>
		/A3	Alarm output relay 6 points <sup>1, 2</sup>
		/C3	RS-422A/485 interface <sup>3</sup>
		/C7	Ethernet (10BASE-T) interface <sup>3</sup>
		/F1	Fail/Chart end detection and output <sup>2</sup>
		/H2	Clamped input terminal <sup>4</sup>
		/H3	Non-glare door glass
		/M1	Mathematical function
		/N1	Cu10, Cu25 RTD input
		/N2	3 legs isolated RTD <sup>4, 5</sup>
		/N3	Expansion inputs <sup>6</sup>
		/R1	Remote control 5 points

- /A1, /A2, and /A3 cannot be specified simultaneously.
- /A3 and /F1 cannot be specified simultaneously.
- /C3 and /C7 cannot be specified simultaneously. /H2 and /N2 cannot be specified simultaneously. Valid only on the model 436106.

- 14 types of input including Pt50 RTD, PR40-20, and Platinel TC

#### **Standard Accessories**

The standard accessories below are supplied with the recorder. Check that all contents are present and undamaged.

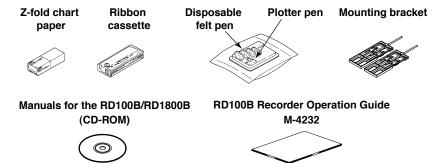

Item	1-Pen	2-Pen	3-Pen	4-Pen	<b>Dot Printing</b>	
Z-fold chart paper		1	1	1	1	1
Ribbon cassette		-	-	-	-	1
Red		1	1	1	1	-
Dianasahla falt nan	Green	-	1	1	1	-
Disposable felt pen	Blue	-	-	1	1	-
	Violet	-	-	-	1	-
Plotter pen Purple		1	1	1	1	-
Mounting bracket		2	2	2	2	2
Manuals for the RD100B/RD1800B (CD-ROM)		1	1	1	1	1
RD100B Recorder Operation Guide M-4232		1	1	1	1	1

#### **Optional Accessories (Sold Separately)**

The optional accessories below are available for purchase separately. If you make an order, make sure that all contents are present and undamaged.

For information about ordering accessories, contact the dealer from which you purchased the recorder.

Item	Model (Part Number	Quantity	Note	
Z-fold chart paper		RD100-ZFP-10	1	10 pcs.
Ribbon cassette		RD100-RC	1	
Red		RD100A-01	1	3 pcs.
Dianasahla falt nan	Green	RD100A-02	1	3 pcs.
Disposable felt pen	Blue	RD100A-03	1	3 pcs.
	Violet	RD100A-04	1	3 pcs.
Plotter pen	Purple	RD100A-11	1	3 pcs.
Mounting bracket		B9900BX	2	
Observation and a state of		415920	1	$250~\Omega\pm0.1\%$
Shunt resistor		415921	1	100 $\Omega \pm 0.1\%$
for the screw terminal (standard)		415922	1	10 $\Omega$ $\pm$ 0.1%
Shunt resistor		438920	1	$250~\Omega\pm0.1\%$
		438921	1	$100~\Omega\pm0.1\%$
for the clamped input terminal (/H2)		438922	1	10 $\Omega \pm 0.1\%$


#### **Software (Sold Separately)**

Item	Model	Note
RD100B Configuration software	RD100B-SW1	
HD 100B Collingulation Software	RD100B-SW2	With interface unit

<sup>\*</sup> The new functions of the RD100B version 1.11 are planned to be supported on the configuration software to be released after November 2005.


#### **Removing the Packing Materials**

Open the door, put your finger on the tab at the lower left of the display, and open the display.

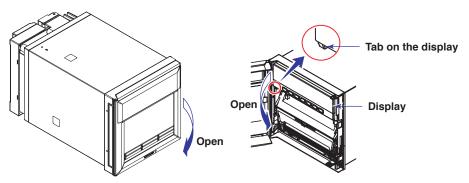


Remove all packing materials.

• Pen Model

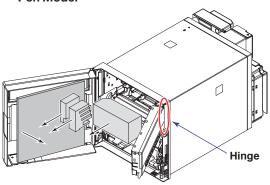

Dot Model

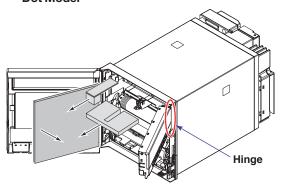

## **CAUTION**

To protect the hinges, do not apply vertical force on the display.

# **How to Use This Manual**

This user's guide consists of the following sections.

For details on communication functions, see the *RD100B/RD1800B Communication Interface User's Manual* on the CD-ROM.

Chapter	Title and Description
1	Functional Description  Describes the functions of the RD100B Recorder. Refer to this chapter when you are unsure of the details of the function that you are operating.
2	Before Using the Recorder Describes the installation and wiring procedures.
3	Names of Parts and Run Operations Describes the names of each part of the recorder and the daily operations.
4	Common Operations for Setting Functions and Setup Guide Describes the execution modes of the recorder, basic setup operations using keys, and provides a function setup guide.
5	Frequently Used Setup Operations (Setting Mode) Describes how to change the input range, alarms, chart speed, etc.
6	Setup Operations for Convenient Functions (Setting Mode) Describes the setup operations for convenient functions such as how to assign tags to channels and how to set message strings that are to be printed.
7	Setup Operations for Changing/Adding Functions (Basic Setting Mode)  Describes the setup operations for changing or adding functions such as setting the recorder to detect sensor burnouts and changing the contents that are printed on the chart paper.
8	Setup Operations for Changing the Displayed Contents  Describes how to select the display type suitable for the application.
9	Operations Related to the Computation Function (/M1 Option) Describes all operations related to the computation function.
10	Troubleshooting  Describes error message and troubleshooting measures of the RD100B Recorder.
11	Maintenance Describes periodic inspection, calibration, pen adjustment/printer carriage adjustment, and recommended replacement period for worn parts.
12	Specifications Gives the specifications of the RD100B Recorder.
Appendix	Describes the printout contents.
Index	

#### Note .

- This user's manual covers information regarding the recorders with English as the display/ recording language (suffix code "2").
- For the procedure of setting the display/recording language, see section 7.14, "Changing the Display/Recording Language."

#### Unit

K ...... Denotes 1024. Example: 768 KB (file size)

k ....... Denotes 1000.

#### **Safety Markings**

The following markings are used in this manual.



Improper handling or use can lead to injury to the user or damage to the instrument. This symbol appears on the instrument to indicate that the user must refer to the user's manual for special instructions. The same symbol appears in the corresponding place in the user's manual to identify those instructions. In the manual, the symbol is used in conjunction with the word "WARNING" or "CAUTION."

## WARNING

Calls attention to actions or conditions that could cause serious or fatal injury to the user, and precautions that can be taken to prevent such occurrences.

#### CAUTION

Calls attentions to actions or conditions that could cause light injury to the user or damage to the instrument or user's data, and precautions that can be taken to prevent such occurrences.

#### Note

Calls attention to information that is important for proper operation of the instrument.

#### **Subheadings**

On pages that describe the operating procedures in Chapter 3 through 9, the following symbols are used to distinguish the procedures from their explanations.

Bold characters denote keys or character strings that are displayed on the screen.

Example: Range, Unit

#### Procedure

Follow the numbered steps. All procedures are written with inexperienced users in mind; depending on the operation, not all steps need to be taken.

#### Explanation

This subsection describes the setting parameters and the limitations on the procedures. It does not give a detailed explanation of the function. For details on the function, see chapter 1.

2

3

4

5

6

7

8

9

10

44

12

App

Index

# Contents

Ь	Recorder's Version and Functions Described in This Manual	:
п		I
S	Safety Precautions	ii
C	Checking the Contents of the Package	ν
Н	low to Use This Manual	viii
Chapter 1 F	Functional Description	
1	.1 Overview of the Recorder	1-1
1	.2 Measuring Input Section	1-2
1	.3 Alarms	1-7
1	.4 Recording	1-13
1	.5 Display	1-22
1	.6 Computation Function (/M1 Option)	1-24
1	.7 FAIL/Chart End Detection and Output Function (/F1 Option)	1-27
1	.8 Remote Control Function (/R1 Option)	
1.	.9 Other Functions	1-30
Chapter 2 B	efore Using the Recorder	
2	.1 Handling Precautions	2-1
2	.2 Installation	2-2
	.3 Input Signal Wiring	2-5
	.4 Optional Terminal Wiring	2-9
2	.5 Power Supply Wiring	2-12
	.6 Turning ON/OFF the Power Switch	2-14
Chapter 3 N	ames of Parts and Run Operations	
3	.1 Names of Parts	3-1
3	.2 Installing or Replacing the Chart Paper	3-4
3	.3 Installing/Replacing Felt Pens or Plotter Pen (Pen Model)	3-7
3	.4 Installing/Replacing the Ribbon Cassette (Dot Model)	3-9
3	.5 Starting/Stopping the Recording	3-11
3	.6 Switching the Display Screen	3-12
3	7.7 Printing Measured Values (Manual Printout)	3-13
3	.8 Printing the Recorder Settings	3-14
3	.9 Clearing the Alarm PrinAtout Buffer	3-15
3	.10 Printing Messages	3-16
3	.11 Resetting the Report Data of the Periodic Printout	3-17
3	.12 Releasing the Alarm Output (Alarm ACK Operation)	3-18
3	.13 Activating/Releasing the Key Lock	3-19
Chapter 4 C	common Operations for Setting Functions and Setup G	auide
4	.1 Run Modes	4-1
4	.2 Key Operations	4-2
4	.3 Menu Structure, Settings, and List of Default Values	4-5
4	.4 Function Setup Guide	4-13
Chapter 5 F	requently Used Setup Operations (Setting Mode)	
5	.1 Setting the Input Range	5-1
5	.2 Setting the Alarm	5-9
5	.3 Setting the Unit on Scaled Channels	5-12

6-1. 6-2. 6-3. 6-4. 6-4. 6-10. 6-11. 6-11.
6-4 6-4 6-5 6-5 6-1 6-12 6-12
6-3 6-4 el 6-6 6-1 6-1 . 6-13
6-3 6-4 el 6-6 6-1 6-1 . 6-13
6-4 6-4 el 6-6 6-5 6-1 . 6-12 . 6-13
6-4 el 6-6 6-5 6-8 6-10 . 6-12 . 6-13
6-4 el 6-6 6-7 6-8 6-10 . 6-12 . 6-13
el 6-6 6-8 6-9 . 6-10 . 6-12 . 6-13
6-7 6-8 6-10 . 6-11 . 6-12
6-8 6-9 . 6-10 . 6-12 . 6-13
6-9 . 6-10 . 6-11 . 6-12 . 6-13
. 6-10 . 6-11 . 6-12 . 6-13
. 6-1 . 6-1 . 6-1
. 6-12 . 6-13
. 6-13
7-
7-
7_
7-4
7-
7-0
7-8
7-9
. 7-10
. 7-12
. 7-1
. 7-16
. 7-19
. 7-20
. 7-2
. 7-22
. 7-23
. 7-2
. 7-2
. 7-28
. 7-30
. 7-3°
8-
8-3
9-
9- 9-2
9-9
0.1/
. 9-10 . 0-1
. 9-10 . 9-1 . 9-10

App


Index

	9.8	Setting the Partial Expanded Recording	9-16
	9.9	Turning Trend Recording (Dot Model) and Periodic Printout ON/OFF	
		for Each Channel	9-17
	9.10	Setting Tags on Channels	9-18
	9.11	Setting the Alarm Delay Duration	9-19
	9.12	Setting the Timer Used in TLOG Computation and Periodic Printout	9-20
	9.13	Changing the Channel Recording Color (Dot Model)	9-23
	9.14	Changing the Channel Assignments of Recording Pens (Pen Model)	9-24
	9.15	Changing the Type of Report Data Printed in Periodic Printout	9-25
	9.16	Setting the Bar Graph Display Mode	9-27
	9.17	Setting the Procedure Taken When the Computed Result Is in Error	9-28
Chapter 10	Tro	ubleshooting	
	10.1	A List of Error Messages	10-1
	10.2	Troubleshooting Flow Charts	10-4
Chapter 11	Ма	iintenance	
	11.1	Periodic Inspection	11-1
	11.2	Cleaning the Recorder	11-2
	11.3	Replacing the Internal Light LED	11-3
	11.4	Calibrating the Recorder	11-4
	11.5	Adjusting the Pen Position (Pen Model)	11-6
	11.6	Adjusting the Dot Printing Position (Dot Model)	11-7
	11.7	Recommended Replacement Periods for Worn Parts	11-9
Chapter 12	2 Spe	ecifications	
	12.1	Input Specifications	12-1
	12.2	Alarm Function Specifications	12-3
	12.3	Recording Function Specifications	12-4
	12.4	Display Function Specifications	12-7
	12.5	Specifications of Optional Functions	12-13
	12.6	General Specifications	12-17
	12.7	Dimensional Drawings	12-21
Appendix			
	Appe	ndix 1 Periodic Printout and Printout Using the TLOG Timer (/M1 Option)	App-1
Index			

## 1.1 Overview of the Recorder

The RD100B Recorder (hereafter referred to as the recorder) can be used to assign DC voltage, 1-5V, thermocouple, RTD, and contact or voltage ON/OFF signal to channels for measurement. The measured results are recorded with pens or dots on a chart paper that is fed at a constant speed. The pen model can record up to 4 channels; the dot model can record up to 6 channels.

#### **RD100B Recorder**

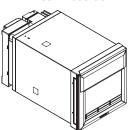

#### Recording example (dot model)



#### **Alarms**

For each channel, various alarms such as high limit alarm and low limit alarm can be assigned to monitor the measured values. Alarm output relays can be used to output contact signals when alarms occur (/A1, /A2, and /A3 options).

#### Recording

The measured results are recorded with pens or dots on a chart paper (trend recording). The chart speed can be selected from 5 to 12000 mm/h on the pen model and 1 to 1500 mm/h on the dot model.

In addition to trend recording, various types of information can be printed or recorded on the chart paper such as numeric measured values, alarm occurrence/release, and predefined messages.

Also, the recorder settings can be printed.

#### **Internal Light**

A light is provided for easier viewing of the recording area of the chart paper.

#### **Display**

Measured values can be displayed numerically or using bar graphs on the large display. Also, alarm status and chart speed can be displayed.

#### **Communication Function**

Using the Ethernet communication interface (/C7 option) or the RS-422A/485 communication interface (/C3 option), the measured values on the recorder can be output to a PC or a PC can be used to control the recorder.

This manual does not cover the communication functions. For details on communication functions, see the *RD100B/RD1800B Communication Interface User's Manual* on the CD-ROM.

#### **Other Main Functions**

The computation function (/M1 option) can be used to perform various computations from four arithmetic operations to statistical calculations on 8 and 12 computation channels on the pen model and dot model, respectively. The computed results can be recorded. The remote control function (/R1 option) can be used to control the start/stop and other operations of the recorder by applying contact signals to the dedicated terminals. The FAIL/chart end detection and output function (/F1 option) can be used to output contact signals when errors are detected on the recorder or when the chart paper runs out.

## 1.2 Measuring Input Section

#### **Input Section**

#### **Number of Measurement Channels and Scan Interval**

The recorder samples the input signals on the measurement channels at the scan interval to obtain the measured values.

Model	Number of Channels	Scan Interval
1-pen model	1	125 ms
2-pen model	2	125 ms
3-pen model	3	125 ms
4-pen model	4	125 ms
Dot model	6	1 s
		(However, the scan interval is 2.5 s when the integration time of the A/D converter is 100 ms.)

#### Input Type, Measurable Range, and Computation

The recorder can measure the following types of inputs.

Input Type	Measurable Range
DC voltage	DC voltage in the range of ±20 mV to ± 50 V
1-5V	See "1-5V" below.
Thermocouple	Temperature range corresponding to each type: R, S, B, K, E, J, T, N, W, L, U, and WRe
RTD	Temperature range corresponding to each type: Pt100 $\Omega$ and JPt100 $\Omega$
ON/OFF input	Contact input: Open contact is OFF (0). Closed contact is ON (1). Voltage input: Less than 2.4 V is OFF (0). Greater than or equal to 2.4 V is ON (1)

#### 1-5V

1-5V is scaled to values in the appropriate unit to be used as measured values. Also, the low-cut function (input less than 0% is fixed to 0 (scale left value)) can be used.

#### Current Input


A shunt resistor is attached to the input terminal. The current signal is converted to a voltage signal and measured. The measurable range is the range equivalent to the "DC voltage" range indicated above after converting the current to the voltage signal.

#### Note .

Three types of shunt resistors (250  $\Omega$ , 100  $\Omega$ , and 10  $\Omega$ ) are available for current input (see "Optional Accessories (Sold Separately)" on page v). For example, a 250- $\Omega$  shunt resistor is used to convert the signal to the range of 1 to 5 V for 4 to 20 mA input.

#### Range Type, Measurable Range, and Recording Span

Various "range type" are available for the different types of inputs (for example thermocouple R). Each range type has a preset measurable range (0.0 to 1760.0°C for thermocouple R). Measurement can be made by specifying an arbitrary range within the measurable range as the *input range*. The measured values in the input range are recorded on the chart paper. The range of measured values that are recorded is called the *recording span*.




#### <Related Topics>

Setting the input range: Section 5.1

#### • Delta Computation

The value obtained by subtracting the measured value of another channel (called the *reference channel*) from the input value of the channel set to delta computation is used as the measured value of that channel. The reference channel must be assigned to a channel whose channel number is less than that of the channel on which delta computation is specified. The channel on which delta computation is specified is automatically set to the same range type as the reference channel.




#### Note .

A channel whose input type is set to DC voltage, TC, or RTD can be designated as a reference channel. However, channels set to scaling or square root computation cannot be designated.


#### Scaling

The input values are scaled to values in the appropriate unit to be used as measured values.



#### Square Root Computation

When the input type is DC voltage, the square root of the input value is calculated, the result is scaled to a value in the appropriate unit, and used as the measured value of the channel. Also, the low-cut function (input less than a given measured value is fixed to 0 (scale left value)) can be used.

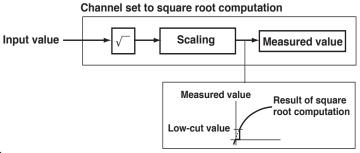

#### Note \_

The square root computation on the recorder uses the following formula.

$$F_X = (F_{max} - F_{min}) \sqrt{\frac{V_X - V_{min}}{V_{max} - V_{min}}} + F_{min}$$


where Vmin (leftmost value of span) < Vmax (rightmost value of span)

Fmin (leftmost value of scale after scaling) < Fmax (rightmost value of scale after scaling)

Vx is the input voltage and Fx is the scaled value

#### **Bias**

A given value (bias value) is added to the input value and used as the measured value of that channel.



#### <Related Topics>

Setting the bias: Section 7.15 and 6.12

#### **Burnout Detection of Thermocouples**

This function makes the recording go off the scale to the right or left when the thermocouple burns out while measuring temperature with a thermocouple. This function can also be used on 1-5V. The burnout detection function can be set for each channel.

By default, this function is disabled.

#### Note

For 1-5V, a burnout occurs when the input value is less than or equal to 0.2 V.

#### <Related Topics>

Setting the burnout detection function: Section 7.3

#### **Reference Junction Compensation of Thermocouple Input**


When measuring the temperature using a thermocouple, the reference junction compensation on the recorder can be used. When using external reference junction compensation, you can set the reference voltage. The reference junction compensation can be set for each channel.

By default, the recorder is configured to use the internal reference junction compensation function.

#### Note

When using external reference junction compensation, set an appropriate reference junction compensation voltage. For example, if the reference junction temperature of the external reference compensation is  $T_0$  °C, set the reference compensation junction voltage to the thermoelectromotive force of the 0°C reference of  $T_0$  °C.

Example when using external reference junction compensation



#### <Related Topics>

Setting the reference junction compensation function: Section 7.4

#### **Noise Elimination from Input Signals**


#### **Filter and Moving Average**

This function used to suppress the effects of noise that is riding on the signal. The pen model and dot model are equipped with a filter function and a moving average function, respectively. The function can be set for each measurement channel. However, it does not operate on channels set to ON/OFF input.

#### • Filter (Pen Model)


The filter is a low-pass filter. The time constant can be set to 2 s, 5 s, or 10 s.

#### Filter result (output for a step input)

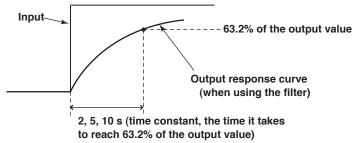

#### Moving Average (Dot Model)

The average value of the m most recent values acquired at the scan interval is used as the measured value of the channel. The number of moving-averaged data points (m) can be set in the range 2 to 16. The figure below shows an example indicating the operation of the buffer for the moving average computation when the number of moving averaged data points is set to 5.

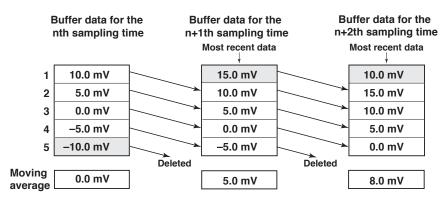

#### <Related Topics>

Setting the filter: Section 7.12 and 6.2

Setting the moving average: Section 7.11 and 6.3

#### Integration Time of the A/D Converter

The recorder uses an A/D converter to convert the sampled analog signal to a digital signal. By setting the integration time of the A/D converter to match the time period corresponding to one cycle of the power supply or an integer multiple of one cycle, the power supply frequency noise can be effectively suppressed.

The integration time of the A/D converter is selected according to the model from the table below.

Model	Integration Time of the A/D Converter	
Pen model	Select 16.7 ms (60 Hz), 20 ms (50 Hz), or Auto	
Dot model	Select 16.7 ms (60 Hz), 20 ms (50 Hz), 100 ms or Auto	

- If Auto is selected, the recorder detects the power supply frequency and automatically selects 16.7 ms or 20 ms.
- Because 100 ms is an integer multiple of 16.7 ms and 20 ms, this setting can be used to suppress the power frequency noise for either frequency, 50 Hz or 60 Hz.
- The scan interval on the dot model is 1 s when the integration time is set to 16.7 ms or 20 ms and 2.5 s when the integration time is set to 100 ms.

#### <Related Topics>

Setting the A/D integration time: Section 7.2

## 1.3 Alarms

This function generates an alarm when the measured data meets a certain condition. The alarm occurrence/release can be recorded on the chart paper. The alarm status can be displayed on the screen.

Also, alarm output relays can be used to output contact signals when alarms occur (/A1, /A2, and /A3 options).

#### **Alarm Types**

#### **Number of Alarm Point Marks**

Up to four alarms can be set for each channel.

#### **Alarm Conditions**


The eight conditions below are available. The character inside the parentheses is the symbol used to denote each alarm on the recorder.


#### • High Limit Alarm (H)

An alarm occurs when the input value exceeds the alarm value.

#### • Low Limit Alarm (L)

An alarm occurs when the input value falls below the alarm value.





#### Difference High Limit Alarm (h)\*

An alarm occurs when the difference in the input values of two channels is greater than or equal to the specified value.

#### Difference Low Limit Alarm (I)\*

An alarm occurs when the difference in the input values of two channels is less than or equal to the specified value.

\* Can be specified on channels set to delta computation.


#### High Limit on Rate-of-Change Alarm (R)

The rate-of-change of the measured values is checked over a certain time (interval). An alarm occurs if the rate-of-change of the measured value in the rising direction is greater than or equal to the specified value.


#### • Low Limit on Rate-of-Change Alarm (r)

The rate-of-change of the measured values is checked over a certain time (interval). An alarm occurs if the rate-of-change of the measured value in the falling direction is greater than or equal to the specified value.

#### High limit on rate-of-change alarm

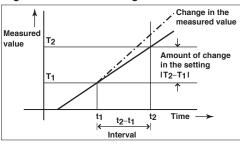

#### Low limit on rate-of-change alarm

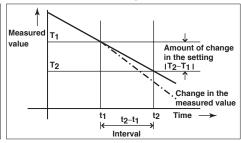

The alarm value of the rate-of-change alarm is set using an absolute value. The interval is derived using the following equation and set using the number of samples.

Interval = the scan interval  $\times$  the number of samples


#### • Delay High Limit Alarm (T)

An alarm occurs when the measured value remains above the alarm value for a specified time period (alarm delay period).

#### Delay Low Limit Alarm (t)

An alarm occurs when the measured value remains below the alarm value for a specified time period (alarm delay period).

#### Delay High Limit Alarm Example (T is the specified delay)



- Alarm does not occur at T1, because the time period is shorter than the specified alarm delay period (T).
- The measured value exceeds the alarm value at time X2, and the alarm occurs at time X3 at which the specified alarm delay period elapses (the time when the alarm occurs is the time at X3).
- The measured value falls below the alarm value at time X4, and the alarm is released.


#### Note .

- The alarm detection operation is reset when a power failure occurs. The operation restarts after the power recovers.
- If the alarm value is changed while a delay alarm is occurring, the alarm is released if the new alarm value does not meet the alarm condition.


#### **Alarm Hysteresis**

Hysteresis can be specified to the values for activating and releasing the alarm. The hysteresis applies only to high limit alarm (H) and low limit alarm (L). The hysteresis width can be set in the range of 0.0% (Off) to 1.0% of the recording span in 0.1 steps. The setting applies to all high limit alarms and low limit alarms. By default, the hysteresis width is set to 0.5%.

High limit alarm



Low limit alarm



#### <Related Topics>

Setting alarms: Section 5.2

Setting the alarm delay function: Section 7.15 and 6.10

Setting the alarm hysteresis: Section 7.1

1

#### **Alarm Indication**


The alarm status can be displayed on the screen. For details on the display, see section 1.5.

#### Non-Hold/Hold Operation of the Alarm Indication

The alarm indication can be set to operate in the following fashion when the alarm condition is no longer met.

- · Clear the alarm indication (non-hold).
- Hold the alarm indication until the alarm ACK operation is executed (hold).

The default setting is non-hold.

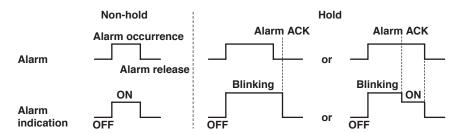

#### <Related Topics>

Setting the non-hold/hold operation of the alarm indicator: Section 7.1

#### **Alarm Recording**

The alarm occurrence/release can be recorded on the chart paper. See section 1.4.

#### Alarm Output Relay (/A1, /A2, and /A3 Options)


Contact signals can be generated from alarm output relays when alarms occur. The number of output relays is 2 (/A1), 4 (/A2), or 6 (/A3). The alarm output relays are denoted as I01 to I06 on the recorder.

The following functions can be assigned to the alarm output relay.

#### **Diagnosis Output**

The diagnosis output can be assigned to alarm output relay I01.

The relay is activated when there is an error in the plotter operation on the pen model, when a burnout is detected, or when there is an error in the A/D converter. Output relay I01 is normally energized and de-energizes when an error is detected (de-energized operation and non-hold operation).



NO: Normally Opened, C: Common, NC: Normally Closed

Note .

If diagnosis output is enabled, I01 becomes a relay dedicated to diagnosis output.

#### <Related Topics>


Setting the diagnosis output: Section 7.1

#### **Reflash Alarm**

When multiple alarms are assigned to one alarm output relay, this function notifies the occurrence of subsequent alarms after the relay is activated by the first alarm. When subsequent alarms occur, the output relay is released temporarily (approximately 500 ms).

The reflash alarm function is set to three output relays (I01, I02, and I03 (I01 and I02 for the /A1 option)).

By default, the reflash alarm is disabled.

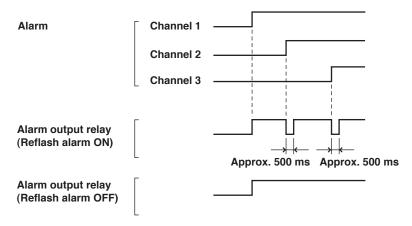

#### Note \_

- If the reflash alarm is enabled, I01 to I03 are set to reflash alarm operation. In this case, I01 to I03 are set to OR operation and non-hold operation regardless of the settings specified in "AND/OR Operation of Alarm Output Relays" and "Non-Hold/Hold Operation of Alarm Output Relays" described below.
- If diagnosis output is enabled, I01 is set to diagnosis output.


#### <Related Topics>

Setting the reflash alarm: Section 7.1

#### **AND/OR Operation of Alarm Output Relays**

When multiple alarms are assigned to one alarm output relay, the condition for activating the alarm output relay can be selected from the following:

- · AND: Activated when all assigned alarms are occurring simultaneously.
- OR: Activated when any of the specified alarms is occurring.

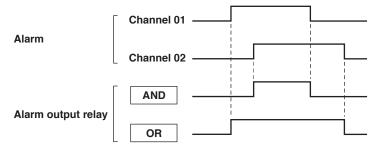

The alarm output relays assigned to AND operation are specified as follows: "I01 (first relay) to lxx (where xx is the relay number)."

The default setting is "no AND relay."

#### Note

- If the reflash alarm is enabled, I01 to I03 are fixed to OR operation. Specifying AND produces no effect.
- If diagnosis output is enabled, I01 is set to diagnosis output. Specifying AND produces no
  effect.


#### <Related Topics>

Setting the AND operation: Section 7.1

#### **Energized/De-energized Operation of Alarm Output Relays**

You can select whether the alarm output relay is energized or de-energized when an alarm occurs. If de-energized is selected, the status of the alarm output relay when an alarm occurs is the same as the status that results when the power is shut down. The setting applies to all alarm output relays.

The default setting is energized.

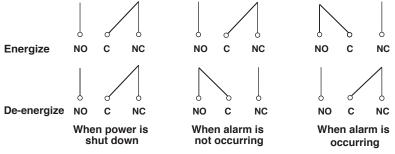

NO: Normally Opened, C: Common, NC: Normally Closed

#### Note

If diagnosis output is enabled, I01 is fixed to de-energized operation.

#### <Related Topics>

Setting the energized/de-energized operation of alarm output relays: Section 7.1


#### Non-Hold/Hold Operation of Alarm Output Relays

The alarm output relay can be set to operate in the following fashion when the alarm condition is no longer met.

- Turn off the relay output (non-hold).
- Hold the relay output until the alarm ACK operation is executed (hold).

The setting applies to all alarm output relays.

The default setting is non-hold.

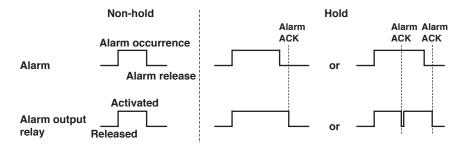

#### Note

- If the reflash alarm is enabled, I01 to I03 are fixed to non-hold operation. Specifying Hold produces no effect.
- If diagnosis output is enabled, I01 is fixed to non-hold operation. Specifying Hold produces no effect.

#### <Related Topics>

Setting the non-hold/hold operation of alarm output relays: Section 7.1

#### **Alarm ACK Operation**

The alarm acknowledge (alarm ACK) operation releases all alarm indications and relay outputs (/A1, /A2, and /A3 options) that are activated when the alarm indication or alarm output relay is set to hold operation. This operation can be executed from the front panel key.

#### <Related Topics>

Alarm ACK operation: Section 3.12


## 1.4 Recording

The recorder is capable of recording the measured values with pens or dots (trend recording) as well as various other types of information.

#### **Recording Example on the Pen Model**



#### **Recording Example on the Dot Model**

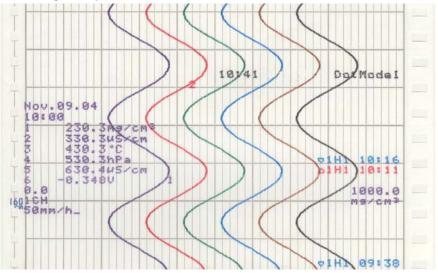

The recording examples may appear differently from the actual recording as a result of functional improvements made on the recorder after this manual was written.

#### <Related Topics>

Starting/Stopping recording: Section 3.5

#### **Trend Recording**

The measured values are printed within a width of 100 mm.

#### **Recording Method (Pen Model)**

- The measured value is updated every scan interval and continuously recorded.
- The recording colors in order from channel 01 are red, green, blue, and violet.

#### **Recording Method (Dot Model)**

- The most recent measured value is recorded with a dot every dot printing interval.
   The dot printing interval is in the range of 10 s to 90 s. There are two recording methods from which you can select. One method automatically adjusts the dot printing interval according to the chart speed so that the dots do not overlap. The other method records at the fastest dot printing interval at all times.
- The recording colors in order from channel 01 are purple, red, green, blue, brown, and black. The recording color of each channel can be changed among these six colors.
- For each channel, trend recording can be enabled or disabled.

#### <Related Topics>

Setting the dot printing interval: Section 6.1 Changing the recording color: Section 7.5

Enabling/Disabling trend recording for each channel: Section 6.6

#### **Chart Speed**

On the pen model, the chart speed can be selected from 82 settings in the range of 5 to 12000 mm/h.

On the dot model, the chart speed can be set in the range of 1 to 1500 mm/h in 1-mm steps.


The default setting is 20 mm/h.

#### <Related Topics>

Setting the chart speed: Section 5.4

#### **Zone Recording**

A recording zone is assigned to each channel.

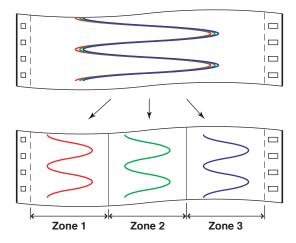


#### <Related Topics>

Setting the zone recording: Section 6.4

#### **Partial Expanded Recording**

This function expands a section of the recording range. By default, partial expanded recording is disabled.

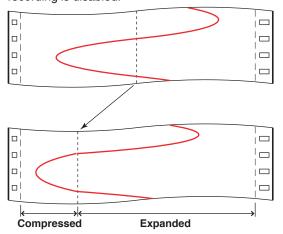


#### <Related Topics>

Setting the partial expanded recording: Section 7.13 and 6.5


#### Pen Offset Compensation (Pen Model)

This function compensates for the pen offset (phase difference) along the time axis. On 2-pen, 3-pen, and 4-pen recorders, there are offsets along the time axis (phase difference) between the pens. This offset is corrected when pen offset compensation is used.



Below is an explanation for the 2-pen model.

The recording of these two pens are offset by an amount of phase P. If pen offset compensation is enabled, the measured values of pen 1 are stored in the memory, and recorded when the chart paper is fed by an amount corresponding to P.

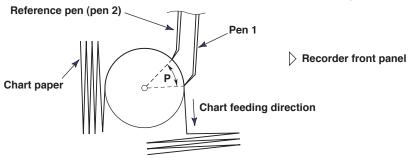

By default, this function is disabled.


#### <Related Topics>

Setting the pen offset compensation: Section 7.6

#### **Printout**

The figure below is used to explain the printout contents. The actual printout and font are different from those illustrated in the figure. The printout positions are also slightly different.

#### **Printout Example on the Pen Model**

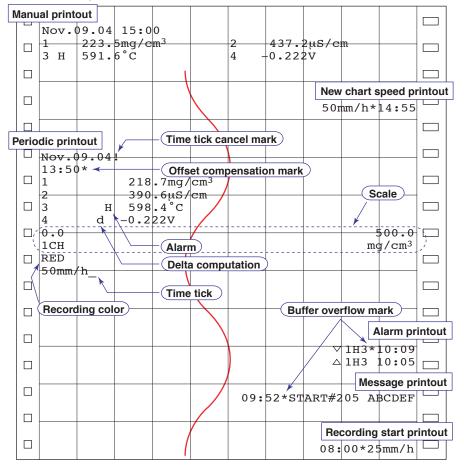

#### Time tick

The time ticks are marks that indicate the positions of the date/time on the chart paper.

#### Time tick cancel mark

An exclamation point (!) is printed when the periodic printout time tick was not printed at the correct position.

#### <Related Topics>


Setting the channel printout (dot model)/pen color printout (pen model): Section 7.7 Setting the alarm printout, new chart speed printout, and recording start printout:

Section 7.7 and 7.16

Clearing the alarm printout buffer: Section 3.9 Setting the periodic printout: Section 6.6, 7.7, and 7.8

Executing manual print: Section 3.7 Printing messages: Section 6.8 and 3.10

Printing settings: Section 3.8

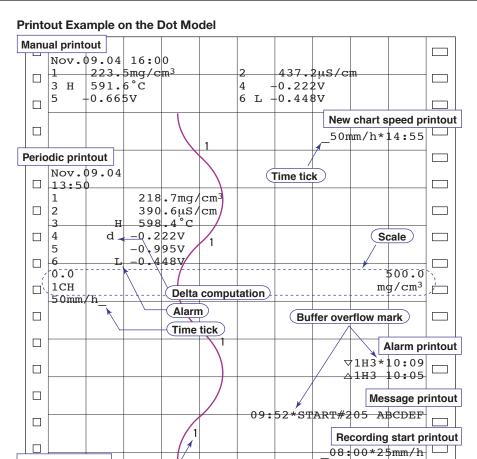

#### **Channel Printout (Dot Model Only)**


**Channel printout** 

Prints the channel No. or tag by the trend recording. The channel No. or tag is printed every approximately 25 mm on the chart paper. The channel printout can be enabled or disabled. By default, the channel printout is enabled.

Time tick

#### **Alarm Printout**

Alarm information is printed when an alarm occurs or releases.



- The print condition can be set to (1) print when alarms occur and release, (2) print only when alarms occur, or (3) do not print.
- Alarms that occur while an alarm printout is in progress are temporarily saved to the buffer memory in a printout-wait condition. Alarms are cleared from the buffer memory when they are printed.
- The number alarms that can be stored in the buffer is 8 and 12 on the pen model and dot model, respectively. Alarms that occur while the buffer is full are not printed. A buffer overflow mark is printed when there are alarms that cannot be printed because the buffer is full.
- The time printout format can be selected.

Туре	Printout format	Туре	Printout format
Hour:Minute	10:00	Hour:Minute:Second	10:00:00
Month:Day:	Nov. 09	Month:Day:	Nov. 09
Hour:Minute	10:00	Hour:Minute:Second	00:00:00
Year:Month:Day:	Nov. 09. 2004		
Hour:Minute:Second	10:00:00		

<sup>\*</sup> The format of year, month, and day varies depending on the setting (see the next page).

#### **Periodic Printout**

Measured values and other items are printed at the preset interval.

- Printout Contents (for details, see appendix 1)
  - Date/time, time ticks (marks that indicate the positions of the date/time on the chart paper); measured values, alarm status, scale (leftmost and rightmost values of span) and recording color (pen model) for each channel; and chart speed can be printed. When pen offset is being executed on the pen model, the pen offset marks are printed. On the pen model, if a time tick is not printed at the correct position, a time tick cancel mark (!) is printed.
  - Printout of measured values and alarm status can be enabled or disabled for each channel.
  - Printout of the scale and recording colors (pen model) can be enabled or disabled.
     The scale can be printed when the recording zone is greater than or equal to 40 mm.
  - The measured values for each channel can be selected from the following data types.
     Instantaneous value (measured value at the time of periodic printout)
     Average value (average of the measured values over an interval)
     Minimum value (minimum value of the measured values over an interval)
     Maximum value (maximum value of the measured values over an interval)
     Minimum value, maximum value, and average value
     Sum value (summed value of the measured values over an interval)

#### Interval

The printout interval can be set by specifying the value or set automatically in sync with the chart speed. Periodic printout is disabled at the following chart speeds. Pen model: Less than or equal to 9 mm/h or greater than or equal to 1600 mm/h Dot model: Less than or equal to 9 mm/h or greater than or equal to 101 mm/h

#### • Turning ON/OFF the Periodic Printout

Periodic printout can be turn ON/OFF. By default, periodic printout is enabled with the interval synchronized to the chart speed. Also, the measured values that are printed are the instantaneous values.

#### **Manual Printout**

Measured values and alarm status can be printed manually using the keys. When manual printout is executed, trend recording stops and restarts when manual printout is complete.

#### **Message Printout**

Preset messages can be printed on the chart paper using the keys. Five messages, each within 16 characters, can be registered in advance.

- If message printout is executed while another message is being printed, the most recent message is temporarily stored to the buffer memory in a printout-wait condition.
   Messages are cleared from the buffer memory when they are printed.
- The number of messages that can be stored in the buffer is 5. If message printout is
  executed when the buffer is full, the message is not printed. A buffer overflow mark is
  printed when there are messages that cannot be printed because the buffer is full.
- The time printout format can be selected.

#### **New Chart Speed Printout**

- When the chart speed is changed, the time tick (dot model), the date/time of change, and the new chart speed are printed. An asterisk (\*) shows there are messages that cannot be printed.
- · The time printout format can be selected.

#### **Recording Start Printout**

When recording is started, the time tick (dot model), the time, and the chart speed can be printed. An asterisk (\*) shows there are messages that cannot be printed.

- The recording start printout can be enabled or disabled. By default, the recording start printout is disabled.
- The time printout format can be selected.

#### **Printout/Display Format of the Date**

The printout/display format of the date can be selected from the list below. The setting applies to all dates printed and shown on the display.

Туре	Printout/Display Format
Y/M/D	2005/08/31
M/D/Y	08/31/2005
D/M/Y	31/08/2005
D.M.Y	31.08.2005
M.D.Y	Aug.31.2005

#### <Related Topics>


Setting the printout/display format of the date: Section 7.19

#### **Setting Printout**

List or Setup List can be printed. When setting printout is executed, trend recording stops and restarts when the printout is complete.


List contains settings such as the input range and alarm for each channel. Setup List contains settings of basic specifications such as the alarm output relay operation and printout method.

• Printout Example of List on the Pen Model

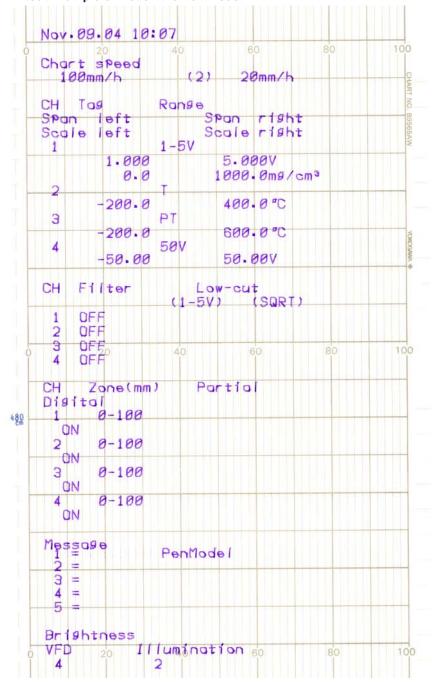

The printout examples may appear differently from the actual printout as a result of functional improvements made on the recorder after this manual was written.

• Printout Example of List on the Dot Model

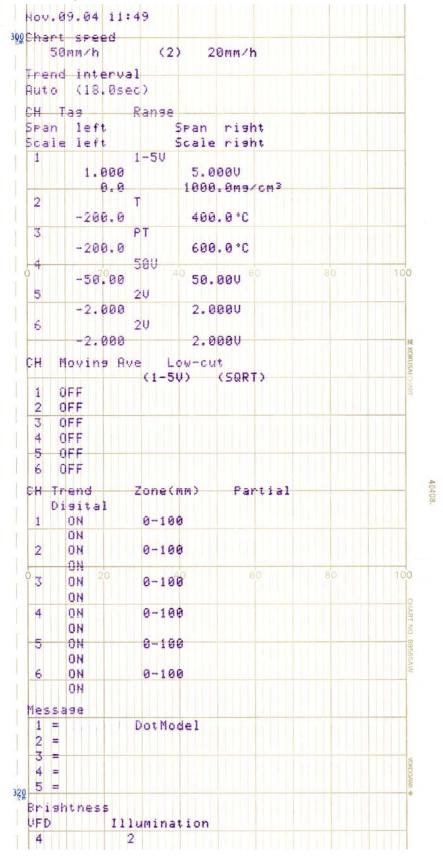

The printout examples may appear differently from the actual printout as a result of functional improvements made on the recorder after this manual was written.


## 1.5 Display

#### **Displayed Information**

#### **Main Display**

The recorder is capable of displaying measured values, alarm information, and so on the VFD (Vacuum Fluorescent Display). Using normal fonts, 17 characters × 2 lines can be displayed. Using large fonts, 11 characters can be displayed.

#### Status display



There are 22 display types available. Also, different displays can be assigned to the top and bottom sections of the main display. These display types can be registered to screens 1 to 15 and switched during operation using the keys.

#### **Status Display**

A status display is available at the bottom of the main display. The indicators below turn ON/OFF.

#### RECORD

This indicator turns ON when recording is started and turns OFF when stopped.

#### ALARM 1 2 3 4 5 6

The numbers correspond to measurement channel numbers. The indicator turns ON when an alarm occurs and turns OFF when the alarm is released.

If the alarm indication is set to hold operation, the indicator blinks when an alarm occurs. When alarm ACK operation is performed, the indicator turns ON or OFF.

#### MATH

This indicator turns ON when computation on the computation function (/M1 option) is started and turns OFF when stopped.

#### KEYLOCK

This indicator turns ON when key lock is enabled and turns OFF when disabled.

#### CHART END

This indicator turns ON when the remaining amount of chart paper falls to approximately 2 cm on models with the FAIL/chart end function (/F1 option).


#### **Display Types**

The following display types are available.

Displays that show measured values

Measured values can be displayed numerically or using bar graphs. The channels that are displayed can be switched automatically at constant intervals.

The bar graph displays 0 to 100% using 101 points.




- · Displays that show alarms
- · Displays that show the date/time and chart speed
- Displays that show the remote control input and alarm output relay statuses
- Displays that show the status
- · System display


Different display types can be assigned to the top and bottom sections of the main display.

Several display examples are shown below. For details on the display types, see "Display Function Specifications" in section 12.4.


#### 1 Channel Digital + 1 Bar Graph Display

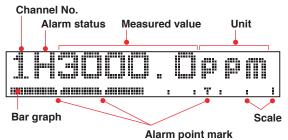

#### Flag Display




#### **Alarm Status Display**

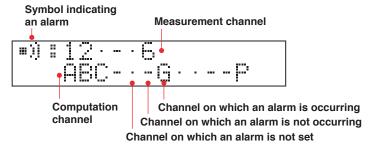


#### **Date/Time and Chart Speed**

The date format can be specified.

#### Date



#### **Status Display**



#### <Related Topics>

Assigning display types to screens: Chapter 8

Switching displays: Section 3.6

Setting the bar graph display mode: Section 7.9

Changing the date format: Section 7.19
Setting the display brightness: Section 6.11
Displaying measured values: Section 12.4.

# 1.6 Computation Function (/M1 Option)

#### **Computation Function**

Computing equations can be set up using measured values and other computed values as variables in computation-dedicated channels, and the computation can be executed. The computed result can be recorded. Computation is performed every scan interval.

#### **Channels Dedicated to Computations**

The computation-dedicated channels below can be used.

Model	Number of Channels	Channel Names
Pen model	8	0A, 0B, 0C, 0D, 0E, 0F, 0G, and 0J
Dot model	12	0A, 0B, 0C, 0D, 0E, 0F, 0G, 0J, 0K, 0M, 0N, and 0P

#### **Types of Computations**

In the table below, y represents the computed result. X and n represent the measured value, a constant, etc.

Туре	Syntax in the Equation	Description
Four arithmetic operation	+, -, *, /	Determines addition, subtraction, multiplication, and division.
Power	**	Determines the power. $y = X^n$
Square root	SQR()	Determines the square root.
Absolute value	ABS()	Determines the absolute value.
Common logarithm	LOG()	Determines the common logarithm. y=log <sub>10</sub> x
Exponent	EXP()	Determines the exponent. $y = e^x$
Relational computation	.LT., .LE., .GT., .GE., .EQ., .NE.	Determines <, ≤, >, or ≥ of two elements and outputs "0" or "1."
Logical computation	AND, OR, XOR, NOT	Determines the AND (logical product), OR (logical sum), XOR (exclusive logical sum) of two elements, NOT (negation) of an element and outputs "0" or "1."
TLOG computation	TLOG.SUM(), TLOG. MAX(), TLOG.MIN(), TLOG.AVE(), TLOG.P-P(),	Determines the sum (SUM), the maximum (MAX), the minimum (MIN), the average (AVE), and the maximum – minimum (P-P) at specified time intervals. There are three timers for setting the interval.

#### **Data That Can Be Used in Equations**

In TLOG computation, the measured values of measurement channels or computed values of computation channels can only be used. For all other computations, all of the data types below can be used.

#### Measured Values on Measurement Channels

Specified by the channel No. For channels that have scaling enabled, the scaled values are used in the computation.

#### Computed Values on Computation Channels

Specified by the channel No.

#### · Constants (K01 to K30)

The values assigned to K01 to K30 can be used as constants.

Range of values (maximum significant digits is 5):

-9.9999E+29 to -1.0000E-30, 0, 1.0000E-30 to 9.9999E+29

#### Communication Input Data (Pen model: C01 to C08, dot model: C01 to C12)

This data type is set using the communication interface (/C7 or /C3 option).

Range of values (maximum significant digits is 5):

-9.9999E+29 to -1.0000E-30, 0, 1.0000E-30 to 9.9999E+29

For the procedure of setting the communication input data, see the *RD100B/RD1800B Communication Interface User's Guide M-4233*.

#### Status of the Remote Control Input Terminal (D01 to D05, /R1 option)

The status of the remote control input signal (1 or 0) can be used in the computation. Use D01 to D05 (the number following the letter D is the remote control input terminal number) to specify the status in the equations.

#### <Related Topics>

Setting the computing equation, constant, and unit: Section 9.2 to 9.4 Setting the TLOG timer: Section 9.6 and 9.12

#### Handing of the Unit in Computations

In computations, measured/computed values are handled as values without units. For example, if the measured value of channel 01 is 20 mV and the measured value of channel 02 is 20 V, the computed result of 01 + 02 is 40.

#### **Recording Computation Channels**


#### **Trend Recording**

Trend recording is possible by setting the recording span for each computation channel. The recording span of computation channels can be set in the range of –9999999 to 99999999 excluding the decimal.

Zone recording and partial expanded recording are also possible.

#### Assignment of Computation Channels to the Pens (Pen Model)

Trend recording is possible by assigning computation channels to arbitrary pens. Only display or printout is possible for measurement channels or computation channels that are not assigned to a pen. Assignment of pens is possible only on models with the computation function.



Measurement channels Computation channels

#### <Related Topics>

Changing the channel assignment of recording pens: Section 9.14

#### **Changing the Channel Recording Color (Dot Model)**

The recording colors of computation channels can be changed. The default recording colors of channels are indicated below.

Recording color	Purple	Red	Green	Blue	Brown	Black
Computation channels	0A	0B	0C	0D	0E	0F
	0G	0J	0K	OM	0N	0P

#### The Number of Channels Being Trend Recorded and the Fastest Recording Interval

The fastest recording interval varies depending on the number of channels being trend recorded. Only display or printout is possible on measurement channels or computation channels that are not trend recorded.

Number of Channels Being Trend Recorded	Fastest Recording Interval
6 channels or less	10 s
7 to 12 channels	15 s
13 to 18 channels	20 s

#### <Related Topics>

Changing the channel recording color: Section 9.13

Enabling/Disabling trend recording for each channel: Section 9.9

#### **Printout**

Various printouts can be executed in the same fashion as measurement channels. The computed values of computation channels can be printed at constant intervals by using the periodic printout timer or the two TLOG timers. The TLOG timers can be used only on the computation channels. For the printout contents when printing using the TLOG timer, see appendix 1.

#### <Related Topics>

Setting the periodic printout: Section 7.8, 9.6, and 9.15

Setting the printout using the TLOG timer: Section 9.6 and 9.12

#### **Alarms**

Up to 4 alarms can be assigned to each computation channel.

- The alarm types are high limit alarm (H), low limit alarm (L), delay high limit alarm (T), and delay low limit alarm (t).
- Hysteresis can be specified to the values for activating and releasing the alarm. The
  hysteresis applies only to high limit alarm (H) and low limit alarm (L). The hysteresis
  width can be set in the range of 0.0% (Off) to 1.0% of the recording span in 0.1 steps.
  The setting applies to all high limit alarms and low limit alarms. By default, the
  hysteresis width is set to 0% (Off).

#### <Related Topics>

Setting alarms: Section 9.5

Setting the alarm delay function: Section 7.15 and 9.11

Setting the alarm hysteresis: Section 7.1

#### **Display**

Computation channels can be displayed on the VFD as with the measurement channels.

#### <Related Topics>

Setting the bar graph display mode: Section 9.16

#### **Starting/Stopping Computation**

Computation can be started or stopped using keys.

#### <Related Topics>

Starting/Stopping computation: Section 9.1

# 1.7 FAIL/Chart End Detection and Output Function (/F1 Option)

#### **FAIL Output**

When a failure occurs in the CPU of the recorder, a relay contact signal (1 signal) is output. The relay is energized when the CPU is normal and de-energizes when a CPU failure occurs. Therefore, relay output is carried out also when the power is turned OFF (including a power failure). This relay behavior cannot be changed.


• FAIL Relay Output



NO: Normally Opened, C: Common, NC: Normally Closed

#### **Chart End Output**

When the remaining amount of chart paper falls to approximately 2 cm, recording is stopped, and the relay contact signal (1 relay) is output. The relay is energized in this case. This relay behavior cannot be changed.



NO: Normally Opened, C: Common, NC: Normally Closed

# 1.8 Remote Control Function (/R1 Option)

Specified operations can be carried out by applying remote signals (contact or open collector signals) to the remote control input terminals.

There are five remote control input terminals. An action can be assigned to each terminal.

#### μR10000 Recorder



#### **Assignable Functions**

#### · Recording start/stop

- Remote input signal: Rising edge signifies start; falling edge signifies stop
- · Starts/stops recording.
- Applying a rising edge signal when recording is already in progress produces no effect. Applying a falling edge signal when recording is stopped produces no effect.

#### · Chart Speed Switch

- · Remote input signal: Level
- The chart paper is fed at the secondary chart speed while a level signal is applied to the terminal. The secondary chart speed is set in advance.

#### Message 1 Printout to Message 5 Printout

- · Remote input signal: Trigger
- Prints message 1 to 5 on the chart paper.

#### Manual Printout

- · Remote input signal: Trigger
- · Executes a manual printout.

#### Alarm ACK

- · Remote input signal: Trigger
- Alarm ACK is executed on all alarms that are occurring. This is valid only when the alarm indication or output relay operation is set to hold.

#### • Internal Clock Adjustment

- · Remote input signal: Trigger
- The internal clock of the recorder is adjusted to the nearest hour depending on the time when the remote signal is applied.

Time When Signal Is Input	Adjustment
00 min 00 s to 01 min 59 s	Truncates the minutes and seconds.  Example: 10 hours 01 min 50 s becomes 10 hours 00 min 00 s.
02 min 00 s to 57 min 59 s	The time is not changed.
58 min 00 s to 59 min 59 s	Rounds up the minutes and seconds.  Example: 10 hours 59 min 50 s becomes 11 hours 00 min 00 s.

#### Computation Start/Stop


- · Remote input signal: Rising edge signifies start; falling edge signifies stop
- Starts/stops the computation. This is valid only on models with the computation function (/M1 option).
- If the computation is started, applying a rising edge signal produces no effect. If the computation is stopped, applying a falling edge signal produces no effect.

#### • Computation Reset

- · Remote input signal: Trigger
- The computed results of computation channels are reset. This is valid only on models with the computation function (/M1 option) and while the computation is stopped. For all other cases, applying the remote signal produces no effect.

#### Remote Signal (Edge, Trigger, and Level)

The above actions are carried out on the rising or falling edge of the remote signal (edge), the ON signal lasting at least 250 ms (trigger), or the ON/OFF signal (level).

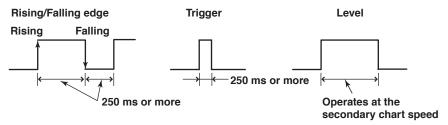

For contact inputs, the remote signal rises when the contact switches from open to closed and falls when the contact switches from closed to open. For open collector signals, the remote signal rises when the collector signal (voltage level of the remote control terminal) goes from high to low and falls when the collector signal goes low to high.

#### <Related Topics>

Assigning functions to the remote control input terminals: Section 7.18 Setting the secondary chart speed: Section 6.9

## 1.9 Other Functions

#### **Key Lock**

Key lock is a function that prohibits key operations. When key lock is enabled, pressing keys produces no effect. To release the key lock, a password is entered.

#### **Key Lock Items**

Each of the following keys can be included or excluded from the key lock function.



Keys that can be locked

In the case of the FUNC key, each function of the FUNC key can be included or excluded from the key lock function.

FUNC key functions: Alarm ACK execution, computation start/stop, manual printout and

setting printout, message printout, printout buffer clear, resetting of the periodic printout report data (the average, etc.), and pen

replacement (pen model), ribbon cassette replacement (dot model)

#### <Related Topics>

Setting the key lock function: Section 7.10 Using the key lock function: Section 3.13

#### Language

The display and recording language can be set to English or Japanese.

#### <Related Topics>

Changing the language: Section 7.14

#### **DST**

If the recorder is used in a region that has DST, time can be switched automatically between DST and standard time by setting the date/time when switching from the standard time to DST and the date/time when switching back from DST to standard time. When switching from standard time to DST, the clock is set ahead by 1 hour. When switching back from DST to standard time, the clock is set back by 1 hour.

#### <Related Topics>

Using the DST: Section 6.13

#### **Temperature Unit**

The temperature unit can be set to Celsius or Fahrenheit. The setting applies to all channels.

#### <Related Topics>

Changing the temperature unit: Section 7.20

## 2.1 Handling Precautions

This section describes the precautions to be taken when using the recorder. Read this section before use.

#### **Handling Precautions**

- Use care when cleaning the recorder, especially any plastic parts. When cleaning, wipe using a dry soft cloth. Do not use chemicals such as benzene or thinner, since these may cause discoloring and deformation.
- Keep electrically charged objects away from the recorder as this may cause malfunction.
- Do not apply volatile chemicals to the door glass, display, panel keys, etc. Do not allow rubber and vinyl products to remain in contact with the recorder for long periods of time. This may damage the recorder.
- When not in use, make sure to turn OFF the power switch.
- If there are any symptoms of trouble such as strange odors or smoke coming from the recorder, immediately turn OFF the power switch and the power supply source. Then, contact OMEGA.

### 2.2 Installation

#### **Installation Location**

Install the recorder indoors in a location that meets the following conditions. See also the normal operating conditions described in section 12.6, "General Specifications."

#### • Instrument Panel

The recorder is designed for panel mounting.

#### Well-Ventilated Location

To prevent overheating, install the recorder in a well-ventilated location. For the panel cut dimensions when arranging multiple recorders, see page 2-4. Follow the panel cut dimensions providing adequate space between instruments when other instruments are arranged on the panel.

#### • Minimum Mechanical Vibrations

Choose an installation location with the minimum mechanical vibration. Installing the recorder in a location with large mechanical vibration not only causes adverse effects on the mechanism but also may hinder normal recording.

#### Horizontal

Install the recorder horizontally (However, the recorder can be inclined up to 30 degrees backwards for panel mounting).

#### Note

- Condensation may occur if the recorder is moved to another place where both the ambient temperature and humidity are higher, or if the temperature changes rapidly. In addition, measurement errors will result when using thermocouples. In this case, let the recorder adjust to the new environment for at least one hour before using it.
- The chart paper may be adversely affected by a rapid change in the ambient temperature and humidity.

Do not install the instrument in the following places.

#### Outdoors

#### · In direct sunlight or near heat sources

Install the recorder in a place with small temperature fluctuations near room temperature (23°C). Placing the recorder in direct sunlight or near heat appliances can cause adverse effects on the internal circuitry.

#### Where an excessive amount of soot, steam, moisture, dust, or corrosive gases are present

Soot, steam, moisture, dust, and corrosive gases will adversely affect the recorder. Avoid such locations.


#### • Near Strong Magnetic Field Sources

Do not bring magnets or instruments that produce electromagnetic fields close to the recorder. Operating the recorder in strong magnetic fields can cause errors in the measurements.

#### **Installation Procedure**

The recorder should be mounted on a steel panel of thickness 2 mm to 26 mm.

- 1. Insert the recorder from the front side of the panel.
- 2. As shown in the figure below, mount the recorder to the panel using the mounting brackets that come with the package.
  - Use two brackets to support the top and bottom or the left and right sides of the case. (Remove the seal that is covering the holes for the mounting brackets beforehand.)
  - The proper torque for tightening the mounting screws is 0.7 to 0.9 Nm.
  - Mount the recorder to the panel according to the procedure below.
    - First, attach the two mounting brackets and temporarily fasten the attachment screws.
    - Next, fix the recorder in place by tightening the attachment screws with the
      appropriate torque. When the recorder is approximately perpendicular to
      the panel as you fasten the screws, press the mounting bracket against the
      case so that they are in contact with each other.

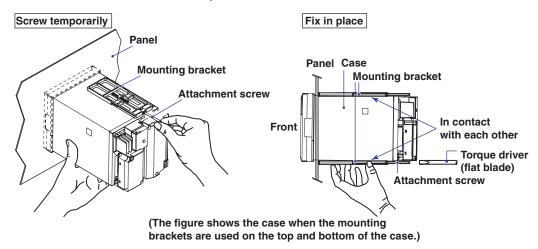


#### **CAUTION**

Tightening the screws too much can deform the case or damage the bracket.

#### **External Dimensions of the Recorder**

Unit: mm (approx. inch) Unless otherwise specified, tolerance is  $\pm 3\%$  (however, tolerance is  $\pm 0.3$  mm when below 10 mm).

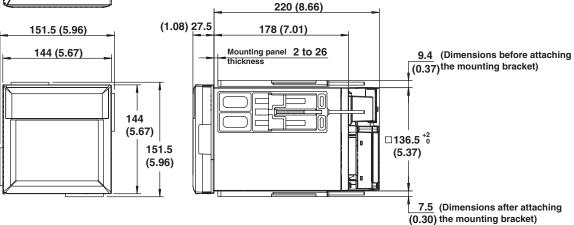


#### **Panel Cutout**

**Single-Unit Mounting** 

Side-by-Side Mounting (horizontally)

Side-by-Side Mounting (vertically, max. 3 units)

137 <sup>+2</sup><sub>0</sub>

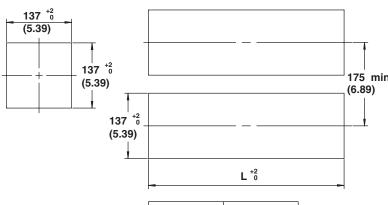

(5.39)		
n.	L	+2 0
175 min. (6.89)		

1 (
L (mm)
282
426
570
714
858
1002
1146
1290
1434
(144xn)-6

Attach the mounting brackets to the top and bottom when mounting the recorders side-by-side horizontally or right and left when mounting the recorders side-by-side vertically.

Unit: mm (approx. inch) Unless otherwise specified, tolerance is  $\pm 3\%$  (however, tolerance is  $\pm 0.3$  mm when below 10 mm).

# 2.3 Input Signal Wiring

#### **General Precautions to Be Taken While Wiring**



#### WARNING

To prevent the possibility of electric shock when wiring, make sure that the power supply source is turned OFF.



#### CAUTION

- If a strong tension is applied to the cable wired to the recorder, the terminals of the recorder and/or the cable can be damaged. In order to prevent tension from being applied directly on the terminals, fasten all wiring cables to the rear of the mounting panel.
- Do not apply a voltage exceeding the following value to the input terminals as this may damage the recorder.
  - Maximum input voltage
     Voltage range less than or equal to 200 mVDC, TC, RTD, and DI: ±10 VDC
     Ranges other than those listed above: ±60 VDC
  - Maximum common-mode voltage
     ±60 VDC (under measurement category II conditions)
- The recorder is an INSTALLATION CATEGORY II product.

#### **Precautions to Be Taken While Wiring**

Take the following precautions when wring the input signal cables.

It is recommended that crimp-on lug with insulation sleeves (designed for 4-mm screws) be used when connecting the input/output signal wires to the terminals. However, this does not apply clamped terminals (/H2).



Crimp-on lug with insulation sleeves (for 4 mm screws)

#### For clamped terminals (/H2), the following wire is recommended.

- Conductive cross-sectional area for single wire: 0.14 mm<sup>2</sup> to 1.5 mm<sup>2</sup>, stranded wire: 0.14 mm<sup>2</sup> to 1.0 mm<sup>2</sup>
- Length of the stripped section of the wire: Approx. 5 mm

#### Take measures to prevent noise from entering the measurement circuit.

- Move the measurement circuit away from the power cable (power circuit) and ground circuit.
- It is desirable that the object being measured does not generate noise. However, if
  this is unavoidable, isolate the measurement circuit from the object. Also, ground the
  object being measured.
- Shielded wires should be used to minimize noise caused by electrostatic induction. Connect the shield to the ground terminal of the recorder as necessary (make sure you are not grounding at two points).
- To minimize noise caused by electromagnetic induction, twist the measurement circuit wires at short, equal intervals.
- Make sure to earth ground the protective ground terminal through minimum resistance (less than  $100 \Omega$ ).

When using internal reference junction compensation on the thermocouple input, take measures to stabilize the temperature at the input terminal.

- · Always use the terminal cover.
- Do not use thick wires which may cause large heat dissipation (cross sectional area of 0.5 mm<sup>2</sup> or less recommended).
- Make sure that the ambient temperature remains reasonably stable. Large temperature fluctuations can occur if a nearby fan turns ON or OFF.


# Connecting the input wires in parallel with other devices can cause signal degradation, affecting all connected devices.


If you need to make a parallel connection, then

- Turn the burnout detection function OFF.
- · Ground the instruments to the same point.
- Do not turn ON or OFF another instrument during operation. This can have adverse
  effects on the other instruments.
- RTDs cannot be wired in parallel.

#### **Arrangement of the Measuring Input Terminals**


A terminal cover is screwed in place on the measuring input terminal block on the rear panel. A label indicating the terminal arrangement is affixed to the cover.

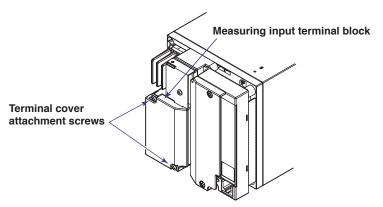

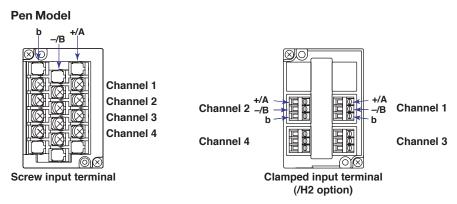

# Channel 1 Channel 2 Channel 3 Channel 4 Channel 5 Channel 6 Channel 6 Channel 6 Channel 6 Channel 6

- 1. Turn OFF the recorder and remove the terminal cover.
- 2. Connect the signal wires to the terminals.

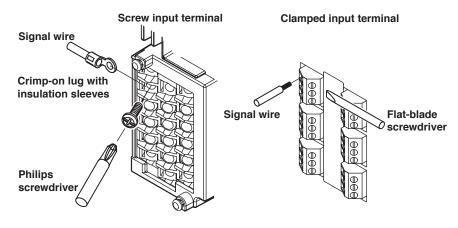

Clamped input terminal

(/H2 option)

#### Note

**Dot Model** 


Screw input terminal

Input signal wires of diameter less than or equal to 0.3 mm may not be secured firmly for clamped terminals (/H2). Fold over the conducting section of the wire, for example, to make sure that the wire is securely connected to the clamped terminal.

Replace the terminal cover and fasten it with screws.
 The proper torque for tightening the screws is 0.6 N-m.

#### **Measuring Input Wiring**


#### Thermocouple input

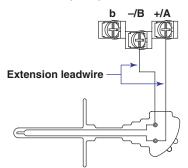


# Leadwire resistance: 10 Ω max./wire. The resistance of the three wires should be equal.

Resistance temperature detector input

DC voltage input, 1-5V input, and ON/OFF input b -/B +/A



#### DC current input

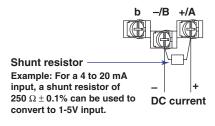

#### Note .

RTD input terminals A and B on the dot model are isolated on each channel. Terminal b is shorted internally across all channels. However, for 3 legs isolated RTDs (/N2 option), input b is also isolated for each channel.

# 2.4 Optional Terminal Wiring

#### General Precautions to be Taken While Wiring the Input/Output Signal Wires



#### WARNING

- To prevent electric shock while wiring, ensure that the power supply source is turned OFF.
- If a voltage of more than 30 VAC or 60 VDC is to be applied to the output terminals, use ring-tongue crimp-on lugs with insulation sleeves on all terminals to prevent the wires from slipping out when the screws become loose.
   Furthermore, use double-insulated wires (dielectric strength of 2300 VAC or more) for the signal wires on which a voltage of more than 30 VAC or 60 VDC is to be applied. For all other wires, use basic insulated wires (dielectric strength of 1390 VAC). To prevent electric shock, attach the terminal cover after wiring and make sure not to touch the terminals.



Crimp-on lug with insulation sleeves (for 4 mm screws)





#### CAUTION

- To prevent fire, use signal wires having a temperature rating of 70°C or more.
- If a strong tension is applied to the cable wired to the recorder, the terminals of the recorder and/or the cable can be damaged. In order to prevent tension from being applied directly on the terminals, fasten all wiring cables to the rear of the mounting panel.

#### **Arrangement of the Optional Terminals**

As shown in the figure below, the optional terminal block is located on the rear panel. The optional terminal block is provided on the recorder when an option that requires input/output is installed such as the alarm output relay (/A1, /A2, or /A3 option), FAIL/ chart end output (/F1 option), and remote control function (/R1 option). A terminal cover is screwed in place on the optional terminal block. A label indicating the terminal arrangement is affixed to the terminal block.

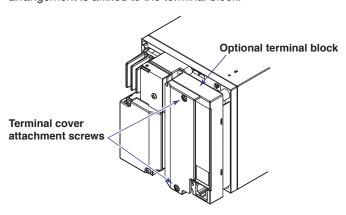

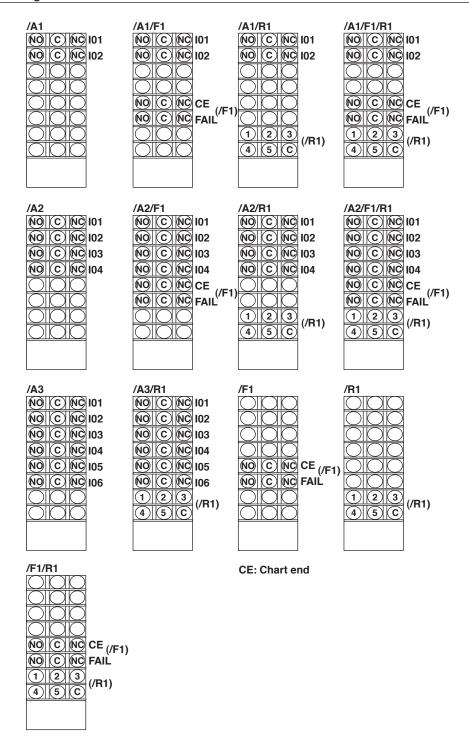

#### Alarm Output Relay Terminals and FAIL/Chart End Output Relay Terminals

NC (Normally Closed), C (Common), NO (Normally Opened)


#### **Remote Control Input Terminals**

1 to 5 (remote control input terminals), C (Common)


Alarm output terminals correspond to I01 to I06 in the alarm output relay settings. Remote control input terminals 1 to 5 correspond to numbers 1 to 5 in the remote control input settings.

#### **Wiring Procedure**

- 1. Turn OFF the recorder and remove the terminal cover.
- 2. Connect the input signal wires to the terminals.

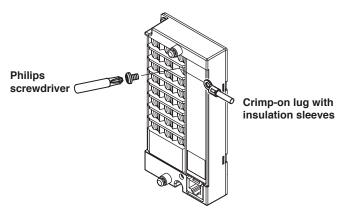

Replace the terminal cover and fasten it with screws.
 The proper torque for tightening the screws is 0.6 N-m.

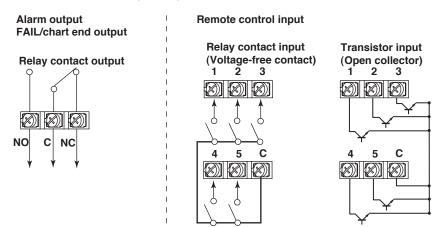

#### Note

To reduce noise, use a shielded cable for the wiring of the remote control input terminals. Connect the shield to the ground terminal of the recorder.

#### Relay Contact Output Specifications

Output type: Relay

Contact rating: 250 VAC (50/60 Hz)/3 A, 250 VDC/0.1 A (resistive load)
Dielectric strength: 1500 VAC at 50/60 Hz for one minute (between output

terminals and the ground terminal)

#### • Relay Contact Input/Transistor Input Specifications

Input signal: • Voltage-free contact: Contact closed at 200  $\Omega$  or less and

contact open at 100 k $\Omega$  or greater

 Open collector: 0.5 V or less (30 mADC) when turned ON, leakage current of 0.25 mA or less when turned OFF

Input format: Photocoupler isolation (shared common)

Dielectric strength: 500 VDC for one minute between input terminals and the

ground terminal

# 2.5 Power Supply Wiring

#### **Precautions to Be Taken While Wiring the Power Supply**

Make sure to follow the warnings below when wiring the power supply. To prevent electric shock and damage to the recorder, observe the following warnings.



#### **WARNING**

- To prevent electric shock when wiring, ensure the main power supply is turned OFF.
- To prevent the possibility of fire, use 600 V PVC insulated wire (JISC3307) or an equivalent wire for power wiring.
- Make sure to earth ground the protective earth terminal through a grounding resistance less than 100  $\Omega$  before turning ON the power.
- Use crimp-on lugs (designed for 4 mm screws) for power and ground wiring termination.
- To prevent electric shock, make sure to close the transparent cover for the power supply wires.
- Make sure to provide a power switch (double-pole type) on the power supply line in order to separate the recorder from the main power supply. Put an indication on this switch as the breaker on the power supply line for the recorder and indications of ON and OFF.

Switch specifications

Rated power current: 1 A or more Rated rush current: 60 A or more

Use a switch complied with IEC 60947-1, 3.

- Connect a fuse between 2 A and 15 A in the power supply line. Use a fuse approved by CSA (for the use in North America) or VDE (for the use in Europe).
- · Do not add a switch or fuse to the ground line.

Use a power supply that meets the following conditions:

Item	Power Supply Specifications
Rated supply voltage	100 to 240 VAC
Allowable power supply voltage range	90 to 132/180 to 264 VAC
Rated supply voltage frequency	50/60 Hz
Allowable power supply frequency range	50/60 Hz±2%
Maximum power consumption	Pen model: 40 VA, dot model: 40 VA


#### Note

Do not use a supply voltage in the range 132 to 180 VAC, as this may have adverse effects on the measurement accuracy.

#### **Wiring Procedure**


The power supply terminals and a protective ground terminal are located on the rear panel.

1. Turn OFF the recorder and open the transparent power terminal cover.

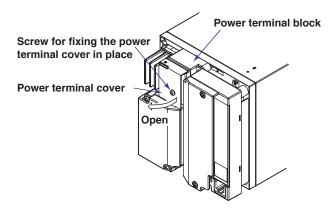

2. Wire the power cord and the protective ground cord to the power supply terminals.

Use ring-tongue crimp-on lugs (designed for 4 mm screws).

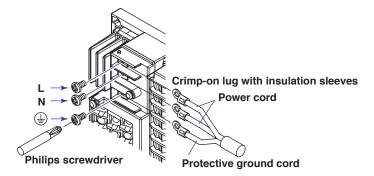

3. Replace the power terminal cover, and fasten it with screws. The proper torque for tightening the screws is 0.6 N-m.

# 2.6 Turning ON/OFF the Power Switch




#### **CAUTION**

Check the following points before turning ON the power switch.

- The power cord/wires are connected correctly to the recorder.
- The recorder is connected to the correct power supply (see section 2.5).

The power switch is located inside the door at the lower right.

The power switch is a push button. Press once to turn it ON and press again to turn it OFF.

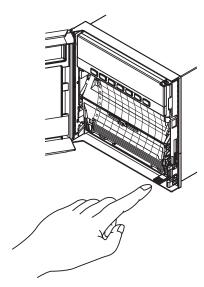

When the power switch is turned ON, a self-diagnosis program runs for a few seconds, and the recorder is ready for operation.

#### Note .

- If the input wires are connected in parallel with other devices, do not turn ON/OFF the power switch of the recorder or another device during operation. This can have adverse effects on the measured values.
- If nothing is displayed when the power switch is turned ON, turn OFF the power switch and
  check the points listed above one more time. After checking the points, turn ON the power
  switch again. If the unit still does not work, it is probably malfunctioning. Contact OMEGA for
  repairs.
- If an error message is displayed on the screen, take measures according to the description in chapter 10, "Troubleshooting."
- Turn ON the power switch, let the recorder warm up for at least 30 minutes, and then start the
  measurements.

#### **Checking the Date/Time**


The date/time is shown on the display when the DISP key is pressed several times. To correct the date/time, see the reference indicated below.


#### <Related Topics>

Setting the date/time: See section 5.5

### 3.1 Names of Parts

#### **Front**

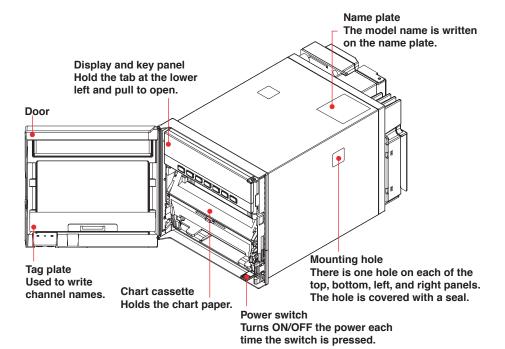

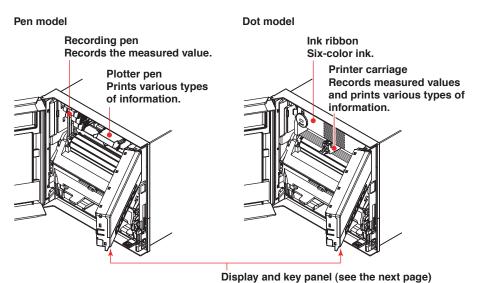

There is an internal light on the bottom section of the display and key panel. It lights up the

recording area of the chart paper.

#### **Display and Key Panel**

#### Status display

Displays the following information.

**RECORD** Illuminates while recording measured values.

**KEY LOCK** Illuminates when key lock is enabled.


**MATH** Illuminates when computation on the computation function (/M1 option)

is in progress.

**CHART END** Illuminates when the chart paper is out (/F1 option). ALARM 1 to 6 Illuminates when an alarm is occurring on channels 1 to 6.

#### Main display

Displays the measured values. Also, displays the setup screen when setting functions.



Seven keys are available.

For all keys except RCD, functions marked above the keys are enabled when setting functions or when the FUNC key or the DISP MENU key is pressed.


<While setting functions, when the FUNC key/DISP MENU key is pressed>

CHARACTER Key: Changes the character type when entering a character. Press this key while holding down the SHIFT key to switch the character type in reverse order. UP/DOWN Key: Switches the setup item or the value.

Press this key while holding down the SHIFT key to switch the setup item or the value in reverse order.

LEFT/RIGHT Key: Moves the cursor to the right when entering a value or character. Press this key while holding down the SHIFT key to move the cursor to the left.. ESC Key: Cancels the operation.

When pressed with the SHIFT key, the display of the comment on the setting turns ON/OFF. SHIFT Key: Used with the ∇△ key, ⊲⊳key, or the

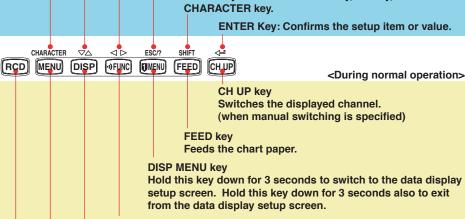

**FUNC** key

Used when executing manual printout, message printout, etc.

Switches the screen in the main display.

Hold this key down for 3 seconds to enter Setting mode. Hold this key down for 3 seconds also to exit from Setting mode.


#### **RCD** key

Starts/stops recording.

#### Note .

This manual denotes the operation of pressing a key while holding down the **SHIFT** key as SHIFT + the other key (for example: SHIFT + < ▶ key).

#### **Rear Panel**

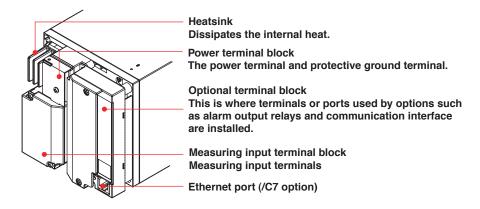

# 3.2 Installing or Replacing the Chart Paper


#### **CAUTION**

- Do not install or remove the chart cassette with the chart paper guide open. This may damage the stopper.
- Continuing to record or print without the chart paper on the dot model can cause damage to the chart cassette platen (the cylindrical section that holds the paper during the recording operation). Be sure to replace the chart paper ahead of time

#### **Loading the Chart Paper**


Open the door.

If recording is in progress, press the (RCD) key to stop the recording.

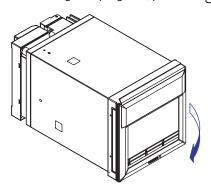


2. Remove the chart cassette.

Gently pressing the left and right stoppers inward. The bottom section of the chart cassette comes out. Gently lift the chart cassette and pull it out from the recorder case.

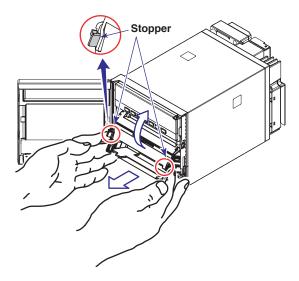


3. Open the chart holder and the chart paper guide.

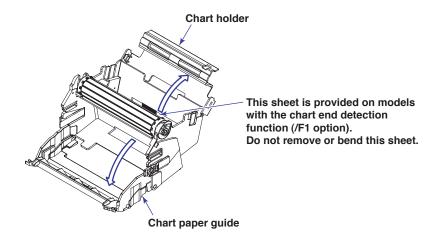


4. Load the chart paper.

Riffle the chart thoroughly before loading.


Make sure that the sprocket teeth of the chart drives are properly engaged in the chart paper perforations. Make sure not to load the chart paper backwards.

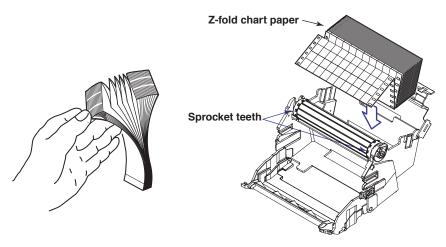

5. Close the chart holder and close the chart paper guide.

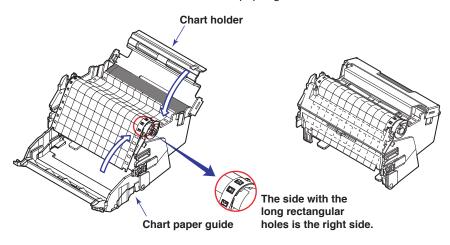

6. Replace the chart cassette back into the recorder case. Align the left and right projections of the sprocket section with the guide grooves of the recorder and press the entire chart cassette into the recorder case. The chart cassette is fixed in place with the stoppers.

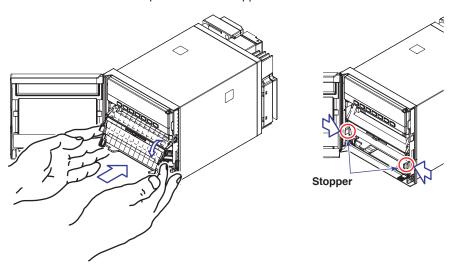

#### **Feeding the Chart Paper**

- 7. Press the FEED key to assure that the chart moves two or more folds smoothly into the chart receiver.
  - If it moves unsteadily, do the installing procedure again.

# 3.3 Installing/Replacing Felt Pens or Plotter Pen (Pen Model)


#### **CAUTION**

- Do not press or pinch the felt tip to prevent deformation.
- Do not move the penholder left or right by force to protect the driving mechanism.
- Make sure to remove the pen cap before installation.
- Use pen caps of the same ink color. If a pen cap of a different ink color is used on the pen, the remaining ink in the cap may be absorbed through the pen tip, and the ink may change its color.

#### **Replacing Felt Pens**

- 1. Open the door.
  - If recording is in progress, press the RCD key to stop the recording.
- 2. Open the display and key panel section.
  - You can open the display and key panel section by holding the tab at the lower left and pulling it toward you.
- 3. Hold the felt pen cartridge and pull it out from the pen holder.

  If the pen (pen holder) is at a position that is not easily accessible, see "When the Pen (Pen Holder) Is at a Position That Is Not Easily Accessible" on the next
- 4. Remove the cap from the new felt pen and insert the pen firmly into the pen holder.

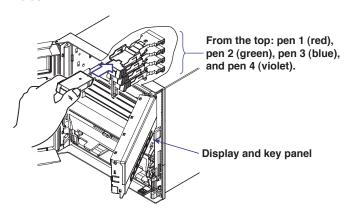

#### When the Pen (Pen Holder) Is at a Position That Is Not Easily Accessible

If the pen (pen holder) is at a position that is not easily accessible, carry out the procedure below to move it near the center position.

- 1. Turn ON the power switch and press the FINC key.
- 2. Press the  $\triangleleft \triangleright (|DISP|)$  key several times to display the **Pen exchange** screen.



3. Press the <

□ (CHUP) key.

The pen (pen holder) moves near the center position, and the **Pen exchange** = **End** appears.

#### Note


When the pen moves, a line is drawn on the chart paper.

- 4. Replace the pen.
- Press the ← (CHUP) key.
   The screen returns to the data display screen.

#### **Replacing the Plotter Pen**

- . Open the door.

  If recording is in progress, press the RCD key to stop the recording.
- 2. Open the display and key panel section.
- 3. Hold the plotter pen cartridge and pull it out from the pen holder.
- 4. Remove the cap from the new plotter pen and insert the pen firmly into the pen holder.

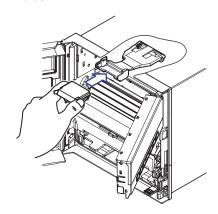

# 3.4 Installing/Replacing the Ribbon Cassette (Dot Model)

#### **CAUTION**

- Improper cassette insertion may cause the color to change or damage the ribbon.
- Do not apply upward force to the printer carriage. If you do, the carriage position may be offset, and the recorder may not print correctly.
- 1. Open the door.

If recording is in progress, press the RCD key to stop the recording.

- 2. Press the Func key.
- 3. Press the  $\nabla \triangle$  (DISP) key several times to display **R. exchange**.



4. Press the <⊨ (CHUP) key.


The printer carriage moves near the center position, and **R. exchange = End** is displayed.

5. Open the display and key panel section.

You can open the display and key panel section by holding the tab at the lower left and pulling it toward you.


#### Note .

If the recorder is OFF, pinch the printer carriage and move it near the center position.

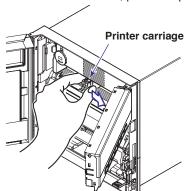


6. Remove the ribbon cassette.

Pull the left-hand part of the ribbon cassette so that the cassette holder tab disengages, and pull the ribbon cassette out from the recorder case.

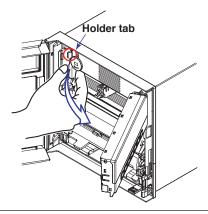

7. Install a new ribbon cassette.

First, insert the right-hand part and then the left-hand part into the cassette holder. Check that the cassette is properly engaged with the cassette holder tab. If inserting the ribbon cassette is difficult, turn the ribbon feeding knob in the direction of the arrow to align the ribbon feeding shaft of the cassette with the ribbon feeding shaft hole of the holder.

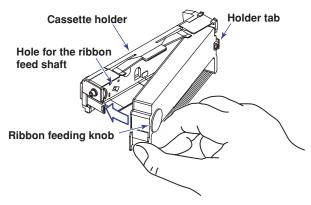

- 8. Turn the ribbon feeding knob in the direction of the arrow a half turn or more to check that the ribbon is feeding properly. If the ribbon is loose, turn the knob in the direction of the arrow to tighten it.
- 9. Return the display and key panel section to its original position, and press the (CHUP) key.

The screen returns to the data display screen.

# 3.5 Starting/Stopping the Recording

This section describes the procedures for starting/stopping the recording and checking the recorded result.

#### **Procedure**

#### **Starting the Recording**

Press the (RCD) key to start recording.

The status display shows the word "RECORD."

#### **Stopping the Recording**

While recording is in progress, press the RCD key to stop recording.


The word "RECORD" on the status display clears.

#### **Feeding the Chart Paper**

The chart paper is fed while the FEED key is held down.

#### **Viewing the Recorded Results**

Pull the front cover tab of the chart cassette to open the front cover. The recorded chart paper can be pulled out for viewing.

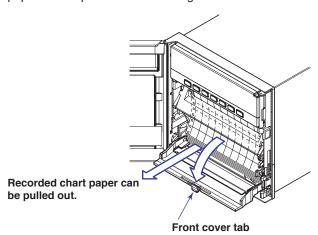

#### <Related Topics>

Changing the chart speed: Section 5.4

# 3.6 Switching the Display Screen

This section describes the procedure for switching the display screen.

To change the displayed content, see chapter 8.

#### **Procedure**

#### **Switching the Display Screen**

The display screen switches each time the **DISP** key is pressed.

Screen 01 through 15 are switched in order. Screens that are set to "Skip" are skipped.

#### **Channel Auto Switching**

On screens that show the measured values and computed values, the displayed channel is automatically switched in ascending order. The switching interval can be set to 1 s, 2 s, 3 s, 4 s, or 5 s.


Measurement channels set to Skip and computation channels set to OFF are not displayed.

#### Switching the Displayed Channel Using Keys

If auto switching is not specified, the channel switches each time the CHUP key is pressed in ascending order. All channels are displayed in order.

#### Note

The operation is different between auto channel switching and manual switching using keys on the 2-channel digital display.




# 3.7 Printing Measured Values (Manual Printout)

The measured values of all channels are printed.

#### **Procedure**

#### **Starting the Manual Printout**

- Press the Func key.
- 2. Press the ¬△ key to select **Print out** and then press the ← key.



Press the ← key with ManualStart shown on the screen.
 Manual printout starts. The screen returns to the data display screen.



#### Note

- When manual printout is executed, trend recording is suspended. However, the recorder continues the measurement and alarm detection (in the background).
- When manual printout is complete, trend recording resumes.
- If an alarm occurs during the manual printout, the alarm is printed after the trend recording resumes.

#### **Aborting the Manual Printout**

The following procedure is for aborting the manual printout that is in progress.

- 1. Press the Func key.
- 2. Press the  $\nabla \triangle$  key to select **Print out** and then press the  $\triangleleft$  key.
- Press the 
   ⇔ key with Manual Stop shown on the screen.
   Manual printout stops. The screen returns to the data display screen.

Print=Manual Stop

# 3.8 Printing the Recorder Settings

This section explains the procedure for printing the recorder settings. There are two sets of settings that can be printed: List and Setup.

List: Prints the settings of Setting mode (input range for each channel, etc.)

Setup: Prints the settings of Basic Setting mode


#### Note

- The printout takes several minutes to tens of minutes to complete.
- When this printout is executed, trend recording is suspended. However, the recorder continues the measurement and alarm detection (in the background).
- · When the printout is complete, trend recording resumes.
- If an alarm occurs during the printout, the alarm is printed after the trend recording resumes.

#### **Procedure**


#### **Starting the List Printout**

- 1. Press the Func key.
- 2. Press the  $\nabla \triangle$  key to select **Print out** and then press the  $\angle \square$  key.



#### **Aborting the List Printout**

- 1. Press the FUNC key.
- 2. Press the  $\nabla \triangle$  key to select **Print out** and then press the  $\triangleleft$  key.



#### **Starting the Setup Printout**

- 1. Press the Func key.
- 2. Press the  $\nabla \triangle$  key to select **Print out** and then press the  $\triangleleft$  key.



#### **Aborting the Setup Printout**

- 1. Press the Func key.
- 2. Press the  $\nabla \triangle$  key to select **Print out** and then press the  $\triangleleft$  key.



<sup>\*</sup> When the 

Note > key or 

Note > key is pressed while holding down the SHIFT key, the operation is reversed as when the respective key is pressed by itself.

# 3.9 Clearing the Alarm Printout Buffer

Alarm information waiting to be printed is temporarily stored in the buffer memory. This operation clears all of the alarm information in the buffer. This function can be used to prevent unneeded alarm printouts from being executed.

#### Procedure

- 1. Press the Func key.
- 2. Press the ¬△ key to select **Buffer clear** and then press the <⊢ key.



Buf.clear=Alarm

# 3.10 Printing Messages

This section explains the procedure for printing the preset character strings. For the procedure of setting the character strings, see section 6.8.

#### Note

- Messages can be printed only during trend recording. However, regardless of whether trend
  recording is ON or OFF, messages waiting to be printed are temporarily stored in the buffer
  memory.
- Message printouts are not performed when the chart speed is greater than or equal to 1600 mm/h and 101 mm/h on the pen model and dot model, respectively.

#### Procedure

#### **Printing a Message**

- 1. Press the Func key.
- 2. Press the  $\nabla \triangle$  key to select **Message** and then press the  $\Leftrightarrow$  key.



```
Message=<mark>Message1</mark>

✓ Displays the preset message.
```

#### **Clearing the Message Printout Buffer**

Messages waiting to be printed are temporarily stored in the buffer memory. This operation clears the messages in the buffer.

- 1. Press the Func key.
- 2. Press the  $\nabla \triangle$  key to select **Buffer clear** and then press the  $\triangleleft$  key.



<sup>\*</sup> When the ◀ ▷ key or ▽△ key is pressed while holding down the SHIFT key, the operation is reversed as when the respective key is pressed by itself.

# 3.11 Resetting the Report Data of the Periodic Printout

This operation resets the past report data when the recorder is configured to print the report data (the average, the minimum, the maximum, or the sum) of the measured values in periodic printout.

Procedure

#### **Resetting the Report Data**

- Press the Func key.
- 2. Press the  $\nabla \triangle$  key to select **Periodic** and then press the  $\triangleleft$  key.

Func=<mark>Periodic</mark>

Log data=Reset

# 3.12 Releasing the Alarm Output (Alarm ACK Operation)

This operation releases the alarm indication or relay output (/A1, /A2, or /A3 option) when the alarm indication or output relay is set to hold operation.

#### **Procedure**

#### **Releasing the Alarm Output**

- 1. Press the Func key.
- Press the ← key with Alarm ACK shown on the screen.
   The alarm indication or relay output is released. The screen returns to the data display screen.



#### **Explanation**


#### **Alarm Output Relay Operation**

- When the alarm is released
   The alarm output is released when the alarm ACK operation is carried out.
- When an alarm is occurring
   The alarm output is held even after the alarm ACK operation. If the alarm ACK operation is carried out again after the alarm is released, the alarm output is released.

#### Indication (Status Display)

Blinks when an alarm occurs.

- When the alarm is released
   The alarm indication turns OFF when the alarm ACK operation is carried out.
- When an alarm is occurring
   The alarm indication turns ON after the alarm ACK operation. The alarm indication turns OFF when the alarm is released.

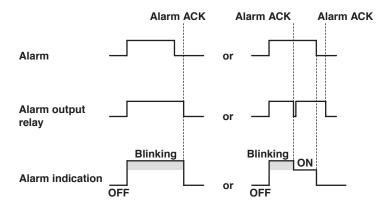

# 3.13 Activating/Releasing the Key Lock

When the recorder is configured to use the key lock function, this operation activates or releases the key lock.

Note \_

Key lock does not apply to the DISP and CHUP keys.

#### **Procedure**

#### **Activating the Key Lock**

- 1. Press the Func key.



#### Releasing the Key Lock

#### Note .

A password is required to release the key lock.

- 1. Press the Func key.
- 2. Press the  $\nabla \triangle$  key to select **Keylock** and then press the  $\Leftrightarrow$  key.
- Enter the password for releasing the key lock. The password values are shown with asterisks.

Press the  $\nabla \triangle$  key to increment the value.

Press the **SHIFT** +  $\nabla \triangle$  key to decrement the value.

Press the  $\triangleleft \triangleright$  key to move the cursor to the right.

Press **SHIFT** + **< >** key to move the cursor to the left.



4. Press the <⊨ key.

The key lock is released. The screen returns to the data display screen.

#### <Related Topics>

Changing the password: Section 7.10

#### 4.1 Run Modes

The recorder has three run modes.

#### **Operation Mode**


This mode is used for normal recording operation. The recorder enters this mode when the power is turned ON. The operations that can be carried out in this mode are described in chapter 3. The details on the data display setup screen are explained in chapter 8.

#### **Setting Mode**

This mode is used to set the input range, alarms, chart speed, and other parameters. These settings can be changed while recording is in progress. However, the input range of measurement channels and the computing equation, unit, constant, and TLOG setting of computation channels cannot be changed while computation (/M1 option) is in progress. The operations that can be carried out in this mode are described in chapter 5 and 6.

#### **Basic Setting Mode**

This mode is used to set the basic specifications of the recorder such as the thermocouple burnout detection function and the alarm output relay operation. This mode cannot be entered while the recorder is recording or while computation is in progress on the computation function (/M1 option). Measurement, recording, and alarm detection cannot be carried out in this mode. The operations that can be carried out in this mode are described in chapter 7.

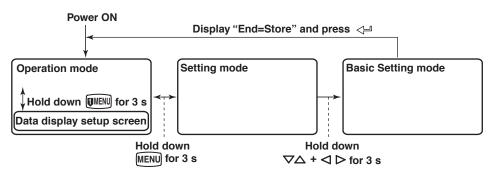

## 4.2 Key Operations

This section describes basic operations on the panel keys to change various settings. Functions are set in Setting mode or Basic Setting mode.

#### **Entering Setting Mode**

Hold down the MENU key for 3 seconds.

The Setting mode display appears. The top and bottom lines are the setup item and comment, respectively.

The section that is blinking in the setup item that you change. In this manual, the section that you change appears shaded.



The panel keys are set to the functions marked above the keys.



#### **Exiting from Setting Mode (Returning to Operation Mode)**

Hold down the MENU key for 3 seconds.

The screen returns to operation mode.

#### **Entering Basic Setting Mode**

Basic Setting mode is entered from Setting mode.

Hold down the MENU key for 3 seconds to enter Setting mode. Next, hold down both the

 $\nabla \triangle$  (DISP) key and the  $\triangleleft \triangleright$  (FINC) key for 3 seconds.

The Basic Setting mode display appears. The top and bottom lines are the setup item and comment, respectively.

The section that is blinking in the setup item that you change. In this manual, the section that you change appears shaded.

```
Setup item \rightarrow Basic=Alarm \leftarrow The item to be controlled blinks. Comment \rightarrow Auxiliary alarm
```

#### Exiting from Basic Setting Mode (Returning to Operation Mode)

This operation is used to return to Operation mode after changing the settings in Basic Setting mode.

Press the **ESC** key several times to return to the **Basic=** screen.

Press the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select **End** and then press the  $\iff$  key. The setup save screen appears.

```
Basic=<mark>End</mark>
Save Settings
```

Press the  $\nabla\Delta$  key to select **Store** and then press the  $\Leftarrow$  key. The setting is applied, and the screen returns to Operation mode. If you select **Abort** and press the  $\Leftarrow$  key, the setting is discarded, and the screen returns to Operation mode.


```
End=<mark>Store</mark>
Save settings and
```

#### **Changing the Settings**

#### Note

The comment line shows useful information such as a description of the setup item and the range of selectable values. Read the comment and change the items as necessary.

The selected item change each time you press the  $\nabla \triangle$  key. The selected item changes in reverse order if you press the  $\nabla \triangle$  key while holding down the **SHIFT** key.

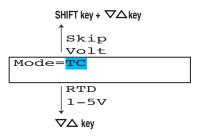

This manual denotes the operation of pressing a key while holding down the **SHIFT** key as **SHIFT** + the other key (for example: **SHIFT** +  $\nabla \triangle$  key).

After you make a selection, press the <⊨ key. The next screen appears.

When the **Setting complete** screen appears, the changed item is applied.


#### Using the ESC Key

If you press the **ESC** (MENU) key, the operation is cancelled, and the display returns to a higher level menu. In other words, if you do not show the Setting Complete screen, the changes you made up to that point are discarded.

Press the **ESC** (FIED) key while holding down the **SHIFT** (FEED) key to show or hide the comment that is displayed at the bottom half of the screen.

#### **Entering Values**


Use the  $\triangleleft \triangleright$  key or **SHIFT** +  $\triangleleft \triangleright$  key to move the cursor. Use the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to change a digit value. You repeat these steps to enter the value.

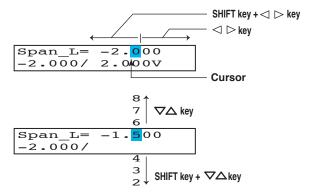

When you press the  $\Leftrightarrow$  key, the change is applied and the next screen is displayed.

#### **Entering Characters**


Use the  $\triangleleft \triangleright$  key or **SHIFT** +  $\triangleleft \triangleright$  key to move the cursor.



Use the **CHARACTER** key or **SHIFT** + **CHARACTER** key to select the character type. Use the  $\nabla \Delta$  key or **SHIFT** +  $\nabla \Delta$  key to select a character. You repeat these steps to set the character string.



The character type changes in the following order: uppercase alphabet, lowercase alphabet, numbers, and symbols.




When you press the ⟨¬ key, the change is applied and the next screen is displayed.

#### **Inserting Characters**

Press the  $\triangleleft \triangleright$  key or **SHIFT** +  $\triangleleft \triangleright$  key to move the cursor to the position where the character is to be inserted.

Press the **CHARACTER** key or **SHIFT** + **CHARACTER** key to show **Ins DISP** and then press the ∇△ key. A space for one character is inserted. Enter the character.



#### **Deleting a Character**

Use the  $\triangleleft \triangleright$  key or **SHIFT** +  $\triangleleft \triangleright$  key to move the cursor to the character to be deleted. Press the **CHARACTER** key or **SHIFT** + **CHARACTER** key to show **Del DISP** and then press the  $\nabla \triangle$  key. The character is deleted.

#### **Deleting an Entire Character String**

Press the **CHARACTER** key or **SHIFT** + **CHARACTER** key to show **Clear DISP** and then press the  $\nabla \Delta$  key. The entire character string is deleted.

#### **Copying & Pasting a Character String**

Show the copy source character string.


Press the **CHARACTER** key or **SHIFT** + **CHARACTER** key to show **Copy DISP** and then press the  $\nabla \triangle$  key. The character string is saved to the memory. Show the copy destination.

Press the **CHARACTER** key or **SHIFT** + **CHARACTER** key to show **Paste DISP** and then press the  $\nabla \triangle$  key. The character string is pasted.

# 4.3 Menu Structure, Settings, and List of Default Values

#### **Operation Menus Using the FUNC Key (Operation Mode)**

Below are the items that are operated using the FUNC key. Information indicated inside the parentheses is references.

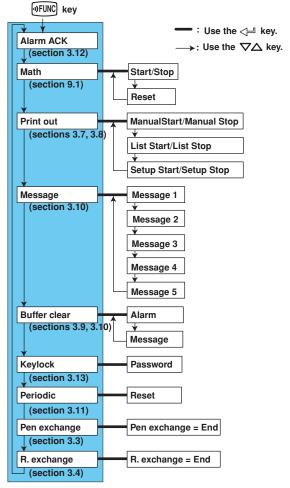

#### Alarm ACK

Alarm output release operation. This operation is valid only when the alarm indication or relay output is set to hold operation.

#### Math (Models with the Computation Function (/M1 Option))

Starts/stops the computation.

#### **Print out**

Starts/Stops the manual printout or setting printout (List or Setup).

#### Message

Prints messages.

#### **Buffer clear**

Clears the data waiting to be printed in the alarm printout buffer or the message printout buffer.

#### **Keylock**

Activates or releases the key lock. This operation is possible only when the use of the key lock function is enabled.

#### **Periodic**

Resets the computed value when printing of the report data (average, etc.) is specified in periodic printout.

#### Pen exchange (Pen Model)


Moves the recording pen to a position that is easily accessible for replacement on the pen model.

#### R. exchange (Dot Model)

Moves the printer carriage near the center position when replacing the ribbon cassette on the dot model.


#### **Menu Structure of Setting Mode**

Below are the setup items in Setting mode. Information indicated inside the parentheses is references.

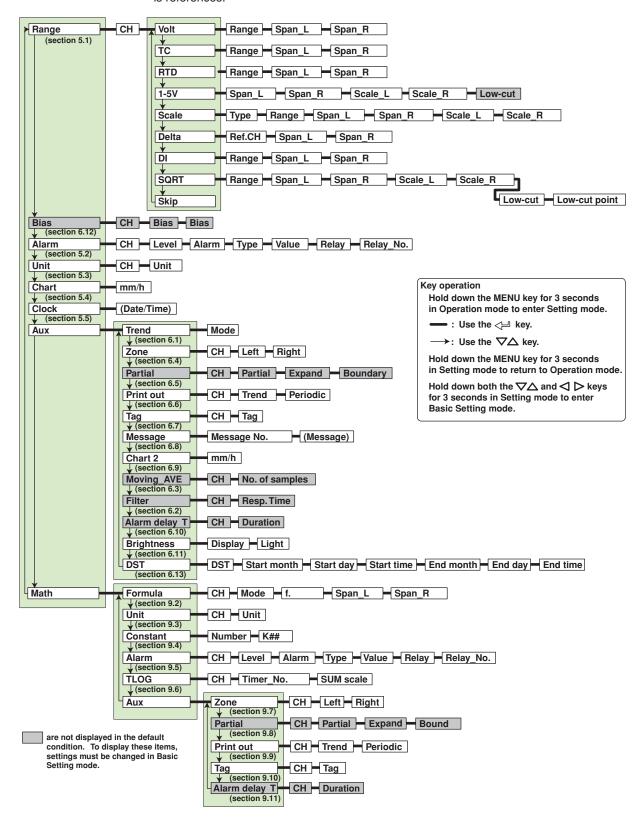

#### Menu Structure of Basic Setting Mode

Below are the setup items in Basic Setting mode. Information indicated inside the parentheses is references.

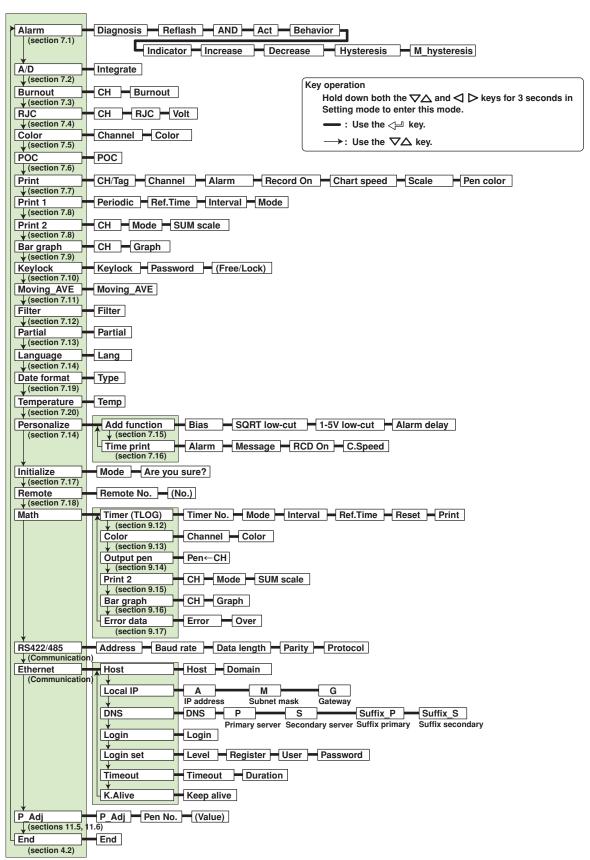

#### **Setup Items in Setting Mode and Their Default Values**

Items with an asterisk on the left are not displayed in the default condition. To display these items, settings must be changed in Basic Setting mode.

Setup Item	Pen/Dot	Selectable Range or Selections	Default Value
Range > CH	-	01 to 06	01
Range > Mode	-	Volt/TC/RTD/1-5V/Scale	Volt
		/Delta/DI/SQRT/Skip	
Range > Mode > Range	-	20mV/60mV/200mV/2V/6V/20V/50V/1-5V	2V
		/R/S/B/K/E/J/T/N/W/L/U/WRe/Pt/JPt/Level/Cont	
		/(Slections for /N1 and /N3 options)	
*Bias > CH	-	01 to 06	01
*Bias > Bias	-	On/Off	Off
*Bias > Bias	_	±10 % of the span of the measurable range	-
Alarm > CH	_	01 to 06	01
Alarm > Level	_	1/2/3/4	1
Alarm > Alarm	_	On/Off	Off
Alarm > Type	_	H/L/h/l/R/r (*/T/t)	Н
Alarm > Value	_	Depends on the alarm type.	-
Alarm > Relay	-	On/Off	Off
Alarm > Relay No.	_	I01 to I06	101
Unit > CH	_	01 to 06	01
Unit > Unit	_	6 characters or less	Blank
	5 14 11		
Chart		82 types (pen model)	20 mm/h
	Dot Model	1 to 1500 mm/h (dot model)	20 mm/h
Clock	-	Date/Time	-
Aux > Trend	Dot Model	Auto/Fix	Auto
Aux > Zone > CH	-	01 to 06	01
Aux > Zone > Left, Right	-	Within the recording span range (mm)	Left: 0, Right: 100
*Aux > Partial > CH	-	01 to 06	01
*Aux > Partial > Partial	-	On/Off	Off
*Aux > Partial > Expand	-	1 to 99%	50
*Aux > Partial > Boundary	-	Within the recording span range	-
Aux > Print out > CH	-	01 to 06	01
Aux > Print out > Trend	Dot Model		On
Aux > Print out > Periodic	-	On/Off	On
Aux > Tag > CH	-	01 to 06	01
Aux > Tag > Tag	-	7 characters or less	1 to 6
Aux > Message > Message No.	-	1 to 5	1
Aux > Message > (Message)	- Dan Madal	16 characters or less	Blank
Aux > Chart2		82 types (pen model)	20 mm/h
*Aux > Moving AVE > CH	Dot Model Dot Model	,	20 mm/h 01
*Aux > Moving_AVE > CH *Aux > Moving_AVE > No. of samples	Dot Model		Off
*Aux > Filter > CH	Pen Model	•	01
*Aux > Filter > Resp. Time	Pen Model		Off
*Aux > Alm delay T > CH	-	01 to 06	01
*Aux > Alm delay T > Duration	-	0 to 3600s	10s
Aux > Brightness > Display	_	1/2/3/4/5/6/7/8	4
Aux > Brightness > Light	_	1/2/3/4	2
Aux > DST	_	Not/Use	Not
Aux > DST > Start month	_	Apr/May/Jun/Jul/Aug/Sep/Oct/Nov/Dec/Jan/Feb/Mar	Apr
Aux > DST > Strt day	_	1st-Sun//Last-Mon	1st-Sun
Aux > DST > Start time	_	0:00 to 23:00	0:00
Aux > DOT > Start time			- 4 <del>-</del>
	_	Apr/May/Jun/Jul/Aug/Sep/Oct/Nov/Dec/Jan/Feh/Mar	Apr
Aux > DST > Start time Aux > DST > End month Aux > DST > End day	-	Apr/May/Jun/Jul/Aug/Sep/Oct/Nov/Dec/Jan/Feb/Mar 1st-Sun//Last-Mon	Apr Last-Mon

#### Computation function (/M1 option)

Setup Item	Pen/Dot	Selectable Range or Selections	Default Value
Math > Formula > CH	-	0A/0B/0C/0D/0E/0F/0G/0J/0K/0M/0N/0P	0A
Math > Formula > Mode	-	On/Off	Off
Math > Formula > f.	-	120 characters or less	01
Math > Unit > CH	-	0A/0B/0C/0D/0E/0F/0G/0J/0K/0M/0N/0P	0A

Setup Item	Pen/Dot	Selectable Range or Selections	Default Value
Math > Unit > Unit	-	6 characters or less	Blank
Math > Constant > No.	-	K01 to K30	K01
Math > Alarm > CH	-	0A/0B/0C/0D/0E/0F/0G/0J/0K/0M/0N/0P	0A
Math > Alarm > Level	-	1/2/3/4	1
Math > Alarm > Alarm	-	On/Off	Off
Math > Alarm > Type	-	H/L (*/T/t)	Н
Math > Alarm > Value	-	-9999999 to 99999999 excluding the decimal	-
Math > Alarm > Relay	-	On/Off	Off
Math > Alarm > Relay No.	-	101 to 106	101
Math > TLOG > CH	-	0A/0B/0C/0D/0E/0F/0G/0J/0K/0M/0N/0P	0A
Math > TLOG > Timer No.	-	Periodic/1/2	Periodic
Math > TLOG > SUM scale	-	Off, /s, /min, /h, /day	Off
Math > Aux > Zone > CH	-	0A/0B/0C/0D/0E/0F/0G/0J/0K/0M/0N/0P	0A
Math > Aux > Zone > Left, Right	-	Within the recording span range (mm)	Left: 0, Right: 100
Math > Aux > Partial > CH	-	0A/0B/0C/0D/0E/0F/0G/0J/0K/0M/0N/0P	0A
Math > Aux > Partial > Partial	-	On/Off	Off
Math > Aux > Partial > Expand	-	1 to 99%	50
Math > Aux > Partial > Bound	-	Within the recording span range	-
Math > Aux > Print out > CH	-	0A/0B/0C/0D/0E/0F/0G/0J/0K/0M/0N/0P	0A
Math > Aux > Print out > Trend	Dot Model	On/Off	On
Math > Aux > Print out > Periodic	-	On/Off	On
Math > Aux > Tag > CH	-	0A/0B/0C/0D/0E/0F/0G/0J/0K/0M/0N/0P	0A
Math > Aux > Tag > Tag	-	7 characters or less	A to P
Math > Aux > Alm delay T > CH	-	0A/0B/0C/0D/0E/0F/0G/0J/0K/0M/0N/0P	0A
*Math > Aux > Alm delay T > Duration	-	0 to 3600s	10s

#### **Setup Items in Basic Setting Mode and Their Default Values**

Setup Item	Pen/Dot	Selectable Range or Selections	Default Value
Alarm > Diagnosis	-	On/Off	Off
Alarm > Reflash	-	On/Off	Off
Alarm > AND	-	None/I01/I01-I02/I01-I03/I01-I04/I01-I05	None
		/101-106	
Alarm > Act	-	Energize/De_energize	Energize
Alarm > Behavior	-	Nonhold/Hold	Nonhold
Alarm > Indicator	-	Nonhold/Hold	Nonhold
Alarm > Increase	-	01 to 15	01
Alarm > Decrease	-	01 to 15	01
Alarm > Hysteresis	-	Off/0.1% to 1.0%	0.5%
Alarm > M_Hysteresis	-	Off/0.1% to 1.0%	Off
A/D > Integrate	-	Auto/50Hz/60Hz/100ms	Auto
Burnout > CH	-	01 to 06	01
Burnout > Burnout	-	Off/Up/Down	Off
RJC > CH	-	01 to 06	01
RJC > RJC	-	Internal/External	Internal
RJC > RJC > Volt	-	$-20000$ to 20000 $\mu V$	0 μV
Color > Channel	Dot Model	01 to 06	01: Purple, 02: Red,
Color > Color	Dot Model	Purple/Red/Green/Blue/Brown/Black	03: Green, 04: Blue,
		·	05: Brown, 06: Black
POC > POC	Pen Model	On/Off	Off
Print > CH/Tag	-	CH/Tag	CH
Print > Channel	Dot Model	On/Off	On
Print > Alarm	-	On1/On2/Off	On1
Print > Record On	-	On/Off	Off
Print > Chart speed	-	On/Off	On
Print > Scale	-	On/Off	On
Print > Pen color	Pen Model	On/Off	On
Print1 > Periodic	-	Auto/Manual	Auto
Print1 > Ref. Time	-	Hour 0 to 23 (1 hour steps)	00:00
Print1 > Interval	-	10min/15min/20min/30min/1h/2h/3h/4h	1h
		/6h/8h/12h/24h	
Print1 > Mode	-	Inst/Report/Off	Inst

Setup Item	Pen/Dot	Selectable Range or Selections	Default Value
Print2 > CH	-	01 to 06	01
Print2 > Mode	_	AVE/MIX/SUM/MIN/MAX/INST	AVE
Print2 > SUM scale	_	Off, /s, /min, /h, /day	Off
Bar graph > CH	_	01 to 06	01
Bar graph > Graph	_	Normal/Center	Normal
Keylock > Keylock	-	Not/Use	Not
Keylock > Password	-	Numbers and spaces within 4 digits	Blank
Keylock > RCD	-	Free/Lock	Free
Keylock > Feed	-	Free/Lock	Free
Keylock > Menu Keylock > Disp Menu	-	Free/Lock Free/Lock	Free Free
Keylock > Alarm ACK	-	Free/Lock	Free
Keylock > Math	-	Free/Lock	Free
Keylock > Print out	_	Free/Lock	Free
Keylock > Message	_	Free/Lock	Free
Keylock > Buffer clear	_	Free/Lock	Free
Keylock > Periodic	_	Free/Lock	Free
Keylock > Pen exchange	Pen Model		Free
Keylock > R. exchange	Dot Model		Free
Moving_AVE > Moving_AVE	Dot Model	Not/Use	Not
Filter > Filter	Pen Model	Not/Use	Not
Partial > Partial	-	Not/Use	Not
Language > Lang	-	English/Japanese	English
Date format > Type	-	Y/M/D M/D/Y D/M/Y D.M.Y M.D.Y	M.D.Y
Temperature > Temp	-	C/F	С
Personalize > Add function > Bias	-	Not/Use	Not
Personalize > Add function > SQRT low-cu	t -	Not/Use	Use
Personalize > Add function > 1-5V low-cut	-	Not/Use	Not
Personalize > Add function > Alarm delay	-	Not/Use	Not
Personalize > Time print > Alarm	-	HH:MM, HH:MM:SS, M/D H:M, M/D H:M:S, YMD H:M:S	HH:MM
Personalize > Time print > Message	-	HH:MM, HH:MM:SS, M/D H:M, M/D H:M:S, YMD H:M:S, None	HH:MM
Personalize > Time print > RCD On	-	HH:MM, HH:MM:SS, M/D H:M, M/D H:M:S, YMD H:M:S	HH:MM
Personalize > Time print > C.Speed	-	HH:MM, HH:MM:SS, M/D H:M, M/D H:M:S, YMD H:M:S	HH:MM
Setting initialization			
Initialize > Mode	-	Setup+Set/Set	Setup+Set
Initialize > Mode > Are you sure?	-	No/Yes	No
Remote control function (/R1 option)			
Remote > Remote No.	_	1/2/3/4/5	1
Remote > Remote No. > No.	-	Record On Off /Chart speed/Time adjust/ Math start stop/Math reset/Manual print/ Alarm ACK/Message1/Message2/Message3/ Message4/Message5/None	Record On/Off

#### Computation function (/M1 option)

Setup Item	Pen/Dot	Selectable Range or Selections	Default Value
Math > Timer (TLOG) > Timer No.	-	1/2	1
Math > Timer (TLOG) > Mode	-	Off/Relative/Absolute	Absolute
Math > Timer (TLOG) > Interval (Relative)	-	10 min to 24 h (1 min steps)	01:00
Math > Timer (TLOG) > Interval (Absolute)	-	10min/12min/15min/20min/30min/1h/2h/3h /4h/6h/8h/12h/24h	1h
Math > Timer (TLOG) > Ref. Time	-	Hour 0 to 23 (1 hour steps)	00:00
Math > Timer (TLOG) > Reset	-	On/Off	On
Math > Timer (TLOG) > Print	-	On/Off	On
Math > Color > Channel	Dot Model	0A/0B/0C/0D/0E/0F/0G/0J/0K/0M/0N/0P	0A

Setup Item	Pen/Dot	Selectable Range or Selections	<b>Default Value</b>
Math > Color > Color	Dot Model	Purple/Red/Green/Blue/Brown/Black	Purple: 0A/0G
			Red: 0B/0J
			Green: 0C/0K
			Blue: 0D/0M
			Brown: 0E/0N
			Black: 0F/0P
Math > Output pen > Pen ← CH	Pen Model	Pen: 1 to 4, Channel: 01 to 04/0A to 0J	1pen: 01, 2pen: 02,
			3pen: 03, 4pen: 04,
Math > Print2 > CH	-	0A/0B/0C/0D/0E/0F/0G/0J/0K/0M/0N/0P	0A
Math > Print2 > Mode	-	AVE/MIX/SUM/MIN/MAX/INST	AVE
Math > Print2 > SUM scale	-	Off, /s, /min, /h, /day	Off
Math > Bar graph > CH	-	0A/0B/0C/0D/0E/0F/0G/0J/0K/0M/0N/0P	0A
Math > Bar graph > Graph	-	Normal/Center	Normal
Math > Error data > Error	-	+Over/-Over	+Over
Math > Error data > Over	-	Skip/Limit	Skip

#### RS-422A/485 communication interface function (/C3 option).

Setup Item	Pen/Dot	Selectable Range or Selections	Default Value
RS-422/485 > Address	-	1 to 32	1
RS-422/485 > Baud rate	-	1200/2400/4800/9600/19200/38400	9600
RS-422/485 > Data length	-	7/8	8
RS-422/485 > parity	-	Odd/Even/None	Even
RS-422/485 > Protocol	-	NORMAL/MODBUS	NORMAL

#### Ethernet communication interface function (/C7 option)

Setup Item	Pen/Dot	Selectable Range or Selections	Default Value
Ethernet > Host > Host	-	64 characters or less	Blank
Ethernet > Host > Domain	-	64 characters or less	Blank
Ethernet > Local IP > A	-	IP address	0.0.0.0
Ethernet > Local IP > M	-	IP address (Subnet mask)	0.0.0.0
Ethernet > Local IP > G	-	IP address (Default gateway)	0.0.0.0
Ethernet > DNS > DNS	-	On/Off	Off
Ethernet > DNS > P	-	IP address (Primary DNS sever)	0.0.0.0
Ethernet > DNS > S	-	IP address (Secondary DNS sever)	0.0.0.0
Ethernet > DNS > Suffix_P	-	Primary domain suffix	Blank
Ethernet > DNS > Suffix_S	-	Secondary domain suffix	Blank
Ethernet > Login > Login	-	Use/Not	Not
Ethernet > LoginSet > Level	-	Admin/User1 to User6	Admin
Ethernet > LoginSet > Register	-	On/Off	Admin and User1 are On
Ethernet > LoginSet > User	-	16 characters or less	Admin: admin User1 to 6: user1 to user6
Ethernet > LoginSet > Password	-	4 characters or less	Administrator: 0 User1 to 6: 1 to 6
Ethernet > Timeout > Timeout	-	On/Off	Off
Ethernet > Timeout > Duration	-	1 to 120 min	1 min
Ethernet > K. Alive > Keep alive	-	On/Off	On

#### Adjustment

Setup Item	Pen/Dot	Selectable Range or Selections	Default Value
P_Adj > P_Adj	Dot Model	Hysteresis/Zero/Full	Hysteresis
	Pen Model	Zero/Full	Zero
P_Adj > Pen No.	Pen Model	1/2/3/4	1

#### Store

Setup Item	Pen/Dot	Selectable Range or Selections	Default Value
End > End	-	Store/Abort	Store

# 4.4 Function Setup Guide

This section explains the settings necessary to use various functions of the recorder. Read the section corresponding to the function you wish to use.

#### Note \_

This section contains all the settings related to each item. If the desired setting is the same as the default value, you do not have to set it.

Item	Description	Reference Section
Date/Time setting	Use Clock in Setting mode	5.5
DST	Sets the date/time for switching between DST and standard time using Aux > DST in Setting mode.	6.13
Setting initialization	Use Initialize in Basic Setting mode to initialize the settings of Setting mode and Basic Setting mode to their default values.	7.17

#### Measuring input functions

Item	Description	Reference Section
Input range of each chann	el	
	Set Range in Setting mode.	5.1
1-5V	Unit     Use Unit in setting mode to set the unit after scaling.	5.3
	Low-cut     Use Personalize > Add function > 1-5V low-cut in Basic Setting mode and	7.15
	select Use or Not.  If Use is selected, turn On/Off the low-cut function using Range in Setting mode.  If Not is selected, the Low-cut item does not appear in the Range setting.	5.1
Scaling	Unit     Use Unit in setting mode to set the unit after scaling.	5.3
Square Root Computation	Unit     Use Unit in setting mode to set the unit after scaling.	5.3
	<ul> <li>Low-cut         Use Personalize &gt; Add function &gt; SQRT low-cut in Basic Setting mode         and select Use or Not.</li> </ul>	7.15
	If Use is selected, set the low-cut value using Range in Setting mode. If Not is selected, the Low-cut item does not appear in the Range setting.	5.1
Bias	Use Personalize > Add function > Bias in Basic Setting mode and select Use or Not.	7.15 6.12
	If Use is selected, set the bias value that is added to the input using Bias in Setting mode. If Not is selected, the Bias item does not appear.	
Filter (pen model)	Use Filter in Basic Setting mode and select Use or Not.	7.12
	If Use is selected, set the filter time constant using Aux > Filter in Setting mode. If Not is selected, the Aux > Filter item does not appear.	6.2
Moving average (dot mode	,	
	Use Moving_AVE in Basic Setting mode and select Use or Not.	7.11
	If Use is selected, set the number of samples of moving average using Aux > Moving_AVE in Setting mode.  If Not is selected, the Aux > Moving_AVE item does not appear.	6.3
RJC of TC input	Use RJC in Basic Setting mode to select whether to use the recorder's RJC function or an external RJC function.	7.4
Burnout detection function	of TC input and 1-5V input Use Burnout in Basic Setting mode to set the burnout detection function for each channel.	7.3
Integration time of the A/D	converter Use A/D in Basic Setting mode to set the integration time of the A/D converter.	7.2
Temperature Unit	Select the temperature unit using Temperature in Basic Setting mode.	7.20

#### 4.4 Function Setup Guide

		-		
ΑI	arm	tur	nctio	าร

Item	Description	Reference Section
Alarms for each channel	Use Alarm in Setting mode.	5.2
Delay high limit alarm/dela	y low limit alarm	
	Alarm type	7.15
	Use Personalize > Add function > Alarm delay in Basic Mode and select Use or Not.	
	If Use is selected, delay high limit alarm and delay low limit alarm become	
	selectable under Alarm > Type in Setting mode.	5.2
	If Not is selected, alarm delay cannot be selected.	
	Alarm delay time	6.10
	Use Aux > Alm delay T in Setting mode to set the alarm delay time.	
High limit on rate-of-chang	e alarm/low limit on rate-of-change alarm	
	Use Alarm in Setting mode and set the channel to rate-of-change alarm.	5.2
	Use Alarm > Increase in Basic Setting mode to set the interval of the high limit on	7.1
	rate-of-change alarm; use Alarm > Decrease in Basic Setting mode to set the	
	interval of the low limit on rate-of-change alarm.	
Use the alarm ACK operat	ion	
	Relay operation and display operation	7.1
	Set Alarm > Behavior in Basic Setting mode to Hold and set Alarm > Indicator	
	to Hold.	
	Executing the alarm ACK operation	3.12
	Use FUNC > Alarm ACK in Operation mode to execute the release of the	
	alarm output.	
Set a hysteresis on the ala	rm occurrence/release value of high limit alarm and low limit alarm	
	Use Alarm > Hysteresis in Basic Setting mode to set the hysteresis to be applied	7.1
	to the high limit alarm and low limit alarm of measurement channels.	
	Likewise, use Alarm > M_Hysteresis to set the hysteresis to be applied to the high	
	limit alarm and low limit alarm of computation channels (/M1 option).	
Change the alarm output re	elay operation	
- ,	If Alarm > Act in Basic Setting mode set to De_energize, alarm output relay is	7.1
	energized during normal operation and de-energized when an alarm occurs.	
Diagnosis output	Use Alarm > Diagnosis in Basic Setting mode to set the function.	7.1

#### Recording functions

Item	Description	Reference Section
Chart speed	Use Chart in Setting mode to set the chart speed.	5.4
Turn trend recording	ON/OFF (dot model)  Use Aux > Print out in Setting mode to set whether to trend record on each measurement channel.	6.6
Change the recordin	g color of measurement channels (dot model). Use Color in Basic Setting mode to set the recording color of measurement chann	els. 7.5
Record by compensa	ating for the pen offset along the time axis (pen model)  Use Aux > POC in Setting mode to turn On/Off offset compensation.	7.6
Record by setting rec	cording zone for each channel  Use Aux > Zone in Setting mode to set the recording zone for each channel.	6.4
Partial expanded rec	ording Use Partial in Basic Setting mode and select Use or Not.  If Use is selected, set the display mode using Aux > Partial in Setting mode.  If Not is selected, the Aux > Partial item does not appear.	7.13 6.5

Item	Description	Reference Section
Periodic printout		
	Mar. 31. 2004! 15: 50*  Channel no or tag  1.000V 1.000V 2.000  Channel no or tag  Measured	
	Scale  RED   Recording	aalau
	RED	color
	Printout interval     Use Print 1 in Basic Setting mode to set the periodic printout interval.	7.8
	<ul> <li>Type of measured values to be printed/disable periodic printout         Use Print1 in Basic Setting mode to set the type of measured values to be         printed.         You can select Inst, Report (statistical calculation value), or Off.         If Report is selected, use Print2 in Basic Setting mode to select the report         data type.</li> </ul>	7.8
	<ul> <li>Scale printout and recording color printout (pen model)         Use Print &gt; Scale in Basic Setting mode to turn scale printout On/Off.         Use Print &gt; Pen color in Basic Setting mode to turn pen color printout On/Off (pen model).     </li> </ul>	7.7
	Turn On/Off periodic printout for each channel     Use Aux > Print out in Setting mode to enable/disable the periodic printout on each measurement channel.	6.6
Channel/tag selection	Use Print > CH/Tag in Basic Setting mode to select whether to use channel numbers or tags in printouts.	7.7
Alarm occurrence/release	•	7.7
	<ul> <li>Turn printout On/Off         Use Print &gt; Alarm in Basic Setting mode to select whether to print the alarm occurrence and release, print only the alarm occurrence, or not print.     </li> <li>Time printout format</li> </ul>	7.7
	Use Personalize > Time print > Alarm in Basic Setting mode to set the time printout format when printing alarm occurrence/release.	7.10
Recording Start Printout	Turn printout On/Off     Use Print > Record On in Basic Setting mode to enable/disable the recording start printout.	7.7
	Time printout format     Use Personalize > Time print > RCD On in Basic Setting mode to set the time printout format.	7.16
New chart speed printout	Turn printout On/Off     Use Print > Chart speed in Basic Setting mode to set whether to print the new	7.7
	chart speed when the chart speed is changed.  Time printout format Use Personalize > Time print > C. Speed in Basic Setting mode to set the time printout format.	7.16
Message printout	Set the message string     Use Aux > Message to set the message string to be printed.	6.8
	Time printout format     Use Personalize > Time print > Message in Basic Setting mode to set the time printout format.	7.16
	Execute the message printout     Use FUNC key > Message in Operation mode to execute the message printout.	3.10
Tag	Channel/tag selection     Use Print > CH/Tag in Basic Setting mode to select whether to use channel     pumbers or tags in printouts.	7.7
	<ul><li>numbers or tags in printouts.</li><li>Tag name</li><li>Use Aux &gt; Tag in Setting mode to set the tag name.</li></ul>	6.7
Date format	Use Date format > Type in Basic Setting mode to set the printout/display format of the date.	7.19

#### 4.4 Function Setup Guide

D:-			
DIS	nıav	TUIN	ctions

Item	Description	Reference Section
Display brightness	Use Aux > Brightness > Display in Setting mode to set the display brightness.	6.11
Bar graph display mode	Use Bar graph in Basic Setting mode to set the bar graph display mode.	7.9
Display type	Assigns the display type on the data display setup screen.	Chapter 8
Date format	Same as the Date format in "Recording functions."	7.19

#### Other functions

Item	Description	Reference Section
Key lock	Target keys and password     Use Keylock in Basic Setting mode to set the keys to be key-locked and the password.  Finally, the law tasks.	7.10
	<ul> <li>Enable the key lock         Use FUNC key &gt; Keylock in Operation mode to turn key lock ON/OFF.</li> </ul>	3.13
Language	Use Language in Basic Setting mode to set the display and recording language.	7.14
Internal light brightness	Use Aux > Brightness > Light in Setting mode to set the internal light brightness.	6.11

#### Computation function (/M1 option)

Item	Description	Reference Section
Computing equation and re	cording span	
	Use Math > Formula in Setting mode to set the computing equation and recording span for each channel.	9.2
TLOG computation	If TLOG computation is selected, use Math > Timer in Basic Setting mode to set the timer operation	9.12
	Use Math > TLOG > Timer No. in Setting mode to set the timer used on each computation channel.	9.6
Unit	Use Math > Unit in Setting mode to set the unit for each channel.	9.3
Constants	Use Math > Constant in Setting mode to define constants to be used in the computing equations.	9.4
Alarms	Use Math > Alarm in Setting mode to set the alarm for each channel.  • Delay high limit alarm/delay low limit alarm	9.5
	<ul> <li>Alarm type         Use Personalize &gt; Add function &gt; Alarm delay in Basic Mode and select         Use or Not (common with measurement channels).         If Use is selected, delay high limit alarm and delay low limit alarm become         selectable under Math &gt; Alarm &gt; Type in Setting mode. If Not is selected,         alarm delay cannot be selected.</li> </ul>	7.15
	<ul> <li>Alarm delay time</li> <li>Use Math &gt; Aux &gt; Alm delay T in Setting mode to set the alarm delay time.</li> </ul>	9.11
Record by setting recording		
	Use Math > Aux > Zone in Setting mode to set the recording zone for each channel.	9.7
Partial expanded recording	Use Partial in Basic Setting mode and select Use or Not.  If Use is selected, set the display mode using Math > Aux > Partial in Setting mode.  If Not is selected, the Math > Aux > Partial item does not appear.	7.13 9.8
Change the recording color	(dot model) Use Color in Basic Setting mode to set the recording color of each computation channel.	9.13
Recording pen assignment	(pen model) Assigns measurement/computation channels to the recording pens.	9.14
Turn trend recording ON/O	FF (dot model)  Use Math > Aux > Print out > Trend in Setting mode to set whether to trend record each computation channel.	9.9

Item	Description	Reference Section
Periodic printout		
	$ \begin{array}{c c} 13:30 \\ 1 \\ \hline (A) & & & \\ \hline (-100.00 \text{UNIT}) & & & \\ \hline (-200.00) & & & & \\ \end{array} $	mputed value
	A UNIT Sca	
	RED ← Rec 50mm/h_	cording color
	Type of computed values to be printed/disable periodic printout Common with measurement channels.	7.8
	<ul> <li>If Report is selected, use Math &gt; Print2 in Basic Setting mode to select the report data type.</li> </ul>	9.15
	<ul> <li>Printout interval         Set Math &gt; TLOG &gt; Timer No. in Setting mode to Periodic.         The interval is common with measurement channels.</li> </ul>	9.6
	Turn On/Off periodic printout for each channel     Use Math > Aux > Print out > Periodic in Setting mode to enable/disable periodic printout for each computation channel.	9.9 the
	<ul> <li>Scale printout and recording color printout (pen model)</li> <li>Common with measurement channels.</li> </ul>	7.7
Periodic printout us	sing TLOG timer (dedicated to computation channels)	
	TAG-00A 100.00UNITA cr	annel number ag nputed value
	B	
	RED ← Rec	cording color er number
	<ul> <li>Use Math &gt; Timer (TLOG) in Basic Setting mode to set the printout interv</li> </ul>	/al. 9.12
	Use Math > Timer (TLOG) > Print in Basic Setting mode to turn the printo	
	<ul> <li>Use Math &gt; Aux &gt; Print out &gt; Periodic in Setting mode to enable/disable periodic printout for each computation channel.</li> </ul>	
	<ul> <li>Set Math &gt; TLOG &gt; Timer No. in Setting mode to set the timer used on e computation channel.</li> <li>Scale printout and recording color (pen model) Common with periodic printout.</li> </ul>	each 9.6
Alarm occurrence/r		
	Common with measurement channels.	7.7
<sup>r</sup> ag	<ul> <li>Channel/tag selection         Common with measurement channels.</li> <li>Tag name</li> </ul>	7.7 9.10
	Use Math > Aux > Tag in Setting mode to set the tag name.	5.10
Bar graph display r		ode. 9.16
Procedure when co	omputed results are in error  Use Math > Error data in Basic Setting mode to set the procedure taken who computed results are in error.	en the 9.17

#### Remote control function (/R1 option)

Item	Description	Reference Section
Remote control	function (/R1 option)	
	<ul> <li>Assign functions to the remote control input terminals         Use Remote in Basic Setting mode to set the function to be assigned to the remote control input terminal.     </li> </ul>	7.18
	<ul> <li>Secondary chart speed         If "chart speed switching" is assigned, use Aux &gt; Chart 2 in Setting mode to set the secondary chart speed.     </li> </ul>	6.9

### 5.1 Setting the Input Range

Input range is set for each measurement channel. Set unused channels to Skip.

- The input range cannot be changed on models with the computation function (/M1 option) when computation is in progress.
- If you change the input range, set the bias, alarm, and partial expanded recording again.

#### Procedure

#### TC, RTD, and DC Voltage


- 1. Hold down the MENU key for 3 seconds to enter Setting mode.
- 2. Press the <⊨ key with Range shown on the screen.
- 3. Set each item and press the <⊨ key.

Use the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select values.

For the procedure on how to enter values or characters, see section 4.2.

If you press the **ESC** key in the middle of the operation, the settings entered up to then are cancelled, and the display returns to a higher level menu.

- 4. When the **Setting complete** screen appears, do either of the following: Press the ← key to set other channels. If you are done, press the **ESC** key.
- 5. Hold down the MENU key for 3 seconds to return to Operation mode.

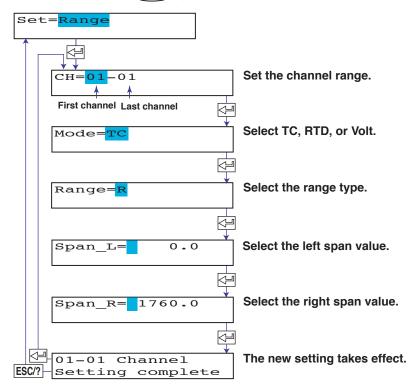

#### Description

#### • Selectable Range of Input Range, Span Left, and Span Right

The input range, span left, and span right can be set in the range shown below. Span left and span right cannot be set to the same value.

#### DC voltage (Volt)

Range Type	Selectable Span Range
20 mV	-20.00 to 20.00 mV
60 mV	-60.00 to 60.00 mV
200 mV	-200.0 to 200.0 mV
2 V	-2.000 to 2.000 V
6 V	-6.000 to 6.000 V
20 V	-20.00 to 20.00 V
50 V	-50.00 to 50.00 V

#### Thermocouple (TC)

Range Type	Selectable Span Range (°C)	Selectable Span Range (°F)
R	0.0 to 1760.0 °C	32 to 3200 °F
S	0.0 to 1760.0 °C	32 to 3200 °F
В	0.0 to 1820.0 °C	32 to 3308 °F
K	–200.0 to 1370.0 °C	–328 to 2498 °F
E	–200.0 to 800.0 °C	–328.0 to 1472.0 °F
J	–200.0 to 1100.0 °C	–328.0 to 2012.0 °F
Т	−200.0 to 400.0 °C	–328.0 to 752.0 °F
N	0.0 to 1300.0 °C	32 to 2372 °F
W	0.0 to 2315.0 °C	32 to 4199 °F
L	–200.0 to 900.0 °C	–328.0 to 1652.0 °F
U	−200.0 to 400.0 °C	–328.0 to 752.0 °F
WRe	0.0 to 2400.0 °C	32 to 4352 °F

#### RTD

Range Type	Selectable Span Range (°C)	Selectable Span Range (°F)			
PT (Pt100)	–200.0 to 600.0 °C	–328.0 to 1112.0 °F			
JPT (JPt100)	–200.0 to 550.0 °C	–328.0 to 1022.0 °F			

#### RTD

Range Type	Selectable Span Range (°C)	Selectable Span Range (°F)			
PT (Pt100)	−200.0 to 600.0 °C	–328.0 to 1112.0 °F			
JPT (JPt100)	−200.0 to 550.0 °C	–328.0 to 1022.0 °F			


#### /N1 Option

Selections	Input Type
Cu1	Cu10 (GE)
Cu2	Cu10 (L&N)
Cu3	Cu10 (WEED)
Cu4	Cu10 (BAILEY)
Cu5	Cu10: a = 0.00392 at 20°C
Cu6	Cu10: a = 0.00393 at 20°C
Cu25	Cu25*: a = 0.00425 at 0°C

#### /N3 Option

Selections	Input Type	Note
PR	PR40-20	Thermo
PLATI	PLATINEL	couple
NiMo	NiNiMo	-
W/WRe	W/WRe26	
N2	Type N (AWG14)	
Кр	Kp vs Au7Fe	
Pt4	Pt25	RTD
Pt3	Pt50	
Ni1	Ni100 (SAMA)	
Ni2	Ni100 (DIN)	
N <u>i3</u>	Ni120	
J263	J263*B	
Cu8	Cu53	
Cu10	Cu100: a = 0.00425 at 0°C	

#### **Linear Scaling**

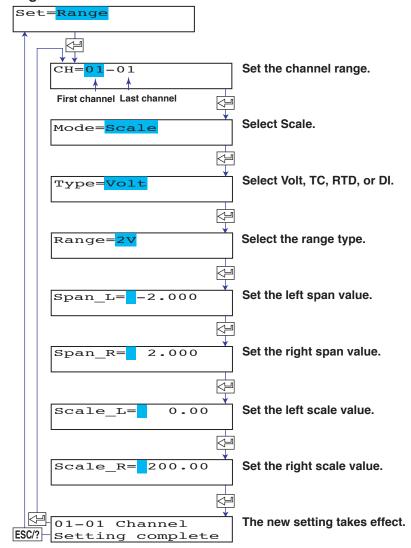

#### Description

#### • Scale Left and Scale Right

Selectable range (mantissa): -20000 to 30000


Decimal position: XXXXX, XXXXX, XXXXX, XXXXX, XXXXX

The decimal position is the position specified by scale left.

#### Note

The displayable/printable range of scale values is -19999 to 30000 excluding the decimal.

#### **Delta Computation**

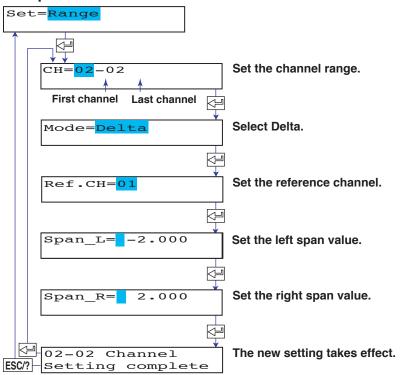

#### Description

#### • Reference Channel


The reference channel must be a channel that is smaller in channel number than the channel being set.

#### • Span Left and Span Right

The range type is set to the same type as the reference channel. The span left and span right can be set in the range shown below. Span left and span right cannot be set to the same value.

Input Type	Range Type	Selectable Span Range (°C)	Selectable Span Range (°F)
DC voltage	20 mV	-20.00 to 20.00 mV	
(Volt)	60 mV	-60.00 to 60.00 mV	
. ,	200 mV	-200.0 to 200.0 mV	
	2 V	-2.000 to 2.000 V	
	6 V	-6.000 to 6.000 V	
	20 V	-20.00 to 20.00 V	
	50 V	-50.00 to 50.00 V	
Thermocouple	R	–1760.0 to 1760.0 °C	–3168 to 3168 °F
(TC)	S	-1760.0 to 1760.0 °C	–3168 to 3168 °F
	В	-1820.0 to 1820.0 °C	-3276 to 3276 °F
	K	–1570.0 to 1570.0 °C	–2826 to 2826 °F
	E	-1000.0 to 1000.0 °C	–1800 to 1800 °F
	J	-1300.0 to 1300.0 °C	-1999.9 to 2340.0 °F
	Т	–600.0 to 600.0 °C	-1080.0 to 1080.0 °F
	N	-1300.0 to 1300.0 °C	–2340 to 2340 °F
	W	–1999.9 to 2315.0 °C	-4167 to 4167 °F
	L	-1100.0 to 1100.0 °C	–1980 to 1980 °F
	U	–600.0 to 600.0 °C	-1080.0 to 1080.0 °F
	WRe	–1999.9 to 2400.0 °C	–4320 to 4320 °F
RTD	PT (Pt100)	−800.0 to 800.0 °C	-1440.0 to 1440.0 °F
	JPT (JPt100)	–750.0 to 750.0 °C	-1350.0 to 1350.0 °F

#### **ON/OFF Input**

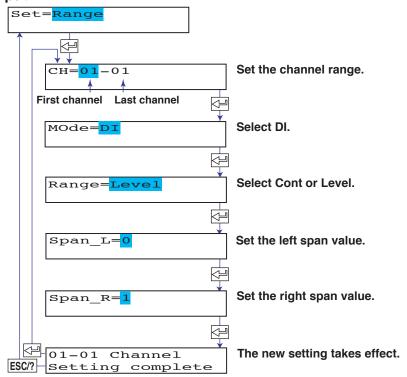


#### Description

#### • Selectable Range Type, Span Left, and Span Right

The range type, span left, and span right can be set in the range shown below. Span left and span right cannot be set to the same value.

Range Type	Selectable Span Values
Level 0: Less than 2.4 V, 1: 2.4 V or higher, within ±6 V	
Contact	0: Open, 1: Closed

#### 1-5V Input

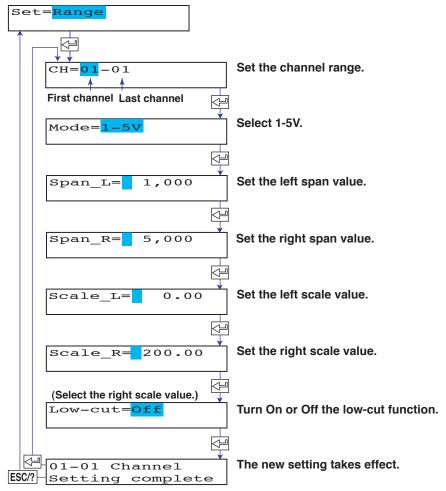

#### Description

#### · Span Left and Span Right

Selectable span left range: 0.8 to 1.2 V Selectable span right range: 4.8 to 5.2 V

#### • Scale Left and Scale Right

Selectable range (mantissa): –20000 to 30000

Decimal position: XXXXX, XXXXX, XXXXX, XXXXX, XXXXX

The decimal position is the position specified by scale left.

Make sure that scale left is less than scale right.

#### Low-cut


On: Cuts values below 0% of the recording span (set to 0% (scale left value)).

Off: Does not apply the low-cut function.

#### Note

- The displayable/printable range of scale values is -19999 to 30000 excluding the decimal.
- If the leftmost value of the scale is set to -20000 (excluding the decimal), the value when the low-cut function is applied is displayed as "-Over."

#### **Square Root Computation**

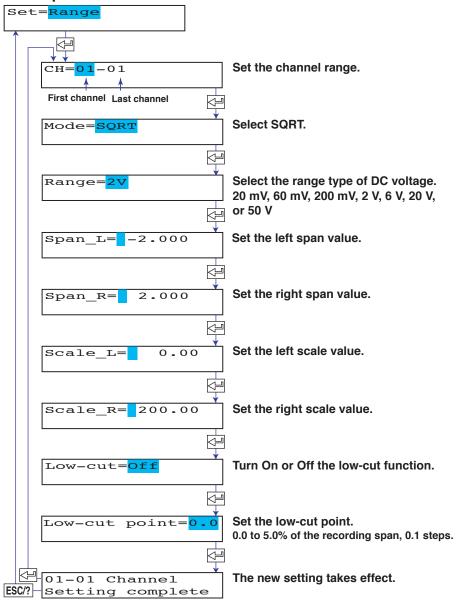

#### Description

- Input Type in Which Square Root Computation Can Be Performed
   Square root computation can be performed when set to DC voltage input.
- Span Left and Span Right

Same as the selectable span range of the DC voltage input.

Make sure that span left is less than span right.

Scale Left and Scale Right

Selectable range (mantissa): -20000 to 30000

Decimal position: XXXXX, XXXXX, XXXXX, XXXXX, XXXXX

The decimal position is the position specified by scale left.

Make sure that scale left is less than scale right.

· Low-cut and Low-cut Point

If low-cut is set to On, set the low-cut point.


Selectable range of the low-cut point: 0.0 to 5.0% of the recording span

Values below the low-cut point is set to 0% (scale left value) of the recording span.

#### Note

- The displayable/printable range of scale values is –19999 to 30000 excluding the decimal.
- If the leftmost value of the scale is set to -20000 (excluding the decimal) and the low-cut value is set to -20000, the value when the low-cut function is applied is displayed as "-Over."

#### Skip (Unused Channels)

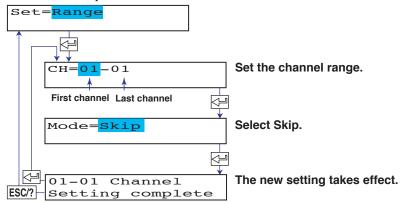

#### Note

Do not use channels set to skip as a reference channel of delta computations or in computing equations of the computation function (/M1 option).

## 5.2 Setting the Alarm

The alarm is set for each channel.

If you change the input range, set the alarm again.


#### **Procedure**

- 1. Hold down the MENU key for 3 seconds to enter Setting mode.
- 3. Set each item and press the <⊢ key.

Use the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select values.

For the procedure on how to enter values or characters, see section 4.2. If you press the **ESC** key in the middle of the operation, the settings entered up to then are cancelled, and the display returns to a higher level menu.

- When the Setting complete screen appears, do either of the following:
   Press the ← key to set other channels.
   If you are done, press the ESC key.
- 5. Hold down the MENU key for 3 seconds to return to Operation mode.

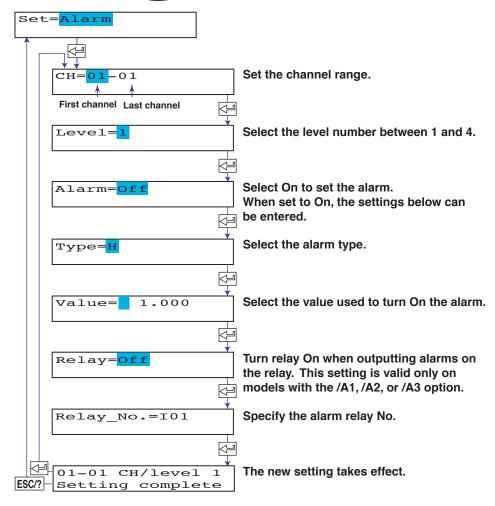

#### **Explanation**

#### **Channel Range**

The only case when an alarm can be set on multiple channels simultaneously is when the channels are set to the same range type (for example channel 01 and 02 are set to 2 V range). For channels on which scaling is set, the channels must be set to the same range type, same span values, and same scaling values.

#### **Alarm Type**

Symbol	Name	Note
Н	High limit alarm	
L	Low limit alarm	
h	Difference high limit alarm	Can be specified on channels set to delta computation.
1	Difference low limit alarm	Can be specified on channels set to delta computation.
R	High limit on rate-of-change alarm	
r	Low limit on rate-of-change alarm	
Т	Delay high limit alarm*	
t	Delay low limit alarm*	

<sup>\*</sup> Selectable only when the alarm delay function is enabled. See section 7.15.

#### Note

On channels set to delta computation, alarms can be detected on the values illustrated in the figure below.

# Alarm on a channel set to delta computation Alarm H, L, R, r, T, and t Input value Measured value Measured value on the reference channel

If high limit on rate-of-change alarm or low limit on rate-of-change alarm is specified, set the interval over which the rate-of-change is calculated.

If delay high limit alarm or delay low limit alarm is specified, set the delay time.

#### <Related Topics>

Setting the interval of the high limit on rate-of-change alarm or low limit on rate-of-change alarm: Section 7.1

Setting the delay time of delay high limit alarm or delay low limit alarm: Section 6.10 Enabling the alarm delay function: Section 7.15

Setting the alarm hysteresis: Section 7.1

#### **Alarm Value**

#### High Limit Alarm/Low Limit Alarm and Delay High Limit Alarm/Delay Low Limit Alarm

The following values can be specified.

- For DC voltage, TC, and RTD input: Values within the measurable range in the specified range (example: -2.000 to 2.000 V for the 2 V range).
- For ON/OFF input (DI): 0 or 1.
- For linear scaling (1-5V, scaling, and square root): A value within -5 to 105% of the scaling span except within the range of -20000 to 30000 (excluding the decimal point).

#### Note

For channels whose the leftmost value of the scale is set to -20000 (excluding the decimal), the alarm value of -20000 is invalid. Set a value that is greater than or equal -19999.

- Difference High Limit Alarm/Difference Low Limit Alarm

  Values in the measurable range can be specified. Measurable range refers to

  "Selectable Span Range" in the table on page 5-4.
- High Limit on Rate-of-Change Alarm/Low Limit on Rate-of-Change Alarm
   A value greater than or equal to 1 digit can be specified. For example, 1 digit
   corresponds 0.001 for the 2 V range (measurable range: –2.000 to 2.000 V). The
   maximum value that can be specified is the width of the measurable range (4.000 V
   for 2 V range).

For ON/OFF input, only "1" can be specified.

#### Relay No.

The selectable relay numbers are listed below.

I01 and I02 on the /A1 option

101, 102, 103, and 104 on the /A2 option

101, 102, 103, 104, 105, and 106 on the /A3 option

# 5.3 Setting the Unit on Scaled Channels

Units are set on channels whose input range is set to Scaling, 1-5V, or SQRT.

#### **Procedure**


- 1. Hold down the MENU key for 3 seconds to enter Setting mode.
- 2. Press the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select **Unit** and then press the  $\triangleleft$ -key.
- 3. Set each item and press the ⟨→ key.

Use the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select values.

For the procedure on how to enter values or characters, see section 4.2.

If you press the **ESC** key in the middle of the operation, the settings entered up to then are cancelled, and the display returns to a higher level menu.

- 4. When the **Setting complete** screen appears, do either of the following: Press the ⟨→ key to set other channels.
  - If you are done, press the ESC key.
- 5. Hold down the MENU key for 3 seconds to return to Operation mode.

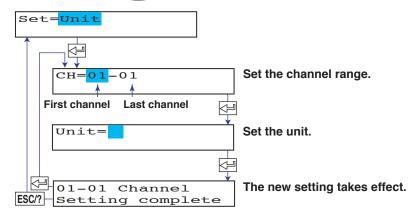

#### **Explanation**

#### **Characters That Can Be Used for Units**

A unit is set using up to six characters.

The available characters are as follows:

Alphabet, numbers, symbols (%, #, °, @, +, -, \*, /, (, ),  $\mu$ ,  $\Omega$ ,  $^2$ ,  $^3$ , .), and space

# 5.4 Changing the Chart Speed

This section explains the details of changing the chart speed.

#### Procedure


- 1. Hold down the MENU key for 3 seconds to enter Setting mode.
- 3. Set the chart speed and press the ⟨→ key.

Use the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select values.

For the procedure on how to enter values or characters, see section 4.2.

If you press the **ESC** key in the middle of the operation, the settings entered up to then are cancelled, and the display returns to a higher level menu.

- - If you are done, press the **ESC** key.
- 5. Hold down the MENU key for 3 seconds to return to Operation mode.

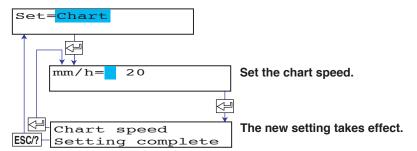

#### Explanation

#### **Chart Speed**

#### • Pen Model

The chart speed can be selected from 82 settings shown below.

#### Chart speed on the pen model (unit: mm/h)

chart opera on the pointmean (anti-timen)										
	5	6	8	9	10	12	15	16	18	20
	24	25	30	32	36	40	45	48	50	54
	60	64	72	75	80	90	96	100	120	125
	135	150	160	180	200	225	240	250	270	300
	320	360	375	400	450	480	500	540	600	675
	720	750	800	900	960	1000	1080	1200	1350	1440
	1500	1600	1800	2000	2160	2250	2400	2700	2880	3000
	3600	4000	4320	4500	4800	5400	6000	7200	8000	9000
	10800	12000								

#### Dot Model

The chart speed can be set in the range of 1 to 1500 mm/h in 1 mm steps.

# 5.5 Setting the Date/Time

This section explains the details of setting the date/time.

#### **Procedure**

- 1. Hold down the MENU key for 3 seconds to enter Setting mode.
- 3. Set the date and time and press the ⟨→ key.

Use the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select values.

For the procedure on how to enter values or characters, see section 4.2.


If you press the **ESC** key in the middle of the operation, the settings entered up to then are cancelled, and the display returns to a higher level menu.

4. When the Setting complete screen appears, do either of the following:

To correct the setting, press the  $\ensuremath{\vartriangleleft}$  key.

If you are done, press the ESC key.

5. Hold down the MENU key for 3 seconds to return to Operation mode.

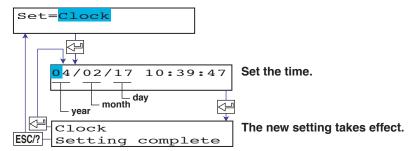

#### **Explanation**

#### Date/Time

The year is set with the lower two digits.

Values in the range 80 and 99 correspond to 1980 to 1999.

#### Recorders with Version 1.02 or Earlier

The following is the setting menu.

04/02/17 10:39:47 Set the time.

DST=Summer Select Summer or Winter, whichever the set time belongs to.

# 6.1 Setting the Trend Recording Interval (Dot Model).


This section explains the details of setting the trend recording interval (dot printing interval) on the dot model.

#### **Procedure**

- 1. Hold down the MENU key for 3 seconds to enter Setting mode.
- 2. Press the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select Aux and then press the  $\triangleleft$  key.
- 3. Press the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select **Trend** and then press the  $\rightleftharpoons$  key.
- 4. Set the dot printing interval and press the  $\ensuremath{\hookleftarrow}$  key.
  - Use the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select values.
  - For the procedure on how to enter values or characters, see section 4.2.

If you press the **ESC** key in the middle of the operation, the settings entered up to then are cancelled, and the display returns to a higher level menu.

- 5. When the **Setting complete** screen appears, do either of the following: To correct the setting, press the ⟨⊨□ key.
  If you are done, press the **ESC** key.
- 6. Hold down the MENU key for 3 seconds to return to Operation mode.

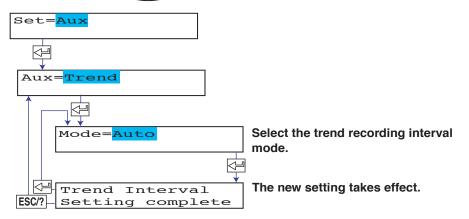


# Explanation

### Mode

Auto: The trend recording interval is set according to the chart speed in the range of 10 s to 90 s so that the dots do not overlap. The interval is displayed on the System display (see page 12-9).

Fix: The trend recording interval is fixed to 10 s/6 dots. On models with the computation function (/M1 option), the dot printing interval varies depending on the number of measurement and computation channels to be trend recorded.

Number of channels to be recorded	Trend recording interval
6 or less	10 s
7 to 12	15 s
13 to 18	20 s




# 6.2 Setting the Filter (Pen Model)

This section explains the details of setting a filter on the measurement channels on the pen model.

#### **Procedure**

- 1. Hold down the MENU key for 3 seconds to enter Setting mode.
- 3. Press the ∇△ key or **SHIFT** + ∇△ key to select **Filter** and then press the <⊨ key.
- 4. Set each item and press the ⟨→ key.
  - Use the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select values.
  - For the procedure on how to enter values or characters, see section 4.2.
  - If you press the **ESC** key in the middle of the operation, the settings entered up to then are cancelled, and the display returns to a higher level menu.
- 5. When the **Setting complete** screen appears, do either of the following: Press the ⟨⊨ key to set other channels.
  If you are done, press the **ESC** key.
- 6. Hold down the MENU key for 3 seconds to return to Operation mode.

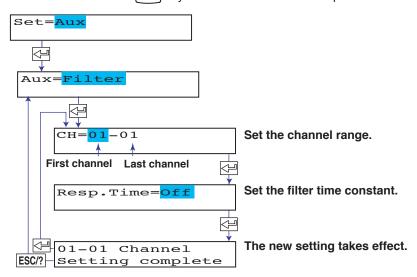

# Explanation

# **Filter Time Constant**

The time constant is selectable from 2 s, 5 s, and 10 s. Select Off when not using the filter.

# <Related Topics>


Enabling the filter function: Section 7.12

# 6.3 Setting the Moving Average (Dot Model)

This section explains the details of setting the moving average function on measurement channels on the dot model.

#### **Procedure**

- 1. Hold down the MENU key for 3 seconds to enter Setting mode.
- 3. Press the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select **Moving\_AVE** and then press the  $\leftarrow$  key.
- 4. Set each item and press the ⟨→ key.
  - Use the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select values.
  - For the procedure on how to enter values or characters, see section 4.2.
  - If you press the **ESC** key in the middle of the operation, the settings entered up to then are cancelled, and the display returns to a higher level menu.
- 5. When the Setting complete screen appears, do either of the following: Press the ⟨⊨ key to set other channels. If you are done, press the ESC key.
- 6. Hold down the MENU key for 3 seconds to return to Operation mode.

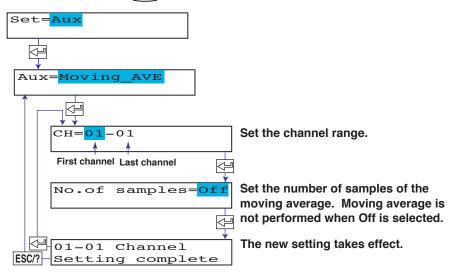

# Explanation

#### The Number of Samples of Moving Average

The number of samples can be set to a integer between 2 and 16. Select Off when not using the moving average function.

# <Related Topics>

Enabling the moving average function: Section 7.11

# 6.4 Setting Recording Zones for Each Channel (Zone Recording)

This section explains the details of setting the recording zone for each measurement channel.

#### **Procedure**


- 1. Hold down the MENU key for 3 seconds to enter Setting mode.

- 4. Set each item and press the ⟨⊨ key.

Use the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select values.

For the procedure on how to enter values or characters, see section 4.2. If you press the **ESC** key in the middle of the operation, the settings entered up to then are cancelled, and the display returns to a higher level menu.

- 5. When the Setting complete screen appears, do either of the following: Press the ⟨⊨ key to set other channels. If you are done, press the ESC key.
- 6. Hold down the MENU key for 3 seconds to return to Operation mode.

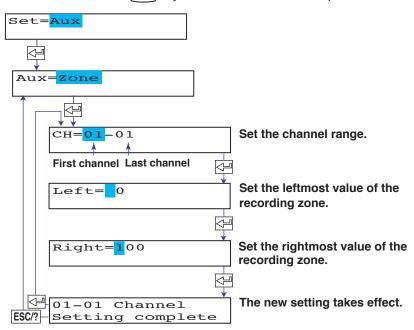

# Explanation

#### Zone

The recording zone can be set in the following range.

Leftmost position: 0 mm to 95 mm Rightmost position: 5 mm to 100 mm

Set a larger value for the rightmost position than the leftmost position.

Set at least 5 mm for the zone width.

### Note


If the zone is set to a value less than 40 mm, scale printout of periodic printout cannot be executed.

# 6.5 Setting the Partial Expanded Recording

This section explains the details of expanding a section of the recording range. If you change the input range, set the partial expanded recording again.

#### **Procedure**

- 1. Hold down the MENU key for 3 seconds to enter Setting mode.
- 3. Press the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select **Partial** and then press the  $\triangleleft$  key.
- 4. Set each item and press the ⟨→ key.
  - Use the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select values.
  - For the procedure on how to enter values or characters, see section 4.2.
  - If you press the **ESC** key in the middle of the operation, the settings entered up to then are cancelled, and the display returns to a higher level menu.
- 5. When the Setting complete screen appears, do either of the following: Press the ⟨⊨ key to set other channels. If you are done, press the ESC key.
- 6. Hold down the MENU key for 3 seconds to return to Operation mode.

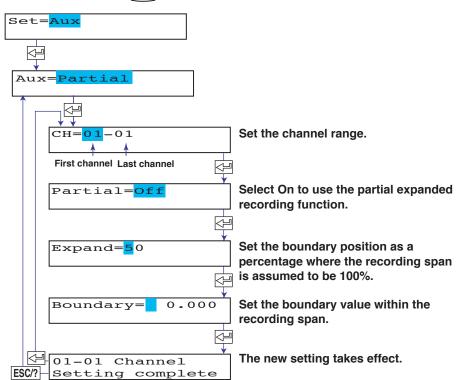

### **Explanation**

# **Expand**

Set a value between 1 and 99.

#### <Related Topics>

Enabling the partial expanded recording function: Section 7.13

# 6.6 Turning Trend Recording (Dot Model) and Periodic Printout ON/OFF for Each Channel

This section explains the details of setting the trend recording and periodic printout for each measurement channel.

The following settings can be entered for each channel on the dot model.

- · Turn trend recording ON/OFF.
- Turn the printing of measured values ON/OFF during periodic printout.

The following setting can be entered for each channel on the pen model.

· Turn the printing of measured values ON/OFF during periodic printout.

#### **Procedure**


- Hold down the MENU key for 3 seconds to enter Setting mode.
- Press the ∇△ key or SHIFT + ∇△ key to select Print out and then press the <⊨ key.</li>
- 4. Set each item and press the ⟨⊨ key.

Use the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select values.

For the procedure on how to enter values or characters, see section 4.2.

If you press the **ESC** key in the middle of the operation, the settings entered up to then are cancelled, and the display returns to a higher level menu.

- 5. When the Setting complete screen appears, do either of the following: Press the ⟨⊨ key to set other channels.
  - If you are done, press the **ESC** key.
- 6. Hold down the MENU key for 3 seconds to return to Operation mode.

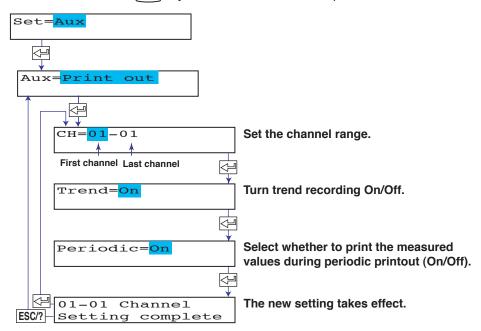

# Explanation

#### **Trend Recording (Dot Model)**

On: Turns On the trend recording of the specified channel.

### **Periodic Printout**


On: Turns On the printing of the measured values of the specified channel during periodic printout.

# 6.7 Setting Tags on Channels

This section explains the details of setting tags to measurement channels.

#### Procedure

- 1. Hold down the MENU key for 3 seconds to enter Setting mode.
- 2. Press the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select **Aux** and then press the  $\triangleleft$  key.
- 4. Set each item and press the <⊨ key.
  - Use the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select values.
  - For the procedure on how to enter values or characters, see section 4.2. If you press the **ESC** key in the middle of the operation, the settings entered up to then are cancelled, and the display returns to a higher level menu.
- When the Setting complete screen appears, do either of the following:
   Press the ← key to set other channels.
   If you are done, press the ESC key.
- 6. Hold down the MENU key for 3 seconds to return to Operation mode.

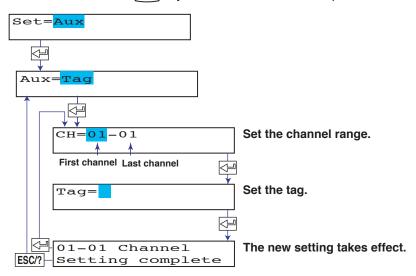

#### **Explanation**

#### **Characters That Can Be Used for Tags**

Set the tag using up to 7 characters.

The available characters are as follows:

Alphabet, numbers, symbols (%, #,  $^{\circ}$ , @, +, -,  $^{*}$ , /, (, ),  $\mu$ ,  $\Omega$ ,  $^{2}$ ,  $^{3}$ , .), and space

#### <Related Topics>

Printing tags in place of channel numbers: Section 7.7

# 6.8 Setting the Message String

This section explains the details of setting the message strings to be printed on the chart paper. Up to five message strings can be registered.

## **Procedure**


- 1. Hold down the MENU key for 3 seconds to enter Setting mode.
- 3. Press the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select **Message** and then press the  $\Leftrightarrow$  key.
- 4. Set each item and press the ⟨→ key.

Use the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select values.

For the procedure on how to enter values or characters, see section 4.2.

If you press the **ESC** key in the middle of the operation, the settings entered up to then are cancelled, and the display returns to a higher level menu.

- 5. When the **Setting complete** screen appears, do either of the following: To correct the setting, press the ⟨→ key.
  If you are done, press the **ESC** key.
- 6. Hold down the MENU key for 3 seconds to return to Operation mode.

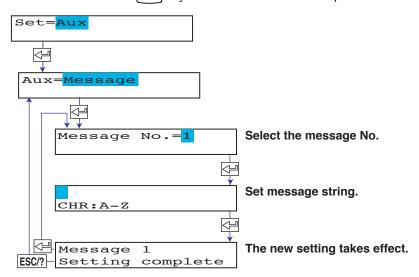

#### **Explanation**

#### **Characters That Can Be Used for Messages**

Set the message using up to 16 characters.

The available characters are as follows:

Alphabet, numbers, symbols (%, #,  $^{\circ}$ , @, +, -,  $^{\star}$ , /, (, ),  $\mu$ ,  $\Omega$ ,  $^{2}$ ,  $^{3}$ , .), and space

## <Related Topics>

Printing messages: Section 3.10


# 6.9 Setting the Secondary Chart Speed (Remote Control Function, /R1)

This section explains the details of setting the secondary chart speed when the chart speed is to be switched using the remote control function (/R1 option).

#### **Procedure**

- 1. Hold down the MENU key for 3 seconds to enter Setting mode.

- 4. Set each item and press the <⊨ key.
  - Use the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select values.
  - For the procedure on how to enter values or characters, see section 4.2. If you press the **ESC** key in the middle of the operation, the settings entered up to then are cancelled, and the display returns to a higher level menu.
- When the **Setting complete** screen appears, do either of the following:
   To correct the setting, press the ⟨→ key.
   If you are done, press the **ESC** key.
- 6. Hold down the MENU key for 3 seconds to return to Operation mode.

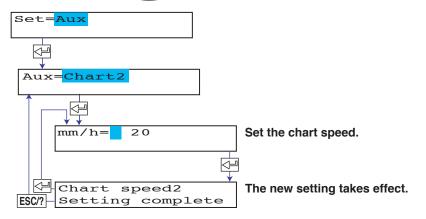

### **Explanation**

# **Chart Speed**

See section 5.4.

# <Related Topics>


Setting the remote control function: Section 7.18

# 6.10 Setting the Alarm Delay Duration

This section explains the details of setting the duration of the delay alarm.

#### **Procedure**

- 1. Hold down the MENU key for 3 seconds to enter Setting mode.
- 3. Press the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select **Alarm delay** and then press the  $\lt \vdash$  key.
- 4. Set each item and press the <⊨ key.
  - Use the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select values.
  - For the procedure on how to enter values or characters, see section 4.2.
  - If you press the **ESC** key in the middle of the operation, the settings entered up to then are cancelled, and the display returns to a higher level menu.
- When the Setting complete screen appears, do either of the following:
   Press the ← key to set other channels.
   If you are done, press the ESC key.
- 6. Hold down the MENU key for 3 seconds to return to Operation mode.

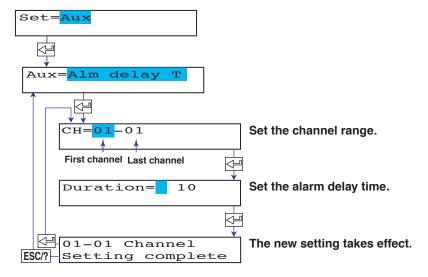

#### **Explanation**

#### **Duration**

The duration can be set to a value in the range of 1 to 3600 s.

However, if the scan interval on the dot model is 2.5 s, the actual duration is an integer multiple of 2.5 s. If the set value is not equal to an integer multiple of 2.5 s, the duration is the smallest integer multiple of 2.5 s greater than the set value.

Example: The actual duration for 1 s and 2 s is 2.5 s.

# <Related Topics>


Enabling the alarm delay function: Section 7.15

# 6.11 Setting the Brightness of the Display and Internal Light

This section explains the details of setting the brightness of the display and the internal light.

#### **Procedure**

- 1. Hold down the MENU key for 3 seconds to enter Setting mode.
- 2. Press the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select **Aux** and then press the  $\triangleleft$  key.
- 3. Press the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select **Brightness** and then press the  $\Leftrightarrow$  key.
- 4. Set each item and press the <⊨ key.
  - Use the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select values.
  - For the procedure on how to enter values or characters, see section 4.2. If you press the **ESC** key in the middle of the operation, the settings entered up to then are cancelled, and the display returns to a higher level menu.
- 5. When the **Setting complete** screen appears, do either of the following: To correct the setting, press the ⟨→□ key.
  If you are done, press the **ESC** key.
- 6. Hold down the MENU key for 3 seconds to return to Operation mode.

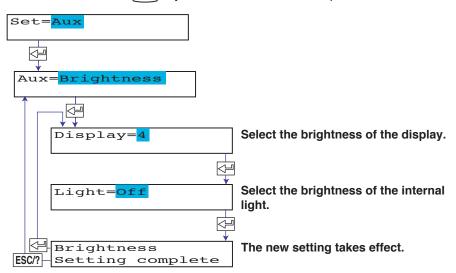

# **Explanation**

# **Display Brightness**

The brightness can be set to an integer between 1 and 8. The darkest setting is 1; the brightest setting is 8.

# **Internal Light Brightness**


The brightness of the internal light can be set to an integer between 1 and 4. The darkest setting is 1; the brightest setting is 4. Select Off to turn Off the internal light.

# 6.12 Applying a Bias on the Measuring Input Signal

This section explains the details of setting a bias on the measuring input signal. If you change the input range, set the bias again.

#### **Procedure**

- 1. Hold down the MENU key for 3 seconds to enter Setting mode.
- 3. Set each item and press the <⊢ key.
  - Use the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select values.
  - For the procedure on how to enter values or characters, see section 4.2.
  - If you press the **ESC** key in the middle of the operation, the settings entered up to then are cancelled, and the display returns to a higher level menu.
- 4. When the **Setting complete** screen appears, do either of the following: Press the ← key to set other channels. If you are done, press the **ESC** key.
- 5. Hold down the MENU key for 3 seconds to return to Operation mode.

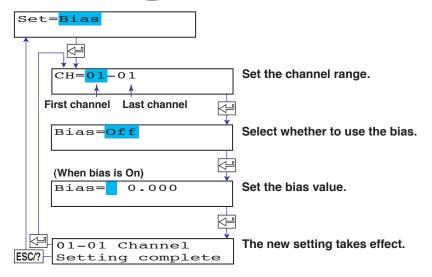

# Explanation

#### **Channel Range**

The only case when a bias can be set on multiple channels simultaneously is when the channels are set to the same range type (for example channel 01 and 02 are set to 2 V range). For channels on which scaling is set, the channels must be set to the same range type, same span values, and same scaling values.

#### **Bias**

The range of bias that can be specified is  $\pm 10\%$  of the span of the measurable range at the specified range type. For example, the range is -0.4 V to 0.4 V for the range type 2 V. For channels on which scaling is set, the range is  $\pm 10\%$  of the scaling span.

#### Note

A bias cannot be set on channels set to ON/OFF input (DI).

#### <Related Topics>

Enabling the bias function: Section 7.15

# 6.13 Setting the Date/Time When Switching between Standard Time and DST


This section explains the details of setting the date/time when switching from the standard time to DST and the date/time when switching back from DST to standard time if the recorder is used in a region that has DST. When the preset date/time arrives, the recorder internal clock automatically switches.

#### Procedure

- 1. Hold down the MENU key for 3 seconds to enter Setting mode.
- 3. Press the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select **DST** and then press the  $\Leftrightarrow$  key.
- 4. Set each item and press the <⊨ key.
  - Press the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select values.
  - For the procedure on how to enter values or characters, see section 4.2. If you press the **ESC** key in the middle of the operation, the settings entered up to then are cancelled, and the display returns to a higher level menu.
- When the Setting complete screen appears, do either of the following: Press the 

  key to set other channels.

  If you are done, press the ESC key.
- 6. Hold down the MENU key for 3 seconds to return to Operation mode.

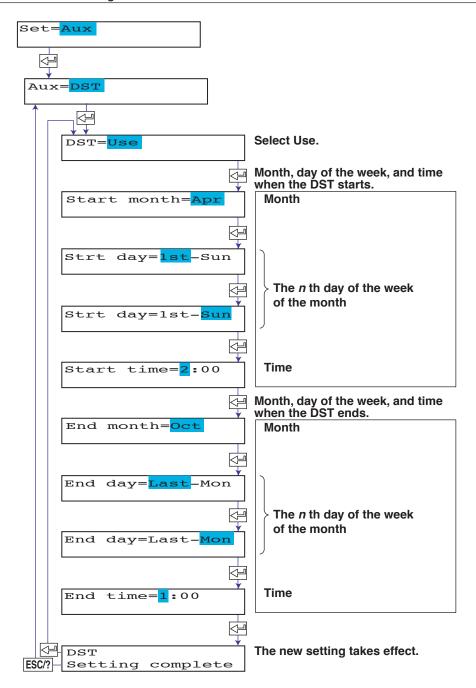

#### **Explanation**

## DST

Select Use to use DST.

#### Start month, Strt day, and Start time

Set the date/time for switching from standard time to DST. Specify the day as the  $\it n$  th day of the week of the month.

# End month, End day, and End time

Set the date/time for switching from DST to standard time. Specify the day as the  $\it n$  th day of the week of the month.

# Recorders with Version 1.02 or Earlier

The following is the setting menu.

Time=Summer	Select standard time (Winter) or DST (Summer).
Summer=Off	Select On to set the time to switch between standard time and DST.
Time=04/07/05 00	Set the time to switch.
DST Setting complete	The new setting takes effect.

# 7.1 Changing the Auxiliary Alarm Function

This section explains the details of setting the alarm system items listed below.

- Diagnosis output using the alarm output relay (I01)
- Reflash alarm operation of the alarm output relay (I01 to I03)
- · AND/OR operation of alarm output relays
- Energized/De-energized operation of alarm output relays when alarms occur
- · Hold/Non-hold operation of alarm output relays
- · Hold/Non-hold operation of alarm indications
- The interval of the rate-of-change alarm
- · Alarm hysteresis


Basic Setting mode cannot be entered when recording is in progress or when computation is in progress on models with the computation function (/M1 option).

#### **Procedure**

#### **Changing the Settings**

- 1. Hold down the MENU key for 3 seconds to enter Setting mode.
- 3. Press the 

  key with Alarm shown on the screen.
- - Use the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select values.
  - For the procedure on how to enter values or characters, see section 4.2. If you press the **ESC** key in the middle of the operation, the settings entered up to then are cancelled, and the display returns to a higher level menu.
- 5. When the **Setting complete** screen appears, do either of the following: To correct the setting, press the ∠ key.
  If you are done, press the **ESC** key.

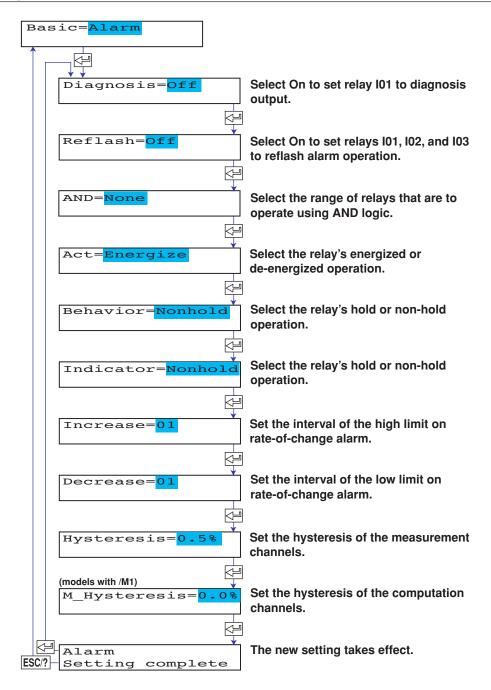

#### Applying the Changes and Returning to Operation Mode

Press the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select **End** and then press the  $\triangleleft$  key. Press the  $\nabla \triangle$  key to select **Store** and then press the  $\triangleleft$  key. The changes are applied, and the screen returns to Operation mode. If you select **Abort** and press the  $\triangleleft$  key, the changes are discarded, and the screen returns to Operation mode. Press the **ESC** key to return to the **Basic**= screen.

## **Explanation**

#### **Diagnosis**

When set to On, alarm output relay I01 becomes a dedicated diagnosis output relay, and the operation is fixed to OR, de-energized, and non-hold. Diagnosis output is a function which outputs a relay signal when an error is detected in the recording section, burnout detection function, or the A/D converter.

#### Reflash

Turns On/Off the reflash alarm operation of alarm output relays I01, I02, and I03.

When set to On, alarm output relays I01, I02, and I03 set to reflash alarm operation, and the operation is fixed to OR, de-energized, and non-hold.

#### AND

Sets the AND/OR operation of alarm output relays.

None: No relays are set to AND operation. All relays are set to OR operation.

I01: Only I01 is set to AND operation.

I01-I02: I01 and I02 are set to AND operation.

I01-I03: I01 to I03 are set to AND operation.

I01-I04: I01 to I04 are set to AND operation.

101-105: 101 to 105 are set to AND operation.

101-106: 101 to 106 are set to AND operation.

#### Act

Sets whether the output relay is energized or de-energized when an alarm occurs.

Energize: Energizes the relay when an alarm occurs. The relay is de-energized

during normal operation.

De\_energize: De-energizes the relay when an alarm occurs. The relay is energized

during normal operation.

#### **Behavior**

Specifies whether to set the alarm output relay to hold operation or non-hold operation.

Nonhold: Releases the relay output at the same time the alarm is released. Hold: Holds the relay output until the alarm ACK operation is executed.

#### Indicator

Specifies whether to set the alarm indication to hold operation or non-hold operation.

Nonhold: Releases the alarm indication at the same time the alarm is released.

Hold: Holds the alarm indication until the alarm ACK operation is executed.

#### Increase

Set the interval of the high limit on rate-of-change alarm to an integer between 1 and 15. The interval is set to scan interval  $\times$  (1 to 15).

Pen model: The scan interval is 125 ms. The maximum interval is 1.875 s.

Dot model: The maximum interval when the scan interval set to 1 s is 15 s. The

maximum interval when the scan interval set to 2.5 s is 37.5 s.

#### **Decrease**

Set the interval of the low limit on rate-of-change alarm to an integer between 1 and 15. The setup procedure is the same as Increase.

### **Hysteresis**

Sets the alarm hysteresis of the measurement channels.

The hysteresis width can be set in the range of 0.0% (Off) to 1.0% of the recording span in 0.1 steps.

The hysteresis applies to all high limit and low limit alarms of measurement channels.

#### M\_Hysteresis (Models with the Computation Function (/M1 Option))

Sets the alarm hysteresis of the computation channels.

The hysteresis width can be set in the range of 0.0% (Off) to 1.0% of the recording span in 0.1 steps.

The hysteresis applies to all high limit and low limit alarms of computation channels.

# 7.2 Changing the Integration Time of the A/D Converter


This section explains the details of setting the integration time of the A/D converter. Basic Setting mode cannot be entered when recording is in progress or when computation is in progress on models with the computation function (/M1 option).

#### Procedure

#### **Changing the Settings**

- 1. Hold down the MENU key for 3 seconds to enter Setting mode.

- 4. Set each item and press the ∠ key.
  - Use the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select values.
  - For the procedure on how to enter values or characters, see section 4.2.
  - If you press the **ESC** key in the middle of the operation, the settings entered up to then are cancelled, and the display returns to a higher level menu.
- When the Setting complete screen appears, do either of the following:
   To correct the setting, press the ∠□ key.
   If you are done, press the ESC key.

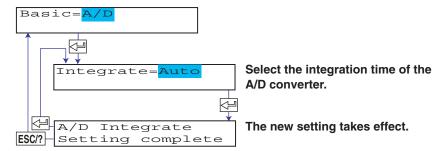

# Applying the Changes and Returning to Operation Mode

Press the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select **End** and then press the  $\lt \!\!\!\!-$  key. Press the  $\nabla \triangle$  key to select **Store** and then press the  $\lt \!\!\!\!-$  key. The changes are applied, and the screen returns to Operation mode. If you select **Abort** and press the  $\lt \!\!\!\!-$  key, the changes are discarded, and the screen returns to Operation mode. Press the **ESC** key to return to the **Basic=** screen.

#### **Explanation**

### Integrate

Selects the integration time of the A/D converter.

50Hz: Sets the integration time to 20 ms.\*

60Hz: Sets the integration time to 16.7 ms.\*

Auto: Sets the integration time (20 ms or 16.7 ms) to a value synchronized with the power supply frequency.\*

100ms (dot model): Sets the integration time to 100 ms. The scan interval is set to 2.5 s.

\* The scan interval is 125 ms (pen model) and 1 s (dot model) when set to 50Hz, 60Hz, or Auto.

# **Setting the Burnout Detection Function of Thermocouples**

This section explains the details of setting the burnout detection function of thermocouples to channels set to 1-5V or TC input.

Basic Setting mode cannot be entered when recording is in progress or when computation is in progress on models with the computation function (/M1 option).

## **Procedure**

#### **Changing the Settings**

5.

- 1. Hold down the MENU key for 3 seconds to enter Setting mode.
- Setting mode.
- 3. Press the ¬△ key or SHIFT + ¬△ key to select Burnout and then press the
- Set each item and press the <⊢ key.


Use the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select values.

For the procedure on how to enter values or characters, see section 4.2. If you press the **ESC** key in the middle of the operation, the settings entered up

to then are cancelled, and the display returns to a higher level menu. When the **Setting complete** screen appears, do either of the following:

Press the \u2242 key to set other channels.

If you are done, press the ESC key.

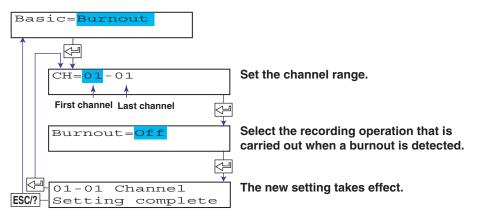

#### Applying the Changes and Returning to Operation Mode

the  $\nabla$ △ key to select **Store** and then press the <⊨ key. The changes are applied, and changes are discarded, and the screen returns to Operation mode. Press the ESC key to return to the Basic= screen.

#### **Explanation**

#### **Burnout**

Selects the action taken when a burnout is detected at the 1-5V input or the thermocouple input.

Records off the scale on the 100% side. Up:

Down: Records off the scale on the 0% side.

Select Off when not using the burnout detection function.

# 7.4 Setting the RJC Function on Channels Set to TC Input


This section explains the details of setting RJC on channels set to TC input. Basic Setting mode cannot be entered when recording is in progress or when computation is in progress on models with the computation function (/M1 option).

#### Procedure

#### **Changing the Settings**

- 1. Hold down the MENU key for 3 seconds to enter Setting mode.

- 4. Set each item and press the ∠ key.
  - Use the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select values.
  - For the procedure on how to enter values or characters, see section 4.2.
  - If you press the **ESC** key in the middle of the operation, the settings entered up to then are cancelled, and the display returns to a higher level menu.
- When the Setting complete screen appears, do either of the following:
  Press the ← key to set other channels.
  If you are done, press the ESC key.

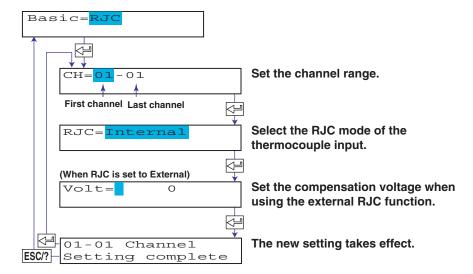

#### Applying the Changes and Returning to Operation Mode

Press the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select **End** and then press the  $\lt \!\!\!\!-$  key. Press the  $\nabla \triangle$  key to select **Store** and then press the  $\lt \!\!\!\!-$  key. The changes are applied, and the screen returns to Operation mode. If you select **Abort** and press the  $\lt \!\!\!\!-$  key, the changes are discarded, and the screen returns to Operation mode. Press the **ESC** key to return to the **Basic**= screen.

# Explanation

# **RJC**

Sets the RJC mode.

Internal: Uses the RJC function on the recorder.

External: Uses an external RJC function. If external is selected, set the compensation

voltage.

#### Volt

Sets the compensation voltage when using an external RJC function.

The compensation voltage can be set in the range of –20000  $\mu V$  to 20000  $\mu V$ .

# 7.5 Changing the Channel Recording Color (Dot Model)


This section explains the details of changing the trend recording color on the dot model. Basic Setting mode cannot be entered when recording is in progress or when computation is in progress on models with the computation function (/M1 option).

#### Procedure

#### **Changing the Settings**

- 1. Hold down the MENU key for 3 seconds to enter Setting mode.

- - Use the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select values.
  - For the procedure on how to enter values or characters, see section 4.2.
  - If you press the **ESC** key in the middle of the operation, the settings entered up to then are cancelled, and the display returns to a higher level menu.
- When the Setting complete screen appears, do either of the following:
   Press the ← key to set other channels.
   If you are done, press the ESC key.

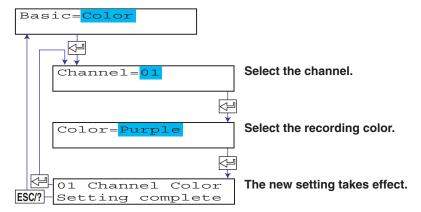

#### Applying the Changes and Returning to Operation Mode

Press the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select **End** and then press the  $\triangleleft$  key. Press the  $\nabla \triangle$  key to select **Store** and then press the  $\triangleleft$  key. The changes are applied, and the screen returns to Operation mode. If you select **Abort** and press the  $\triangleleft$  key, the changes are discarded, and the screen returns to Operation mode. Press the **ESC** key to return to the **Basic**= screen.

# **Explanation**

#### Color

Sets the recording color of measurement channels.

By default, the recording colors are set as follows:

Channel01: Purple

Channel 02: Red

Channel 03: Green

Channel 04: Blue

Channel 05: Brown

Channel 06: Black

# 7.6 Recording by Compensating for the Pen Offset along the Time Axis (Pen Model)

This section explains the details of setting the compensation for the pen offset along the time axis (pen model).

Basic Setting mode cannot be entered when recording is in progress or when computation is in progress on models with the computation function (/M1 option).

#### **Procedure**


# **Changing the Settings**

- 1. Hold down the MENU key for 3 seconds to enter Setting mode.

Use the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select values.

For the procedure on how to enter values or characters, see section 4.2. If you press the **ESC** key in the middle of the operation, the settings entered up to then are cancelled, and the display returns to a higher level menu.

When the Setting complete screen appears, do either of the following:
 To correct the setting, press the ∠□ key.
 If you are done, press the ESC key.

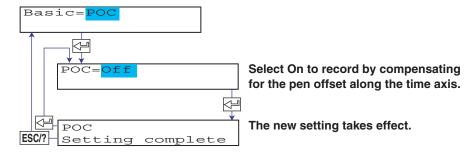

# **Applying the Changes and Returning to Operation Mode**

Press the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select **End** and then press the  $\lt \!\!\!\!-$  key. Press the  $\nabla \triangle$  key to select **Store** and then press the  $\lt \!\!\!\!-$  key. The changes are applied, and the screen returns to Operation mode. If you select **Abort** and press the  $\lt \!\!\!\!-$  key, the changes are discarded, and the screen returns to Operation mode. Press the **ESC** key to return to the **Basic**= screen.

### **Explanation**

# **POC (Pen Offset Compensation)**

On: Enables pen offset compensation.

Off: Disables pen offset compensation.

#### Note

When pen offset compensation is enabled, all pens are aligned with the reference pen (pen that is furthest to the back: pen 2 on the 2-pen model, pen 3 on the 3-pen model, and pen 4 on the 4-pen model) for recording. When recording is started, only the reference pen moves until the offset is compensated. This is not a malfunction.

When pen offset compensation is enabled, an asterisk is printed by the time on the periodic printout.

# 7.7 Turning Printouts ON/OFF.


This section explains the details of turning ON/OFF the printouts of various items. Basic Setting mode cannot be entered when recording is in progress or when computation is in progress on models with the computation function (/M1 option).

#### Procedure

# **Changing the Settings**

- 1. Hold down the MENU key for 3 seconds to enter Setting mode.

- 4. Set each item and press the <⊨ key.
  - Use the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select values.
  - For the procedure on how to enter values or characters, see section 4.2.
  - If you press the **ESC** key in the middle of the operation, the settings entered up to then are cancelled, and the display returns to a higher level menu.
- When the Setting complete screen appears, do either of the following:
   To correct the setting, press the ∠⊨ key.
   If you are done, press the ESC key.

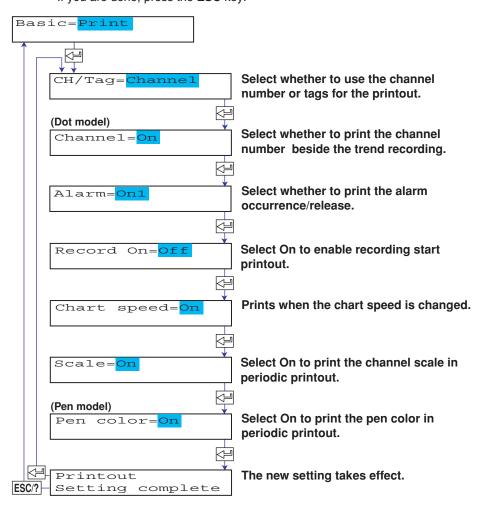

#### Applying the Changes and Returning to Operation Mode

Press the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select **End** and then press the  $\lt \!\!\!\!-$  key. Press the  $\nabla \triangle$  key to select **Store** and then press the  $\lt \!\!\!\!-$  key. The changes are applied, and the screen returns to Operation mode. If you select **Abort** and press the  $\lt \!\!\!\!-$  key, the changes are discarded, and the screen returns to Operation mode. Press the **ESC** key to return to the **Basic**= screen.

# Explanation

# CH/Tag

Channel: Prints the channel number.

Tag: Prints the tag.

# **Channel (Dot Model)**

When On is selected channel No. is printed by the trend recording.

#### **Alarm**

On1: Prints the alarm information when an alarm occurs or releases.

On2: Prints the alarm information only when an alarm occurs.

Off: Does not print alarm information.

#### **Pen Color Printout**

When On is selected, the recording color of the channel whose scale is printed is printed. This is valid on channels whose scale printout is turned On.

# 7.8 Setting the Periodic Printout Interval and the Type of Measured Values to Be Printed

This section explains the details of setting the periodic printout interval and the type of measured values to be printed.

Basic Setting mode cannot be entered when recording is in progress or when computation is in progress on models with the computation function (/M1 option).


#### **Procedure**

#### **Periodic Printout Interval**

#### **Changing the Settings**

- 1. Hold down the MENU key for 3 seconds to enter Setting mode.

- - Use the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select values.
  - For the procedure on how to enter values or characters, see section 4.2.
  - If you press the **ESC** key in the middle of the operation, the settings entered up to then are cancelled, and the display returns to a higher level menu.
- 5. When the Setting complete screen appears, do either of the following: To correct the setting, press the ∠ key.
  If you are done, press the ESC key.

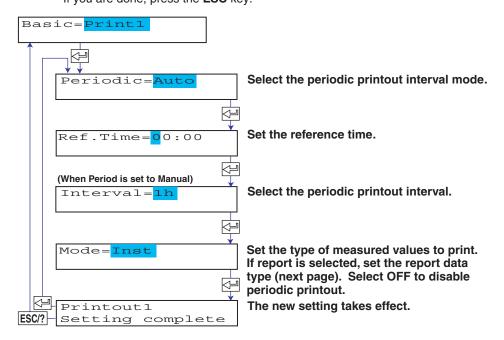

#### Applying the Changes and Returning to Operation Mode

Press the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select **End** and then press the  $\triangleleft$  key. Press the  $\nabla \triangle$  key to select **Store** and then press the  $\triangleleft$  key. The changes are applied, and the screen returns to Operation mode. If you select **Abort** and press the  $\triangleleft$  key, the changes are discarded, and the screen returns to Operation mode. Press the **ESC** key to return to the **Basic**= screen.

# Types of Report Data to Be Printed

## **Changing the Settings**


- 1. Hold down the MENU key for 3 seconds to enter Setting mode.

Use the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select values.

For the procedure on how to enter values or characters, see section 4.2.

If you press the **ESC** key in the middle of the operation, the settings entered up to then are cancelled, and the display returns to a higher level menu.

When the **Setting complete** screen appears, do either of the following:
 Press the ⟨⊨¹ key to set other channels.
 If you are done, press the **ESC** key.

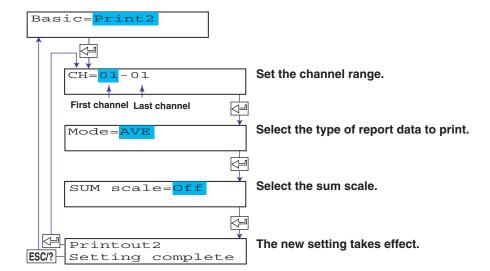

#### Applying the Changes and Returning to Operation Mode

Press the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select **End** and then press the  $\triangleleft$  key. Press the  $\nabla \triangle$  key to select **Store** and then press the  $\triangleleft$  key. The changes are applied, and the screen returns to Operation mode. If you select **Abort** and press the  $\triangleleft$  key, the changes are discarded, and the screen returns to Operation mode. Press the **ESC** key to return to the **Basic**= screen.

# **Explanation**

## **Periodic Printout Interval**

#### **Periodic**

Select the periodic printout interval mode.

Auto: Automatically sets the printout interval in sync with the chart speed.

Manual: Set the printout interval manually.

#### Ref. Time

Sets the reference time for determining the times for executing the periodic printout. The reference time is set in the range of 00 to 23 in 1 hour steps. Minutes cannot be specified.

#### Interval

Select the interval from 10, 12, 15, 20, 30 minutes, 1, 2, 3, 4, 6, 8, 12, and 24 hours.

#### Mode

Sets the type of measured values to be printed.

Inst: Prints the measured value at that point.

Report: Prints the report data over the interval. If Report is selected, set the type of

report data. Proceed to "Type of Report Data to Be Printed" below.

Off: Disables periodic printout.

# Types of Report Data to Be Printed

#### Mode

Sets the type of report data to be printed.

AVE: Prints the average value over the interval.

MIX: Prints the minimum, maximum, and average values over the interval.

SUM: Prints the sum value over the interval. If SUM is selected, set the sum scale.

MIN: Prints the minimum value over the interval.

MAX: Prints the maximum value over the interval.

INST: Prints the instantaneous value.

#### **SUM** scale

Set this item only when SUM is selected.

SUM sums the data every computation interval. For flow values that have units /s, /min, or /h, a simple summation results in the actual value not matching the computed result, because the scan interval and the unit of the input values are different. In such cases, set the sum scale to match the unit of the input value. In effect, the sum value with the same unit as that of the input value is calculated.

For example, if the scan interval is 1 s, and the input value is 100 m³/min, a simple summation would add 100 every 1 s resulting in 6000 after one minute. However, if the sum scale is set to /min, then 1 s/60 s is multiplied every scan interval before the value is added giving a result with an m³/min unit.

Off: Simply sums the measured values.

/s: Sums by converting the measured values to a value over 1 second.

/min: Sums by converting the measured values to a value over 1 minute.

/h: Sums by converting the measured values to a value over 1 hour.

/day: Sums by converting the measured values to a value over 1 day.

# 7.9 Setting the Bar Graph Display Mode

This section explains the details of setting the bar graph display mode.

Basic Setting mode cannot be entered when recording is in progress or when computation is in progress on models with the computation function (/M1 option).

#### Procedure


# **Changing the Settings**

- Hold down the MENU key for 3 seconds to enter Setting mode.
- 3. Press the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select **Bar graph** and then press the  $\Leftrightarrow$  key.

Use the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select values.

For the procedure on how to enter values or characters, see section 4.2. If you press the **ESC** key in the middle of the operation, the settings entered up to then are cancelled, and the display returns to a higher level menu.

When the Setting complete screen appears, do either of the following:
 Press the ← key to set other channels.
 If you are done, press the ESC key.

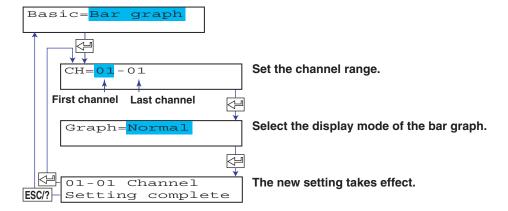

### Applying the Changes and Returning to Operation Mode


Press the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select **End** and then press the  $\lt \!\!\!\!-$  key. Press the  $\nabla \triangle$  key to select **Store** and then press the  $\lt \!\!\!\!-$  key. The changes are applied, and the screen returns to Operation mode. If you select **Abort** and press the  $\lt \!\!\!\!-$  key, the changes are discarded, and the screen returns to Operation mode. Press the **ESC** key to return to the **Basic**= screen.

# Explanation

#### Graph

Normal: Sets the base point of the bar graph to the left or right of the recording span whichever is smaller in value.

Center: Sets the base point of the bar graph to the 50% position of the recording span.



# 7.10 Setting the Key Lock Function


This section explains the details of setting the keys that can be locked and the password for releasing the key lock.

Basic Setting mode cannot be entered when recording is in progress or when computation is in progress on models with the computation function (/M1 option).

# **Procedure**

# **Changing the Settings**

- 1. Hold down the MENU key for 3 seconds to enter Setting mode.
- 3. Press the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select **Keylock** and then press the  $\Leftrightarrow$  key.
- 4. Set each item and press the <⊨ key.
  - Use the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select values.
  - For the procedure on how to enter values or characters, see section 4.2.
  - If you press the **ESC** key in the middle of the operation, the settings entered up to then are cancelled, and the display returns to a higher level menu.
- When the Setting complete screen appears, do either of the following:
   To correct the setting, press the ∠ key.
   If you are done, press the ESC key.

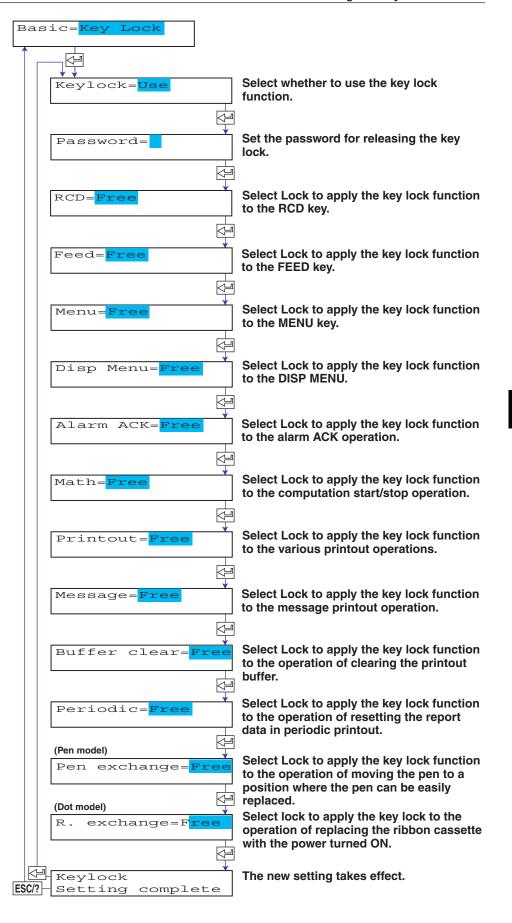

#### Applying the Changes and Returning to Operation Mode

Press the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select **End** and then press the  $\lt \!\!\!\!-$  key. Press the  $\nabla \triangle$  key to select **Store** and then press the  $\lt \!\!\!\!-$  key. The changes are applied, and the screen returns to Operation mode. If you select **Abort** and press the  $\lt \!\!\!\!-$  key, the changes are discarded, and the screen returns to Operation mode. Press the **ESC** key to return to the **Basic**= screen.

#### Explanation

# **Keylock**

Sets whether to use or not use the key lock function.

If Not is selected, the setup ends here.

#### **Password**

Sets the password for releasing the key lock. Set the password using numbers and spaces within 4 digits.

## Operation of Keys to Be Key-Locked

Sets the operation of the keys to be key-locked. Select Lock or Free for each key operation.

RCD: RCD key
Feed: FEED key
Menu: MENU key
Disp Menu: MENU key

Alarm ACK: Alarm ACK operation under the FUNC key

Math: Computation start/stop/reset operation under the FUNC key

Print out Printout start/stop/reset operation under the FUNC key

Message printout operation under the FUNC key

Buffer clear: Clear operation of the printout buffer memory under the FUNC key

Periodic: Clear operation of the report data of periodic printout under the FUNC key

Pen exchange: Operation of moving the pen to an easily accessible position of

replacement under the  $_{\mbox{\scriptsize 9FUNC}}$  key (pen model)

R. exchange: Operation carried out when replacing the ribbon cassette with the power

turned ON under the Func key (dot model)

#### <Related Topics>

Activating/Releasing the key lock: Section 3.13

# 7.11 Enabling the Moving Average Function (Dot Model)

This section explains the details of enabling/disabling the moving average function on the dot model.

Basic Setting mode cannot be entered when recording is in progress or when computation is in progress on models with the computation function (/M1 option).

## **Procedure**

# **Changing the Settings**


- 1. Hold down the MENU key for 3 seconds to enter Setting mode.
- 3. Press the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select **Moving\_AVE** and then press the  $\angle$  key.
- 4. Set each item and press the ∠ key.

Use the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select values.

For the procedure on how to enter values or characters, see section 4.2. If you press the **ESC** key in the middle of the operation, the settings entered up

to then are cancelled, and the display returns to a higher level menu.
When the **Setting complete** screen appears, do either of the following: To correct the setting, press the <⊨ key.</li>

If you are done, press the **ESC** key.

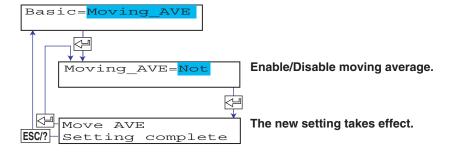

# **Applying the Changes and Returning to Operation Mode**

Press the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select **End** and then press the  $\lt \!\!\!\!-$  key. Press the  $\nabla \triangle$  key to select **Store** and then press the  $\lt \!\!\!\!-$  key. The changes are applied, and the screen returns to Operation mode. If you select **Abort** and press the  $\lt \!\!\!\!-$  key, the changes are discarded, and the screen returns to Operation mode. Press the **ESC** key to return to the **Basic**= screen.

### **Explanation**

#### Moving\_AVE

Use: Enables the setting of the number of samples of the moving average in Setting mode.

Not: The Moving\_AVE item does not appear in Setting mode.

# <Related Topics>

Setting the moving average function: Section 6.3

# 7.12 Enabling the Filter Function (Pen Model)

This section explains details of enabling/disabling the input filter function on the pen model.

Basic Setting mode cannot be entered when recording is in progress or when computation is in progress on models with the computation function (/M1 option).

#### **Procedure**

#### **Changing the Settings**


- 1. Hold down the MENU key for 3 seconds to enter Setting mode.

Use the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select values.

For the procedure on how to enter values or characters, see section 4.2.

If you press the **ESC** key in the middle of the operation, the settings entered up to then are cancelled, and the display returns to a higher level menu.

5. When the **Setting complete** screen appears, do either of the following: To correct the setting, press the ∠ key.
If you are done, press the **ESC** key.

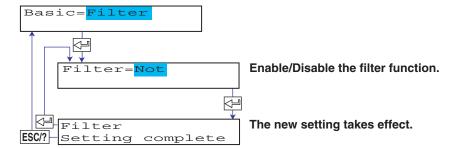

# **Applying the Changes and Returning to Operation Mode**

Press the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select **End** and then press the  $\lt \!\!\!\!-$  key. Press the  $\nabla \triangle$  key to select **Store** and then press the  $\lt \!\!\!\!-$  key. The changes are applied, and the screen returns to Operation mode. If you select **Abort** and press the  $\lt \!\!\!\!-$  key, the changes are discarded, and the screen returns to Operation mode. Press the **ESC** key to return to the **Basic**= screen.

### **Explanation**

#### Filter

Use: Enables the setting of the filter time constant in Setting mode.

Not: The Filter item does not appear in Setting mode.

#### <Related Topics>

Setting the filter: Section 6.2

# 7.13 Enabling the Partial Expanded Recording Function

This section explains the details of enabling/disabling the partial expanded recording function.


Basic Setting mode cannot be entered when recording is in progress or when computation is in progress on models with the computation function (/M1 option).

## **Procedure**

# **Changing the Settings**

- 1. Hold down the MENU key for 3 seconds to enter Setting mode.

- 4. Set each item and press the ∠ key.
  - Use the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select values.
  - For the procedure on how to enter values or characters, see section 4.2. If you press the **ESC** key in the middle of the operation, the settings entered up to then are cancelled, and the display returns to a higher level menu.
- 5. When the **Setting complete** screen appears, do either of the following: To correct the setting, press the ⟨⊨ key.
  If you are done, press the **ESC** key.

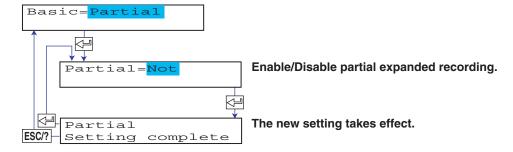

# Applying the Changes and Returning to Operation Mode

Press the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select **End** and then press the  $\triangleleft$  key. Press the  $\nabla \triangle$  key to select **Store** and then press the  $\triangleleft$  key. The changes are applied, and the screen returns to Operation mode. If you select **Abort** and press the  $\triangleleft$  key, the changes are discarded, and the screen returns to Operation mode. Press the **ESC** key to return to the **Basic=** screen.

# **Explanation**

#### **Partial**

Use: Enables the setting of the boundary position and boundary value of the partial expanded recording function in Setting mode.

Not: The Partial item does not appear in Setting mode.

# <Related Topics>

Setting the partial expanded recording function: Section 6.5


# 7.14 Changing the Display/Recording Language

This section explains the details of changing the display/recording language. Basic Setting mode cannot be entered when recording is in progress or when computation is in progress on models with the computation function (/M1 option).

# **Procedure**

# **Changing the Settings**

- 1. Hold down the MENU key for 3 seconds to enter Setting mode.
- 3. Press the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select **Language** and then press the  $\Leftrightarrow$  key.
- 4. Set each item and press the ⟨⊨ key.
  - Use the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select values.
  - For the procedure on how to enter values or characters, see section 4.2.
  - If you press the **ESC** key in the middle of the operation, the settings entered up to then are cancelled, and the display returns to a higher level menu.
- 5. When the **Setting complete** screen appears, do either of the following: To correct the setting, press the ∠⊨ key.
  If you are done, press the **ESC** key.

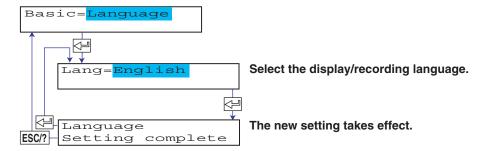

#### Applying the Changes and Returning to Operation Mode

Press the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select **End** and then press the  $\lt \!\!\!\!-$  key. Press the  $\nabla \triangle$  key to select **Store** and then press the  $\lt \!\!\!\!-$  key. The changes are applied, and the screen returns to Operation mode. If you select **Abort** and press the  $\lt \!\!\!\!-$  key, the changes are discarded, and the screen returns to Operation mode. Press the **ESC** key to return to the **Basic**= screen.

#### **Explanation**

# Lang (Language)

English: Uses English for the display and recording. Japanese: Uses Japanese for the display and recording.

# 7.15 Enabling the Bias Function, Low-Cut Function, and Alarm Delay Function

This section explains the details of enabling/disabling the bias function, low-cut function, and the alarm delay function.

Basic Setting mode cannot be entered when recording is in progress or when computation is in progress on models with the computation function (/M1 option).


#### **Procedure**

#### **Changing the Settings**

- 1. Hold down the MENU key for 3 seconds to enter Setting mode.
- 3. Press the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select **Personalize** and then press the  $\triangleleft$  key.
- 4. Press the ⟨≠ key with **Add function** shown on the screen.
- 5. Set each item and press the ⟨⊨ key.
  - Use the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select values.

For the procedure on how to enter values or characters, see section 4.2. If you press the **ESC** key in the middle of the operation, the settings entered up to then are cancelled, and the display returns to a higher level menu.

6. When the **Setting complete** screen appears, do either of the following: To correct the setting, press the ∠⊨ key. If you are done, press the **ESC** key.

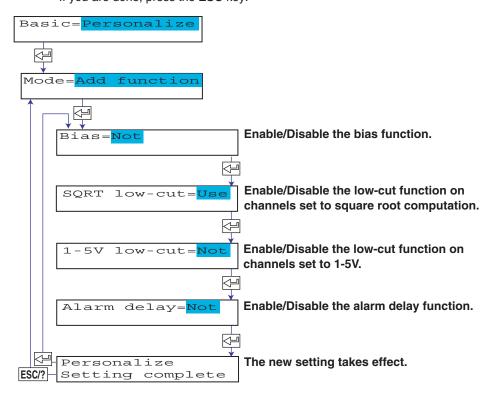

# **Applying the Changes and Returning to Operation Mode**

Press the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select **End** and then press the  $\lt \!\!\!\!-$  key. Press the  $\nabla \triangle$  key to select **Store** and then press the  $\lt \!\!\!\!-$  key. The changes are applied, and the screen returns to Operation mode. If you select **Abort** and press the  $\lt \!\!\!\!-$  key, the changes are discarded, and the screen returns to Operation mode. Press the **ESC** key to return to the **Basic=** screen.

# **Explanation**

#### **Bias**

Enables/Disables the bias function.

Use: Enables the setting of the bias value in Setting mode.

Not: The Bias item does not appear in Setting mode.

#### **SQRT low-cut**

Enables/Disables the square root low-cut function.

Use: Enables the setting of the low-cut function when a channel is set to square root computation in Setting mode.

Not: The SQRT low-cut item does not appear in Setting mode.

#### 1-5V low-cut

Enables/Disables the 1-5V low-cut function.

Use: Enables the setting of the low-cut function when a channel is set to 1-5V in Setting mode.

Not: The 1-5V low-cut item does not appear in Setting mode.

### Alarm delay

Enables/Disables the alarm delay function.

Use: Enables the setting of delay high limit alarm or delay low limit alarm for the alarm type.

Not: The delay high limit alarm and delay low limit alarm items do not appear as possible selections for the alarm type.

# 7.16 Changing the Time Printout Format

This section explains the details of changing the time printout format of alarm printout, message printout, recording start printout, and new chart speed printout.


Basic Setting mode cannot be entered when recording is in progress or when computation is in progress on models with the computation function (/M1 option).


# **Procedure**

#### **Changing the Settings**

- 1. Hold down the MENU key for 3 seconds to enter Setting mode.

- 5. Set each item and press the ∠ key.
  - Use the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select values.
  - For the procedure on how to enter values or characters, see section 4.2. If you press the **ESC** key in the middle of the operation, the settings entered up to then are cancelled, and the display returns to a higher level menu.
- 6. When the **Setting complete** screen appears, do either of the following: To correct the setting, press the ← key.



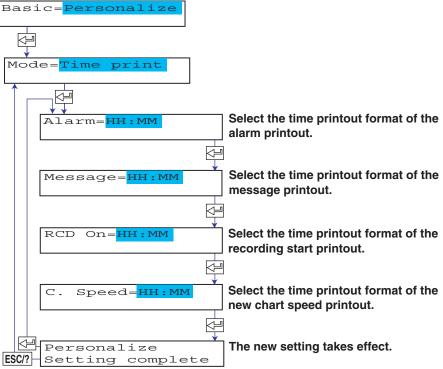

# **Applying the Changes and Returning to Operation Mode**

Press the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select **End** and then press the  $\triangleleft$  key. Press the  $\nabla \triangle$  key to select **Store** and then press the  $\triangleleft$  key. The changes are applied, and the screen returns to Operation mode. If you select **Abort** and press the  $\triangleleft$  key, the changes are discarded, and the screen returns to Operation mode. Press the **ESC** key to return to the **Basic=** screen.

# **Explanation**

#### **Alarms**

Sets the time printout format of the alarm printout.

HH:MM: Hour:Minute

HH:MM:SS: Hour:Minute:Second
M/D H:M: Month Day Hour:Minute

M/D H:M:S: Month Day Hour:Minute:Second YMD H:M:S: Month Day Year Hour:Minute:Second

# Message

Sets the time printout format of the message printout.

HH:MM: Hour:Minute

HH:MM:SS: Hour:Minute:Second
M/D H:M: Month Day Hour:Minute

M/D H:M:S: Month Day Hour:Minute:Second YMD H:M:S: Month Day Year Hour:Minute:Second

None: Does not print the date/time.

# **RCD On**

Sets the time printout format of the record start time printout.

The format is the same as that of the alarm printout.

# C. Speed

Selects the time printout format of the new chart speed printout.

The format is the same as that of the alarm printout.

# Note

The printout format of the year, month, and day varies depending on the printout/display format of the date (see section 7.19).

# 7.17 Initializing the Settings

This section explains the details of initializing the recorder settings to their factory default.

Be careful, because all settings except the date/time setting in the recorder will be initialized.

Basic Setting mode cannot be entered when recording is in progress or when computation is in progress on models with the computation function (/M1 option).


#### **Procedure**

- 1. Hold down the MENU key for 3 seconds to enter Setting mode.
- 3. Press the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select **Initialize** and then press the  $\langle \vdash \mid \text{key}.$
- 4. Press the ∇△ key to select the settings to be initialized and then press the <⊨ key.

Set: Initializes the settings in Setting mode.

Setup+Set: Initializes the settings in Basic Setting mode and Setting mode.

The settings are initialized, and the recorder returns to Operation mode. To cancel the initialization, press the **ESC** key The screen returns to the **Basic=Initialize** screen.

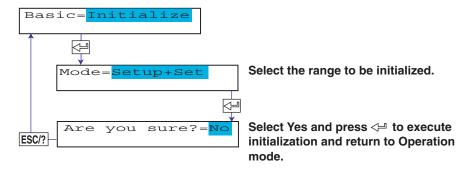

# **Explanation**

### **Items That Are Not Initialized**

The following items are not initialized.

- Adjustment value of the pen position and the adjustment value of the printer carriage position (Basic Setting mode)
- Date/Time (Setting mode)

# 7.18 Assigning Functions to the Remote Control Input Terminals (/R1 Option)

This section explains the details of assigning functions to the input terminals of the remote control function.


Basic Setting mode cannot be entered when recording is in progress or when computation is in progress on models with the computation function (/M1 option).

# Procedure

# **Changing the Settings**

- 1. Hold down the MENU key for 3 seconds to enter Setting mode.

- - Use the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select values.
  - For the procedure on how to enter values or characters, see section 4.2.
  - If you press the **ESC** key in the middle of the operation, the settings entered up to then are cancelled, and the display returns to a higher level menu.
- 5. When the Setting complete screen appears, do either of the following: To correct the setting, press the ∠ key. If you are done, press the ESC key.

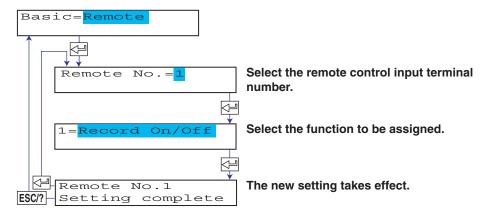

# Applying the Changes and Returning to Operation Mode

Press the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select **End** and then press the  $\lt \!\!\! -$  key. Press the  $\nabla \triangle$  key to select **Store** and then press the  $\lt \!\!\! -$  key. The changes are applied, and the screen returns to Operation mode. If you select **Abort** and press the  $\lt \!\!\! -$  key, the changes are discarded, and the screen returns to Operation mode. Press the **ESC** key to return to the **Basic**= screen.

# Explanation

#### Remote No.

The remote control terminal numbers are from 1 to 5.

# **Function to Be Assigned**

Record On/Off: Starts/stops recording.

Alarm ACK: Executes alarm output release.

Time adjust: Adjusts the internal clock to the nearest hour.

Manual print: Executes manual printout.

Message #: Prints message # (where # is a value between 1 and 5).

Chart speed: Changes the chart speed.

Math start/stop: Starts/stops the computation on the computation function (/M1 option). Math reset: Resets the computed result of the computation function (/M1 option).

None: No function is assigned.

# <Related Topics>

Setting the secondary chart speed: Section 6.9

# 7.19 Changing the Printout/Display Format of the Date


This section explains how to change the printout/display format of the year, month, and day.

Basic Setting mode cannot be entered when recording is in progress or when computation is in progress on models with the computation function (/M1 option).

# Procedure

# **Changing the Settings**

- 1. Hold down the MENU key for 3 seconds to enter Setting mode.
- 3. Press the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select **Date format** and then press the  $\rightleftharpoons$  key.
- 4. Set each item and press the <⊨ key.
  - Use the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select values.
  - For the procedure on how to enter values or characters, see section 4.2.
  - If you press the **ESC** key in the middle of the operation, the settings entered up to then are cancelled, and the display returns to a higher level menu.
- 5. When the Setting complete screen appears, do either of the following: To correct the setting, press the ∠ key. If you are done, press the ESC key.

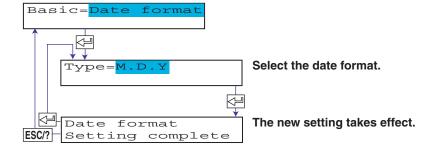

# Applying the Changes and Returning to Operation Mode

Press the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select **End** and then press the  $\rightleftharpoons$  key. Press the  $\nabla \triangle$  key to select **Store** and then press the  $\rightleftharpoons$  key. The changes are applied, and the screen returns to Operation mode. If you select **Abort** and press the  $\rightleftharpoons$  key, the changes are discarded, and the screen returns to Operation mode. Press the **ESC** key to return to the **Basic**= screen.

# Explanation

# **Date Format**

Setting	Format Example	Note
Y/M/D	2005/8/31	
M/D/Y	8/31/2005	
D/M/Y	31/8/2005	
D.M.Y	31.8.2005	
M.D.Y	Aug.31.2005	Default value

# 7.20 Changing the Temperature Unit

This section explains the details of changing the temperature unit on the temperature measurement channels.


Basic Setting mode cannot be entered when recording is in progress or when computation is in progress on models with the computation function (/M1 option).

# **Procedure**

#### **Changing the Settings**

- 1. Hold down the MENU key for 3 seconds to enter Setting mode.

- - Use the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select values.
  - For the procedure on how to enter values or characters, see section 4.2.
  - If you press the **ESC** key in the middle of the operation, the settings entered up to then are cancelled, and the display returns to a higher level menu.
- When the **Setting complete** screen appears, do either of the following:
   To correct the setting, press the ∠⊨ key.
   If you are done, press the **ESC** key.

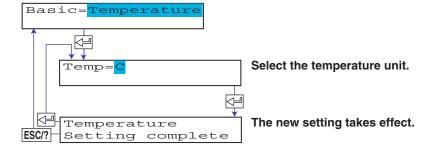

# Applying the Changes and Returning to Operation Mode

Press the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select **End** and then press the  $\rightleftharpoons$  key. Press the  $\nabla \triangle$  key to select **Store** and then press the  $\rightleftharpoons$  key. The changes are applied, and the screen returns to Operation mode. If you select **Abort** and press the  $\rightleftharpoons$  key, the changes are discarded, and the screen returns to Operation mode. Press the **ESC** key to return to the **Basic**= screen.

# **Explanation**

# **Temp (Temperature)**

The setting is applied to all temperature measurement channels.

C: Use Celsius.

F: Use Fahrenheit.

# 8.1 Key Operations for Changing the Displayed Information

# Displaying the Data Display Setup Screen

Hold the [TMENU] key for 3 seconds to show the data display setup screen.



The panel keys are set to the functions marked above the keys as shown below.



# Returning from the Data Display Setup Screen to Data Display Screen


Hold the will key for 3 seconds to return from the data display setup screen to data display screen.

# Note

When the data display setup screen is shown, operations such as measurement, alarm, and recording continue.

# **Data Display Setup Menu**

This menu is used to assign display types to screen 01 to 15. The \_\_\_\_\_ indicates a display type. The items to set for each type are shown to the right of the display type.

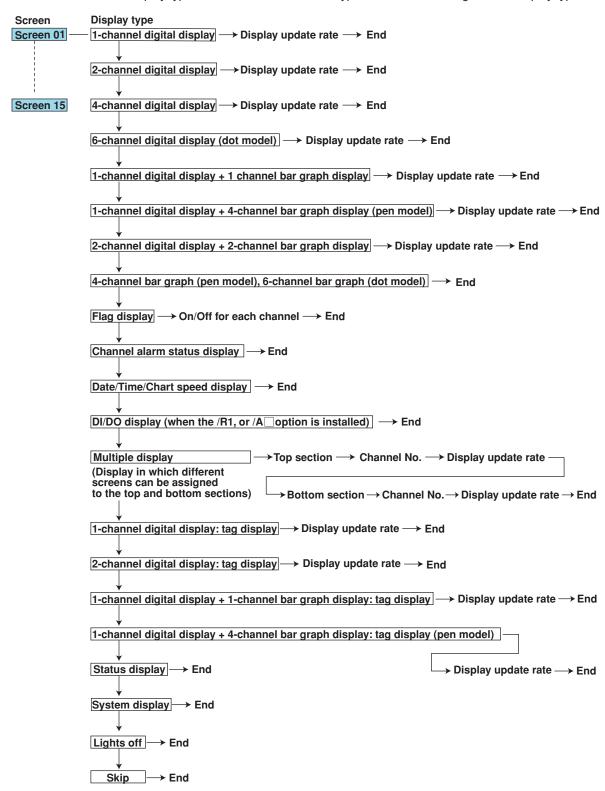

The display update rate corresponds to "Interval" in the setup menu. It is the time interval at which the displayed channel is switched.


# 8.2 Changing the Displayed Information

This section explains the details of registering display types to screens 01 to 15. As an example, the procedure of setting 1-channel digital display is explained below.

#### **Procedure**

# 1-Channel Digital Display

- 1. Hold the MENU key for 3 seconds to show the data display setup screen.
- 2. Press the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select the screen number and then press the  $\ll$  key.
  - A sample screen of the display type appears. A section of the display blinks to indicate that this is a data display setup screen.
- 3. Press the ∇△ or **SHIFT** + ∇△ key to switch the display. Select the 1-channel digital display and then press the ∠⊨ key.
- 5. When the **Setting complete** screen appears, press the ∠ key. Hold the week key down for 3 seconds to exit from the data display setup screen.

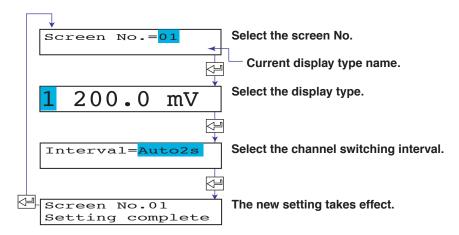

# **Explanation**

# Interval

Sets the channel switching interval.

Select the interval from 1 s, 2 s, 3 s, 4 s, 5 s, and manual.

1s, 2s, 3s, 4s, 5s: Switches the channels at the specified interval.

Manual: Switch the channel manually.

#### Assigning Other Display Types (See the menu on the previous page)

- When assigning the flag display, specify whether to display the flag for each channel.
- If the channel switching interval is set to manual when assigning the display in which different screens can be assigned to the top and bottom sections, set the channel number.

#### <Related Topics>

Display types: Section 12.4

# 9.1 Starting/Stopping/Resetting the Computation

This section explains the details of starting/stopping the computation and resetting the computed values of computation channels.

# **Procedure**

# **Starting the Computation**

- 1. Press the FUNC key.
- 2. Press the  $\nabla \triangle$  key to show **Math** and then press the  $\Leftrightarrow$  key.
- 3. Press the 🖂 key with **Start** shown on the screen.

The computation starts, and the screen switches to the data display screen. The word MATH in the status display comes on.

Math=Start

# **Stopping the Computation**

- 1. Press the FUNC key.
- 2. Press the  $\nabla \triangle$  key to show **Math** and then press the  $\triangleleft$  key.
- Press the ← key with Stop shown on the screen.
   The computation stops, and the screen switches to the data display screen.
   The word MATH in the status display clears.

Math=Stop

# Resetting the Computed Values of All Computation Channels to 0

This operation can be executed only when the computation is stopped.

- 1. Press the FUNC key.
- 2. Press the  $\nabla \triangle$  key to show **Math** and then press the  $\Leftrightarrow$  key.

Math=Reset

<sup>\*</sup> When the ◀ ▷ key or ▽△ key is pressed while holding down the SHIFT key, the operation is reversed as when the respective key is pressed by itself.

# 9.2 Setting the Computing Equation

The computing equation cannot be entered when the computation is in progress. If you change the computing equation or the recording span, set the alarm and the partial expanded recording again.

# Procedure


- 1. Hold down the MENU key for 3 seconds to enter Setting mode.

- 4. Set each item and press the ⟨⊨ key.
  Use the ∇△ key or SHIFT + ∇△ key to select values.

For the procedure on how to enter values or characters, see section 4.2.

If you press the ESC/? key in the middle of the operation, the settings entered up to then are cancelled, and the display returns to a higher level menu.

- When the Setting complete screen appears, do either of the following:Press the ← key to set other channels.If you are done, press the ESC/? key.
- 6. Hold down the MENU key for 3 seconds to return to Operation mode.

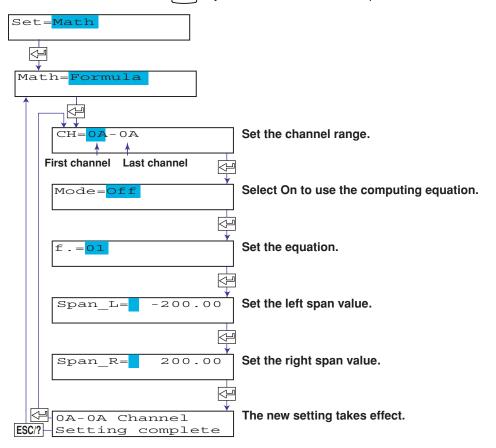

# **Setting the Computing Equation**

The **CHARACTER**,  $\nabla \triangle$ , and  $\triangleleft \triangleright$  keys are used to set the computing equation. Use the  $\triangleleft \triangleright$  key or **SHIFT** +  $\triangleleft \triangleright$  key to select the position for entering a character. Use the **CHARACTER** key or **SHIFT** + **CHARACTER** key to select the character type. Use the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select the character.

Each time you press the **CHARACTER** key the display changes as shown below. Pressing the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key switches the character within the selected character type and displays the character at the cursor position.

Display (CHARACTER key)	Description	Character (▽△ key)
01	Measurement channel No.	Pen model: 01 to 04 Dot model: 01 to 06
0A	Computation channel No.	Pen model: 0A, 0B, 0C, 0D, 0E, 0F, 0G, 0J Dot model: 0A, 0B, 0C, 0D, 0E, 0F, 0G, 0J, 0K, 0M, 0N, 0P
+, -, *, /	Symbol and space	+, -, *, /, (, ), space
Function	Function	SQR(, ABS(, LOG(, EXP(, .EQ., .NE., .GT., .LT., .GE., .LE., AND, NOT, XOR, OR, TLOG.AVE(, TLOG.MAX(, TLOG.MIN(, TLOG.SUM(, TLOG.P-P(, space
K01-K30	Constant	K01 to K30
D01-D05	Status of the remote	D01 to D05 control terminals
C01-C12	Communication input data	Pen model: C01 to C08 Dot model: C01 to C12
Ins DISP	Insert a character	
Del DISP	Delete a character	
Clear DISP	Delete the entire string	
Copy DISP	Store the entire string in the memory	
Past DISP	Paste the string in the memory	

# **Inserting a Character**

Press the  $\triangleleft \triangleright$  key or **SHIFT** +  $\triangleleft \triangleright$  key to move the cursor to the position where the character is to be inserted.

Press the **CHARACTER** key or **SHIFT** + **CHARACTER** key to show **Ins DISP** and then press the  $\nabla \triangle$  key. A space for one character is inserted. Enter the character.

#### **Deleting a Character**

Use the  $\triangleleft \triangleright$  key or **SHIFT** +  $\triangleleft \triangleright$  key to move the cursor to the character to be deleted. Press the **CHARACTER** key or **SHIFT** + **CHARACTER** key to show **Del DISP** and then press the  $\nabla \triangle$  key. The character is deleted.

# **Deleting an Entire Character String**

Press the **CHARACTER** key or **SHIFT** + **CHARACTER** key to show **Clear DISP** and then press the  $\nabla \triangle$  key. The entire character string is deleted.

### **Copying & Pasting a Character String**

Show the copy source character string.

Press the **CHARACTER** key or **SHIFT** + **CHARACTER** key to show **Copy DISP** and then press the  $\nabla \triangle$  key. The character string is saved to the memory. Show the copy destination.

Press the **CHARACTER** key or **SHIFT** + **CHARACTER** key to show **Paste DISP** and then press the  $\nabla \triangle$  key. The character string is pasted.

# Explanation

# **Computing Equation**

Follow the rules below when writing computing equations.

- Use up to 120 characters to write equations.
- The precedence of computing terms can be specified using parentheses.
- Specify the channels in the equation using 2-digit channel numbers.

Example: 01, 0A

• Specify the constants (K), communication input data (C), and remote control input terminal status (D) in the computing equation using 2-digit numbers.

Example: K01, C01, D01

• The data value for its own channel and channels that are greater in number than its own channel are substituted with the data from the previous scan.

# **Order of Precedence in Computations**

The order of precedence of computation in equations is as follows:

Туре	Operator
	(high order of precedence)
Function	ABS(), SQR(), LOG(), EXP(), TLOG.MAX(), TLOG.MIN(), TLOG.P-P(), TLOG.SUM(), TLOG.AVE()
Power	**
Logical negation	NOT
Multiplication and division	*, /
Addition and subtraction	+, -
Greater than and less than	.GT., .LT., GE., LE.
Equal and not equal	.EQ., .NE.
Logical product	AND
Logical sum and exclusive logical sum	OR, XOR
	(low order of precedence)

# **Data That Can Be Used in Equations**

In TLOG computation, the measured values of measurement channels or computed values of computation channels can only be used. For all other computations, all of the data types below can be used.

# • Measured Values on Measurement Channels

Specified by the channel No. For channels that have linear scaling enabled, the scaled values are used in the computation.

Pen model: 01 to 04, dot model: 01 to 06

#### • Computed Values on Computation Channels

Specified by the channel No.

Pen model: 0A, 0B, 0C, 0D, 0E, 0F, 0G, 0J

Dot model: 0A, 0B, 0C, 0D, 0E, 0F, 0G, 0J, 0K, 0M, 0N, 0P

#### Constants (K01 to K30)

Enter the values as K01 to K30 in the equations.

Range of values (maximum significant digits is 5):

-9.9999E+29 to -1.0000E-30, 0, 1.0000E-30 to 9.9999E+29

# • Communication Input Data (Pen model: C01 to C08, dot model: C01 to C12)

Enter the data as C01 to C12 in the equations.

Range of values (maximum significant digits is 5):

-9.9999E+29 to -1.0000E-30, 0, 1.0000E-30 to 9.9999E+29

For the procedure of setting the communication input data, see the *RD100B/RD1800B Communication Interface User's Guide*.

#### • Status of the Remote Control Input Terminal (D01 to D05, /R1 option)

The status of the remote control input signal (1 or 0) can be used in the computation. Use D01 to D05 (the number following the letter D is the remote control input terminal number) to specify the status in the equations.

# **Four Arithmetic Operation**

The data that can be used in equations are measured values, computed values, constants, communication input data, and remote control input terminal status.

# **Equation Examples**

Addition 01+02

(Determines the sum of the measured values of channel 1 and channel

2.)

• Subtraction 01-02

(Determines the difference of the measured values of channel 1 and

channel 2.)

Multiplication 01\*K03

(Multiplies constant K03 to the measured value of channel 1.)

Division 01/K02

(Divides the measured value of channel 1 by constant K02.)

#### Note

By setting an equation similar to the one shown below, you can determine the accumulation of a specified channel (in this case channel 01) and make the result the computed value of computation channel 0A.

Computing equation of computation channel 0A: 0A+01

# **Power and Other Computations**

The data that can be used in equations are measured values, computed values, constants, communication input data, and remote control input terminal status. You can nest a computing element inside the parentheses of another computing element.

# **Equation Examples**

• Power 01\*\*02

(Determines the measured value of channel 1 to the power of

the measured value of channel 2.)

Square root SQR(02)

(Determines the square root of the measured value of channel

2.)

Absolute value ABS(02)

(Determines the absolute value of the measured value of

channel 2.)

Common logarithm LOG(01)

(Determines the common logarithm (log<sub>10</sub>) of the measured

value of channel 1.)

Exponent EXP(01)

(Determines e to the power of the measured value of channel

1.)

# Note

You can determine the natural logarithm by setting an equation like the following.

From  $log_b X = log_a X/log_a$ , we obtain  $log_e X = log_{10} X/log_{10} e$ Hence, to determine the natural logarithm of channel 1, we set

Constant  $K01 = 0.43429(log_{10}e)$ 

Computing equation and set the equation to LOG(01)/K01.

# **Relational Computation**

The data that can be used in equations are measured values, computed values, constants, communication input data, and remote control input terminal status. You can specify a computing equation that performs relational computation on a computing element. (Example: 01.LT.ABS(02))

#### **Equation Examples**

#### 02.LT.03

If the measured value of channel 2 is less than the measured value of channel 3, the computed result is "1." Otherwise, the result is "0."

#### 02.GT.03

If the measured value of channel 2 is greater than the measured value of channel 3, the computed result is "1." Otherwise, the result is "0."

#### 02.EQ.03

If the measured value of channel 2 is equal to the measured value of channel 3, the computed result is "1." Otherwise, the result is "0."

#### 02.NE.03

If the measured value of channel 2 is not equal to the measured value of channel 3, the computed result is "1." Otherwise, the result is "0."

#### 02.GE.03

If the measured value of channel 2 is greater than or equal to the measured value of channel 3, the computed result is "1." Otherwise, the result is "0."

#### 02.LE.03

If the measured value of channel 2 is less than or equal to the measured value of channel 3, the computed result is "1." Otherwise, the result is "0."

# **Logical Computation**

Checks whether the two data values, e1 and e2 (e1 only for NOT), are zeroes or non-zeroes, and computes according to the conditions. The data that can be used in equations are measured values, computed values, constants, communication input data, and remote control input terminal status. You can specify a computing equation that performs logical computation on a computing element.

# AND

Logical Product

(Syntax) e1ANDe2

(Condition) If the two data values e1 and e2 are both non-zeroes, the computed

result is "1." Otherwise, it is "0."

$$e1 = 0$$
  
 $e2 = 0$   $\rightarrow$   $e1ANDe2 = 0$   
 $e1 \neq 0$   $\rightarrow$   $e1ANDe2 = 0$   
 $e2 = 0$   $\rightarrow$   $e1ANDe2 = 0$   
 $e2 \neq 0$   $\rightarrow$   $e1ANDe2 = 1$   
 $e2 \neq 0$   $\rightarrow$   $e1ANDe2 = 1$ 

OR

Logical sum

(Syntax) e10Re2

If the two data values e1 and e2 are both zeroes, the computed result is (Condition)

"0." Otherwise, it is "1."

(Explanation)

$$e1 = 0$$
 $e2 = 0$   $\Rightarrow$   $e1ORe2 = 0$ 

$$e1 \neq 0$$
 $e2 = 0$ 
 $e1ORe2 = 1$ 

$$e1 = 0$$
 $e2 \neq 0$   $\Rightarrow$   $e1ORe2 = 1$ 

$$\begin{array}{c}
e1 \neq 0 \\
e2 \neq 0
\end{array} \rightarrow \qquad e1ORe2 = 1$$

# **XOR**

Exclusive OR

e1XORe2 (Syntax)

(Condition) If the two data values e1 and e2 are zero and non-zero or non-zero and

zero, the computed result is "1." Otherwise, it is "0."

(Explanation) e1 = 0

$$e1 = 0$$
 $e2 = 0$ 
 $e1XORe2 = 0$ 

$$e1 \neq 0$$
 $e2 = 0$ 
 $e1XORe2 = 1$ 

$$e1 = 0$$
 $e2 \neq 0$ 
 $\Rightarrow$ 
 $e1XORe2 = 1$ 

$$\begin{array}{ccc}
e1 \neq 0 \\
e2 \neq 0
\end{array}$$

$$e1XORe2 = 0$$

# NOT

Logical negation

(Syntax) NOTe1

(Condition) The result is the inverse of the status of data e1 (zero or non-zero).

(Explanation)  $e1 = 0 \rightarrow$ NOTe1 = 1

NOTe1 = 0 $e1 \neq 0 \rightarrow$ 

# **Equation Example**

# 01-02OR03.GT.04

Determines the OR of the computed results of "01-02" and "03.GT.04".

# **TLOG Computation**

Only measured values and computed values can be used in TLOG computation. In the explanation below, e1 is used to represent a measurement or computation channel. You cannot specify an equation that contains a computing element inside e1. In addition, only one TLOG computation can be specified in a single computing equation.

# TLOG.MAX()

Maximum value

(Syntax) TLOG.MAX(e1)

(Condition) Determines the maximum value of channel e1.

# TLOG.MIN()

Minimum value

(Syntax) TLOG.MIN(e1)

(Condition) Determines the minimum value of channel e1.

# TLOG.AVE()

Average value

(Syntax) TLOG.AVE(e1)

(Condition) Determines the average value of channel e1.

# TLOG.SUM()

Sum value

(Syntax) TLOG.SUM(e1)

(Condition) Determines the sum of channel e1.

### TLOG.P-P()

Maximum – minimum value (Syntax) TLOG.P-P(e1)

(Condition) Determines the maximum – minimum value of channel e1.

# **Equation Example**

TLOG.MAX(01) + K01\*SQR(02)

# **Examples of Equations That Are Not Allowed**

TLOG.AVE(01) + TLOG.AVE(02)

Reason: TLOG appears twice in one equation.

TLOG.AVE(ABS(01))

Reason: A computing element is used inside the parentheses.


# 9.3 Setting the Unit

This section explains the details of setting the unit on computation channels.

# Procedure

- 1. Hold down the MENU key for 3 seconds to enter Setting mode.

- 4. Set each item and press the <⊨ key.
  - Use the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select values.
  - For the procedure on how to enter values or characters, see section 4.2. If you press the **ESC** key in the middle of the operation, the settings entered up to then are cancelled, and the display returns to a higher level menu.
- When the Setting complete screen appears, do either of the following:
   Press the ← key to set other channels.
   If you are done, press the ESC key.
- 6. Hold down the MENU key for 3 seconds to return to Operation mode.

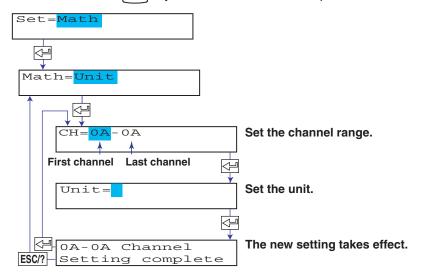

# **Explanation**

#### **Characters That Can Be Used for Units**

Set the unit using up to 6 characters.

The available characters are as follows:


Alphabet, numbers, symbols (%, #, °, @, +, -, \*, /, (, ),  $\mu$ ,  $\Omega$ ,  $^2$ ,  $^3$ , .), and space

# 9.4 Setting the Constants Used in Equations

This section explains the details of setting constants to be used in computing equations.

# **Procedure**

- 1. Hold down the MENU key for 3 seconds to enter Setting mode.
- 3. Press the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select **Constant** and then press the  $\Leftrightarrow$  key.
- 4. Set each item and press the <⊨ key.
  - Use the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select values.
  - For the procedure on how to enter values or characters, see section 4.2.
  - If you press the **ESC** key in the middle of the operation, the settings entered up to then are cancelled, and the display returns to a higher level menu.
- When the Setting complete screen appears, do either of the following:
   Press the ← key to set other channels.
   If you are done, press the ESC key.
- 6. Hold down the MENU key for 3 seconds to return to Operation mode.

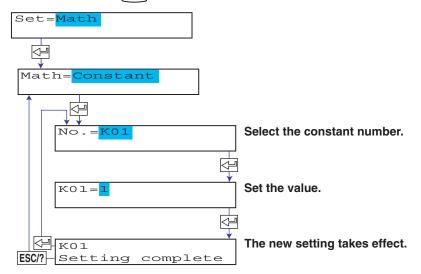

# Explanation

#### Constant

Up to 30 constants can be registered. Enter the values as K01 to K30 in the equations. Set the constants in the range shown below. The maximum number of significant digits is 5.


-9.9999E+29 to -1.0000E-30, 0, 1.0000E-30 to 9.9999E+29

# 9.5 Setting the Alarm

This section explains the details of setting alarms for each computation channel. If you change the computing equation or the recording span, set the alarm again.

#### **Procedure**

- 1. Hold down the MENU key for 3 seconds to enter Setting mode.
- 2. Press the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select **Math** and then press the  $\rightleftharpoons$  key.
- 3. Press the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select **Alarm** and then press the  $\lt \square$  key.
- 4. Set each item and press the <⊨ key.
  - Use the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select values.
  - For the procedure on how to enter values or characters, see section 4.2. If you press the **ESC** key in the middle of the operation, the settings entered up to then are cancelled, and the display returns to a higher level menu.
- 5. When the Setting complete screen appears, do either of the following: Press the ← key to set other channels. If you are done, press the ESC key.
- 6. Hold down the MENU key for 3 seconds to return to Operation mode.

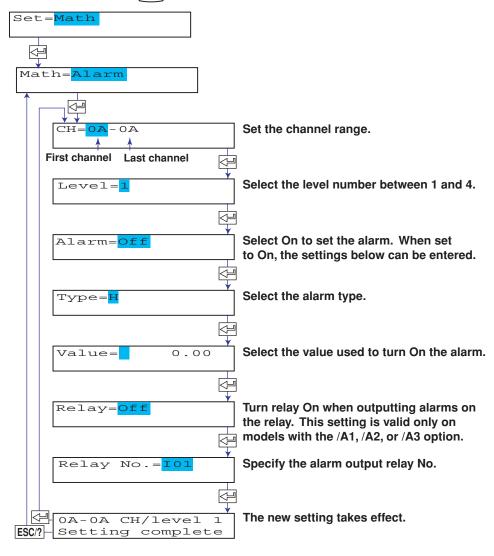

# **Explanation**

# **Alarm Type**

Symbol	Name
Н	High limit alarm
L	Low limit alarm
Т	Delay high limit alarm*
t	Delay low limit alarm*

<sup>\*</sup> Selectable only when the alarm delay function is enabled. See section 7.15.

If delay high limit alarm or delay low limit alarm is specified, set the alarm delay time.

# <Related Topics>

Setting the delay time of the delay high limit alarm or delay low limit alarm: Section 9.11 Enabling the alarm delay function: Section 7.15

Setting the alarm hysteresis: Section 7.1

#### **Alarm Value**

Can be set to a value in the range of –9999999 to 99999999 excluding the decimal (– 99999999 to 999999999 is the displayable range).

# Relay No.

The selectable relay numbers are listed below.

I01 and I02 on the /A1 option

101, 102, 103, and 104 on the /A2 option

101, 102, 103, 104, 105, and 106 on the /A3 option


# 9.6 Specifying the Timer Used in Statistical Calculations (TLOG)

On channels that perform statistical calculation (TLOG), the timer for determining the interval is specified. The sum scale is also specified when using statistical calculation. The timer is also used for the periodic printout of computed values.

#### Procedure

- 1. Hold down the MENU key for 3 seconds to enter Setting mode.

- 4. Set each item and press the  $\Leftrightarrow$  key.
  - Use the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select values.
  - For the procedure on how to enter values or characters, see section 4.2. If you press the **ESC** key in the middle of the operation, the settings entered up to then are cancelled, and the display returns to a higher level menu.
- 5. When the Setting complete screen appears, do either of the following: Press the ← key to set other channels. If you are done, press the ESC key.
- 6. Hold down the MENU key for 3 seconds to return to Operation mode.

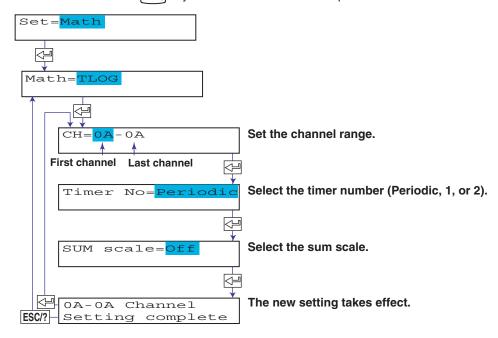

# **Explanation**

#### Timer No.

There are three timers.

Periodic: The timer for determining the periodic printout interval. The computed result is printed every interval, and the computed TLOG value is reset.

- 1: The timer of timer No. 1. Specify whether the computed value is printed every interval and whether to reset the computed value.
- 2: The timer of timer No. 2. Specify whether the computed value is printed every interval and whether to reset the computed value.

# • Timer operation

The table below shows how each timer operates.

Timer #	Periodic	1 and 2*
Application	Periodic	TLOG computation
Target channel	Measurement and computation channels	Computation channels
Timer mode**	Absolute time mode	Absolute or relative time mode
Reset computed TLOG value	Yes	Yes/No selectable
Print when computation	No	Yes
stops		

<sup>\*</sup> For the timer 1 and 2 settings, see section 9.12.

Relative time mode: Starts the time in sync with the starting of the computation.

#### **SUM** scale

Set the sum scale when using statistical calculation (TLOG.SUM).

For the definition of the term "sum scale," see page 7-14.

Off: Simply sums the computed values.

/s: Sums by converting the computed values to a value over 1 second.

/min: Sums by converting the computed values to a value over 1 minute.

h: Sums by converting the computed values to a value over 1 hour.

/day: Sums by converting the computed values to a value over 1 day.

#### <Related Topics>

Setting the periodic printout timer: Section 7.8 Setting Timer 1 and Timer 2: Section 9.12


<sup>\*\*</sup> Absolute time mode: Keeps time from the reference time.

# 9.7 Setting Recording Zones for Each Channel (Zone Recording)

This section explains the details of setting the recording zone for each computation channel.

#### **Procedure**

- 1. Hold down the MENU key for 3 seconds to enter Setting mode.
- 2. Press the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select **Math** and then press the  $\angle \square$  key.
- 3. Press the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select **Aux** and then press the  $\triangleleft$  key.
- 4. Press the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select **Zone** and then press the  $\triangleleft$  key.
- 5. Set each item and press the <⊨ key.
  - Use the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select values.
  - For the procedure on how to enter values or characters, see section 4.2.
  - If you press the **ESC** key in the middle of the operation, the settings entered up to then are cancelled, and the display returns to a higher level menu.
- 6. When the **Setting complete** screen appears, do either of the following: Press the ⟨⊨ key to set other channels.
  - If you are done, press the **ESC** key.
- 7. Hold down the MENU key for 3 seconds to return to Operation mode.

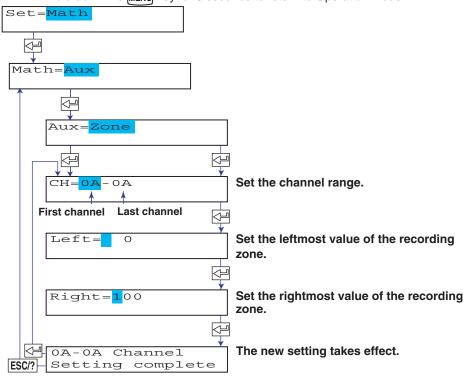

#### Explanation

#### Zone

The recording zone can be set in the following range.

Leftmost position: 0 mm to 95 mm Rightmost position: 5 mm to 100 mm

Set a larger value for the rightmost position than the leftmost position.

Set at least 5 mm for the zone width.

# Note

If the zone is set to a value less than 40 mm, scale printout of periodic printout cannot be executed.


# 9.8 Setting the Partial Expanded Recording

This section explains the details of expanding a section of the recording range. If you change the computing equation or the recording span, set the partial expanded recording again.

# Procedure

- 1. Hold down the MENU key for 3 seconds to enter Setting mode.

- 5. Set each item and press the <⊨ key.
  - Use the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select values.
  - For the procedure on how to enter values or characters, see section 4.2.
  - If you press the **ESC** key in the middle of the operation, the settings entered up to then are cancelled, and the display returns to a higher level menu.
- 6. When the Setting complete screen appears, do either of the following: Press the ⟨⊨ key to set other channels. If you are done, press the ESC key.
- 7. Hold down the MENU key for 3 seconds to return to Operation mode.

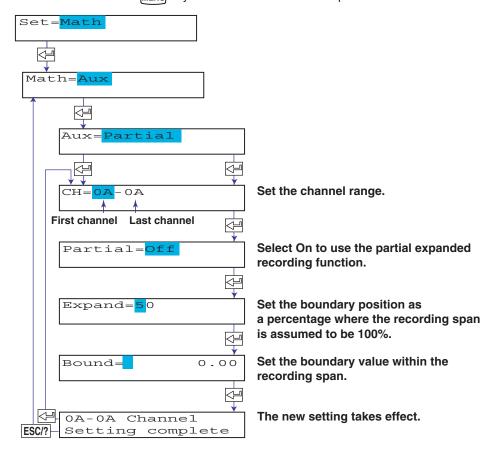

#### <Related Topics>

Enabling the partial expanded recording function: Section 7.13

# 9.9 Turning Trend Recording (Dot Model) and Periodic Printout ON/OFF for Each Channel

This section explains the details of setting the trend recording and periodic printout for each computation channel.

The following settings can be entered for each channel on the dot model.

- · Turn trend recording ON/OFF.
- Turn the printing of computed values ON/OFF during periodic printout.


The following setting can be entered for each channel on the pen model.

• Turn the printing of computed values ON/OFF during periodic printout.

# Procedure

- 1. Hold down the MENU key for 3 seconds to enter Setting mode.
- 3. Press the ∇△ key or **SHIFT** + ∇△ key to select **Aux** and then press the <⊨ key.
- 4. Press the ∇△ key or **SHIFT** + ∇△ key to select **Print out** and then press the ∠⊨ key.
- 5. Set each item and press the <⊢ key.
  - Use the  $\nabla \triangle$  key or **SHIFT**  $+\nabla \triangle$  key to select values.
  - For the procedure on how to enter values or characters, see section 4.2. If you press the **ESC** key in the middle of the operation, the settings entered up to then are cancelled, and the display returns to a higher level menu.
- 6. When the **Setting complete** screen appears, do either of the following: Press the ← key to set other channels.

  If you are done, press the **ESC** key.
- 7. Hold down the MENU key for 3 seconds to return to Operation mode.

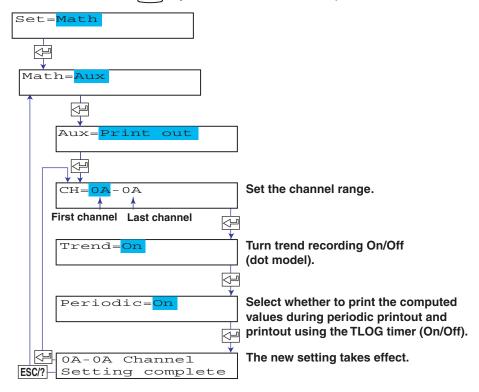


# 9.10 Setting Tags on Channels

This section explains the details of setting the tag on computation channels.

# **Procedure**

- 1. Hold down the MENU key for 3 seconds to enter Setting mode.

- 5. Set each item and press the ⟨→ key.
  - Use the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select values.
  - For the procedure on how to enter values or characters, see section 4.2.
  - If you press the **ESC** key in the middle of the operation, the settings entered up to then are cancelled, and the display returns to a higher level menu.
- 6. When the **Setting complete** screen appears, do either of the following: Press the ⟨⊨ key to set other channels. If you are done, press the **ESC** key.
- 7. Hold down the MENU key for 3 seconds to return to Operation mode.

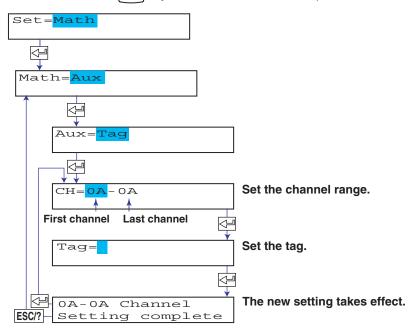

# Explanation

# **Characters That Can Be Used for Tags**

Set the tag using up to 7 characters.

The available characters are as follows:

Alphabet, numbers, symbols (%, #,  $^{\circ}$ , @, +, -,  $^{*}$ , /, (, ),  $\mu$ ,  $\Omega$ ,  $^{2}$ ,  $^{3}$ , .), and space

#### <Related Topics>

Printing tags in place of channel numbers: Section 7.7


# 9.11 Setting the Alarm Delay Duration

This section explains the details of setting the duration of the delay high limit and delay low limit alarms.

# **Procedure**

- 1. Hold down the MENU key for 3 seconds to enter Setting mode.

- - Use the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select values.
  - For the procedure on how to enter values or characters, see section 4.2. If you press the **ESC** key in the middle of the operation, the settings entered up to then are cancelled, and the display returns to a higher level menu.
- 6. When the **Setting complete** screen appears, do either of the following:
   Press the ← key to set other channels.
   If you are done, press the **ESC** key.
- 7. Hold down the MENU key for 3 seconds to return to Operation mode.

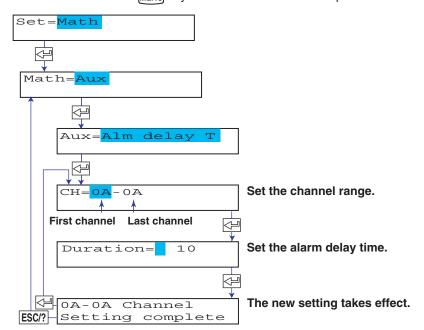

# Explanation

#### **Duration**

The duration can be set to a value in the range of 1 to 3600 s.

However, if the scan interval on the dot model is 2.5 s, the actual duration is an integer multiple of 2.5 s. If the set value is not equal to an integer multiple of 2.5 s, the duration is the smallest integer multiple of 2.5 s greater than the set value.

Example: The actual duration for 1 s and 2 s is 2.5 s.

# <Related Topics>

Enabling the alarm delay function: Section 7.15

# 9.12 Setting the Timer Used in TLOG Computation and Periodic Printout

This section explains the details of setting the timer used in TLOG computation and periodic printout.


Basic Setting mode cannot be entered when recording is in progress or when computation is in progress on models with the computation function (/M1 option).

# **Procedure**

# **Changing the Settings**

- 1. Hold down the MENU key for 3 seconds to enter Setting mode.

- 4. Press the ⟨→ key with **Timer (TLOG)** shown on the screen.
- 5. Set each item and press the <⊨ key.
  - Use the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select values.
  - For the procedure on how to enter values or characters, see section 4.2. If you press the **ESC** key in the middle of the operation, the settings entered up to then are cancelled, and the display returns to a higher level menu.
- 6. When the **Setting complete** screen appears, do either of the following: To correct the setting, press the ∠⊨ key.
  If you are done, press the **ESC** key.

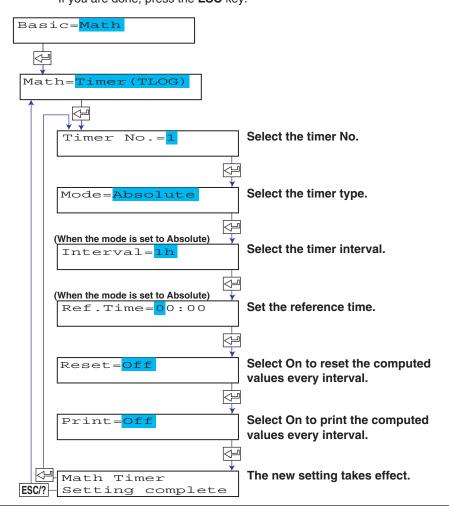

# Applying the Changes and Returning to Operation Mode

Press the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select **End** and then press the  $\lt \!\!\!\!-$  key. Press the  $\nabla \triangle$  key to select **Store** and then press the  $\lt \!\!\!\!-$  key. The changes are applied, and the screen returns to Operation mode. If you select **Abort** and press the  $\lt \!\!\!\!-$  key, the changes are discarded, and the screen returns to Operation mode. Press the **ESC** key to return to the **Basic**= screen.

#### **Explanation**

#### **Timers**

Timer features

- The timer determines the interval used to calculate the report data (the average, minimum, maximum, sum value), etc.
- The timer is also used to set the interval at which the computed values are printed on the chart paper.

#### **Number of Timers**

There are two timers: Timer No. 1 and 2.

#### **Timer Type**

There are two timer modes, absolute time mode and relative time mode.

#### • Absolute Time Mode

After the computation is started, the timer times out at the times determined by the reference time (on the hour) and the interval. The reference time is set on the hour (00 to 23).

Example 1: Reference time: 14:00

Interval: 12h

The timeout times are hour 2 and hour 14.

Example 2: Reference time: 00:00

Interval: 10min

The timeout times are 0 hour, 0 hour 10 min, 0 hour 20 min, ... 23 hour 40 min, and 23 hour 50 min. For example, if computation is started at 9 hour 36 min, the timeout times are 09 hour 40 min, 09 hour 50 min, 10 hour, and so on.

# Relative Time Mode

The clock is started in sync with the starting of the computation, and the timer times out every specified interval. In this mode, the timer and the clock stop when a power failure occurs.

Example: Interval: 00:15

The timer times out every 15 minutes after the computation is started.

# **Setup Item and Corresponding Display**

Display	Description
Absolute	Absolute time mode
Relative	Relative time mode
Ref. Time	Reference time
Interval	Interval

For absolute time mode timers, set the reference time and interval; for relative time mode timers, set the interval.

#### **Timers That Are Used**


The timer that is used can be set for each channel.

# <Related Topics>

Setting the timer to be used for each channel: Section 9.6

# Reset

Selects whether to reset the TLOG computed value at each interval. The figure below illustrates the reset operation for sum computation (TLOG.SUM).

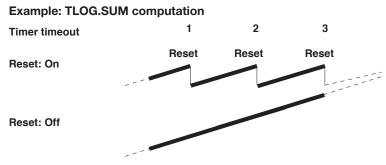

When reset is ON, the sum value is calculated over each interval. When set to Off, the sum value from computation start is calculated.

# **Printout**

On: Prints the computed value every interval specified by the timer. Computation channels set to Off do not apply.

Off: Does not print.

# 9.13 Changing the Channel Recording Color (Dot Model)

This section explains the details of changing the recording colors of computation channels.


Basic Setting mode cannot be entered when recording is in progress or when computation is in progress on models with the computation function (/M1 option).

# **Procedure**

#### **Changing the Settings**

- 1. Hold down the MENU key for 3 seconds to enter Setting mode.

- 4. Press the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select **Color** and then press the  $\rightleftharpoons$  key.
- 5. Set each item and press the ⟨→ key.
  - Use the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select values.
  - For the procedure on how to enter values or characters, see section 4.2. If you press the **ESC** key in the middle of the operation, the settings entered up to then are cancelled, and the display returns to a higher level menu.
- 6. When the **Setting complete** screen appears, do either of the following: To correct the setting, press the ⟨⊨ key. If you are done, press the **ESC** key.

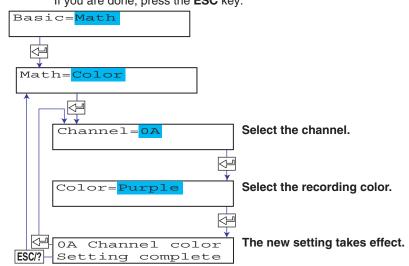

# Applying the Changes and Returning to Operation Mode

Press the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select **End** and then press the  $\lt \!\!\!\!-$  key. Press the  $\nabla \triangle$  key to select **Store** and then press the  $\lt \!\!\!\!-$  key. The changes are applied, and the screen returns to Operation mode. If you select **Abort** and press the  $\lt \!\!\!\!-$  key, the changes are discarded, and the screen returns to Operation mode. Press the **ESC** key to return to the **Basic**= screen.

#### **Explanation**

#### Color

This section explains the details of changing the recording colors of computation channels.

The default values are as follows:

Purple: channel 0A, 0G, Red: channel 0B, 0J, Green: channel 0C, 0K, Blue: channel 0D, 0M, Brown: channel 0E, 0N, Black: channel 0F, 0P

# 9.14 Changing the Channel Assignments of Recording Pens (Pen Model)

Measurement channels and computation channels can be arbitrarily assigned to recording pens.

Basic Setting mode cannot be entered when recording is in progress or when computation is in progress on models with the computation function (/M1 option).


## Procedure

#### **Changing the Settings**

- 1. Hold down the MENU key for 3 seconds to enter Setting mode.

- 4. Press the ∇△ key or **SHIFT** + ∇△ key to select **Output pen** and then press the ∠⊨ key.
- 5. Set each item and press the <⊨ key.
  - Use the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select values.
  - For the procedure on how to enter values or characters, see section 4.2.
  - If you press the **ESC** key in the middle of the operation, the settings entered up to then are cancelled, and the display returns to a higher level menu.
- 6. When the **Setting complete** screen appears, do either of the following: To correct the setting, press the ⟨⊢ key.

If you are done, press the ESC key.

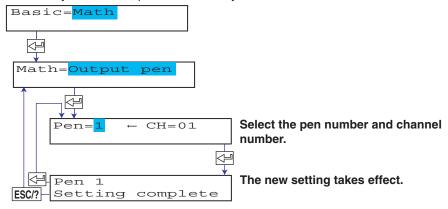

#### Applying the Changes and Returning to Operation Mode

Press the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select **End** and then press the  $\lt \!\!\! -$  key. Press the  $\nabla \triangle$  key to select **Store** and then press the  $\lt \!\!\! -$  key. The changes are applied, and the screen returns to Operation mode. If you select **Abort** and press the  $\lt \!\!\! -$  key, the changes are discarded, and the screen returns to Operation mode. Press the **ESC** key to return to the **Basic**= screen.

#### **Explanation**

#### Output pen

Measurement channels and computation channels can be arbitrarily assigned to recording pens.

The default values are as follows:

Pen No. 1 (red): Channel 01 Pen No. 2 (green): Channel 02 Pen No. 3 (Blue): Channel 03 Pen No. 4 (violet): channel 04

# 9.15 Changing the Type of Report Data Printed in Periodic Printout

This section explains the details of selecting the type of computed value (the average, minimum, maximum, sum, or instantaneous) printed in periodic printout


Basic Setting mode cannot be entered when recording is in progress or when computation is in progress on models with the computation function (/M1 option).

#### **Procedure**

#### **Changing the Settings**

- 1. Hold down the MENU key for 3 seconds to enter Setting mode.

- 5. Set each item and press the ⟨→ key.
  Use the ∇△ key or SHIFT + ∇△ key to select values.
  For the procedure on how to enter values or characters, see section 4.2.
  If you press the ESC key in the middle of the operation, the settings entered up to then are cancelled, and the display returns to a higher level menu.
- 6. When the **Setting complete** screen appears, do either of the following: To correct the setting, press the ⇐ key. If you are done, press the **ESC** key.

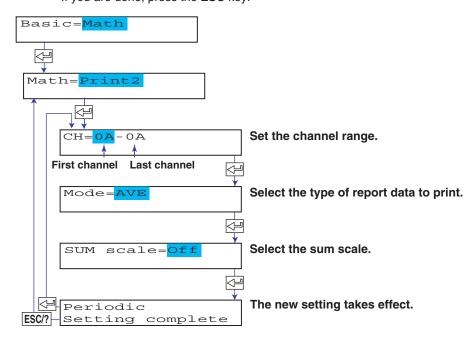

#### Applying the Changes and Returning to Operation Mode

Press the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select **End** and then press the  $\lt \!\!\!\!-$  key. Press the  $\nabla \triangle$  key to select **Store** and then press the  $\lt \!\!\!\!-$  key. The changes are applied, and the screen returns to Operation mode. If you select **Abort** and press the  $\lt \!\!\!\!-$  key, the changes are discarded, and the screen returns to Operation mode. Press the **ESC** key to return to the **Basic**= screen.

#### Explanation

#### Mode

Sets the type of report data to be printed.

AVE: Prints the average value over the interval.

MIX: Prints the minimum, maximum, and average values over the interval.

SUM: Prints the sum value over the interval. If SUM is selected, set the sum scale.

MIN: Prints the minimum value over the interval.

MAX: Prints the maximum value over the interval.

INST: Prints the instantaneous value.

#### **SUM** scale

Set this item only when SUM is selected.

For the definition of the term "sum scale," see page 7-14.

Off: Simply sums the computed values.

/s: Sums by converting the computed values to a value over 1 second.
/min: Sums by converting the computed values to a value over 1 minute.
/h: Sums by converting the computed values to a value over 1 hour.
/day: Sums by converting the computed values to a value over 1 day.

#### <Related Topics>

Setting the periodic printout interval: Section 7.8

# 9.16 Setting the Bar Graph Display Mode


This section explains the details of setting the bar graph display mode. Basic Setting mode cannot be entered when recording is in progress or when computation is in progress on models with the computation function (/M1 option).

#### Procedure

#### **Changing the Settings**

- 1. Hold down the MENU key for 3 seconds to enter Setting mode.

- 4. Press the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select **Bar graph** and then press the  $\Leftrightarrow$  key.
- 5. Set each item and press the <⊨ key.</li>Use the ∇△ key or SHIFT + ∇△ key to select values.
  - For the procedure on how to enter values or characters, see section 4.2. If you press the **ESC** key in the middle of the operation, the settings entered up to then are cancelled, and the display returns to a higher level menu.
- 6. When the **Setting complete** screen appears, do either of the following: Press the ⟨⊨ key to set other channels. If you are done, press the **ESC** key.

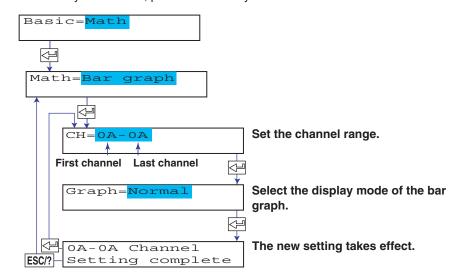

#### Applying the Changes and Returning to Operation Mode

Press the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select **End** and then press the  $\lt \!\!\!\!-$  key. Press the  $\nabla \triangle$  key to select **Store** and then press the  $\lt \!\!\!\!-$  key. The changes are applied, and the screen returns to Operation mode. If you select **Abort** and press the  $\lt \!\!\!\!-$  key, the changes are discarded, and the screen returns to Operation mode. Press the **ESC** key to return to the **Basic**= screen.

#### Explanation

#### Graph

Normal: Sets the base point of the bar graph to the left or right of the recording span

whichever is smaller in value.

Center: Sets the base point of the bar graph to the 50% position of the recording span.

# 9.17 Setting the Procedure Taken When the Computed Result Is in Error

This section explains the details of setting the procedure taken when the computed result is in error.


Basic Setting mode cannot be entered when recording is in progress or when computation is in progress on models with the computation function (/M1 option).

#### Procedure

#### **Changing the Settings**

- 1. Hold down the MENU key for 3 seconds to enter Setting mode.

- 4. Press the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select **Error data** and then press the  $\Leftrightarrow$  key.
- 5. Set each item and press the ⟨⊨ key.
  - Use the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select values.
  - For the procedure on how to enter values or characters, see section 4.2.
  - If you press the **ESC** key in the middle of the operation, the settings entered up to then are cancelled, and the display returns to a higher level menu.
- 6. When the **Setting complete** screen appears, do either of the following: Press the ← key to set other channels.

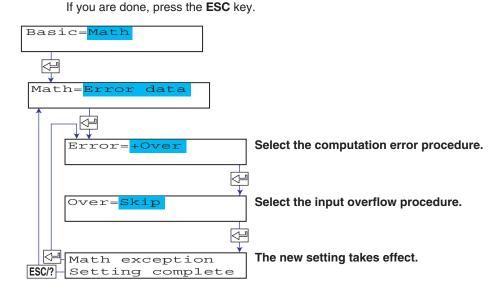

#### Applying the Changes and Returning to Operation Mode

Press the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select **End** and then press the  $\lt \!\!\!\!-$  key. Press the  $\nabla \triangle$  key to select **Store** and then press the  $\lt \!\!\!\!-$  key. The changes are applied, and the screen returns to Operation mode. If you select **Abort** and press the  $\lt \!\!\!\!-$  key, the changes are discarded, and the screen returns to Operation mode. Press the **ESC** key to return to the **Basic**= screen.

#### Explanation

#### **Error**

Specifies how to display or print the computed result when computation errors occur.

- +Over: Set to +over. Displayed/Printed as "+Over."
- -Over: Set to -over. Displayed/Printed as "-Over."

Computation that result in errors

- x/0
- SQR(-x)
- LOG(-x)
- · When a channel set to Skip is included in the equation

#### Over

Selects the procedure when an "over" value is input for TLOG.SUM or TLOG.AVE computation.

\* An "over" value on a measurement channel refers to +Over or -Over. See section 12.4. An "over" value on a computation channel refers to a value that is less than or equal to -100000000 or greater than or equal to 100000000 excluding the decimal.

Skip: The "over" value is not used in the computation.

Limit: The following limit value is used for the computation.

Channel	Limit Value
Measurement channel	<ul> <li>For scaling (1-5V, scaling, and square root)</li> <li>–Over: –315000, +Over: 31500 (excluding the decimal)</li> </ul>
	For input types other than scaling     Over: The minimum measurable value at the specified range type     (Example: -2.000 at 2V range)     +Over: The maximum measurable value at the specified range type     (Example: 2.000 at 2V range)
Computation channel	-Over: -100000000, +Over: 100000000 (excluding the decimal)

# 10.1 A List of Error Messages

There are cases in which error codes and messages are displayed on the screen during operation. The error messages and their description are listed below.

# **Setting Errors**

	_	
Code	Message	Explanation/Countermeasures
1	System error.	Contact OMEGA.
2	Incorrect date or time setting.	Check the setting.
3	A disabled channel is selected.	The channel does not exist.
4	Incorrect function parameter.	Incorrect communication parameter.
5	The input numerical value exceeds the set range.	-
6	Incorrect input character string.	The entered character cannot be used.
7	Too many characters.	_
8	Incorrect input mode.	Incorrect range mode (Volt, TC, Scale, etc.) setting.
9	Incorrect input range code.	Incorrect range type (2 V, R, PT100, etc.) setting.
10	Format error.	Incorrect character string format.
11	Range settings are not same within the selected channels.	Channels whose range differs cannot be set simultaneously.
12	An invalid characters.	Contains an invalid character.
13	Ref. CH error.	Specify a channel whose range is set to voltage, TC, or RTD for the reference channel.
21	Cannot set an alarm for a SKIPPED channel.	-
22	The upper and lower span limits are equal.	This is not allowed.
23	The upper and lower scale limits are equal.	This is not allowed.
24	The lower span limit is greater than the upper span limit.	-
25	The lower scale limit is greater than the upper scale limit.	-
26	Bias cannot be set to the SKIPPED channel.	-
27	Bias cannot be set to the DI channel.	_
30	The partial boundary value exceeds the range of the span.	-
31	Partial is invalid on the SKIPPED channel.	_
35	The upper and lower limits of the printing zone are equal.	Set the rightmost value of the zone – the leftmost value $\geq 5$ mm.
36	The lower limit of the printing zone is greater than the upper limit.	Set the rightmost value of the zone – the leftmost value $\geq 5$ mm.
37	The printing zone is narrower than the minimum width (5 mm).	Set the rightmost value of the zone – the leftmost value $\geq 5$ mm.
38	Partial is invalid on the DI channel.	-
47	All items in DISP menu parameters are set to SKIP.	-
48	Start = Finish.	The DST start time and end time cannot be set to the same time
49	Invalid or missing DST time settings.	Since the time gains one hour when the DST starts, the set-up time does not exist.
61	There is no channel specified by the MATH expression.	Set a computation channel.
62	MATH expression grammar is incorrect.	Enter the equation correctly.
63	MATH expression sequence is incorrect.	Enter the equation correctly.
64	MATH upper and lower span values are equal.	This is not allowed.
70	MATH constant description is incorrect.	Incorrect computation constant syntax.
71	The range of the MATH constant is exceeded.	_

## 10.1 A List of Error Messages

Code	Message	Explanation/Countermeasures
72	MATH channel is turned off	-
81	All space or 'quit' string cannot be specified.	-
86	The key-lock release password is incorrect.	Enter the correct password.
87	This key is locked.	-
91	Password is incorrect.	Enter the correct password.
100	IP address doesn't belong to class A, B, or C.	-
101	The result of the masked IP address is all 0s or 1s.	-
102	SUBNET mask is incorrect.	Set a correct subnet mask.
103	The net part of default gateway is not equal to that of IP address.	Set the correct default gateway.
151	This action is invalid during calculation.	-
160	This action is invalid during chart end.	-
161	This action is invalid during pen hold.	-
162	Cannot set an number for a skipped data.	-
163	This action is invalid during record.	-
164	This action is invalid during manual printing.	-
165	This action is invalid during list printing.	-
166	This action is invalid during setup list printing.	-
167	This action is invalid during chart feed.	-
169	This action is invalid during ribbon hold.	-

# **Operation Errors**

Code	Message	Explanation/Countermeasures
232	There is no available data.	There is no data for periodic printout or data for calculating TLOG
		when the timer expired.

## **Communication Errors**

Code	Message	Explanation/Countermeasures
300	Command is too long.	-
301	Too many number of commands delimited with ';'.	Keep the number of commands separated by sub delimiters under 10.
302	This command has not been defined.	_
303	Data request command can not be enumerated with sub-delimiter.	-
350	Command is not permitted to the current user level.	-
351	This command cannot be specified in the current mode.	-
352	The option is not installed.	-
353	This command cannot be specified in the current setting.	-
354	This command is not available during calculation.	-
390	Command error.	-
391	Delimiter error.	-
392	Parameter error.	-
393	No permission.	_
394	No such connection.	-
395	Use "quit" to close this connection.	Attempted to disconnect its own connection.
396	Failed to disconnect.	-
397	No TCP control block.	The control block of the specified connection cannot be found

Code	Message	Explanation/Countermeasures
400	Input username.	-
401	Input password.	-
402	Select username from 'admin' or 'user'.	If the recorder is configured not to use the user name and password, use user names 'admin' or 'user'.
403	Login incorrect, try again!	-
404	No more login at the specified level is acceptable.	-
420	Connection has been lost.	-
421	The number of simultaneous connection has been exceeded.	-
422	Communication has timed-out.	-

# **Warning Messages**

Code	ode Message Explanation/Countermeasures	
600	Initialized.	Settings and measured data have been initialized.


# **System Errors**

Code	Message	Explanation/Countermeasures	
902	RAM failure.	Contact OMEGA.	
910	A/D error.	Contact OMEGA.	
921	A/D calibration value error.	Contact OMEGA.	
922	A/D calibration is in the wrong order.	Contact OMEGA.	
930	Memory acquisition failure.	Contact OMEGA.	
940	The ethernet module is down.	Contact OMEGA.	
950	A/D number error.	Contact OMEGA.	
951	EEPROM write error.	Contact OMEGA.	
960	Ribbon error	Contact OMEGA.	
961	Printer error	Contact OMEGA.	
962	Plotter error	Contact OMEGA.	
963	Pen 1 error	Contact OMEGA.	
964	Pen 2 error	Contact OMEGA.	
965	Pen 3 error	Contact OMEGA.	
966	Pen 4 error	Contact OMEGA.	


# 10.2 Troubleshooting Flow Charts


Follow the flow charts to correct the problem.


Nothing works (pen and chart paper do not move).

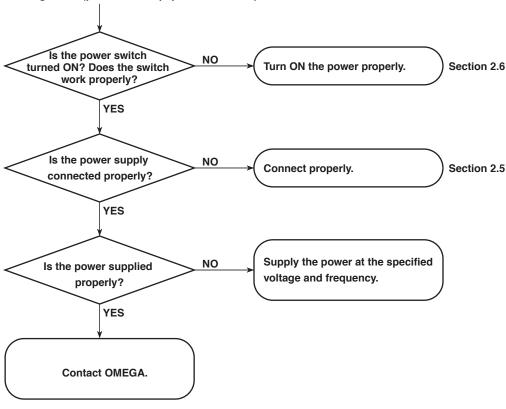


- The reading error is large.
- · The indication is unstable.
- The pen is off the scale on either the 0% or 100% side.

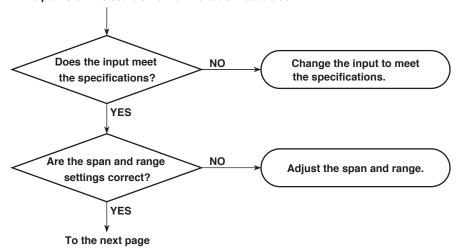

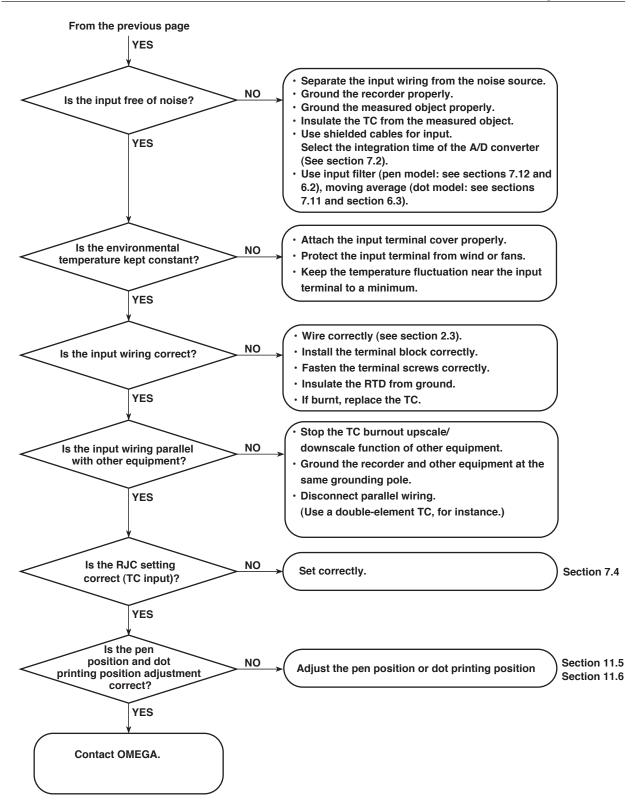

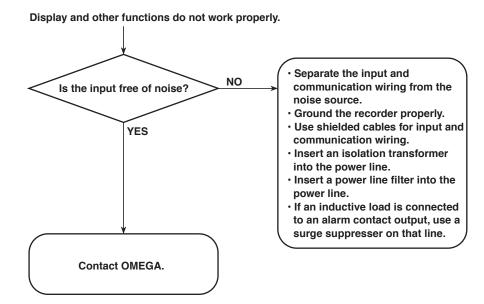

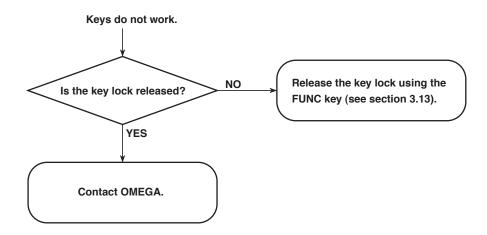


Check the operation periodically to keep the recorder in good working order. Perform the following checks and replace worn parts as needed.

- Is the indication and recording functioning properly? If not, see chapter 10.
- Are recorded lines or printed characters clear (not blurred)?
   For the replacement procedure of felt pens and plotter pens, see section 3.3 (pen model).

For the replacement procedure of the ribbon cassette, see section 3.4 (dot model).

- Is the chart paper feeding properly (no paper jams)? If not, see chapter 10.
- Is there enough chart paper remaining?
   Remaining chart length is printed on the left margin of the chart at intervals of 20 cm.
   For the chart paper replacement procedure, see section 3.2.

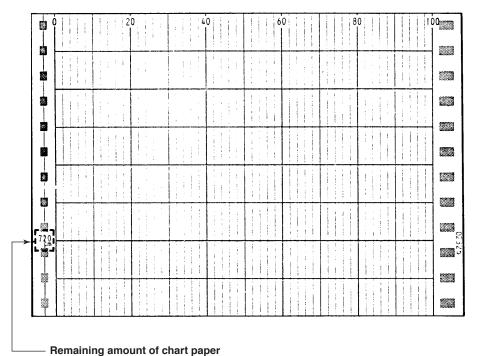

# 11.2 Cleaning the Recorder

#### **CAUTION**


- When cleaning, be sure not to scratch the flexible printed circuit board of the plotter carriage.
- Do not apply lubricating oil to the shaft.

#### Pen Model

To maintain smooth operation, it is recommended that the plotter carriage shaft be cleaned once a year.


#### **Cleaning Procedure**

Wipe the dust off the plotter carriage shaft using a soft lint-free cloth or paper. If the dirt does not come off easily, apply ethyl alcohol to the cloth or paper.

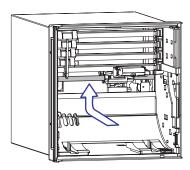

#### **Dot Model**

To maintain smooth operation, wipe the dust off the two shafts of the printer carriage using a soft lint-free cloth or paper. It is recommended that these shafts be cleaned once a year.

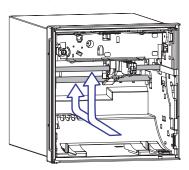

# 11.3 Replacing the Internal Light LED


If the brightness of the internal light degrades with time, replace the LED. For the replacement parts, see section 11.7.

## **CAUTION**


- The LED is connected to the internal circuitry through the flexible printed circuit board. Do not pull the LED with force.
- Be sure not to break the flexible printed circuit board.

#### **Replacement Procedure**

- 1. Open the door and turn OFF the power switch.
- 2. Open the display and key panel section.
- 3. Pull out the internal light LED assembly that is attached to the end of the display and key panel section.

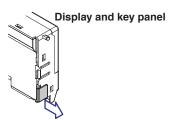


4. Remove the LED assembly from the connector of the flexible printed circuit board.

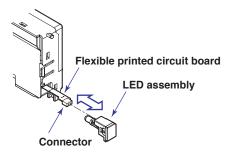

- 5. Connect the new LED assembly.
- 6. Push the LED assembly back into the display and key panel section. Be sure not to bend or scratch the flexible printed circuit board.

#### Stored condition of the flexible printed circuit board

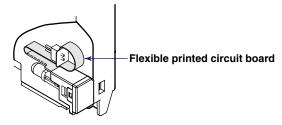

Turn the power switch ON and check that the internal light comes on a few seconds later.

# 11.4 Calibrating the Recorder

Calibrate the measured value against the input.

It is recommended that the recorder be calibrated once a year to assure its measurement accuracy.

For details regarding calibration, contact OMEGA.

#### **Required Instruments**

A calibration instrument with appropriate resolution  $\Gamma$  required for calibrating the recorder.

#### **Recommended Instrument**

· DC voltage standard:

#### **Main Specifications**

Output accuracy:  $\pm(0.005\% + 1 \mu V)$ 

• Decade resistance box:

#### **Main Specifications**

Accuracy of output range 0.1 to 500  $\Omega$ :  $\pm$ (0.01% + 2 m $\Omega$ )

Resolution: 0.001  $\Omega$ 

0°C standard temperature device:

#### **Main Specifications**

Standard temperature stability accuracy: ±0.05°C


For information on purchasing the calibration instruments, contact OMEGA.

#### **Calibration Procedure**

- Wire the recorder and the calibration instrument as shown in the following figure, and adequately warm up the instruments (the warm-up time of the recorder is at least 30 minutes).
- 2. Check that the operating environment such as ambient temperature and humidity is within the normal operating conditions (see section 12.6).
- Apply appropriate input signals corresponding to 0%, 50%, and 100% of the input range and calculate the errors from the readings.
   If the error is outside the accuracy specifications, contact OMEGA.


#### Note

For thermocouple inputs, you must measure the temperature of the input terminal and apply a voltage taking into account the reference junction temperature.

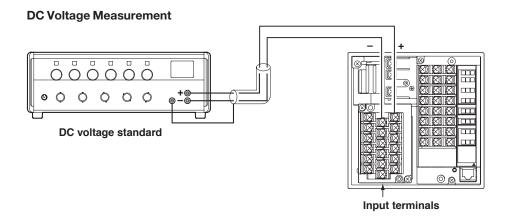


#### **Temperature Measurement When Using an RTD**

The resistance of three lead wires must be equal.

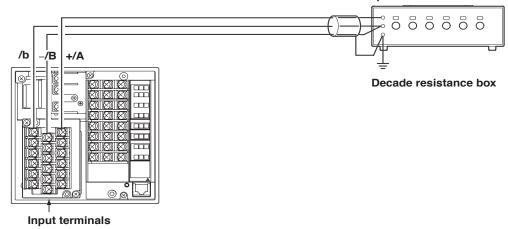

#### **Temperature Measurement When Using a Thermocouple**

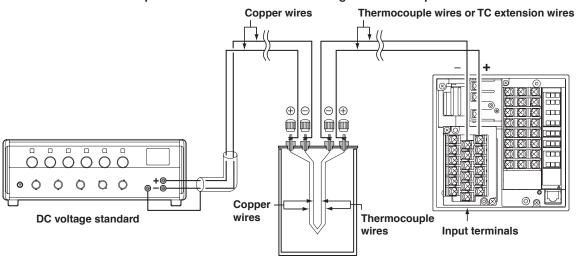

(0°C standard temperature device)

#### **RJC** of **TC** input

As the measurement terminal of the recorder is generally at room temperature, the actual output of the thermocouple is different from the values given on the thermoelectromotive force table based on 0°C. The recorder performs compensation by measuring the temperature at the input terminal and adding the corresponding thermoelectromotive force to the actual output of the thermocouple. Therefore, when the measurement terminal is shorted (equivalent to the case when the detector tip is 0°C), the measured value indicates the temperature of the input terminal.

When calibrating the recorder, this compensation voltage (thermoelectromotive force of  $0^{\circ}\text{C}$  reference corresponding to the input terminal temperature) must be subtracted from the output of the DC voltage standard before application. As shown in the figure, by using the  $0^{\circ}\text{C}$  standard temperature device to compensate the reference junction at 0 °C, you can input the thermoelectromotive force of 0 °C reference from the DC voltage standard and perform the calibration.

# 11.5 Adjusting the Pen Position (Pen Model)

This section explains the details of adjusting the pen position on the chart paper. It is recommended that the pen be adjusted once a year to assure its recording accuracy.

#### Note

Pen position is adjusted under standard operating conditions when the recorder is shipped from the factory. Because the chart paper may expand or contract depending on the environment in which the recorder is used, it is recommended that the position be readjusted before use.

#### **Procedure**

- 1. Warm up the recorder for at least 30 minutes.
- 2. Check that the operating environment such as ambient temperature and humidity is within the normal operating conditions (see section 12.6).
- 3. Hold down the MENU key for 3 seconds to enter Setting mode.
- 5. Press the  $\nabla \triangle$  key or **SHIFT**+ $\nabla \triangle$  key to select **P\_Adj** and then press the  $\lt \vdash$  key.
- 6. Select the **Pen No.**
- 7. Press the ∇△ key to select **Zero** (left edge of the chart paper) or **Full** (right edge of the chart paper) and then press the <⊢ key.

Adjust Zero first and then Full.

Increase or decrease the setting to align the pen position with the scale line on the chart paper. Then, press the  $\triangleleft$  key. To change the setting, press the  $\triangleleft$  key to move the cursor and  $\nabla \triangle$  key to change the value.


The pen moves after the  $\Leftrightarrow$  key is pressed.

A value change of 1 corresponds to 0.033 mm change in the pen position.

Decreasing the value moves the pen to the left and increasing the value moves the pen to the right.

8. Press the  $\Leftrightarrow$  key to set adjust other pens.

Press the **ESC** key to finish the adjustment. The screen returns to the **Basic=P\_Adj** screen.

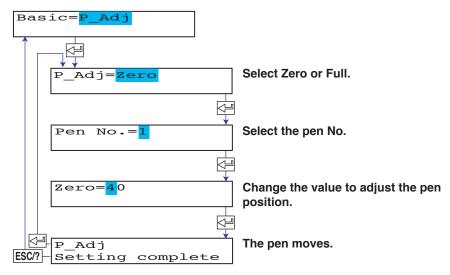

#### Applying the Changes and Returning to Operation Mode

Press the  $\nabla \triangle$  key or **SHIFT** +  $\nabla \triangle$  key to select **End** and then press the  $\lt \!\!\!\!-$  key. Press the  $\nabla \triangle$  key to select **Store** and then press the  $\lt \!\!\!\!-$  key. The changes are applied, and the screen returns to Operation mode. If you select **Abort** and press the  $\lt \!\!\!\!-$  key, the changes are discarded, and the screen returns to Operation mode. Press the **ESC** key to return to the **Basic**= screen.

# 11.6 Adjusting the Dot Printing Position (Dot Model)

This section explains the details of adjusting the dot printing position on the chart paper. It is recommended that the position be adjusted once a year to assure its recording accuracy.

#### Note .

Dot printing position is adjusted under standard operating conditions when the recorder is shipped from the factory. Because the chart paper may expand or contract depending on the environment in which the recorder is used, it is recommended that the position be readjusted before use.

#### **Procedure**

- 1. Warm up the recorder for at least 30 minutes.
- 2. Check that the operating environment such as ambient temperature and humidity is within the normal operating conditions (see section 12.6).
- 3. Hold down the MENU key for 3 seconds to enter Setting mode.
- Press the ∇△ key or SHIFT + ∇△ key to select P\_Adj and then press the <⊨ key.</li>

Adjust Hysteresis first followed by Zero and then Full.

#### **Adjusting the Hysteresis**

A line is drawn at the center of the chart paper. If the line appears as shown in Figure a, increase the displayed setting. Then press the  $\Leftarrow$  key. If the line appears as shown in Figure b, decrease the displayed setting. Then, press the  $\Leftarrow$  key.

To change the setting, press the  $\triangleleft \triangleright$  key to move the cursor and  $\nabla \triangle$  key to change the value.

Repeat this procedure until the line becomes straight.

A value change of 1 corresponds to 0.1 mm change in the dot printing position.



#### Adjusting Zero and Full


A line is drawn to the left edge for Zero and right edge for Full.

Increase or decrease the displayed setting so that the drawn line is aligned with the scale line on the chart paper. Then, press the  $\leftarrow$  key. The procedure of changing the setting is the same as with the adjustment of hysteresis.

The line moves after the  $\lt \vdash$  key is pressed.

A value change of 1 corresponds to 0.1mm change in the dot printing position. Decreasing the value moves the line to the left and increasing the value moves the line to the right.

7. Press the **ESC** key to finish the adjustment. The screen returns to the **Basic=P\_Adj** screen.

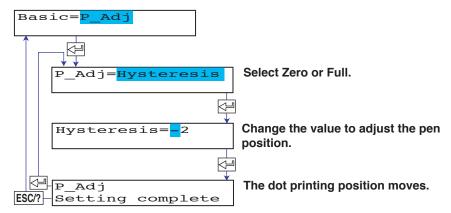

#### Applying the Changes and Returning to Operation Mode

# 11.7 Recommended Replacement Periods for Worn Parts

To preserve the reliability of the recorder and to use the recorder in good condition for an extended time, it is recommended that periodic replacements be made on parts.

The table below shows the recommended replacement period for expendable parts. The replacement period shown here applies when the recorder is used under standard operating conditions. For the actual replacement period, consider the actual conditions of use.

Replacement of parts other than the chart paper, pen, ribbon cassette, and internal light LED will be carried out by a OMEGA engineer or an engineer certified by OMEGA. Contact OMEGA when such replacement is necessary.

#### Note .

The replacement period of the display and the internal light LED is the half life of the brightness. The deterioration of brightness varies depending on the condition of use, and its determination is subjective. Consider these facts for determining the actual replacement period.

#### Pen Model

Item	Replacement Period	Part Name	Part No.	Note	Quantity Used
Z-fold chart paper	33 days	CHART	RD100-ZFP-10	When used at 20 mm/h	1
Felt pen	2 km	PEN ASSY	RD100A-01 RD100A-02 RD100A-03 RD100A-04	Green Blue Violet  Red  At a pen speed of 10 cm/s	1 each
Plotter pen	100,000 characters	PEN ASSY	RD100A-11	When printing continuously	1
Display	5 years*	DISPLAY ASSY	B8800CA		1
Chart paper feed motor	5 years	MOTOR ASSY	B9962EJ		1
Plotter carriage	5 years	CARRIAGE ASSY	B8800DJ		1
Plotter motor	5 years	MOTOR ASSY	B8800DT	For the X-axis	1
Lever bearing	5 years	BEARING	B9900RP	For the plotter	1
Pen servo	5 years	SERVO ASSY	B8800FG	Shared by all pens (excludes the pen arm ASSY)	1 to 4
Internal light LED	2 years*	LED ASSY	B8800CR		1

<sup>\*</sup> The half life of the brightness at the factory default brightness setting.

#### **Dot Model**

Item	Replacement Period	Part Name	Part No.	Note	Quantity Used
Z-fold chart paper	33 days	CHART	RD100-ZFP-10	When used at 20 mm/h	1
Ribbon cassette	3 months	RIBBON CASSETTE	RD100-RC		1
Display	5 years*	DISPLAY ASSY	B8800CA		1
Chart paper feed motor	5 years	MOTOR ASSY	B9962EJ		1
Lever	3 years	LEVER ASSY	B9901EK	For the carriage	1
Pulley	3 years	PULLY	B9963CJ	For the carriage	2
Carriage motor	5 years	MOTOR ASSY	B9963CF		1
Carriage	5 years	CARRIAGE ASSY	B9963CL		1
Ribbon shift motor	5 years	MOTOR ASSY	B9962EJ		1
Ribbon shift gear	5 years	GEAR	B8801BX B8801BW		1 each
Ribbon feed motor	5 years	MOTOR ASSY	B9962EJ		1
Ribbon feed gear	5 years	GEAR	B9901HL B9901HM B9901HN		1 each
Internal light LED	2 years*	LED ASSY	B8800CR		1

<sup>\*</sup> The half life of the brightness at the factory default brightness setting.

# Specifi

# 12.1 Input Specifications

#### Number of Inputs and Scan Interval on the Pen Model

Item	Specifications	
Number of inputs	1, 2, 3, or 4	
Scan interval	125 ms	

## Number of Inputs and Scan Interval on the Dot Model

Item	Specifications		
Number of inputs	6		
Scan interval  1 s (when the integration time of the A/D converter is 20 ms or 16.7 ms)  2.5 s (when the integration time of the A/D converter is 100 ms)			

## **Input Type**

Item	Specifications
Input type	DC voltage, 1-5V, TC, RTD, DI (ON/OFF input), DC current (by adding an external shunt resistor)
Input Range and Measurable Range	

Input	Range Type	Measurable Range	
Volt	20 mV	-20.00 to 20.00 mV	
	60 mV	-60.00 to 60.00 mV	
	200 mV	-200.0 to 200.0 mV	
	2 V	-2.000 to 2.000 V	
	6 V	-6.000 to 6.000 V	
	20 V	-20.00 to 20.00 V	
	50 V	-50.00 to 50.00 V	
	1-5V	(0.800 to 1.200 V range	e) to (4.800 to 5.200 V range)
TC	R <sup>1</sup>	0.0 to 1760.0 °C	32 to 3200 °F
	S <sup>1</sup>	0.0 to 1760.0 °C	32 to 3200 °F
	$B^1$	0.0 to 1820.0 °C	32 to 3308 °F
	K <sup>1</sup>	–200.0 to 1370.0 °C	-328 to 2498 °F
	E <sup>1</sup>	–200.0 to 800.0 °C	-328.0 to 1472.0 °F
	$J^1$	–200.0 to 1100.0 °C	-328.0 to 2012.0 °F
	$T^1$	–200.0 to 400.0 °C	-328.0 to 752.0 °F
	$N^1$	0.0 to 1300.0 °C	32 to 2372 °F
	$W^2$	0.0 to 2315.0 °C	32 to 4199 °F
	$L^3$	–200.0 to 900.0 °C	-328.0 to 1652.0 °F
	$\Pi_3$	–200.0 to 400.0 °C	–328.0 to 752.0 °F
	WRe <sup>4</sup>	0.0 to 2400.0 °C	32 to 4352 °F
RTD	PT (Pt100) <sup>5</sup>	–200.0 to 600.0°C	−328.0 to 1112.0 °F
	JPT (JPt100) <sup>5</sup>	–200.0 to 550.0°C	-328.0 to 1022.0 °F
DI	Level	0: Less than 2.4 V, 1: G	reater than or equal to 2.4 V
	Contact	0: Open, 1: Closed	

- 1 R, S, B, K, E, J, T, N: IEC584-1 (1995), DIN IEC584, JIS C1602-1995
- 2 W: W-5% Rd/W-26% Rd (Hoskins Mfg. Co.), ASTM E988
- 3 L: Fe-CuNi, DIN43710, U: Cu-CuNi, DIN43710
- 4 WRe: W-3%Re/W-25%Re (Hoskins Mfg Co.)
  - Pt100: JIS C1604-1997, IEC751-1995, DIN IEC751-1996 JPt100: JIS C1604-1989, JIS C1606-1989 Measurement current: i = 1 mA (Pt100, JPt100)

## 12.1 Input Specifications

Item	Specifications  Floating unbalanced input. Isolation between channels (except, b terminal is shared for RTD input).	
Input type		
Burnout Detection of TC	0400001.	or each channel. wnscale switchable.
	Input Type	Operating Conditions
	TC input	2 k $\Omega$ or less: normal, 10 $M\Omega$ or more: burnout, detection current: approx. 10 $\mu A$
	1-5V input	0.2 V or less: burnout
RJC of TC input	Set whether to use the recorder RJC function or an external RJC function for each channel. Set the compensation voltage when using an external RJC function. Compensation voltage range: $-20000  \mu V$ to $20000  \mu V$ .	
A/D converter		
Resolution	16 bits	
Integration time	Pen model:	Selectable from 20 ms (50 Hz), 16.7 ms (60 Hz), and Auto (auto switch between 20 ms and 16.7 ms according to the power supply frequency).
	Dot model:	Selectable from 20 ms (50 Hz), 16.7 ms (60 Hz), 100 ms and Auto (auto switch between 20 ms and 16.7 ms according to the power supply frequency).
Filter function (pen model)	Filter ON/OFF switchable for each channel. Time constant selectable from 2, 5, and 10 s.	
Moving average function (dot model)	•	age ON/OFF switchable for each channel. of samples of the moving average is selectable between 2 and 16.

# **Input Computation (Standard Function)**

Item	Specifications
Delta computation	Calculates the difference between two channel inputs using the following equation.  Delta = (the input value of the channel set to delta computation) – (the input value of the reference channel)  where (reference channel NO.) < (channel No. set to delta computation).  Computable input type: DC voltage, TC, and RTD. The channel set to delta computation and the reference channel is set to the same range type.
Linear scaling	Scales the input value to a value with a unit suitable for the application.  Computable input type: DC voltage, TC, RTD, DI  Value after scaling  Mantissa: –20000 to 30000  Decimal position: Can be set arbitrarily  Unit: Can be set arbitrarily (up to 6 characters)  Displayable and printable range  –19999 to 31500
Computation on the 1-5V	input
Linear scaling  Low-cut function	Linearly scales the 1-5V signal.  Value after scaling: Same as linear scaling.  Displayable and printable range: Same as linear scaling.  Sets values below 0% of the recording span to the leftmost value of the scale. The leftmost value of
Low-cut function	scale must be less than the rightmost value of scale. The leftmost value of scale.
Square root computation	Takes the square root of the input value and linearly scales the result.  Computable input type: DC voltage
Linear scaling	Value after scaling: Same as linear scaling.  Displayable and printable range: Same as linear scaling.
Low-cut function	Sets values below the low-cut point to the leftmost value of scale. The leftmost value of scale must be less than the rightmost value of scale.  Low-cut point range: 0.0 to 5.0% of the recording span (0.1% steps)
Bias	Adds a bias to the measuring input value.  Bias value range: ±10% of the span of the measurable range at the specified range type.  ±10% of the scaling span if linear scaling is used.

# 12.2 Alarm Function Specifications

Item	Specifications	
Number of alarms	Up to four alarms (level) for each measurement channels.	
Alarm types	High limit (H), low limit (L), difference high limit (h), difference low limit (l), high limit on rate-of-change (R), low limit on rate-of-change (r), delay high limit (T), delay low limit (t). The symbol indicating the alarm is given in parentheses.  Rate-of-change calculation interval of rate-of-change alarms (can be set individually for the high limit on rate-of-change and low limit on rate-of-change alarms)  Rate-of-change calculation interval = Scan interval × the number of sampled data where the number of sample data is a value between 1 and 15  Alarm delay time of delay high and low limit alarms (can be set for each channel, common within a channel)  1 to 3600 s (1 hour)  However, if the alarm delay time setting is not an integer multiple of the scan interval, the alarm delay time is set to a value that is the first integer multiple of the scan interval exceeding the delay time setting.	
Hysteresis	Set a width to the value for detecting alarm occurrence/release (common to all channels and all levels Applied to high limit alarm and low limit alarm.  Hysteresis range: Approx. 0.0% to 1.0% of the recording span (0.1% steps)	
Display	Indicates the alarm occurrence status on the display.  Indication for each channel: Displays the alarm type (display precedence: H, L, T, t, h, I, R, and r).  Alarm summary display: Displayed using an icon.  Displays the alarm point mark and status on the bar graph.  Non-hold/hold operation of alarm indication  Turn ON/OFF the indication along with the alarm occurrence/release (non-hold) or hold the indication until the alarm ACK operation.	
Alarm relay contact ou	tput (optional specifications) See section 12.5	

# 12.3 Recording Function Specifications

# **Trend Recording (Pen Model)**

Item	Specifications
Recording pen	Disposable felt pen
Step response time	Approx. 1 s (using the IEC61143 measurement method)
Number of pens	Up to 4
Recording color	Pen 1: Red, pen 2: Green, pen 3: Blue, pen 4: Violet
Trend recording	Updates the data at the scan interval. Continuous recording.
Pen offset compensation	Records by compensating for the offset of each pen along the time axis.
Chart speed	5 to 12000 mm/h (82 steps).
Zone recording	Recording zone can be specified for each channel.  Recording width: 5 mm or more (1 mm steps)
Partial expanded recording	Records by expanding the right or left side of the boundary position (the other section is reduced).  Boundary position: 1 to 99%  Boundary value: Within the recording span range

# **Trend Recording (Dot Model)**

Item	Specifications	
Recording method	Trend recording by a 6-color wire dot printer	
Recording color	Channel 1: Purple, channel 2: Red, channel 3: Green, channel 4: Blue, channel 5: Brown, channel 6: Black	
Trend recording interval	Records at the following interval through a raster scan system.  Auto: Synchronizes to the chart speed and automatically sets to the interval  Fix: 10 s/6 channels (see section 12.5 for the recording interval on models with the computation function (/M1 option)	
Chart speed	1 to 1500 mm/h (1 mm steps)	
Recording ON/OFF	Recording can be turned ON/OFF for each channel.	
Zone recording	Same as the pen model.	
Partial expanded recordin	g Same as the pen model.	

# **Chart Paper**

Item	Specifications
Printing width	100 mm
Type/Length	Z-fold type. Approx. 16 m.
Chart paper feeding	accuracy
	Within ±0.1% After feeding 1000 mm and with respect to the print scale on the chart paper.

# **Printouts (Pen Model)**

Item	Specifications	
Recording pen (color)	Plotter pen (purple)	
Alarm printout Printout contents	Prints alarm occurrence/release.  Occurrence (△)/release (▽) marks, channel No. or tag, alarm type, alarm level, time, printout buffer overflow mark.	
Time printout format	Selectable from hour:minute, hour:minute:second, month:day:hour:minute, month:day:hour:minute:second, and year:month:day:hour:minute:second.	
Alarm printout buffer	Stores 8 occurrences of alarm information waiting to be printed.	
Periodic printout Interval	Prints at specified time intervals from the reference time.  Reference time: 00 hour 00 minute to 23 hour 00 minute (1 hour steps, minute fixed)  Auto: Automatically determined from the chart speed.  Manual: Select 10 min, 12 min, 15 min, 20 min, 30 min, 1 hour, 2 hours, 3 hours, 4 hours, 6 hours, 8 hours, 12 hours, or 24 hours.	
Mode	Selectable from disable periodic printout, print instantaneous values, and print report data (report mode). Report data: Selectable from the average, minimum, maximum, minimum/maximum/average, sum value, and instantaneous value.	
Printout contents	For instantaneous values: Date/Time, offset compensation ON/OFF, channel information (measured value, alarm status, unit, delta computation ON/OFF, scale, channel number or tag, recording color), chart speed (with time ticks)  For report data: Report start/end date/time, offset compensation ON/OFF, events, channel information (value, unit, range change occurrence, scale, recording color), chart speed (with time ticks)	
Message printout	Prints preset message strings.	
Number of messages Printout contents	Time measure (up to 16 above stave) printed thuffer a verifical mark	
Time printout format	Time, message (up to 16 characters), printout buffer overflow mark.  Selectable from hour:minute, hour:minute:second, month:day:hour:minute,	
	month:day:hour:minute:second, year:month:day:hour:minute:second, and not print.	
Message printout buffer	Stores 5 messages waiting to be printed.	
Recording start printout	Prints at the start of recording.	
Printout contents Time printout format	Time and chart speed, printout buffer overflow mark.  Selectable from hour:minute, hour:minute:second, month:day:hour:minute,	
Time printout format	month:day:hour:minute:second, and year:month:day:hour:minute:second.	
New chart speed printout	Prints when the chart speed is changed.	
Printout contents	Chart speed and time, printout buffer overflow mark.	
Time printout format	Selectable from hour:minute, hour:minute:second, month:day:hour:minute, month:day:hour:minute:second, and year:month:day:hour:minute:second.	
Manual printout	Prints the measured values of all channels.	
Printout contents	Measured values of all channels at that point.	
Catting printerst (Liet)	Trend recording is temporarily suspended.	
Setting printout (List) Printout contents	Prints the settings of items in Setting mode. Range setting, alarm setting, etc. Trend recording is temporarily suspended.	
Setting printout (Setup) Printout contents	Prints the settings of items in Basic Setting mode. Basic alarm specifications, basic recording specifications, etc. Trend recording is temporarily suspended.	

Items dependent on the chart speed

Chart speed	Periodic printout	Alarm printout Message printout New chart speed printout
5 to 9 mm/h	Not printed	Printed
10 to 1500 mm/h	Printed	Printed
1600 mm/h or higher	Not printed	Not printed

Chart speed	Periodic printout interval
10 to 18 mm/h	8 hours
20 to 36 mm/h	4 hours
40 to 72 mm/h	2 hours
75 to 135 mm/h	1 hour
150 to 180 mm/h	30 minutes
200 to 320 mm/h	20 minutes
350 to 1500 mm/h	10 minutes

Date printout format

Select the printout format of the date from Y/M/D, M/D/Y, D/M/Y, D.M.Y, and M.D.Y. The format applies to the date printout of all printout items (version 1.11 and later).

# **Printout (Dot Model)**

Item	Specifications		
Recording	Dot printing.		
Channel printout	Prints the channel number beside the trend recording every approx. 25 mm of chart paper. Channel printout ON/OFF selectable.		
Alarm printout Printout contents	Prints alarm occurrence/release.  Occurrence (△, red)/release (▽, blue) marks, channel No. or tag, alarm type, alarm level, time, printout buffer overflow mark.		
Time printout format	Selectable from hour:minute, hour:minute:second, month day hour:minute, month day hour:minute:second, and month day year hour:minute:second.		
Alarm printout buffer	Stores 12 occurrences of alarm information waiting to be printed.		
Periodic printout	Prints at specified time intervals from the reference time.		
Interval	Same as the pen model.		
Measured value	Same as the pen model.		
Printout contents	For instantaneous values: Same as the pen model except offset compensation ON/OFF and recording color are not printed.		
	For report data: Same as the pen model except offset compensation ON/OFF and recording color are not printed.		
Message printout	Same as the pen model.		
Recording start printout	Same as the pen model. With time ticks.		
New chart speed printout	Same as the pen model. With time ticks.		
Manual printout	Same as the pen model.		
Setting printout (List)	Same as the pen model.		
Setting printout (Setup)	Same as the pen model.		
Itamaa alamamalamta an tha ah	to and a so and		

Items dependent on the chart speed

Chart speed	Channel printout	Periodic printout	Alarm printout
		-	Message printout
			New chart speed printout
1 to 9 mm/h	Printed	Not printed	Printed
10 to 100 mm/h	Printed	Printed	Printed
101 to 1500 mm/h	Not printed	Not printed	Not printed

Periodic printout interval
8 hours
4 hours
2 hours
1 hour

Date printout format Same as the pen model.

## Values for Special Measured Values

Same as "Special values" for the digital display on page 12-8.

# 12.4 Display Function Specifications

## **Display and Displayed Contents**

This section explains the specifications of the display functions of measurement channels and computation channels (/M1 option). Display examples are illustrations used to explain the displayed contents and differ in appearance from the actual displays.

Item	Specifications		
Display	VFD (101 × 16, dot matrix)		
, ,	Up to 11 characters using large fonts. 17 characters × 2 lines using normal fonts.		
Number of screens	15 (switched using keys)		
Displayed information			
Displayed information  Display type	1-channel digital display		
Biopiay typo	2-channel digital display		
	4-channel digital display		
	6-channel digital display (dot model)		
	1-channel digital + 1-channel bar graph		
	1-channel digital + 4-channel bar graph (pen model)		
	2-channel digital + 2-channel bar graph		
	4-channel bar graph (pen model)		
	6-channel bar graph (dot model)		
	Flag display		
	Channel alarm status display		
	Date, time, and chart speed display		
	DI/DO status display		
	1-channel digital display (tag display)		
	2-channel digital display (tag display)		
	1-channel digital + 1-channel bar graph (tag display)		
	1-channel digital + 4-channel bar graph (tag display) (pen model)		
	Status display		
	System display		
	Lights off		
	Skip		
	Multiple display		
	The following screens can be assigned arbitrarily to the top and bottom sections of the display.		
	1-channel digital display		
	2-channel digital display		
	Date/Time		
	Chart speed display		
	Channel alarm status display		
	Status display		
	Lights off		
	1-channel digital display (tag display)		
	ed values / computed values		
When displayed channe			
	Dot model: Updated at the scan interval		
	Pen model: Updated every 2 s		
When displayed channe	els are automatically switched		
	Switches the channel and measured values at 1, 2, 3, 4, or 5 second intervals.		
Status display			
RECORD	This indicator turns ON when recording is started and turns OFF when stopped.		
ALARM	The indicator turns ON when an alarm occurs and turns OFF when the alarm is released.		
	If the alarm indication is set to hold operation, the indicator blinks when an alarm occurs. When		
—	alarm ACK operation is performed, the indicator turns ON or OFF.		
MATH	This indicator turns ON when computation on the computation function (/M1 option) is started and		
VEV/ 00/	turns OFF when stopped.		
KEYLOCK	This indicator turns ON when key lock is activated and turns OFF when released.		
CHART END	This indicator turns ON when the remaining amount of chart paper falls to approximately 2 cm on models with the FAIL/chart end detection and output function (/F1 option).		

cations
•

Display type specifications

Digital display

Measured value or computed value

- DC voltage input: Displays values between "the min. measurable value 5% of the span of the measurable range" and "the max. measurable value + 5% of the span of the measurable range" of the range (example: –2.200 to 2.200 V for the 2 V range).
- TC and RTD input: Displays values for input values between "the min. measurable value 10°C" and "the max. measurable value + 10°C" (example: –10.0°C to 1770.0°C for TC R)
- ON/OFF input (DI): Displays the input value 0 or 1.
- Linear scaling (1-5V, scaling, and square root): Displays value for input values between "the leftmost value of scale 5% of scaling span" and "the rightmost value of scale + 5% of scaling span" (example: -5.0 to 105.0 when scaled to 0.000 to 100.0). However, the displayable range during scaling is from -19999 to 31500 (excluding the decimal). Values below -19999 and values above 31500 are displayed as -Over and +Over, respectively.
- Computation channel (/M1 option): Displays values in the range of –9999999 to 99999999. Displayed with 1 character as follows:

Channel No. Displayed with

Measurement channels: 1, 2, 3, 4, 5, 6

Computation channels: A, B, C, D, E, F, G, J, K, M, N, P

Alarms are displayed using the symbols below. If multiple alarms are occurring simultaneously, the alarm with higher precedence is shown.

(Higher precedence) H, L, T, t, h, I, R, r (Lower precedence)

Special values

Alarm

Measurement channel

Status	Display	Description
+Over	+Over	See below.
-Over	–Over	See below.
Skip	SKIP	A value for channels set to skip.
Error	ERROR	Values such as when both the reference channel and measurement channel are +Over or -Over in delta computation.
+Burnout	B.out	A value displayed when a burnout is detected on a channel set to burnout up scale.
-Burnout	B.out	A value displayed when a burnout is detected on a channel set to burnout down scale.

#### +Over and -Over of measurement channels

A condition in which the value is outside the display range indicated in "Measured value or computed value" above. For example,

- For 2 V range, values below –2.200 V are –Over and values over 2.200 V are +Over.
- For TC R, values below -10.0°C are -Over and values over 1770.0°C are +Over.
- If scaled to 0.0 to 100.0, values below –5.0 are –Over and values above 105.0 are +Over. However, the displayable range during scaling is from –19999 to 31500 (excluding the decimal). Values below –19999 and values above 31500 are displayed as –Over and +Over, respectively.

#### Computation channel

Status	Display	Description
+Over	+Over	When the computed result exceeds 99999999.
-Over	–Over	When the computed results is less than -9999999.
OFF	SKIP	A value for channels set to Off.

Channel switching interval The switching interval of displayed channels can be set to 1 s, 2 s, 3 s, 4 s, or 5 s.

Item	Specifications		
Bar graph display Relationship between the	Displays the measured value on a bar graph.  digital display and bar graph  Displays the same channel on the digital display and bar graph. On the 2-channel digital + 2- channel bar graph display, the top bar graph is the left digital display channel and the bottom graph		
Scale Alarm point mark	is the right digital display channel.  Displays 10 equally spaced scale marks.  For a channel set to delta computation, the alarm point marks of h and I are displayed. For all other channels, the alarm point marks of H, L, T, and t are displayed.		
Bar graph display mode	<ul> <li>Blinks on the bar graph when an alarm occurs. Stops blinking when the alarm is released.</li> <li>Selectable from the two modes below.</li> <li>Set the base point of the bar graph to the left or right of the recording span whichever is smaller in value.</li> <li>Set the base point of the bar graph to the 50% position of the recording span.</li> </ul>		
Flag display Display channel Scale	The flag can b	sured values using flags. The turned ON/OFF for each channel. The verlap, the channel with the smallest number is displayed on top) The channel with the smallest number is displayed on top)	
Channel alarm status displa		1	
onamio alam olalao alopi		n status of all channels using the symbols below.	
	Symbol	Description	
	•	Alarm is not set.	
	_	Alarm is not occurring.	
	Channel No.	Alarm is occurring.  Displays the channel number when an alarm occurs and clears when the alarm is released.  If the alarm indication is set to hold operation, the indicator blinks when an alarm occurs. When alarm ACK operation is performed, the indicator turns ON (stop blinking) or OFF.	
Date/time and chart speed	Displays the d	ate/time on the left and chart speed on the right.  ay format can be selected. The format is common with the "Date printout format."	
DI/DO status display	DI: Displays the ON/OFF state of the remote control input terminal (/R1 option).  DO: Displays the relay operation (active) of the alarm output terminal (/A1, /A2, or /A3 option).		
Status display	Displays the status below. The display condition is the same as the status display under the main display (see page 12-7).  Alarm and chart end (/F1 option)		
Lights off	Displays nothing.		
Skip	Skips the screen during screen switching.		
Tag display	Displays 7-digit tags in place of channel numbers. See the digital display and bar graph display sections.		
Multiple display (display in		screens can be assigned to the top and bottom sections) s (see page 12-7) can be assigned to the top and bottom sections of the display	
System display	Displays system information by switching screens every 3 seconds. The main displayed contents are as follows: Analog: Number of inputs Option1, Option2: Options that are installed Math: Number of computation channels Periodic: Periodic printout interval Interval: Trend recording interval (dot model) POC: Pen offset compensation ON/OFF (pen model) MAC address: MAC address Version: Firmware version number		

Name	Display Example	Description
1-channel digital display	Measurement channel	
	1H3000.0ABC	Channel No. (1 digit), alarm (1 digit), measured value (6 digits), unit (3 digits) Displays using 5 × 7 dots when the unit
	☐ Alarm ☐ Measured ☐ Unit ☐ Channel No. value  Computation channel	exceeds 3 digits.
	AH999999.9	Channel No. (1 digit), alarm (1 digit), computed value (9 digits)
2-channel digital display	Measurement channel	
	1H-1999.9ABCDEF 2L 2000.0PQRSTU	Channel No. (1 digit), alarm (1 digit), measured value (7 digits), unit (6 digits)
	Computation channel AH-9999999.9ABCDEF	Channel No. (1 digit) slarm (1 digit)
	BL9999999.9PQRSTU	Channel No. (1 digit), alarm (1 digit), computed value (9 digits), unit (6 digits)
4-channel digital display	Measurement channel  1H3000.0 1H3000.0	Channel No. (1 digit), alarm (1 digit),
	3Н3000.0 4Н3000.0	measured value (6 digits)
	Computation channel AH-1999.9 BH-1999.9	Channel No. (1 digit), alarm (1 digit),
	СН9999.9 DH9999.9	computed value (6 digits) Displayable values are –19999 to 99999 and
		a decimal. If this range is exceeded, the value is displayed as "-####" or "+####."
6-channel digital display	999.9 999.9 999.9	Measured value (5 or 6 digits)
(Dot model)	999.9 999.9 999.9	
1-channel digital display	1H3000.0ABC	Channel No. (1 digit), alarm (1 digit),
+ 1-channel bar graph display	1113000:07150	measured value (6 digits), unit (3 digits) Bar graph, scale, alarm (bar graph) Value and bar graph of the same channel.
2-channel digital display	Measurement channel	0
+ 2-channel bar graph display	1H3000.0 2L-999.9	Channel No. (1 digit), alarm (1 digit), measured value (6 digits) Bar graph, scale
	AH-1999.9 BH9999.9	Channel No. (1 digit), alarm (1 digit),
		computed value (6 digits) Bar graph, scale
		Displayable values are -19999 to 99999 and a decimal. If this range is exceeded, the value is displayed as "-####" or "+####."
1-channel digital display	Measurement channel	
+ 4-channel bar graph display (Pen model)	1H-1999.9ABCDEF	Channel No. (1 digit), alarm (1 digit), measured value (7 digits), unit (6 digits)
	Computation channel	
	AH9999999.9ABCDEF	Channel No. (1 digit), alarm (1 digit), computed value (9 digits), unit (6 digits)
4-channel bar graph display (Pen model)		Bar graph, scale
6-channel bar graph display (Dot model)		Bar graph, scale
Flag display	<u> </u>	Flag, scale
Channel ID alarm status display	#0:12:-:6 ABC-:-G:P	Alarm is not set.      Alarm is not occurring. Channel No. Alarm is occurring.
Date/time and chart speed display	Sep.21.2004 1200 11:26:37 mm/h	Displays the date/time on the left and chart speed on the right.

Name	Display Example	Description
DI/DO status display	00:	DI (remote control inputs) status. DO (alarm output relays) status.
Status display	□ Dhart end Alarm	Displays the appropriate mark.
Lights off		No display.
1-channel digital display (Tag display)	Measurement channel  abcdefg H-1999.9ABCDEF  Alarm Measured Unit Tag value	Tag (7 digits), alarm (1 digit), measured value (7 digits), unit (6 digits)
	Computation channel abcdefg H9999999.9ABCDEF	Tag (7 digits), alarm (1 digit), computed value (9 digits), unit (6 digits)
2-channel digital display (Tag display)	abcdefgH-1999.9ABC abcdefgH9999999.9 The top section is measurement channel; bottom section is computation channel	Measurement channel Tag (7 digits), alarm (1 digit), measured value (6 digits), unit (3 digits) Computation channel Tag (7 digits), alarm (1 digit), computed value (9 digits)
1-channel digital display + 1-channel bar graph display (Tag display)	Measurement channel abcdefgH-1999.9ABC Computation channel abcdefgH999999.9	The digital display is the same as the 2-channel digital display (tag display). Bar graph, scale, alarm (bar graph) Value and bar graph of the same channel.
1-channel digital display + 4-channel bar graph display (Tag display) (Pen model)	Measurement channel  abcdefgH-1999.9ABC  Computation channel  abcdefgH9999999.9	The digital display is the same as the 2-channel digital display (tag display). Bar graph

Multiple display (Different screens assigned to the top and bottom sections)

Name	Display Example	Description
1-channel digital display	Computation channel  1H-1999.9ABCDEF	Channel No. (1 digit), alarm (1 digit), measured value (7 digits), unit (6 digits)
	Measurement channel AH99999999999	Channel No. (1 digit), alarm (1 digit), computed value (9 digits), unit (6 digits)
2-channel digital display	Computation channel  1H-1000.0 2H3000.0	Channel No. (1 digit), alarm (1 digit), measured value (6 digits)
	Measurement channel AH-1999.9 BH9999.9	Channel No. (1 digit), alarm (1 digit), measured value (6 digits)
Date/Time	Sep21.04 11:26:37	Date/Time
Chart speed	25mm/h	Chart speed
Channel ID alarm status display	Alarm summary display of computation channels	Alarm is not set.      Alarm is not occurring. Channel No. Alarm is occurring.
Status display	(m)) (X)	Displays the appropriate mark.
Lights off		No display.
1-channel digital display (Tag display)	abcdefgH-1999.9ABC abcdefgH9999999.9	The digital display is the same as the 2-channel digital display (tag display).
	The top section is measurement channel; bottom section is computation channel	

# 12.5 Specifications of Optional Functions

## Alarm Output Relay (/A1, /A2, and /A3)

Item	Specifications	
Operation	Outputs relay contact signals from the dedicated terminals on the rear panel when alarms occur.	
Number of outputs	2 outputs (/A1), 4 outputs (/A2), 6 outputs (/A3)	
Relay contact rating	250 VDC/0.1 A (for resistance load)	
	250 VAC (50/60 Hz)/3 A	
Output format	NO-C-NC	
Auxiliary functions	Energized/De-energized operation selectable (common to all relays)	
•	Hold/Non-hold operation selectable (common to all relays)	
	AND/OR operation selectable	
	Reflash operation (Fixed to relay I01, I02, and I03. Relay release time is approx. 500 ms.)	
Diagnosis output	Relay I01 can be used for diagnosis output.	
	Diagnosis output: Outputs a relay signal when an error in the recording section (plotter on the pen model), a burnout, or an error in the A/D converter is detected. Relay operation is fixed to de-energized and non-hold.	

## RS-422A/485 Communication Interface (/C3)

Item	Specifications
Connection	Complies with EIA RS-422A/485
Connection type	Multi-drop connection 1:32 (four-wire system), 1:31 (two-wire system, version 1.11 and later)
Transmission mode	Half-duplex
Synchronization	Start-stop synchronization
Baud rate	1200, 2400, 4800, 9600, 19200, or 38400 bps
Start bit	Fixed to 1 bit
Data length	7 bits or 8 bits
Stop bit	Fixed to 1 bit
Parity	Odd, even, or none (no parity)
Received buffer length	2047 bytes
Escape sequence	Open and close
Protocol	Dedicated protocol, Modbus slave protocol (version 1.11 and later)
Communication mode	ASCII for input/output for control and setting
	ASCII or binary for input/output of measured data
Communication distance	1.2 km

## **Ethernet Communication Interface (/C7)**

Item	Specifications					
Function						
Setting/Measurement server	Uses a dedicated protocol					
9	Measured/computed data, setup data, status byte					
Maintenance/Test server	Connection information, network statistics, etc.					
Instrument information server						
Electrical and mechanical speci	ifications					
·	Conforms to IEEE 802.3.					
Interface	Basic specifications					
	Connection Ethernet (	(10BASE-T)				
		UDP, ICMP, and ARP				
	The maximum number of simultaneous connections and the number of simultaneous use					
	Function	Maximum Number of	Number of			
	Administrators	<b>Connections Users</b>	Simultaneous Users	Por	t Number	
	Setting/Measurement server	3	1	2	34260/tcp	
	Maintenance/Test server	1	1	1	34261/tcp	
	Instrument information server	-	-	-	34264/udp	
Miscellaneous						
User authentication	Administrator: 1, users: 6 (limit	ations placed on users)				
			spection packet. Use	ar nat	tuon in	

# FAIL/Chart End Detection and Output (/F1)

Item	Specifications
FAIL output	Relay output on CPU error
Relay operation	Energized during normal operation and de-energized on CPU error. Non-hold operation.
Chart end detection output	Stops recording and outputs a relay signal when the remaining amount of chart paper is approx.
	2 cm. Also, turns ON the words CHART END on the display.
Relay operation	The relay is energized when the above conditions are met. Non-hold operation.
Contact rating	250 VAC (50/60 Hz)/3 A, 250 VDC/0.1 A (for resistor load)

# **Clamped Input Terminal (/H2)**

Item	Specifications
Measuring input terminal	Uses clamped input terminals.

## Non-Glare Door Glass (/H3)

Item	Specifications
Door glass	Uses a door glass with minimal reflection.

# **Computation Function (/M1)**

Item	Specifications	
Number of computation cha	annels	
	Pen model: 8 channels, dot model: 12 channels	
Operation	General arithmetic operations: Four arithmetic operations, square root, absolute, common logarithm, exponential, power, relational operations (<, ≤ , >, ≥ , =, ≠), logical operations (AND, OR, NOT, XOR)	
	Statistical operations (TLOG): Average, max., min., sum, and max. – min. for each interval	
Constants	Up to 30 constants can be defined	
	Range: -9.9999E+29 to -1.0000E-30, 0, 1.0000E-30 to 9.9999E+29 Symbol: K01 to K30	
Communication input data	Digital data via communication can be used in computations other than statistical computation (TLOG) Number of communication input data points: 8 channels (pen model), 12 channels (dot model) Range: -9.9999E+29 to -1.0000E-30, 0, 1.0000E-30 to 9.9999E+29 Symbol: C01 to C12	
Remote input	Use remote input status (0/1) in equations	
•	Number of inputs: 5	
	Symbol: D01 to D05	
Computation accuracy	32-bit floating-point computation (excluding TLOG computation)	
Computation range	Computed values throughout the computation remains within approx. ±3.4×10 <sup>38</sup> .	
Equation	Defined using up to 120 characters.	
Execution interval	Scan interval	
TLOG timer	Performs statistical calculation for each interval specified by the timer.	
Number of timers	3 (periodic printout timer, timer 1, and timer 2).	
Timer 1 and 2 modes	Absolute or relative	
Reset	TLOG data can be reset at each interval.	
Printout	Printout at each interval is possible.	
Trend recording		
Recording span	-9999999 to 99999999, decimal position arbitrary.	
Unit .	Up to 6 characters	
Recording methods	Zone recording and partial expanded recording available.	
Pen	Measurement channels and computation channels can be assigned arbitrarily to pens.	
Dot printing	Trend recording of measurement and computation channels. The fastest dot printing interval is as follows:	

Number of channels being trend recorded Fastest dot printing interval

10 s 15 s

20 s

6 or less 7 to 12

13 to 18

Alarms Number of alarms Up to four alarms (level) for each measurement channels. High limit (H), low limit (L), delay high limit (T), delay low limit (t). The alarm symbol is shown in parentheses. Alarm types Alarm delay time of delay high and low limit alarms (can be set for each channel, common within a channel) See section 12.2 Hysteresis Applied to high limit alarm and low limit alarm. Hysteresis range: Approx. 0.0% to 1.0% of the recording span (0.1% steps) See section 12.2. Miscellaneous Display See section 12.4.

#### Cu10, Cu25 RTD Input (/N1)

Item	Specifications	
Cu10, Cu25 RTD	This option allows Cu10 and Cu25 inputs to be added to the standard input types.	
Input type and measurable range		

Input Type		Measurable Range
RTD (Measurement current i: 2 mA)	Cu10 (GE) Cu10 (L&N) Cu10 (WEED) Cu10 (BAILEY) Cu10: $\alpha$ = 0.00392 at 20°C Cu10: $\alpha$ = 0.00393 at 20°C Cu25*: $\alpha$ = 0.00425 at 0°C	−200 to 300°C −328.0 to 572.0°F

<sup>\*</sup> Measurement current i = 1 mA

Measurement and recording accuracy

Input Type	Measurement Accuracy	Recording Accuracy
Cu10 (GE)		
Cu10 (L&N)		
Cu10 (WEED)	±(0.4% of rdg + 1.0°C)	Measurement accuracy ± (0.3% of recording span)
Cu10 (BAILEY)		
Cu10: α = 0.00392 at 20°C		, , ,
Cu10: α = 0.00393 at 20°C		
Cu25: α = 0.00425 at 0°C	±(0.3% of rdg + 0.8°C)	

#### 3 Legs Isolated RTD (/N2)

Item	Specifications
Input terminal isolation	Applies to the dot model.  The RTD input terminals are isolated between channels (on the standard dot model, input terminal b are common to all channels)

	The RTD input terminals are isolated between channels (on the standard dot model, input terminal b are common to all channels)
Expansion Inputs	(/N3)

tem	Specifications		
nout type	Adds the input types shown in the table below.		

Input Type		Measurement Range	
	PR40-20	0.0 to 1900.0°C	32 to 3452°F
	PLATINEL	0.0 to 1400.0°C	32 to 2552°F
Thermocouple	NiNiMo	0.0 to 1310.0°C	32 to 2390°F
	W/WRe26	0.0 to 2400.0°C	32 to 4352°F
	Type N (AWG14)	0.0 to 1300.0°C	32 to 2372°F
	Kp vs Au7Fe	0.0 to 300.0 K	
	Pt25	–200.0 to 550.0°C	–328.0 to 1022.0°F
	Pt50	–200.0 to 600.0°C	–328.0 to 1112.0°F
	Ni100 (SAMA)	–200.0 to 250.0°C	–328.0 to 482.0°F
RTD	Ni100 (DIN)	–60.0 to 180.0°C	–76.0 to 356.0°F
(Measuring current	Ni120	−70.0 to 200.0°C	–94.0 to 392.0°F
i = 1 mA)	J263*B	0.0 to 300.0 K	
	Cu53	–50.0 to 150.0°C	–58.0 to 302.0°F
	Cu100: α = 0.00425 at 0°C	–50.0 to 150.0°C	–58.0 to 302.0°F

Item **Specifications** 

Measurement and recording accuracy

, accuracy	_		T	
Input Type		Measurement Accuracy	Recording Accuracy	
PR40-20	0 to 450°C	Not warranted		
	450 to 750°C	±(0.9% of rdg + 3.2°C)		
	750 to 1100°C	±(0.9% of rdg + 1.3°C)		
	1100 to 1900°C	±(0.9% of rdg + 0.4°C)		
PLATINEL		±(0.25% of rdg + 2.3°C)		
NiNiMo		±(0.25% of rdg + 0.7°C)		
W/WRe26	0 to 400°C	±15.0°C or less		
	400 to 2400°C	±(0.2% of rdg + 2.0°C)		
Type N(AWG14)		±(0.2% of rdg + 1.3°C)	Measurement	
Kp vs Au7Fe	0 to 20 K	±4.5 K	accuracy	
	20 to 300 K	±2.5 K	±(0.3% of	
Pt25		±(0.15% of rdg + 0.6°C)	recording span)	
Pt50		±(0.3% of rdg + 0.6°C)		
Ni100(SAMA)				
Ni100(DIN)		±(0.15% of rdg + 0.4°C)		
Ni120				
J263*B	0 to 40 K	±3.0 K		
	40 to 300 K	±1.0 K		
Cu53		±(0.15% of rdg + 0.8°C)		
Cu100		±(0.2% of rdg + 1.0°C)		

Note) No RJC for PR40-20 (fixed to 0°C)

#### Remote Control 5 Points (/R1)

Item	Specifications		
Number of input terminals Input type	5 Isolated from the main circuitry through a photocoupler, built-in isolated power supply for the input		
	terminals, and shared common		
Input type and signal level			
Voltage-free contact	Contact closed at 200 $\Omega$ or less and contact open at 100 $k\Omega$ or greater		
Open collector	ON voltage: 0.5 V or less (sink current 30 mA or more), leakage current when OFF: 0.25 A or less		
Signal type	Edge, level, or trigger (250 ms or more)		
Operation	Perform the following control operations by applying a given signal to the remote signal input		
	terminal.		
	Start/stop recording (edge)		
	Alarm ACK (trigger)		
	Set the clock (adjust the clock to the nearest hour with the contact input, trigger)		
	Time When Signal Is Input Procedure		
	$00 \text{ min } 00 \text{ s to } 01 \text{ min } 59 \text{ s}$ Truncates the minutes and seconds. Example: $10:00:50 \rightarrow 10:00:00$		
	58 min 00 s to 59 min 59 s Rounds up the minutes and seconds. Example: $10.59:50 \rightarrow 11:00:00$		
	02 min 00 s to 57 min to 59 s No operation		

OL	000	,	٠.	 	00	•

Manual printout (trigger)Message 1 to 5 printout (trigger)

- Switch the chart speed (level)
- Start/stop computation (/M1 option) (edge)Reset computation (/M1 option) (trigger)

# 12.6 General Specifications

#### Construction

Item	Specifications
Mounting	Flush panel mounting (on a vertical plane)
Mounting angle	Inclined backward up to 30 degrees from a horizontal plane.
Allowable panel thickness	2 to 26 mm
Material	Case: drawn steel
	Front door: Aluminum die-cast
Color	Case: Charcoal gray light (Munsell 10B3.6/0.3 or equivalent)
	Front door: Charcoal gray light (Munsell 10B3.6/0.3 or equivalent)
Front panel	Water and dust-proof (complies with DIN40050-IP54)
Dimensions	$144(W) \times 144(H) \times 220(D)$ mm (D: depth from the panel mounting plane)
Weight	1-pen: approx. 2.1 kg, 2-pen: approx. 2.2 kg, 3-pen: approx. 2.3 kg, 4-pen: approx. 2.4 kg
· ·	6-dot: approx. 2.5 kg

#### **Normal Operating Conditions**

Item	Specifications		
Ambient temperature	0 to 50°C		
Ambient humidity	20 to 80%RH (at 5 to 40°C)		
Allowable power supply vo	oltage range		
	90 to 132, 180 to 264 VAC		
Power supply frequency	50 Hz±2%, 60 Hz±2%		
Vibration	10 to 60 Hz 0.2 m/s <sup>2</sup> or less		
Shock	Not acceptable.		
Magnetic field	400 A/m or less (DC and 50/60 Hz)		
Noise	Normal mode (50/60 Hz)		
	Volt: The peak value including the signal must be less than 1.2 times the rated value of the range (Example: 2 V for 2 V range).		
	TC: The peak value including the signal must be less than 1.2 times the rated value of the range.  RTD: 50 mV or less		
	Common mode noise (50/60 Hz): 250 VACrms or less for all ranges		
	Maximum noise voltage between channels (50/60 Hz): 250 VACrms or less. 6-dot model with the 3		
	legs isolated RTD (/N2 option) installed: 200 VACrms or less.		
Mounting position	Up to 30° of backward tilt angle allowed, no tilt to the left or right		
Warm-up time	At least 30 minutes after power on		
Altitude	2000 m or less above sea level		

#### **Power Supply**

**Specifications** 

Rated supply voltage	100 to 240 VAC			
Allowable power supply	voltage range			
	90 to 132, 180 to 26	64 VAC		
Rated power supply freq	uency			
	50 Hz, 60 Hz			
Rated power	Pen model: 40 VA, dot model: 40 VA			
Power consumption				
	Model	100 VAC	240 VAC	Maximum
	1- to 4-pen model	Approx. 12 VA*	Approx. 17 VA*	Approx. 40 VA
	6-dot model	Approx. 13 VA*	Approx. 18 VA*	Approx. 40 VA

#### Isolation

Item	Specifications		
Insulation resistance	Each terminal to ground terminal: 20 MΩ or more (at 500 VDC)		
Dielectric strength	Power supply to ground terminal: 1500 VAC (50/60 Hz), 1 minute		
_	Contact output terminal to ground terminal: 1500 VAC (50/60 Hz), 1 minute		
	Measuring input terminal to ground terminal: 1000 VAC (50/60 Hz), 1 minute		
	Between measuring input terminals: 1000 VAC (50/60 Hz), 1 minute (except for RTD input terminal)		
	Remote input terminal to ground terminal: 500 VDC, 1 minute		
Grounding	Grounding resistance: 100 $\Omega$ or less		

#### **Transport and Storage Conditions**

Item	Specifications
Ambient temperature	−25 to 60°C
Ambient humidity	5 to 95%RH (no condensation)
Vibration	10 to 60 Hz, 4.9 m/s² maximum
Shock	392 m/s <sup>2</sup> maximum (in packaged condition)

#### **Supported Standards**

Item	Specifications		
CSA	Certified by CSA22.2 No. 61010-1, Installation category II <sup>1</sup> , Measurement category II <sup>2</sup> , Pollution degree 2 <sup>3</sup>		
UL	Certified by UL61010B-1 (CSA NRTL/C)		
CE			
EMC	EN61326(Emission: Class A, Immunity: Annex A)		
	EN61000-3-2		
	EN61000-3-3		
	EN55011 Class A Group 1		
Low voltage directive	EN61010-1, Installation category II, Measurement category II, Pollution degree 2		
C-Tick	AS/NZS CISPR 11 Class A Group 1		

- 1 Installation category (overvoltage category) describes a number which defines a transient overvoltage condition. It implies the regulation for impulse withstand voltage. "II" applies to electrical equipment which is supplied from the fixed installation like a distribution board.
- 2 Applies to measuring circuits connected to low voltage installation, and electrical instruments supplied with power from fixed equipment such as electric switchboards.
- 3 "Pollution degree" describes the degree to which a solid, liquid, or gas which deteriorates dielectric strength or surface resistivity is adhering. "2" applies to normal indoor atmosphere. Normally, only non-conductive pollution occurs.

#### **Standard Performance**

Item Specifications

Measurement and recording accuracy

The following specifications apply to operation of the recorder under standard operation conditions:

Temperature:  $23 \pm 2^{\circ}$ C

Humidity:  $55\% \pm 10\%RH$ 

Power supply voltage: 90 to 132 or 180 to 264 VAC

Power supply frequency: 50/60 Hz ± 1% Warm-up time: At least 30 minutes.

Other ambient conditions such as vibration should not adversely affect the operation

Input Type Range Type		Measurement (Digital Display)		Recording (Trend)	
		Measurement Accuracy	Highest Res.	Recording Accuracy	Resolution
DC voltage	20 mV		10 μV	Measurement	Pen model:
	60 mV		10 μV	accuracy	Dead band 0.2%
	200 mV		100 μV	± (0.3% of recording span)	of recording span
	2 V	±(0.1% of rdg + 2 digits)	1 mV	recording span)	Dot model: Resolution 0.1 mm
	6 V		1 mV		Ticoolation o. i iiiiii
	20 V		10 mV		
	50 V	±(0.1% of rdg + 2 digits)	10 mV		
DC voltage	1-5 V	±(0.1% of rdg + 2 digits)	1 mV		
TC	R	±(0.15% of rdg + 1)	0.1°C		
	S	except R,S: 0 to 100°C, ±3.7°C			
(excludes	В	100 to 300°C, ±1.5°C			
RJC		B: 400 to 600°C, ±2°C			
accuracy)		Accuracy not warranted for			
		values less than 400°C			
	K	±(0.15% of rdg + 0.7°C)			
		except $\pm$ (0.15% of rdg + 1°C)			
		for –200 to –100°C			
	E	$\pm$ (0.15% of rdg + 0.5°C)			
	J	±(0.15% of rdg + 0.5°C)			
	Т	except ±(0.15% of rdg + 0.7°C)			
		for J: –200 to –100°C			
	N	±(0.15% of rdg + 0.7°C)			
	W	±(0.15% of rdg + 1°C)			
	L	±(0.15% of rdg + 0.5°C)			
	U	except $\pm (0.15\% \text{ of rdg} + 0.5\%)$			
		for L: -200 to -100°C			
	WRe				
DTD		±(0.2% of rdg + 1°C)			
RTD	Pt100 JPt100	±(0.15% of rdg + 0.3°C)			
ON/OFF input		Threshold level (2.4 V)	_	_	
	Contact	accuracy ± 0.1 V			
		≤ 1 KΩ: ON, ≥ 100 kΩ: OFF			
		(Parallel capacitance 0.01 μF or less)			
		U.UT με Of less)			

Measuring accuracy in case of linear scaling

Accuracy during scaling (digits) = measuring accuracy (digits)  $\times$  multiplier + 2 digits (rounded up) where the multiplier = scaling span (digits)/measuring span (digits).

• range type: 1-5 V

• measuring span: 1.000 to 5.000 V • scaling span: 0.000 to 2.000 Then, Measuring accuracy =  $\pm (0.1\% \times 5 \text{ V} + 2 \text{ digits})$ 

 $= \pm (0.005 \text{ V } [5 \text{ digits}] + 2 \text{ digits})$ 

 $= \pm 7$  digits

Multiplier =  $\{2000 \text{ digits } (0.000 \text{ to } 2.000)\}/4000 \text{ digits } (1.000 \text{ to} 5.000) = 0.5 \text{ Accuracy during scaling} = <math>\pm(7 \times 0.5 + 2) \text{ digits} = 6 \text{ digits } (\text{rounded up})$ 

Reference junction compensation

Internal/External selectable for each channel

Item	Specifications
Reference junction comper	nsation accuracy
	Above 0°C with input terminal temperature balanced (60 minutes after power on)
	Type R, S, B, W, WRe: ±1.0°C
	Type K, J, E, T, N, L, U: ±0.5°C
Maximum input voltage	±10 VDC (continuous) for ranges of 200 mV or less, TC, RTD, and DI ranges
,	±60 VDC (continuous) for 2 VDC or higher ranges
Input resistance	Approximately 10 M $\Omega$ or more for ranges of 200 mV or less and TC
	Approximately 1 M $\Omega$ for 2 VDC or higher ranges
Input source resistance	Volt, TC: $2 \text{ k}\Omega$ or less
	RTD input: $10 \Omega$ or less per wire (The resistance of all three wires must be equal).
Bias current	10 nA or less (except when burnout detection function is enabled)
Common mode rejection ratio	o 120 dB (50/60 Hz $\pm$ 0.1%, 500 $\Omega$ unbalanced, between the minus terminal and ground)
Normal mode rejection ratio	40 dB or more (50/60 Hz ± 0.1%)
Noise rejection	By the integrating A/D converter: The integration time is 16.7 ms, 20 ms, or 100 ms (dot model)
	Low-pass filtering (pen model): Filter time constant is 2 s, 5 s, or 10 s
	Moving average (dot model): The number of samples is 2 to 16.


#### **Effects of Operating Conditions**

Item	Specifications
Ambient temperature	With temperature variation of 10°C:
·	Measurement: ±(0.1% of rdg + 1 digit) or less
	Recording: Measurement fluctuation + ±0.2% of the recording span or less
	* Excluding the error of reference junction compensation
Power supply fluctuation	With variation within 90 to 132 V and 180 to 264 VAC (50/60 Hz):
,	Measurement: ±1 digit or less
	Recording: ±0.1% of the recording span or less
	With variation of ±2 Hz from rated power frequency (power supply voltage 90 to 132, 180 to 264 VAC):
	Measurement: ±(0.1% of rdg + 1 digit) or less
	Recording: Same as the measurement fluctuation
Magnetic field	AC (50/60 Hz) and DC 400 A/m fields:
3	Measurement: ±(0.1% of rdg 10 digit) or less
	Recording: ±0.5% of the recording span or less
Input source resistance	
DC voltage range	With variation of +1 k $\Omega$ :
	Ranges of 200 mV or less: Within ±10 μV
	Ranges of 2V or more: ±0.1% of rdg
TC range	With variation of +1 k $\Omega$ : ±10 $\mu$ V or less
RTD range	With variation of 10 $\Omega$ per wire (resistance of all three wires must be equal):
-	Measurement: ±(0.1% of rdg + 1 digit) or less
	Recording: Measurement fluctuation + ±0.1% of the recording span or less
	With maximum difference of 40 mΩ between wires: Approx. 0.1°C (for Pt100)
Mounting position	With a backward tilt of 30° or less
3.	Measurement: ±(0.1% of rdg + 1 digit) or less
	Recording: Indication fluctuation + ±0.1% of the recording span or less
Vibration	When a sinusoidal vibration along all three axis at a frequency between 10 to 60 Hz and an
	acceleration of 0.2 m/s <sup>2</sup> is applied for 2 hours
	Measurement: ±(0.1% of rdg + 1 digit) or less
	Recording: Indication fluctuation $+\pm 0.1\%$ of the recording span or less

#### **Other Specifications**

Item	Specifications
Clock	With a calendar function
Accuracy of clock	±100 ppm, excluding a delay (of 1 second, maximum) caused each time the power is turned on.
DST	The date/time for switching between standard time and DST can be specified.
Memory backup	A built-in lithium battery backs up the setup parameters and runs the clock (battery life: approximately ten years at room temperature).
Key lock function Key lock items	Password for releasing the key lock can be set.  RCD key, MENU key, DISP MENU key, FEED key, and function under the FUNC key (Alarm ACK, computation start/ stop, print, message, printout buffer clear, periodic printout reset, and pen or ribbon cassette exchange)
Internal light	Lights up the recording area of the chart paper. Uses a dedicated LED.
Noise	Machine Noise Information Ordinance 3.GSGV, Jan 18, 1991 Maximum noise level: 60 dB (A) or less (complies with ISO7779)

# 12.7 Dimensional Drawings

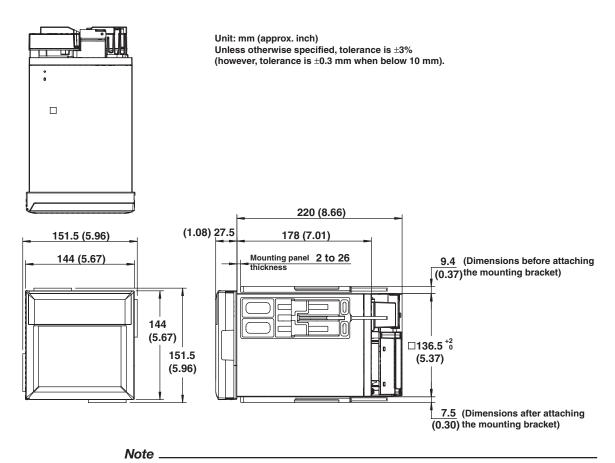

When mounting the recorder to a panel, use two brackets, top and bottom or left and right.

# Appendix 1 Periodic Printout and Printout Using the TLOG Timer (/M1 Option)

#### **Periodic Printout**


This section explains the contents of the periodic printout. The periodic printout contents vary between the pen model and dot model. The contents also vary depending on whether the periodic printout is in instantaneous mode, report mode, or Off.

Instantaneous mode or report mode is specified using **Print1** > **Mode** in Basic Setting mode.

The figure below illustrates the printout contents. The font used in the figure differs from that of the actual printout. The printout positions may also differ from those of the actual printout.

#### Pen Model

#### Instantaneous Mode

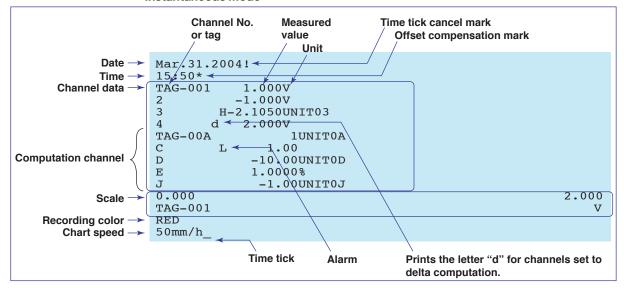

#### Date/Time

The date/time when the periodic printout was executed.

#### Time tick

Indicates the pen 1 position at the time the periodic printout was executed.

#### · Time tick cancel mark

Prints an exclamation point (!) when the time tick is not printed correctly.

#### Offset compensation mark

Prints an asterisk (\*) when offset compensation is enabled.

#### Channel data

Prints the channel numbers (1 to 4 or A to J) or tags, measured/computed values, and unit. Prints the letter "d" on channels set to delta computation.

#### • Alarm

Prints the alarm that is occurring. If multiple alarms are occurring, the alarm with the highest precedence is printed.

Alarm printout precedence: (Higher) H, L, T, t, h, I, R, r (Lower)

#### Scale

Prints the leftmost and rightmost values of the recording span and the channel number or tag for channels that have scale printout specified. The scale is printed for one channel at each periodic printout. The channel whose scale is printed changes in ascending order. The scale of channels that are being zone recorded is printed within the recording range of the zone.


#### Recording color

Prints the recording colors of channels that have scale printout and recording color printout specified.

#### Chart speed

Prints the chart speed.

#### **Report Mode**

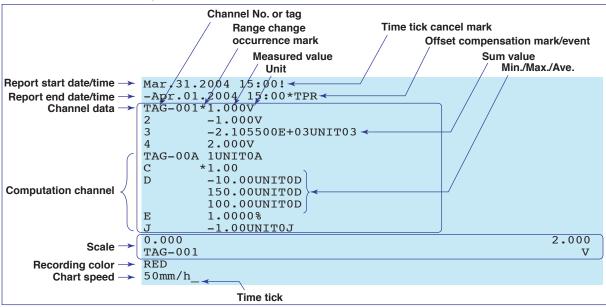

#### Report start date/time and report end date/time

The start date/time and end date time of the report (statistical calculation) (periodic printout interval).

#### • Time tick and time tick cancel mark

These are the same as with the instantaneous mode.

#### Offset compensation mark

This is the same as with the instantaneous mode.

#### Event

Prints the events that occurred in the interval.

T: Time change

P: Power failure or power OFF/ON

R: Data reset

#### Channel data

Prints the channel numbers (1 to 6 or A to J) or tags, report data, and unit.


An asterisk (\*) is printed for channels whose range type was changed in the interval.

#### · Scale, recording color, and chart speed

These are the same as with the instantaneous mode.

#### **Dot Model**

#### Instantaneous Mode

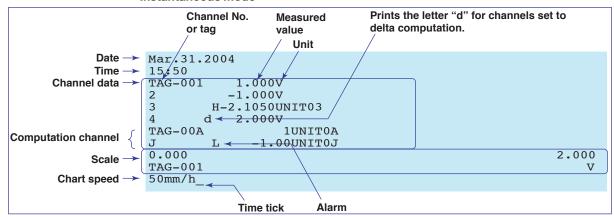

#### Date/Time

The date/time when the periodic printout was executed.


#### • Time tick

Indicates the position at the time the periodic printout was executed. If the time tick cannot be printed correctly, it is not printed.

#### . Channel data, alarm, scale printout, and chart speed

These are the same as with the instantaneous mode of the pen model.

#### **Report Mode**

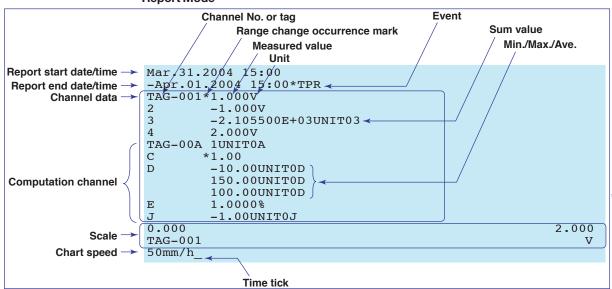

#### · Report start date/time and report end date/time

The start date/time and end date time of the report (statistical calculation) (periodic printout interval).

#### Time tick

This is the same as with the instantaneous mode.

#### Event

This is the same as with the report mode of the pen model.

#### Channel data

This is the same as with the report mode of the pen model. However, the channel numbers are 1 to 6 or A to P.


#### · Scale and chart speed

These are the same as with the instantaneous mode of the pen model.

#### Printout Using the TLOG Timer (/M1 Option)

Prints the computed values of computation channels for each interval determined by the TLOG timer.

#### Pen Model

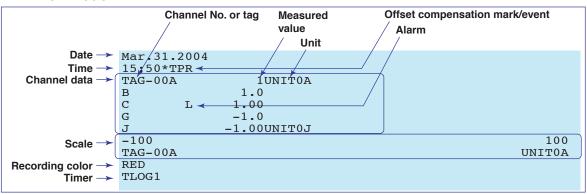

#### Date/Time

The date/time when the printout using the TLOG timer was executed.

#### · Offset compensation mark, scale, and recording color

These are the same as with the periodic printout of the pen model.

#### Event

This is the same as with the report mode of the periodic printout of the pen model.

#### Channel data

Prints the computation channel numbers (A to J) or tags, computed values, and unit.


#### Alarm

This is the same as with the instantaneous mode of the periodic printout of the pen model.

#### Timer

Prints the timer number being used.

#### **Dot Model**

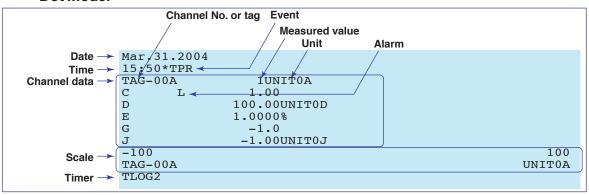

#### Date/Time

The date/time when the printout using the TLOG timer was executed.

#### Event

This is the same as with the report mode of the periodic printout of the pen model.

#### Channel data

Prints the computation channel numbers (A to P) or tags, computed values, and unit.

#### Alarm

This is the same as with the instantaneous mode of the periodic printout of the pen model.

#### Scale

These are the same as with the periodic printout of the pen model.

#### Timer

Prints the timer number being used.

This section explains the operation of the periodic printout report (statistical calculation) and the TLOG computation for special cases. In the explanation below, statistical calculation represents computation in periodic printout report mode or TLOG computation.

#### **Operation during Power Failures**

If a power failure occurs in the middle of statistical calculation, the operation is as follows when the power recovers.

The statistical calculation resumes when the power recovers. The exact operation will vary depending on whether the power is restored before or after the printout time.

Time of Recovery	Statistical Calculation Operation
After the printout time	Statistical calculation data is created immediately after power is restored. The measured/computed data up to the time of the power failure is used. At the next printout time, data after the power recovery is used to create the statistical calculation data.
Before the printout time	The data is created at the printout time after the power recovers. The measured/computed data excluding the power failure period is used.

#### Procedure of Handling "Over" Values during Periodic Printout

When an "over" value is input for sum or average computation, that value is not used in the computation.

\* An "over" value on a measurement channel refers to +Over or -Over. See section 12.4. An "over" value on a computation channel refers to a value that is less than or equal to -100000000 or greater than or equal to 100000000 excluding the decimal.

# Index

		chart speed	1-14, 5-13
Symbols	Page	cleaning	
1-5V	1.0	clearing alarm information	
		comment line	
1-5V input		common logarithm	1-24
1-5V low-cut function	7-24	communication input data	
		compensation voltage	
۸	Dama	computation errors	
Α	Page	computation-dedicated channels	
absolute time mode	9-21		
absolute value	1-24	computing equation	
accuracy of clock		computing equations	
activating the key lock		constants	·
adjusting the dot printing position		construction	
adjusting the dot printing positionadjusting the hysteresis		conventions used in this manual	
adjusting the pen position		copying & pasting a character string	
		current input	1-2
alarm		cursor	4-3, 4-4
alarm ACK	·		
alarm acknowledge operation		ъ	
alarm delay function		D	Page
alarm hysteresis		data display setup screen	8-1
alarm indication		data types (computation)	
alarm information		date format	
alarm output relays	1-9		
alarm output terminals	2-10	date/time	, -
alarm printout	1-18	DC voltage	
alarm type		de-energized	
alarm value		default values (basic setting mode)	
alarms on the delta computation channel	·	default values (setting mode)	
AND operation (alarm output relay)		delay high limit alarm	1-8
AND/OR		delay low limit alarm	1-8
assigned function (remote control)		deleting a character	4-4, 9-3
		deleting an entire character string	4-4, 9-3
assigning channels to recording pens	3-24	delta computation	1-3, 5-4
		diagnosis output	1-9, 7-2
В	Page	difference high limit alarm	
		difference low limit alarm	
bar graph	1-22	dimensional drawings	
base point of the bar graph	7-15, 9-27	display	
basic setting mode	4-1	display and key panel	
bias		display examples	
bias function	7-24		
brightness (display)	6-11	display type	
brightness (internal light)		display update rate	
buffer memory		display/recording language	
buffer overflow mark		displayed contents	
burnout detection	,	dot printing interval	
burnout detection	1-4, 7-5	duration (alarm delay)	6-10, 9-19
С	Page	E	Page
calibration	44.4		
		edge	1-29
calibration instrument		effects of operating conditions	12-20
cassette holder		EMC standards	iii
changing the settings		energized	1-11, 7-3
channel auto switching		entering basic setting mode	4-2
channel number		entering characters	
channel printout		entering setting mode	
channel range	5-10, 6-12	entering values	
channel switching interval	8-3	error messages	
character type	4-4, 9-3	ESC key	
chart cassette		exponent	
chart end output		external dimensions	
chart holder		external reference compensation	
		external reference compensation	1-4

chart paper ......3-5, 12-4 chart paper guide ......3-5 external reference compensation ...... 1-4

F	_	menu (data display setup)	
<u> </u>	Page	menu (setting mode)	
FAIL output	1-27	message	
fastest recording interval		message printout	1-19
feeding the chart paper		model	V
felt pen		mounting brackets	2-3
filter		mounting hole	3-1
format of the date		moving average	1-5, 7-19
four arithmetic operationfront cover tab of the chart cassette			
		N	Page
FUNC key operation	4-5	names of parts	2.1
Н	Page	new chart speed printout	
· ·	Page	non-hold	
half life of the brightness	11-9	non-hold operation	
handling precautions	2-1	normal operating conditions	
heat sink	3-3	number of samples of moving average	6-3
high limit alarm	1-7		
high limit on rate-of-change alarm	1-7	0	B
hold		0	Page
hold operation	· ·	offset compensation mark	App-1
hysteresis		ON/OFF input	
		opening the display	
		operation menus using the FUNC key	
	Page	operation mode	
		operations on the panel keys	
initializing the recorder settings		optional accessories	
input computation		optional functions	
input range	5-1	•	
input type	12-1	optional terminal	
inserting a character	9-3	order of precedence of computation	
inserting characters	4-4	over value	
installation location	2-2	over values during periodic printout	App-5
instantaneous mode	App-1		
integration time of the A/D converter	1-6, 7-4	Р	D
internal clock adjustment		<u> </u>	Page
internal light LED assembly		packing materials	vii
interval (periodic printout)		panel	
interval (rate-of-change alarm)		panel cutout	2-4
isolation	· ·	parallel connection	
		partial expanded recording 1-15	
		password (key lock)	
K	Page	password for releasing the key lock	
Landa de la companya		pen caps	
key lock	•	pen holder	
keys		pen offset compensation	
keys to be key-locked	7-18	periodic inspection	
I	-	periodic printout 1-18, periodic printout interval	
L	Page	• •	
language	7-22	plotter pen	
level		POC	
linear scaling		power (computation)	
List		power and other computations	
loading the chart paper		power failure	
logical computation		power supply	•
low limit alarm		power supply terminals	
		power switch	
low limit on rate-of-change alarmlow-cut		precautions (input signal wiring)	
iow-cut	5-0, 5-7	precautions (optional terminal wiring)	2-9
		precautions (power supply wiring)	2-12
M	Page	printing a message	
		printing the computed value	9-22
main display		printing the recorder settings	
manual printout	1-19. 3-13	printout contents	
measurable range	-,		
	1-2		App-4
measuring input terminal	1-2	printout using the TLOG timer	
measuring input terminal memory backup	1-2		12-5

<u>R</u>	Page
range type	1-2
rear panel	
recorder	
recording	
recording (computation channels)	
recording color 1-14, 7-8,	
recording span	
recording start printout	
recording zone	
reference junction compensation	1-4
reference pen	
reference time	
reflash alarm	
registering display types to screens	,
relational computation	
relative time mode	
relay contact input	
relay contact output	
relay numbers	
releasing the alarm output	
releasing the key lock	
remaining chart length	
remote control	
remote control input terminals	,
remote signal	
replacement period for expendable parts	
replacing felt pens	
replacing the internal light LED	
replacing the plotter pen	
report data	
report mode	
resetting the computed values	
resetting the report data	
resetting the TLOG computed value	
revisions	
ribbon cassette	
ribbon feeding knob	
ribbon is loose	
RJC	
RTD	
run modes	
S	Page
safety precautions	
safety standards	
safety symbols	
scale printout	
scaling	
scan interval	
secondary chart speed	
Setting complete screen	
setting mode	
settings necessary to use various functions	
Setup	
setup guide	
setup items (basic setting mode)	
setup Items (setting mode)	
shunt resistor	
skip	
sprocket teeth	
	3-5
square root	3-5 1-24
square rootsquare root computation	3-5 1-24 1-3, 5-7
square root	3-5 1-24 1-3, 5-7 7-24

standard performance	
standard temperature device	
start recording	
starting the computation	
status display	1-22
status of the remote control input terminal	9-5
stop recording	3-11
stoppers	3-4, 3-6
stopping the computation	
suffix code	
SUM scale	
supported standards	12-18
switching the display screen	3-12
<u>T</u>	Page
tag	6-7, 7-11, 9-18
TC	
temperature unit	
thermocouple	
thermocouple input	
time constanttime printout format	
time tick	
time tick cancel mark	
timer	
TLOG computation	
transistor input	
trend recording1-14	
trend recording interval	
trigger	
troubleshooting	10-4
type of measured values	
type of report data	
types of computations	
types of inputs	
Sheet here	
U	Page
unit	
unit in computations	
unit in computations	1-23
V	_
<u>v</u>	Page
VFD	
Volt	5-2
W	Page
wiring (measuring input )	2-8
wiring (optional terminal)	
wiring (power supply)	
5 dr	·····- ·-
Z	Dama
zone recording	1-14

#### **WARRANTY/DISCLAIMER**

OMEGA ENGINEERING, INC. warrants this unit to be free of defects in materials and workmanship for a period of **13 months** from date of purchase. OMEGA's WARRANTY adds an additional one (1) month grace period to the normal **one** (1) **year product warranty** to cover handling and shipping time. This ensures that OMEGA's customers receive maximum coverage on each product.

If the unit malfunctions, it must be returned to the factory for evaluation. OMEGA's Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective, it will be repaired or replaced at no charge. OMEGA's WARRANTY does not apply to defects resulting from any action of the purchaser, including but not limited to mishandling, improper interfacing, operation outside of design limits, improper repair, or unauthorized modification. This WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of having been damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA's control. Components in which wear is not warranted, include but are not limited to contact points, fuses, and triacs.

OMEGA is pleased to offer suggestions on the use of its various products. However, OMEGA neither assumes responsibility for any omissions or errors nor assumes liability for any damages that result from the use of its products in accordance with information provided by OMEGA, either verbal or written. OMEGA warrants only that the parts manufactured by the company will be as specified and free of defects. OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESSED OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. LIMITATION OF LIABILITY: The remedies of purchaser set forth herein are exclusive, and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.

CONDITIONS: Equipment sold by OMEGA is not intended to be used, nor shall it be used: (1) as a "Basic Component" under 10 CFR 21 (NRC), used in or with any nuclear installation or activity; or (2) in medical applications or used on humans. Should any Product(s) be used in or with any nuclear installation or activity, medical application, used on humans, or misused in any way, OMEGA assumes no responsibility as set forth in our basic WARRANTY/DISCLAIMER language, and, additionally, purchaser will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the Product(s) in such a manner.

#### **RETURN REQUESTS/INQUIRIES**

Direct all warranty and repair requests/inquiries to the OMEGA Customer Service Department. BEFORE RETURNING ANY PRODUCT(S) TO OMEGA, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OMEGA'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS). The assigned AR number should then be marked on the outside of the return package and on any correspondence.

The purchaser is responsible for shipping charges, freight, insurance and proper packaging to prevent breakage in transit.

FOR **WARRANTY** RETURNS, please have the following information available BEFORE contacting OMEGA:

- Purchase Order number under which the product was PURCHASED,
- 2. Model and serial number of the product under warranty, and
- 3. Repair instructions and/or specific problems relative to the product.

FOR **NON-WARRANTY** REPAIRS, consult OMEGA for current repair charges. Have the following information available BEFORE contacting OMEGA:

- Purchase Order number to cover the COST of the repair,
- 2. Model and serial number of the product, and
- 3. Repair instructions and/or specific problems relative to the product.

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering.

OMEGA is a registered trademark of OMEGA ENGINEERING, INC.

© Copyright 2005 OMEGA ENGINEERING, INC. All rights reserved. This document may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without the prior written consent of OMEGA ENGINEERING, INC.

# Where Do I Find Everything I Need for Process Measurement and Control? OMEGA...Of Course!

### Shop online at omega.com

#### **TEMPERATURE**

- Thermocouple, RTD & Thermistor Probes, Connectors, Panels & Assemblies
- Wire: Thermocouple, RTD & Thermistor
- Calibrators & Ice Point References
- ☑ Recorders, Controllers & Process Monitors
- Infrared Pyrometers

#### PRESSURE, STRAIN AND FORCE

- ☑ Transducers & Strain Gages
- Displacement Transducers
- Instrumentation & Accessories

#### **FLOW/LEVEL**

- ☑ Rotameters, Gas Mass Flowmeters & Flow Computers
- Air Velocity Indicators
- ☑ Turbine/Paddlewheel Systems
- ☑ Totalizers & Batch Controllers

#### pH/CONDUCTIVITY

- pH Electrodes, Testers & Accessories
- Benchtop/Laboratory Meters
- ☑ Controllers, Calibrators, Simulators & Pumps
- Industrial pH & Conductivity Equipment

#### **DATA ACQUISITION**

- ☑ Data Acquisition & Engineering Software
- ☑ Communications-Based Acquisition Systems
- Plug-in Cards for Apple, IBM & Compatibles
- Datalogging Systems
- Recorders, Printers & Plotters

#### **HEATERS**

- Heating Cable
- ☑ Cartridge & Strip Heaters
- ☑ Immersion & Band Heaters
- Flexible Heaters
- Laboratory Heaters

# ENVIRONMENTAL MONITORING AND CONTROL

- Metering & Control Instrumentation
- Refractometers
- Pumps & Tubing
- Air, Soil & Water Monitors
- ☑ Industrial Water & Wastewater Treatment
- pH, Conductivity & Dissolved Oxygen Instruments