



zSeries



User's Guide

Shop on line at

omega.com[®]

Ω OMEGA[®]

omega.com

e-mail: info@omega.com

For Latest Product Manuals

omegamanual.info

wiDRxx-zT
Wireless DIN Rail
Monitor and Controller



OMEGAnet® Online Service
omega.com

Internet e-mail
info@omega.com

Servicing North America:

U.S.A.:
ISO 9001 Certified

Omega Engineering, Inc., One Omega Drive, P.O. Box 4047
Stamford, CT 06907-0047 USA
Toll Free: 1-800-826-6342
FAX: (203) 359-7700

TEL: (203) 359-1660
e-mail: info@omega.com

Canada:

976 Berar
Laval (Quebec), H7L 5A1, Canada
Toll-Free: 1-800-826-6342
FAX: (514) 856-6886

TEL: (514) 856-6928
e-mail: info@omega.ca

For immediate technical or application assistance:

U.S.A. and Canada: Sales Service: 1-800-826-6342 / 1-800-TC-OMEGA®
Customer Service: 1-800-622-2378 / 1-800-622-BEST®
Engineering Service: 1-800-872-9436 / 1-800-USA-WHEN®

**Mexico/
Latin America:**

TEL: 001 (203) 359-1660
e-mail: espanol@omega.com

FAX: 001 (203) 359-7700

Servicing Asia:

China:

1698 Yi Shan Road, Unit 102
Min Hang District
Shanghai, China 201103 P.R.C.
Hotline: 800 819 0559 / 400 619 0559
e-mail: info@cn.omega.com

Servicing Europe:

Benelux:

Toll-Free: 0800 099 3344
FAX: +31 20 643 46 43

TEL: +31 20 347 21 21
e-mail: sales@omegaelng.nl

Czech Republic:

Frystatska 184
733 01 Karviná, Czech Republic
TEL: +420-59-6311899
e-mail: info@omegashop.cz

FAX: +420-59-6311114

France:

Toll-Free: 0805 541 038
FAX: 01 57 32 48 18

TEL: 01 57 32 48 17
e-mail: esales@omega.fr

Germany/ Austria:

Daimlerstrasse 26
D-75392 Deckenpfronn, Germany
Toll-Free: 0800 8266342
FAX: +49 (0) 7056 9398-29

TEL: +49 (0) 7056 9398-0
e-mail: info@omega.de

United Kingdom:
ISO 9001 Certified

OMEGA Engineering Ltd.
One Omega Drive, River Bend Technology Centre, Northbank
Irlam, Manchester M44 5BD United Kingdom
Toll-Free: 0800-488-488
FAX: +44 (0) 161 777-6622

TEL: +44 (0) 161 777-6611
e-mail: sales@omega.co.uk

It is the policy of OMEGA Engineering, Inc. to comply with all worldwide safety and EMC/EMI regulations that apply. OMEGA is constantly pursuing certification of its products to the European New Approach Directives. OMEGA will add the CE mark to every appropriate device upon certification.

The information contained in this document is believed to be correct, but OMEGA accepts no liability for any errors it contains, and reserves the right to alter specifications without notice.

WARNING: These products are not designed for use in, and should not be used for, human applications.

TABLE OF CONTENTS

Part 1 Introduction	1
1.1 Safety Considerations	1
1.2 Before You Begin	2
1.3 Description	2
Part 2 Hardware	5
2.1 Physical Characteristics and Mounting	5
2.1.1 Front and Side Views	5
2.1.2 Front Panel	6
2.1.3 Dimensions	7
2.1.4 Assembly and Mounting	8
2.1.4.1 Mounting Instruction	8
2.1.4.2 Antenna Mounting Instruction	9
2.1.5 Electrical Installation	10
2.1.5.1 Power Connections	10
2.1.5.2 Wiring Outputs	11
2.1.5.3 DIP Switches	13
2.2 Network Communications	14
2.2.1 10Base-T RJ45 Pinout	14
2.2.2 10Base-T Crossover Wiring	14
Part 3 Network Configuration	15
3.1 Ethernet (MAC) Address	15
3.2 Network Protocols	15
3.3 DHCP	15
3.4 DNS	16
3.5 IP Address	17
3.5.1 Default IP Address	17
3.5.2 Changing TCP/IP Properties on your Computer	18
Part 4 Network Operations	19
4.0 Testing the Connection	19
4.1 iConnect Software	20
4.2 Setting a New IP Address over the Network	22
4.3 wiDR's Configurations and Operations	23
4.3.1 Power Up wiDR	24
4.3.2 Get Readings from the End Device	26
4.3.3 Java Runtime Environment Setup	28
4.3.3.1 Java Runtime Environment 1.7 Setup Instructions	28
4.3.3.3 Browser Proxy Selection	29
4.3.4 Chart	30
4.3.5 Controller Setup	32
4.3.6 Setup	34
4.3.6.1 Input	34
4.3.6.2 Setpoints & On/Off Control	35
4.3.6.3 Alarms 1 & 2	37

4.3.6.4	Analog Output Retransmission	.39
4.3.6.5	Display	.40
4.3.6.6	Passcode ID	.41
4.3.7	Network Setup	.42
4.3.8	End Device Setup	.44
4.3.8.1	End Device Parameters	.46
4.3.9	Access Control	.48
4.4	Telnet Setup	.50
4.5	HTTPget Program	.52
4.5.1	HTTPget using Port 2000	.52
4.5.2	HTTPget and ARP to Setup Device IP Address	.53
4.6	ARP Protocol	.54
4.7	iLog Software	.55
4.8	Mail Notifier Software	.57
4.8.1	Installation	.57
4.8.2	Program Options Setup and Configuration	.58
4.8.3	Device Settings and Configuration	.59
4.8.4	Sending Txt Messages to a Cell Phone	.60
Part 5	Environment/Operating Conditions	.61
5.1	General Deployment Guidelines	.62
5.2	With Line-of-Sight	.63
5.3	Without Line-of-Sight	.64
5.4	Casing and Closure Around the Antenna	.64
5.5	Fine Adjustment in Performance	.65
Part 6	Specifications	.66
Part 7	Factory Preset Values	.69
Appendix A	Glossary	.73
Appendix B	IP Address	.74
Appendix C	IP Netmask	.75
Appendix D	ASCII Chart	.76
Appendix E	iLog Error Messages	.78
Appendix F	Warning and Regulatory Information	.78

LIST OF FIGURES:

Figure 1.1	Temperature Wireless Monitor and Control System on the Ethernet Network	.4
Figure 2.1	Front and Side Views	.5
Figure 2.2	Front Panel Power and Output Connections	.6
Figure 2.3	Dimensions	.7
Figure 2.4a	Mounting - Installation	.8

Figure 2.4b	Mounting - Removal	8
Figure 2.5	Antenna Mounting	9
Figure 2.6	Main Power Connections	10
Figure 2.7a	Mechanical Relay and SSR Output Wiring Hookup	11
Figure 2.7b	Pulse and Analog Output Wiring Hookup	11
Figure 2.8	Snubber Circuits Wiring Hookup	11
Figure 2.9	Typical Applications	12
Figure 2.10	Location of DIP Switches	13
Figure 2.11	RJ45 Pinout	14
Figure 2.12	10Base-T Crossover Cable Wiring	14
Figure 3.1	Label Detail	15
Figure 3.2	4 Position DIP Switch	16
Figure 3.3	Network Connections	18
Figure 3.4	Network Connections	18
Figure 4.1	Pinging the wiDR from MS-DOS Prompt	19
Figure 4.2	Assigning an IP Address using iConnect	20
Figure 4.3	Accessing the Wireless System for Configuration	21
Figure 4.4	Access Control	22
Figure 4.5	Wireless System Home Page Menu	23
Figure 4.6	LOGIN and ADMINISTRATOR Passwords	24
Figure 4.7	Readings	26
Figure 4.8	Comma Separated Value Format	27
Figure 4.9	Java 1.7 Screen Shots	28
Figure 4.10	Chart	30
Figure 4.11	Controller Setup	32
Figure 4.12	Input	34
Figure 4.13	Setpoints & On/Off Control	36
Figure 4.14	Alarms 1 & 2	38
Figure 4.15	Analog Output Retransmission	39
Figure 4.16	Display Menu	40
Figure 4.17	ID Code	41
Figure 4.18	Network Setup	42
Figure 4.19	End Device Setup	44
Figure 4.20	End Device Parameters	46
Figure 4.21	Remote End Char	47
Figure 4.22	Access Control	48
Figure 4.23	HTTPget Example of Polling End Device	53
Figure 4.24	ARP Commands and Responses	54
Figure 4.25	iLog Software Logging Data for End Device	55
Figure 4.26	Mail Notifier Main Window	57
Figure 4.27	Mail Notifier Profile Setup	58
Figure 4.28	Mail Notifier Device Settings	60
Figure 5.1	Operation in Buildings	62
Figure 5.2	Fresnel Zone	63

Figure 5.3	Materials in Buildings	64
Figure 5.4	Channels	65

LIST OF TABLES:

Table 2.1	Front Panel Connector	6
Table 2.2	Fuse Requirements (See Specifications)	10
Table 4.1	Front Panel LEDs	35
Table 4.2	List of ASCII/Telnet Commands	50
Table 4.3	iLog Excel Applications	56
Table 4.4	Mail Notifier Commands	59
Table 7.1	Factory Presets	69

PART 1 INTRODUCTION

1.1 Safety Considerations



This device is marked with the international caution symbol. It is important to read this manual before installing or commissioning this device as it contains important information relating to Safety and EMC (Electromagnetic Compatibility).

This instrument is a panel mount device protected in accordance with EN 61010-1:2001, electrical safety requirements for electrical equipment for measurement, control and laboratory. Installation of this instrument should be done by qualified personnel. In order to ensure safe operation, the following instructions should be followed.



This instrument has no power-on switch. An external switch or circuit-breaker shall be included in the building installation as a disconnecting device. It shall be marked to indicate this function, and it shall be in close proximity to the equipment within easy reach of the operator. The switch or circuit-breaker shall meet the relevant requirements of IEC 947-1 and IEC 947-3 (International Electrotechnical Commission). The switch shall not be incorporated in the main supply cord.



Furthermore, to provide protection against excessive energy being drawn from the main supply in case of a fault in the equipment, an overcurrent protection device shall be installed.



- Do not exceed voltage rating on the label located on the top of the instrument housing.
- Always disconnect power before changing signal and power connections.
- Do not use this instrument on a work bench without its case for safety reasons.
- Do not operate this instrument in flammable or explosive atmospheres.
- Do not expose this instrument to rain or moisture.
- Unit mounting should allow for adequate ventilation to ensure instrument does not exceed operating temperature rating.
- Use electrical wires with adequate size to handle mechanical strain and power requirements. Install without exposing bare wire outside the connector to minimize electrical shock hazards.

EMC Considerations

- Whenever EMC is an issue, always use shielded cables.
- Never run signal and power wires in the same conduit.
- Use signal wire connections with twisted-pair cables.
- Install Ferrite Bead(s) on signal wires close to the instrument if EMC problems persist.



Failure to follow all instructions and warnings may result in injury!



This is a Class A ITE product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

1.2 Before You Begin

Inspecting Your Shipment:

Remove the packing slip and verify that you have received everything listed. Inspect the container and equipment for signs of damage as soon as you receive the shipment. Note any evidence of rough handling in transit. Immediately report any damage to the shipping agent. The carrier will not honor damage claims unless all shipping material is saved for inspection. After examining and removing the contents, save the packing material and carton in the event reshipment is necessary.

Customer Service: If you need assistance, please call the nearest Customer Service Department, listed in this manual.

Manuals, Software: The latest Operation Manual as well as free configuration software (iConnect) are **available from the website listed on the cover pages of this manual, or on the CD-ROM enclosed with your shipment.**

NOTES, WARNINGS and CAUTIONS

Information that is especially important to note is identified by following labels:



NOTE: Provides you with information that is important to successfully setup and use the zSeries wireless monitoring and control system.



CAUTION or WARNING: Tells you about the risk of electrical shock.



CAUTION, WARNING or IMPORTANT: Tells you of circumstances or practices that can affect the instrument's functionality and must refer to accompanying documents.



TIP: Provides you helpful hints.

1.3 Description

The **zSeries** wireless monitoring and control system features meters compatible with a large and growing number of wireless sensors. For more information about the End Devices refer to the separate manual for these products.

The zSeries Monitor-Controller can monitor up to sixteen (16) readings coming from eight (8) End Devices.

Compact End Devices (**zED**) are powered by two AA 1.5V alkaline batteries.

High performance, high power End Devices in NEMA4 enclosures come with two choices. The AC version (**zED-P/-LCD**) is powered by a 5 Vdc universal AC power adapter that operates on any voltage worldwide (110 to 240 Vac). Should AC power fail, the unit can operate on a 3.6V ultra-long-life lithium back-up battery (included).

A number of completely wireless wireless End Devices are powered by two AA (**zED-LCD-AA**), two C-cell (**zED-CCELL**), or two D-cell (**zED-DCELL**) alkaline batteries. These End Devices can operate for weeks, months, or years before changing the batteries. Battery life depends on the type of sensor and other user settings such as the frequency of transmission. The zED-DCELL version is not recommended for shock, vibration or in moving equipment.

1.3 Description (continued)

The End Devices transmit up to 300 feet (**zED**) or 3280 feet (**zED-P/-LCD/-AA/-CCELL/-DCCELL**) without obstructions or interference, to a zSeries Monitor-Controller connected directly to an Ethernet network and the Internet. The wireless system complies with IEEE 802.15.4 operating at 2.4 GHz and the user can switch to different communication channels to avoid interference with other wireless technologies (e.g. Wi-Fi).

The Monitor-Controller also provides error detection mechanism for inactive communication and diagnostic information including signal strength and data transmission success rate to help troubleshooting potential wireless system installation issues.

The Monitor-Controller connects directly to an Ethernet network and the Internet and features award-winning embedded Web Server. It is easily configured and monitored with a Web browser over the Ethernet network or the Internet.

CONTROL, MONITOR, AND ALARM: The Monitor-Controller comes standard with dual outputs of either Form C relays, SSR's (solid state relays) or dc Pulses that can be used for ON/OFF control functions or alarms.

The Monitor-Controller can monitor alarm conditions for any or all of the wireless sensors. For example, the Monitor-Controller can be set up to trip an alarm if any one of the sensors indicated that it was above or below a pre-set alarm point.

Analog output is fully scalable and may be configured as an ON/OFF controller or re-transmission to follow your readings.

MONITOR AND CONTROL LOCALLY AND OVER THE INTERNET: The zSeries wireless monitoring and control system provides local monitoring and control, along with remote Web-based monitoring of readings from End Devices.

The zSeries system let's you monitor and record temperature over an Ethernet network or the Internet without any special software--just your Web Browser.

ETHERNET: The zSeries Monitor-Controller is an independent node on the network sending and receiving data in standard TCP/IP packets. It is easily configured from a Web Browser and can be password protected. From within an Ethernet LAN or over the Internet, the user simply types the IP address (such as 192.168.1.200) or an easy to remember name (such as "Oven5" or "Fixture") and the zSeries meter serves a Web Page with the current readings.

EMAIL ALARM: The zSeries Monitor-Controller can trigger an alarm if variables go above or below a Setpoint that you determine. Your alarm can be sent by email to a single user or to a group distribution list, including text messages to cell phones and PDA's. The "Mail Notifier" software is a free and easy program for this application.

1.3 Description (continued)

CHARTS AND GRAPHS: The zSeries system serves Active Web Pages to display real time readings and charts of temperature. You can also log data in standard data formats for use in a spreadsheet or data acquisition program such as Excel or Visual Basic. We offer a free and easy to use program iLog for logging data to Excel.

The virtual chart viewed on the web page is a JAVA™ Applet that records a chart over the LAN or Internet in real time. With the zSeries system there is no need to invest time and money learning a proprietary software program to log or chart the data. Chart scales are fully adjustable on the fly. For example, the chart can display one minute, one hour, one day, one week, one month or one year. Temperature can be charted across the full span or within any narrow range such as (20 to 30°C).

DATALOGGING: The OPC Server software makes it easy to integrate the zSeries wireless sensor system with many popular Data Acquisition and Automation programs offered by NEWPORT, OMEGA, Wonderware, iConics, Intellution, Rockwell Automation, and National Instruments, among others.

The following example **Figure 1.1** illustrates how you can hookup the Temperature Wireless System to your network:

The wireless system consists of a single Monitor-Controller and one or more End Devices. The End Devices will send data periodically to the Monitor-Controller where it serves as a gateway between the users and the End Devices. The users can access the data through the Monitor-Controller's Web Server and provided data acquisition software.

A standard web browser can be used to monitor and chart temperature. The browser can also be used to configure the Monitor-Controller's IP address, passwords for access and overall configuration parameters.

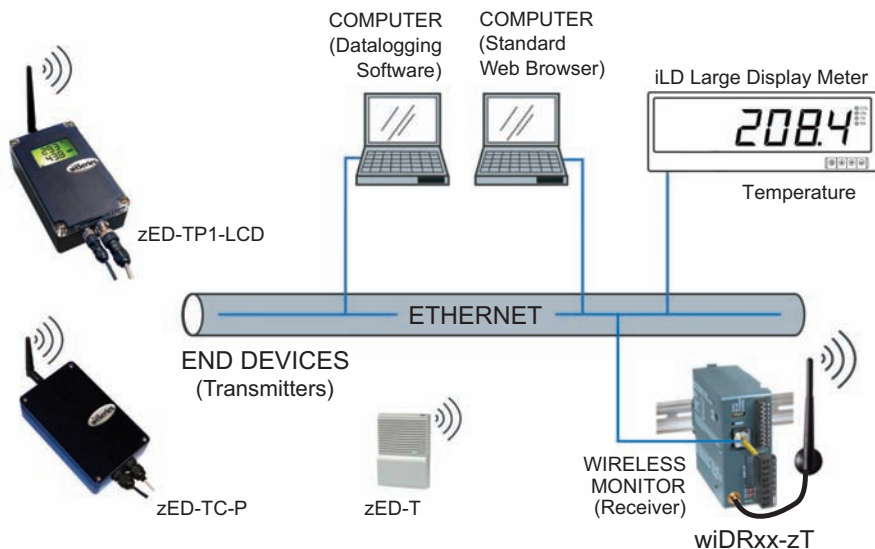


Figure 1.1 Temperature Wireless Monitor and Control System on the Ethernet Network

PART 2
HARDWARE

2.1 Physical Characteristics and Mounting
2.1.1 Front and Side Views

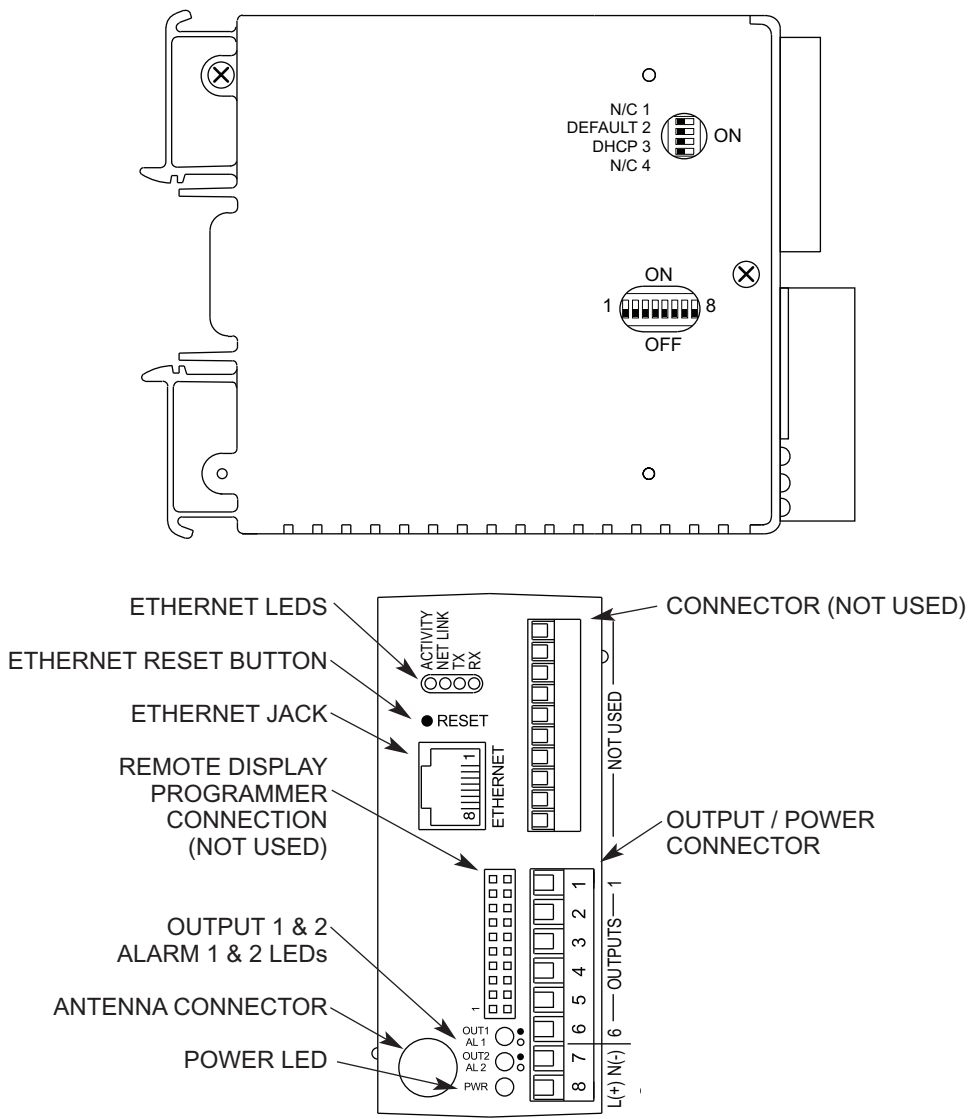


Figure 2.1 Front and Side Views

2.1.2 Front Panel

The front panel connections are shown in **Figure 2.2**.

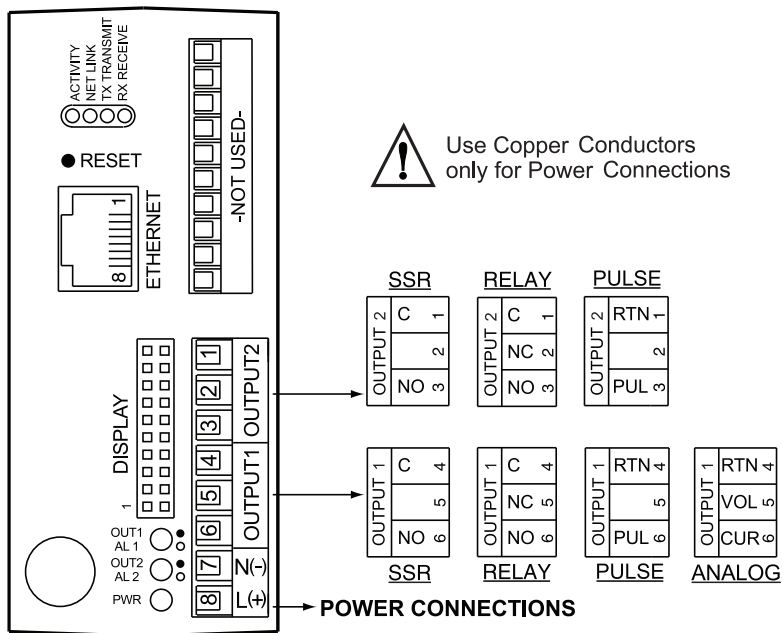


Figure 2.2 Front Panel Power and Output Connections

Table 2.1 Front Panel Connector

POWER	AC/DC Power Connector: All models
OUTPUT 1	Based on one of the following models: Relay SPDT Solid State Relay (SSR) Pulse Analog Output (Voltage and Current)
OUTPUT 2	Based on one of the following models: Relay SPDT Solid State Relay (SSR) Pulse
Network Communication Interface Section:	
ETHERNET	RJ45 interface for 10BASE-T connection.
RESET	Button: Used for power resetting the Ethernet board.
ACTIVITY	LED (Red) Blinking: Indicates network activities (receiving or sending packets).
NET LINK	LED (Green) Solid: Indicates good network link.
TX	LED (Yellow) Blinking: Indicates transmitting data to the serial port.
RX	LED (Green) Blinking: Indicates receiving data on the serial port.

2.1.3 Dimensions

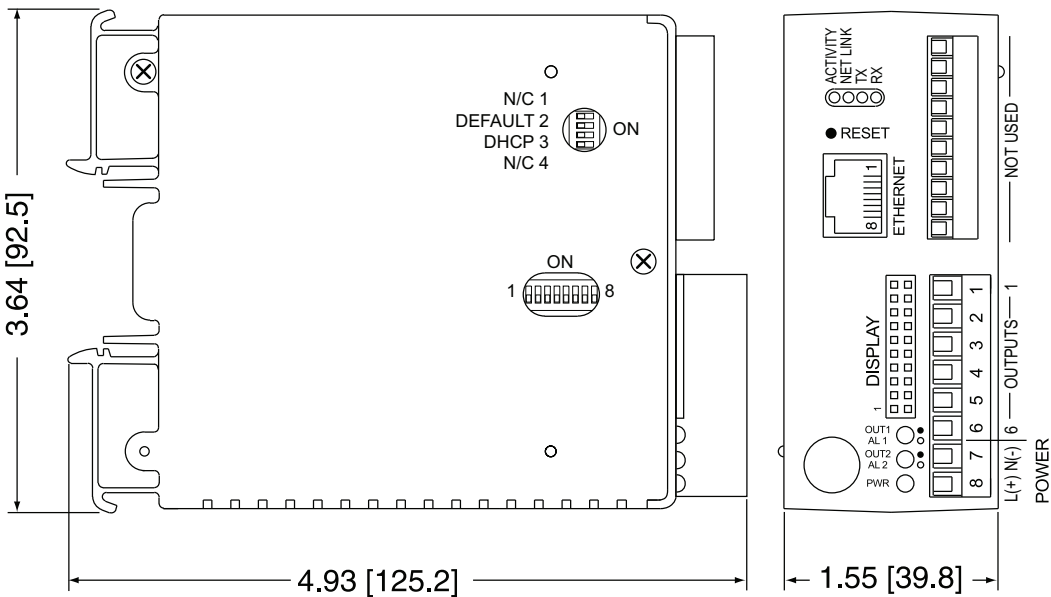


Figure 2.3 Dimensions

2.1.4 Assembly and Mounting

2.1.4.1 Mounting Instruction

MOUNTING

To install unit onto DIN Rail:

- 1) Tilt unit, position mounting slot onto DIN Rail, as shown.
- 2) Push unit towards DIN Rail and it will snap into place.


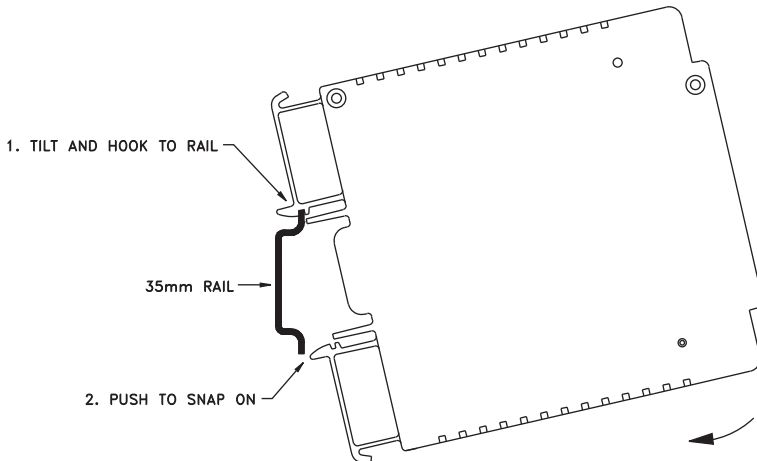


Figure 2.4a Mounting - Installation

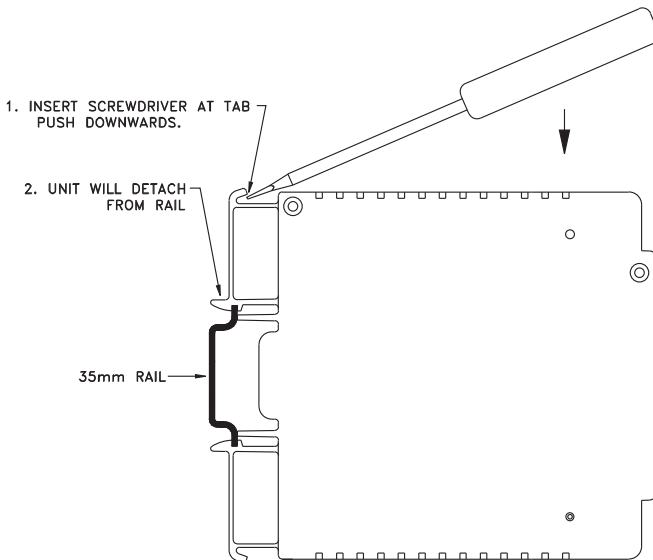

To remove unit from DIN Rail:

- 1) Insert flat screw-driver into tab and push downwards.
- 2) Unit will detach from DIN Rail.

Figure 2.4b Mounting - Removal

2.1.4.2 Antenna Mounting Instruction

For best reception: connect the antenna directly to the wiDR, if the device is not installed in a metal panel or enclosure.

If the wiDR is behind a metal panel or in a cabinet, use a coaxial cable to position the antenna outside outside of the enclosure in the open air.

Use the shortest cable that can reach a suitable location. The antenna on this wiDR and any End Devices should be installed in a vertical position, pointing towards the sky.



Metallic structure should be kept at least 0.8" (2 cm), although 2.4" (6 cm) is recommended away from the antenna.

Any casing that encloses the antenna should be plastic. In addition, it is also wise to avoid plastic case with dark fillers or colorants.

Refer to **Section 5** for more Environmental / Operating Conditions.

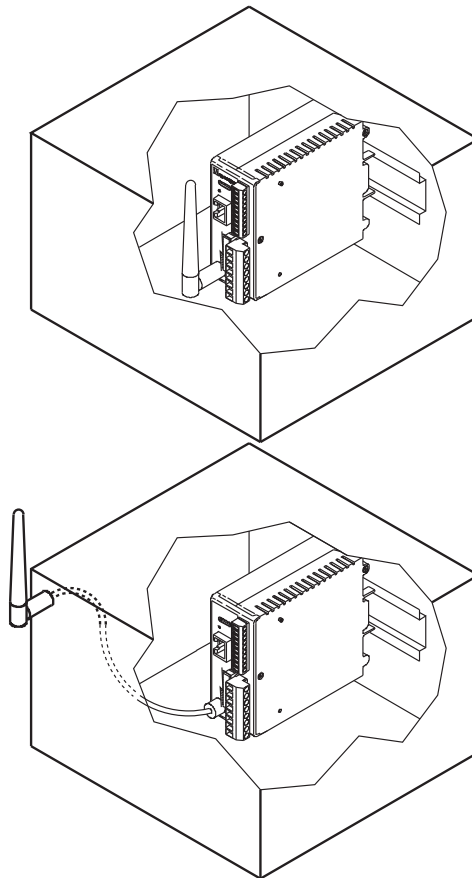


Figure 2.5 Antenna Mounting

2.1.5 Electrical Installation

2.1.5.1 Power Connections



Warning: Do not connect ac power to your wiDR until you have completed all output connections. This wiDR must only be installed by a specially trained electrician with corresponding qualifications. Failure to follow all instructions and warnings may result in injury!

Connect the main power connections as shown below.

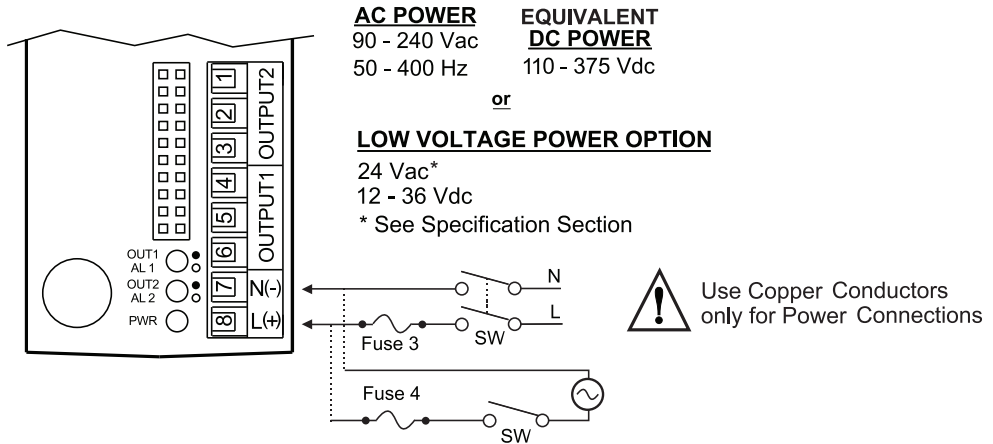


Figure 2.6 Main Power Connections

Table 2.2 Fuse Requirement (See Specifications Section)

FUSE	Connector	Output Type	For 115Vac	For 230Vac	DC
FUSE 1	Power	N/A	100 mA(T)	100 mA(T)	100 mA(T)
FUSE 2	Power	N/A	N/A	N/A	400 mA(T)



For the low voltage power option, in order to maintain the same degree of protection as the standard high voltage input power units (90 to 240 Vac), always use a Safety Agency Approved DC or AC source with the same Over-voltage Category and pollution degree as the standard AC unit (90 to 240Vac).



The Safety European Standard EN61010-1 for measurement, control, and laboratory equipment requires that fuses must be specified based on IEC127. This standard specifies for a Time-lag fuse, the letter code "T". The above recommended fuses are of the type IEC127-2-sheet III. Be aware that there are significant differences between the requirements listed in the UL 248-14/CSA 248.14 and the IEC 127 fuse standards. As a result, no single fuse can carry all approval listings. A 1.0 Amp IEC fuse is approximately equivalent to a 1.4 Amp UL/CSA fuse. It is advised to consult the manufacturer's data sheets for a cross-reference.

2.1.5.2 Wiring Outputs

This wiDR has two factory installed outputs. The SPDT Mechanical Relay, SPST Solid State Relay, Pulse and Analog Output Connection are shown below.

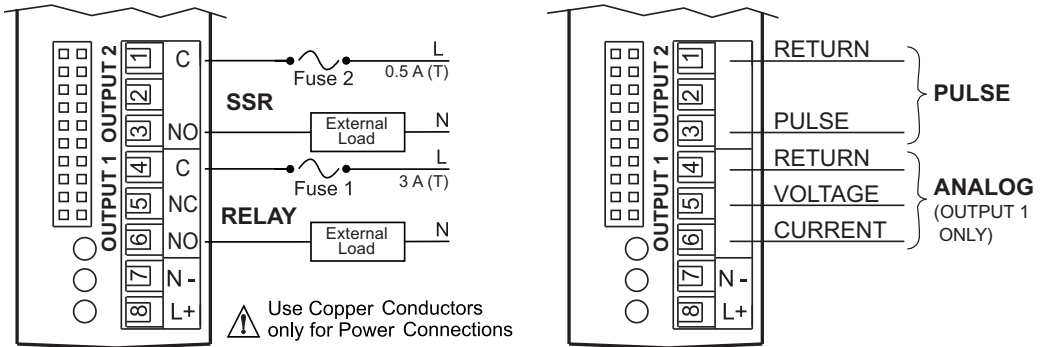


Figure 2.7

a) Mechanical Relay and SSR Outputs Wiring Hookup

b) Pulse and Analog Outputs Wiring Hookup

This device has snubber circuits designed to protect the contacts of the mechanical relays when it switches to inductive loads (i.e. solenoids, relays). These snubbers are internally connected between the Common (C) and Normally Open (NO) relay contacts of Output 1 and Output 2.

Note If you have an inductive load connected between Common (C) and Normally Closed (NC) contacts of the mechanical relays and you want to protect them from the rush current during the switching period, you have to connect an external snubber circuit between Common (C) and Normally Closed (NC) contacts as indicated in the figure below.


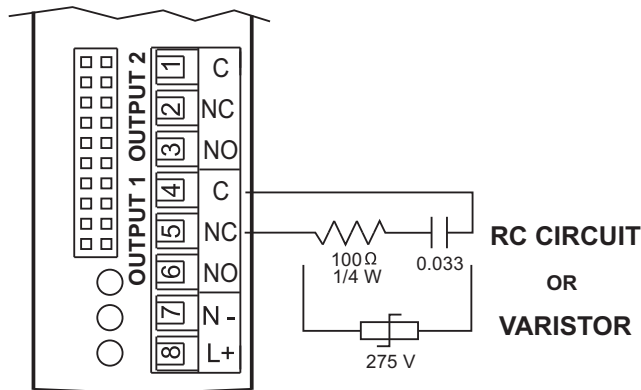



Figure 2.8 Snubber Circuits Wiring Hookup

2.1.5.2 Wiring Outputs (continued)

dc CONTROLLED SSR USED WITH TEMPERATURE CONTROLLER WITH dc VOLTAGE SSR DRIVER OUTPUT

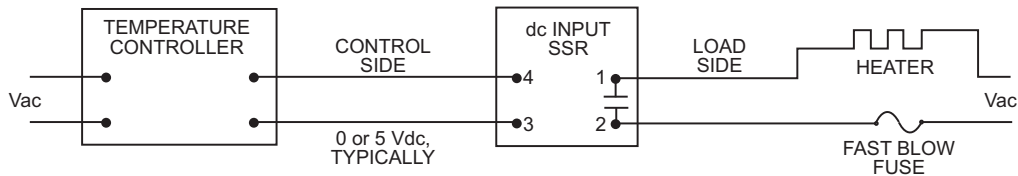

ac CONTROLLED SSR USED WITH TEMPERATURE CONTROLLER WITH MECHANICAL RELAY OUTPUT

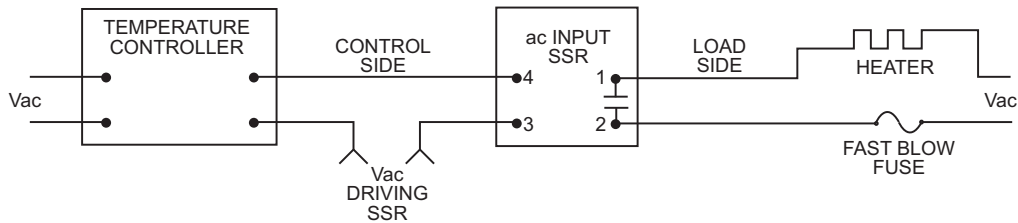

ac CONTROLLED SSR USED WITH TEMPERATURE CONTROLLER WITH TRIAC OUTPUT

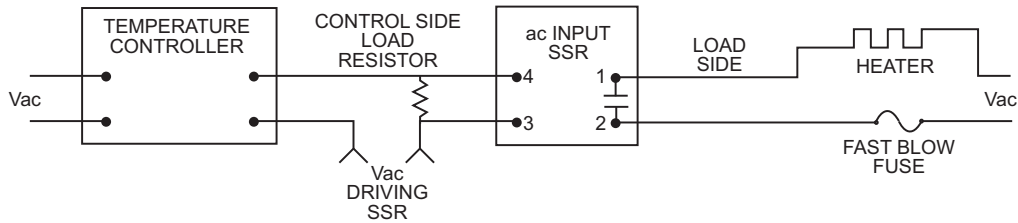


Figure 2.9 Typical Applications

2.1.5.3 Dip Switches

To change the DIP switches, follow the instructions below:

- 1. Locate the 4 and 8 position DIP switches.

Note The wiDR is shipped with all DIP switches in "OFF" position
To set the Wireless and Ethernet settings to Factory Default, Refer to **Section 7**.

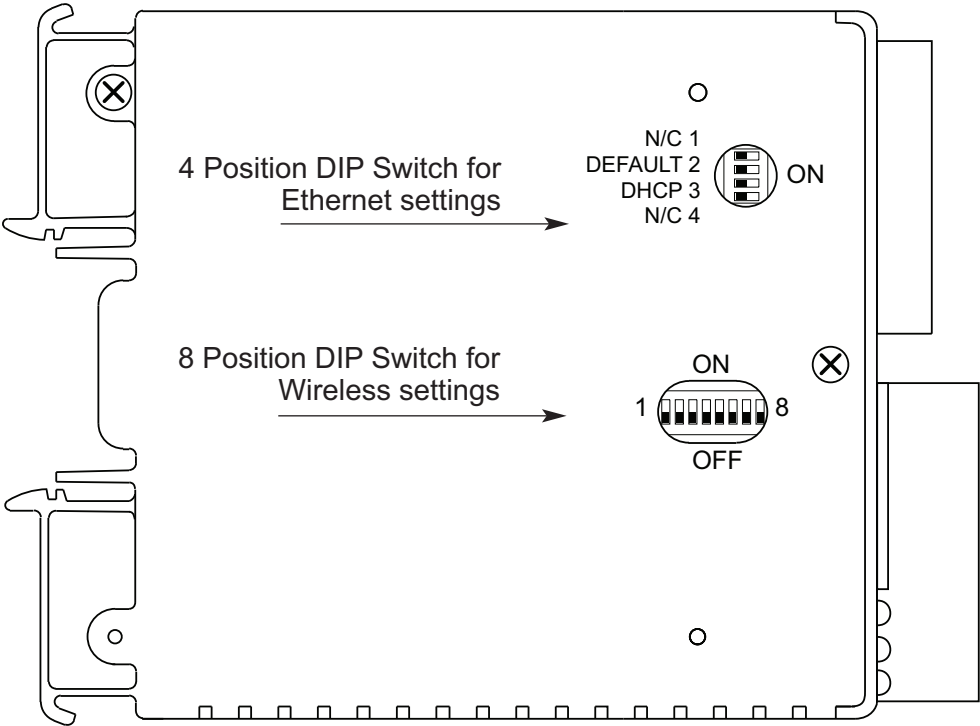


Figure 2.10 Location of DIP Switches

4 Position DIP Switch		8 Position DIP Switch	
1	Not Applicable	1	To change the Wireless settings to Factory Default
2	To change the Ethernet settings to Factory Default	2 - 8	Not Applicable
3	To enable/disable DHCP		
4	Not Applicable		

2.2 Network Communication Interfaces

2.2.1 10Base-T RJ-45 Pinout

The 10BASE-T Ethernet network (RJ-45) system is used in the wiDR for network connectivity. The 10 Mbps twisted-pair Ethernet system operates over two pairs of wires. One pair is used for receiving data signals and the other pair is used for transmitting data signals. This means that four pins of the eight-pin connector are used.

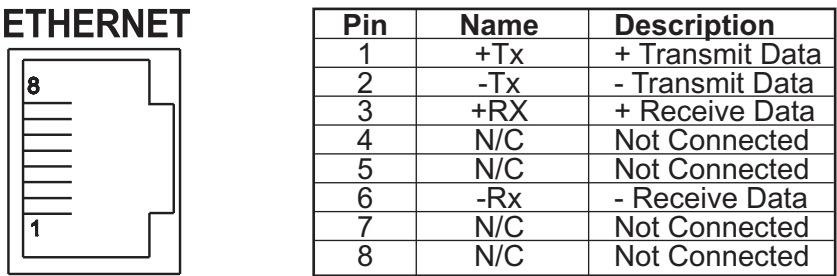


Figure 2.11 RJ45

2.2.2 10Base-T Crossover Wiring

When connecting the iServer directly to the computer, the transmit data pins of the computer should be wired to the receive data pins of the wiDR, and vice versa. The 10Base-T crossover cable with pin connection assignments are shown below.

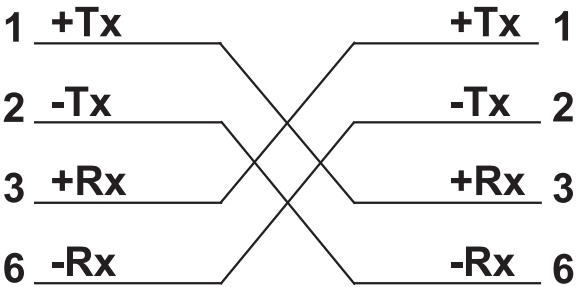


Figure 2.12 10Base-T Crossover Cable Wiring



Use straight through cable for connecting the wiDR to an Ethernet hub. The ports on the hub are already crossed.

PART 3

NETWORK CONFIGURATION

3.1 Ethernet (MAC) Address

MAC (Media Access Control) address is your computer's unique hardware number. When you're connected to the LAN from your computer, a correspondence table relates your IP address to your computer's physical (MAC) address. The MAC address can be found on the label of your wiDR (see **Figure 3.1**) and contains 6 bytes (12 characters) of hexadecimal numbers XX:XX:XX:XX:XX:XX For Example: 0A:0C:3D:0B:0A:0B

Remove the small label with the **default IP** address and there will be room to put your IP address.

There is also a small label for your Network ID address (NID).

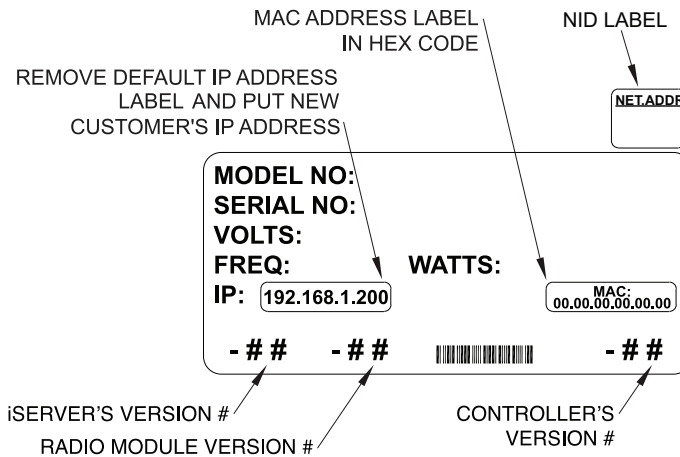


Figure 3.1 Label Detail

3.2 Network Protocols

The wiDR can be connected to the network using standard TCP/IP protocols. It also supports ARP, HTTP (Web Server), DHCP, DNS and Telnet protocols.

3.3 DHCP

DHCP, Dynamic Host Configuration Protocol enables computers and devices to extract their IP configurations from a server (DHCP server).

If DHCP is enabled on your wiDR, as soon as the wiDR is connected to the network, there is an exchange of information between DHCP server and the wiDR. During this process the IP address, the Gateway address, and the Subnet Mask will be assigned to the wiDR by the DHCP server.

3.3 DHCP (continued)

The wiDR is shipped with DHCP disabled (factory default).

If fixed or static IP address is desired, the DHCP must be disabled.

The DHCP can be enabled by setting the DIP switch # 3 to the “ON” position

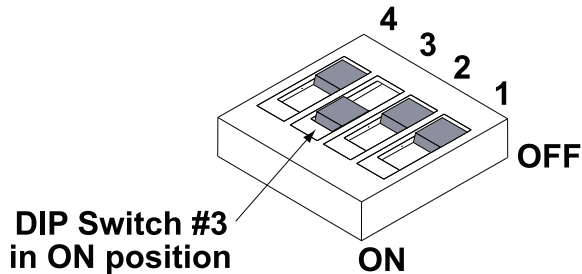


Figure 3.2 4 Position DIP Switch



Setting the wiDR's IP address to 0.0.0.0 will also enable DHCP.

3.4 DNS

DNS, Domain Name System enables computers and devices to be recognized over a network based on a specific name instead of IP addresses.

For example, instead of having to use **http://192.168.1.200** (IP address), you would use only **http://wis03ec** or any eight character name stored as Host Name under "Access Control" page from the Wireless System Home Page.

The default DNS name for the wiDR is "**wis**" followed by the **last four digits** of the MAC address of that particular wiDR.




1. It is very important to communicate with the network administrator in order to understand DHCP and its existing configurations on the host server, before enabling DHCP on the wiDR.
2. The wiDR units are shipped with a default static IP address of **192.168.1.200** and Subnet Mask of **255.255.255.0**.
3. On Windows servers where DHCP and DNS are separate functions it is very important to configure the DHCP server to communicate with DNS in order for the iServer's Host Name to correctly respond. If you cannot access the iServer using its Host Name, please contact your network administrator to make sure the DHCP and DNS servers are linked together.

3.5 IP Address

Every active device connected to the TCP/IP network must have a unique IP address. This IP address is used to establish a connection to the wiDR. Every computer using TCP/IP should have a unique 32-bit address which is divided into two portions, the network ID and the host ID. For instance, every computer on the same network uses the same network ID. At the same time, all of them have a different host ID. For more details about the IP address see **Appendix B**.

3.5.1 Default IP Address

The wiDR is shipped with a default IP address of **192.168.1.200** and Subnet Mask of **255.255.255.0**. If you are going to use a Web browser or Telnet program to access the wiDR using its default IP address, make sure that the PC from which you're establishing the connection has an IP address that is in the same range as the wiDR's IP address (**192.168.1.x**, where **x** can be any number from 1 to 254). See **Section 3.5.2**.


 **Note** Your PC's IP address cannot be the same as the wiDR's IP address.

You also need to make sure that your PC's Subnet Mask is **255.255.255.0**. This is a good way to access the wiDR over the network and make any configuration changes needed. If **192.168.1.200** is already in use on your network, use an Ethernet crossover cable between your computer and the wiDR to change the IP address or any other settings within the wiDR.

3.5.2 Changing TCP/IP Properties on Your Computer

Go to your computer's **Control Panel** then **Network Connections**.


Pick the network with the proper Ethernet card. Right click and choose **Properties**

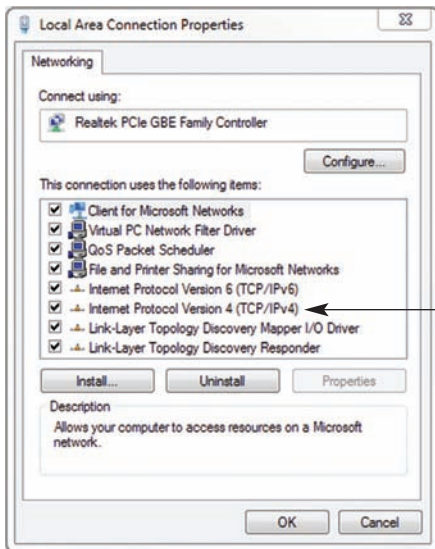

Look for **Internet Protocol Version 4 (TCP/IPv4)**, click on it and press **Properties**

Figure 3.3 Network Connections

Setup the IP address (in this case, 192.168.1.1) as shown below and press OK

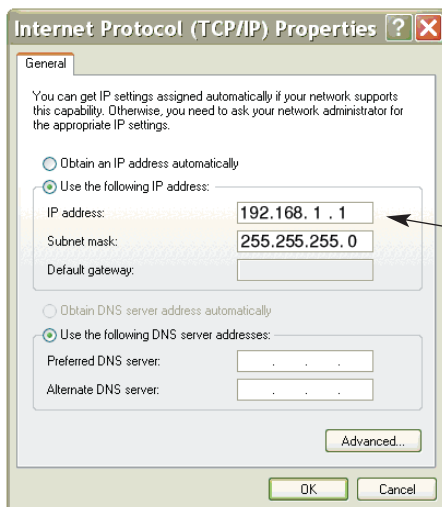

You can access the Coordinator's web server via any internet browser using IP address of **192.168.1.200**.

Once you log into the Coordinator's web server, you will be able to change its IP configuration according to **Section 4.2**.

Note

After you configure the Coordinator's IP configurations, you should go back and set your PC's previous IP settings.

Figure 3.4 Network Connections

PART 4

NETWORK OPERATIONS

This wiDR can be used and configured in several ways, depending on user's preference and network setup. It can be configured using a Web browser, like Internet Explorer. It can also be configured using the iConnect Configuration Software.


If DHCP and DNS servers are configured to exchange information, the connection will be very simple. All you need to do is to enable DHCP on the wiDR (see **Section 3.3**) and use a straight through network cable to connect the wiDR to an Ethernet hub or switch and power it up. Now, you can use the wiDR's default Host (Domain) Name, which is **wisxxxx** (where xxxx are the last four characters of its MAC address) to access the wiDR's Web Server.

If DHCP is not the preferred method, you can configure your PC's network connection with an IP address of **192.168.1.x** that is in the same range as the wiDR's default IP address (**192.168.1.200**) and connect to the wiDR using a cross-over network cable between your PC's network port and the wiDR. After you're done with configuring the wiDR, you can always set your PC back to its original settings. See **Section 3.5.2** for more details.

On your computer, from the MS-DOS Prompt window type "**ping 192.168.1.200**" and press Enter. If DHCP and DNS servers are used type "**ping wisxxxx**", where xxxx are the last four digits of the wiDR's MAC address, located on the wiDR. You should get a reply as shown in **Figure 4.1**.

Note You can use the host name (**wisxxxx**) instead of the IP address only if your DHCP server is configured to communicate with your DNS. Please consult with your IT department for details.

4.0 Testing the Connection

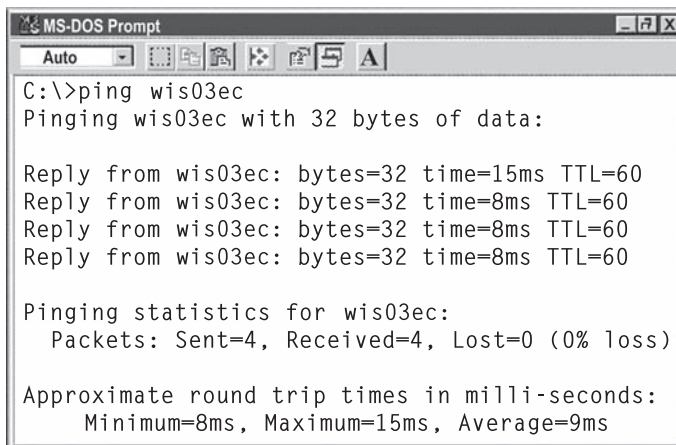

```
MS-DOS Prompt
Auto
C:\>ping wis03ec
Pinging wis03ec with 32 bytes of data:

Reply from wis03ec: bytes=32 time=15ms TTL=60
Reply from wis03ec: bytes=32 time=8ms TTL=60
Reply from wis03ec: bytes=32 time=8ms TTL=60
Reply from wis03ec: bytes=32 time=8ms TTL=60

Pinging statistics for wis03ec:
    Packets: Sent=4, Received=4, Lost=0 (0% loss)

Approximate round trip times in milli-seconds:
    Minimum=8ms, Maximum=15ms, Average=9ms
```

Figure 4.1 Pinging the wiDR from MS-DOS Prompt

This proves that the connection is proper and you can get into configuration or run mode using the Telnet or Web browser.

4.1 iConnect Software

The wiDR may also be assigned an IP Address by using the iConnect software.

- a) Download the iConnect software from the website listed in this manual.
- b) Install iConnect software on a networked PC. This software is compatible with Windows 95, 98, NT, 2000, and XP.
- c) Use iConnect to assign an IP address to the wiDR and access its web pages for configuration. You can also use any standard web browser to access the Wireless System' web pages. Consult with your IT department for obtaining an IP address.

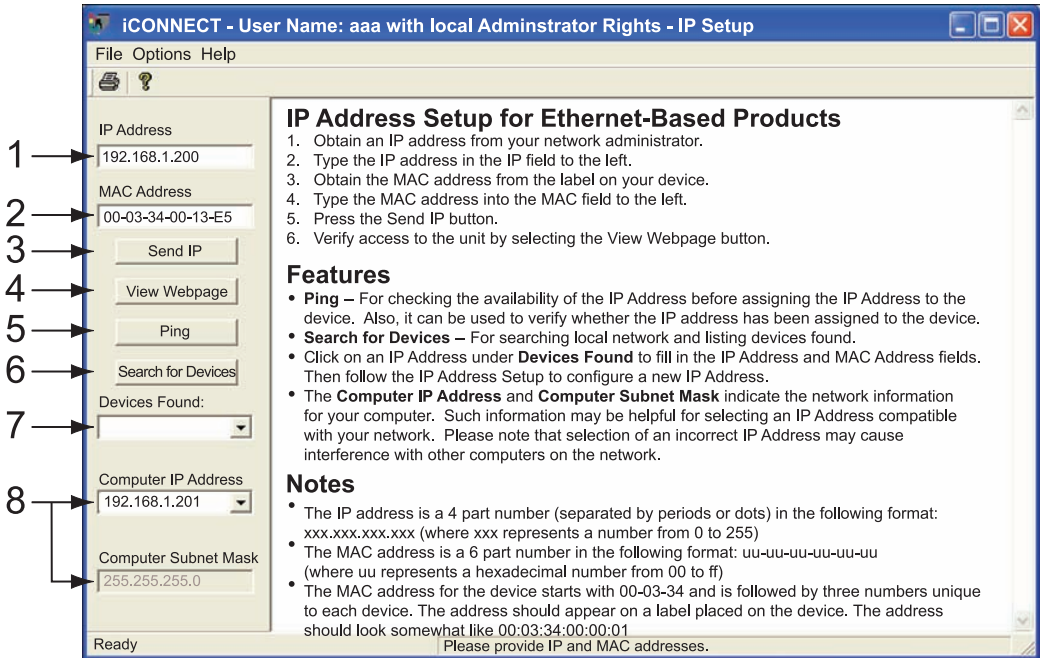


Figure 4.2 Assigning an IP Address using iConnect

- 1) Place the IP address in this box.
- 2) Take the MAC address from the label attached to the bottom of the wiDR and place it in this box.
- 3) Click here to send the above IP address to the wiDR.
- 4) After the IP address is assigned to the wiDR, click here to access it's web pages.
- 5) Click here to Ping the wiDR whose IP address is shown in the IP address box.
- 6) Click here to find all the wiDRs on your network .
- 7) The IP addresses for the wiDRs found by the iConnect will be listed here.
- 8) These fields indicate the IP address and the subnet mask of the PC on which the iConnect is running.

4.1 iConnect Software (continued)

- d) To access the Wireless System for Configuration:
Click on the “View Webpage” button, you will access the Wireless System’s home page, refer to **Section 4.3** for details.

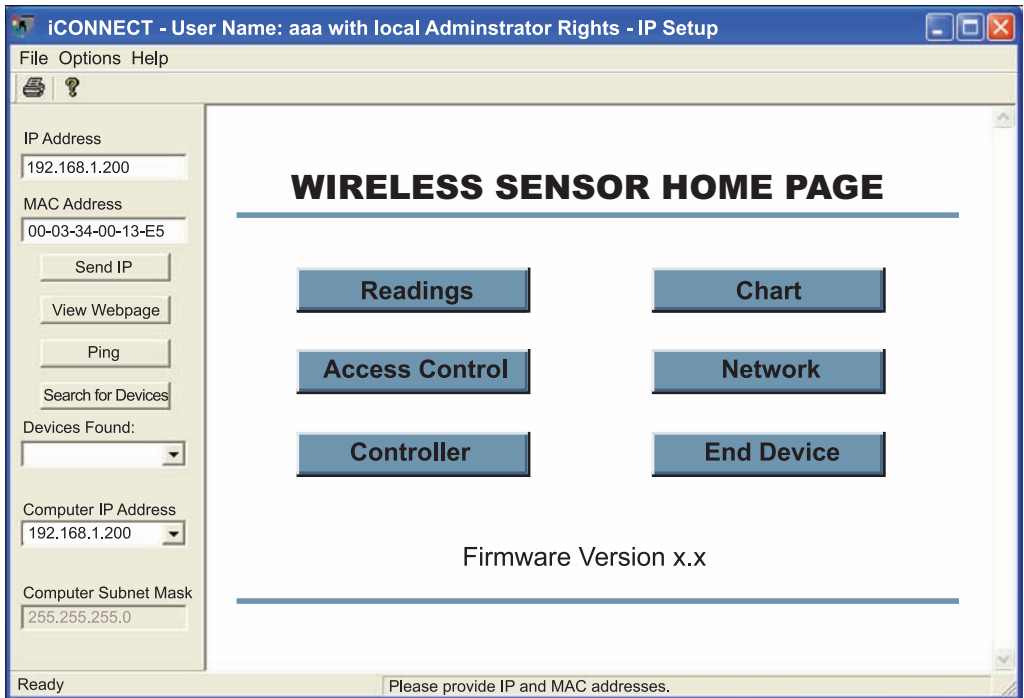


Figure 4.3 Accessing the Wireless System for Configuration

4.2 Setting a New IP Address over the Network

Besides using the iConnect software, you may use the wiDR's default IP address to access it and assign a new IP address to it.

The wiDR is shipped with a default IP address of **192.168.1.200** and Subnet Mask of **255.255.255.0**. You can configure your PC's Network connection with an IP address that is in the same range as the wiDR's IP address (**192.168.1.x**) and connect to the wiDR using a crossover network cable between your PC and the wiDR.

With this completed, you can go to the DOS-Prompt and ping **192.168.1.200**. If you receive responses back (**Figure 4.1**), you can go to the Web browser and type in **http://192.168.1.200** and it will take you to the Wireless System' Home Page.

Select button, you'll be asked for the password. You should be on the Access Control page where you can simply type in the desired Static IP address, and click Save.

For more details about the "Access Control" page refer to **Section 4.3.10**.

A screenshot of a web browser window displaying the 'ACCESS CONTROL' page. The browser's address bar shows 'http://192.168.1.200'. The page has a title 'ACCESS CONTROL' in large, bold, black letters. Below the title, there are several input fields for configuration: 'Login Password' (12345678), 'Admin Password' (00000000), 'Host Name' (wis21d9), 'MAC Address' (00:03:03:00:21:D9), 'IP Address' (192.168.1.200), 'Gateway Address' (0.0.0.0), and 'Subnet Mask' (255.255.255.0). Below these fields are two buttons: 'Save' and 'Reset'. Further down is a 'Network Reset' button. At the bottom of the page is a link labeled 'Main Menu'. The browser window has a standard Windows-style title bar and taskbar at the bottom.

Figure 4.4 Access Control

For the IP address to take effect, the wiDR needs to be turned OFF and ON using the "Network Reset" button. Pressing the physical button marked "RESET" on the wiDR does the same thing.

You can now connect the wiDR to an Ethernet hub using a straight through cable, power it up, and follow the ping routine mentioned in the previous section.

4.3 wiDR's Configurations and Operations

Using a web browser, you should be able to view the wiDR's homepage.

- Start your web browser.
- From the browser you type <http://wisxxxx> using the last four-digits from the MAC address label located on the wiDR (see **Figure 3.1**), if DHCP and DNS are used. If a static IP address is used, then simply type <http://x.x.x.x>, where **x.x.x.x** is the wiDR's IP address.
- The Home Page, will be displayed.

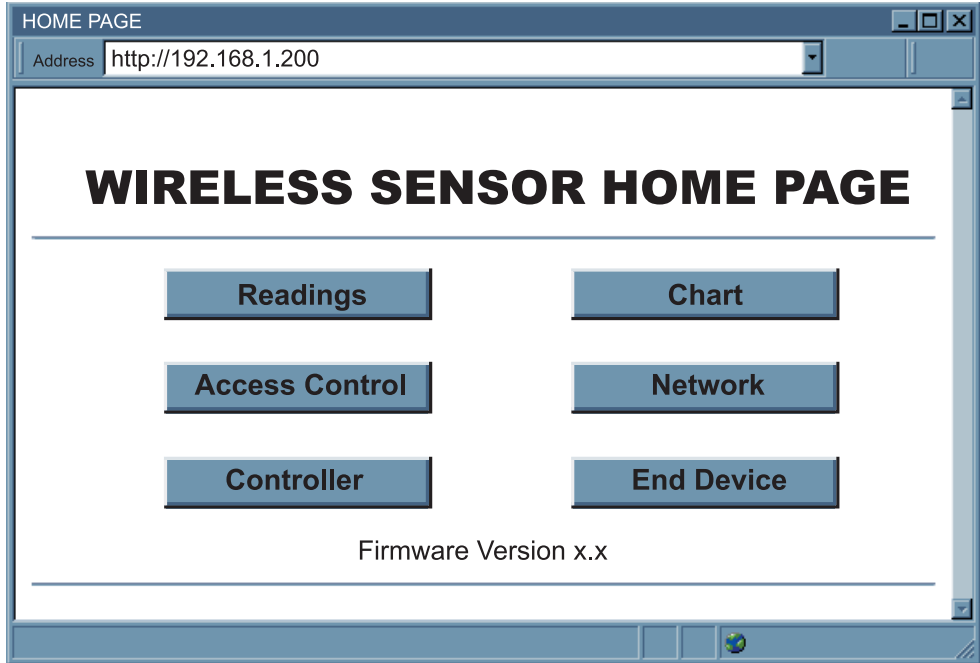


Figure 4.5 Wireless System Home Page Menu



In order to access certain menu items of the Home Page, users may be prompted for a password, as shown in the two following figures.

4.3 wiDR's Configurations and Operations (continued)



Figure 4.6 LOGIN and ADMINISTRATOR Passwords

There are 2 different access levels:

1. ADMINISTRATOR Password (administrator) allows certain groups and individual users to access and modify parameters without any restrictions.
The default password is **00000000**. This password can be up to 16 alphanumeric case-sensitive characters.
2. LOGIN Password (operator) allows users to access and modify all of the parameters, except “Access Control” which requires an Administrator password.
The default password is **12345678**. This password can be up to 16 alphanumeric case-sensitive characters.

4.3.1 Power Up wiDR

For instructions on how to power the wiDR, refer to **Section 2.1.5**.

To verify that an End Device is working before deploying remotely, install the battery and power it on right next to the wiDR. When the End Device is powered on, it will search for the wiDR in all 16 channels reserved for IEEE 802.15.4 (channel 11 through 26) by sending request packets.

While it's searching, the blue LED on the End Device blinks every second. Once the wiDR responds to the End Device request, the LED will blink only when the End Device sends data to the wiDR (default is every 10 seconds). If the wiDR is not powered or it's out of reach, the End Device will keep searching until the batteries discharge (e.g. roughly 36 hours for zED).

Once the wiDR responds back to the End Device it will include its network number in the response packet called Beacon. At this time the End Device would know which is the correct wiDR (as there could be more than one wiDR responding to the End Device's request packet). The channel on which the wiDR responds back is automatically picked to be the clearest among all 16 channels and therefore the End Device starts sending data to the wiDR on that particular channel.

4.3.1 Power Up wiDR (continued)

Once the End Devices and the wiDR start communicating, make sure to leave DIP switch #1 of the wiDR to **OFF** position. This will lock the wiDR on the same channel it initially established the connection.

After the End Device transmits data to the wiDR, it expects an acknowledgment packet back from the wiDR. If the End Device does not receive an acknowledgment packet back within 50 ms, it will go to sleep mode for 2 seconds and then retransmit the data.

This cycle will be repeated 10 times and if it still does not receive the acknowledgment packet back, the End Device takes a longer sleep time of 3 minutes.

After 3 minutes, the End Device retransmits the data every 2 seconds for 4 times and each time it waits for 50 ms for an acknowledgment. If it still does not receive a response back from the wiDR it will take another 3 minutes of sleep.

This last sequence will continue until the batteries are drained. Through the whole retransmission cycle explained above the blue LED on the End Device will blink anytime retransmission takes place.

The data being retransmitted will automatically get updated as new readings take place.

If the communication channel is manually selected in the wiDR, the End Device(s) must be power-cycled in order to establish connection over the new channel.

If it's not possible to power-cycle the End Devices locally, a remote option is available through the wiDR's Web server.

When there are two End Devices with the same Device ID, both will be transmitting data every second with their LEDs blinking once a second. The wiDR will receive data from both End Devices and will display their data alternately. On the "Readings", "Chart", and "Diagnostic" pages of the wiDR's Web server, the phrase "ID" error code will be placed indicating the conflict. Once the problem is resolved, click on the "Reset Sensor" button located on the Sensors Parameters page to remove the "ID" error code.

4.3.2 Get Readings from the End Device

Once you see the End Device's LED blinking periodically, it means it is sending data which will appear on the "Readings" page. To view the data in a chart format, you can use the "Chart" page.

Click on [Readings](#) from the Home Page, the following page will appear, showing updates of the Primary and Secondary Sensor Temperature readings.

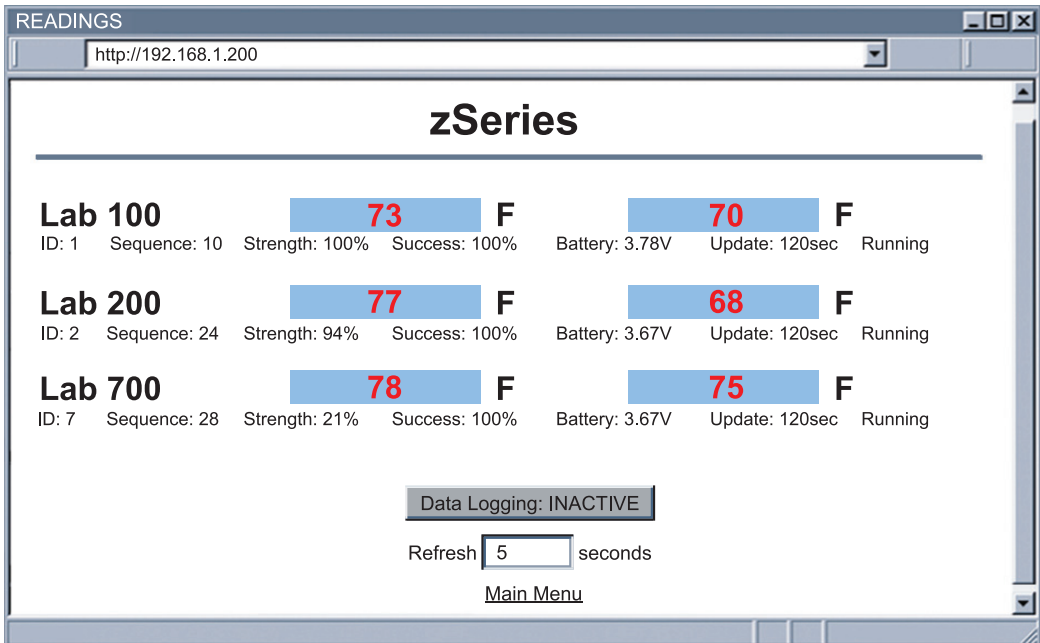


Figure 4.7 Readings

Note

While accessing the "Readings" page, If a blank screen appears without any "java application running" or image of a "Java logo", please verify you have the latest Java Runtime Environment installed and configured according to the **Section 4.3.3.1**. If you do not have Java Runtime Environment, you may download it from our website or contact the Customer Service Department nearest you.

The "Readings" fields are defined as follows:

Title: wiDR's name, assigned in Network Setup Menu.

Name: End Device's name, assigned in End Device Setup Menu.

Reading Values:

First Reading: Temperature reading from the Primary Sensor.

Second Reading: Temperature reading from the Secondary Sensor.

Note

Reading "Open" indicates that no sensing device is detected.

4.3.2 Get Readings from the End Device (continued)

ID: End Device ID/address

Sequence: Sequence number [0-255].

The Sequence number is incremented for each newly received data. Therefore, it indicates if the sensor is transmitting data successfully.

Strength: It is the radio signal strength (0-100%), the higher the better.

Success: 0-100%, a low success rate indicates a longer data delay, shorter battery lifetime and high network traffic.

Battery: The total voltage of the battery in the End Device. Once the voltage gets to 2.7V, the batteries should be replaced.

Update: The time interval the End Device transmits data to the wiDR.


Running/Lost/ID:

It displays “Running” if the wiDR is receiving packages from the End Device.

It displays “Lost” if the wiDR has not received data from the End Device.

It displays “ID” if more than one End Device is configured with the same Device ID.

Data Logging: Press to activate/de-activate data logging. When it is pressed to activate data logging, a file browser pops up to ask for which file data will be saved. Data is in Comma Separated Value (csv) format, which can also be opened in Excel. Please name file with **.csv** extension.

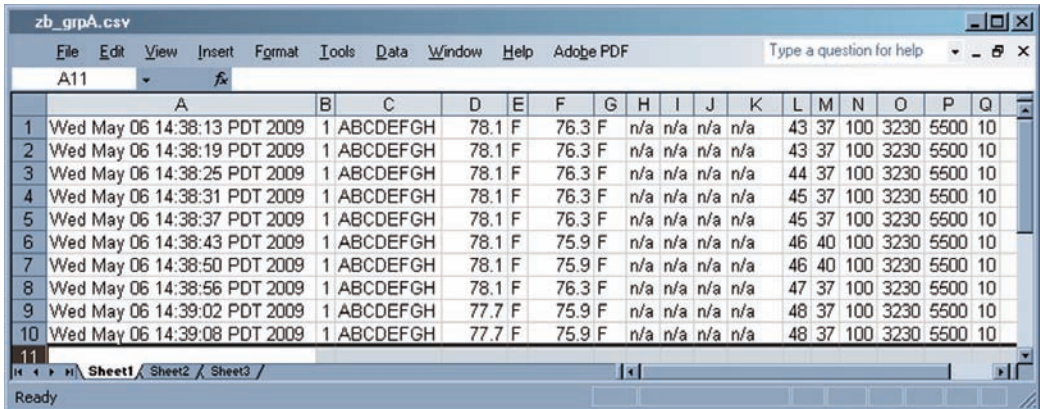

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	Wed May 06 14:38:13 PDT 2009	1	ABCDEFGH	78.1	F	76.3	F	n/a	n/a	n/a	n/a	43	37	100	3230	5500	10
2	Wed May 06 14:38:19 PDT 2009	1	ABCDEFGH	78.1	F	76.3	F	n/a	n/a	n/a	n/a	43	37	100	3230	5500	10
3	Wed May 06 14:38:25 PDT 2009	1	ABCDEFGH	78.1	F	76.3	F	n/a	n/a	n/a	n/a	44	37	100	3230	5500	10
4	Wed May 06 14:38:31 PDT 2009	1	ABCDEFGH	78.1	F	76.3	F	n/a	n/a	n/a	n/a	45	37	100	3230	5500	10
5	Wed May 06 14:38:37 PDT 2009	1	ABCDEFGH	78.1	F	76.3	F	n/a	n/a	n/a	n/a	45	37	100	3230	5500	10
6	Wed May 06 14:38:43 PDT 2009	1	ABCDEFGH	78.1	F	75.9	F	n/a	n/a	n/a	n/a	46	40	100	3230	5500	10
7	Wed May 06 14:38:50 PDT 2009	1	ABCDEFGH	78.1	F	75.9	F	n/a	n/a	n/a	n/a	46	40	100	3230	5500	10
8	Wed May 06 14:38:56 PDT 2009	1	ABCDEFGH	78.1	F	76.3	F	n/a	n/a	n/a	n/a	47	37	100	3230	5500	10
9	Wed May 06 14:39:02 PDT 2009	1	ABCDEFGH	77.7	F	75.9	F	n/a	n/a	n/a	n/a	48	37	100	3230	5500	10
10	Wed May 06 14:39:08 PDT 2009	1	ABCDEFGH	77.7	F	75.9	F	n/a	n/a	n/a	n/a	48	37	100	3230	5500	10

Figure 4.8 Comma Separated Value Format

Columns from left to right: Date and time, Device ID, Device name, Reading 1, Unit 1, Reading 2, Unit 2 (up to 4 readings and units), Sequence number, Signal strength, Success rate, Battery voltage, Status, Update, Next Device ID, Next Device name (up to 8 End Devices).

Refresh: How often the current applet asks for data from the embedded server.

Note See **Section 4.3.4** before activating data logging.

4.3.3 Java Runtime Environment Setup

If your computer does not have Java installed, please download from java.sun.com. You can change the Java setting by clicking its icon in Control Panel. To load the applet, you have to enable the web browser and disable cache.

4.3.3.1 Java Runtime Environment 1.7 Setup Instructions

1. Go to your computer's Control Panel. Open the Java Plug-in

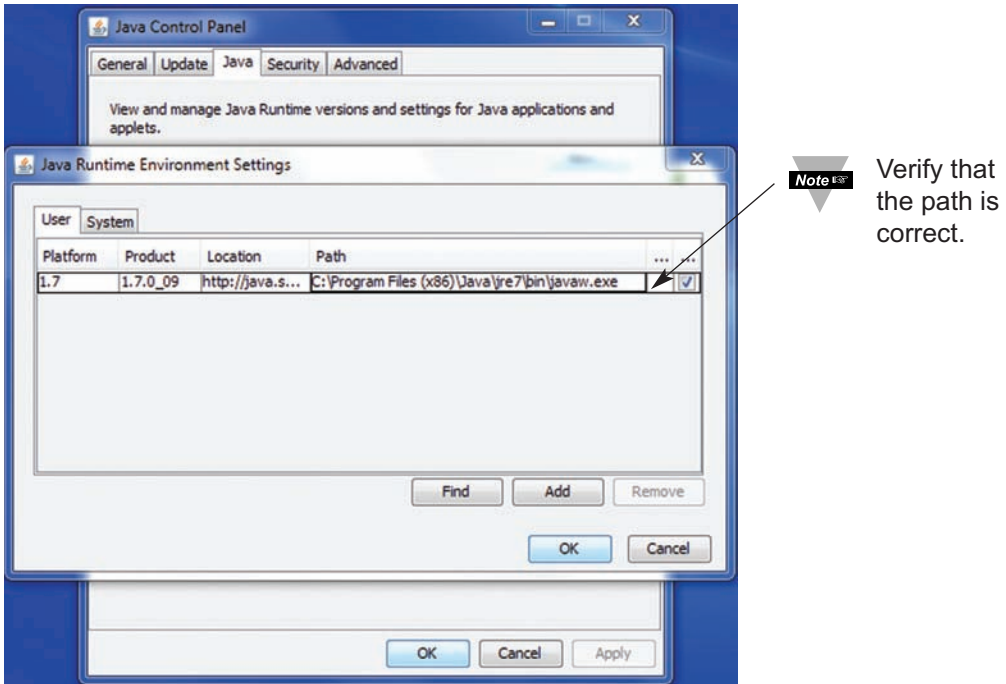


Figure 4.9 Java 1.7 Screen Shot

4.3.3.2 Browser Proxy Selection

Accessing wiDR units within your internal network

- Usually when the computer and wiDRs are on an internal network, you will not use Proxy server access.
- You should un-check the "Use Browser Settings" option on the "Proxy" tab.

Accessing wiDR units using the internet

- Often the web browser will use Proxy server access to the internet. In such cases, the default Java runtime settings on the "Proxy" tab should suffice. The default setting is the "Use Browser Settings" option.
- If the default proxy setting doesn't work, then you may have a situation where the proxy settings of the web browser are incorrect.

Diagnostics:

If the web page of the Wireless System appears, then the HTTP Proxy is working fine.

If the data isn't updated on the Wireless System upon selecting the "Readings" page, there may be a problem with access through a winsock proxy server. In such cases your network administrator will need to provide the winsock proxy server and port #s. (The TCP ports the wiDR uses for Java applets are 1000 and 2003).

These values should be entered into the Socks line on the "Proxy" tab (of the Java Plugin control panel) or into the "connections" tab on the View,Internet Options dialog and make sure that the Proxy tab shows that the "Use Browser Settings" option is not selected (i.e. when you specify proxy connections in the Java Plugin control panel).

Accessing wiDR units over Peer-to-Peer network

A simple peer-to-peer network is setup by disconnecting from the main network (as users will often do when trying to do initial setup of the wiDR) and then connecting the wiDR to another computer using an ethernet hub, an ethernet switch, or a Cross-over cable connection.

Often when using a peer-to-peer network, the Java plugin and the web browser (such as Internet Explorer) have internet connections configured to connect through proxy servers. In such case, you will need to simply assign the final IP address on this peer to peer network and then view the Wireless System charts after connecting the wiDR into the regular network. Otherwise you can disable the Java plug-in's "Use Browser Settings" temporarily and then reconfigure the Java plug-in settings for regular network access after testing the Wireless System chart access on your peer-to-peer network.

The "Use Browser Settings" should not be selected. And the HTTP and Socks proxy entries should be blank. Also, setup the internet browser so that proxy servers are disabled.

Java and the Java Coffee Cup Logo are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries."

4.3.4 Chart

Click on from the Home Page, the following page will appear.

The Java™ Applet graph displays the sensor temperature readings. It can be charted across the full span or within any narrow range (such as 20 to 30°C).

Note If a blank screen appears without any “java application running” or image of a “Java logo”, please verify you have the latest Java Runtime Environment installed and configured according to the instructions (refer to **Section 4.3.3.1**). If you do not have Java Runtime Environment, you may download it from our website or contact the Customer Service Department nearest you.

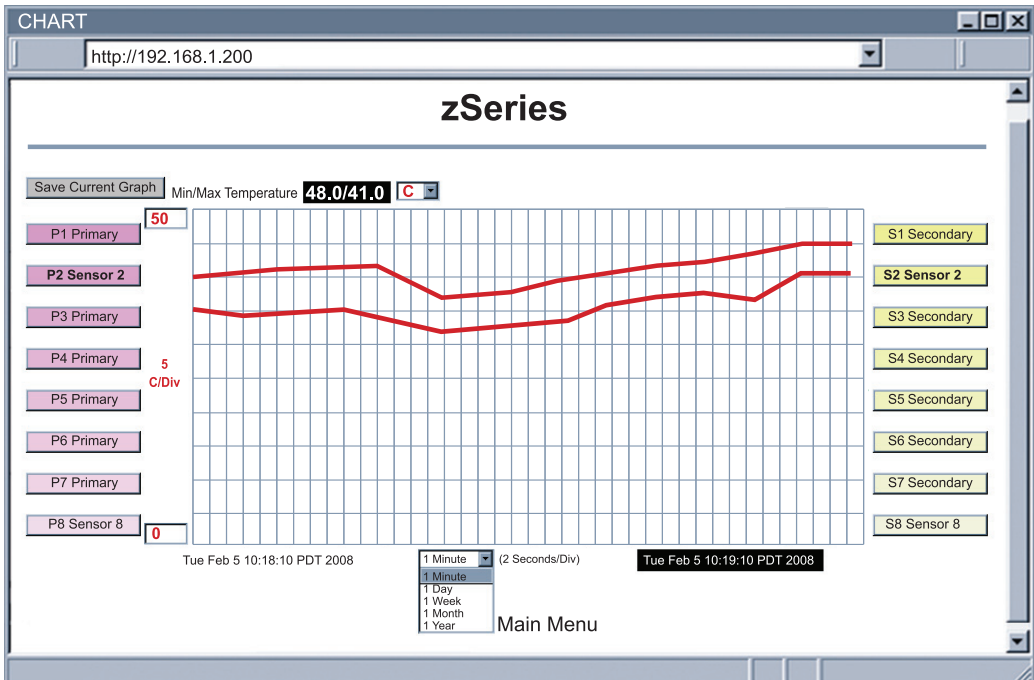


Figure 4.10 Chart

4.3.4 Chart (continued)

Title: wiDR's name, assigned in Network Setup Menu.

Save Current Graph: Save the current graph in PNG (Portable Network Graphics) format. The filename has the extension **.png**.

Max/Min Temperature: Maximum and minimum temperature of the current graph.

If a sensor is selected (trend line and sensor name turns bold), its most current temperature reading is shown here.



Reading "Open" indicates that no sensing device is detected.

Temperature Unit: Temperature unit to be used, either °C or °F.

P# button (Primary): Displays the End Device name (assigned in the End Device Setup Menu) and the chart line for the primary sensor.

When clicked once, it turns bold, highlights primary sensor or first thermocouple channel trend line and displays current readings.

When clicked *twice*, it turns white and the trend line will disappear.

When clicked again, it comes back to normal operation.

Chart Area: Display the trend lines of the sensors.

Range of temperature can be controlled by the upper and lower boxes on the left.

S# button (Secondary): Displays the End Device name (assigned in the End Device Setup Menu) and the chart line for the secondary sensor. This button can also display errors, like Lost and ID.

When clicked *once*, it turns bold, highlights secondary sensor or second thermocouple channel trend line and displays current sensor readings.

When clicked *twice*, it turns white and the trend line will disappear.

When clicked again, it comes back to normal operation.

Applet Start Date and Time: Activates when the chart page opens up.

X-axis Drop-down List: Time scale for the chart.

The chart area can be shown based on 1 min, 1 hour, 1 day, 1 week, 1 month, or 1 year time intervals.

Last Update Date and Time: The last date and time when data arrived.

4.3.5 Controller Setup

Click on [Controller](#) from the Home Page. In a few seconds the following page will appear.

A

B

C

D

CONTROLLER SETUP

Address http://192.168.1.200

Setup

Input

Setpoints & On/Off

Alarm 1

Alarm 2

Display

Passcode ID

Enable Standby Mode Before Configuring Unit

Enable Standby

Disable Standby

Reset Controller

Monitor

Scrolling ☒

End Device ID -

Permanent Store ☐

Update

Transmission Power

Channel #

Transmission Power 20dBm

Please refer to local regulations for the allowed maximum transmission power

Update

Misc.

PID 13106 (version x.x)

iSeries Firmware Version x.x

Main Menu

Setup

Input

Setpoints & On/Off

Analog Out

Alarm 2

Note

This portion of the menu will be different only if you have the Analog Output Option installed in your wiDR.

!

Please refer to local regulations for the maximum allowed transmit power.

Figure 4.11 Controller Setup

4.3.5 Controller Setup (continued)

Below are the definitions of terms used in the Controller Setup page.

A) Setup:

Clicking on the options shown, allows user to modify the different parameters shown under this menu (see **Section 4.3.6. Setup Page** for more details)

B) Monitor:

If you have the DIN Rail version of the zSeries, leave settings as shown below (default) as there is no front panel display;

Scrolling: Checked, default.

End Device ID [A/b]-[1-8]: Not applicable.

C) Transmission Power:

Channel: Choose the operating channel defined in IEEE 802.15.4 for the sensor network. This allows you to select a wireless channel to communicate with the End Devices. It is strongly suggested to let the wiDR search for the best channel and not changing this field manually.

Transmission Power: This determines the signal power transmitted by the wiDR. The options are 10 dBm and 20 dBm.



Please refer to local regulations for the allowed maximum transmit power.

For additional details, please refer to **Appendix F**

D) Miscellaneous:

PID: The Personal Network ID is automatically detected and displayed. In the parenthesis the firmware version of the radio module is indicated. The firmware version is also shown on a label attached to the wiDR (see **Figure 3.1**).

iSeries Version: The firmware version of the wiDR. The firmware version is also shown on a label attached to the wiDR (see **Figure 3.1**)

4.3.6 Setup

This section is used to configure the wiDR online. Click on the specific settings to change the parameters on that section

4.3.6.1 Input

Control End Device ID [A/b]-[1-8]: Specifies the measurement of an End Device that will be used as input to control. Input letter “A” or “b” to indicate primary and secondary sensor respectively, followed by “-” and the End Device ID.

Filter: This option allows the user to specify the number of readings stored in the Digital Averaging Filter. Choice of: 1, 2, 4, 8, 16, 32, 64, 124.

Temperature Unit: Unit of temperature readings, [°C or °F]. Controller will be reset automatically if temperature unit is changed.

Decimal Point Position: For measurement reaching beyond 999.9 and/or -99.9, “xxxx” should be selected and no decimal point is available.

For measurement that falls within 999.9 to -99.9, “xxx.x” can be selected to increase measurement resolution.

Switching Decimal Point Position from “xxxx” to “xxx.x” is not allowed if any Setpoint or Alarm High/Low is beyond 999.9 or -99.9. Controller will be reset automatically if Decimal Point Position is changed.

The screenshot shows a web-based configuration interface titled "SETUP". At the top, there is a text box for "Address" containing "http://192.168.1.200". Below this, the "SETUP" title is repeated in a large font. The "Input" section is highlighted with a blue header. It contains four configuration items, each with a label and a dropdown menu: "Control End Device ID: for Retransmission and On/Off" with a value of "A-1"; "Filter" with a value of "4"; "Temperature Unit" with a value of "F"; and "Decimal Point Position:" with a value of "xxx.x". Below these items are two buttons: "Update" and "Cancel". At the bottom of the section is a link labeled "Main Menu".

Figure 4.12 Input

4.3.6.2 Setpoints & On/Off Control

Auto Setpoint Deviation: If “enabled”, allows changes to Setpoint 1 to be made automatically to Setpoint 2. This mode is very helpful if the Temperature changes often.

In Setpoint Deviation Mode, set SP2 a certain number of degrees or counts away from SP1--this relation remains fixed when SP1 is changed.

For instance:

Setting SP1=200 and SP2=20 and enabling SP Deviation means that the absolute value of SP2=220.

Moving SP1 to 300, the absolute value of SP2 becomes 320.

Setpoint 1: This setpoint controls Output 1.

Setpoint 2: This setpoint controls Output 2.

Permanent Store: Check to save Setpoints in the wiDR’s permanent storage.

On/Off 1 and On/Off 2: To enable and disable On/Off Control.

Enabling On/Off Controls will disable the Alarms, and vice versa.

DeadBand: The Dead Band or neutral zone, is the number of degrees counts around Setpoint 1 (or Setpoint 2 if On/Off 2) which the temperature value must pass above or below the Setpoint before the output changes state.

Action: Choice of direct or reverse. The error that results from the measurement of the Process Variable may be positive or negative since it may be greater or smaller than the Setpoint.

If a positive error should cause the wiDR output to increase (i.e. cooling), it would be called **Direct Acting**.

If a negative error should cause the output to increase (i.e. heating), it would be called **Reverse Acting**.

Table 4.1 Front Panel LEDs

OUT1	Red	When Output 1 is ON.
OUT2	Red	When Output 2 is ON.
AL1	Green	When Output 1 is OFF and Alarm 1 is ON.
AL2	Green	When Output 2 is OFF and Alarm 2 is ON

See **Figure 2.1** for LED location.

4.3.6.2 Setpoints & On/Off Control (continued)

SETUP

Addresshttp://192.168.1.200

SETUP

Setpoints & On/Off Control

Auto Setpoint Deviation

Disabled

Setpoint 1

0

Setpoint 2

100

Permanent Store

☒

On/Off 1

Disabled

DeadBand

0

Action

Reverse

On/Off 2

Disabled

DeadBand

0

Action

Direct

Update

Cancel

[Main Menu](#)

Figure 4.13 Setpoints & On/Off Control

4.3.6.3 Alarms 1 & 2

Alarm 1 (or 2) Relay: to enable or disable (no alarm function) the alarms .

Alarm 1 (or 2) Low: editable box for the low alarm value.

Alarm 1 (or 2) High: editable box for the high alarm value.

Active: If *Above*, Alarm condition triggered when the process variable is greater than the Alarm Hi Value (Low value ignored).

If *Below*, Alarm condition triggered when the process variable is less than the Alarm Low Value (Hi value ignored).

If *Hi/Low*, Alarm condition triggered when the process variable is less than the Alarm Low Value or above the Hi Value.

If *Band*, Alarm condition triggered when the process variable is above or below the "band" set around the Setpoint. Band equals Hi Value (Low Value ignored).

 **Note** A "band" is set around the Setpoint only in the "Deviation" Mode.

Normally: if *Open*, then the relay is "energized" only when an alarm condition occurs.

If *Closed*, this is "Fail Safe" Mode. Relay is energized under "normal" conditions and becomes de-energized during alarm or power failure.

Latch: if *Latched*, Alarm remains "latched" until reset.


If *Unlatched*, Alarm remains latched only as long as the alarm condition is true.

Absolute: if *Absolute*, this allows Alarms to function independently from their respective Setpoints. If the process being monitored does not change often, then "Absolute" Mode is recommended.

If *Deviation*, this allows changes to Setpoints to be made automatically to their corresponding Alarms. Deviation Mode is typically the ideal mode if the process temperature changes often. In Deviation Mode, set Alarm 1 a certain number of degrees or counts away from Setpoints, this relation remains fixed even if Setpoints are changed.

Alarm at Power On: If the alarm is *enabled* at Power On, the alarm will be active right after reset for all the End Devices (given the conditions are met), except the End Device designated in the "Input" menu of the Web Server.

If the alarm is *disabled* at Power On, the alarm will become enabled when the process value enters the non alarm area. The alarm is not active while the process value is approaching the Setpoints.

 **Note** Errors indicating "lost" or "open" sensor condition can trigger the alarm if the alarm is set for "active high" above 9000 degrees.

4.3.6.3 Alarms 1 & 2 (continued)

SETUP

Addresshttp://192.168.1.200

SETUP

Alarm 1

Alarm 1 Relay

Enabled

Alarm 1 Low

0

Alarm 1 High

100

Active

Above

Normally

Open

Latch

Unlatched

Absolute

Absolute

Alarm at Power On: Alarm could be triggered immediately by non-controlling end device at startup.

Enabled

Update

Cancel

[Main Menu](#)

Figure 4.14 Alarms 1 & 2

4.3.6.4 Analog Output Retransmission

Note

This menu will appear only if you have the Analog Output Option installed in your wiDR.

SETUP

Address http://192.168.1.200

SETUP

Analog Output Retransmission

Retransmission	Enabled
Voltage/Current	Voltage
Input Low	0
Output Low	0.00 Min. 0V
Input High	1000
Output High	10.00 Max. 10V

Update

Cancel

[Main Menu](#)

Figure 4.15 Analog Output Retransmission

Retransmission: When *enabled*, the input data will be scaled based on Input Low and Input High and will be outputted.

If the input reaches high value, the output will be 10V or 20mA.

If the input reaches low value, the output will be 0V or 0mA.

Voltage/Current: Select the output to be *Voltage* (0-10V) or *Current* (0-20mA).

Input Low: The minimum input value scaled for Output Low.

Output Low: Output Voltage or Current represented by Input Low.

Input High: The minimum input value scaled for Output High.

Output High: Output Voltage or Current represented by Input High.

4.3.6.5 Display

This submenu is for the 1/8 DIN Panel Meter-Controller version of the zSeries it allows the user to select the color of the display--green, red, amber.

If you have the DIN Rail version of the zSeries, leave settings as shown below (default) as there is no front panel display; however the small LEDs will perform as described in **Table 4.1** when these settings are used.

See **Figure 2.1** and **Table 4.1** for LED location and descriptions.

The screenshot shows a web browser window titled "SETUP". The address bar contains "http://192.168.1.200". The main content area has a large "SETUP" heading. Below it is a blue bar with the word "Display". Under the "Display" bar, there are three settings: "Screen Update (seconds)" with a text box containing "3", "Normal" with a dropdown menu showing "Green", "Alarm 1" with a dropdown menu showing "Red", and "Alarm 2" with a dropdown menu showing "Amber". At the bottom of the settings area are three buttons: "Update", "Cancel", and "Main Menu".

Setting	Value
Screen Update (seconds)	3
Normal	Green
Alarm 1	Red
Alarm 2	Amber

Figure 4.16 Display Menu

4.3.6.6 Passcode ID

This submenu is for the 1/8 DIN Panel Meter-Controller version of the zSeries. and is used to prevent unauthorized tampering with the setup parameters. The meter provides protection by requiring the user to enter the ID Code before allowing access to subsequent menus of the meter's front panel. If the ID Code entered does not match the ID Code stored, the meter responds with an error message and access to subsequent menus will be denied.

This would not be used for the DIN Rail version of the zSeries, as there are no front panel push buttons.

The screenshot shows a web-based interface for a meter's setup. At the top, a window titled "SETUP" has a standard OS-style title bar with minimize, maximize, and close buttons. Below the title bar is a field labeled "Address" containing the text "http://192.168.1.200". The main content area is titled "SETUP" in large, bold, black letters. Below this title is a light blue horizontal bar with the text "Passcode ID" in bold black font. Underneath the bar, there are three labels on the left: "Setpoint ID", "Full ID", and "ID". To the right of these labels are three input fields. The first two are dropdown menus, both currently showing "Disabled". The third is a text input field containing "0000". Below these input fields are two buttons: "Update" and "Cancel". At the bottom of the main content area is a link labeled "Main Menu".

Figure 4.17 ID Code

4.3.7 Network Setup

Click on [Network Setup](#) from the Home Page, the following page will appear.

A

B

C

NETWORK SETUP

Address <http://192.168.1.200>

NETWORK SETUP

General

Secured Applet ☐

Title

Terminal Server

TCP/UDP

Server Type

Forward CR

Number of Connections

Port

Remote Access (Tunneling)

Remote IP Address

Remote Port

Remote Access

[Main Menu](#)

Figure 4.18 Network Setup

4.3.7 Network Setup (continued)

A) General

Secured Applet: If checked, the LOGIN password is required to open “Readings” and “Chart” pages.

Title: wiDR's name [maximum of 16 alphanumeric characters], shows on the “Chart” and “Reading” pages.

B) Terminal Server

TCP/UDP*: The wiDR supports *TCP* and *UDP* protocols (default is TCP). If UDP is selected, it can be configured either for Broadcast UDP or Directed UDP. In case of Broadcast UDP, the wiDR will transmit the data to every node on the network. This can be accomplished if the Remote IP Address is set to 255.255.255.255. The Broadcast UDP is a practical solution when one wiDR needs to communicate with multiple nodes over the network. In the case of directed UDP, the wiDR will transmit the data to a specific node on the network. This can be accomplished if the Remote IP Address is set to the IP address of that specific node.

Server Type: *Continuous* mode sends the temperature to the Ethernet, every two seconds. It is mainly used to send readings to a remote display. *Command* mode (default) needs a command to query the wiDR to send the response back to querying device.

Forward CR: Forward CR can be *enabled* and *disabled*. If enabled the wiDR will forward a <CR> along with the data to a network host in Command mode.

Number of Connections: The range is from 0 to 5. If 0 is selected, the Terminal Server feature is disabled. This means that no network connection can be made to the wiDR. If 1 is selected, only one network connection can be made to the wiDR. Any number more than 1 would allow that number of network hosts to read from the wiDR simultaneously (default is 5).

Port: Port number for TCP connections. Invalid ports: <500, >65536, 1000, 2002, 2003, and 7011.

C) Remote Access

Remote IP Address: The wiDR can establish a connection to a remote device (e.g. an iLD Remote Display with an Ethernet embedded board) with this IP.

Remote Port: (default 2000) the remote port number for the connection.

Ports 1000 (used for HTTPget, refer to **Section 4.5**), 2002, 2003, and 7011 are reserved for internal use.

Remote Access: ** Remote Access can be enabled and disabled. If enabled, the wiDR can send its data to a remote node on the same network (the “Remote IP address” and “Remote Port” must be entered).

Note

* TCP/UDP: when UDP mode and Continuous are selected, Remote Access should be disabled and Remote IP and Port are the UDP remote listening IP and Port. If the Remote IP is set to 255.255.255.255, the UDP packet becomes a broadcasting packet which will allow any device listening to the Remote port to receive the packet.

** If Remote Access is enabled, Terminal Server is automatically disabled.

Update: Saves and Updates any changes on the “Network Setup” page.

4.3.8 End Device Setup

Click on [End Device](#) from the Home Page, the following page will appear.

END DEVICE SETUP

Address <http://192.168.1.200>

END DEVICE SETUP

ID	Name	Update	Network	Units	Remote Format	EndChar	Display	Alarm
<u>1</u>	Lab 100	10	<input checked="" type="checkbox"/>	C	000000	0D	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
			<input type="checkbox"/>		000000	0D	<input type="checkbox"/>	<input type="checkbox"/>
<u>2</u>	Lab 200	10	<input checked="" type="checkbox"/>	C	000000	0D	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
			<input checked="" type="checkbox"/>	C	000000	0D	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
<u>3</u>	ABCDEFGH	10	<input checked="" type="checkbox"/>	--	000000	0D	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
			<input checked="" type="checkbox"/>	--	000000	0D	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
<u>4</u>	ABCDEFGH	10	<input checked="" type="checkbox"/>	--	000000	0D	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
			<input checked="" type="checkbox"/>	--	000000	0D	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
<u>5</u>	ABCDEFGH	10	<input checked="" type="checkbox"/>	--	000000	0D	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
			<input checked="" type="checkbox"/>	--	000000	0D	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
<u>6</u>	ABCDEFGH	10	<input checked="" type="checkbox"/>	--	000000	0D	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
			<input checked="" type="checkbox"/>	--	000000	0D	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
<u>7</u>	Lab 700	10	<input checked="" type="checkbox"/>	C	000000	0D	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
			<input checked="" type="checkbox"/>	C	000000	0D	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
<u>8</u>	ABCDEFGH	10	<input checked="" type="checkbox"/>	--	000000	0D	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
			<input checked="" type="checkbox"/>	--	000000	0D	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>

Click on End Device ID to modify Sensor Parameters.
Network: Access Data from Network/Applet
Display: Display Reading during Scrolling
Alarm: Enable to Trigger Controller Alarm

Update

Readings

Chart

[Main Menu](#)

Figure 4.19 End Device Setup

4.3.8 End Device Setup (continued)

The End Device Setup Page is for configuring the End Device parameters, such as Name and Update Rate.

ID: End Device ID configured on the End Device.

Click on the number (1 to 8) to view and modify End Device Parameters.

Name: Name of an End Device, shows on the “Readings” and “Chart” pages.

It is modified on the “End Device Parameters” page.

Update: How often an End Device sends its data to the wiDR.

It is modified on the “End Device Parameters” page.

Network: Each check box controls whether or not readings from the End Device will be outputted.

If unchecked, the reading from the End Device will not be displayed on the “Readings” and “Chart” pages, nor it will be reported through Telnet.

Each End Device has two boxes assigned: the first is for the primary sensor, and the second is for the secondary sensor.

Units: Type of data and the corresponding units [$^{\circ}\text{C}$ or $^{\circ}\text{F}$].

Units of measurement from sensors inside an End Device that has joined the network will be displayed.

It is modified on the Controller Setup “Input” page.

Remote Format: Modified on the “End Device Parameters” page.

End Char: Modified on the “End Device Parameters” page.

Display: Modified on the “End Device Parameters” page.

Alarm: Modified on the “End Device Parameters” page.

Update: After checking/unchecking the boxes, make sure this is clicked to save the changes.

Readings: This will take you to the “Readings” page.

Chart: This will take you to the “Chart” page.

4.3.8.1 End Device Parameters

END DEVICE PARAMETERS

Address http://192.168.1.200

END DEVICE PARAMETERS

End Device 1

Device Name:

Update: Sec

Operation:

Sensor1

Remote Display Format:

Remote End Char(Hex): 0x

Offset(xxx.x): C

Display: ☒ Alarm ☒

Cold Junction Compensation for Ch1

TC type:

End Device Version: x.x

[Main Menu](#)

Note Update rate is closely related to the lifetime of the battery.

Since the End Device is in low power consumption (sleep mode) when idle, a longer update rate will cause less energy usage and prolong the life of the battery.

On the other hand, a faster update rate shortens the battery life and results in a busy network, which will increase the chance of signal interference.

As a general rule of thumb, minimum update rate should be proportional to the number of sensors in the network.

Figure 4.20 End Device Parameters

Device Name: Name of this End Device, this is a text field and can take up to 16 alphanumeric characters.

Update (Seconds): How often this sensor is sending its data to the wiDR.

A faster update period consumes more energy and creates more traffic. The update time must be selected to satisfy acceptable network performance and desired battery lifetime.

Operation: Choice of Normal or Identify. The LED of the End Device will blink (according to the update rate) in Normal condition (default). To identify an End Device in the field you may want to set the LED to be "ON", this is the Identify setting.

4.3.8.1 End Device Parameters (continued)

Sensor 1

This is the field to modify the parameters for the primary sensor.

Remote Display Format: Remote display format is for Server Type *continuous* mode. It basically defines the way the data is shown on a Remote Display. The default value is 00000000. This means that the value will be displayed up to 8 digits, followed by the Temperature Unit set in the wiDR. Any letters before and/or after the number will be displayed accordingly. Keep in mind that the displayed letters will take away from the available 8 characters.

Note

Make sure that you have enough 0's to display the entire reading. Any extra 0's will be ignored.

If there is no unit, then the unit will be read from the "Input" menu of the Controller Setup.

Remote End Char: The default value is 0D (Hex representation of <CR>). This means that the wiDR sends <CR> after each reading. This will be done either in *Continuous* or *Command* mode.

This is how the data will appear on the host with 0D assigned:

**T75F
T74F**

If the end character for instance is 20 (Hex representation of space), the data will then appear as: **T75F T74F**

If nothing is set for the "Remote End Char" field, the wiDR will then forward the data to the LAN with no characters followed.

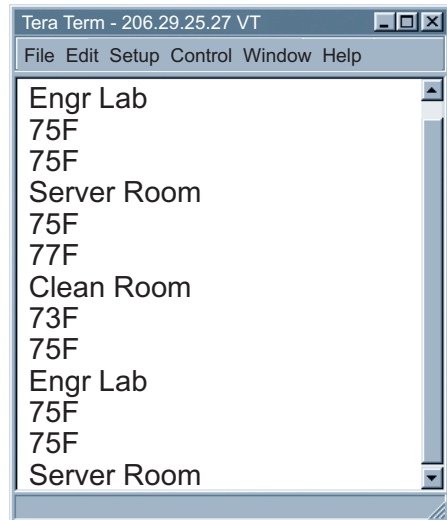


Figure 4.21
Remote Display

Offset: If it's determined that the readings are slightly off, the user can manually assign numerical values to adjust the readings for temperature. The unit must be in degree C.

Display: Not used for the wiDR. This is for the 1/8 DIN panel meter-controller version of the zSeries to enable or disable the numerical display on the Meter's Front Panel. By default, the box is checked (enabled).

Alarm: To enable or disable alarms for that particular sensor. By default, the box is checked (enabled).

4.3.8.1 End Device Parameters (continued)

Cold Junction Compensation: This option is only available for thermocouple. Click on the link to follow instructions to perform cold junction compensation for the selected thermocouple channel.

Cold junction compensation will allow you to adjust (calibrate) the thermocouple in reference to 0°C environment.

Note Proper TC must be selected before doing cold junction compensation.

TC Type: Select the proper thermocouple type for the channel or you select “disabled” to disable the channel and reduce power consumption.

Sensor 2

This is the field to modify the parameters for the secondary sensor.

Update: Saves changes

Cancel: Ignores all the changes and goes back to the “End Device Setup” page.

Reset Device: Reset the End Device’s readings and status. If the End Device is not on the network, the data will be cleared after 3 minutes. Otherwise, the End Device will reset itself and rejoin the network.

4.3.9 Access Control

This section describes the "Access Control" page of the Wireless System Web interface. This page allows the users to set up the network and security parameters of the Wireless System.

At the initial entrance to the “Access Control” page you may be prompted for the LOGIN Password (see **Figure 4.6**) prior to an ADMINISTRATOR Password.

The screenshot shows a web browser window titled "ACCESS CONTROL" with the address bar displaying "http://192.168.1.200". The main content area has the heading "ACCESS CONTROL" in large, bold, black letters. Below the heading are several input fields for configuration: "Login Password" (containing "12345678"), "Admin Password" (containing "00000000"), "Host Name" (containing "wis21d9"), "MAC Address" (containing "00:03:03:00:21:D9"), "IP Address" (containing "192.168.1.200"), "Gateway Address" (containing "0.0.0.0"), and "Subnet Mask" (containing "255.255.255.0"). Below these fields are three buttons: "Save", "Reset", and "Network Reset". At the bottom of the form area is a link labeled "Main Menu". The browser window has a standard Windows-style title bar and a taskbar at the bottom.

Figure 4.22 Access Control

4.3.9 Access Control (continued)

Login Password: This allows users to access and modify all of the Wireless System Home Page menu items, except “Access Control”, which requires an Administrator password. The default Login password is **12345678**. This password can be up to 16 alpha-numeric case-sensitive characters.

If there is no Login Password assigned (blank box) the Wireless System will not require a password to access and modify any of the menu items, except the “Access Control” page.

Admin (administrator) Password: This allows users to access and modify the "Access Control" page. The default password is **00000000**. This password can be up to 16 alpha-numeric case-sensitive characters.

If there is no Administrator Password assigned (blank box) the Wireless System will not require password to access and modify "Access Control" page.

Host Name: Name of the server (DNS) max 16 characters, default is “**wis**” and the last 4 digits of the MAC address. Refer to **Section 3.4**, DNS.

MAC Address: This is also called Hardware address or Ethernet address, which is assigned to the wiDR at production. The MAC (Media Access Control) address is the wiDR’s unique hardware number and is not changeable.

IP Address: The IP (Internet Protocol) address is a 32-bit number that identifies each sender or wiDR of information that is sent in packets across the Ethernet or the Internet. The wiDR’s default IP address is **192.168.1.200**. The wiDR’s IP address should be changed to fit user’s networking environment. Consult with your IT department for obtaining an IP address.

The DHCP will be enabled in the wiDR if its IP address is set to 0.0.0.0. The DHCP can also be enabled by setting the 4 position DIP switch **#3** to **ON**.

Gateway Address: A gateway is a network point that acts as an entrance to another network. A gateway is often associated with a router, which knows where to direct a given packet of data that arrives at the gateway. If the wiDR is sending packets to another network node that is not on the same network on which the wiDR is connected, a gateway address needs to be given to the wiDR. The gateway address should be the IP address of the router connected to the same LAN to which the wiDR is connected. The wiDR default gateway address is **0.0.0.0**. Consult with your IT department for obtaining a gateway address.

Subnet Mask: It’s a 32-bit number that is used to determine which part of the IP address is the network portion and which part is the host portion. The wiDR default subnet mask is **255.255.255.0**. Consult with your IT department for obtaining a subnet mask.

Save: Saves any changes for above settings.

Reset: Pressing the Reset button will set all the fields back to their original values.

Network Reset: Reboots the embedded server. Note that all updated network parameters take effect after reboot.



Changes made in the Access Control page can be saved permanently by pressing the **Save** button and pressing the **Network Reset** button).

4.4 Telnet Setup

In the “Network Setup” page, under the Terminal Server section, set the TCP Connections to 1 - 5 other than 0, and use a telnet emulation program to connect to the wiDR (using Port 2000). The command can be sent to query the wiDR and get a response back.

Table 4.2 List of ASCII/Telnet Commands (01 indicates End Device #1)

Command	Description	Response
*SR01a\r	Reading from Sensor1	66F
*SR01b\r	Reading from Sensor2	68F
*SR01e\r	Readings from Sensor1 and Sensor2	66F 68F
*SR01f\r	Sequence number (0-255)	90
*SR01g\r	End Device type	230
*SR01h\r	Signal strength (0-100%)	49
*SR01i\r	Success rate (0-100%)	100
*SR01j\r	Battery voltage (mV)	2810
*SR01k\r	<p>Device status (hex, msb on the left hand side)</p> <p>14th bit: set to enable control for the secondary sensor</p> <p>12th bit: set to enable control for the primary sensor</p> <p>10th bit: set to enable display for the secondary sensor</p> <p>8th bit: set to enable display for the primary sensor</p> <p>7th bit: set when Open detected</p> <p>6th bit: set when Lost detected</p> <p>5th bit: shows if there is more than one End Device having the same dip switch configuration. ‘1’ means more than 1 End Device has the same Network ID and Device ID.</p> <p>4th bit: shows if there is any pending “identify mode request” command for the End Device. ‘1’ means a “start” command is issued.</p> <p>3rd bit: not used</p> <p>2nd bit: shows if there is any pending “reset” command for the End Device. ‘1’ means a “reset” command is issued.</p> <p>1st bit: shows the source of power supply to the End Device. ‘1’ means it’s powered by an adapter and ‘0’ means it’s powered by batteries.</p> <p>0 bit: set when device is in identification mode; otherwise it is in running mode</p>	1100

Table 4.2 (continued)

*SR01l\r	How often an End Device sends its data to the wiDR	10
*SR01m\r	End Device Firmware version	2.4
*SR01n\r	Name	Conf Room
*SR01o\r	Readings from Sensor1 in Celsius	19
*SR01p\r	Readings from Sensor2 in Celsius	20
*SR00z\r	Display all information	
	1 4 A66 F B68 F 90 49 100 2810 5500 10 Conf Room	
	2 4 A69 F B69 F 80 44 100 2810 5500 10 Engr Lab	
	6 4 A72 F 173 75 100 3110 1100 10 Server Room	
	7 4 A70 F 202 72 100 3450 1100 10 Clean Room	

End Device Types	
ZED_T	1
ZED_T_TP	4
ZED_TP	16
ZED_TC	20

4.5 HTTPget Program

The Httpget software is used to send a single HTTP or TCP request to the wiDR. In contrast, the telnet or Hyperterminal programs allow a continuous connection with multiple requests to be sent to the wiDR.

Generally HTTPget is used for simply programming an IP address to the wiDR or for quickly obtaining a reading from a End Device.

The wiDR must be configured from the "Network Setup" page so that the "TCP Connections" indicates any number between 1 and 5. Make sure that the Port Field number indicates 2000.

Whenever Terminal Server service (using Port 2000 by default) is required, the # of connections must be set to a value from 1 to 5. The Terminal Server mode is the recommended mode for the most reliable connection when operating with NEWPORT software or with other programs supporting TCP/IP communications.

The Port 2000 access can be used with NEWPORT software and may be needed with some wiDRs when you need to view readings from the web page while simultaneously collecting data through TCP/IP communications.

4.5.1 HTTPget using Port 2000

You can setup and read the information from the wiDR by using the HTTPget program. The following program can be used to read data from the embedded server firmware by using TCP port **2000**. The command string is sent to this TCP port, then the response can be read back from the same socket.

The HTTPget.exe file is used to setup and read information from the wiDR. This file will be automatically installed when you install the MailNotifier software available on our website and CD.

Notes on using **HTTPget** :

The Httpget.exe program is installed to the windows directory (usually c:\winnt or c:\windows) when installing the Mail Notifier software.

- 1). Open up a command window (or have a DOS window)
 - a) Click on start menu
 - b) Click on "Run"
 - c) In the dialog box that appears, type "cmd" or "command" and click on "OK" button.
 - d) A command window should now appear.
- 2). If you now type "httpget" and press the "enter", the program options should be displayed.

4.5.1 HTTPget using Port 2000 (continued)

3). Next run HTTPget with the options displayed below

```
httpget -r -S *SR00z 192.168.1.135:2000 -C1 -q
```

where:

-r -S are parameters needed for the the command string


Command (See Table 4.2)

192.168.1.135 is an IP address

2000 is a socket port number

-C1 closes the TCP connection after 1 second

-q displays no error messages once the connection is closed

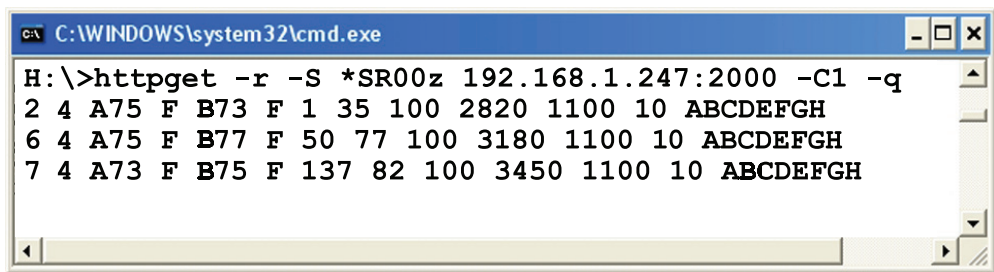

```
C:\WINDOWS\system32\cmd.exe
H:\>httpget -r -S *SR00z 192.168.1.247:2000 -C1 -q
2 4 A75 F B73 F 1 35 100 2820 1100 10 ABCDEFGH
6 4 A75 F B77 F 50 77 100 3180 1100 10 ABCDEFGH
7 4 A73 F B75 F 137 82 100 3450 1100 10 ABCDEFGH
```

Figure 4.23 HTTPget Example of Polling End Device #2,6,7

4.5.2 HTTPget and ARP to Setup Device IP Address

Tip Use the iConnect software, which may be downloaded from our website, to do these IP changes whenever possible.

Use ARP first to assign the mac address to a static IP address in computer arp table by this command:

```
arp -s 192.168.1.200 00-03-34-00-06-b6
```

Then use the following command to assign new IP to the device:

```
Httpget -r -S "00000000" 192.168.1.200:1
```

where:

"00000000" is admin. password. If the password is wrong, the unit will ignore the new IP. If the new IP is taken, you will get the message "New IP is Assigned" after the HTTPget command. The device will reset automatically.

"192.168.1.200" is an example of an IP address. It is replaced with IP address suitable for your network

"00-03-34-00-06-b6" is replaced with your wiDR's MAC address.


4.6 ARP Protocol

ARP is the Internet layer protocol responsible for matching or obtaining the MAC (hardware) address that corresponds to a particular IP address. The ARP command allows the user to view the current contents of the ARP cache of the local computer (residing on the same network). Microsoft includes the ARP.EXE utility for viewing and modifying the ARP cache with its Windows products. The following ARP commands can be used to view cache entries:

- **arp -a** → Use this command to view all ARP cache entries.
- **arp -a** plus **IP address** → Use this command to view ARP cache entries associated with one particular interface on a network with multiple adapters.
- **arp -g** → Same as **arp -a**.
- **arp -N** → Use this command to display ARP entries for specific network interface.
- **arp -s** plus **IP address** plus **Physical address** → Use this command to manually add a permanent static entry to the ARP cache.
- **arp -d** plus **IP address** → Use this command to manually delete a static entry.

The following window shows examples of arp commands and responses.

- Your computer has an IP address of **192.168.1.118**
- The destination computer has an IP address of **192.168.1.96**

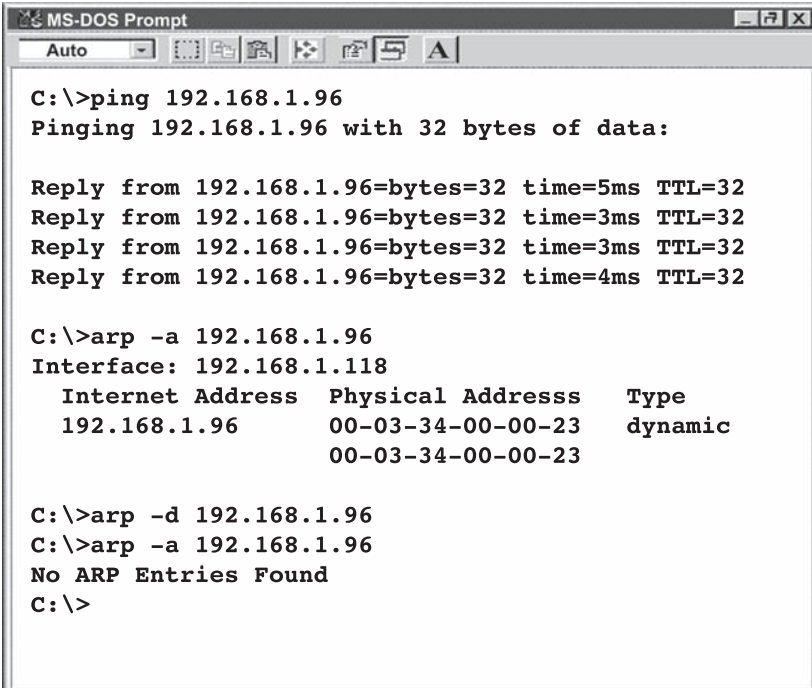

```
C:\>ping 192.168.1.96
Pinging 192.168.1.96 with 32 bytes of data:

Reply from 192.168.1.96=bytes=32 time=5ms TTL=32
Reply from 192.168.1.96=bytes=32 time=3ms TTL=32
Reply from 192.168.1.96=bytes=32 time=3ms TTL=32
Reply from 192.168.1.96=bytes=32 time=4ms TTL=32

C:\>arp -a 192.168.1.96
Interface: 192.168.1.118

    Internet Address    Physical Addresss      Type
    192.168.1.96        00-03-34-00-00-23      dynamic
                        00-03-34-00-00-23


C:\>arp -d 192.168.1.96
C:\>arp -a 192.168.1.96
No ARP Entries Found
C:\>
```

Figure 4.24 ARP Commands and Responses

4.7 iLog Software

This is an Excel application software that can log temperature from the wiDR over the local network (Ethernet) or the internet.

- Download the iLog software from the website listed in this manual.
- Install iLog software on a networked PC. This software is compatible with Windows 95, 98, NT, 2000, XP, Windows Vista and Windows 7 (32 and 64-bit).
- If you have Excel 2007 or higher, when installing iLog choose "Custom" installation option and on the next window check the box for "Excel 2007 Apps" and continue the installation to the end.
- For complete information of how to use the iLog software, click on the HELP button.
- There is a list of Error Messages in **Appendix E**.

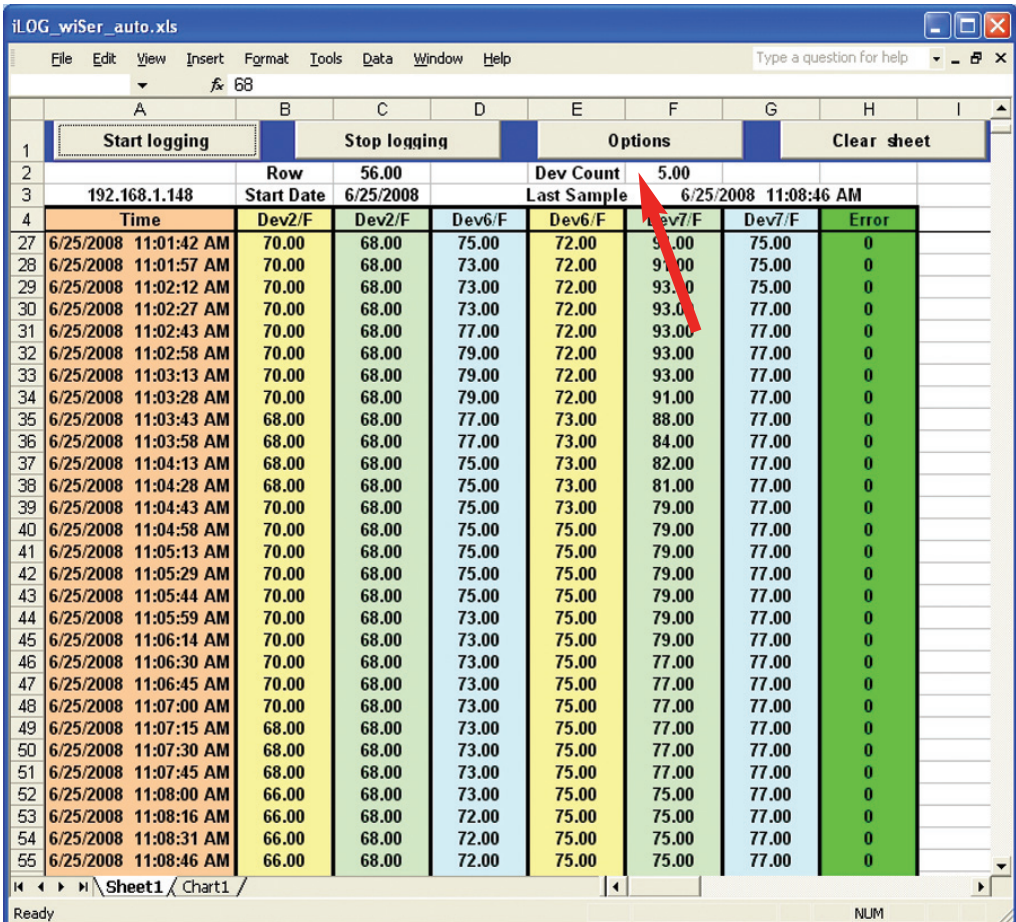

The screenshot shows the iLOG_wiSer_auto.xls spreadsheet. The interface includes a menu bar (File, Edit, View, Insert, Format, Tools, Data, Window, Help) and a toolbar. The spreadsheet has columns A through I. Row 1 contains buttons: 'Start logging' (A1), 'Stop logging' (B1), 'Options' (C1), and 'Clear sheet' (D1). Row 2 shows 'Row' (B2) as 56.00 and 'Dev Count' (F2) as 5.00. Row 3 shows '192.168.1.148' (A3), 'Start Date' (B3) as 6/25/2008, and 'Last Sample' (F3) as 6/25/2008 11:08:46 AM. Row 4 is the header for the data table: 'Time' (A4), 'Dev2/F' (B4), 'Dev6/F' (C4), 'Dev6/F' (D4), 'Dev6/F' (E4), 'Dev7/F' (F4), 'Dev7/F' (G4), and 'Error' (H4). The data table contains 27 rows of logging data, starting from row 27. A red arrow points to the 'Dev7/F' header in row 4.

	A	B	C	D	E	F	G	H	I
1	Start logging		Stop logging		Options		Clear sheet		
2		Row	56.00		Dev Count		5.00		
3	192.168.1.148	Start Date	6/25/2008		Last Sample		6/25/2008 11:08:46 AM		
4	Time	Dev2/F	Dev6/F	Dev6/F	Dev6/F	Dev7/F	Dev7/F	Error	
27	6/25/2008 11:01:42 AM	70.00	68.00	75.00	72.00	91.00	75.00	0	
28	6/25/2008 11:01:57 AM	70.00	68.00	73.00	72.00	91.00	75.00	0	
29	6/25/2008 11:02:12 AM	70.00	68.00	73.00	72.00	93.00	75.00	0	
30	6/25/2008 11:02:27 AM	70.00	68.00	73.00	72.00	93.00	77.00	0	
31	6/25/2008 11:02:43 AM	70.00	68.00	77.00	72.00	93.00	77.00	0	
32	6/25/2008 11:02:58 AM	70.00	68.00	79.00	72.00	93.00	77.00	0	
33	6/25/2008 11:03:13 AM	70.00	68.00	79.00	72.00	93.00	77.00	0	
34	6/25/2008 11:03:28 AM	70.00	68.00	79.00	72.00	91.00	77.00	0	
35	6/25/2008 11:03:43 AM	68.00	68.00	77.00	73.00	88.00	77.00	0	
36	6/25/2008 11:03:58 AM	68.00	68.00	77.00	73.00	84.00	77.00	0	
37	6/25/2008 11:04:13 AM	68.00	68.00	75.00	73.00	82.00	77.00	0	
38	6/25/2008 11:04:28 AM	68.00	68.00	75.00	73.00	81.00	77.00	0	
39	6/25/2008 11:04:43 AM	70.00	68.00	75.00	73.00	79.00	77.00	0	
40	6/25/2008 11:04:58 AM	70.00	68.00	75.00	75.00	79.00	77.00	0	
41	6/25/2008 11:05:13 AM	70.00	68.00	75.00	75.00	79.00	77.00	0	
42	6/25/2008 11:05:29 AM	70.00	68.00	75.00	75.00	79.00	77.00	0	
43	6/25/2008 11:05:44 AM	70.00	68.00	75.00	75.00	79.00	77.00	0	
44	6/25/2008 11:05:59 AM	70.00	68.00	73.00	75.00	79.00	77.00	0	
45	6/25/2008 11:06:14 AM	70.00	68.00	73.00	75.00	79.00	77.00	0	
46	6/25/2008 11:06:30 AM	70.00	68.00	73.00	75.00	77.00	77.00	0	
47	6/25/2008 11:06:45 AM	70.00	68.00	73.00	75.00	77.00	77.00	0	
48	6/25/2008 11:07:00 AM	70.00	68.00	73.00	75.00	77.00	77.00	0	
49	6/25/2008 11:07:15 AM	68.00	68.00	73.00	75.00	77.00	77.00	0	
50	6/25/2008 11:07:30 AM	68.00	68.00	73.00	75.00	77.00	77.00	0	
51	6/25/2008 11:07:45 AM	68.00	68.00	73.00	75.00	77.00	77.00	0	
52	6/25/2008 11:08:00 AM	66.00	68.00	73.00	75.00	75.00	77.00	0	
53	6/25/2008 11:08:16 AM	66.00	68.00	72.00	75.00	75.00	77.00	0	
54	6/25/2008 11:08:31 AM	66.00	68.00	72.00	75.00	75.00	77.00	0	
55	6/25/2008 11:08:46 AM	66.00	68.00	72.00	75.00	75.00	77.00	0	

Figure 4.25 iLog Software Logging Data for End Device #2, 6, 7

4.7 iLog Software (continued)

Table 4.3 iLog Excel Applications

The iLog application actually consists of several Excel files, though most supported devices can be accessed by the main iLog program. The main program is listed as “iLog”, plus a version number, under the Start Menu program links (those links available by clicking the Start button on the Windows taskbar).

In the following table, the iLog File column shows how many sensors are logged by the main iLog file. If more than 3 sensors are available, then the Alternate column shows how many sensors the device can support. Devices with more than 3 sensors will have their own Excel file. For these files, click on the model device found in the Start Menu.

Networked Product	iLog File	Alternate
iTHX-W, iTHX-2	3 column	
iTHX-M, iTHX-SD	3 column	
iTHX-W Dual Probe	1st probe / 3 column	6 column
iSE-TC, iSD-TC	3 column	5 column
iSE-TH, iSD-TH	3 column	5 column
iBTHX-W, iBTHX-D	3 column	4 column
iBTX-M, iBTX-SD	2 column	
iPTX-W	2 column	
iTCX	3 column	
iTH Controller	3 column	
iVI	3 column	4 column
iSeries	1 column	
iDRX/iDRN	1 column	
INF-B	1 column	

Wireless Devices

The “Auto” column shows number of columns per remote device that are possibly displayed.

The Full column shows number of columns allocated per device for the “Full” spreadsheet, which will be able to display all data for all active devices.

Networked Product	Auto	Full
zSeries Receiver and Remotes	1 to 4 column / device	4 column / 32 device
zSeries with zED Remotes	1 to 2 column / device	2 column / 32 device
UWTC REC-3 and Remotes	1 or 2 column / device	2 column / 32 device
zSeries with UWTC Remotes	1 to 2 column / device	2 column / 32 device

The active wireless devices, when shown in the Excel application, will be shown with the device number and the units returned.

4.8 Mail Notifier Software

For complete information of how to use the Mail Notifier software, click on the Help menu of the main window.

The Mail Notifier software generates email notifications for alarm conditions. Users can be notified automatically of alarm conditions monitored via internet connections throughout the world. By use of the email forwarding of alarm conditions, alarm conditions can be monitored on a network isolated from the internet and forwarded to connections on the Internet.

The Mail Notifier utility operates under Windows 98, NT 4.0, 2000, and XP in conjunction with existing email that supports the MAPI messaging interface. If MS Outlook™ has been loaded, the MAPI support should be available.

4.8.1 Installation

The Mail Notifier must be loaded on a computer running Microsoft™ Windows (versions specified earlier) using an email program that provides MAPI access. Network access must be available between this computer and the wiDR. Network access must also be available from this computer to the appropriate email server and from the email server to the recipient's email server.

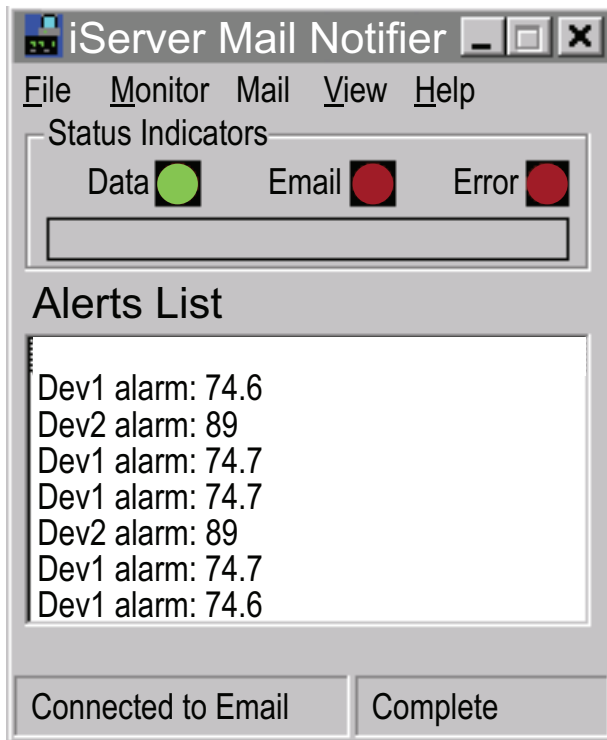


Figure 4.26 Mail Notifier Main Window

4.8.2 Program Options Setup and Configuration

Complete program setup requires:

- Entering a recipient for the email
- Specifying connection details to MAPI services.
- Defining alarms for devices, and selecting how and when the email will be active.

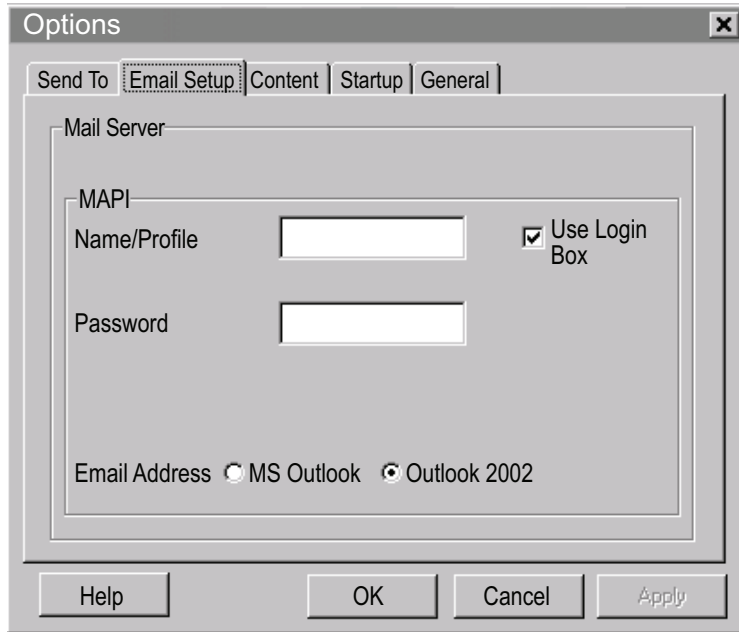


Figure 4.27 Mail Notifier Profile Setup

Email Address Setup

The email addresses must be entered using individual addresses or alias. Select “Options” from the “View” menu and enter the email addresses on the “Send To” screen. This will be the list of email addresses to which alarm notifications will be sent.

Email Setup

The Mail Notifier is compatible with original MS Outlook™ and Outlook™ 2002 to 2005.

The Mail Notifier will attempt to automatically identify whether the Outlook is a newer version. A red bar appears under the Mail Notifier splash window to confirm that the detection of the 2002 or newer version is acceptable. With the newer versions, no additional steps should be taken to enable the connection between the Mail Notifier and the Email server.



MS Outlook tends to require that the users respond to a “login box” in order for email access to be activated for Mail Notifier. Some other email clients may allow for Mail Notifier to gain access without user login, as may be desired for a system recovering from a power outage. See the Help files for more information.

4.8.3 Device Setting and Configuration

The wiDR and End Devices should first be configured and ready to use.

Make sure to have the following settings in the "Network" web page of the wiDR see **Section 4.3.8**.

Number of Connections = **5**

Port = **2000** (other values may be acceptable as long as Mail Notifier is setup with the same Port number)

Then on the Mail Notifier Alarm Editor, set the BusAddress/DeviceID to match the Device ID number for an End Device and set the Reading Cmd to a Reading Command from the following table:

Table 4.4 Mail Notifier Commands

Desired Value to Monitor	Reading Command	Actual Command (see Note 2)
Temperature1 in scale configured at wiDR	SR##a	*SR05a\r
Temperature1 in Degree C	SR##o	*SR05o\r
Temperature2 in scale configured at wiDR	SR##b	*SR05b\r
Temperature2 in Degree C	SR##p	*SR05p\r
Battery voltage (mV)	SR##j	*SR05j\r
Signal Level	SR##h	*SR05h\r
Success Rate	SR##i	*SR05i\r



1. The commands used in Mail Notifier are symbolic commands rather than actual wiDR commands described in **Table 4.2**.
2. The sample commands in the table above are shown for a sensor with Device ID of 5 such that SR##a, for example, is sent as *SR05a\r.

4.8.3 Device Setting and Configuration (continued)

The screenshot shows the 'Alarm Editor' dialog box. It is divided into two main sections: 'Device Info (1 of 2)' and 'Alarm Configuration'.

Device Info (1 of 2):

- Server IP Address: 192.168.1.200
- Socket Number: 2000
- Bus Address/Device ID: 5
- Description: (empty)
- Src ID: Dev1
- Reading Cmd: SR##a

On the right side of the Device Info section, there are buttons for OK, Cancel, Help, Add, and Del. Below these buttons is a checkbox labeled 'Only Monitor Access to iServer device' which is currently unchecked.

Alarm Configuration:

- Alarm Type: Alarm High (dropdown menu)
- Info Message: (empty)
- Alarm High: 73
- Email Interval: 0.05 hrs.
- Alarm Low: 0
- Monitor Interval: 0.5 min.
- Alarm Hold Time: 0.0 min.

Figure 4.28 Mail Notifier Device Setting

4.8.4 Sending Txt Messages to a Cell Phone

Once you install the Mail Notifier Software and configure it to work with any of our networking products, you can use the following format to have Mail Notifier send a text message to your cell phone. Since most cell phones are capable of receiving text messages you just need to find the correct email format for your cell phone provider and use it within the Mail Notifier environment.

T-Mobile	phone_number@tmomail.net
Virgin Mobile	phone_number@vmobl.com
AT&T	phone_number@txt.att.net
Sprint	phone_number@messaging.sprintpcs.com
Verizon	phone_number@vtext.com
Nextel	phone_number@messaging.nextel.com

“phone_number” is your 10 digit cell phone number.

Part 5

ENVIRONMENT / OPERATING CONDITIONS

The End Device and wiDR monitor-controller are designed to be fixed mounted and operated in a clean and dry environment. Care should be taken to prevent the components of your wireless system from being exposed to moisture, toxic chemicals, extreme cold or hot temperature that are outside the specification listed in this manual.

The following is a list of basic good practice you should apply when operating this Wireless System.

1. Do not operate the wireless wiDR in flammable or explosive environments.
2. Do not use the wireless wiDR in medical, nuclear or other critical application where failure can cause damage or harm.
3. Always operate the wireless wiDR within the recommended environmental limits specified in the manual.
4. Do not operate the wireless wiDR with a battery or AC adapter other than what's supplied or specified in this manual or on the battery compartment label.
5. Keep each wireless wiDR at least 8 inches (20 cm) from other radio transmitters, antennas, and people.
6. The FCC approval for this wiDR specifies the specific antenna supplied with this wiDR.

5.1 General Deployment Guidelines

1. Position wiDR in a central location. When multiple End Devices are in operation, position your wiDR in a central space if possible in equal distance to each End Device.
2. Test your system before permanent mounting. Try to move the devices to different location around and mounting angles to determine what installation achieves the best signal strength before permanently mounting the End Device.
3. Move your system components higher off the floor and away from exterior walls. The closer the End Device and wiDR are, the greater the interference and lose of signal strength will be.
4. Maintain a line-of-sight between antennas and keep Fresnel zone free of obstruction. See **Figure 5.2**.
5. Maintain a constant ambient temperature environment. Exposing your system components to extreme cold or hot temperatures, or sudden changes in ambient conditions will have an effect on the performance of your system.
6. As a general rule in buildings, head height or above is preferred. On the other hand, an End Device which stays close to the floor may have its range reduced by 50% to 90%.
7. Where possible, try to ensure an uninterrupted line-of-sight between nodes. Avoid obscuring objects (e.g. metal pillars, posts, sign) near the antenna. A close object obscures a wider range of solid angle.
8. It is important to understand that the environment may change over time due to new equipment or machinery being installed, building construction, etc. If new obstacles exist between the End Device and wiDR, antenna angle may need to be re-adjusted and/or the unit has to be relocated.

5.1 General Deployment Guidelines (continued)

9. An IEEE 802.15.4 wireless network will not work under water. Wet condition (e.g. in heavy rainfall) may exhibit some degradation. In most cases, water droplets on or close to the antenna are more serious than the rain itself. Humidity can affect radio performance as well.
10. Reduced performance scenario:
 - a. A large building may have few obstructions between nodes but large amount of metallic paneling that cause reflections.
 - b. A small domestic installation may have numerous brick walls between nodes in individual rooms.
 - c. An office building may have metalized dry-wall partitions together with mezzanine ceilings.

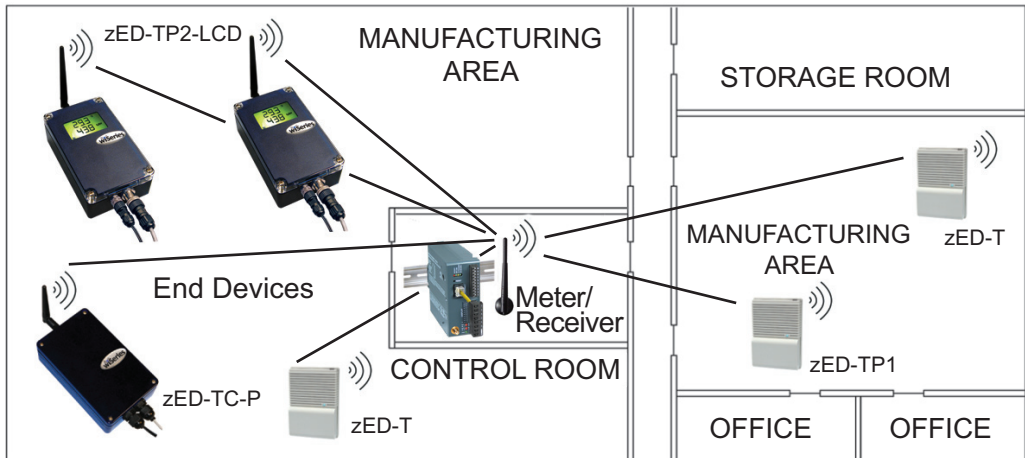


Figure 5.1 Operation in Buildings



Data is sent through radio signal at 2.4 GHz. Radio signals are electromagnetic waves, hence the signal becomes weaker the further it travels.

While radio waves can penetrate some solid materials like a wall, they can diminish more than when a direct line-of-sight between the transmitting and receiving antenna exist.

Therefore, it is generally a good idea to place wiDR at the center while End Devices are located about the same distance away from it. If possible, keeping clearance around the line of site will improve performance as well.

5.2 With Line-of-Sight

When installing the wiDR it is important to position your device in such a way to optimize the antenna location within what's known as the "Fresnel Zone". The Fresnel Zone can be thought of as a football-shaped invisible tunnel between two locations that provides a path for RF signals between the End Device and the wiDR.

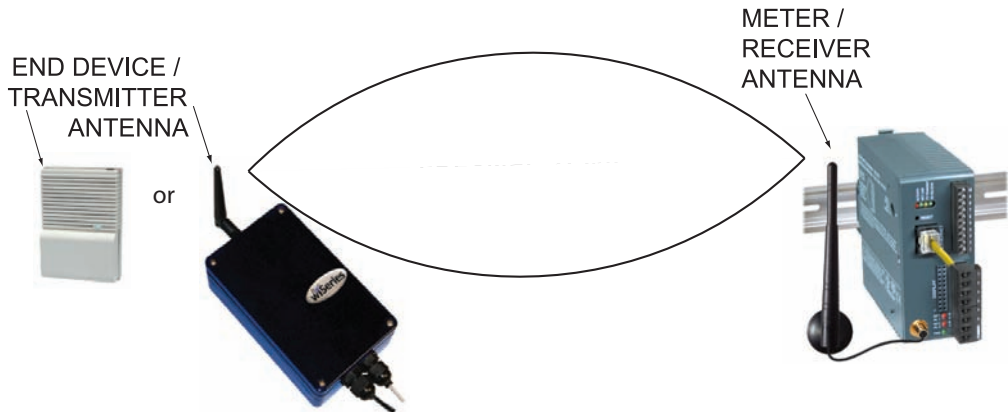


Figure 5.2 Fresnel Zone

In order to achieve maximum range, the football-shaped path in which radio waves travel must be free of obstructions. Obstacles in the path (especially metal) will decrease the communication range between the End Device and wiDR.

Also, if the antennas are mounted just barely off the ground or below the ceiling, over half of the Fresnel zone ends up being obstructed resulting in significant reduction in range.

Below is the calculated radius of the football-shaped tunnel for different distance range:

Distance (feet)	Radius (feet)
100	3.2
200	4.5
300	5.5

It is recommended that within the tunnel of the above radius, at least 60% of space is free of obstruction.

Since signal reaches destination directly in a line-of-sight situation, it is important to adjust the antenna properly to achieve maximum performance. Antenna for the wiDR and End Device should be perpendicular to the plane where the wiDR and End Device is located.

5.3 Without Line-of-Sight

When line-of-sight is not possible, signal penetrates and is reflected by different objects to reach the destination. Therefore, it is important to learn about how these materials would affect signal propagation. Depending on the thickness, moisture content and angle of incidence, a wall may allow between 1% and 25% of the radio power to pass through. Metal panel or metalized glass window will not allow much radio power to pass through. Signal will be reflected if the panel is a mirror. Some radio power may propagate through small holes in the panel or around metal edges through the process of diffraction.

Material Type	Possible Signal Reduction
Wood, Plaster, Sheetrock, Fiberglass Uncoated Glass w/out Metal	0 to 10%
Brick, Pressboard	5 to 35%
Reinforced Concrete	10 to 90%
Metal Walls, Metal Doors, Elevators, Metal Piping, Metal Stair Cases, Metal Mesh, Metal Screening	90 to 100%

Figure 5.3 Materials in Buildings

In a non-line-of-sight situation at 2.45 GHz, it is possible to move the receive antenna only 1 to 1 1/2" (3 to 4 cm) and see signal strength varies from 6 dB to -20 dB due to multiple signal reflection path. Therefore, there should be about 20 dB path loss margin to take signal fading into account.

5.4 Casing and Closure Around the Antenna

See **Section 2.1.4.2** and **Figure 2.5**.

5.5 Fine Adjustment in Performance

1. To avoid interference from WiFi / IEEE 802.11, one could consult the figure below to choose the best channel through the Configuration webpage. In all, channels 15, 20, 25 and 26 are not overlapping with any WiFi / IEEE 802.11 bands in the United States while channels 15, 16, 21 and 22 can be used in Europe.

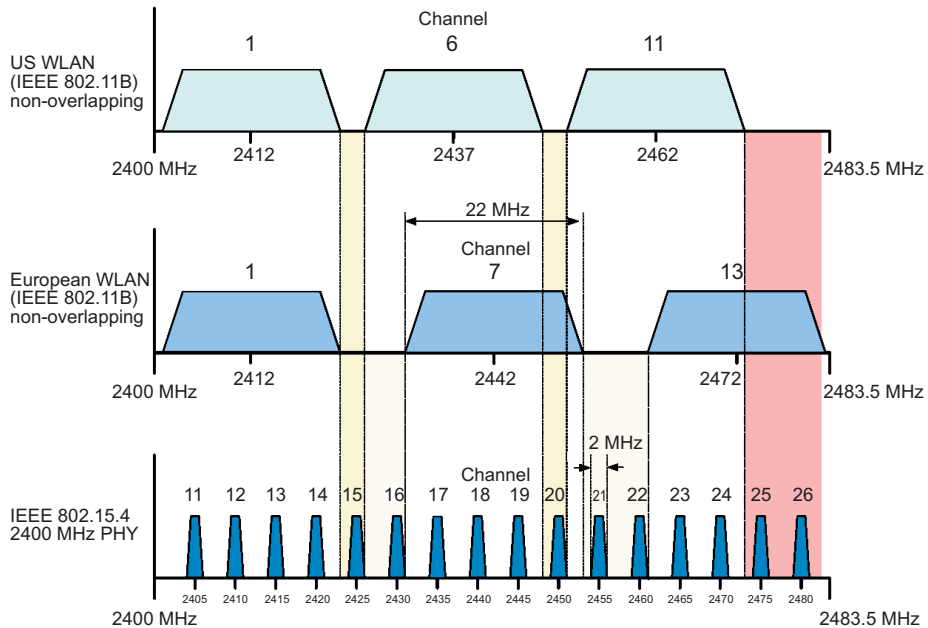


Figure 5.4 Channels

2. It is possible that IEEE 802.15.4 devices experience interference from Wi-Fi / IEEE 802.11 and Bluetooth devices and certain microwave ovens. Therefore, it is worth locating nodes as far as possible to minimize effect. Note that international radio regulations which govern radio equipment ensure that cell phones use their allocated band only. It is highly unlikely that cell phones will interfere with IEEE 802.15.4 equipment.
3. In some cases, a short RF cable may be used to connect an antenna to your device. Please note that RF extension cables will always add some loss to the transmitting signal strength. The longer the cable the more signal will be lost over that cable. Therefore, the length of the cable should be kept as short as possible. Also, note that use of any other antenna other than what's shipped with your device will void FCC and CE regulatory compliance.
4. To achieve satisfactory IEEE 802.15.4 performance in the presence of WLAN interference, a channel center-frequency offset of 7 MHz is recommended.
5. For co-channel operation, a physical separation from the WLAN Access Point (AP) of 26.2' (8 m) is recommended to achieve a Packet Error Rate (PER) of 1%. For a particularly saturated WLAN link, 29.5' to 32.8' (9 to 10 m) may be necessary.
6. To achieve satisfactory IEEE 802.15.4 performance in the presence of Bluetooth interference, a separation distance of 6.5' (2 m) is recommended.

PART 6 SPECIFICATIONS

ON/OFF CONTROL OUTPUT 1 & 2

Relay:	250 Vac or 30 Vdc @ 3 A (Resistive Load), SPDT
Solid State Relay (SSR):	20 to 265 Vac @ 0.05 to 0.5 A (Resistive Load); continuous
DC Pulse:	Non-Isolated; 10 Vdc @ 20 mA
Analog Output (Output 1 only)	Non-Isolated, 0 to 10 Vdc or 0 to 20 mA, 500 \square max
Operation:	Direct (cool), reverse (heat); deadband; single sensing input
Configuration	Output 1 and 2 can be configured as Alarm 1 and 2, respectively. Analog Output for Output 1 can be configured as retransmission.

ALARM 1 & 2 (PROGRAMMABLE)

Type:	SPDT Relay, SSR, and DC Pulse
Operation:	High/low, above/below, band, latch/unlatch, normally open/normally closed and process/deviation; front panel configurations; single/multiple sensing input(s)

ANALOG RETRANSMISSION OUTPUT (PROGRAMMABLE)

Type:	Non-Isolated, Retransmission 0 to 10 Vdc or 0 to 20 mA, 500 \square max (Output 1 only).
Operation:	Single sensing input; accuracy is $\pm 1\%$ of FS when following conditions are satisfied: 1) Input is not scaled below 1% of Input FS. 2) Analog Output is not scaled below 3% of Output FS.

INSULATION

Power to Output:	2300 Vac per 1 min. test 1500 Vac per 1 min. test (Low Voltage/Power Option)
Power to Relays/SSR Outputs:	2300 Vac per 1 min. test
Relays/SSR to Relay/SSR Outputs:	2300 Vac per 1 min. test

GENERAL

Digital Filter:	Programmable
Connection:	Screw terminals

GENERAL

Line Voltage/Power:	90 to 240 Vac +/-10%, 50 to 400 Hz*; 110 to 375 Vdc, equivalent voltage; 4 W <i>* No CE compliance above 60 Hz</i>
Low Voltage/Power Option:	12 to 36 Vdc or 24 Vac** +/-10%; 3 W External power source must meet Safety Agency Approvals. <i>**Units can be powered safely with 24 Vac power but, no Certification for CE are claimed.</i>
External Fuse Required:	
Time-Lag, IEC 127-3 recognized:	100 mA/250 V 400 mA/250 V (Low Voltage/Power Option)
Time-Delay, UL 248-14 listed:	100 mA/250 V 400 mA/250 V (Low Voltage/Power Option)
Environmental Conditions:	0 to 55°C (32 to 131°F), 90% RH non-condensing
Dimensions:	93H x 40W x 125mm D (3.64 x 1.55 x 4.93")
Software:	The software packages available for the Temperature Wireless System products are iConnect (configuration software for the Ethernet interface), iLog (Excel-based software for automatic data logging), and Mail Notifier (email alarm notification software).

INTERFACE SPECIFICATIONS

Ethernet:	Standards Compliance IEEE 802.3 10Base-T (RJ45)
Supported Protocols:	TCP, UDP, ARP, ICMP, DHCP, DNS, HTTP, and Telnet
LED Indicators:	Network Activity, Network Link, Diagnostics, Receive & Power
Management:	Device configuration and monitoring through embedded Web Server
Embedded Web Server:	Serves WEB pages (Java™ Applets) containing real-time data and live updated charts within definable time intervals.

WIRELESS COMMUNICATION

Standard:	DSSS; IEEE 802.15.4
Frequency	2.4 GHz (2400 to 2483 MHz), 16 Channels
Network Topology:	Star Topology

WIRELESS COMMUNICATION

Radio Power Output: 100 mW (20 dBm), 10 mW (10 dBm)

 **Note**

Limitations on Equivalent Isotropic Radiated Power (EIRP) levels in the European Community and other countries applies. An improper combination of power level can result in an EIRP above the allowed amount per regulations. See **Appendix F**.

Data Rate: Bit rate 250 Kp/s; Symbol rate 62.5 Symbol/s; Chip rate 2000 kchip/s

Modulation: Orthogonal Quaternary Phase Shift Keying (O-QPSK)

Receiver Sensitivity: -100 dBm

Range:

zED-x: up to 91 m (300') without obstructions or interference

zED-x-P/CCELL/DCELL/AA: up to 1000 m (3280') without obstructions or interference

 **Note**

The above ranges assume a line-of-Sight (LOS) between the wiDR/Receiver signal strength web interface registers approximately 25%.

Antenna Frequency: 2400 to 2500 Mhz

Impedance: 50 ohm

Connector: Reverse Polarity SMA Plug

SAFETY & REGULATORY COMPLIANCE

Safety: EN 61010-1:2001
Safety requirements article 3.1.a of the R&TTE

EMC: EN 301 489-1 V1.6.1:2005-09
Electromagnetic compatibility article 3.1.b of the R&TTE
EN 301 489-17 V1.2.1:2002-08
Electromagnetic compatibility article 3.1.b of the R&TTE
EN 55022:2006 + A1:2007, Class A, (CISPR 22 +A1:2005)

Radio: EN 300 328 V1.7.1:2006-10 Spectrum article 3(2) of the R&TTE

FCC: Part 15C, Class DTS Intentional radiator tested for 15.205, 15.209, 15.247(d), 15.215(c), 15.247(a)(2), 15.247(b), 15.247(e).
See **Appendix F**.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CE: The product herewith complies with the essential requirements and other relevant provisions of the R&TTE Directive 1999/5/EC, the EMC Directive 2004/108/EC, and the Low Voltage Directive 2006/95/EC, and carries the CE-marking accordingly.

The following CE Mark  is affixed to this equipment.

See **Appendix F**. The CE declaration is available at the website listed on the cover page of this manual.

PART 7

FACTORY PRESET VALUES

To set the Wireless and Ethernet settings back to Factory Default do the following to the DIP switches (see **Figure 2.11**).

To set the Ethernet board to Factory Default settings:

- 1) Put the **4 position** DIP switch **#2** to **ON** position (it does not matter if the wiDR is On or Off).
- 2) Power-cycle the wiDR and wait about 10 seconds until the wiDR fully boots up.
- 3) Put the DIP switch **#2** back to **OFF** position (it does not matter if the wiDR is powered On or Off, just make sure that the DIP switch is set to **OFF**, otherwise, everytime the unit is power-cycled the factory settings will take over.

To set the Wireless board to Factory Default settings:

- 1) Put the **8 position** DIP switch **#1** to **ON** position (it does not matter if the wiDR is On or Off).
- 2) Power-cycle the wiDR and wait about 15 seconds until the wiDR fully boots up.
- 3) Put the DIP switch **#1** back to **OFF** position (it does not matter if the wiDR is powered On or Off, just make sure that the DIP switch is set to **OFF**, otherwise, everytime the unit is power-cycled the factory settings will take over.

Note

The defaults that will change are noted by a “**W**” or “**E**” in the Table below. The defaults for the wiDR/Controller “**C**” are set by the individual Setup menus.

C = wiDR/Controller Board

W = Wireless or Coordinator Board

E = Ethernet or iServer Board

Table 7.1 Factory Preset Values

CONTROLLER SETUP		
Input		
Control End Device ID	A-1	W
Filter	4	C
Temperature Unit	F	C
Decimal Point position	xxx.x	C

Table 7.1 Factory Preset Values (continued)

Setpoints & On/Off Control		
Auto Setpoint Deviation	Disabled	C
Setpoint 1	100.0	C
Setpoint 2	100.0	C
Permanent Store	<input checked="" type="checkbox"/>	C
On/Off 1	Disabled	C
Deadband	10	C
Action	Reverse	C
On/Off 2	Disabled	C
Deadband	10	C
Action	Reverse	C
Alarm 1		
Alarm 1 Relay	Enabled	C
Alarm 1 Low	-50.0	C
Alarm 1 High	50.0	C
Active	Above	C
Normally	Open	C
Latch	Unlatched	C
Absolute	Absolute	C
Alarm at Power On	Enabled	C
Alarm 2		
Alarm 2 Relay	Enabled	C
Alarm 2 Low	-50.0	C
Alarm 2 High	50.0	C
Active	Below	C
Normally	Open	C
Latch	Unlatched	C
Absolute	Absolute	C
Alarm at Power On	Enabled	C
Display (not used for wiDR)		
Screen Update (secs)	3	W
Normal	Green	C
Alarm 1	Red	C
Alarm 2	Amber	C
Passcode ID (not used for wiDR)		
Setpoint ID	Disabled	C
Full ID	Disabled	C
ID	0000	C

Table 7.1 Factory Preset Values (continued)

Analog Output Retransmission		
Retransmission	Enabled	C
Voltage/Current	Voltage	C
Input Low	0	C
Output Low	0.00	C
Input High	1000	C
Output High	10.00	C
Monitor		
Scrolling	<input checked="" type="checkbox"/>	W
End Device ID	-	-
Permanent Store	<input type="checkbox"/>	W
Transmission Power		
Channel	Auto Detect	-
Transmission Power Range	20dBm	W
Misc		
PID (version x.x)	13106/0x3332	-
iSeries Firmware Ver x.x	-	-
NETWORK SETUP		
General		
Secured Applet	<input type="checkbox"/>	E
Title	zSeries	E
Terminal Server		
TCP/IP	TCP	E
Server Type	Command	E
Forward CR	Enable	E
Number of Connections	1	E
Port	02000	E
Remote Access (Tunneling)		
Remote IP Address	0.0.0.0	E
Remote Port	02000	E
Remote Access	Disable	E
Access Control		
Login Password	12345678	E
Admin Password	00000000	E
Host name	wisxxxx	-
MAC Address: 00:03:34:00:xx:xx		-
IP Address	192.168.1.200	E
Gateway Address	0.0.0.0	E
Subnet Mask	255.255.255.0	E

Table 7.1 Factory Preset Values (continued)

End Device Setup								
-	E	W	E	C	E	E	W	W
ID	Name	Update	Network	Units	Remote Format	End Char	Display	Alarm
<u>1</u>	ABCDEFGH	10	<input checked="" type="checkbox"/>	--	000000	0D	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
			<input checked="" type="checkbox"/>	--	000000	0D	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
<u>2</u>	ABCDEFGH	10	<input checked="" type="checkbox"/>	--	000000	0D	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
			<input checked="" type="checkbox"/>	--	000000	0D	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
<u>3</u>	ABCDEFGH	10	<input checked="" type="checkbox"/>	--	000000	0D	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
			<input checked="" type="checkbox"/>	--	000000	0D	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
<u>4</u>	ABCDEFGH	10	<input checked="" type="checkbox"/>	--	000000	0D	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
			<input checked="" type="checkbox"/>	--	000000	0D	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
<u>5</u>	ABCDEFGH	10	<input checked="" type="checkbox"/>	--	000000	0D	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
			<input checked="" type="checkbox"/>	--	000000	0D	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
<u>6</u>	ABCDEFGH	10	<input checked="" type="checkbox"/>	--	000000	0D	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
			<input checked="" type="checkbox"/>	--	000000	0D	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
<u>7</u>	ABCDEFGH	10	<input checked="" type="checkbox"/>	--	000000	0D	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
			<input checked="" type="checkbox"/>	--	000000	0D	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
<u>8</u>	ABCDEFGH	10	<input checked="" type="checkbox"/>	--	000000	0D	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
			<input checked="" type="checkbox"/>	--	000000	0D	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>

END DEVICE PARAMETERS		
End Device # (1 - 8)		
Device Name	ABCDEFGH	E
Update	10 secs	W
Sensor 1		
Remote Display Format	00000000	E
Remote End Char(Hex) 0x	0D	E
Offset (xxxx)	0	W
Display	<input checked="" type="checkbox"/>	W
Alarm	<input checked="" type="checkbox"/>	W
TC Type	J Type	W
Sensor 2		
Remote Display Format	00000000	E
Remote End Char(Hex) 0x	0D	E
Offset (xxxx)	0	W

User of this manual should be familiar with following definitions:

ARP (Address Resolution Protocol) is a protocol for mapping an Internet Protocol address (IP address) to a physical machine address that is recognized in the local network. For example, the IP address in use today is an address that is 32-bits long. In an Ethernet local area network, however, addresses for attached devices are 48-bits long. (The physical machine address is also known as a Media Access Control or MAC address.) A table, usually called the ARP cache, is used to maintain a correlation between each MAC address and its corresponding IP address. ARP provides the protocol rules for making this correlation and providing address conversion in both directions.

Ethernet is a network protocol defined by the IEEE 802.3 standard. Ethernet-based networks use MAC Address rather than IP Address to exchange data between computers. By using ARP and adding TCP/IP support, Ethernet devices may be connected as part of the Internet. An Ethernet LAN typically uses coaxial cable or special grades of twisted pair wires. The most commonly installed Ethernet systems are called 10BASE-T and provide transmission speeds up to 10 Mbps. Devices are connected to the cable and compete for access using a Carrier Sense Multiple Access with Collision Detection (CSMA/CD) protocol.

IP (Internet Protocol) is the method or protocol by which data is sent from one computer to another on the Internet.

IP address (Internet Protocol address) is a 32-bit number that identifies each sender or receiver of information that is sent in packets across the Internet.

IP Netmask is a 32-bit pattern of bits used to determine which part of the IP address is the network portion and which part is the host portion.

MAC (Media Access Control) Address is your computer's unique hardware number. When you're connected to the Internet from your computer, a correspondence table relates your IP address to your computer's physical (MAC) address on the LAN.

Ping is a utility that tests the network connectivity. It is used to determine if the host is capable of exchanging information with another host.

Port number/Socket number is a way to identify a specific process to which an Internet or other network message is to be forwarded when it arrives at a server. It is a predefined address that serves as a route from the application to the Transport layer or from the Transport layer to the application of the TCP/IP system.

Sockets are a method for communication between a client program and a server program in a network and defined as "the endpoint in a connection." Information transferred across the Internet primarily occurs between sockets.

TCP/IP (Transmission Control Protocol/Internet Protocol) is the basic communication language or protocol of the Internet. When you are set up with direct access to the Internet, your computer is provided with a copy of the TCP/IP program just as every other computer that you may send messages to or get information from also has a copy of TCP/IP. TCP/IP often is used as a general term to indicate generic access to the Internet.

UDP/IP (User Datagram Protocol/Internet Protocol) is the TCP/IP standard protocol that allows an application program on one machine to send a datagram to an application program on another. The UDP can be either in Broadcast or Directed form. The Broadcast UDP transmits data to every node on the same network. The Directed UDP transmits data to one node only.

Appendix B

IP Address

An IP address is a unique 32-bit address assigned to a computer and includes:

- A network ID number identifying a network.
- A host ID number identifying a computer on the network.

All IP addresses have been divided into three smaller groups (classes) A, B and C

- **Class A** addresses have 8-bits of network ID and 24-bits of host ID. They can support a large number of hosts, approximately $2^{24} = 16,777,216$ computers per network.

The IP addresses range in binary from 00000001.xxxxxxxx.xxxxxxxx.xxxxxxxx
to 01111111.xxxxxxxx.xxxxxxxx.xxxxxxxx

The IP addresses range in decimal from 1.x.x.x to 127.x.x.x

Class A network ID's support a very large number of hosts.

- **Class B** addresses have 16-bits of network ID and 16-bits of host ID. They can support approximately $2^{16} = 65,536$ computers per network.

The IP addresses range in binary from 10000000 00000000.xxxxxxxx.xxxxxxxx
to 10111111 11111111.xxxxxxxx.xxxxxxxx

The IP addresses range in decimal from 128.0.x.x TO 191.255.xxx.xxx

Class B network ID's support a medium number of hosts.

- **Class C** addresses have 24-bits of network ID and 8-bits of host ID. They can support approximately $2^8 = 256$ computers per network.

The IP addresses range in binary from 11000000.00000000.00000000.xxxxxxxx
to 11011111.11111111.11111111.xxxxxxxx

The IP addresses range in decimal from 192.0.0.xxx to 223.255.255.xxx

Class C network ID's support a small number of hosts.



The rest of the addresses are divided into two classes, D and E.

Class D networks are not assigned to the host. They are used for multicasting.
The address range from 224.x.x.x to 239.x.x.x

Class E networks are experimental or reserved addresses.

The address range from 240.x.x.x to 247.x.x.x

Appendix C

IP Netmask

IP Netmask or Subnet Mask is a 32-bit pattern of ones and zeros used to determine network portion of an IP address from the host portion of the IP address. Subnet mask is a network ID that is created by borrowing bits from host portion of IP address and using them as part of a network ID. The table below shows a default subnet mask for address Classes A, B, and C. Each bit that is set to "1" in the subnet mask corresponds to the bit in the IP address that is to be used as the network ID. Each bit that is set to "0" in the subnet mask corresponds to a bit in the IP address that is to be used as the host ID.

Address Class	Mask Binary Value	Mask Decimal Value or Dotted Notation
Class A	11111111 00000000 00000000 00000000	255.0.0.0
Class B	11111111 11111111 00000000 00000000	255.255.0.0
Class C	11111111 11111111 11111111 00000000	255.255.255.0

If your network requires more network ID's, you can extend the default subnet mask to include additional bits from the host ID. This allows for additional network ID's within the network. The table below shows some examples of subnet masks and bits moved from the hosts ID to create a new subnet.

Mask Dotted Notation	Mask Binary	Mask Bits
Class A		
255.0.0.0 (Default)	11111111 00000000 00000000 00000000	0
255.192.0.0	11111111 11000000 00000000 00000000	2
255.224.0.0	11111111 11100000 00000000 00000000	3
255.240.0.0	11111111 11110000 00000000 00000000	4
255.248.0.0	11111111 11111000 00000000 00000000	5
255.252.0.0	11111111 11111100 00000000 00000000	6
255.254.0.0	11111111 11111110 00000000 00000000	7
255.255.0.0	11111111 11111111 00000000 00000000	8
255.255.128.0	11111111 11111111 10000000 00000000	9
255.255.192.0.0	11111111 11111111 11000000 00000000	10
.....
255.255.255.252	11111111 11111111 11111111 11111100	22
Class B		
255.255.0.0 (Default)	11111111 11111111 00000000 00000000	0
255.255.192.0	11111111 11111111 11000000 00000000	2
.....
255.255.255.252	11111111 11111111 11111111 11111100	14
Class C		
255.255.255.0 (Default)	11111111 11111111 11111111 00000000	0
255.255.255.192	11111111 11111111 11111111 11000000	2
.....
255.255.255.254	11111111 11111111 11111111 11111100	6

To determine the number of valid hosts ID's remaining after subnetting, use the following equation: $2^n - 2$, where n is the number of octet digits left after the subnet mask.

Appendix D**ASCII Chart**

ASCII Char	Dec	Hex	Binary No Parity	ASCII Char	Dec	Hex	Binary No parity
NUL	00	00	00000000	@	64	40	01000000
SOH	01	01	00000001	A	65	41	01000000
STX	02	02	00000010	B	66	42	01000010
ETX	03	03	00000011	C	67	43	01000011
EOT	04	04	00000100	D	68	44	01000100
ENQ	05	05	00000101	E	69	45	01000101
ACK	06	06	00000110	F	70	46	01000110
BEL	07	07	00000111	G	71	47	01000111
BS	08	08	00001000	H	72	48	01001000
HT	09	09	00001001	I	73	49	01001001
LF	10	0A	00001010	J	74	4A	01001010
VT	11	0B	00001011	K	75	4B	01001011
FF	12	0C	00001100	L	76	4C	01001100
CR	13	0D	00001101	M	77	4D	01001101
SO	14	0E	00001110	N	78	4E	01001110
SI	15	0F	00001111	O	79	4F	01001111
DLE	16	10	00010000	P	80	50	01010000
DC1	17	11	00010001	Q	81	51	01010001
DC2	18	12	00010010	R	82	52	01010010
DC3	19	13	00010011	S	83	53	01010011
DC4	20	14	00010100	T	84	54	01010100
NAK	21	15	00010101	U	85	55	01010101
SYN	22	16	00010110	V	86	56	01010110
ETB	23	17	00010111	W	87	57	01010111
CAN	24	18	00011000	X	88	58	01011000
EM	25	19	00011001	Y	89	59	01011001
SUB	26	1A	00011010	Z	90	5A	01011010
ESC	27	1B	00011011	[91	5B	01011011
FS	28	1C	00011100	\	92	5C	01011100
GS	29	1D	00011101]	93	5D	01011101
RS	30	1E	00011110	^	94	5E	01011110
US	31	1F	00011111	_	95	5F	01011111
SP	32	20	00100000	`	96	60	01100000
!	33	21	00100001	a	97	61	01100001
"	34	22	00100010	b	98	62	01100010
#	35	23	00100011	c	99	63	01100011
\$	36	24	00100100	d	100	64	01100100
%	37	25	00100101	e	101	65	01100101
&	38	26	00100110	f	102	66	01100110
'	39	27	00100111	g	103	67	01100111
(40	28	00101000	h	104	68	01101000
)	41	29	00101001	i	105	69	01101001
*	42	2A	00101010	j	106	6A	01101010
+	43	2B	00101011	k	107	6B	01101011
,	44	2C	00101100	l	108	6C	01101100
-	45	2D	00101101	m	109	6D	01101101
.	46	2E	00101110	n	110	6E	01101110

Appendix D**ASCII Chart Continuation**

/	47	2F	00101111	o	111	6F	01101111
0	48	30	00110000	p	112	70	01110000
1	49	31	00110001	q	113	71	01110001
2	50	32	00110010	r	114	72	01110010
3	51	33	00110011	s	115	73	01110011
4	52	34	00110100	t	116	74	01110100
5	53	35	00110101	u	117	75	01110101
6	54	36	00110110	v	118	76	01110110
7	55	37	00110111	w	119	77	01110111
8	56	38	00111000	x	120	78	01111000
9	57	39	00111001	y	121	79	01111001
:	58	3A	00111010	z	122	7A	01111010
;	59	3B	00111011	{	123	7B	01111011
<	60	3C	00111100		124	7C	01111100
=	61	3D	00111101	}	125	7D	01111101
>	62	3E	00111110	~	126	7E	01111110
?	63	3F	00111111	DEL	127	7F	01111111

ASCII Control Codes

ASCII Char	Dec	Hex	Ctrl Key Equiv.	Definition	ASCII Char	Dec	Hex	Ctrl Key Equiv.	Definition
NUL	00	00	Ctrl @	Null Character	DC1	17	11	Ctrl Q	Data Control 1 - XON
SOH	01	01	Ctrl A	Start of Header	DC2	18	12	Ctrl R	Data Control 2
STX	02	02	Ctrl B	Start of Text	DC3	19	13	Ctrl S	Data Control 3 - XOFF
ETX	03	03	Ctrl C	End of Text	DC4	20	14	Ctrl T	Data Control 4
EOT	04	04	Ctrl D	End of Transmission	NAK	21	15	Ctrl U	Negative Acknowledge
ENQ	05	05	Ctrl E	Inquiry	SYN	22	16	Ctrl V	Synchronous Idle
ACK	06	06	Ctrl F	Acknowledge	ETB	23	17	Ctrl W	End of Trans Block
BEL	07	07	Ctrl G	Bell	CAN	24	18	Ctrl X	Cancel
BS	08	08	Ctrl H	Back Space	EM	25	19	Ctrl Y	End of Medium
HT	09	09	Ctrl I	Horizontal Tabulation	SUB	26	1A	Ctrl Z	Substitute
LF	10	0A	Ctrl J	Line Feed	ESC	27	1B	Ctrl [Escape
VT	11	0B	Ctrl K	Vertical Tabulation	FS	28	1C	Ctrl \	File Separator
FF	12	0C	Ctrl L	Form Feed	GS	29	1D	Ctrl]	Group Separator
CR	13	0D	Ctrl M	Carriage Return	RS	30	1E	Ctrl	Record Separator
SO	14	0E	Ctrl N	Shift Out	US	31	1F	Ctrl _	Unit Separator
SI	15	0F	Ctrl O	Shift In	SP	32	20		Space
DLE	16	10	Ctrl P	Data Link Escape					

Appendix E

iLog Error Messages

Error #	Description	Note
-8003	User stopped logging readings.	
-10005	Failed to find the wiDR.	Ethernet cable is disconnected, iServer is powered off, connections across the firewall require longer "connection to socket time out" setting.
-10006	Windows socket was closed.	
-10007	Windows socket error.	Wrong IP or wrong Port number was used.
-10008	The wiDR failed to respond to a request.	Wrong IP or wrong Port number was used.
-10011	Response came empty.	No data was sent.
-10012	Device responded with "Serial Time Out" string.	Possibly the iLog is configured for wrong product model.
-10014	Terminal Server Mode when the Port is 1000.	Try Port 2000 in iLog configuration.
-15100	Error on obtaining the temperature reading.	Possibly the iLog is configured for wrong product model.

Appendix F Warnings and Regulatory Information



In order to comply with FCC radio frequencies (RF) exposure limits, dipole antennas should be located at a minimum 7.9 " (200mm) or more from the body of all persons.

This device complies with part 15 rules. Operation is subject to the following two conditions:

- 1) this device may not cause harmful interference, and
- 2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential environment. This equipment generates, uses, and radiates radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference. However, there is no guarantee that interference will not occur. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from which the receiver is connected.
- Consult dealer or an experienced radio/TV technician.

Appendix F Warnings and Regulatory Information (continued)



The following alert sign indicates that there are restrictions on usage of the equipment in regards to power limitations on Equivalent Isotropic Radiated Power (EIRP) levels in the European Community.

The following are user restrictions:

- Wideband Data Transmission Systems on the band 2400 – 2483.5 MHz in Europe is limited to a Maximum of 10 mW (10 dBm) for Direct Sequence Spread Spectrum (DSSS). See Annex 3 of ERC/REC 70-03, decision ERC/DEC/ (01)07.
- Combinations of power levels and antennas resulting in a radiated power level above 10 mW - EIRP for Direct Sequence Spectrum (DSSS) devices are considered as not compliant, and are not allowed for use within the European Community and other countries that have adopted the European R&TTE directive 1995/5/EC or the CEPT recommendation ERC/REC 70-03 or both.
- The users in Europe are instructed to change the default 20 dBm level to 10 dBm via the Web Interface of the wiDR/Receiver. The End Devices will follow the power level set on the wiDR/Receiver upon power-up; failure to change the default U.S.A. power level setting (20 dBm) will violate the regulations requirements for Europe.

MAXIMUM POWER LEVELS AND ANTENNA GAINS

	Antenna Gain	Output Max	Maximum Radiated
U.S.A (Regulatory 4W)	2.2 dBi	18.0 dBm	20 dBm
EUROPE (Regulatory 10mW) (DSSS)	2.2 dBi	7.0 - 7.5 dBm	10 dBm



The default 20 dBm must be changed to 10 dBm to comply with power level regulations. The 0.5 dBm variation depends on the internal DC power used (3V, 3.3V, 3.7V max) of the different models.

NOTES

[illegible]

WARRANTY/DISCLAIMER

OMEGA ENGINEERING, INC. warrants this unit to be free of defects in materials and workmanship for a period of **one (1) year** from the date of purchase. In addition to OMEGA's standard warranty period, OMEGA Engineering will extend the warranty period for **one (1) additional year** if the warranty card enclosed with each instrument is returned to OMEGA.

If the unit malfunctions, it must be returned to the factory for evaluation. OMEGA's Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective, it will be repaired or replaced at no charge. OMEGA's WARRANTY does not apply to defects resulting from any action of the purchaser, including but not limited to mishandling, improper interfacing, operation outside of design limits, improper repair, or unauthorized modification. This WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of having been damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA's control. Components which wear are not warranted, including but not limited to contact points, fuses, and triacs.

OMEGA is pleased to offer suggestions on the use of its various products. However, OMEGA neither assumes responsibility for any omissions or errors nor assumes liability for any damages that result from the use of its products in accordance with information provided by OMEGA, either verbal or written. OMEGA warrants only that the parts manufactured by it will be as specified and free of defects. OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESS OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. LIMITATION OF LIABILITY: The remedies of purchaser set forth herein are exclusive, and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.

CONDITIONS: Equipment sold by OMEGA is not intended to be used, nor shall it be used: (1) as a "Basic Component" under 10 CFR 21 (NRC), used in or with any nuclear installation or activity; or (2) in medical applications or used on humans. Should any Product(s) be used in or with any nuclear installation or activity, medical application, used on humans, or misused in any way, OMEGA assumes no responsibility as set forth in our basic WARRANTY/DISCLAIMER language, and, additionally, purchaser will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the Product(s) in such a manner.

RETURN REQUESTS/INQUIRIES

Direct all warranty and repair requests/inquiries to the OMEGA Customer Service Department. BEFORE RETURNING ANY PRODUCT(S) TO OMEGA, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OMEGA'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS). The assigned AR number should then be marked on the outside of the return package and on any correspondence.

The purchaser is responsible for shipping charges, freight, insurance and proper packaging to prevent breakage in transit.

FOR WARRANTY RETURNS, please have the following information available BEFORE contacting OMEGA:

1. Purchase Order number under which the product was PURCHASED,
2. Model and serial number of the product under warranty, and
3. Repair instructions and/or specific problems relative to the product.

FOR NON-WARRANTY REPAIRS, consult OMEGA for current repair charges. Have the following information available BEFORE contacting OMEGA:

1. Purchase Order number to cover the COST of the repair,
2. Model and serial number of product, and
3. Repair instructions and/or specific problems relative to the product.

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering.

© Copyright 2013 OMEGA ENGINEERING, INC. All rights reserved. This document may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without the prior written consent of OMEGA ENGINEERING, INC.

TRADEMARK NOTICE:  **OMEGA**,  **OMEGA**, and  are Trademarks of OMEGA ENGINEERING, INC.

PATENT NOTICE: This product is covered by one or more of the following patents: U.S. Pat. No. Des. 336,895; 5,274,577/ CANADA 2052599; 2052600 / ITALY 1249456; 1250938 / FRANCE BREVET No. 91 12756 / SPAIN 2039150; 2048066 / UK PATENT No. GB2 249 837; GB2 248 954 / GERMANY DE 41 34398 C2. Other US and International Patents pending or applied for.

Where Do I Find Everything I Need for Process Measurement and Control? OMEGA...Of Course!

Shop on line at omega.com

TEMPERATURE

- ☒ Thermocouple, RTD & Thermistor Probes, Connectors, Panels & Assemblies
- ☒ Wire: Thermocouple, RTD & Thermistor
- ☒ Calibrators & Ice Point References
- ☒ Recorders, Controllers & Process Monitors
- ☒ Infrared Pyrometers

PRESSURE, STRAIN AND FORCE

- ☒ Transducers & Strain Gauges
- ☒ Load Cells & Pressure Gauges
- ☒ Displacement Transducers
- ☒ Instrumentation & Accessories

FLOW/LEVEL

- ☒ Rotameters, Gas Mass Flowmeters & Flow Computers
- ☒ Air Velocity Indicators
- ☒ Turbine/Paddlewheel Systems
- ☒ Totalizers & Batch Controllers

pH/CONDUCTIVITY

- ☒ pH Electrodes, Testers & Accessories
- ☒ Benchtop/Laboratory Meters
- ☒ Controllers, Calibrators, Simulators & Pumps
- ☒ Industrial pH & Conductivity Equipment

DATA ACQUISITION

- ☒ Data Acquisition & Engineering Software
- ☒ Communications-Based Acquisition Systems
- ☒ Plug-in Cards for Apple, IBM & Compatibles
- ☒ Datalogging Systems
- ☒ Recorders, Printers & Plotters

HEATERS

- ☒ Heating Cable
- ☒ Cartridge & Strip Heaters
- ☒ Immersion & Band Heaters
- ☒ Flexible Heaters
- ☒ Laboratory Heaters

ENVIRONMENTAL MONITORING AND CONTROL

- ☒ Metering & Control Instrumentation
- ☒ Refractometers
- ☒ Pumps & Tubing
- ☒ Air, Soil & Water Monitors
- ☒ Industrial Water & Wastewater Treatment
- ☒ pH, Conductivity & Dissolved Oxygen Instruments