


5 YEAR
WARRANTY



Ω OMEGA[®] User's Guide

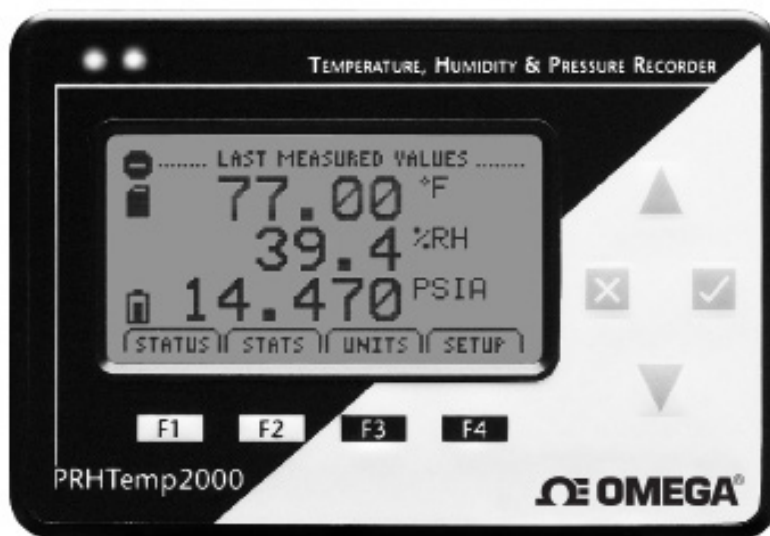

***Shop online at
omega.com[®]***

***e-mail: info@omega.com
For latest product manuals:
www.omegamanual.info***

OM-CP-PRHTEMP2000
Pressure, Humidity and Temperature Data Logger with LCD

Product Overview

The OM-CP-PRHTEMP2000 is a pressure, temperature and humidity data logger with LCD display. The convenient LCD provides access to the current pressure, temperature and humidity readings, as well as minimum, maximum and average statistics. For additional information refer to your OM-CP-PRHTEMP2000 manual and "Data Logger & Software Operating Manual".

Backlight

The backlight uses a significant amount of battery life. Refer to the manual to configure the auto shut-off when not in use.

Submergibility

The OM-CP-PRHTEMP2000 is rated IP65, which means it is dust tight and can withstand water jets.

Set Password

To password protect the device so that others cannot start, stop or reset the device:

- In the **Connected Devices** panel, click the device desired.
- On the **Device** Tab, in the **Information** Group, click **Properties**. Or, right-click the device and select **Properties** in the context menu.
- On the **General** Tab, click **Set Password**.
- Enter and confirm the password in the box that appears, then select **OK**.

Installation Guide

Installing the Interface cable

- OM-CP-IFC200

Insert the device into a USB port. The drivers will install automatically.

Installing the software

Insert the Omega Software Flash Drive in an open USB port. If the autorun does not appear, locate the drive on the computer and double click on **Autorun.exe**. Follow the instructions provided in the Installation Wizard.

Device Operation

Connecting and Starting the data logger

1. Once the software is installed and running, plug the interface cable into the data logger.
2. Connect the USB end of the interface cable into an open USB port on the computer.
3. The device will appear in the Connected Devices list, highlight the desired data logger.
4. For most applications, select "**Custom Start**" from the menu bar and choose the desired start method, reading rate and other parameters appropriate for the data logging application and click "**Start**". (*"Quick Start" applies the most recent custom start options, "Batch Start" is used for managing multiple loggers at once, "Real Time Start" stores the dataset as it records while connected to the logger.*)
5. The status of the device will change to "**Running**", "**Waiting to Start**" or "**Waiting to Manual Start**", depending upon your start method.
6. Disconnect the data logger from the interface cable and place it in the environment to measure.
Note: The device will stop recording data when the end of memory is reached or the device is stopped. At this point the device cannot be restarted until it has been re-armed by the computer.

Downloading data from a data logger

1. Highlight the data logger in the Connected Devices list. Click "**Stop**" on the menu bar.
2. Once the data logger is stopped, with the logger highlighted, click "**Download**". You will be prompted to name your report.
3. Downloading will offload and save all the recorded data to the PC.

Product Maintenance

Battery Replacement

Materials: 9/64" HEX Driver (Allen Key) and a Replacement Batteries (6 AA)

1. Remove the back cover from the device by unscrewing the four screws.
2. Remove the batteries from the compartment.
3. Insert the new batteries as indicated by the diagram on the battery holder.
4. Replace the cover taking care not to pinch the wires. Screw the enclosure back together.

Note: Be sure not to over tighten the screws or strip the threads.

Recalibration

The OM-CP-PRHTEMP2000 standard calibration is one point at 25 °C, two points at 25 %RH and 75 %RH and two points at 14.7 PSI and 30 PSI. a reminder is automatically displayed in the software when the device is due.

OM-CP-PRHTEMP2000 General Specifications

Temperature Sensor	Semiconductor (strain guage)
Temperature Range	-20 °C to +60 °C (-4 °F to +140 °F)
Pressure Resolution	0.1°C (0.18°F)
Calibrated Accuracy	+0.5 °C/+0.9 °F (0 °C to 50 °C/32 °F to 122 °F)
Pressure Sensor	Semiconductor
Pressure Range	0 to 30 PSIA
Pressure Resolution	0.002PSIA
Calibrated Accuracy	+1.0%FSR; 0.25% at 25 °C
Humidity Sensor	Internal Semiconductor
Humidity Range	0%RH to 95%RH
Humidity Resolution	0.1%RH
Calibrated Accuracy	+3%RH (2%RH @ 25 °C Typical)
Memory	87,381/channel
Reading Rate	1 reading every 2 seconds up to 1 reading every 24 hours
Required Interface Package	IFC200
Baud Rate	115,200
Typical Battery Life	1 year with display off, 30 days with continuous LCD and no backlight
Operating Environment	-20°C to 60°C (-4°F to 140°F), 0%RH to 95%RH (non-condensing)
Material	Black anodized aluminum
Dimensions	4.8 in x 3.3 in x 1.25 in (122 mm x 84 mm x 32 mm)
Weight	16oz (440g)
Approvals	CE

Battery Warning

WARNING: RISK OF FIRE OR EXPLOSION. DO NOT RECHARGE, FORCE OPEN, HEAT OR DISPOSE OF IN FIRE.

*Specifications subject to change.
See Omega's terms and conditions at www.omega.com*



omega.com info@omega.com

Servicing North America:

U.S.A.: Omega Engineering, Inc., One Omega Drive, P.O. Box 4047
Stamford, CT 06907-0047 USA
Toll-Free: 1-800-826-6342 (USA & Canada only)
Customer Service: 1-800-622-2378 (USA & Canada only)
Engineering Service: 1-800-872-9436 (USA & Canada only)
Tel: (203) 359-1660 Fax: (203) 359-7700
e-mail: info@omega.com

For Other Locations Visit omega.com/worldwide

The information contained in this document is believed to be correct, but OMEGA accepts no liability for any errors it contains, and reserves the right to alter specifications without notice.

WARNING: These products are not designed for use in, and should not be used for, human applications.



WARRANTY/DISCLAIMER

OMEGA ENGINEERING, INC. warrants this unit to be free of defects in materials and workmanship for a period of **61 months** from date of purchase. OMEGA's WARRANTY adds an additional one (1) month grace period to the normal **five (5) year product warranty** to cover handling and shipping time. This ensures that OMEGA's customers receive maximum coverage on each product.

If the unit malfunctions, it must be returned to the factory for evaluation. OMEGA's Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective, it will be repaired or replaced at no charge. OMEGA's WARRANTY does not apply to defects resulting from any action of the purchaser, including but not limited to mishandling, improper interfacing, operation outside of design limits, improper repair, or unauthorized modification. This WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of having been damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA's control. Components in which wear is not warranted, include but are not limited to contact points, fuses, and triacs.

OMEGA is pleased to offer suggestions on the use of its various products. However, OMEGA neither assumes responsibility for any omissions or errors nor assumes liability for any damages that result from the use of its products in accordance with information provided by OMEGA, either verbal or written. OMEGA warrants only that the parts manufactured by the company will be as specified and free of defects. OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESSED OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. LIMITATION OF LIABILITY: The remedies of purchaser set forth herein are exclusive, and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.

CONDITIONS: Equipment sold by OMEGA is not intended to be used, nor shall it be used: (1) as a "Basic Component" under 10 CFR 21 (NRC), used in or with any nuclear installation or activity; or (2) in medical applications or used on humans. Should any Product(s) be used in or with any nuclear installation or activity, medical application, used on humans, or misused in any way, OMEGA assumes no responsibility as set forth in our basic WARRANTY/DISCLAIMER language, and, additionally, purchaser will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the Product(s) in such a manner.

RETURN REQUESTS / INQUIRIES

Direct all warranty and repair requests/inquiries to the OMEGA Customer Service Department. BEFORE RETURNING ANY PRODUCT(S) TO OMEGA, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OMEGA'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS). The assigned AR number should then be marked on the outside of the return package and on any correspondence.

The purchaser is responsible for shipping charges, freight, insurance and proper packaging to prevent breakage in transit.

FOR **WARRANTY** RETURNS, please have the following information available BEFORE contacting OMEGA:

1. Purchase Order number under which the product was PURCHASED,
2. Model and serial number of the product under warranty, and
3. Repair instructions and/or specific problems relative to the product.

FOR **NON-WARRANTY** REPAIRS, consult OMEGA for current repair charges. Have the following information available BEFORE contacting OMEGA:

1. Purchase Order number to cover the COST of the repair,
2. Model and serial number of the product, and
3. Repair instructions and/or specific problems relative to the product.

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering. OMEGA is a registered trademark of OMEGA ENGINEERING, INC.

© Copyright 2014 OMEGA ENGINEERING, INC. All rights reserved. This document may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without the prior written consent of OMEGA ENGINEERING, INC.