

Where Do I Find Everything I Need for
Process Measurement and Control?
OMEGA... Of Course!
Shop online at www.omega.com

TEMPERATURE

- Thermocouple, RTD & Thermistor Probes, Connectors, Panels & Assemblies
- Wire, Thermocouple, RTD & Thermistor
- Calibrators & Ice Point References
- Recorders, Controllers & Process Monitors
- Infrared Pyrometers

PRESSURE, STRAIN AND FORCE

- Transducers & Strain Gages
- Load Cells & Pressure Gages
- Displacement Transducers
- Instrumentation & Accessories

FLOW/LEVEL

- Rotameters, Gas Mass Flowmeters & Flow Computers
- Air Velocity Indicators
- Turbine/Paddlewheel Systems
- Totalizers & Batch Controllers

pH/CONDUCTIVITY

- pH Electrodes, Testers & Accessories
- Benchtop/Laboratory Meters
- Controllers, Calibrators, Simulators & Pumps
- Industrial pH & Conductivity Equipment

DATA ACQUISITION

- Data Acquisition & Engineering Software
- Communications-Based Acquisition Systems
- Plug-in Cards for Apple, IBM & Compatibles
- Datalogging Systems
- Recorders, Printers & Plotters

HEATERS

- Heating Cable
- Cartridge & Strip Heaters
- Immersion & Band Heaters
- Flexible Heaters
- Laboratory Heaters


ENVIRONMENTAL MONITORING AND CONTROL

- Metering & Control Instrumentation
- Refractometers
- Pumps & Tubing
- Air, Soil & Water Monitors
- Industrial Water & Wastewater Treatment
- pH, Conductivity & Dissolved Oxygen Instruments

M35652/0401



User's Guide

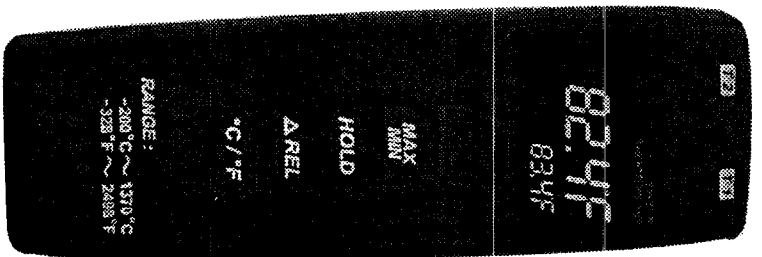

Shop online at
www.omega.com

e-mail: info@omega.com



OMEGAETTE™ HH308
Type K Thermometer

RANGE:
-200°C ~ 1370°C
-328°F ~ 2498°F

°C/°F

ΔREL

HOLD

MAX

MIN

www.omega.com

e-mail: info@omega.com



CONTENTS

TITLE	PAGE
I. Introduction	3
II. Specifications	3
III. Symbol Definition and Button Location	5
IV. Operation Instructions	6
4.1 Power-Up.....	6
4.2 Connection the Thermocouples.....	6
4.3 Selecting the Temperature Unit.....	6
4.4 Data-Hold Operation.....	6
4.5 Relative Operation.....	6
4.6 MAX/MIN/AVG Operation.....	7
4.7 Auto Power Off.....	7
4.8 Low Battery Condition.....	7
4.9 Calibration Point.....	7

I. Introduction:

This instrument is a digital thermometer for use with any K-type thermocouple as temperature sensor. Temperature indication follows National Bureau of Standards and IEC584 temperature/voltage table for K-type thermocouples.

II. Specifications:

- Numerical Display:**
 - 4 digital liquid crystal display
- Measurement Range:**
 - 200°C ~ -1370°C -328°F ~ 2498°F
- Resolution:**
 - 200°C ~ 200°C 0.1°C ; 200°C ~1370°C 1°C
 - 200°F ~ 200°F 0.1°F ; 200°F ~2498°F 1°F
- Maximum Voltage at Thermocouple Input:**
 - 60V DC, or 24Vrms AC
- Environmental:**
 - Operating Temperature and Humidity:
 - 0°C ~50°C (32°F ~ 122°F) ; 0 ~ 80% RH
 - Storage Temperature and Humidity:
 - 10°C to 60°C (14°F ~ 140°F) ; 0 ~ 80% RH
 - Altitude up to 2000 meters.
- Sample Rate:** 0.6 times per second
- Dimension:** 164x54x34mm
- Weight:** Approx. 180g
- Accessory:**
 - K Type Bead Probe, Battery, Instruction Menu
- Power requirement:**
 - 9 Volt Battery, NEDA 1604 or JIS 006P or IEC6F22
- Battery Life:**
 - Approx. 150hrs with alkaline battery

Accuracy: at (23 ± 5°C)

Range	Accuracy
-200°C ~ 200°C	±(0.3% reading + 1°C)
200°C ~ 400°C	±(0.5% reading + 1°C)
400°C ~ 1370°C	±(0.3% reading + 1°C)
-328°F ~ -200°F	±(0.5% reading + 2°F)
-200°F ~ 200°F	±(0.3% reading + 2°F)
200°F ~ 400°F	±(0.5% reading + 2°F)
400°F ~ 2498°F	±(0.3% reading + 2°F)



Temperature Coefficient:

For ambient temperatures from 0°C ~ 18°C and 28°C ~ 50°C, for each °C ambient below 18°C or above 28°C add the following tolerance into the accuracy spec.
 0.04% of reading + 0.03°C
 (0.01% of reading + 0.06°F)

△ Note:

The basic accuracy Specification does not include the error of the probe please refer to the probe accuracy specification for additional details.

III. Symbol Definition and Button Location:

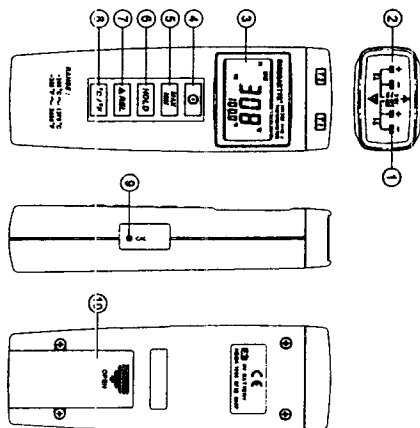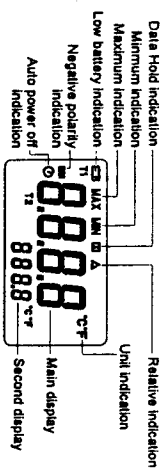

- ① T1 K type temperature sensor connector
- ② T2 K type temperature sensor connector
- ③ LCD display
- ④ ON/OFF button
- ⑤ MAX MIN Average control button
- ⑥ HOLD button
- ⑦ Relative readout button
- ⑧ °C, °F control button
- ⑨ Offset calibration screw
- ⑩ Battery cabinet cover

IV. Operation Instructions:

4.1 Power-Up

Press the \odot key to turn the thermometer On or OFF.

4.2 Connection the Thermocouples

For measurement, plug the thermocouple into the input connectors.

4.3 Selecting the Temperature Unit

When the meter was power on, the default unit is Celsius ($^{\circ}\text{C}$) scale. The user may change it to Fahrenheit ($^{\circ}\text{F}$) by pressing " $^{\circ}\text{C}/^{\circ}\text{F}$ " button and vice versa to Celsius.

4.4 Data-Hold Operation

The user may hold the present reading and keep it on the display by pressing the "HOLD" button. When the hold data is no longer needed, one may release the data-hold operation by pressing "HOLD" button again. When the meter is under Data Hold operation, the " ΔREL ", "MAX/MIN and " $^{\circ}\text{C}/^{\circ}\text{F}$ " button are disabled.

4.5 Relative Operation:

When one press the " ΔREL " button, the meter will memorize the present reading and the difference between the new reading and the memorized data will be shown on the display. Press the " ΔREL " button again to exit the Relative operation.

4.6 MAX/MIN Operation:

When one press the MAX/MIN button the meter will enter the MAX/MIN mode. Under this mode the maximum value and minimum value is kept in the memory simultaneously and updated with every new data.

When the MAX symbol is display, the Maximum is shown on the display.
Press MAX/MIN again, then the MIN symbol is on the display and also the minimum reading.
Press MAX/MIN again, MAX, MIN will blink together. This means that all these data is updated in the

memory and the reading is the present temperature. One may press MAX/MIN to circulate the display mode among these options.
When the meter is under MAX/MIN operation, " ΔREL " and " $^{\circ}\text{C}/^{\circ}\text{F}$ " are disabled.
To exit the MAX/MIN mode, one may press and hold MAX/MIN for two seconds.

4.7 Auto Power Off:

By default, when the meter is powered on, it is under auto power off mode. The meter will power itself off after 30 minutes if no key operation is performed. Key combination at power on can disable auto power off. One may press and hold "HOLD" button and then power on the meter and auto power off symbol will disappear to indicate that auto power off is disabled.

4.8 Low Battery Condition

When the battery voltage is under proper operation requirement, the E symbol will show on the LCD and the battery need to be replaced with new one.

4.9 Calibration Point:

Room Temperature $23 \pm 3^{\circ}\text{C}$

Input	Adjust VR	tolerance
0°C	VR3	$\pm 0.1^{\circ}\text{C}$
190°C	VR2	$\pm 0.1^{\circ}\text{C}$
1000°C	VR1	$\pm 1^{\circ}\text{C}$
190°F	VR4	$\pm 0.1^{\circ}\text{F}$

Normally, performing offset Calibration with thermal stabled ice water through VR3 will give a very good calibration result.

OMEGA's On-Line Service Internet e-mail
 www.omega.com info@omega.com

Servicing North America:

USA:
 ISO 9001 Certified One Omega Drive, Box 4047
 Stamford CT 06907-0047 Tel: (203) 359-1660 FAX: (203) 359-2700
 e-mail: info@omega.com

Canada:
 976 Berger Laval (Quebec) H7L 5A1 FAX: (514) 856-6886
 Tel: (514) 856-6928 e-mail: info@omega.ca

For immediate technical or application assistance:

USA and Canada: Sales Service: 1-800-826-6342 / 1-800-TC-OMEGA
 Customer Service: 1-800-622-2378 / 1-800-622-BEST
 Engineering Service: 1-800-872-9456 / 1-800-USA-WHEN
 TELEX: 996404 EASTLINK 62968934 CABLE: OMEGA
 En Español: (01) 203-359-7803 e-mail: espanol@omega.com
 FAX: (001) 203-359-7807 info@omega.com.mx

Servicing Europe:

Benelux: Postbus 8034, 1180 LA Amstelveen, The Netherlands
 Tel: +31 (0)20 3472121 FAX: +31 (0)20 6434643
 Toll Free in Benelux: 0800 0993344
 e-mail: nl@omega.com

Czech Republic: Růdovská 1868, 733 01 Karišná 8
 Tel: +420 (0)69 6311899 FAX: +420 (0)69 6311114
 Toll Free: 0800-1-66342 e-mail: czech@omega.com

France: 9, rue Denis Papin, 78190 Trappes
 Tel: +33 (0)130 621 400 FAX: +33 (0)130 699 120
 Toll Free in France: 0800-4-06342
 e-mail: france@omega.com

Germany/Austria: Daimlerstrasse 26, D-75392 Decklenpfrom, Germany
 Tel: +49 (0)7065 9398-0 FAX: +49 (0)7065 9398-29
 Toll Free in Germany: 0800 639 7678
 e-mail: germany@omega.com

United Kingdom: One Omega Drive, River Bend Technology Centre
 Northbank, Irlam, Manchester
 M44 9BD United Kingdom FAX: +44 (0)161 777 6522
 Tel: +44 (0)161 777 6611 Toll Free in United Kingdom: 0800-488-4488
 e-mail: sales@omega.co.uk

It is the policy of OMEGA to comply with all worldwide safety and EMC/EMI standards. OMEGA products are CE marked and carry CE marking products to the European New Approach Directives. OMEGA will add the CE mark to every appropriate device upon certification. The information contained in this document is believed to be correct, but OMEGA Engineering, Inc. accepts no liability for any errors it contains, and reserves the right to alter specifications without notice. **WARNING:** These products are not designed for use in, and should not be used for, patient-connected applications.

***** **WARRANTY/DISCLAIMER** *****

OMEGA ENGINEERING, INC. warrants this unit to be free of defects in materials and workmanship for a period of 12 months from the date of purchase. OMEGA WARRANTY adds an additional one (1) month grace period to the normal one (1) year product warranty to cover handling and shipping costs. This ensures that OMEGA's customers receive maximum coverage on each product. If the unit malfunctions, it must be returned to the factory for evaluation. Upon receipt of the unit, OMEGA will inspect the unit and determine if the unit number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective, it will be repaired or replaced at no charge. OMEGA's WARRANTY does not apply to defects resulting from any action of the purchaser, including but not limited to mishandling, improper use, or modification of the unit. OMEGA's WARRANTY does not apply to units that have been tampered with or show evidence of having been damaged as a result of excessive corrosion or current, heat, moisture or vibration; improper specification application; or units which were not warranted, including but not limited to contact points, tubes and traces.

OMEGA is pleased to offer suggestions on the use of the various products. However, OMEGA neither assumes responsibility for any conditions or errors nor assumes liability for any damages that result from the use of the product. OMEGA warrants only that the parts manufactured by it will be a specified end free of defects. OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, MERCHANTABILITY, FITNESS FOR ANY PARTICULAR PURPOSES AND FITNESS FOR A PARTICULAR APPLICATION OR USE. THE REMEDY OF PURCHASER SET FORTH HEREIN IS EXCLUSIVE, and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence or otherwise, shall be limited to the amount of the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.

CONDITIONS: Equipment sold by OMEGA is not intended to be used, nor shall it be used: (1) as a "Basic Component" under 10 CFR 21 (NRC), used in or with any nuclear installation or activity; or (2) in medical applications or used on humans, medical applications used on humans or intended to be used with OMEGA activity, no responsibility as set forth in our basic WARRANTY/DISCLAIMER language, and, additionally, purchaser will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the Product(s) in such a manner.

***** **RETURN REQUESTS / INQUIRIES** *****

Direct all warranty and repair requests/inquiries to the OMEGA Customer Service Department. RETURN REQUESTS SHOULD BE MADE TO THE CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS). The assigned AR number should then be marked on the outside of the return package and on any correspondence. The purchaser is responsible for shipping charges, freight, insurance and proper packaging to protect the device in transit.

- FOR WARRANTY RETURNS, please have the following information available BEFORE contacting OMEGA:**
1. Purchase Order number under which the product was PURCHASED.
 2. Model and serial number of the product.
 3. Repair instructions and/or specific problems relative to the product.

OMEGA's policy is to make turning changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering. © Copyright 2001 OMEGA ENGINEERING, INC. All rights reserved. This document may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without the prior written consent of OMEGA ENGINEERING, INC.