

**YEAR
2000
COMPLIANT**



User's Guide

omega.com[®]
ΩOMEGA[®]

*<http://www.omega.com>
e-mail: info@omega.com*



CN3420 SERIES 1/4 DIN Panel Mount Universal Temperature & Process Controller

WARRANTY/DISCLAIMER

OMEGA ENGINEERING, INC. warrants this unit to be free of defects in materials and workmanship for a period of 37 months from date of purchase. OMEGA Warranty adds an additional one (1) month grace period to the normal three (3) year product warranty to cover handling and shipping time. This ensures that OMEGA's customers receive maximum coverage on each product. If the unit malfunctions, it must be returned to the factory for evaluation. OMEGA's Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective, it will be repaired or replaced at no charge. OMEGA's WARRANTY does not apply to defects resulting from any action of the purchaser, including but not limited to mishandling, improper interfacing, operation outside of design limits, improper repair, or unauthorized modification. This WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of having been damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA's control. Components which wear are not warranted, including but not limited to contact points, fuses, and triacs.

OMEGA is pleased to offer suggestions on the use of its various products. However, OMEGA neither assumes responsibility for any omissions or errors nor assumes liability for any damages that result from the use of its products in accordance with information provided by OMEGA, either verbal or written. OMEGA warrants only that the parts manufactured by it will be as specified and free of defects. OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESS OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. LIMITATION OF LIABILITY: The remedies of purchaser set forth herein are exclusive, and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.

CONDITIONS: Equipment sold by OMEGA is not intended to be used, nor shall it be used: (1) as a "Basic Component" under 10 CFR 21 (NRC), used in or with any nuclear installation or activity; or (2) in medical applications or used on humans. Should any Product(s) be used in or with any nuclear installation or activity, medical application, used on humans, or misused in any way, OMEGA assumes no responsibility as set forth in our basic WARRANTY/DISCLAIMER language, and, additionally, purchaser will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the Product(s) in such a manner.

RETURN REQUESTS / INQUIRIES

Direct all warranty and repair requests/inquiries to the OMEGA Customer Service Department. BEFORE RETURNING ANY PRODUCT(S) TO OMEGA, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OMEGA'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS). The assigned AR number should then be marked on the outside of the return package and on any correspondence.

The purchaser is responsible for shipping charges, freight, insurance and proper packaging to prevent breakage in transit.

FOR WARRANTY RETURNS, please have the following information available BEFORE contacting OMEGA:

1. Purchase Order number under which the product was PURCHASED,
2. Model and serial number of the product under warranty, and
3. Repair instructions and/or specific problems relative to product.

FOR NON-WARRANTY REPAIRS, consult OMEGA for current repair charges. Have the following information available BEFORE contacting OMEGA:

1. Purchase Order number to cover the COST of the repair,
2. Model and serial number of the products, and
3. Repair instructions and/or specific problems relative to the product.

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering.

OMEGA is a registered trademark of OMEGA ENGINEERING, INC.

© Copyright 1998 OMEGA ENGINEERING, INC. All rights reserved. This document may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without the prior written consent of OMEGA ENGINEERING, INC.

GETTING STARTED

This manual is divided into 5 sections which contain all the information needed to install, configure, set up and operate the instrument. Each section is identified clearly by a symbol as shown below.



Displays and Function Keys

- Displays and function keys
- LED Indication
- Error Messages



Operator Mode (Level 1)

- Operator menus for:
 - *Standard controller*
 - *Heat/Cool controller*
 - *Remote Set Point controller*
 - *Profile controller*
 - *Multiple Fixed Set Points controller*
- Auto-tuning



Set Up Mode (Levels 2, 3 and 4)

- Level 2 – Tuning
- Level 3 – Set Points
- Level 4 – Profile



Configuration Mode (Levels 5 and 6)

- Level 5 – Basic hardware and control functions
- Level 6 – Ranges and passwords



Installation

- Siting
- Mounting
- Electrical connections

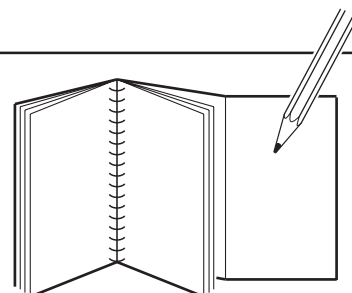
Symbol Identification and Section Contents

CONTENTS

1	DISPLAYS AND FUNCTION KEYS	3
1.1	Introduction	3
1.2	LED Alarms and Indicators	4
1.3	Use of Function Keys	6
1.4	Error Messages	7
2	OPERATOR MODE	8
2.1	Introduction	8
2.2	Standard Controller	9
2.3	Heat/Cool Controller	10
2.4	Remote Set Point Controller	12
2.5	Profile Controller	14
2.6	Multiple Fixed Set Points Controller	16
2.7	Auto-tune	18
3	SET UP MODE	20
3.1	Introduction	20
3.2	Tuning (Level 2)	20
3.3	Set Points (Level 3)	24
3.4	Profile (Level 4)	27
4	CONFIGURATION MODE	30
4.1	Introduction	30
4.2	Accessing the Configuration Mode	32
4.3	Basic Hardware and Configuration (Level 5)	32
4.4	Ranges and Passwords (Level 6)	42
5	INSTALLATION	46
5.1	Siting	46
5.2	Mounting	48
5.3	Removing the Instrument from the Case	50
5.4	Electrical Connections	51
5.5	Relays, Arc Suppression and Outputs	51

***i* Information.**

The fold-out page inside on the back cover of this manual shows all the frames in the programming levels. Space is provided on the page for writing the programmed setting or selection for each frame.



1 DISPLAYS AND FUNCTION KEYS

1.1 Introduction – Fig. 1.1

The instrument front panel displays, function keys and LED indicators are shown in Fig. 1.1.


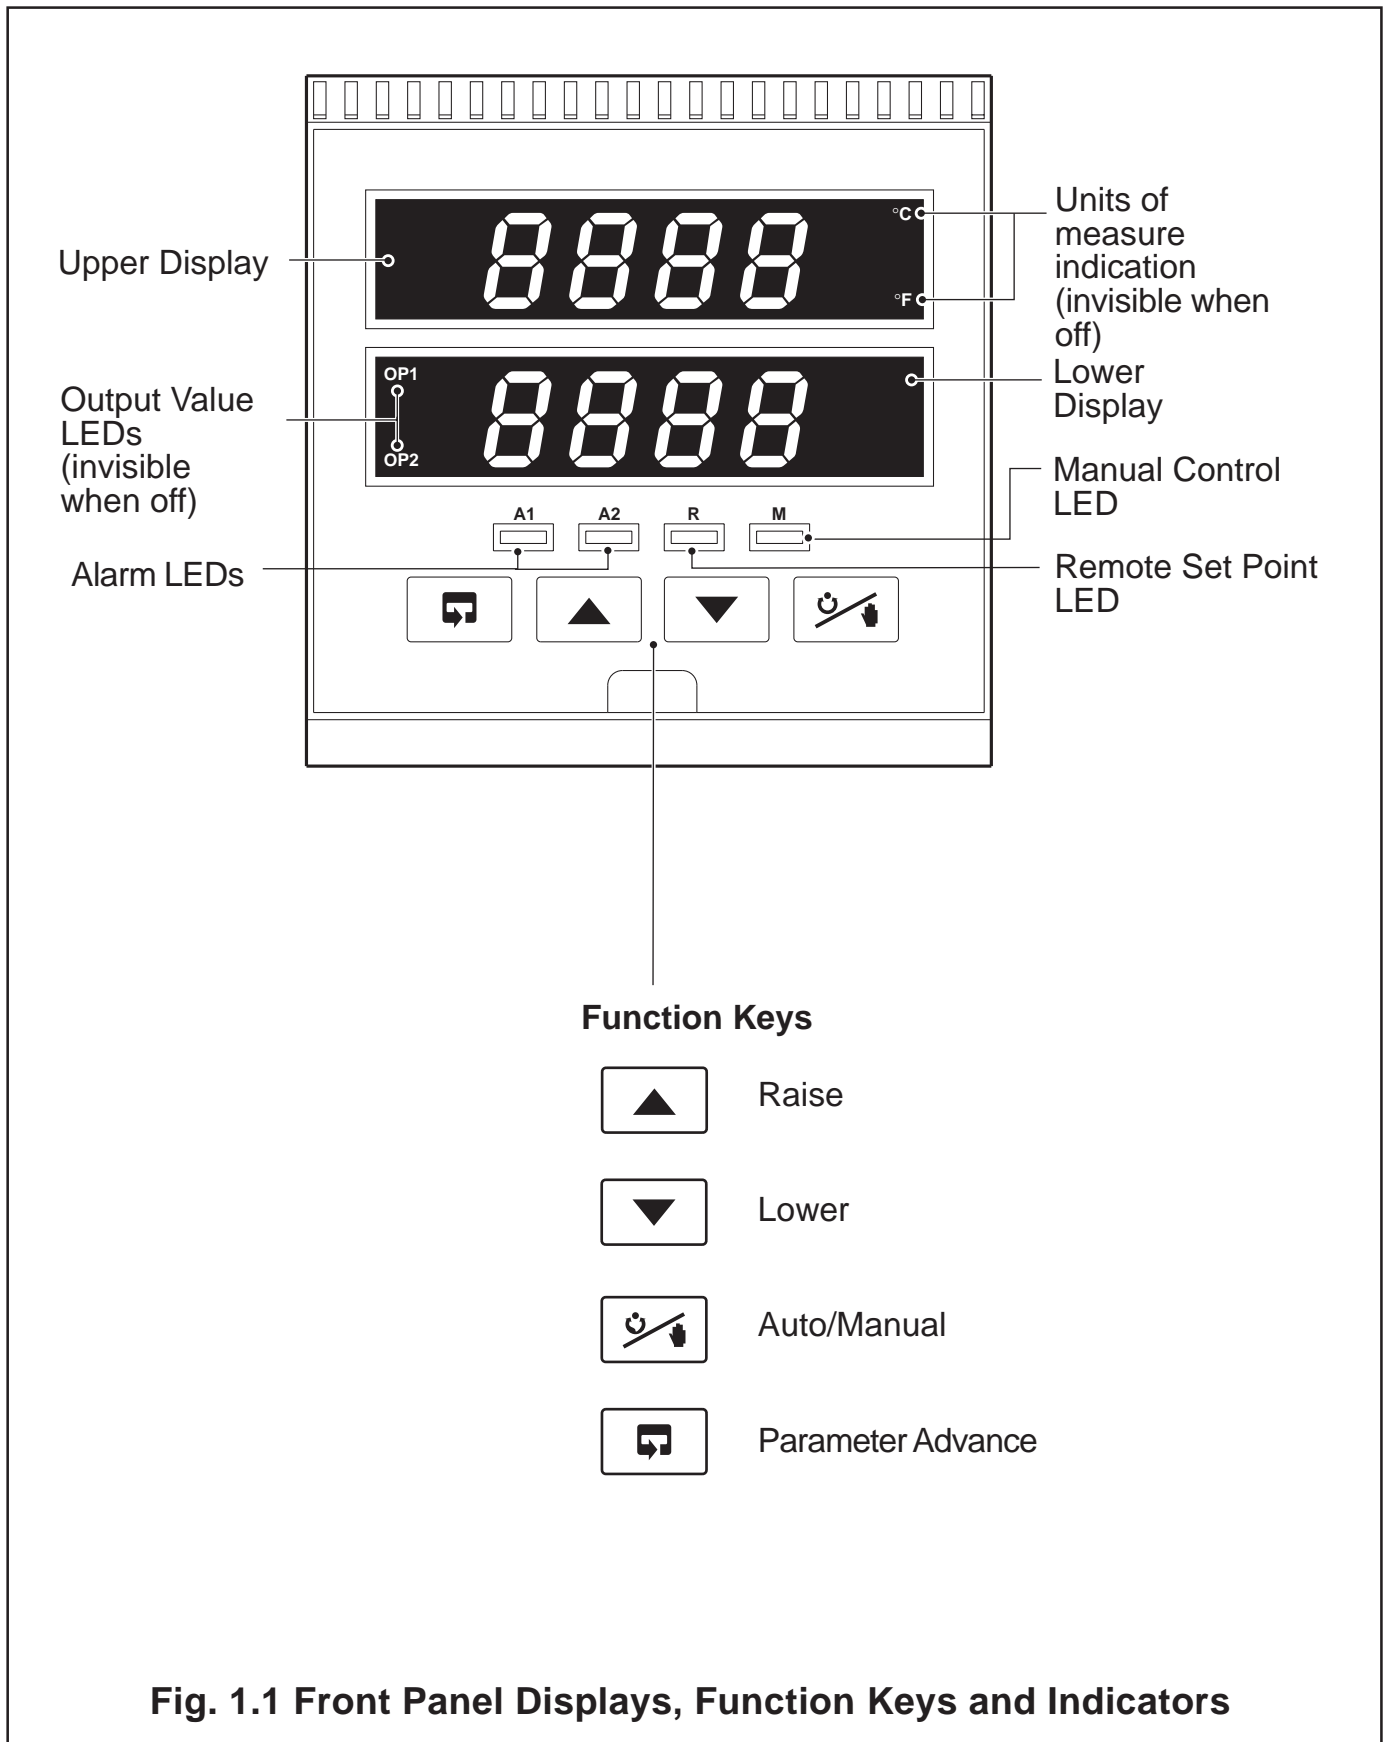


Fig. 1.1 Front Panel Displays, Function Keys and Indicators

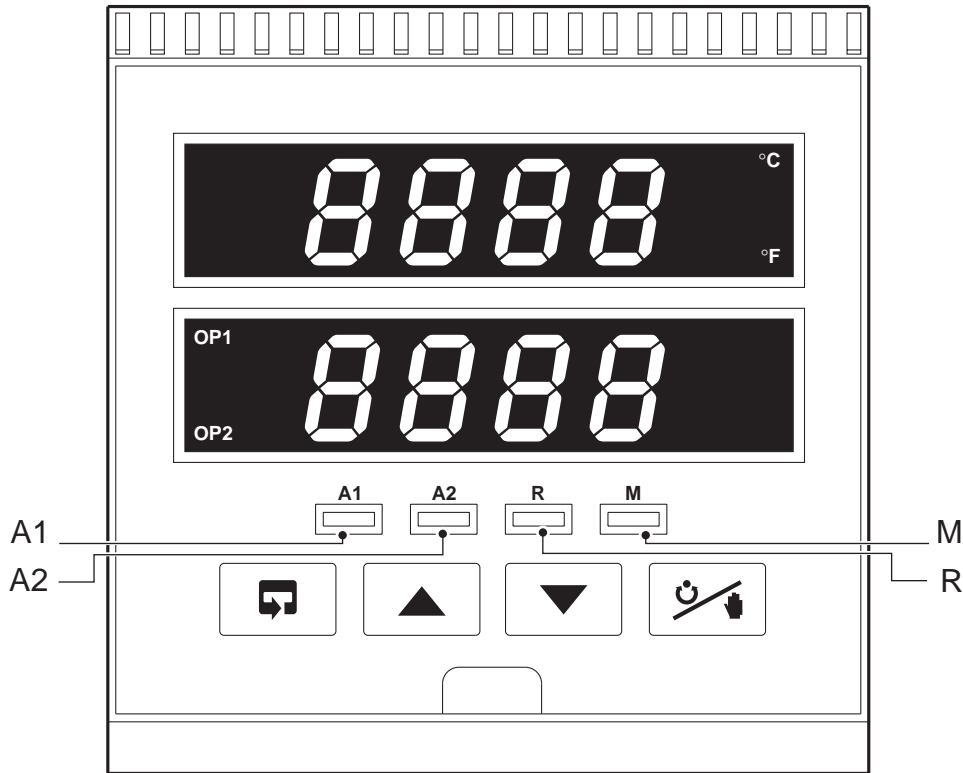1.2 LED Alarms and Indicators – Figs. 1.2 and 1.3



LED Status

All • All LEDs flashing – controller is in the configuration mode.

A1 • Flashes when Alarm 1 is active (off when inactive).

A2 • Flashes when Alarm 2 is active (off when inactive).

R • On when the controller is operating on the remote set point value.
 • Off when the controller is operating using the local set point value or one of the four fixed set points (in multiple set point mode).
 • Flashes when a Ramp/Soak profile is running.

M • On when the controller is operating in Manual control mode.
 • Off when the controller is operating in Auto control mode.
 • Flashes when the controller is performing an auto-tune.

Fig. 1.2 LED Alarms and Indicators

...1.2 LED Alarms and Indicators – Figs. 1.2 and 1.3


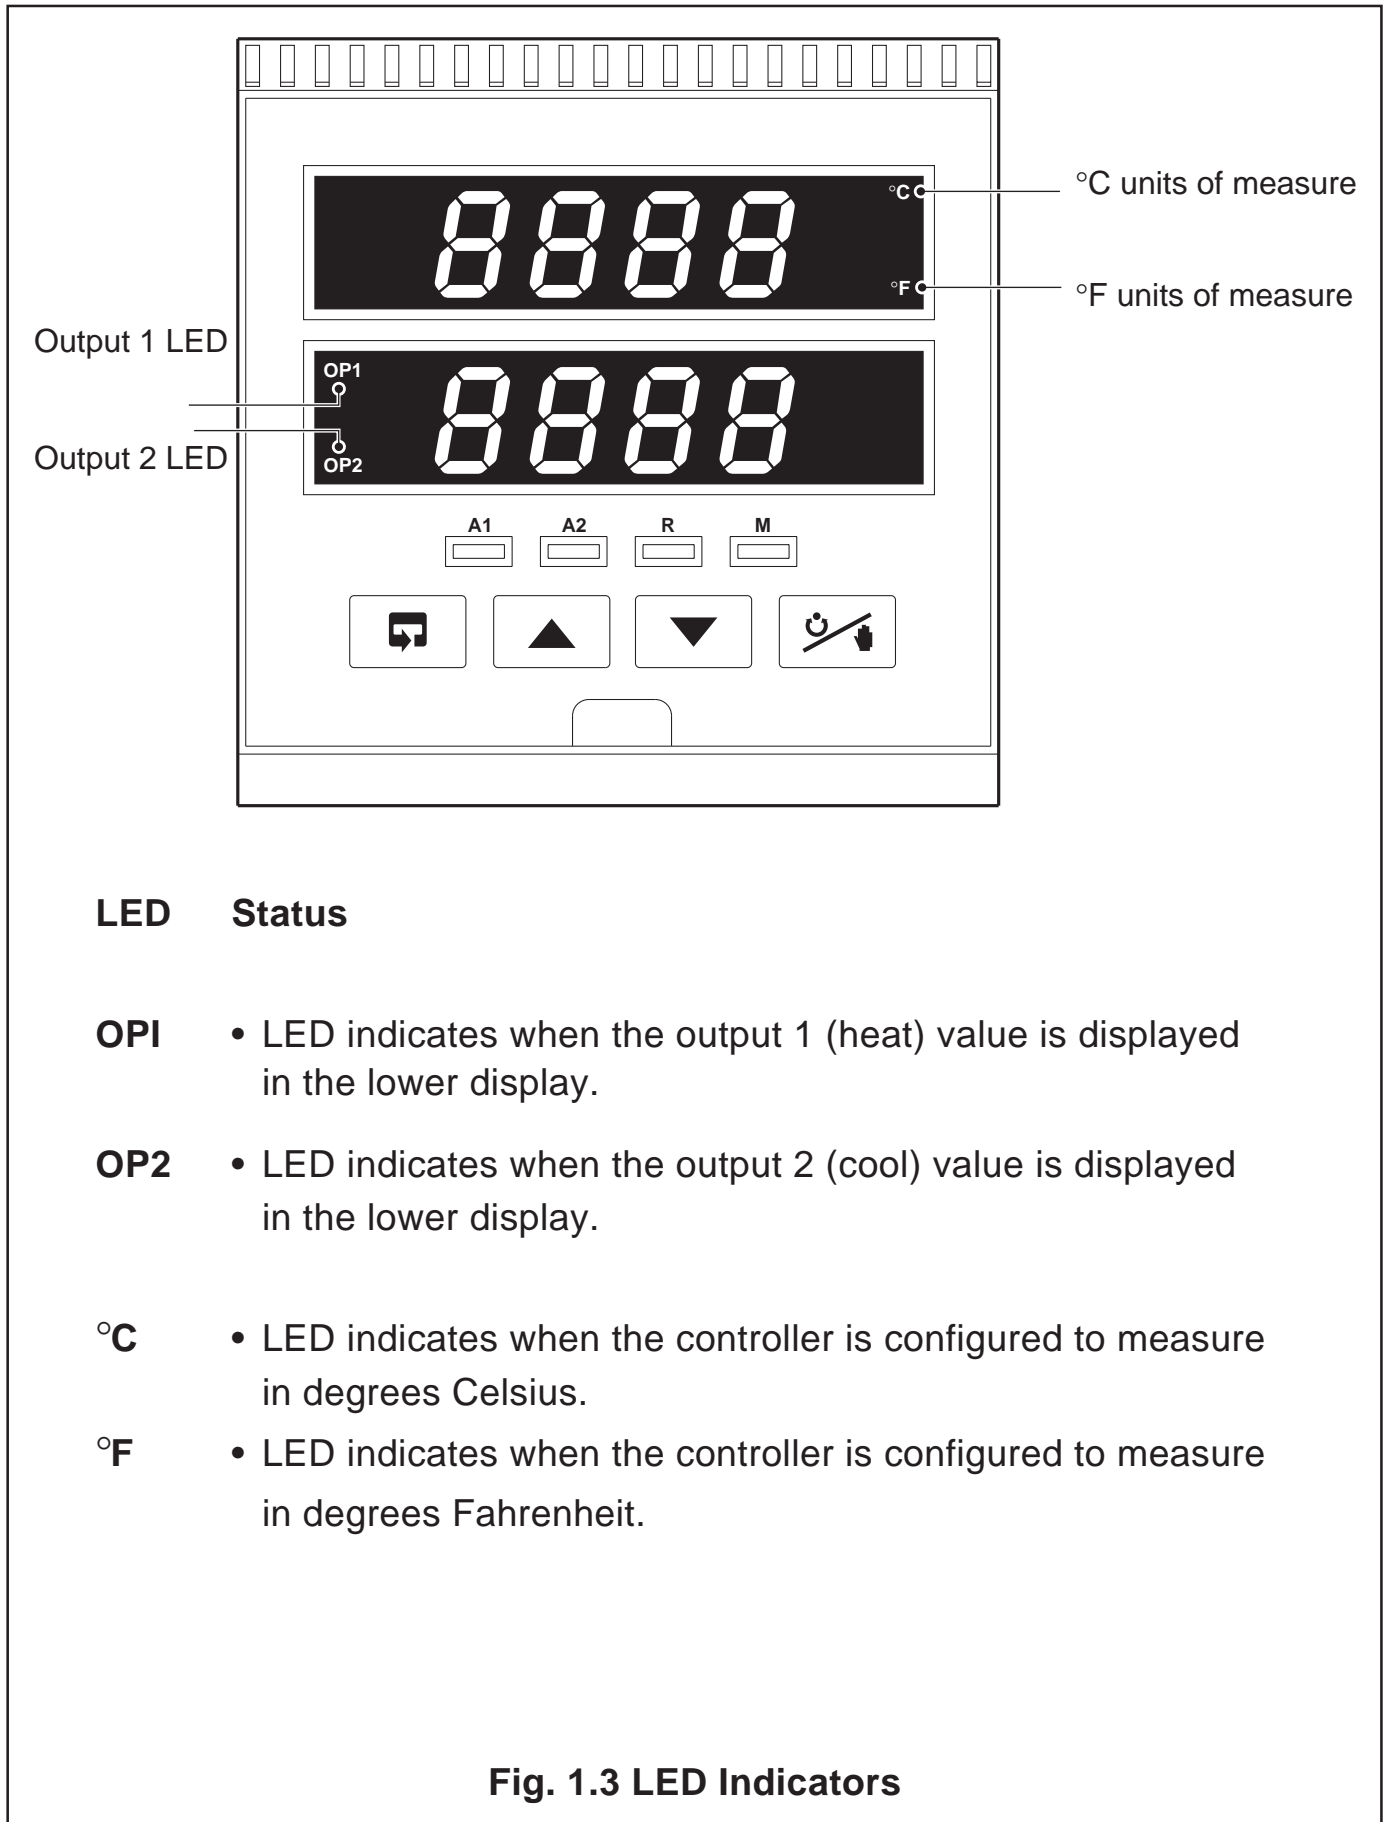



Fig. 1.3 LED Indicators

1.3 Use of Function Keys – Fig. 1.4

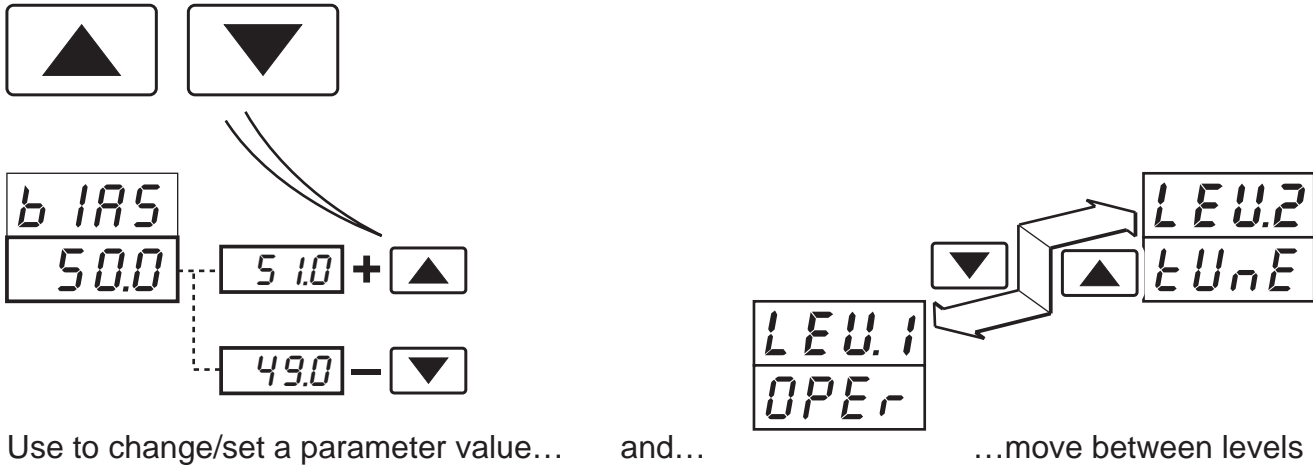A – Raise and Lower Keys



B – Parameter Advance Key

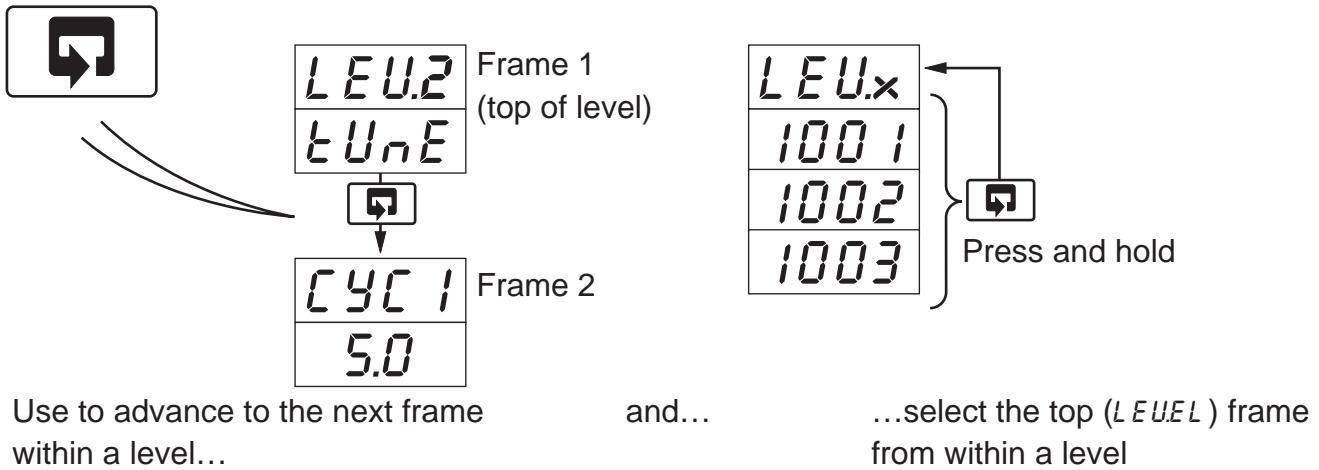

Note. This key also stores any changes made in the previous frame

C – Auto/Manual Key

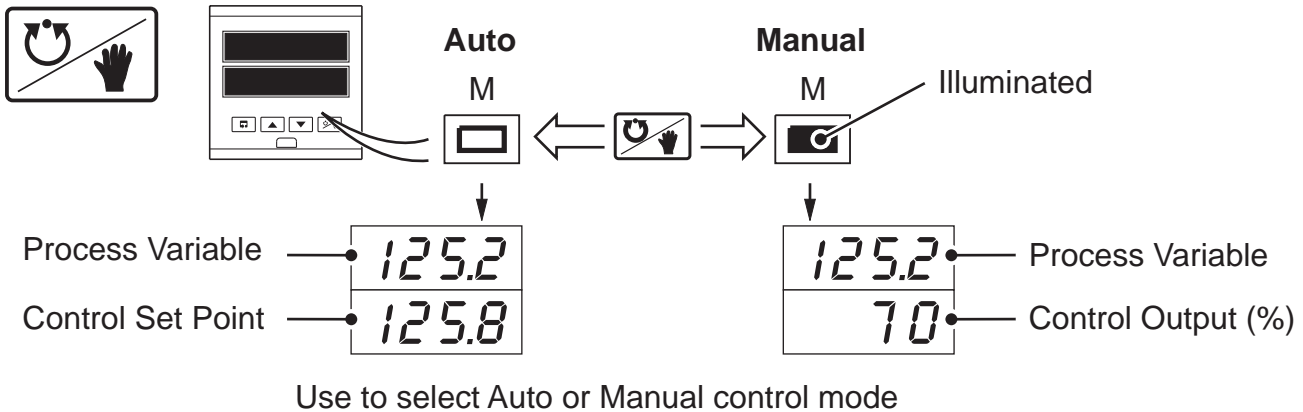








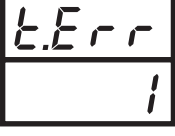


Fig. 1.4 Use of Function Keys

1.4 Error Messages

Display	Error/Action	To Clear Display
	<p>Calibration error Turn power off and on again (if the error persists contact the Supplier).</p>	Press the  key
	<p>Configuration error The configuration and/or set up data for the instrument is corrupted. Turn power off and on again (if the error persists, check configuration/ set up settings).</p>	Press the  key
	<p>A to D Converter Fault The analog to digital converter is not communicating correctly.</p>	Turn power off and on again. If error persists, contact the Supplier
	<p>Process Variable Over/Under Range</p>	Restore valid input
	<p>Remote Set Point Over/Under Range The remote set point value is over or under range. Flashing stops automatically when the remote set point input comes back into range.</p>	Select the local set point (<i>r SP.n</i>) in the Operating Page or the Set Points Level
	<p>Option error Communications to the option board have failed.</p>	Contact the Supplier
	<p>Auto-tune error The number displayed indicates the type of error present – see Table 2.1 in Section 2.7.</p>	Press any key




2 OPERATOR MODE

2.1 Introduction

Operator Mode (Level 1) is the normal day-to-day mode of the instrument.

Frames displayed in Level 1 are determined by the control strategy which is selected during configuration of the instrument – see Section 4.

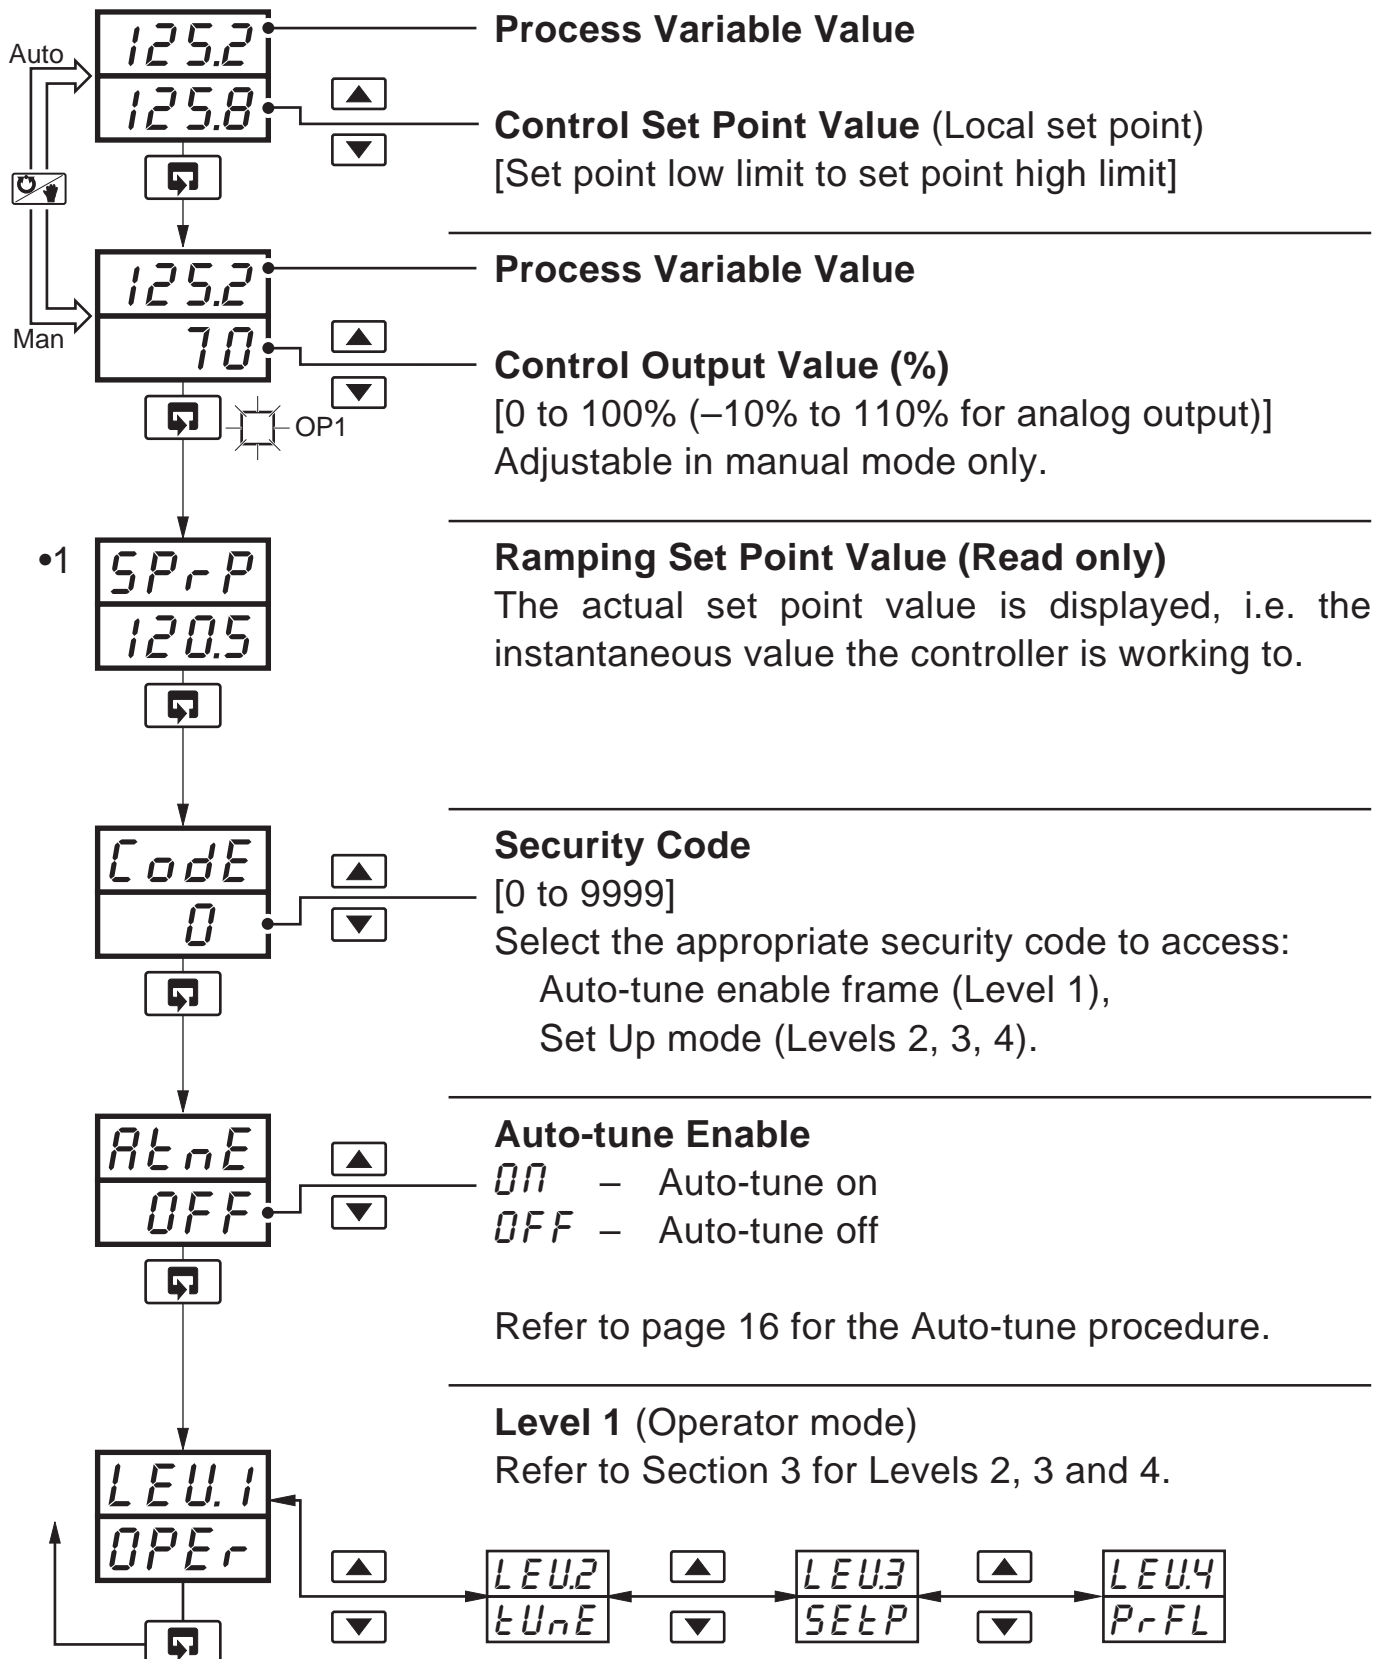
 **Note.** Only the operating frames relevant to the configured strategy are displayed in Operator Mode.

The five control strategies are:

- **Standard controller** – page 9
- **Heat/Cool controller** – page 10
- **Remote Set Point controller** – page 12
- **Profile controller** – page 14
- **Multiple Fixed Set Points controller** – page 16




2.2 Standard Controller



•1 Not displayed if the ramping set point facility is turned off – refer to Section 3.3.



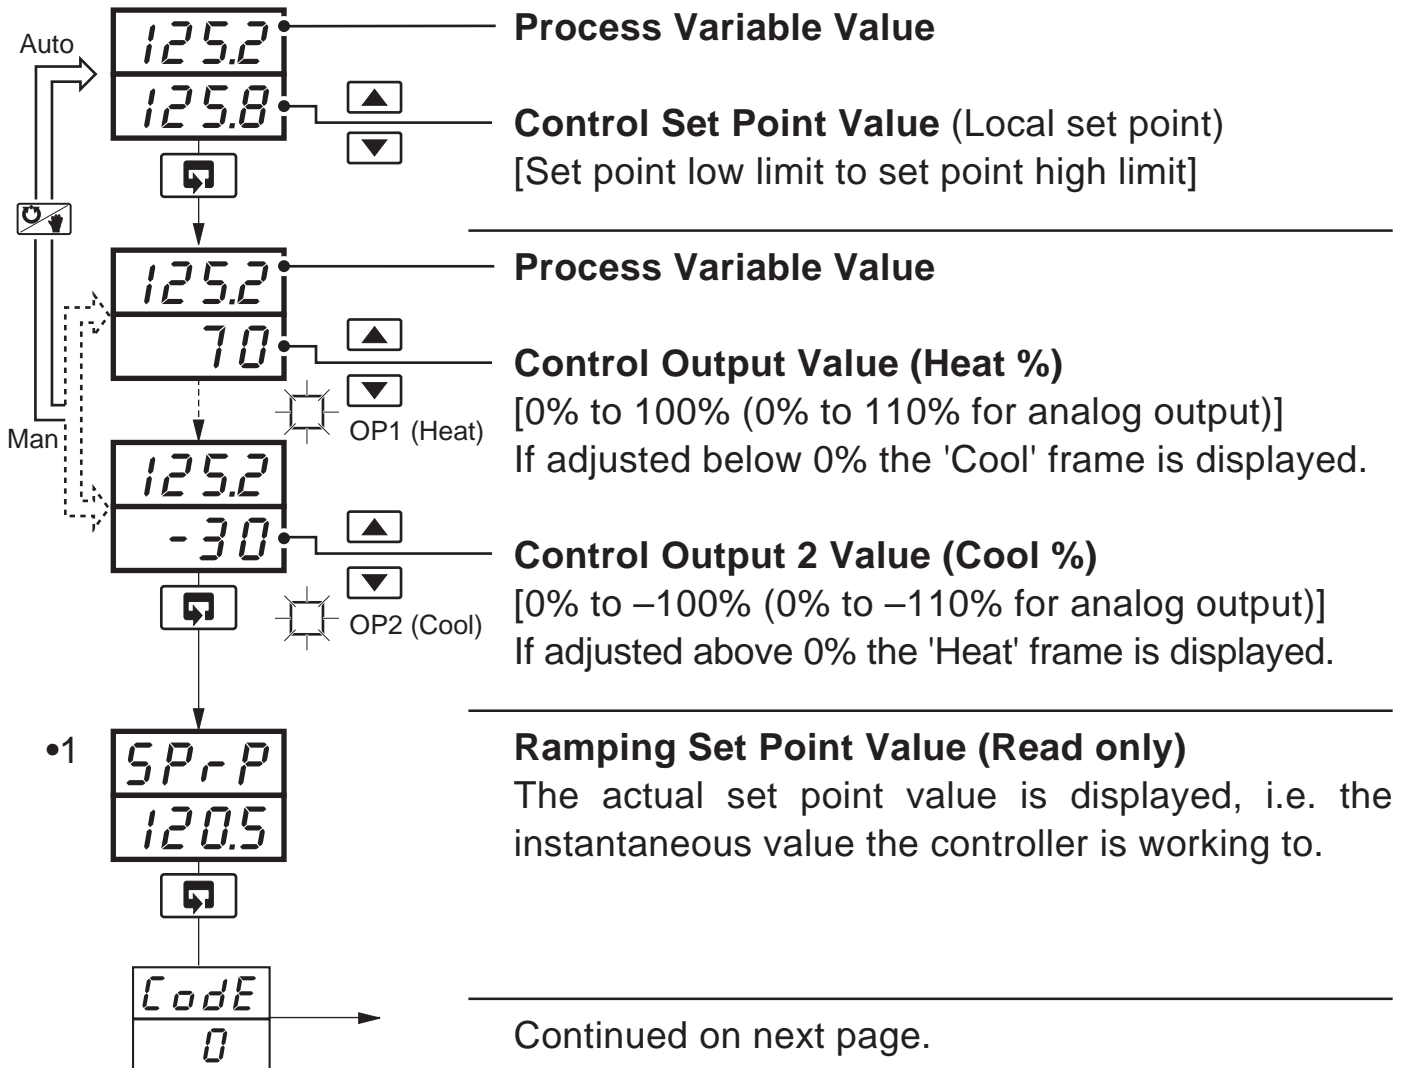2.3 Heat/Cool Controller




Continued on next page.

- 1 Not displayed if the ramping set point facility is turned off – refer to Section 3.3.




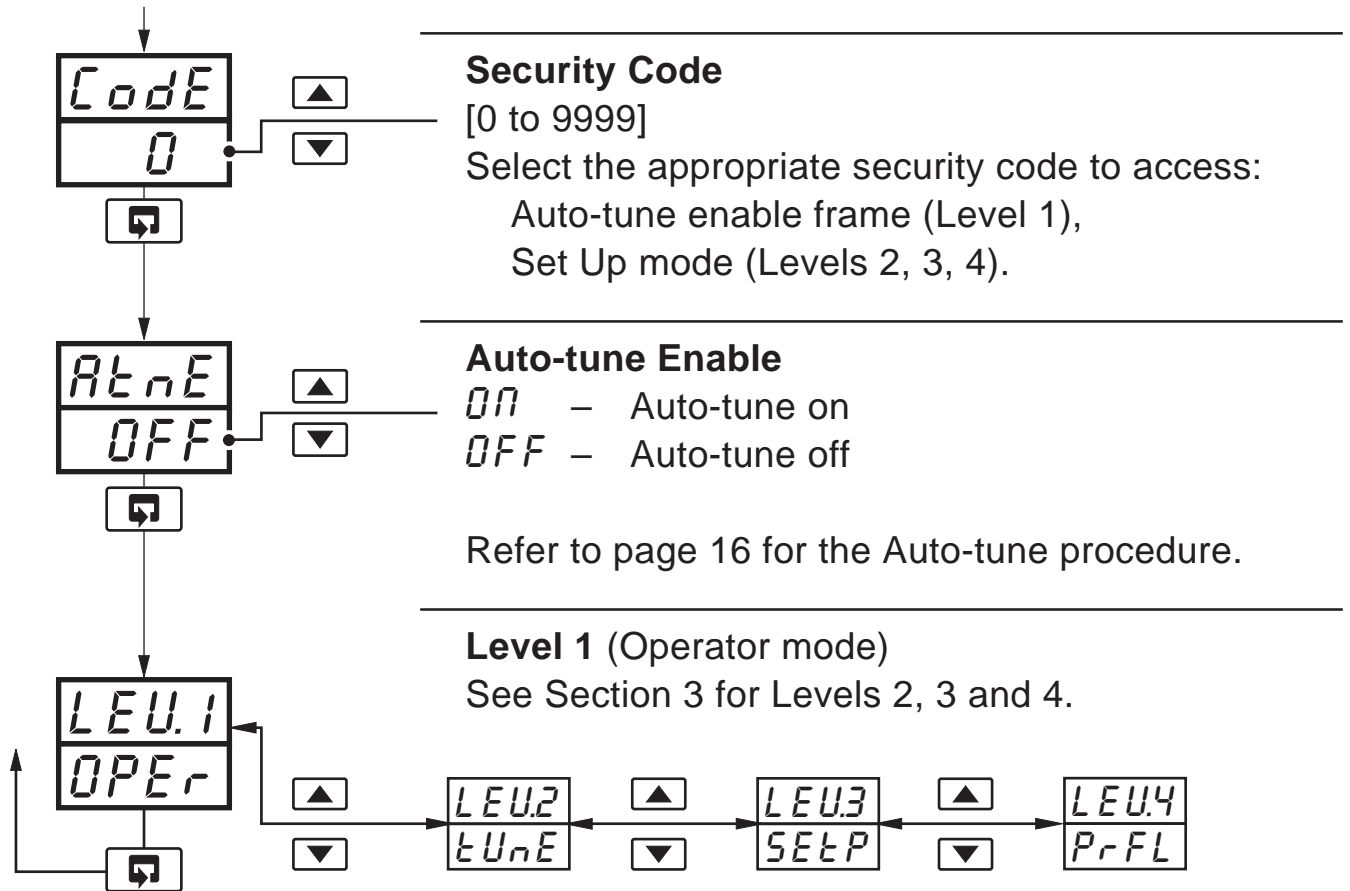...2.3 Heat/Cool Controller





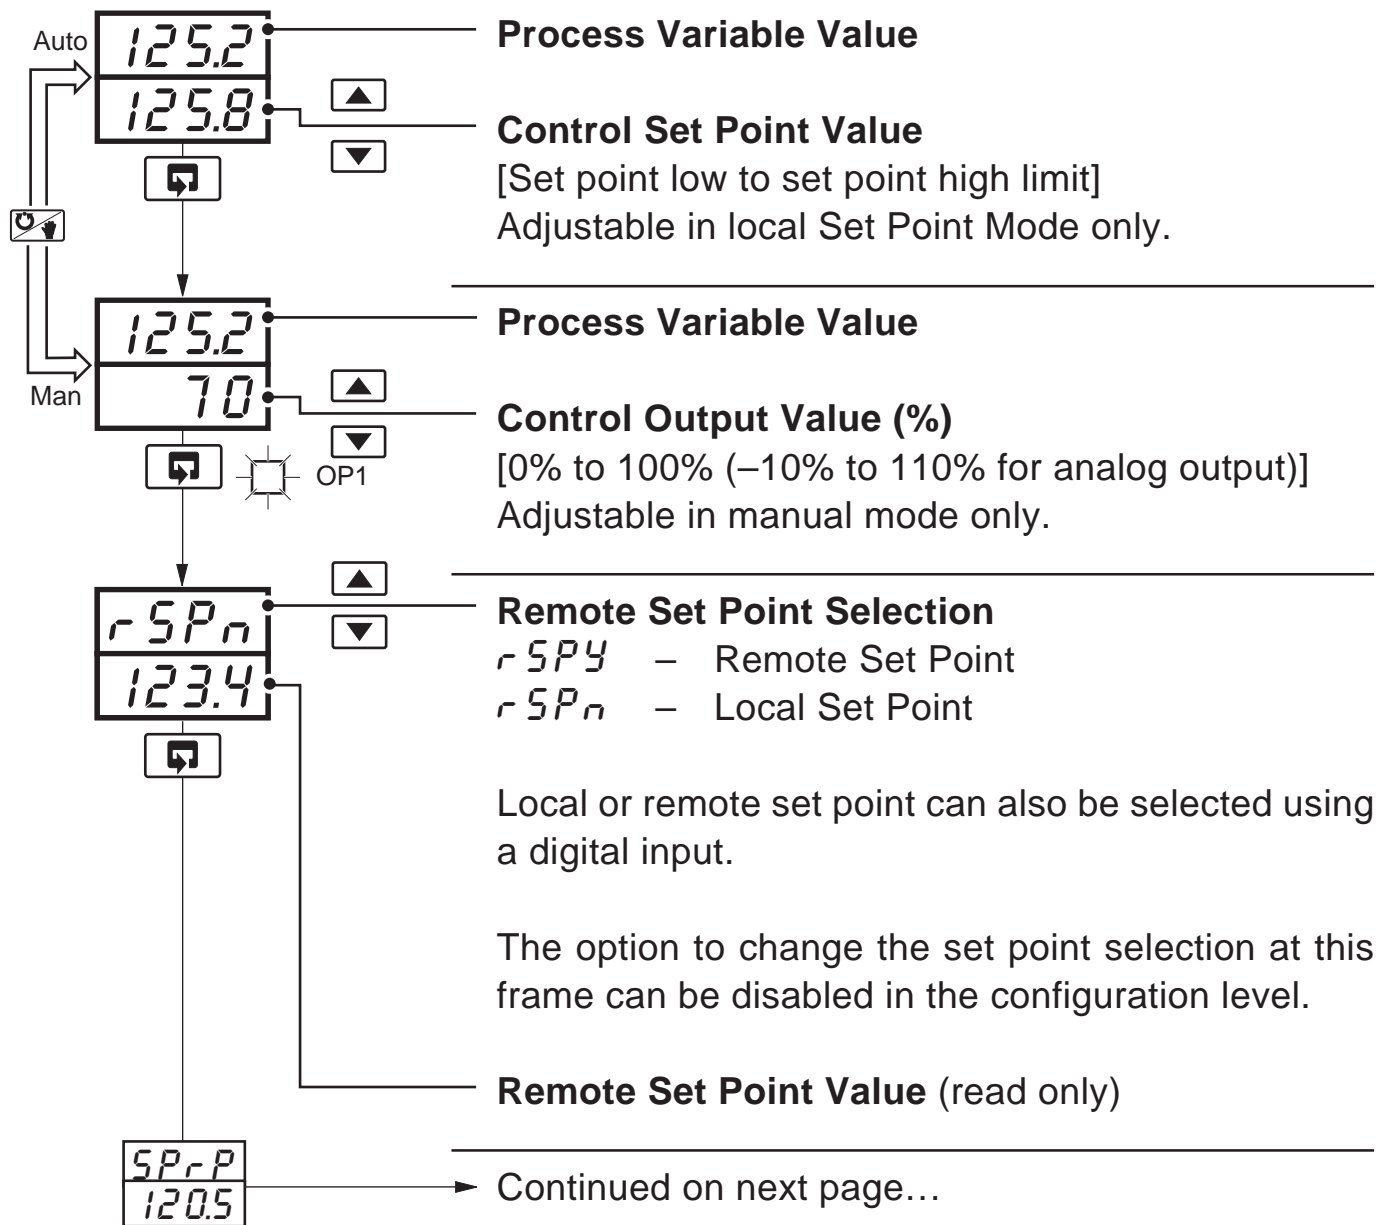2.4 Remote Set Point Controller




*** Note.**

If the remote set point input fails while selected, the controller selects the local set point value automatically. The upper display changes to *rSP_F* and the lower display flashes. When the fault condition is removed, the remote set point is re-selected automatically. To clear the error condition while the remote set point input is still outside its allowed range, select the local set point by pressing the key (*rSP_n* is displayed).



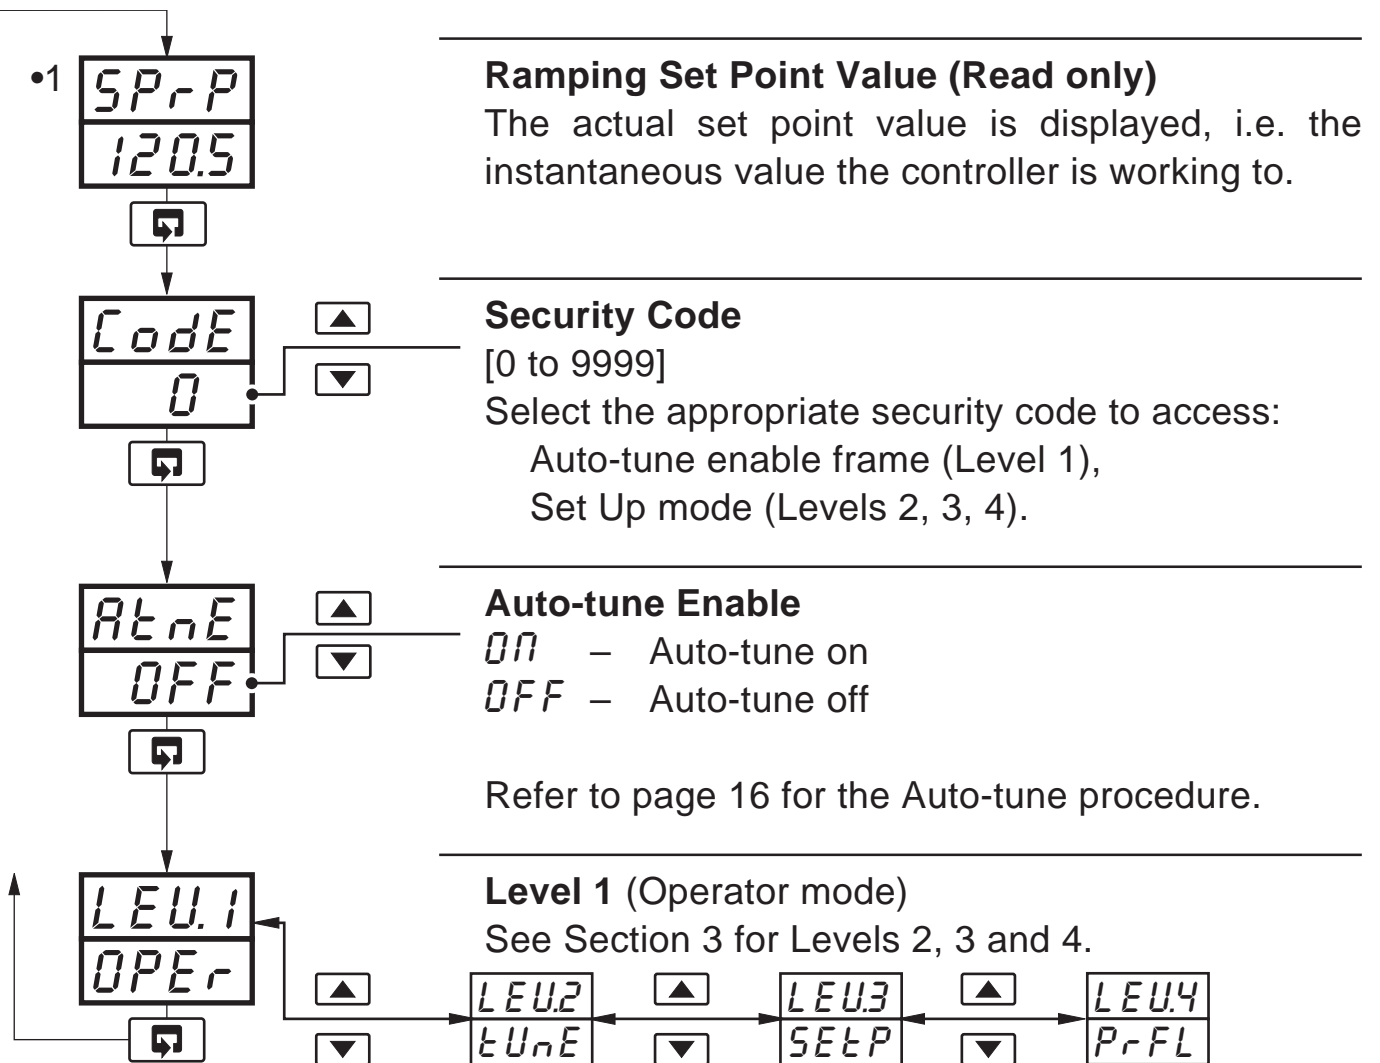
...2.4 Remote Set Point Controller



- 1 Not displayed if the ramping set point facility is turned off – refer to Section 3.3.




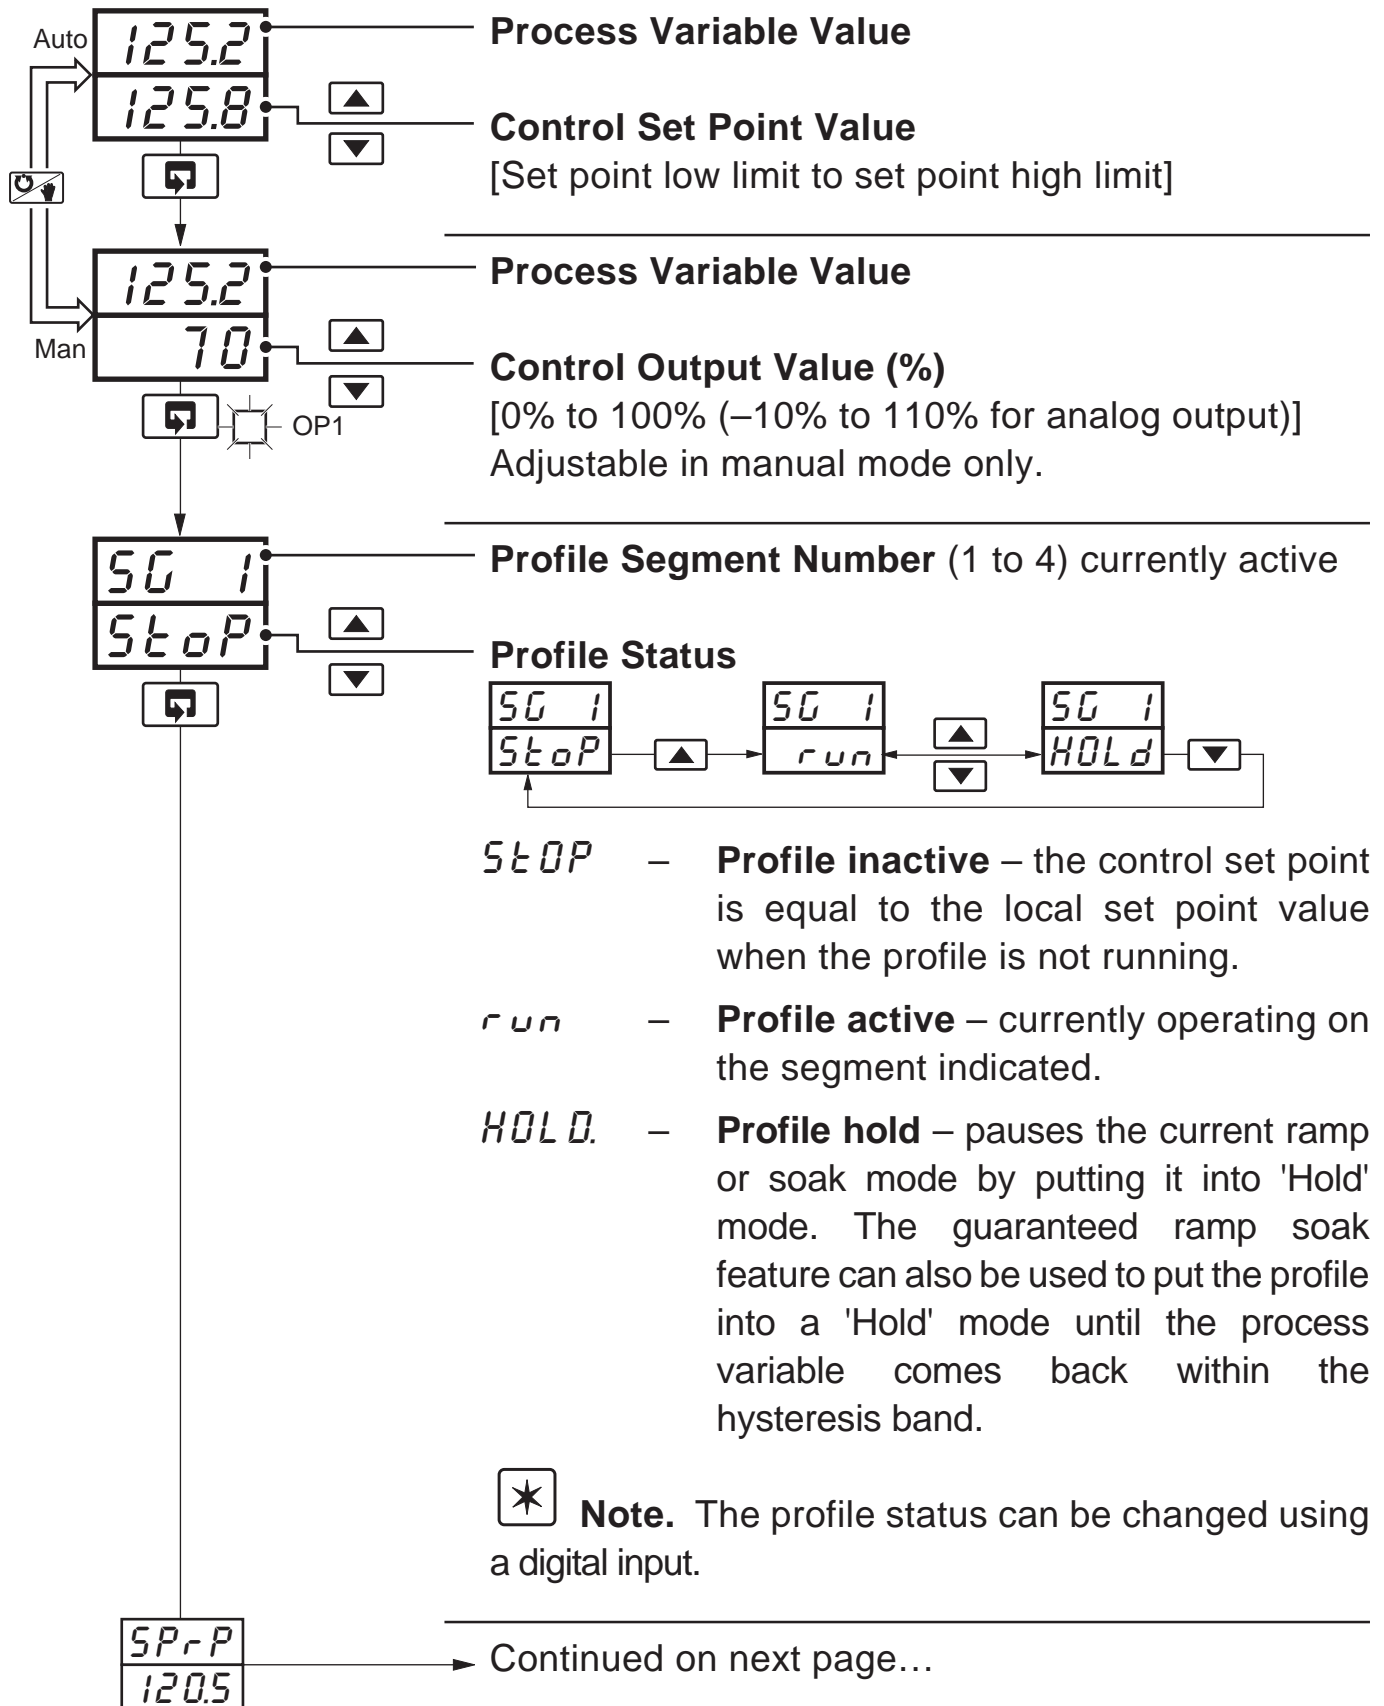2.5 Profile Controller





...2.5 Profile Controller

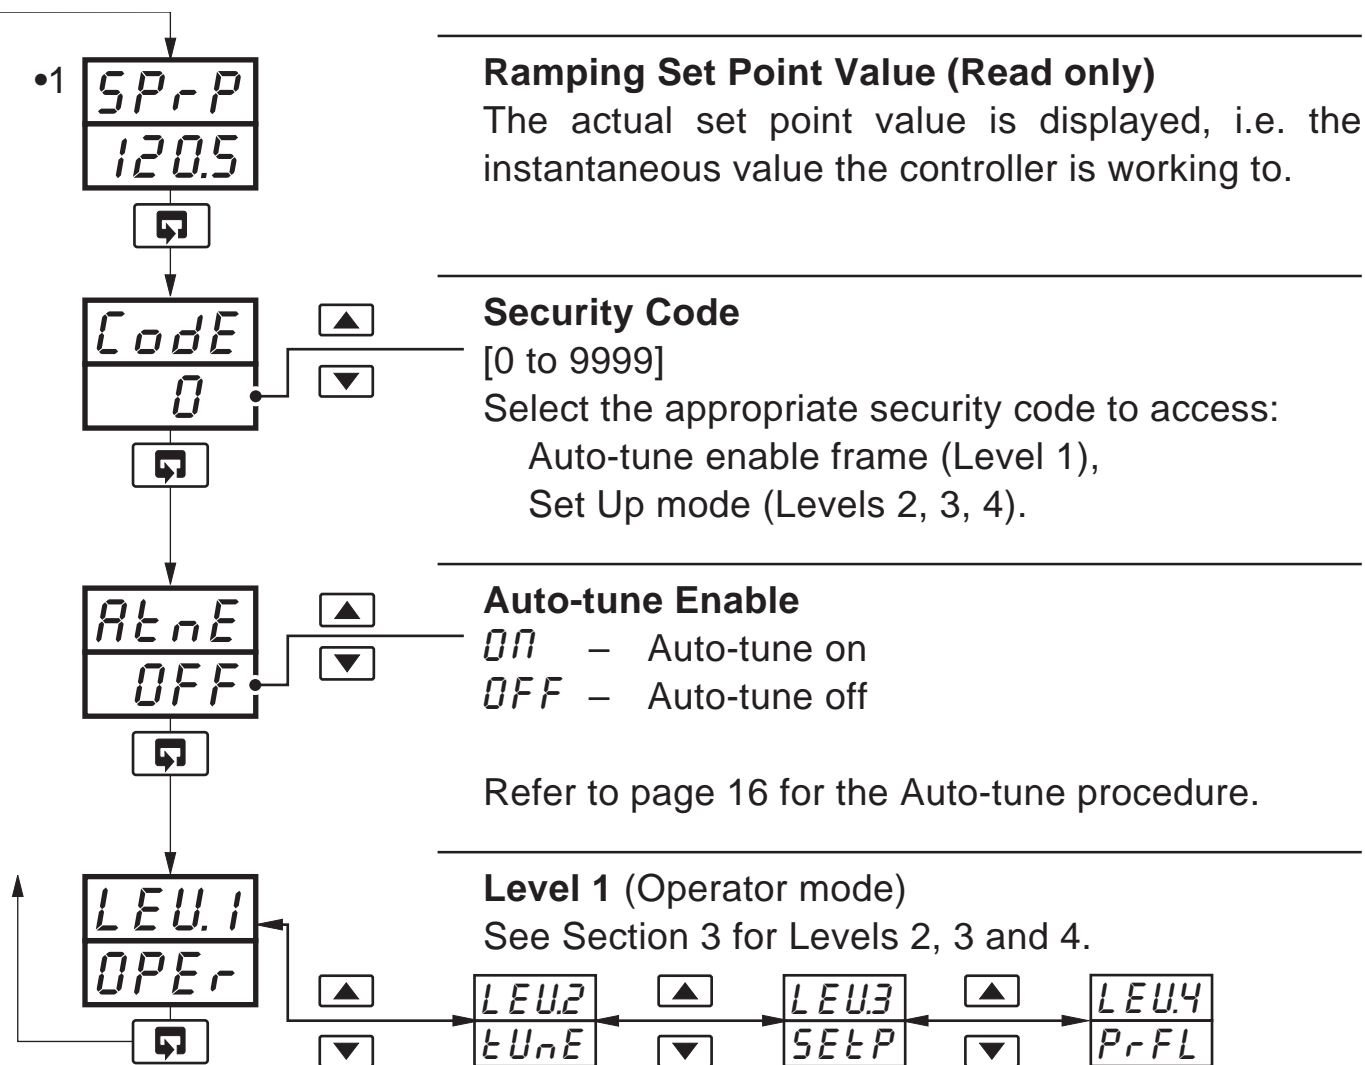


- 1 Not displayed if the ramping set point facility is turned off – refer to Section 3.3.




2.6 Multiple Fixed Set Points Controller

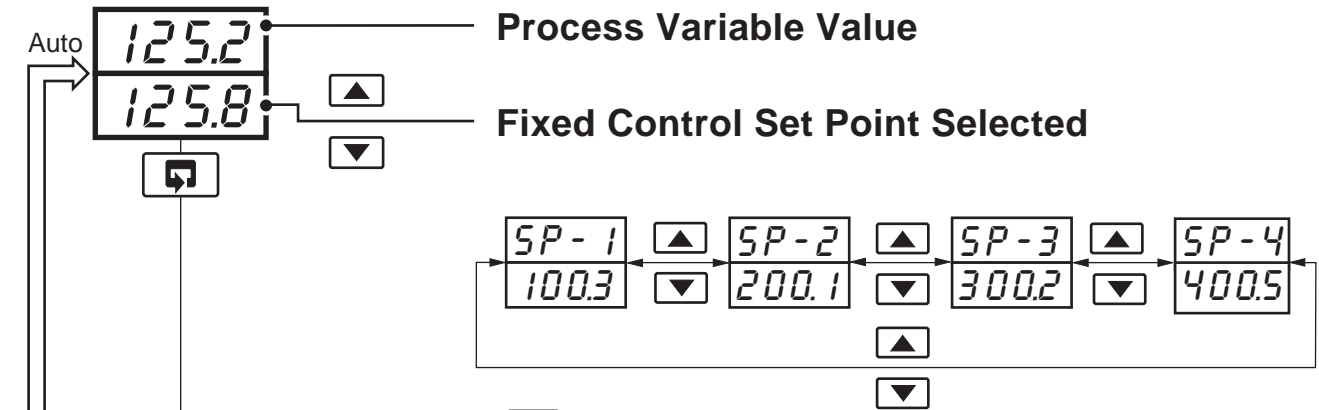If the Multiple Fixed Set Points Controller type is selected during configuration, four fixed control set points can be set – see Section 4.4.




*** Notes.**

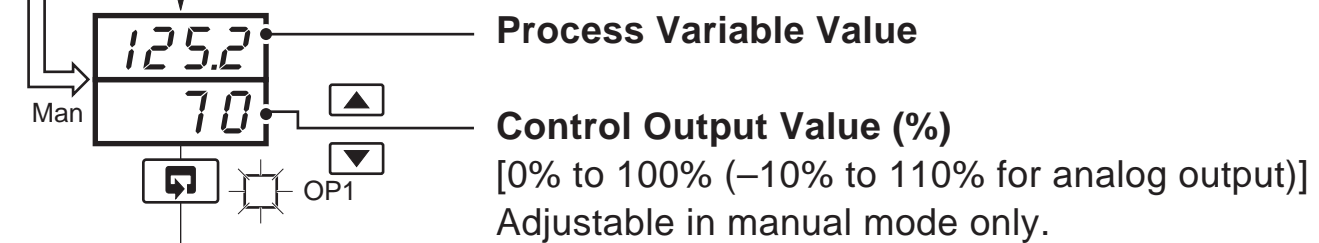- a) The top display momentarily displays the set point selected before reverting to the display of the process variable value.
- b) A digital input can also be used to select the fixed set points.



Ramping Set Point Value (Read only)

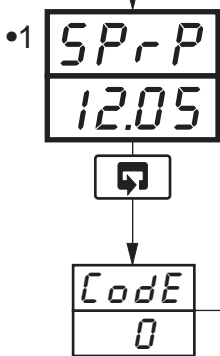The actual set point value is displayed, i.e. the instantaneous value the controller is working to.




Continued on next page...

•1 Not displayed if the ramping set point facility is turned off – refer to Section 3.3.



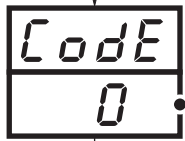...2.6 Multiple Fixed Set Points Controller



Security Code

[0 to 9999]

Select the appropriate security code to access:
 Auto-tune enable frame (Level 1),
 Set Up Mode (Levels 2, 3, 4).



Auto-tune Enable



ON – Auto-tune on
OFF – Auto-tune off

Refer to page 16 for the Auto-tune procedure.



Level 1 (Operator mode)

See Section 3 for Levels 2, 3 and 4.






2.7 Auto-tune

i Information.


- Auto-tune optimizes process control by monitoring process performance and automatically updates the control parameters.
- Before starting auto-tune, the process variable must be stable ($\pm 2\%$ of engineering range).

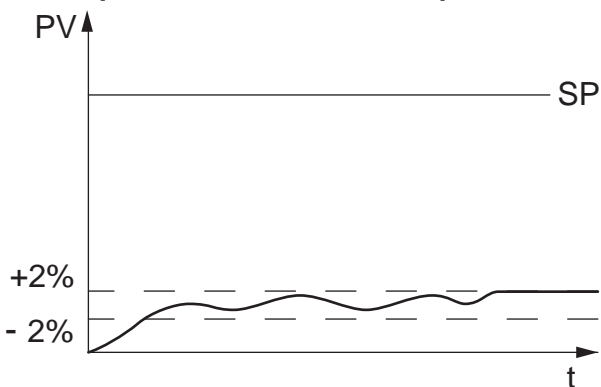1 – 'Start up' auto-tune (from manual mode)




1a – Stable process before auto-tune

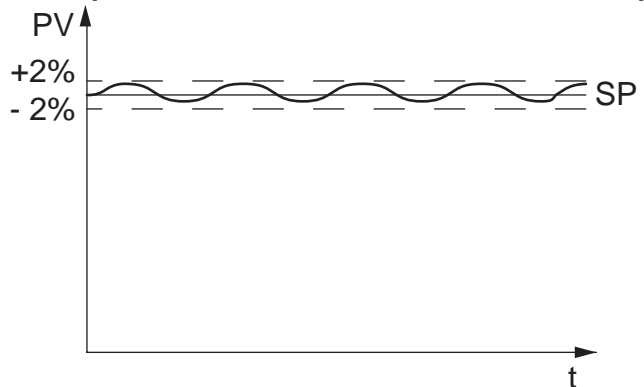
2 – 'At set point' auto-tune (from manual or automatic mode)



2a – Stable process before auto-tune

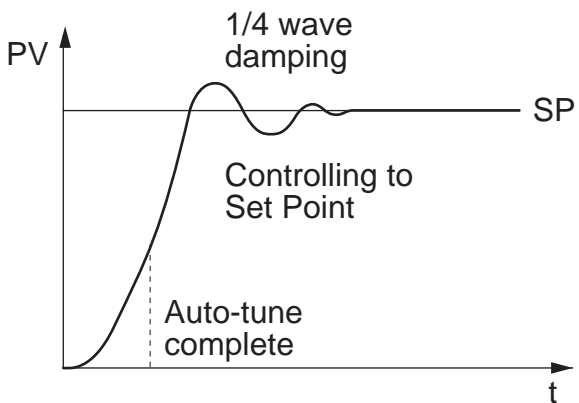


1b – Process response during auto-tune

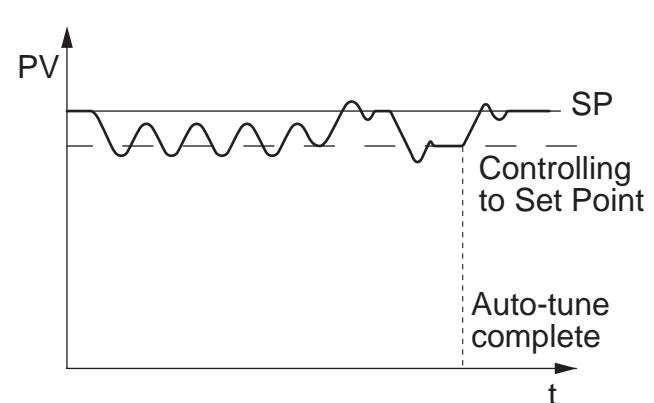

2b – Process response during auto-tune

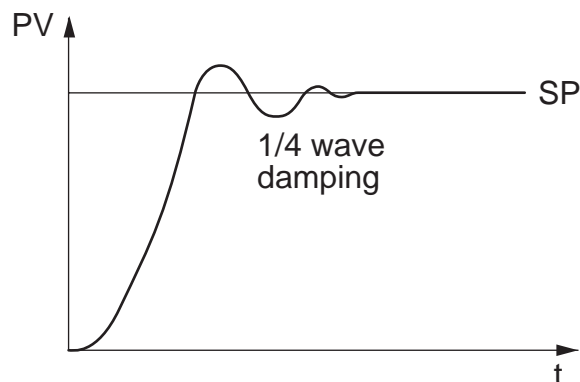***** **Note.** The time taken to complete auto-tune depends upon the system response time.




Typical process PV response after auto-tune

Fig 2.1 Typical Auto-tune Cycles




...2.7 Auto-tune

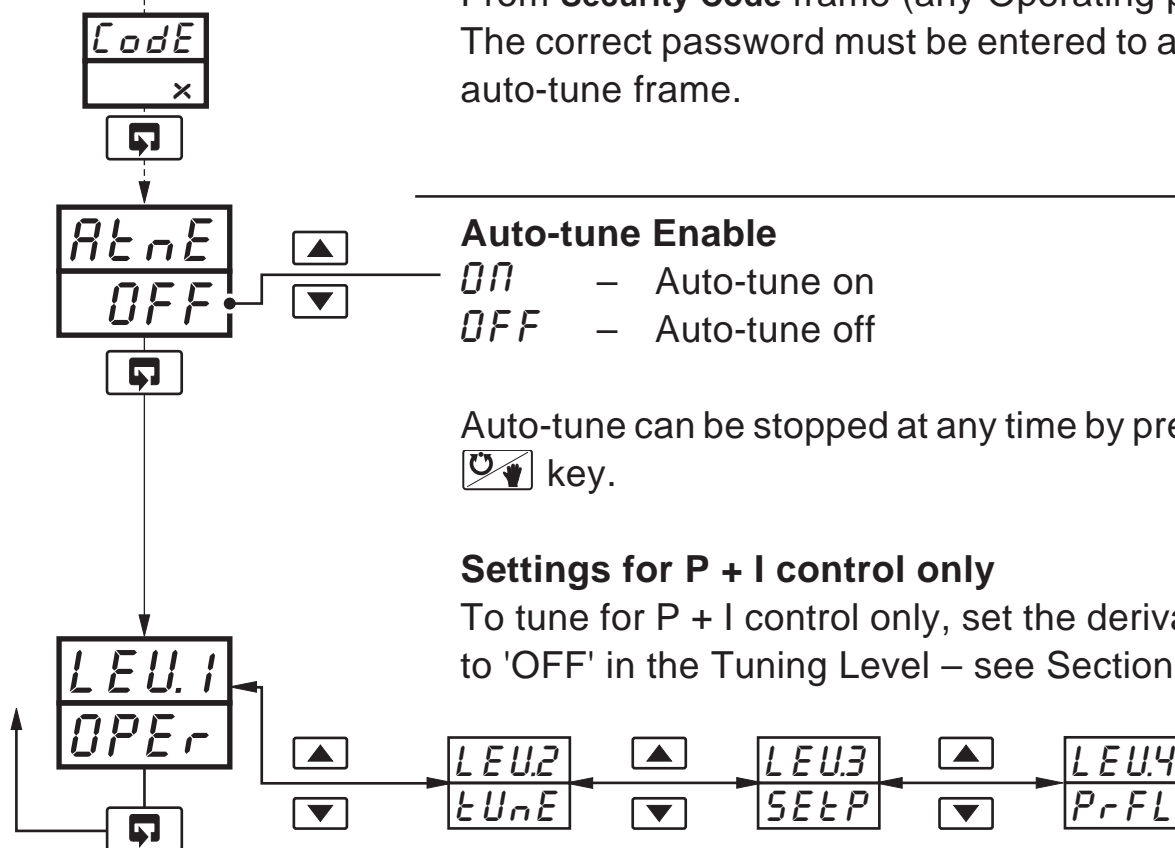From **Security Code** frame (any Operating page).
The correct password must be entered to access the auto-tune frame.



Auto-tune Enable
ON – Auto-tune on
OFF – Auto-tune off

Auto-tune can be stopped at any time by pressing the  key.

Settings for P + I control only
 To tune for P + I control only, set the derivative term to 'OFF' in the Tuning Level – see Section 3.2.

*** Notes.**

- On completion, the controller enters auto-control mode and begins to control the process using the new PID values. For fine tuning – see Section 3.
- For heat/cool control the cool proportional band is set to the same value as the heat proportional band (this value may need modification).
- If an error occurs during auto-tune, the controller reverts to manual mode with the control output set to the configured output value. An error message is displayed – see Table 2.1.

Error	Description	Error	Description
1	PV failed during auto-tune	7	A resultant P, I or D value was calculated out of range
2	Auto-tune has timed out during an auto-tune step	8	PV limit exceeded ('At start up' auto-tune)
3	Process too noisy to auto-tune	9	Controller put into configuration mode
4	Process too fast to auto-tune	10	Auto-tune terminated by user
5	Process too slow to auto-tune	11	PV is changing in the wrong direction during step test
6	PV deviated from set point by >25% eng. span during frequency response test		


Table 2.1 Auto-tune Error Codes




3 SET UP MODE

3.1 Introduction

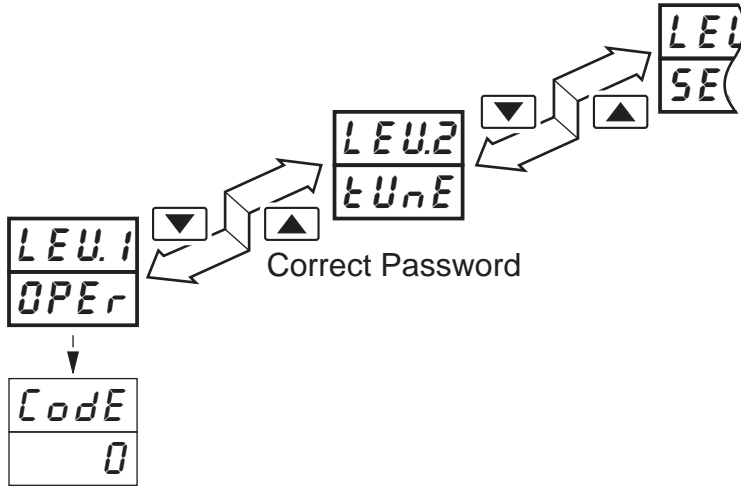
To access the Set Up Mode (Levels 2, 3 and 4) the correct password must be entered in the security code frame (the default password code is 0). Refer to the fold-out sheet at the back of this manual for the contents of these levels.



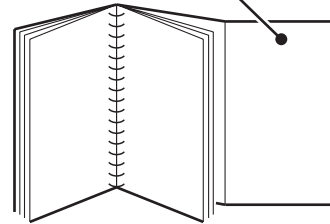Refer to the fold-out sheet for the contents of each level



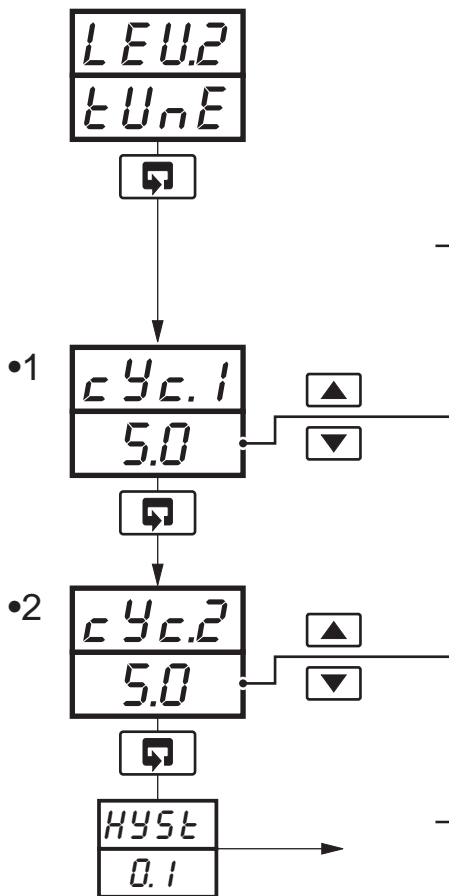3.2 Tuning (Level 2) – Fig. 3.2



Level 2 – Tuning Level

Note. To select this frame from anywhere in this page, press the key for a few seconds.

Cycle Time

Heat Time Proportioning Output
[1.0 to 300.0 seconds (<1.0 = 'On/Off' control)]

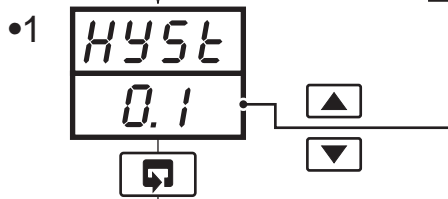
Cool Time Proportioning Output
[1.0 to 300.0 seconds (<1.0 = 'On/Off control)]

Continued on next page.


- 1 Only displayed if Output 1 is assigned to a relay or logic output.
- 2 Only displayed if heat/cool hardware configuration is selected.




...3.2 Tuning (Level 2) – Fig. 3.2



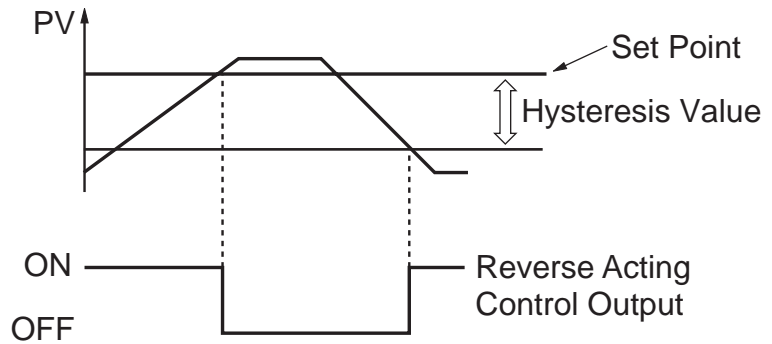
On/Off Hysteresis Value
 (used for both heat and cool outputs)
 [In engineering units]



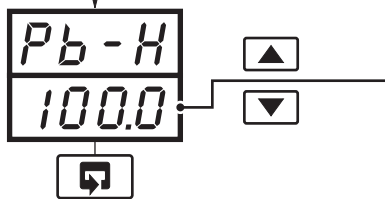
Proportional Band
 Enter the proportional band value for the heat and cool outputs.



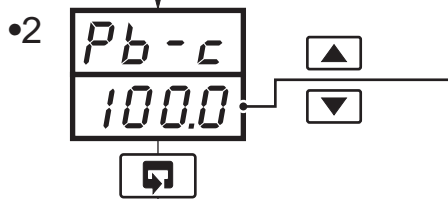Heat Output (Output 1)
 [0.1% to 999.9%]



Cool Output (Output 2)
 [0.1% to 999.9%]




Continued on next page.

- 1 Only displayed if On/Off control is selected for either output.
- 2 Only displayed if heat/cool hardware configuration is selected.



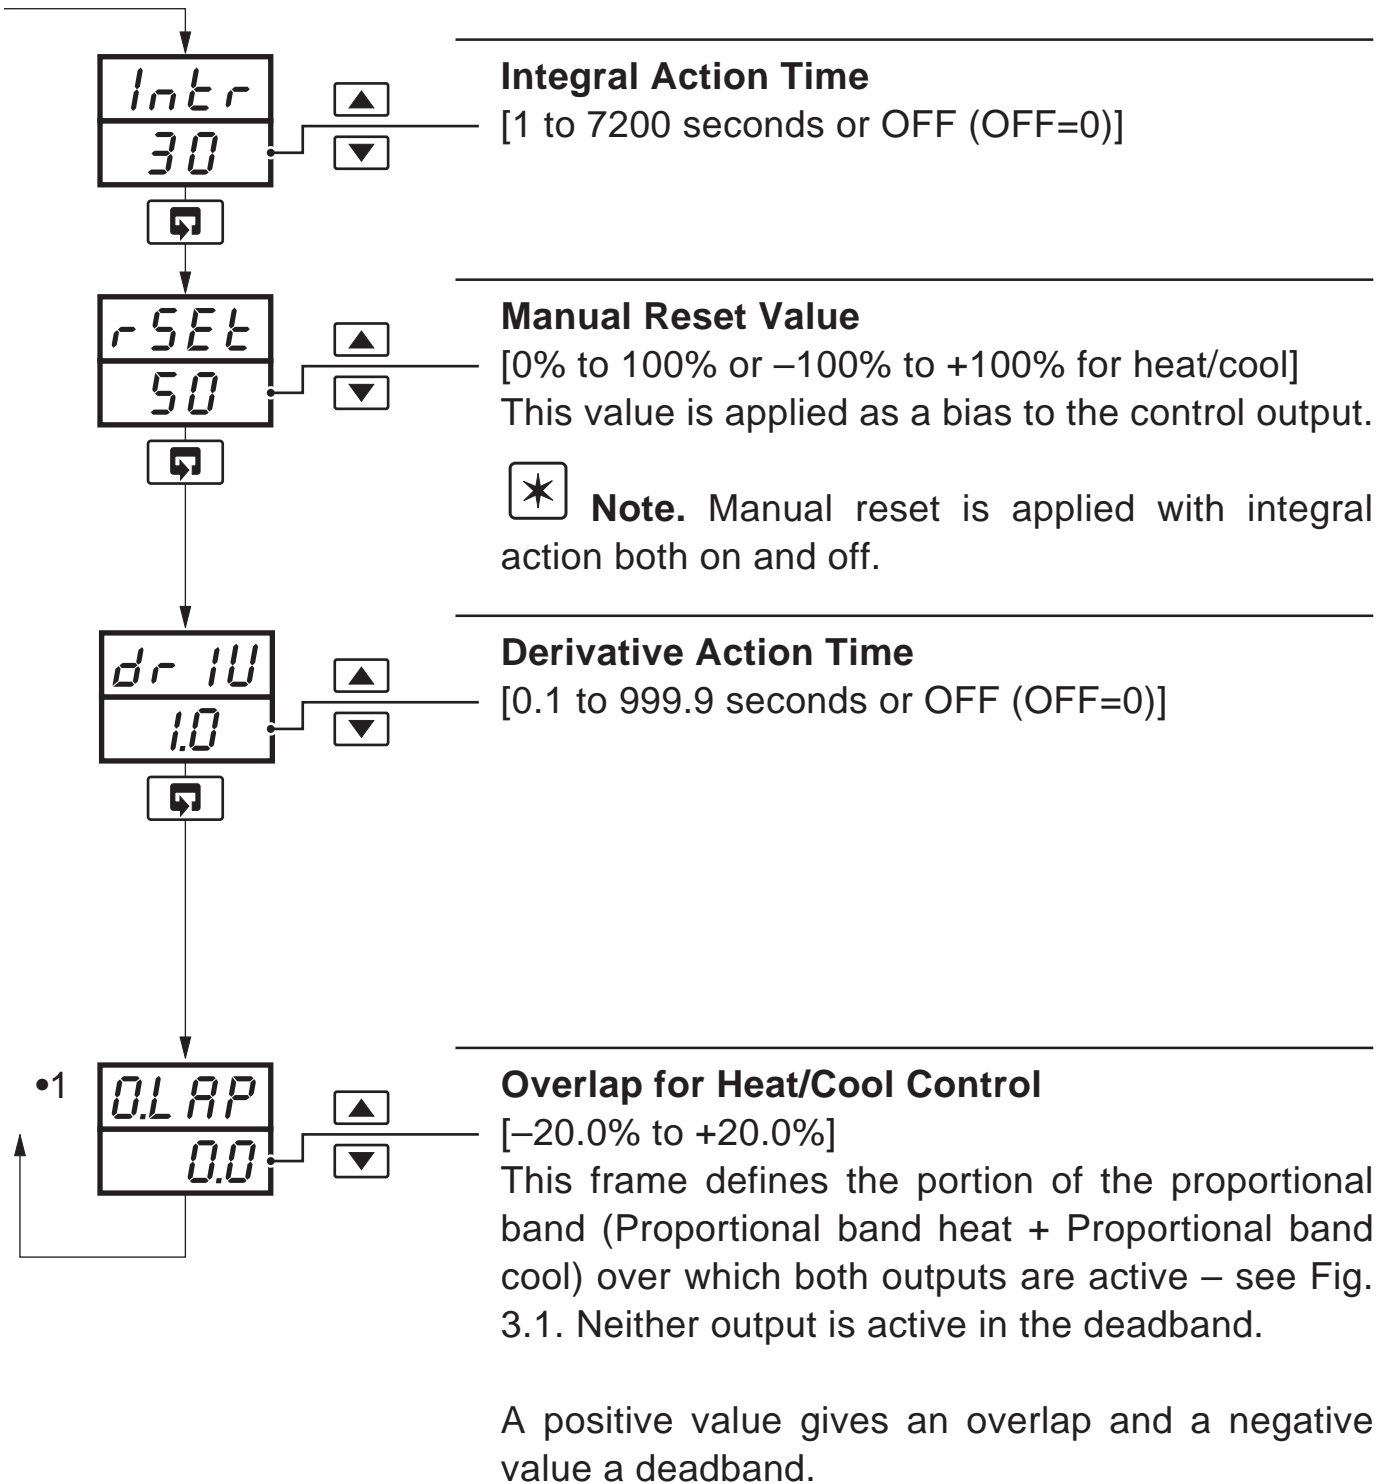
...3.2 Tuning (Level 2)




- 1 Only displayed if a heat/cool hardware configuration is selected.



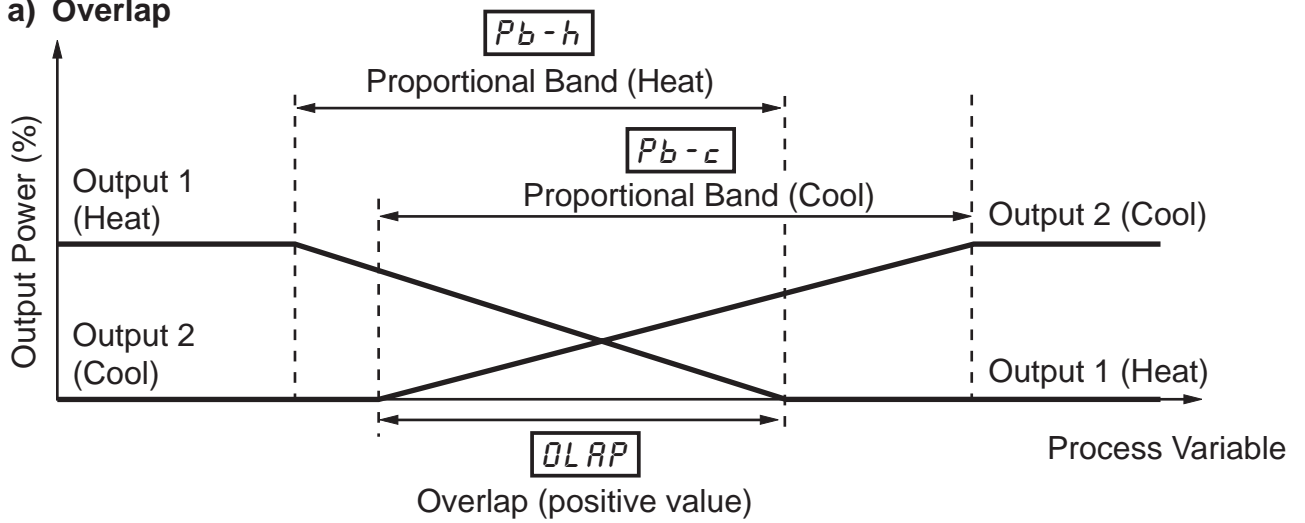a) **Overlap**



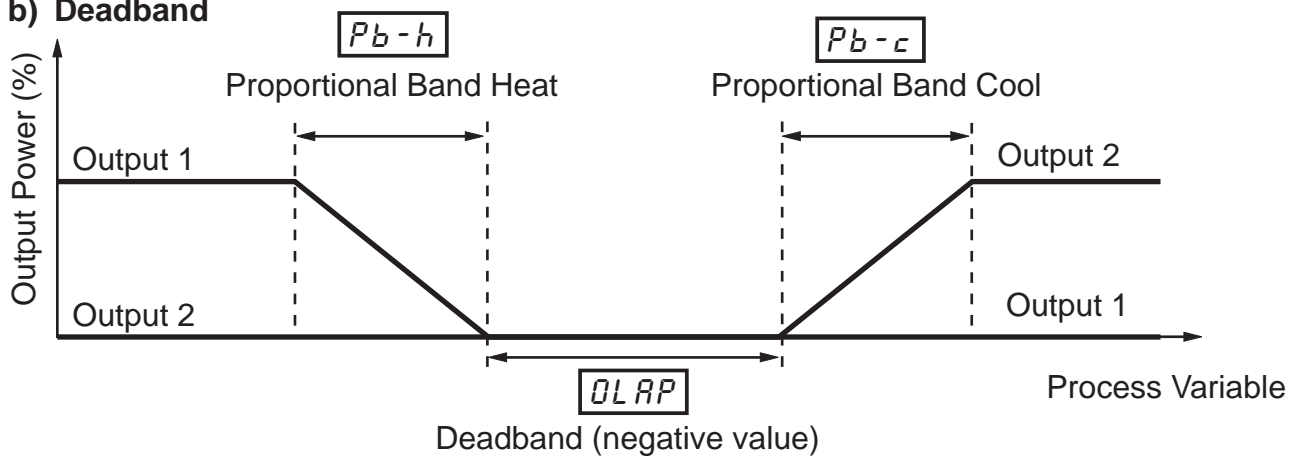b) **Deadband**



c) **Output 2 on/off control**

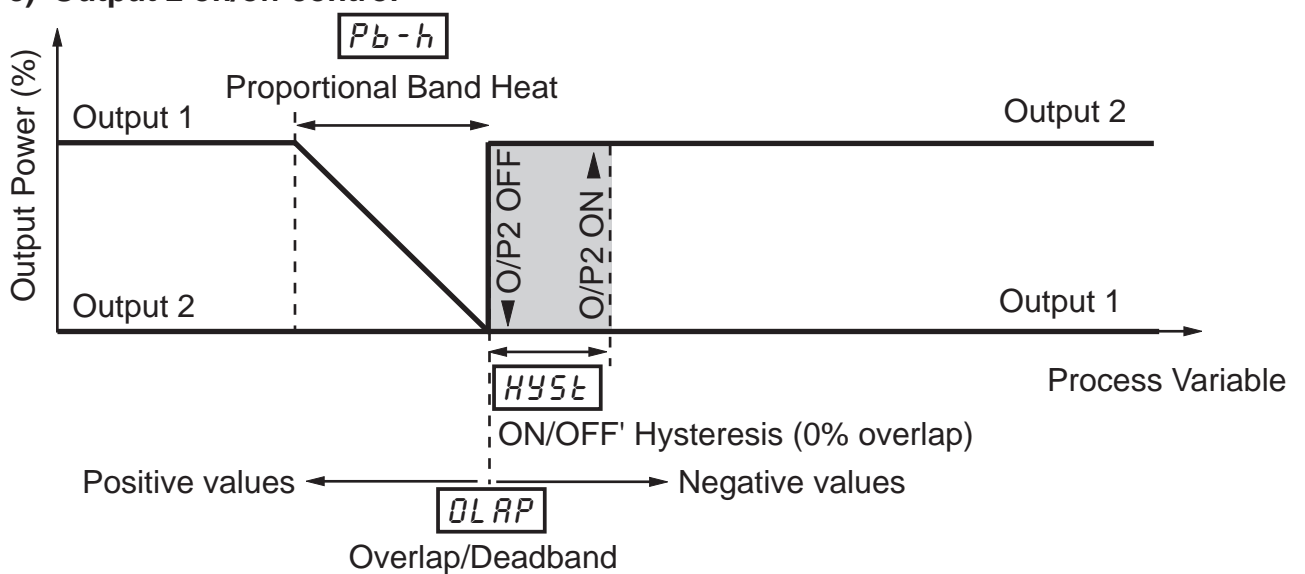


Fig. 3.1 Proportional Band & Deadband/Overlap – Heat/Cool Control Only



3.3 Set Points (Level 3)

LEU.3
SELP



LSPt
125.8



•1

rSP.n
145.8



A 1.hP
800.0



A 1.hY
270.0

Level 3 – Set Points Level



Note. To select this frame from anywhere in this page, press the key for a few seconds.

Local Set Point Value

[Within set point high and low limits, in engineering units]

Remote Set Point Selection

Set Point Type:

rSP.y – remote set point

rSP.n – local set point

Remote set point value.

Alarm 1 Trip Point

Alarm type:

A 1.hP = High process alarm

A 1.LP = Low process alarm

A 1.hd = High deviation alarm

A 1.Ld = Low deviation alarm

A 1.Lb = Loop break alarm

Trip Point:

Process & deviation alarms [in engineering units]

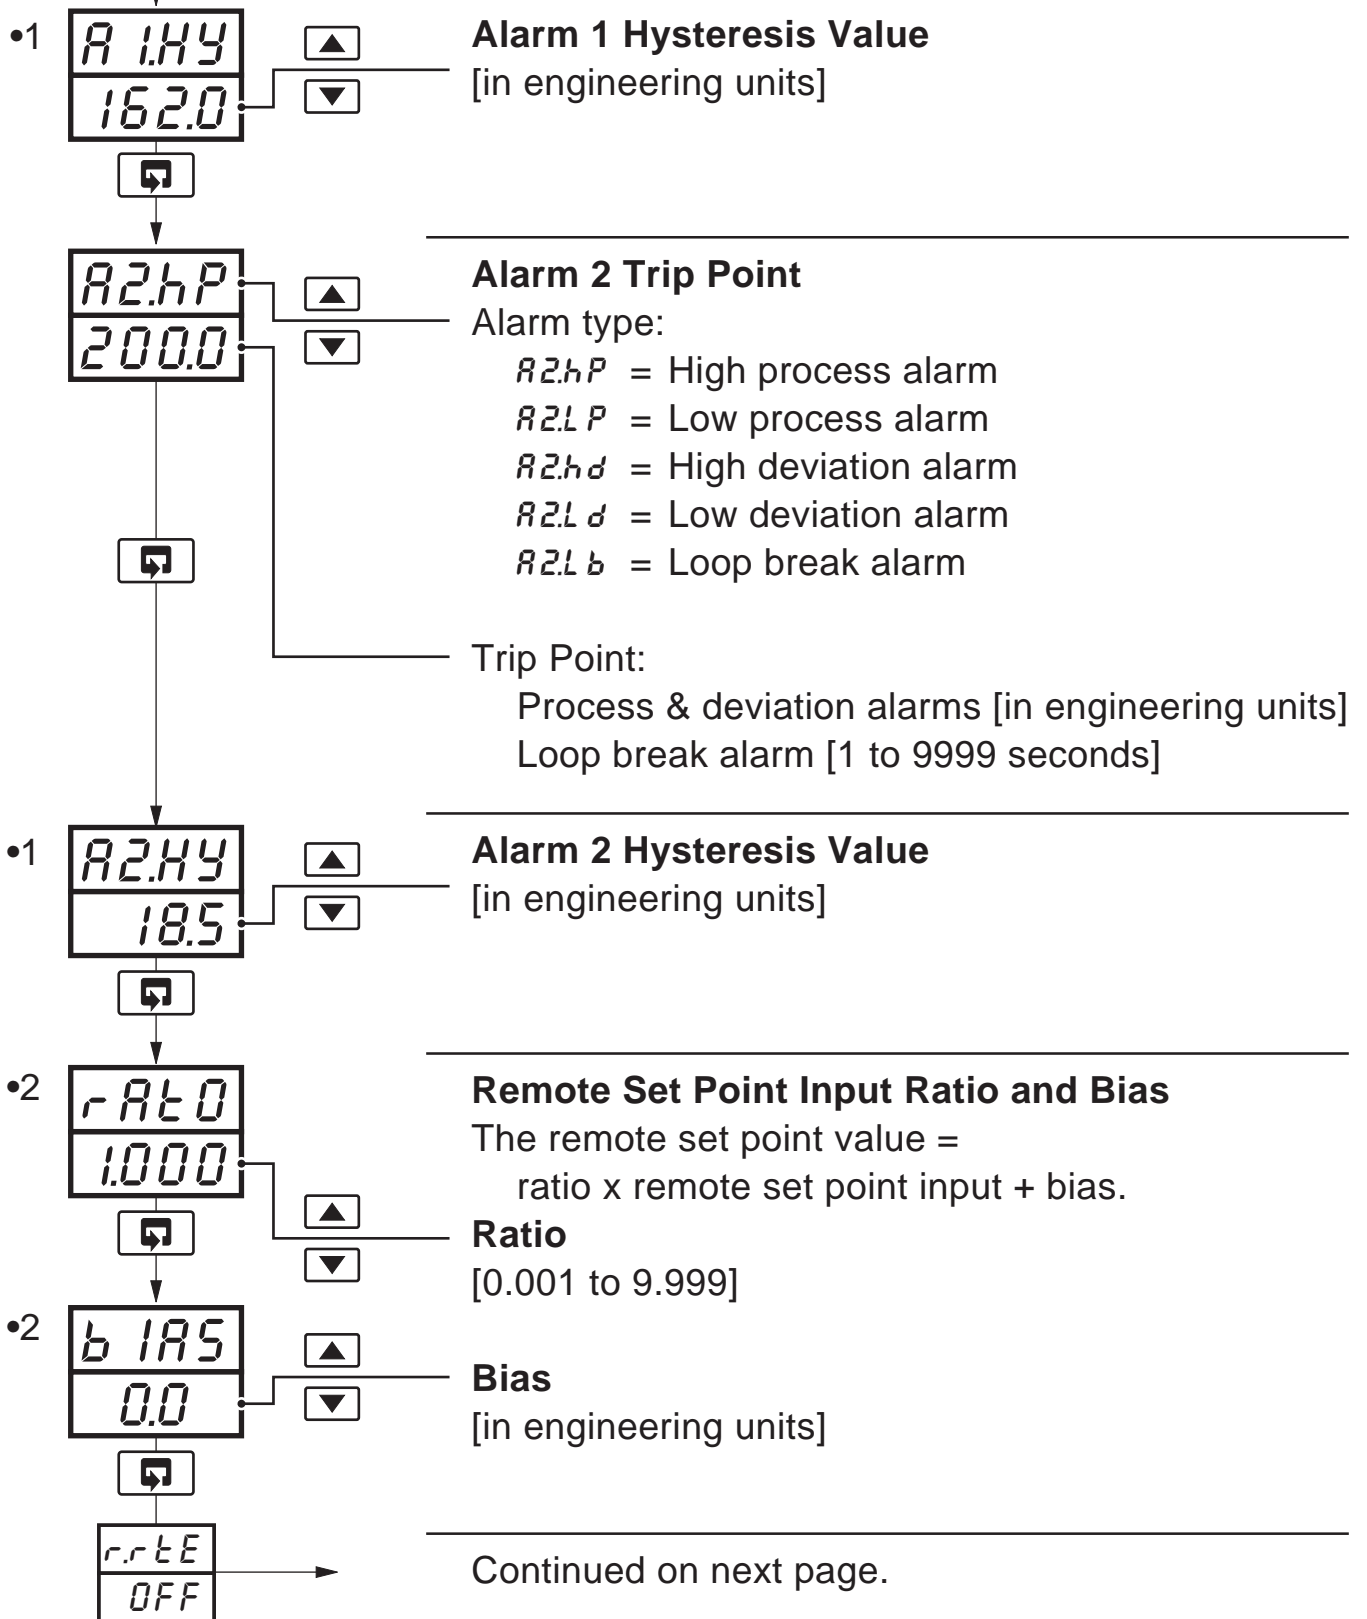
Loop break alarm [1 to 9999 seconds]

Continued on next page.

•1 Only displayed if the remote set point option is selected.




...3.3 Set Points (Level 3)



- 1 Only displayed if custom alarm hysteresis is selected – see Section 4.3.2. Not displayed if Loop Break Alarm type selected.
- 2 Only displayed if the remote set point option is selected.



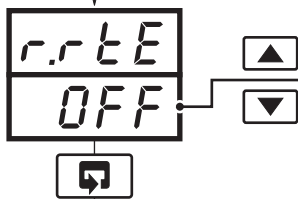
...3.3 Set Points Level




Ramp Rate (for ramping set point facility)
 [1 to 9999 engineering units per hour, or OFF]

The ramping set point facility can be used to prevent a large disturbance to the control output when the set point value is changed. This only applies to the local and multiple fixed set points.

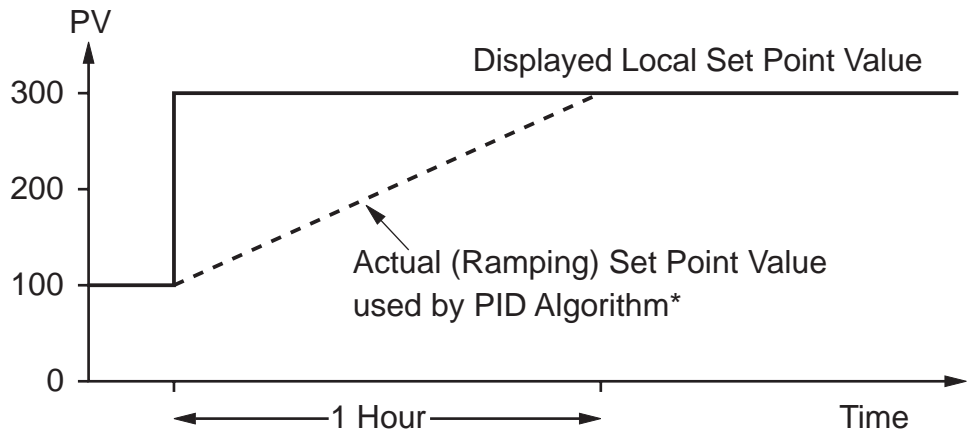*** Note.** For remote set points, the ramp rate is applicable only when switching from remote to local mode, not from local to remote.



* e.g. Ramp Rate = 200 Increments/Hour

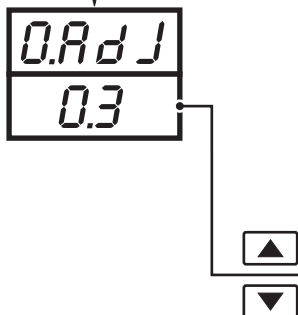

Offset Adjustment

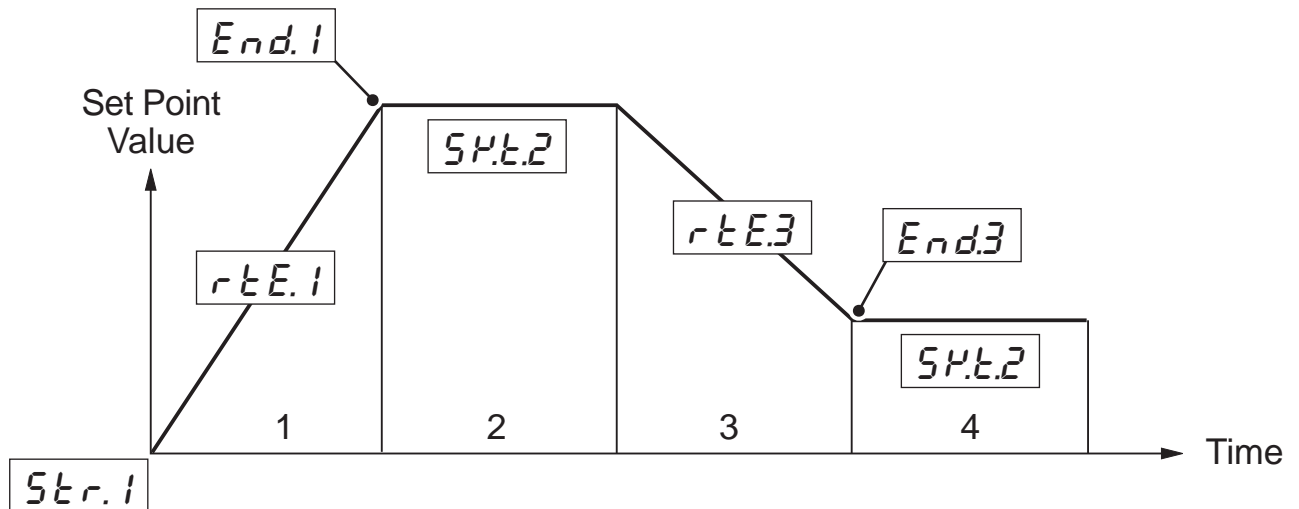
An offset can be applied to the process variable input to enable spot calibration or the removal of system errors.

[±10% of engineering range in engineering units]



3.4 Profile (Level 4)

A four-segment ramp/soak profile facility is provided. This level can only be accessed if the profile option is selected in the configuration level. The four segments are fixed as ramps or soaks as follows:



LEU.4
PrFL



•1

Str.1
100.0



End.1
200.0



rtE.1
10.0

Level 4 – Profile Level



Note. To select this frame from anywhere in this page, press the key for a few seconds.

Start value for 1st Segment (ramp).

[Within display range (in engineering units)]

Enter the start value required.

End Value for 1st Segment (ramp).

[Within display range (in engineering units)]

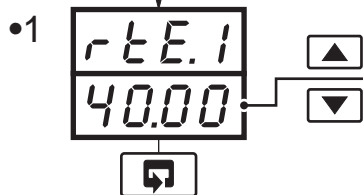
Enter the end value required.

Continued on next page.

- 1 With the self-seeking set point facility enabled, the first ramp starts at the current process variable value instead of the start value for the 1st segment.



...3.4 Profile (Level 4)




Ramp Rate for 1st Segment.


[Engineering units*]

Enter the ramp rate required.

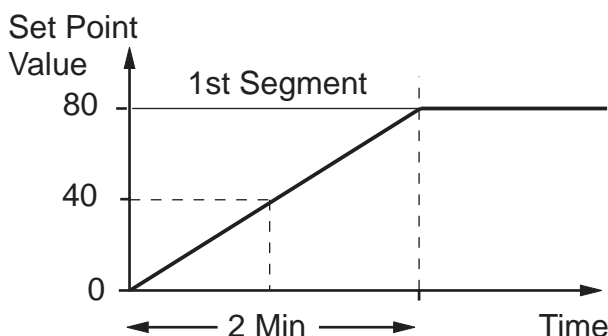* The time option Eng Units/hr or Eng Units/min is set in the configuration level – see section 4.3.2.




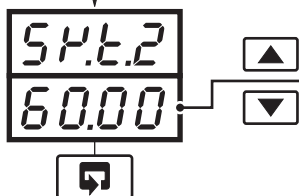Example. Required Ramp Rate 40°C/min
Ramp Rate set to 40, Time Option set to 'Min' – see section 4.3.2




Soak Time for 2nd Segment.

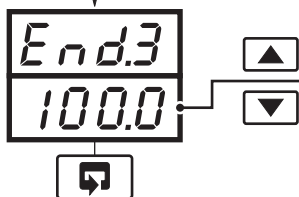[0 to 999.9 minutes or hours]*



End Value for 3rd Segment (ramp).

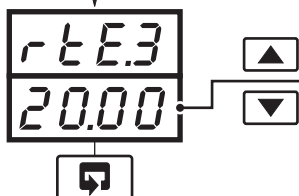
[Within display range (in engineering units)]



Ramp Rate for 3rd Segment.

[Engineering units/hour or /minute]*

* Depending on the time option selected in the configuration level.



Continued on next page.

•1 The engineering value is shown with an extra decimal place (up to a maximum of 3) for greater accuracy in setting the ramp rate.



...3.4 Profile (Level 4)

•2
54.4
30.00



Soak Time for 4th Segment.

[0 to 999.9 minutes or hours]*

* Depending on the time option selected in the configuration level.

5.5.S.P
YES



Self-Seeking Set Point Enable.

YES – enable self-seeking set point

NO – disable self-seeking set point

When enabled the controller inserts the current process variable value as the starting point on initiation of the profile (instead of the start value for segment 1).

P.H.Y.S
OFF



Profile Hysteresis for Guaranteed Ramp/Soak.

[In engineering units or OFF = 0]

If the process variable deviates from the set point by more than the value set, the program is suspended but continues automatically when the process variable returns within the set limits. The hysteresis value applies above and below set point under all program conditions.

r.P.L.S
0



Number of Program Repeats

[0 to 99 or infinite (InFt > 100)]

- 2 The engineering value is shown with an extra decimal place (up to a maximum of 3) for greater accuracy in setting the ramp rate.



4 CONFIGURATION MODE

4.1 Introduction

The Configuration Mode comprises two levels (5 and 6) as shown in Fig. 4.2.

Level 5 is divided into four frames. For most simple applications, it is only necessary to set up the parameters in the first frame.


*** Note.**

When in the configuration level:

- All the LED indicators flash.
- All relays and logic outputs are turned off.
- The analog output reverts to 0% (4mA) output level.

4.2 Accessing the Configuration Mode – Fig. 4.1

To access the Configuration Mode, set the security switch to the 'Configure' position (Levels 1 to 4 cannot be accessed from this setting). When the configuration parameters are programmed, reset the security switch to the 'Normal' position. The Operating page is displayed automatically .

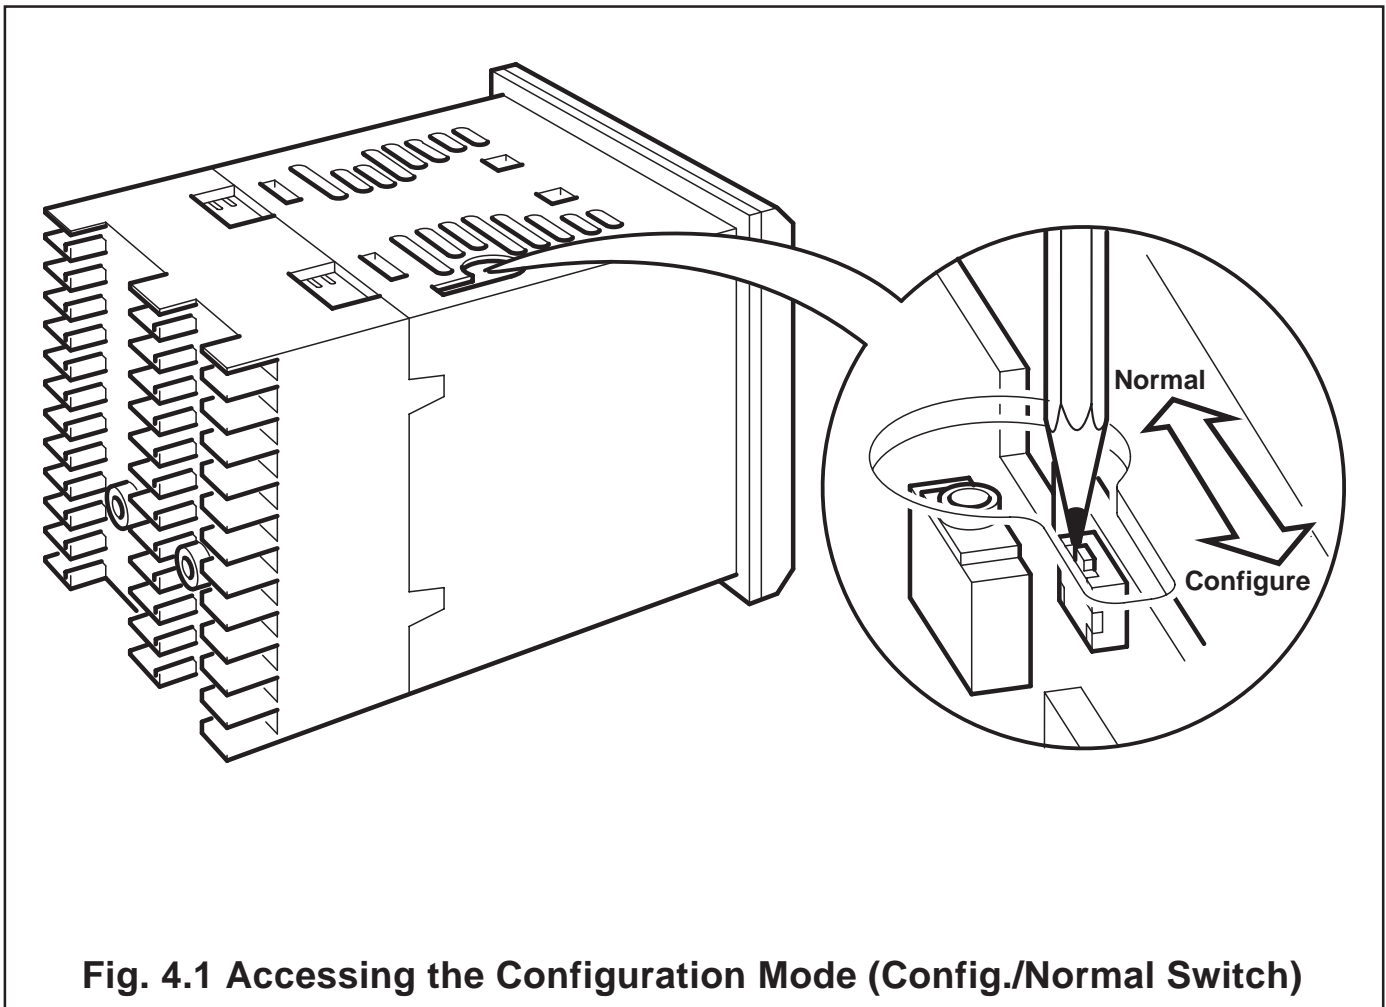

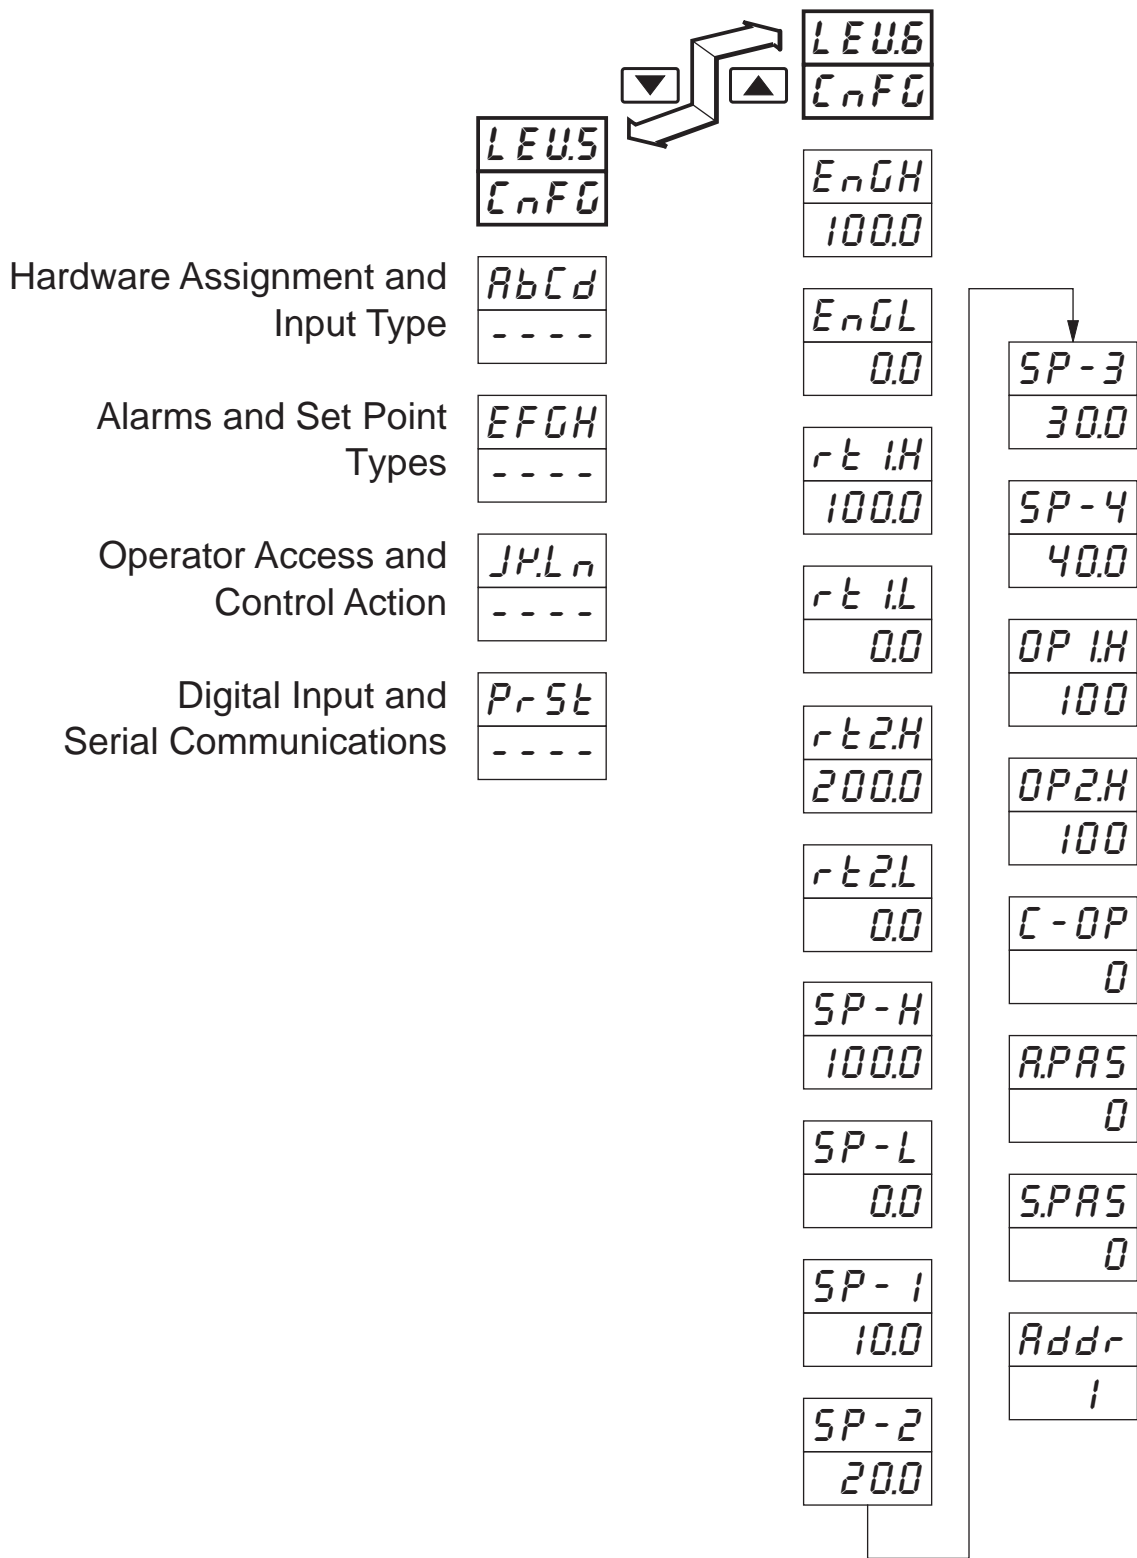


Fig. 4.2 Configuration Frames (Levels 5 and 6)



4.3 Basic Hardware and Configuration (Level 5)

4.3.1 Hardware Assignment and Input Type – Fig. 4.3

LEU5
CnFG



AbCd
2400



EFGH

Level 5 –Configuration



Note. To select this frame from anywhere in this page, press the  key for a few seconds.

'ABCD' Settings

AbCd
2400



AbCd
2400



AbCd
2400

The parameter to be changed is indicated by the letter which is flashing. Parameter options are shown in Fig. 4.3.

- A* = Hardware configuration
- b* = Input type and range
- C* = Temperature units
- d* = Process variable display decimal places



Note.

When the input type (parameter b) is changed, the range is set automatically to the maximum permissible for the input type selected.

Continued on page 34.



A – Hardware Configuration

Frequency		Rly 1	Rly 2*	Rly 3*	Logic O/P	An. O/P 1	An. O/P 2*	Control Type
50Hz	60Hz							
1	R	O/P 1	Alm 1	Alm 2	O/P 1	PV	SP	Time Prop. or On/Off
2	b	Alm 1	Alm 2	None	None	O/P 1	PV	Analog Prop.
3	c	O/P 1	O/P2	Alm 1	O/P 1	PV	SP	Heat – Time Prop. Cool – Time Prop.
4	d	O/P2	Alm 1	Alm 2	O/P2	O/P 1	PV	Heat – Analog Cool – TP or On/Off
5	E	Alm 1	Alm 2	None	O/P 1	PV	SP	Alm Unit or Logic O/P Time Prop.
U		Custom	Custom	Custom	Custom	Custom	Custom	Custom

* Only available if option board is fitted



B – Input Type and Range Configuration

Display		Display	
b	T/C Type B	1	0 to 20 mA
E	T/C Type E	2	4 to 20 mA
J	T/C Type J	3	0 to 5 V
K	T/C Type K	4	1 to 5 V
n	T/C Type N	5	0 to 50 mV
r	T/C Type R	7	4 to 20 mA (square root linearizer)
S	T/C Type S	U	Custom Configuration
t	T/C Type T		
P	PT100 RTD		



C – Temperature Units

Display	Temperature Units
C	Degrees C*
F	Degrees F*
0	No temperature units



**D – Process Variable Display
Decimal Places**

Display	
0	XXXX
1	XXX . X
2	XX . XX
3	X . XXX

* Temperature inputs only


Fig. 4.3 Hardware Assignment and Input Type




4.3.2 Alarms and Set Point Types – Fig. 4.4



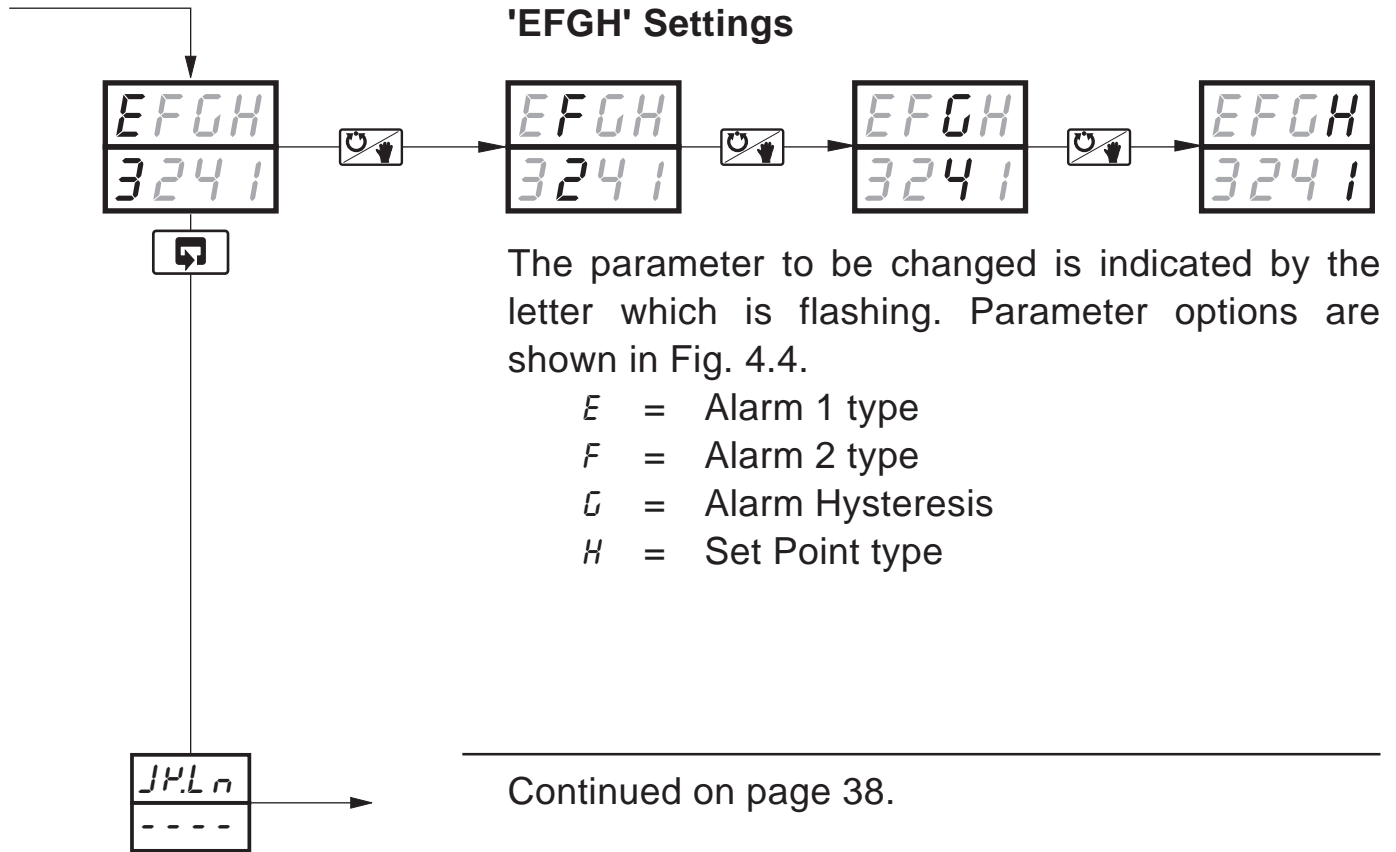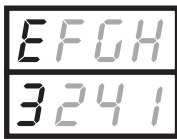Note. All relays are de-energized in the alarm state.





E – Alarm 1 Type*


Display	
0	None
1	High Process
2	Low Process
3	High Deviation
4	Low Deviation
5	Loop Break



F – Alarm 2 Type*

Display	
0	None
1	High Process
2	Low Process
3	High Deviation
4	Low Deviation
5	Loop Break

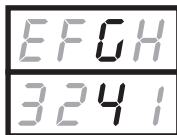* Refer to Figs. 4.5 and 4.6 for alarm action



G – Alarm Hysteresis

Display	
0	None
1	0.1%
2	0.2%
3	0.5%
4	1.0%
5	2.0%
6	5.0%
U	Custom

Value in % of engineering range

Value in engineering units 1

Note 1. When custom alarm hysteresis is selected, the alarm hysteresis values are set individually in the set up level – see Section 3.3



H – Set Point Type

Display	
0	Local Set Point Only
1	Local + Remote Set Point (no Remote Set Point Tracking)** 2
2	Local + Remote Set Point (with Remote Set Point Tracking)**
3	Multiple Fixed Set Points
4	Ramp/Soak (Time Units in Minutes)
5	Ramp/Soak (Time Units in Hours)

**Only available if option board is fitted. Remote set point input is 4 to 20 mA

Note 2. With remote set point tracking enabled, the local set point tracks the remote set point when in the remote set point mode.

Fig. 4.4 Alarms and Set Point Types



...4.3.2 Alarms and Set Point Types – Fig. 4.4

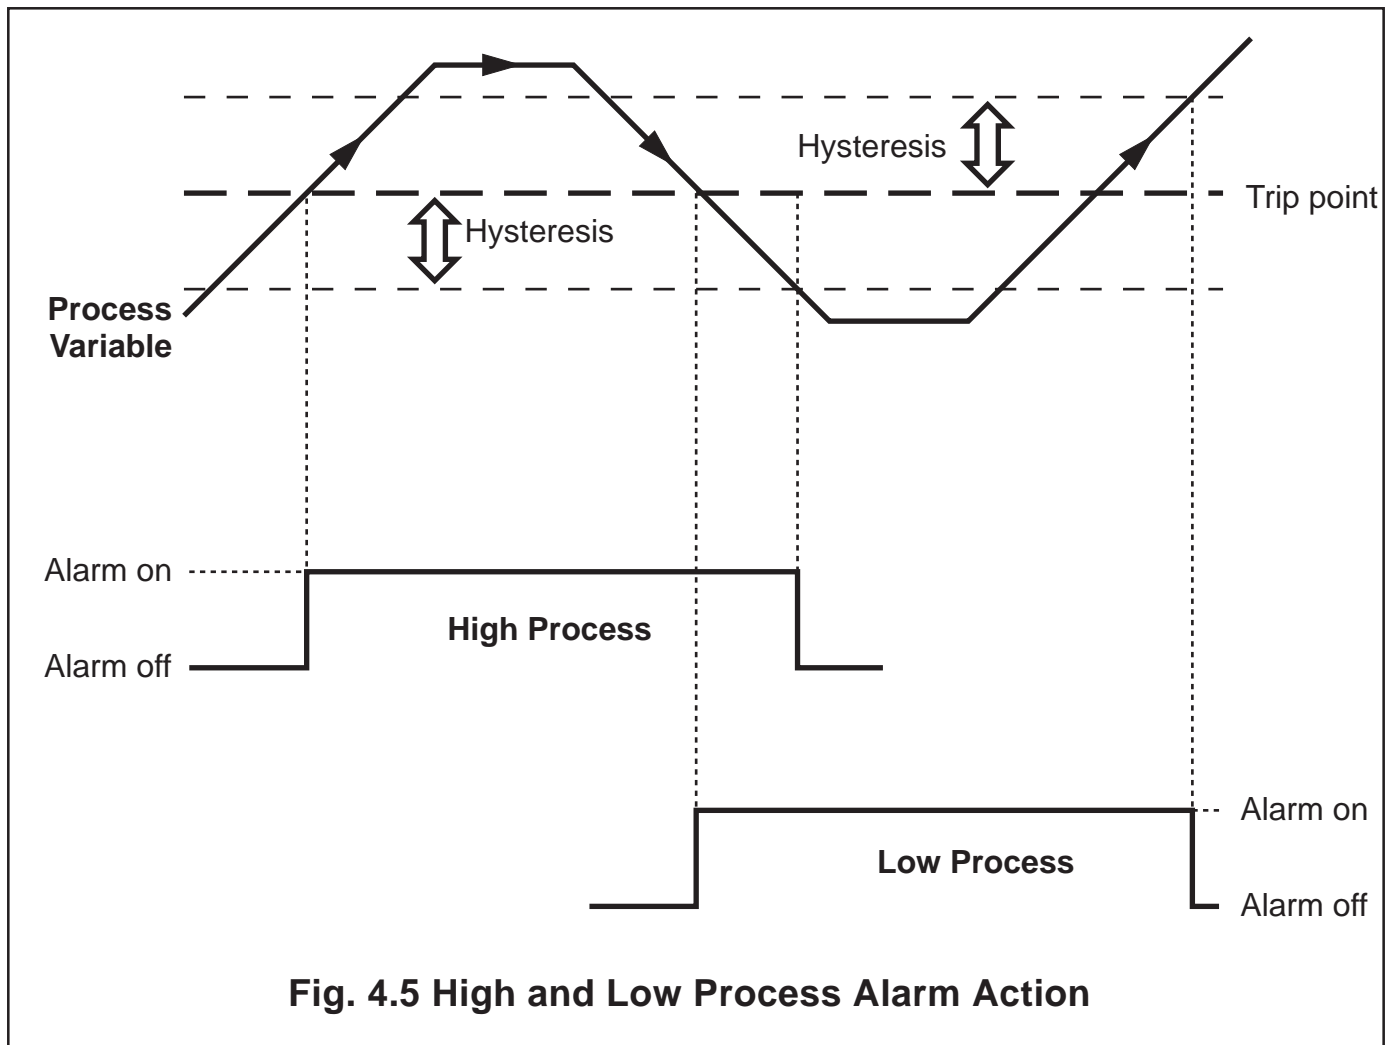


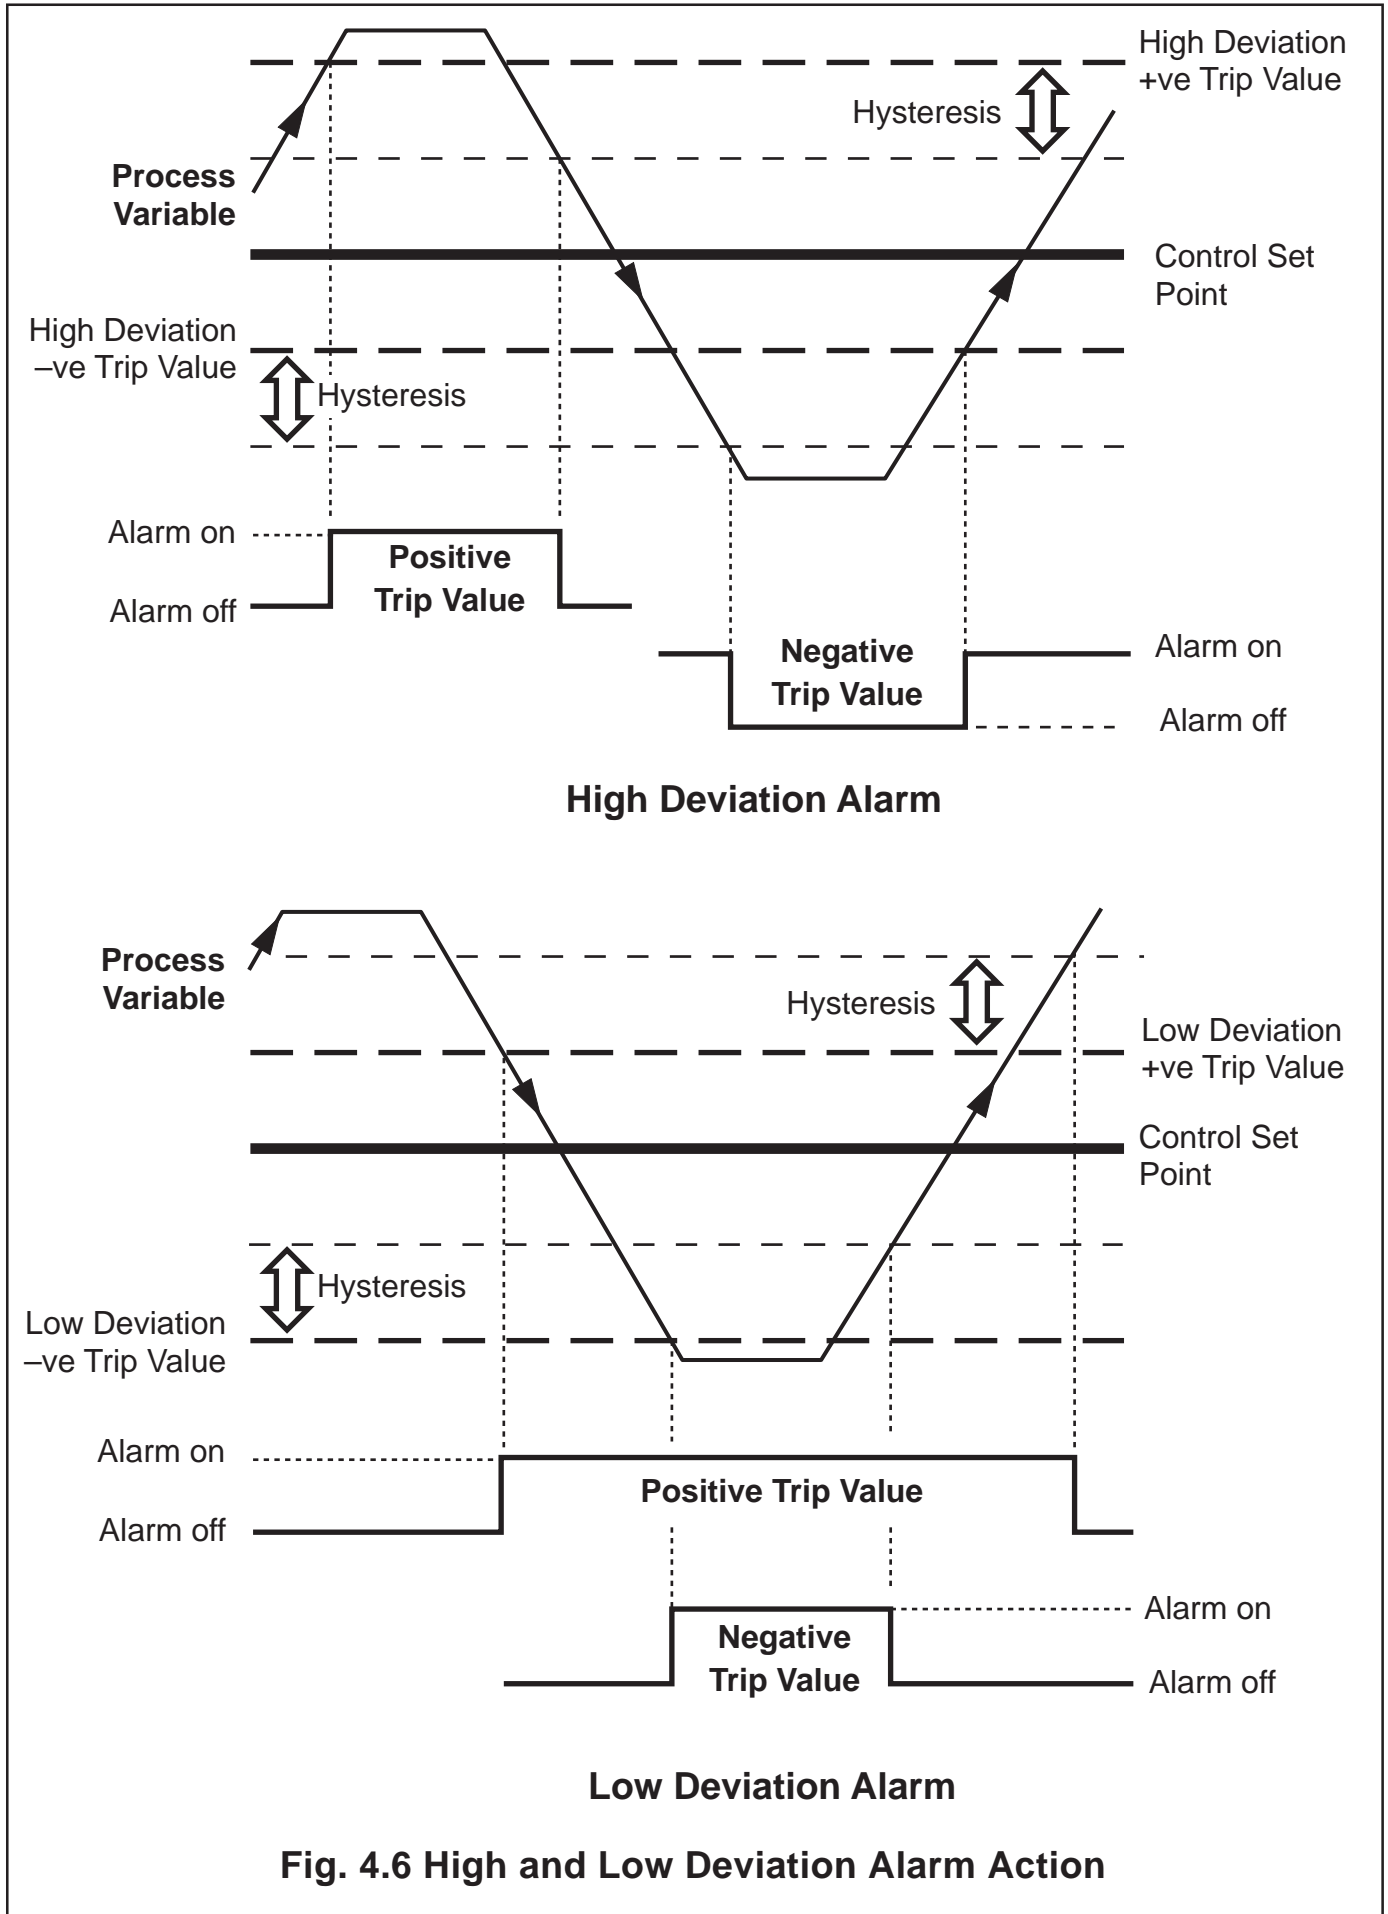
Note. All relays are de-energized in the alarm state.

Loop Break Alarm

The loop break alarm indicates a fault in the control loop (e.g. failure of a heating element in a furnace). If the control output remains at maximum or minimum for a time exceeding the trip value (in seconds) without any response in the process value, the loop break alarm is activated.


Process and Deviation Alarms (High/Low) – Figs 4.5 and 4.6







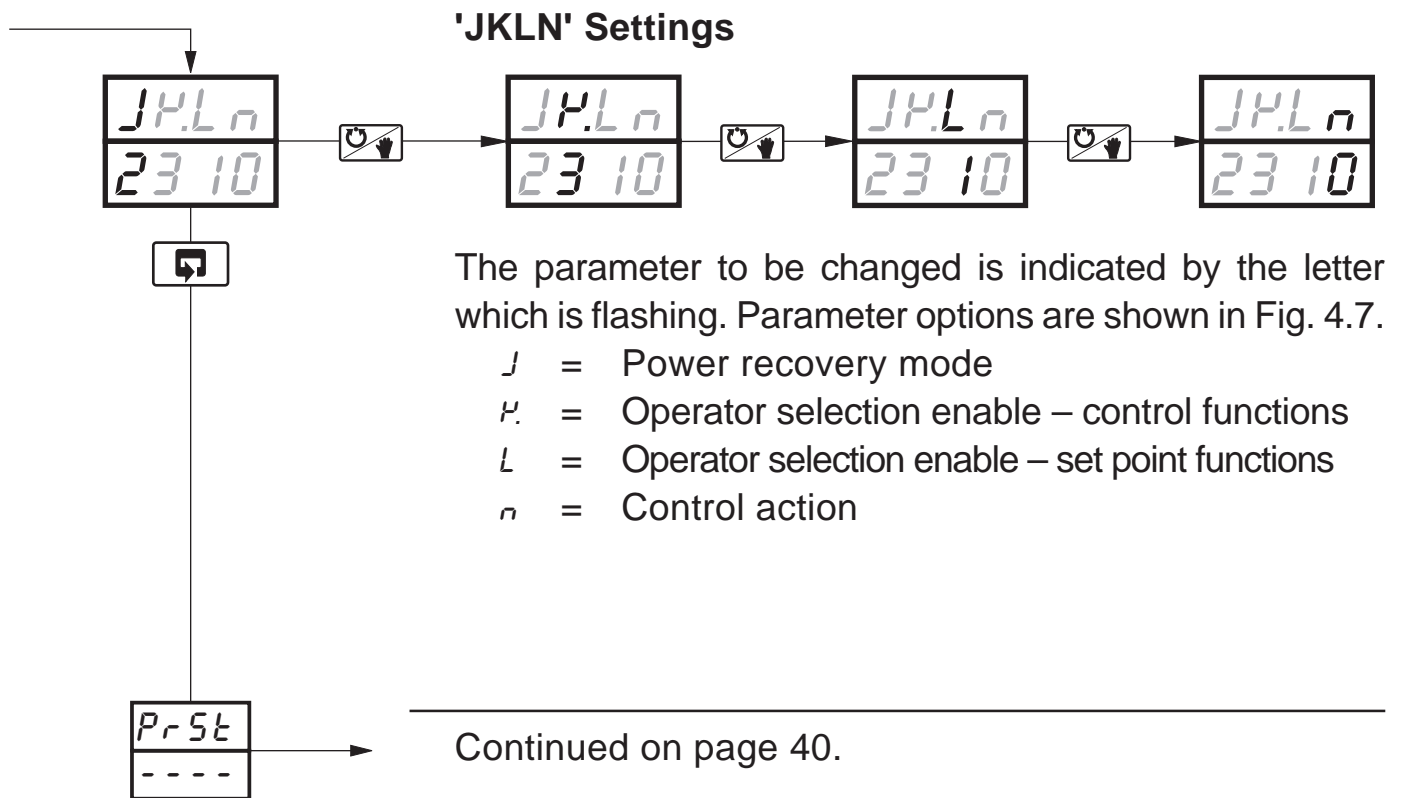4.3.3 Operator Access and Control Action – Fig. 4.7





J – Power Recovery Mode

Display	Mode
0	Last Mode
1	Manual with Last Output
2	Manual with 0.0% Output
3	Manual with 100.0% Output
4	Auto
U	Custom



K – Operator Selection Enable Control Functions

Display	Auto/Manual and Auto-tune
0	Enable Both Functions
1	Disable A/M, Enable Auto-tune
2	Enable A/M, Disable Auto-tune
3	Disable Both Functions



L – Operator Selection Enable – Set Point Functions

Display	Local Set Point Adjustment and Local/Remote Set Point Selection
0	Enable Both Functions
1	Disable Set Point Adjust, Enable Local/Remote Selection
2	Enable Set Point Adjust, Disable Local Remote Function
3	Disable Both Functions




N – Control Action

Display	Heat Action	Cool Action
0	Reverse	Direct
1	Direct	Reverse

Fig. 4.7 Operator Access and Control Action



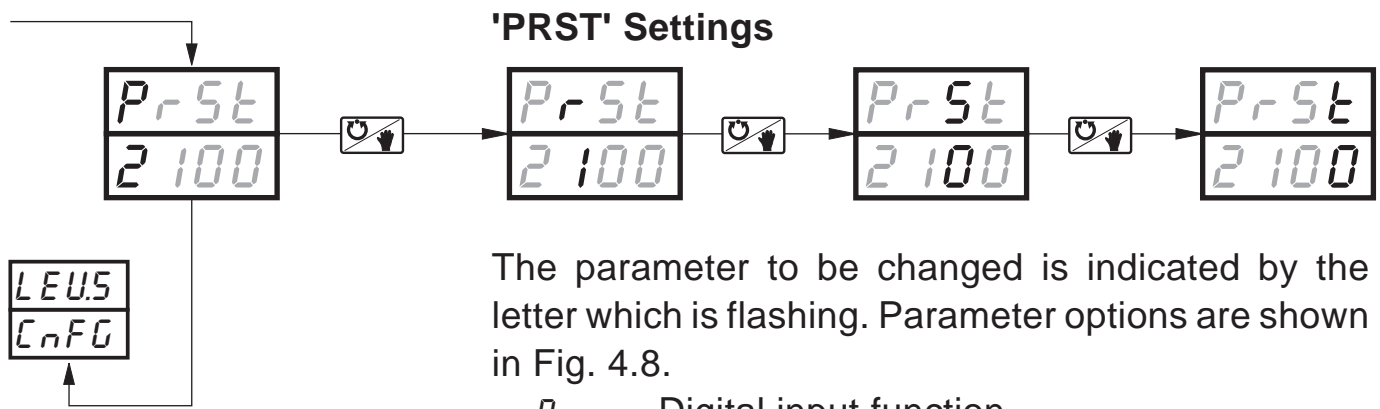4.3.4 Digital Input and Serial Communications – Fig. 4.8



The parameter to be changed is indicated by the letter which is flashing. Parameter options are shown in Fig. 4.8.

- P* = Digital input function
- r* = Analog input digital filter
- S* = Serial communications configuration
- t* = Serial communication parity

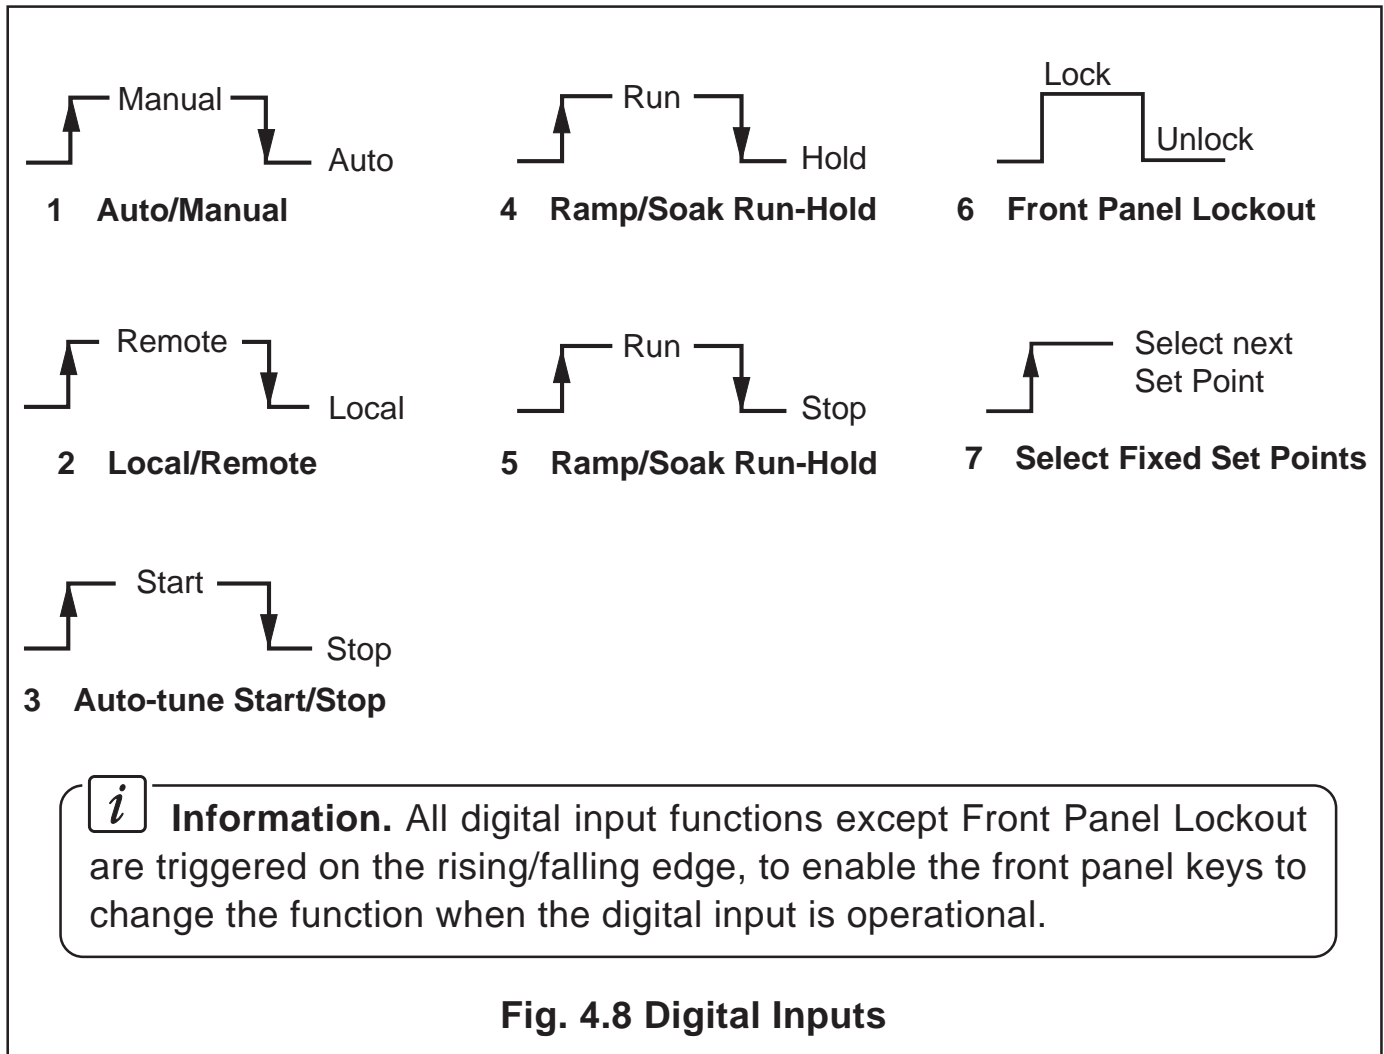


Fig. 4.8 Digital Inputs



P – Digital Input Functions

Display	Function
0	None
1	Auto/Manual
2	Local/Remote
3	Auto-tune Start
4	Ramp/Soak Run-Hold
5	Ramp/Soak Run-Stop
6	Front Panel Lockout
7	Select Fixed Set Points

R – Analog Input Digital Filter

Display	
0	0 seconds
1	1 second
2	2 seconds
5	5 seconds
R	10 seconds
B	20 seconds
C	40 seconds
D.	60 seconds

Input filter averages the process variable input values over the time set

S – Serial Communication Configuration

Display	Baud Rate, 2/4 Wire
0	Off
1	2400, 2 Wire
2	2400, 4 Wire
3	9600, 2 Wire
4	9600, 4 Wire


T – Serial Communications Parity

Display	
0	None
1	Odd
2	Even

Fig. 4.9 Digital Input and Serial Communications



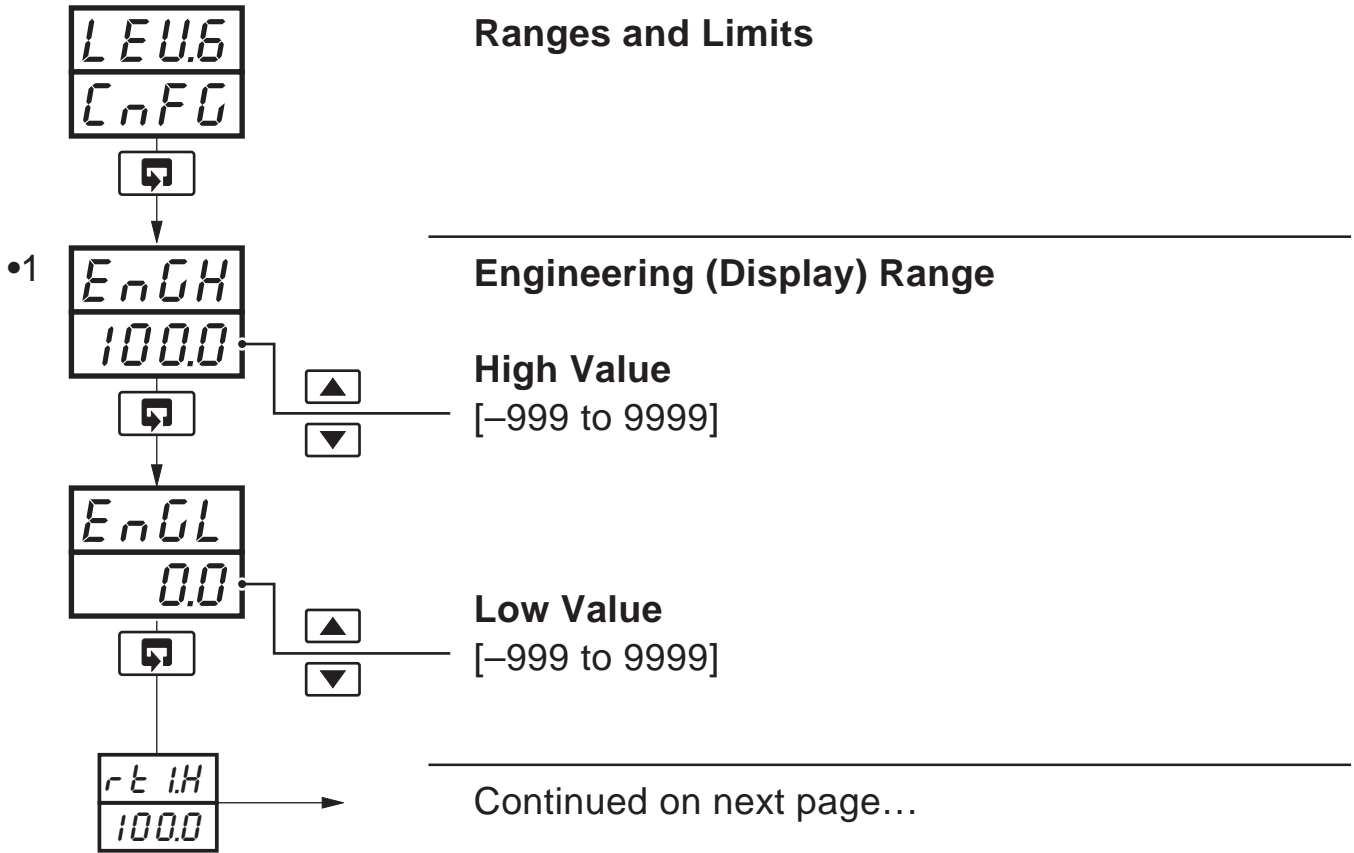
4.4 Ranges and Passwords (Level 6)



- 1 The engineering range high and low values are automatically set to the maximum allowed value when thermocouple or RTD is selected in the configuration level – see Section 4.3.1.



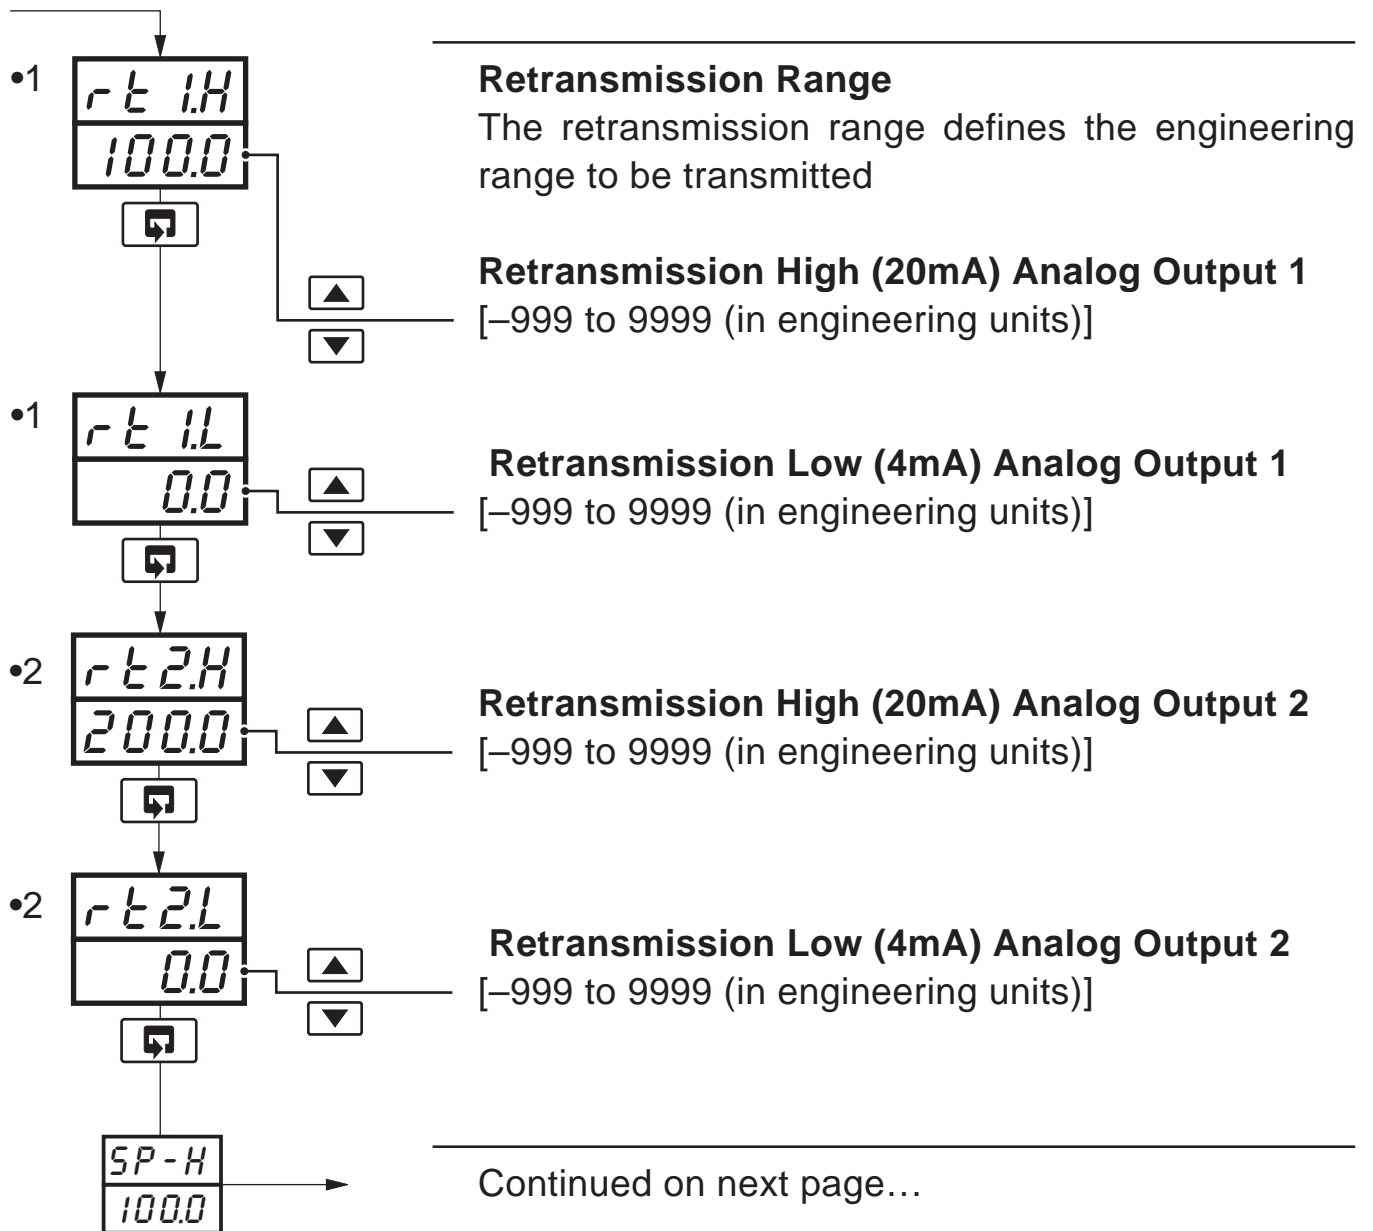...4.4 Ranges and Passwords (Level 6)





- 1 Only displayed if the analog output is configured to retransmit the process variable or control set point value.
- 2 Only displayed if the retransmission option board is fitted.



...4.4 Ranges and Passwords (Level 6)




Set Point Limit

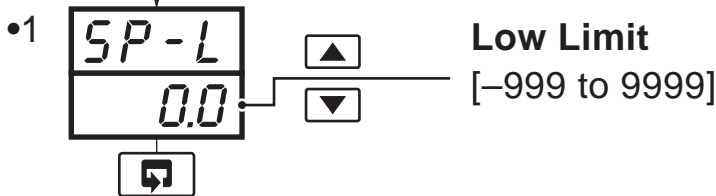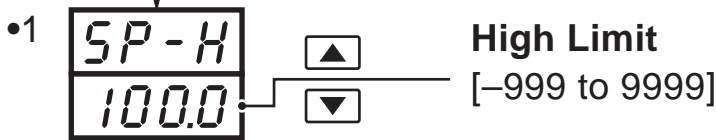The Set Point Limit defines the limits within which the local set point can be adjusted (these limits also apply to the remote set point).



Fixed Set Point Values (1 to 4)

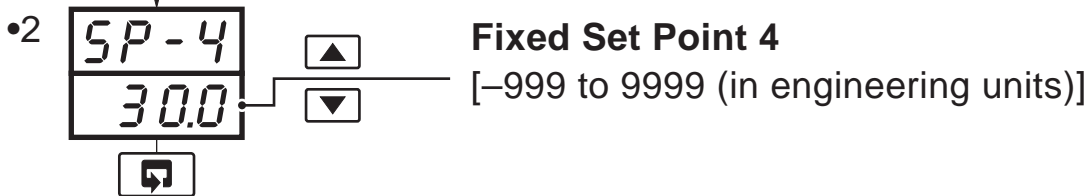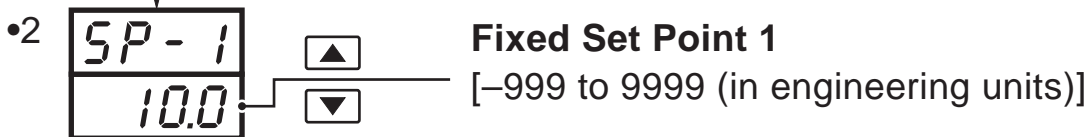Select the set point values required in the multiple fixed set point facility.




Continued on next page...

- 1 This limit applies to the local and remote set point values.
- 2 Only displayed if the multiple fixed set point facility is selected.



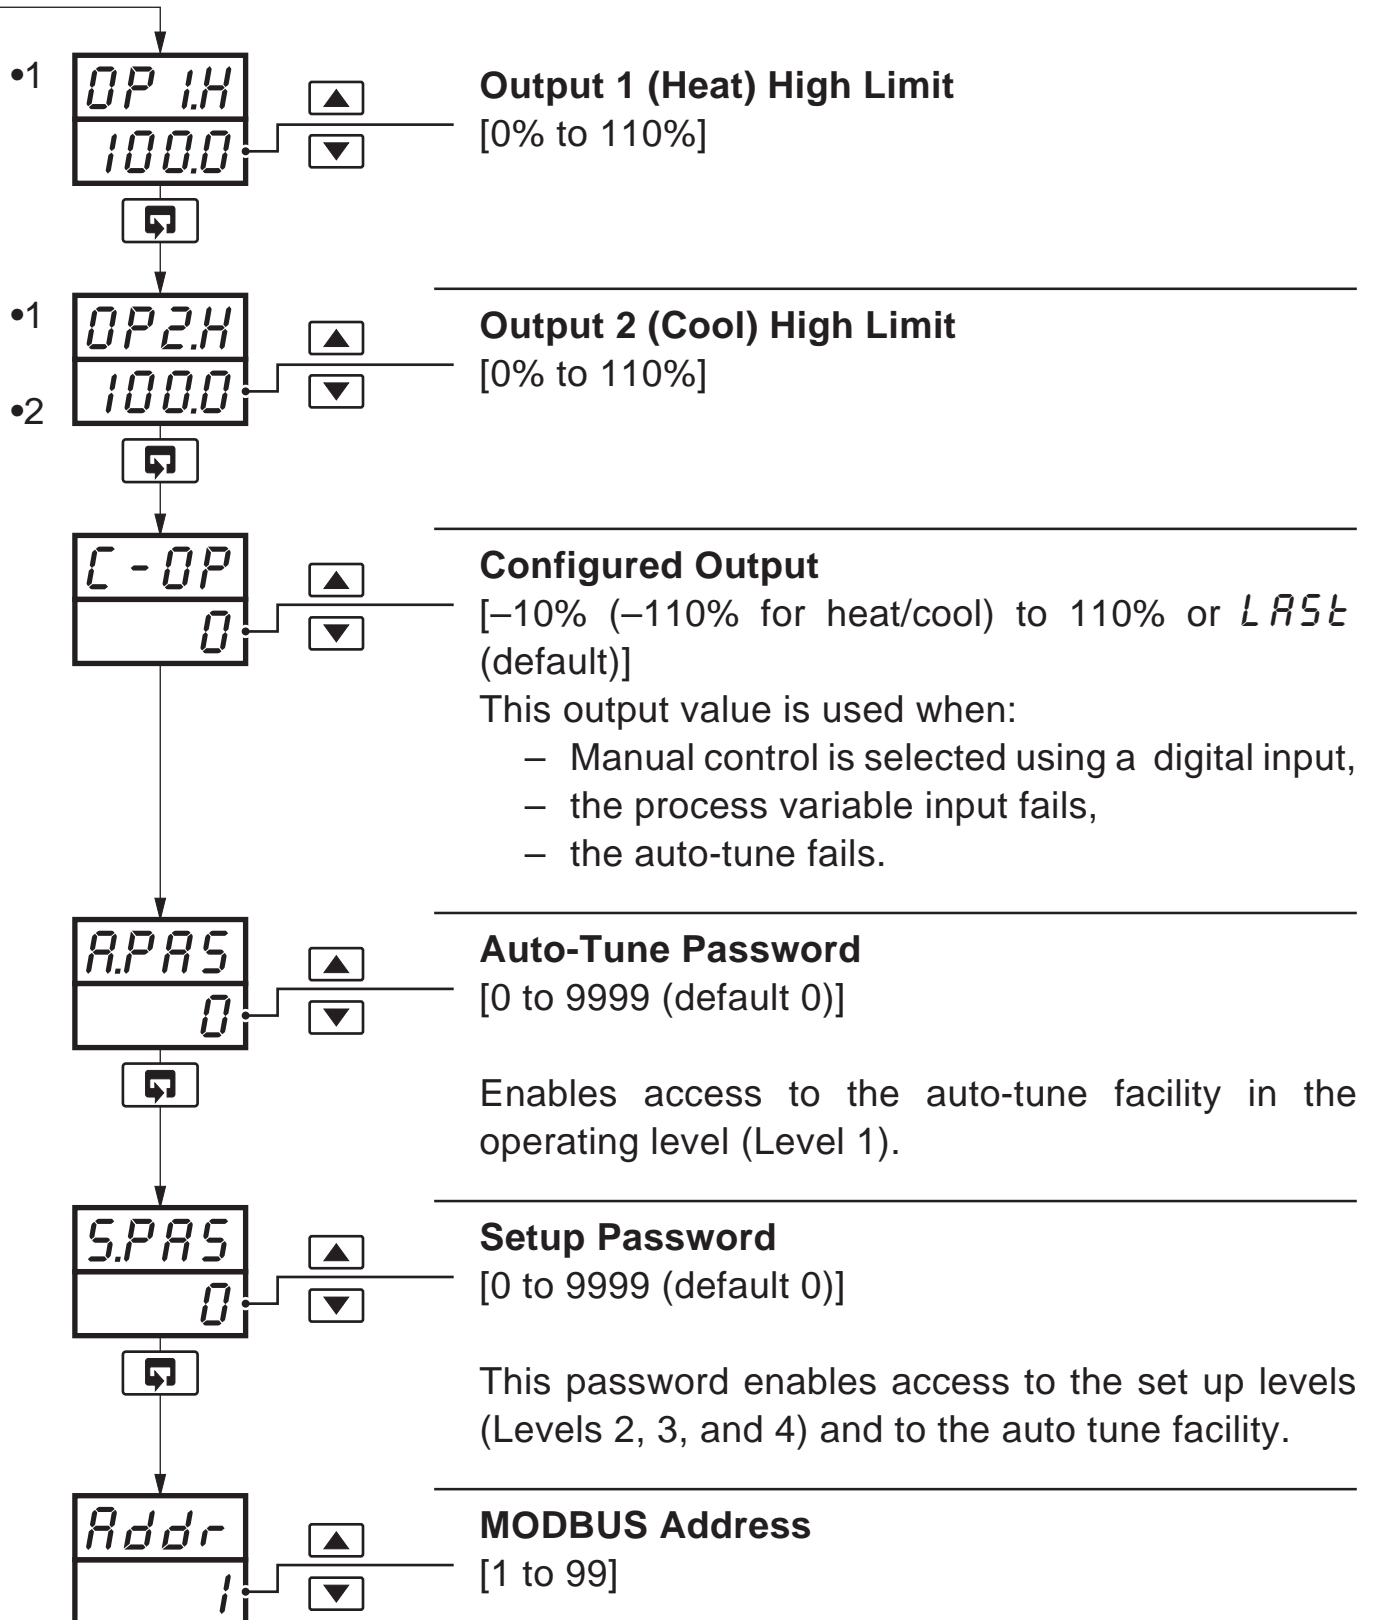...4.4 Ranges and Passwords (Level 6)




This frame allows the MODBUS address to be set.

- 1 This value only applies in automatic mode.
The low limit is automatically set to 0.0% (-10% for analog outputs).
- 2 Only displayed if a heat/cool hardware configuration is selected.





5 INSTALLATION

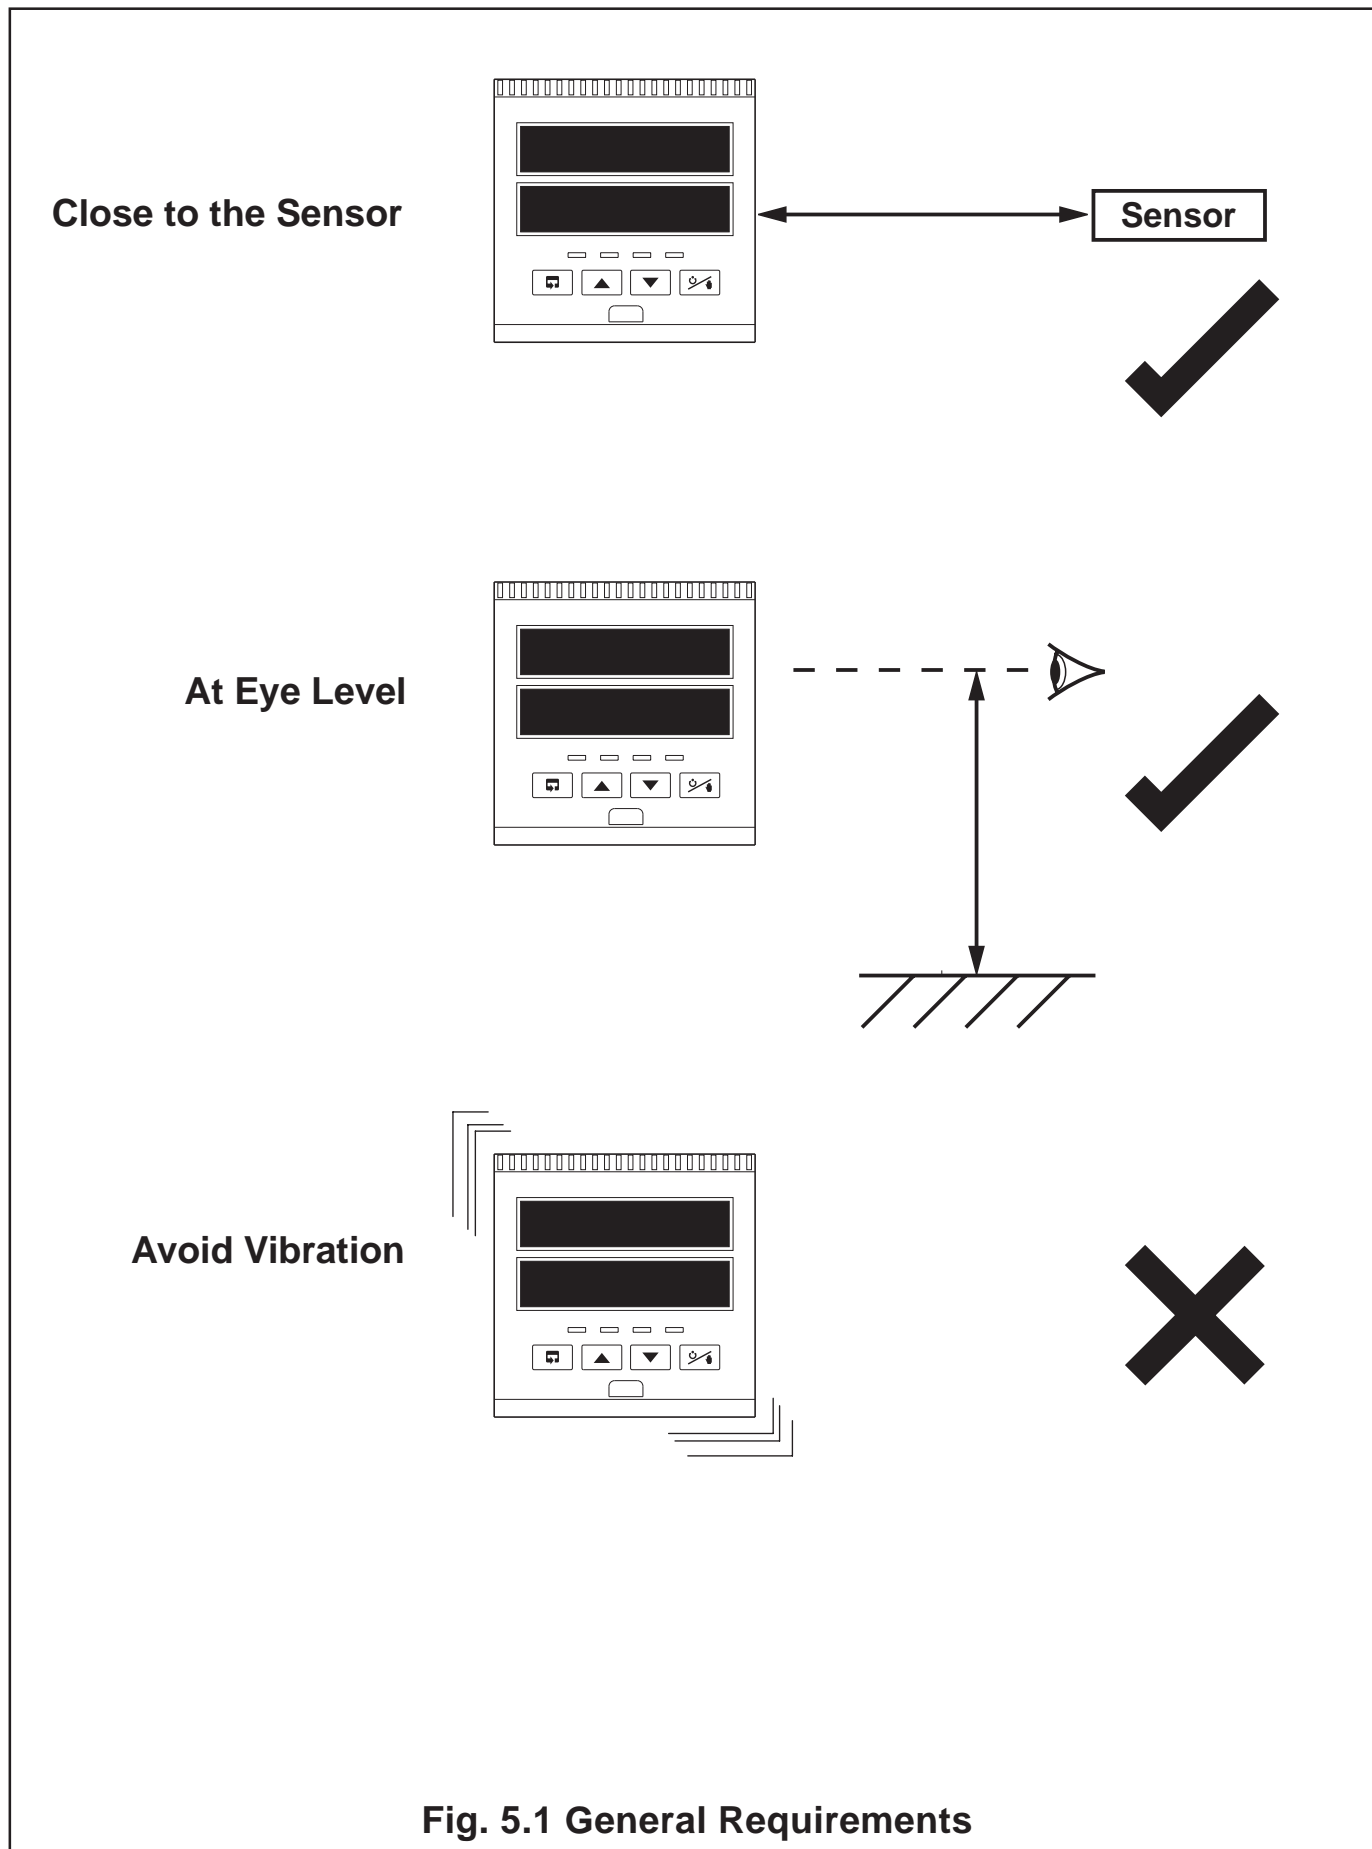5.1 Siting – Figs. 5.1 and 5.2






...5.1 Siting – Figs. 5.1 and 5.2

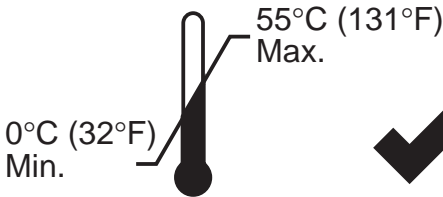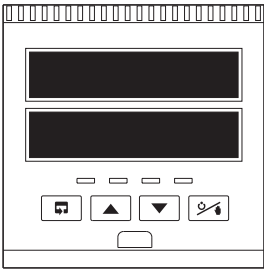


Temperature Limits

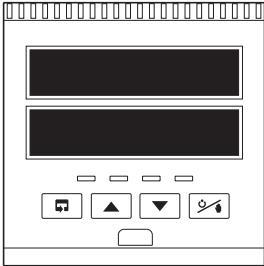Humidity Limits



0 to 90% RH

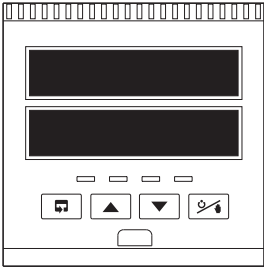

IP66/NEMA-4X
(front panel)

IP20
(rear)

Environmental Limits

Use Screened/
Grounded Cable



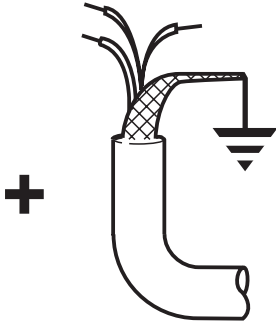


Fig. 5.2 Environmental Requirements

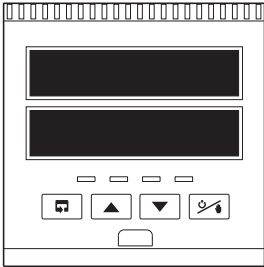


5.2 Mounting – Figs. 5.3 and 5.4

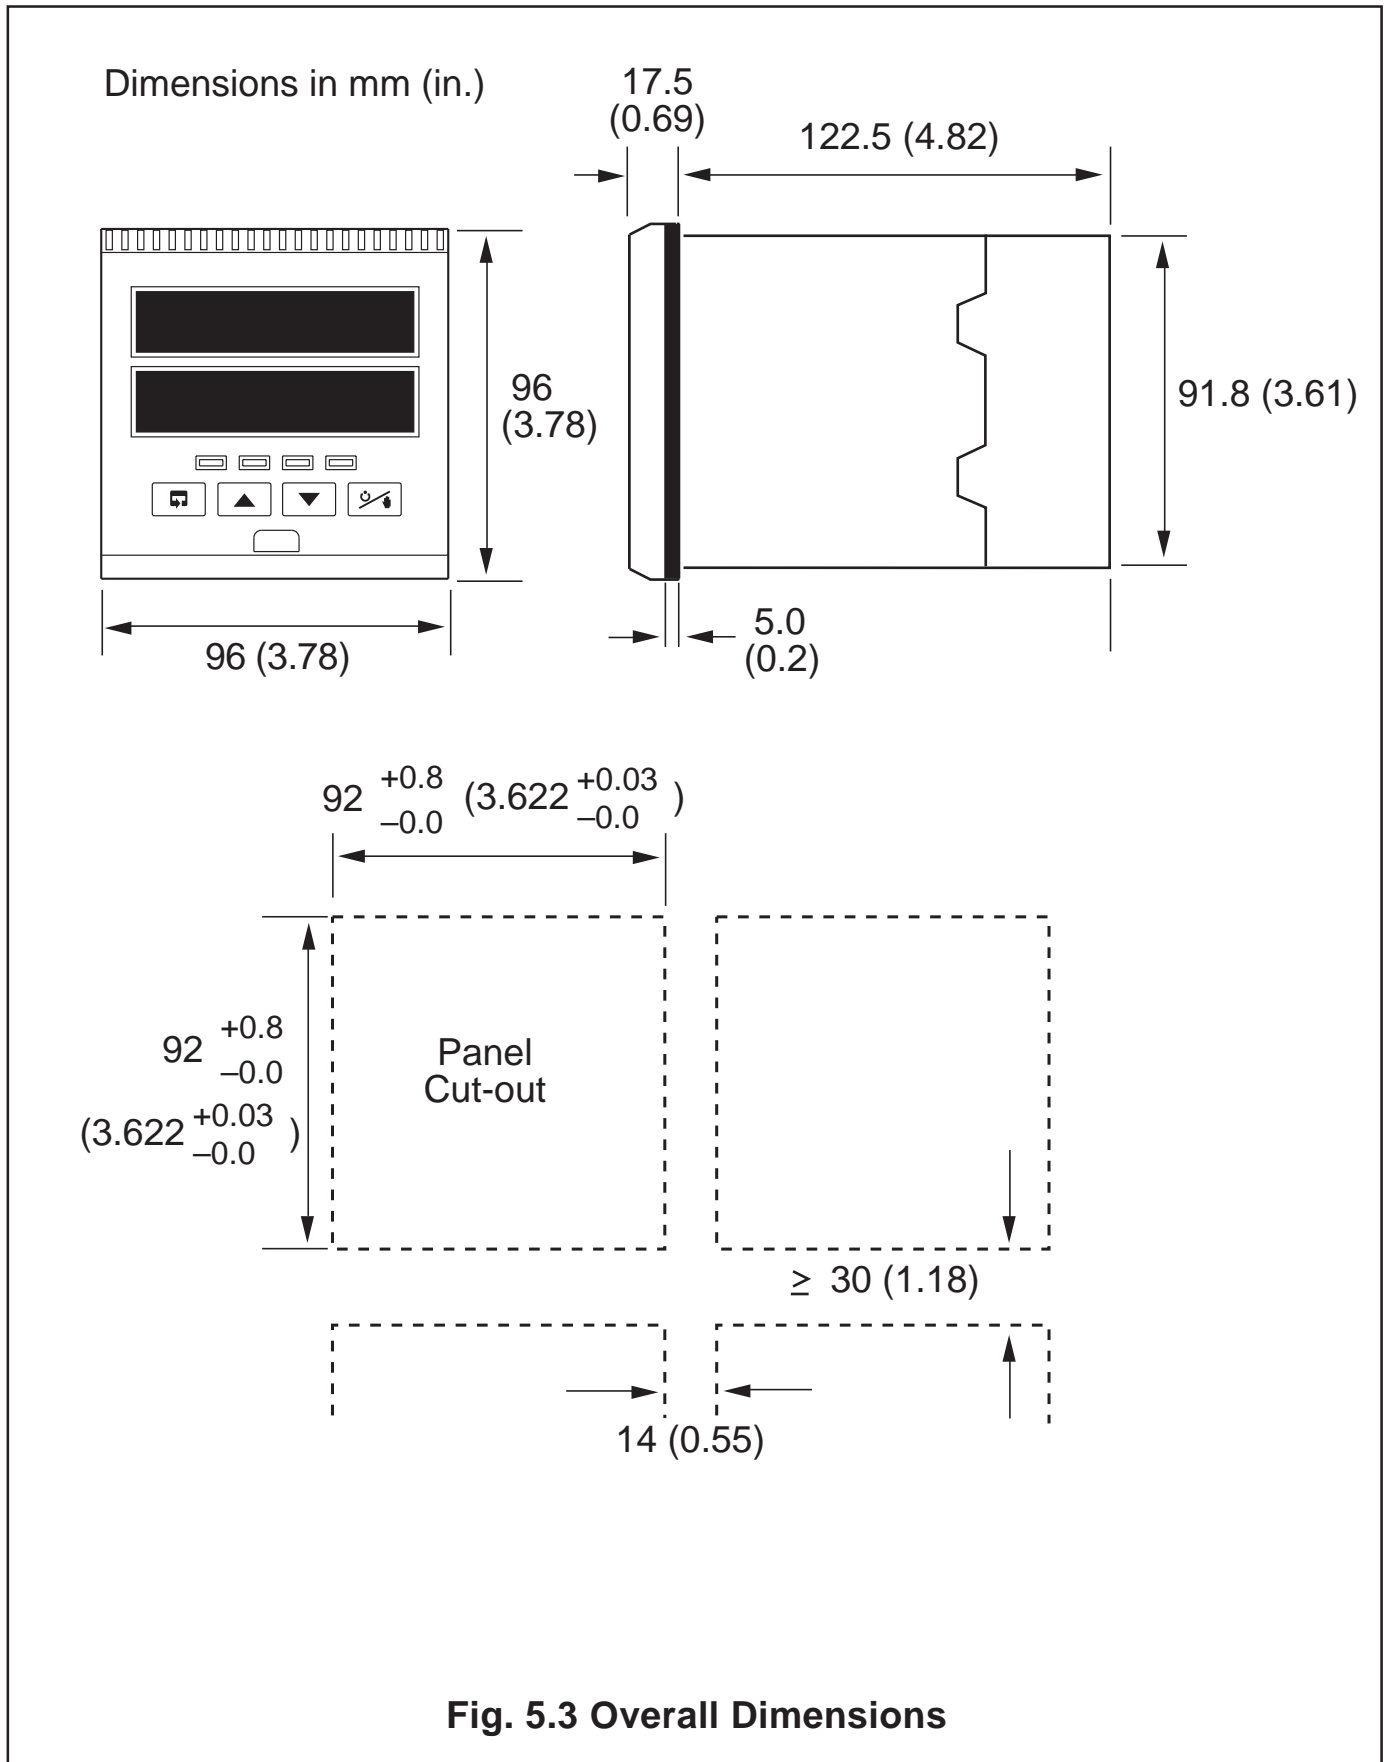The instrument is designed for panel mounting (see Fig. 5.4). Overall dimensions are shown in Fig. 5.3.





...5.2 Mounting – Figs. 5.3 and 5.4

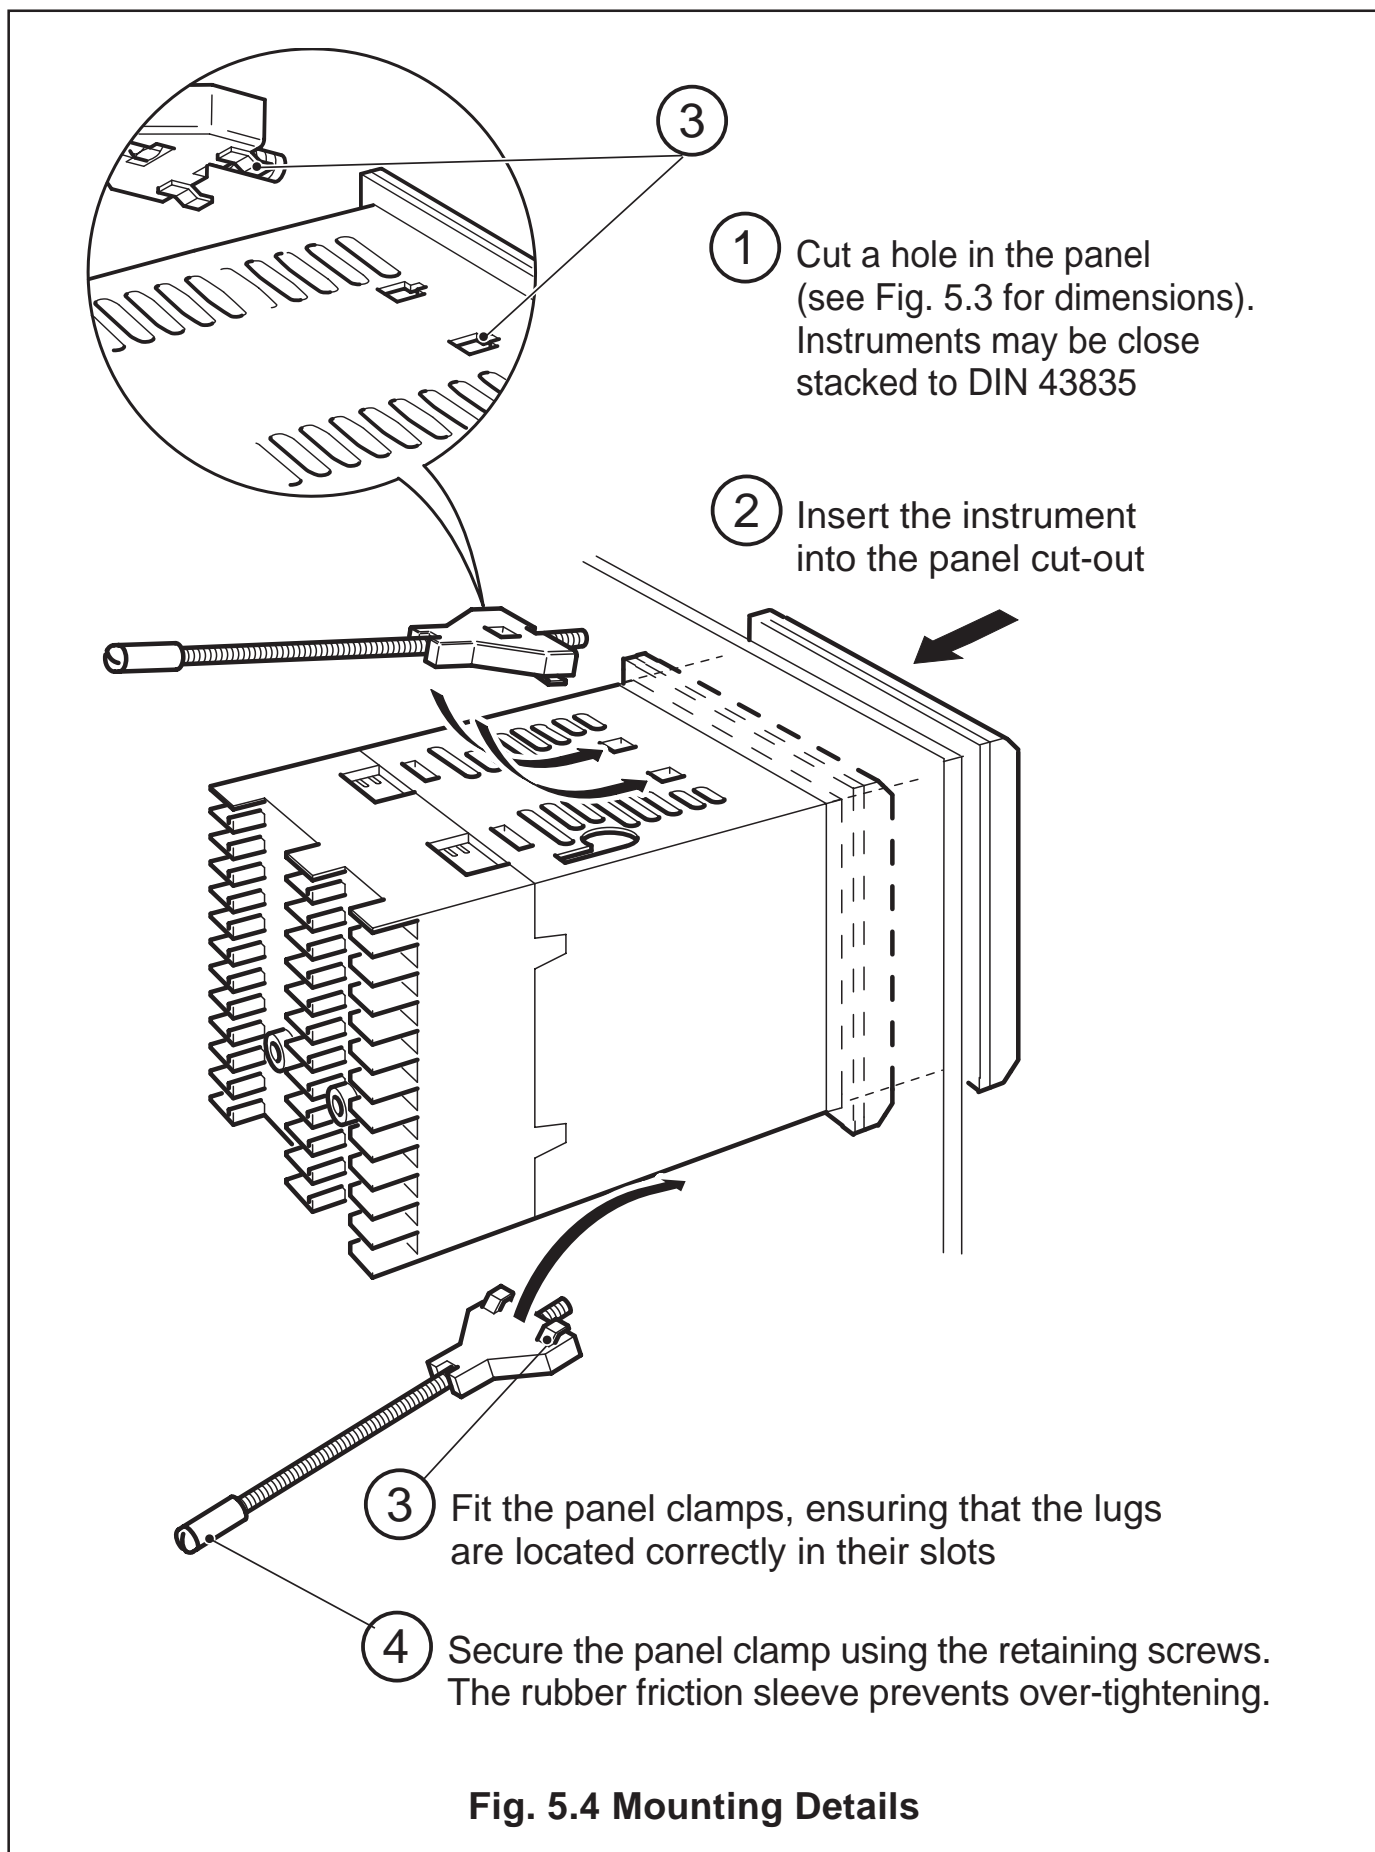





EC Directive 89/336/EEC

In order to meet the requirements of the EC Directive 89/336/EEC for EMC regulations, this product must not be used in a non-industrial environment.

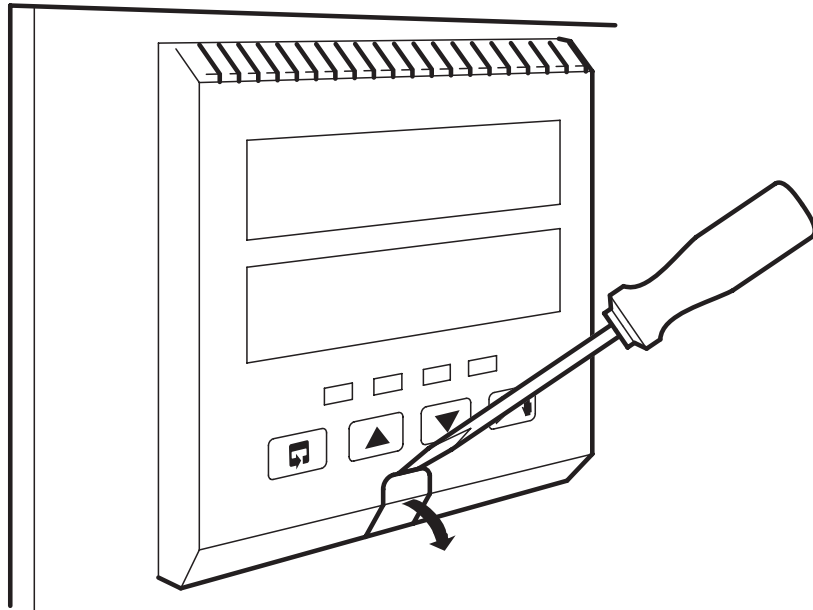5.3 Removing the Instrument from the Case – Fig. 5.5



① Release the jacking screw cover

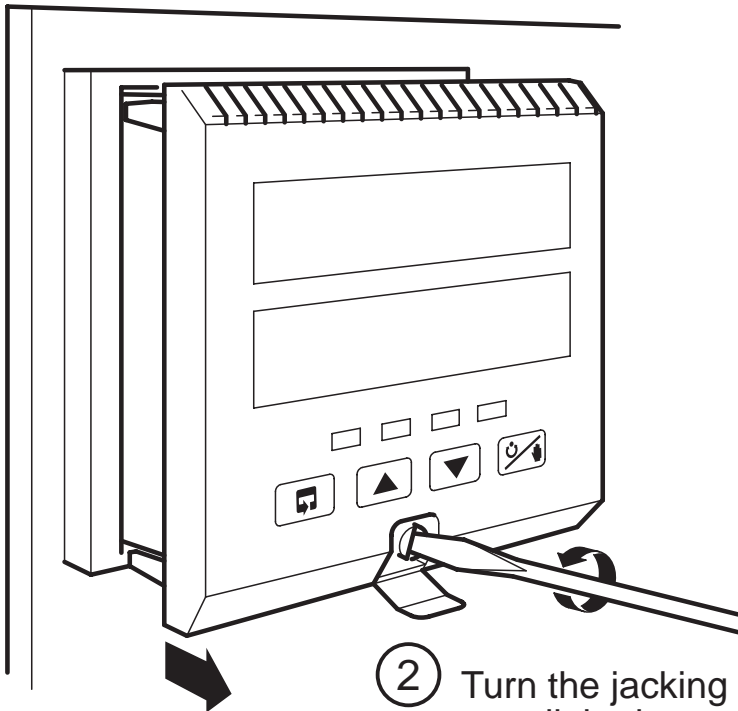

② Turn the jacking screw counter-clockwise to pull the instrument from the case

Fig. 5.5 Removing the Instrument from the Case



5.4 Electrical Connections – Figs. 5.6 and 5.7



Warning. Before making any connections, ensure that the power supply, any powered control circuits and high common mode voltages are switched off.



Note. If it is not possible to avoid strong electrical and magnetic fields, screened/grounded cables within earthed/grounded metal conduit must be used.

5.5 Relays, Arc Suppression and Outputs

5.5.1 Relay Contact Ratings

Relay contacts are rated at:

115/230V AC at 5A (non-inductive).

250V DC 25W max.

5.5.2 Arc Suppression – Fig. 5.6

Arc suppression components are fitted to relays 2 and 3 only. If relay 1 is required to switch inductive loads, the arc suppression component supplied must be fitted across the contacts used.

5.5.3 Logic Output

18V DC at 20mA.

Min load 900Ω.

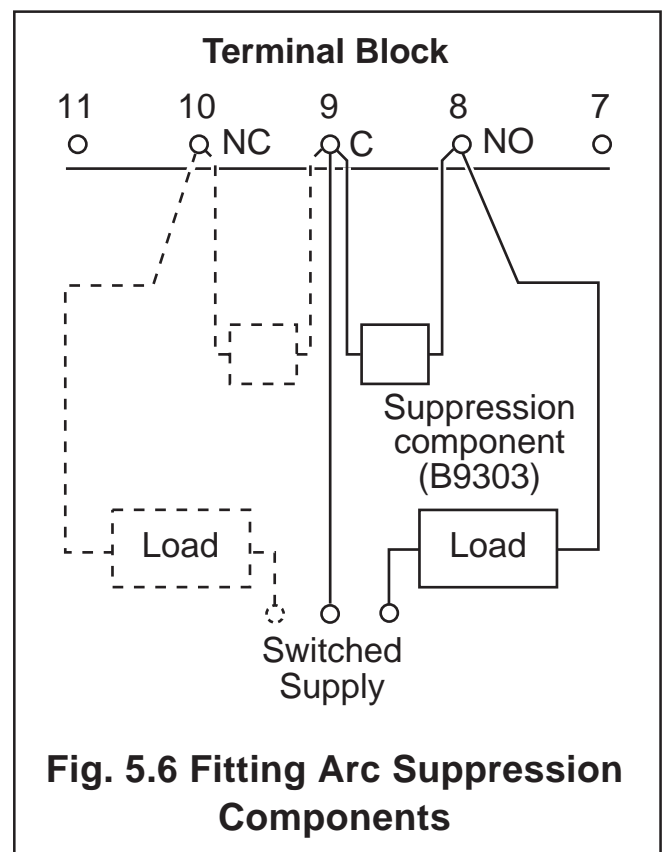
Isolated from inputs (not isolated from analog Output 1), dielectric strength – 500V d.c. for 1 minute.

5.5.4 Control or Retransmission Analog Outputs

Max. load 15V (750Ω at 20mA).


Analog O/P 1 – Isolated from inputs (not isolated from logic Output), dielectric strength – 500V d.c. for 1 minute.

Analog O/P 2 – Non-isolated.





...5 INSTALLATION

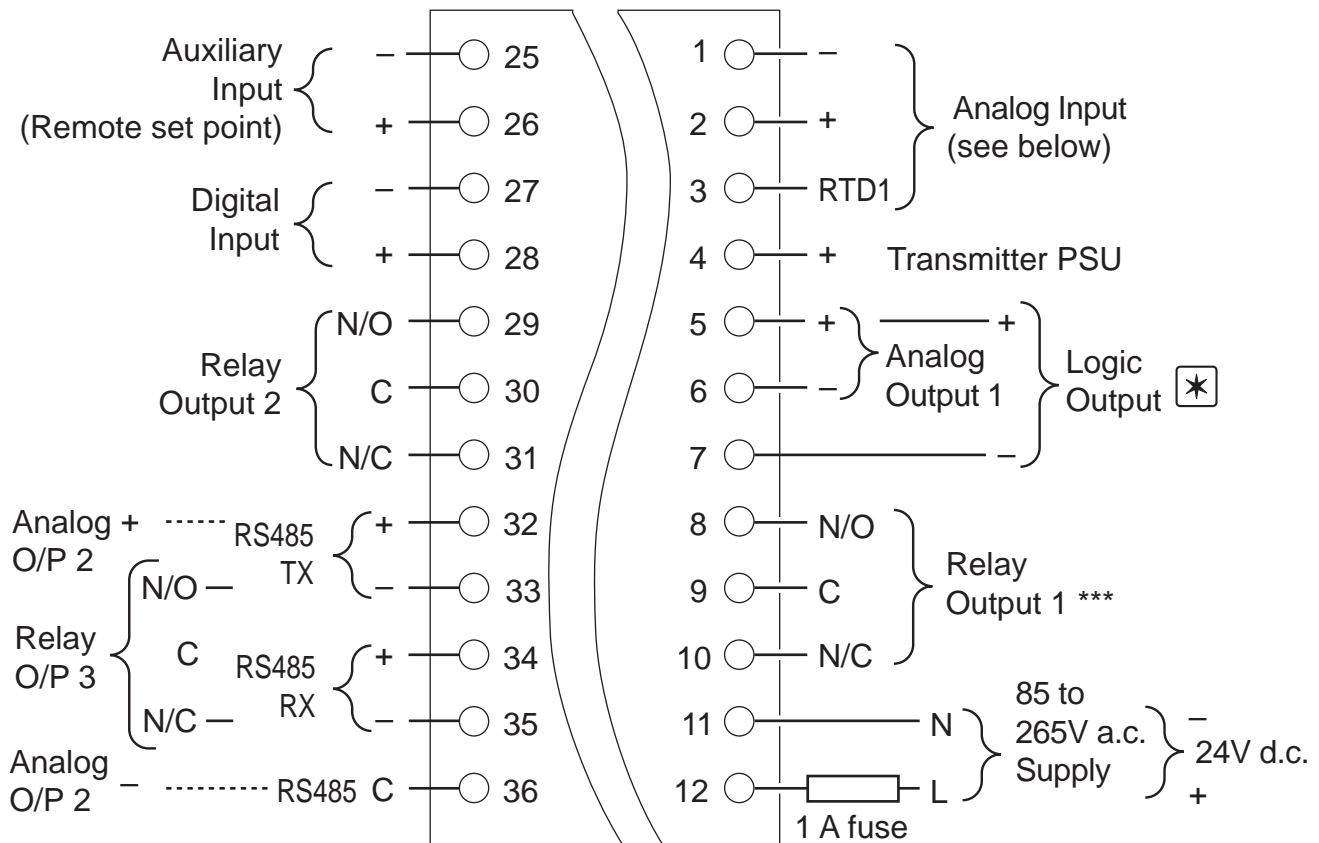

*** Note.** Analog Output 1 and the logic output use a common positive terminal, capable of driving both outputs simultaneously.

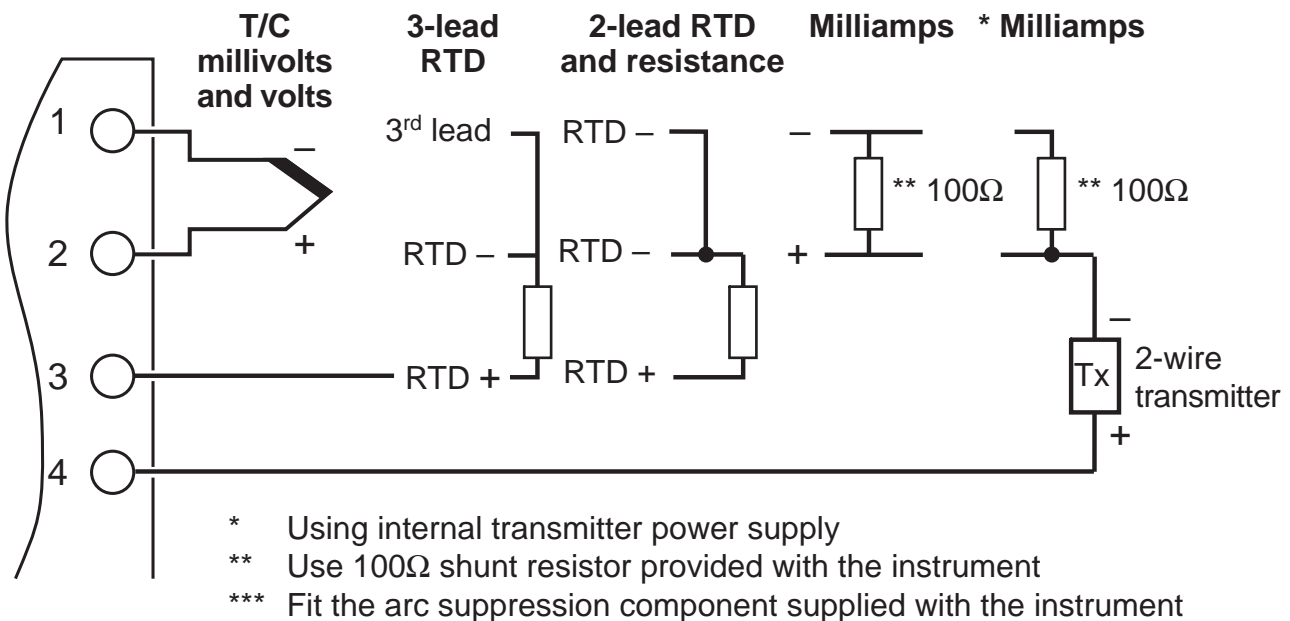


Fig. 5.7 Electrical Connections




CUSTOMER CONFIGURATION LOG

		LEU6 CnFG		
LEU5 CnFG		EnGH 100.0		
AbCd ----		EnGL 0.0		
EFCH ----		rt 1H 100.0		SP-3 30.0
JPLn ----		rt 1L 0.0		SP-4 40.0
PrSt ----		rt 2H 200.0		OP 1H 100
		rt 2L 0.0		OP 2H 100
		SP-H 100.0		C-OP 0
		SP-L 0.0		RPAS 0
		SP-1 10.0		SPAS 0
		SP-2 20.0		Addr 1

Standard settings are shown in the lower display

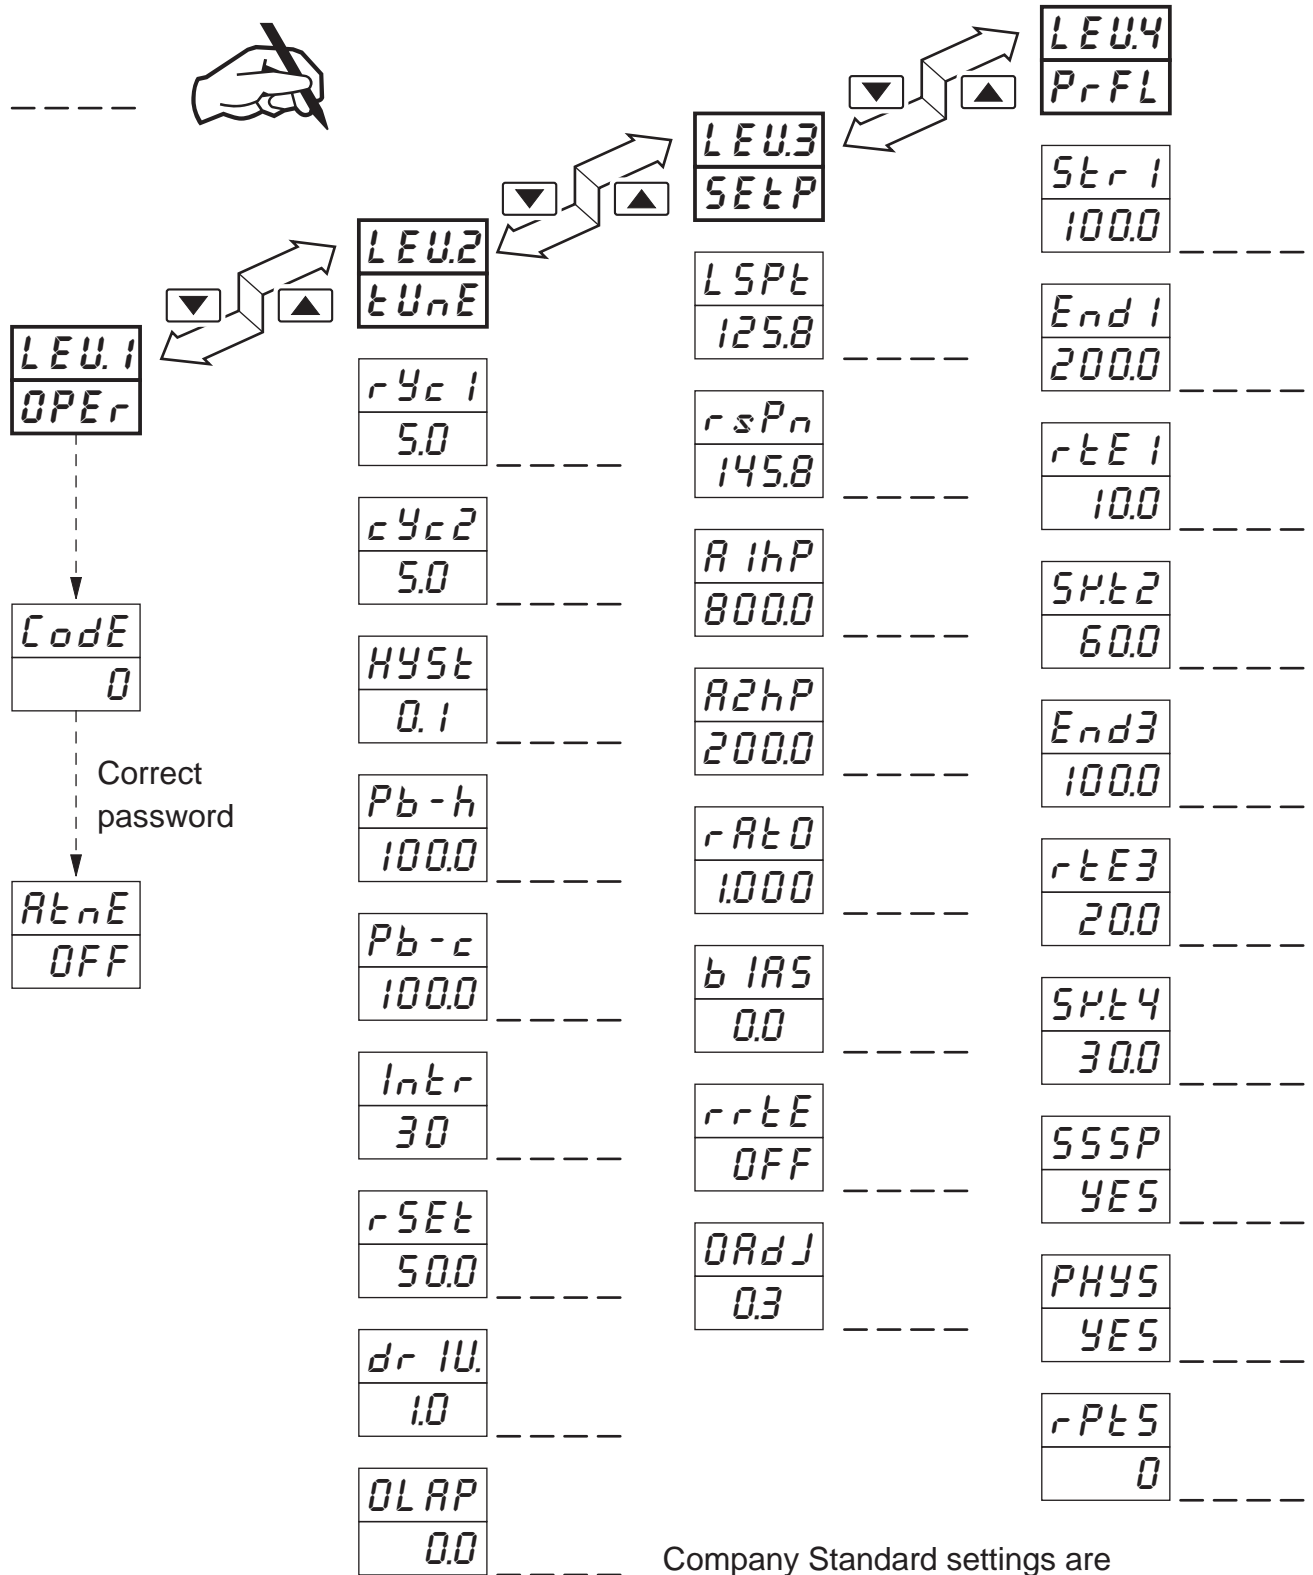CUSTOMER SETUP LOG



Instrument Serial Number: _____



OMEGAnet® On-Line Service
<http://www.omega.com>

Internet e-mail
info@omega.com

Servicing North America:

USA:

ISO 9001 Certified

One Omega Drive, Box 4047
Stamford, CT 06907-0047
Tel: (203) 359-1660
e-mail: info@omega.com

FAX: (203) 359-7700

Canada:

976 Bergar
Laval (Quebec) H7L 5A1
Tel: (514) 856-6928
e-mail: info@omega.ca

FAX: (514) 856-6886

For immediate technical or application assistance:

USA and Canada: Sales Service: 1-800-826-6342 / 1-800-TC-OMEGASM
Customer Service: 1-800-622-2378 / 1-800-622-BESTSM
Engineering Service: 1-800-872-9436 / 1-800-USA-WHENSM
TELEX: 996404 EASYLINK: 62968934 CABLE: OMEGA

**Mexico and
Latin America:**

Tel: (95) 800-826-6342
En Español: (95) 203-359-7803

FAX: (95) 203-359-7807
e-mail: espanol@omega.com

Servicing Europe:

Benelux:

Postbus 8034, 1180 LA Amstelveen, The Netherlands
Tel: (31) 20 6418405
Toll Free in Benelux: 0800 0993344
e-mail: nl@omega.com

FAX: (31) 20 6434643

Czech Republic:

ul. Rude armady 1868, 733 01 Karvina-Hranice
Tel: 420 (69) 6311899
Toll Free: 0800-1-66342

FAX: 420 (69) 6311114
e-mail: czech@omega.com

France:

9, rue Denis Papin, 78190 Trappes
Tel: (33) 130-621-400
Toll Free in France: 0800-4-06342
e-mail: france@omega.com

FAX: (33) 130-699-120

Germany/Austria:

Daimlerstrasse 26, D-75392 Deckenpfronn, Germany
Tel: 49 (07056) 3017
Toll Free in Germany: 0130 11 21 66
e-mail: info@omega.de

FAX: 49 (07056) 8540

United Kingdom:

ISO 9002 Certified

One Omega Drive, River Bend Technology Centre
Northbank, Irlam, Manchester
M44 5EX, United Kingdom
Tel: 44 (161) 777-6611
Toll Free in the United Kingdom: 0800-488-488
e-mail: info@omega.co.uk

FAX: 44 (161) 777-6622

It is the policy of OMEGA to comply with all worldwide safety and EMC/EMI regulations that apply. OMEGA is constantly pursuing certification of its products to the European New Approach Directives. OMEGA will add the CE mark to every appropriate device upon certification.

The information contained in this document is believed to be correct, but OMEGA Engineering, Inc. accepts no liability for any errors it contains, and reserves the right to alter specifications without notice.

WARNING: These products are not designed for use in, and should not be used for, patient-connected applications.

Where Do I Find Everything I Need for Process Measurement and Control? OMEGA...Of Course!

TEMPERATURE

- ☑ Thermocouple, RTD & Thermistor Probes, Connectors, Panels & Assemblies
- ☑ Wire: Thermocouple, RTD & Thermistor
- ☑ Calibrators & Ice Point References
- ☑ Recorders, Controllers & Process Monitors
- ☑ Infrared Pyrometers

PRESSURE, STRAIN AND FORCE

- ☑ Transducers & Strain Gauges
- ☑ Load Cells & Pressure Gauges
- ☑ Displacement Transducers
- ☑ Instrumentation & Accessories

FLOW/LEVEL

- ☑ Rotameters, Gas Mass Flowmeters & Flow Computers
- ☑ Air Velocity Indicators
- ☑ Turbine/Paddlewheel Systems
- ☑ Totalizers & Batch Controllers

pH/CONDUCTIVITY

- ☑ pH Electrodes, Testers & Accessories
- ☑ Benchtop/Laboratory Meters
- ☑ Controllers, Calibrators, Simulators & Pumps
- ☑ Industrial pH & Conductivity Equipment

DATA ACQUISITION

- ☑ Data Acquisition & Engineering Software
- ☑ Communications-Based Acquisition Systems
- ☑ Plug-in Cards for Apple, IBM & Compatibles
- ☑ Datalogging Systems
- ☑ Recorders, Printers & Plotters

HEATERS

- ☑ Heating Cable
- ☑ Cartridge & Strip Heaters
- ☑ Immersion & Band Heaters
- ☑ Flexible Heaters
- ☑ Laboratory Heaters

ENVIRONMENTAL

MONITORING AND CONTROL

- ☑ Metering & Control Instrumentation
- ☑ Refractometers
- ☑ Pumps & Tubing
- ☑ Air, Soil & Water Monitors
- ☑ Industrial Water & Wastewater Treatment
- ☑ pH, Conductivity & Dissolved Oxygen Instruments