

omega.com®

ΩOMEGA®

RH820, RH820U USB & DC Power RH820W Wireless Hydro Thermometer


INSTRUCTION
SHEET

M4740/0109

Shop online at: omega.com e-mail: info@omega.com
For latest product manuals: omegamanual.info

MADE IN TAIWAN

1 YEAR
WARRANTY

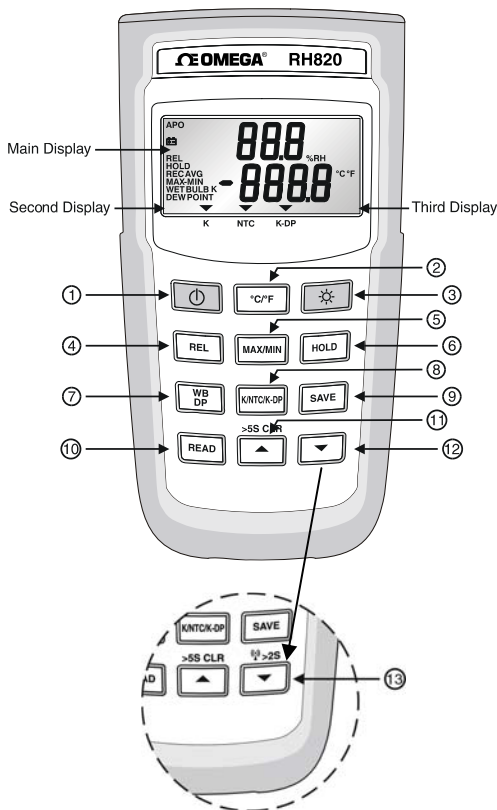

(820W)

INTRODUCTION

The instrument hereafter referred to as “the Meter” is a battery powered meter that measures relative humidity and temperature. Through a few easy to use controls, the Meter displays three different temperature points of the air surrounding the meter’s sensor: ambient, wet bulb, and dew point.

SAFETY INFORMATION

WARNING

To avoid electrical shock, do not use this instrument when working voltages at the measurement surface over 24V AC or DC.

WARNING

To avoid damage or burns, do not make temperature measurement in microwave ovens.

CAUTION

Repeated sharp flexing can break the thermocouple leads. To prolong lead life, avoid sharp bends in the leads, especially near the connector. Do not immerse the hygrometer sensor head into liquids since this causes permanent damage to the sensor.

FEDERAL COMMUNICATIONS COMMISSION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Shielded interface cables must be used in order to comply with emission limits.

Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

WIRELESS NOTE

Wireless receiver must keep a distance at least 40cm from the meter and meter to meter distance must be at least 30cm.

SPECIFICATIONS

ELECTRICAL

Temperature Scale: Celsius or Fahrenheit user-selectable.

Measurement Range:

K-TYPE -50°C to 1000°C, (-50°F to 1832°F)

Resolution: 0.1°C or 0.2°F

Accuracy: Accuracy is specified for operating temperatures over the range of 18°C to 28°C (64°F to 82°F), for 1 year, not including thermocouple error.

±(0.1% rdg + 1°C) on -50°C to 1000°C

±(0.1% rdg + 2°F) on -50°F to 1832°F

±(0.05% rdg + 1.4°F) -58°F to -328°F

Sensor: Thermistor temperature sensor

Range: 0°C to 60°C, (32°F to 140°F)

Resolution: 0.1°C/°F

Accuracy:

±2°C on 0°C to 10°C

±0.5°C on 10°C to 45°C

±2°C on 45°C to 60°C

±4°F on 32°F to 50°F

±1°F on 50°F to 113°F

±4°F on 113°F to 140°F

RELATIVE HUMIDITY

Sensor: Capacitive Humidity Sensor

Range: 0% to 100% RH

Accuracy:

±2.5% at 25°C (77°F), 10% to 90% RH

±5% at 25°C (77°F), 0% to 10% RH, 90% to 100% RH

Sensor Response Time for 90% of Total Range: 60sec typical.

Sensor Hysteresis(excursion of 10% to 90% to 10% RH): ±1%RH typical.

Temperature Coefficient:

0.1 times the applicable accuracy specification per °C from 0°C to 18°C and 28°C to 50°C (32°F to 64°F and 82°F to 122°F).

Input Protection:

24V dc or 24V ac rms maximum input voltage on any combination of input pins.

Input Connector: Accepts standard miniature thermocouple connectors (flat blades spaced 7.9mm, center to center).

GENERAL

Display: 5 digit liquid crystal display (LCD).

Overload: “----.” or “OL” is display.

Battery: 1.5V x 4 PCS (SIZE AAA) UM-4 R03.

Battery Life: 200 hours typical with carbon zinc battery.

Reading Rate: 1 time per second.

Auto power off: 15 minutes, press power key to resume operation.

Dimensions: 160mm (H) x 83mm (W) x 38mm (D)


Weight: Approx. 230g including batteries.

Supplied Wire: 4 feet type “K” thermocouple bead wire (PFA tape insulated). Maximum insulation temperature 260°C (500°F). Wire accuracy ±2.2°C or ±0.75% of reading (whichever is greater) from 0°C to 800°C.

Back Side: (820U)

1. USB Port

2. DC power JACK (12V)



ENVIRONMENTAL

Ambient Operating Ranges:

0°C to 50°C (32°F to 122°F) <80% R.H.

Storage Temperature:

-20°C to 60°C (-4°F to 140°F) <70% R.H.

☎ **Wireless Features:** (820W)

Frequency range: 910~920MHz

Low current consumption less than 1mA

The transmitting distance can reach 25M without magnetic interference.

OPERATING INSTRUCTIONS

1. “⏻” Power Switch

The “⏻” key turns the thermometer on or off. In the SET mode cannot be powered off. Exit SET mode to power off.

APO function mode

Press “⏻” power key for more than 4 seconds to disable the auto-power function. The display will show “APO OFF”.

2. “°C/°F” Selecting the Temperature Scale

Readings are displayed in either degrees Celsius(°C) or degrees Fahrenheit (°F). When the thermometer is turned on, it is set to the temperature scale that was in use when the thermometer was last turned off. To change the temperature scale, press the “°C/°F” key.

3. “☀” Button

Press the “☀” key to trigger on the backlight function, press the “☀” key again to cancel the backlight function. The backlight will switch-off automatically after 30 seconds.

4. “REL” Button

Press the “REL” key to enter Relative mode, zero the display, and store the displayed Reading as a reference value and annunciator REL is displayed. Press “REL” key again to exit the relative mode. In this mode, press

“HOLD” key to stop reading, all values are frozen, press “HOLD” key again to restart reading.

5. “MAX/MIN” Button

Press “MIN/MAX” key to enter the MIN/MAX recording mode and REC shows on the display. The beeper emits a tone when a new minimum or maximum measurement is recorded. Press “MIN/MAX” key again to cycle through the current readings:
MAX: The highest measurement recorded.
MIN: The lowest measurement recorded.
MAX-MIN: The difference of the highest and the lowest measurement.
AVG: The average values of the measurements.

Press “MIN/MAX” key over two seconds to exit the function. In this mode, press “HOLD” key to stop recording, all values are frozen, press “HOLD” key again to restart recording. In this mode, the APO function and other keys are disabled, excluding “HOLD” and Back-light keys. Press and hold down the “MAX/MIN” key for more than 2 seconds to exit the MAX/MIN function.

6. “HOLD” Button

Press the “HOLD” key to enter the data hold mode, the “HOLD” annunciator is displayed at the center-left of display. When data hold mode is selected, the meter held the present readings and stops all further measurements. Press the “HOLD” key again to cancel data hold mode, causing meter to resume taking measurements.

7. “WB/DP” Button

In the NTC data Mode, the Meter displays ambient temperature when first turned on. To display wet bulb (WB) temperature, press “WB/DP” key once. Press the “WB/DP” again to switch to dew point (DP) temperature. Press “WB/DP” a third time returns the Meter to ambient temperature.

8. “K/NTC/K-DP” Button

Press the “K/NTC/K-DP” key, the meter can cycle through “K-TYPE”, “NTC”, “K-DP”.
※ K-DP = K-TYPE temperature minutes Dew point temperature.

9. “SAVE” Button

The save function stores the %RH, K-TYPE, NTC, Wet bulb, Dew point data in a nonvolatile memory. Press the “SAVE” key to save the current data, the word SAVE is displayed to indicate the data are saved. The build in memory can store up to 256 data.

10. “READ”, “▲”, “▼” Button

To recall the readings from memory, press “READ” key. To check the memorized data just to press “▲” or “▼” until the desired memorized data is displayed. To return the meter to normal operation, press “READ” key again.

※ CLR SAVE DATA:

Pressing the “▲” key for more than 5 seconds to clears all the saved data in memory. And lower display

show “Clr” about 2 second.

11. WIRELESS MODE: (820W)

Press the “(📶)” key for more than two seconds to start wireless function. Press the “(📶)” key again for another two seconds to stop wireless function. The wireless mode will shut down if there is no wireless signal for two minutes.

To SET CH/ID to 00,00, press the “▼” key and “(📶)” power key for more than 6 seconds with the meter powered down. The meter will set channel and ID to 00,00 status. The second display will show 00, which means that the channel and ID has been set to 00.

To check the channel and ID of the meter:

When the meter is off, press “°C/°F” key and “(📶)” for 5 seconds, LCD’s main display will show channel number, the second display will show ID number.

OPERATOR MAINTENANCE

WARNING

To avoid possible electrical shock, disconnect the thermocouple connectors from the thermometer before removing the cover.

Battery Replacement

- Power is supplied by 4pcs 1.5V (SIZE AAA) UM-4 R03.
- The “(🔋)” appears on the LCD display when replacement is needed. To replace battery remove screw from back of meter and lift off the battery cover.
- Remove the battery from battery contacts and replace.
- When not use for long time remove battery.
- Don’t keep in place with high Temp, or high humidity.

Cleaning

Periodically wipe the case with a damp cloth and detergent, do not use abrasives or solvents.

*Software operation manual is on the software disk.



OMEGAnet® On-Line Service omega.com	Internet e-mail info@omega.com
--	-----------------------------------

Servicing North America:

U.S.A.: OMEGA Engineering, Inc.
ISO 9001 Certified One Omega Drive, P.O. Box 4047
Stamford, CT 06907-0047 USA
Toll-Free: 1-800-826-6342 TEL: (203) 359-1660
FAX: (203) 359-7700 e-mail: info@omega.com

Canada: 976 Bergar, Laval (Quebec), Canada H7L 5A1
Toll-Free: 1-800-826-6342 TEL: (514) 856-6928
FAX: (514) 856-6886 e-mail: info@omega.ca

For immediate technical or application assistance:

U.S.A. and Canada: Sales Service: 1-800-826-6342/1-800-TC-OMEGA®
Customer Service: 1-800-622-2378 1-800-622-BEST®
Engineering Service: 1-800-872-9436/1-800-USA-WHEN®

Mexico: En Español: 001 (203) 359-7803 FAX: (001) 203-359-7807
info@omega.com.mx e-mail: espanol@omega.com

Servicing Europe:

Benelux: Managed by the United Kingdom Office
Toll-Free: 0800 099 3344 TEL: +31 20 347 21 21
FAX: +31 20 643 46 43 e-mail: sales@omega.nl

Czech Republic: Frystatska 184, 733 01 Karviná, Czech Republic
Toll-Free: 0800-1-66342 TEL: +420-59-6311899
FAX: +420-59-6311114 e-mail: info@omegashop.cz

France: Managed by the United Kingdom Office
Toll-Free: 0800 466 342 TEL: +33 (0) 161 37 29 00
FAX: +33 (0) 130 57 54 27 e-mail: sales@omega.fr

Germany/Austria: Daimlerstrasse 26, D-75392 Deckenpfronn, Germany
Tel: +49 (0)7056 9398-0 FAX: +49 (0)7056 9398-29
Toll Free in Germany: 0800 639 7678 e-mail: info@omega.de

United Kingdom: OMEGA Engineering Ltd.
ISO 9001 Certified One Omega Drive
River Bend Technology Centre, Northbank
Irlam, Manchester M44 5BD England
Toll-Free: 0800-488-488 TEL: +44 (0)161 777-6611
FAX: +44 (0)161 777-6622 e-mail: sales@omega.co.uk

It is the policy of OMEGA to comply with all worldwide safety and EMC/EMI regulations that apply. OMEGA is constantly pursuing certification of its products to the European New Approach Directives. OMEGA will add the CE mark to every appropriate device upon certification.

The information contained in this document is believed to be correct, but OMEGA Engineering, Inc. accepts no liability for any errors it contains, and reserves the right to alter specifications without notice.

WARNING: These products are not designed for use in, and should not be used for, human applications.

WARRANTY / DISCLAIMER

OMEGA ENGINEERING, INC. warrants this unit to be free of defects in materials and workmanship for a period of **13 months** from date of purchase. OMEGA’s WARRANTY adds an additional one (1) month grace period to the normal **one (1) year product warranty** to cover handling and shipping time. This ensures that OMEGA’s customers receive maximum coverage on each product.

If the unit malfunctions, it must be returned to the factory for evaluation. OMEGA’s Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective, it will be repaired or replaced at no charge. OMEGA’s WARRANTY does not apply to defects resulting from any action of the purchaser, including but not limited to mishandling, improper interfacing, operation outside of design limits, improper repair, or unauthorized modification. This WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of having been damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA’s control. Components which wear is not warranted, include but are not limited to contact points, fuses, and triacs.

OMEGA is pleased to offer suggestions on the use of its various products. However, OMEGA neither assumes responsibility for any omissions or errors nor assumes liability for any damages that result from the use of its products in accordance with information provided by OMEGA, either verbal or written. OMEGA warrants only that the parts manufactured by it will be as specified and free of defects. OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESS OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. LIMITATION OF LIABILITY: The remedies of purchaser set forth herein are exclusive, and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.

CONDITIONS: Equipment sold by OMEGA is not intended to be used, nor shall it be used: (1) as a “Basic Component” under 10 CFR 21 (NRC), used in or with any nuclear installation or activity; or (2) in medical applications or used on humans. Should any Product(s) be used in or with any nuclear installation or activity, medical application, used on humans, or misused in any way, OMEGA assumes no responsibility as set forth in our basic WARRANTY / DISCLAIMER language, and, additionally, purchaser will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the Product(s) in such a manner.

RETURN REQUESTS / INQUIRIES

Direct all warranty and repair requests / inquiries to the OMEGA Customer Service Department. BEFORE RETURNING ANY PRODUCT(S) TO OMEGA, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OMEGA’S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS). The assigned AR number

should then be marked on the outside of the return package and on any correspondence.

The purchaser is responsible for shipping charges, freight, insurance and proper packaging to prevent breakage in transit.

FOR WARRANTY RETURNS, please have the following information available BEFORE contacting OMEGA:

- Purchase Order number under which the product was PURCHASED,
- Model and serial number of the product under warranty, and
- Repair instructions and/or specific problems relative to the product.

FOR NON-WARRANTY

REPAIRS, consult OMEGA for current repair charges. Have the following information available BEFORE contacting OMEGA:

- Purchase Order number to cover the COST of the repair,
- Model and serial number of the product, and
- Repair instructions and/or specific problems relative to the product.

OMEGA’s policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering.

OMEGA is a registered trademark of OMEGA ENGINEERING, INC. © Copyright 2009 OMEGA ENGINEERING, INC. All rights reserved. This document may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without the prior written consent of OMEGA ENGINEERING, INC.

Where Do I Find Everything I Need for Process Measurement and Control? OMEGA...Of Course!

Shop online at omega.com

TEMPERATURE

- ☑ Thermocouple, RTD & Thermistor Probes, Connectors, Panels & Assemblies
- ☑ Wire: Thermocouple, RTD & Thermistor
- ☑ Calibrators & Ice Point References
- ☑ Recorders, Controllers & Process Monitors
- ☑ Infrared Pyrometers

PRESSURE, STRAIN AND FORCE

- ☑ Transducers & Strain Gages
- ☑ Load Cells & Pressure Gages
- ☑ Displacement Transducers
- ☑ Instrumentation & Accessories

FLOW/LEVEL

- ☑ Rotameters, Gas Mass Flowmeters & Flow Computers
- ☑ Air Velocity Indicators
- ☑ Turbine/Paddlewheel Systems
- ☑ Totalizers & Batch Controllers

pH/CONDUCTIVITY

- ☑ pH Electrodes, Testers & Accessories
- ☑ Benchtop/Laboratory Meters
- ☑ Controllers, Calibrators, Simulators & Pumps
- ☑ Industrial pH & Conductivity Equipment

DATA ACQUISITION

- ☑ Data Acquisition & Engineering Software
- ☑ Communications-Based Acquisition Systems
- ☑ Plug-in Cards for Apple, IBM & Compatibles
- ☑ Datalogging Systems
- ☑ Recorders, Printers & Plotters

HEATERS

- ☑ Heating Cable
- ☑ Cartridge & Strip Heaters
- ☑ Immersion & Band Heaters
- ☑ Flexible Heaters
- ☑ Laboratory Heaters

ENVIRONMENTAL MONITORING AND CONTROL

- ☑ Metering & Control Instrumentation
- ☑ Refractometers
- ☑ Pumps & Tubing
- ☑ Air, Soil & Water Monitors
- ☑ Industrial Water & Wastewater Treatment
- ☑ pH, Conductivity & Dissolved Oxygen Instruments