



CE



User's Guide

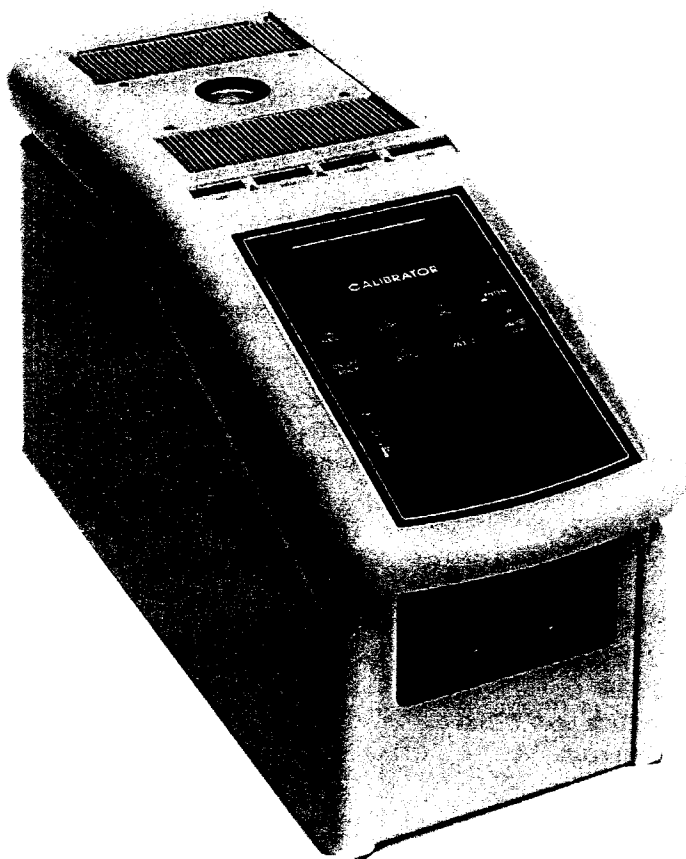

<http://www.omega.com>
e-mail: info@omega.com

M-2895
CL-740A, CL-750A and CL-760A



OMEGAnetSM On-Line Service
<http://www.omega.com>

Internet e-mail
info@omega.com

Servicing North America:

USA:
ISO 9001 Certified

One Omega Drive, Box 4047
Stamford, CT 06907-0047
Tel: (203) 359-1660
e-mail: info@omega.com

FAX: (203) 359-7700

Canada:

976 Bergar
Laval (Quebec) H7L 5A1
Tel: (514) 856-6928
e-mail: canada@omega.com

FAX: (514) 856-6886

For immediate technical or application assistance:

USA and Canada: Sales Service: 1-800-826-6342 / 1-800-TC-OMEGASM
Customer Service: 1-800-622-2378 / 1-800-622-BESTSM
Engineering Service: 1-800-872-9436 / 1-800-USA-WHENSM
TELEX: 996404 EASYLINK: 62968934 CABLE: OMEGA

**Mexico and
Latin America:**

Tel: (95) 800-TC-OMEGASM FAX: (95) 203-359-7807
En Español: (203) 359-1660 ext: 2203 e-mail: espanol@omega.com

Servicing Europe:

Benelux:

Postbus 8034, 1180 LA Amstelveen, The Netherlands
Tel: (31) 20 6418405 FAX: (31) 20 6434643
Toll Free in Benelux: 06 0993344
e-mail: nl@omega.com

Czech Republic:

Ostravska 767, 733 01 Karvina
Tel: 42 (69) 6311899 FAX: 42 (69) 6311114
e-mail: czech@omega.com

France:

9, rue Denis Papin, 78190 Trappes
Tel: (33) 130-621-400 FAX: (33) 130-699-120
Toll Free in France: 0800-4-06342
e-mail: france@omega.com

Germany/Austria:

Daimlerstrasse 26, D-75392 Deckenpfronn, Germany
Tel: 49 (07056) 3017 FAX: 49 (07056) 8540
Toll Free in Germany: 0130 11 21 66
e-mail: germany@omega.com

United Kingdom:
ISO 9002 Certified

25 Swannington Road,
Broughton Astley, Leicestershire,
LE9 6TU, England
Tel: 44 (1455) 285520
FAX: 44 (1455) 283912

P.O. Box 7, Omega Drive,
Irlam, Manchester,
M44 5EX, England
Tel: 44 (161) 777-6611
FAX: 44 (161) 777-6622

Toll Free in England: 0800-488-488

e-mail: uk@omega.com

It is the policy of OMEGA to comply with all worldwide safety and EMC/EMI regulations that apply. OMEGA is constantly pursuing certification of its products to the European New Approach Directives. OMEGA will add the CE mark to every appropriate device upon certification.

The information contained in this document is believed to be correct but OMEGA Engineering, Inc. accepts no liability for any errors it contains, and reserves the right to alter specifications without notice.

WARNING: These products are not designed for use in, and should not be used for, patient connected applications.

CONTENTS

Omega Calibrator Operator's Manual

	<i>page</i>
SAFETY AND INSTALLATION	
Declaration of Conformity	2
English	3
Français	4
Deutsch	5
Español	6
THE CALIBRATOR	7
Applications	7
Warning	8
Cleaning your Calibrator	8
Packing	8
Specification	9
Working conditions	10
THE FRONT PANEL	11
Front panel controls	12
When you switch on	15
Configure Menu	15
MANUAL MODE	16
PROGRAM MODE	17
Run Program	17
New Program	18
Program Running Display	19
Switch Test	20
Program Delete	21
Cooling Probe (Omega CL-740A and CL-750A only)	22
Water cooling (Omega CL-760A only)	22
After use	22
RS232 SERIAL INTERFACE	23
To Retrieve Test Results	23
To Retrieve a Program	23
TECHNICAL INFORMATION	24
General advice	24
General Fault finding	24
Replacement parts	25
Accessories	25
Inserts	
Omega CL-740A and Omega CL-760A	26
Omega CL-750A	27



Declaration of Conformity

Omega Units Omega CL-740A, Omega CL-760A and Omega CL-750A have been designed to comply with the following European Standards:

EN 50081-1:1992 Electromagnetic Compatibility; Generic emission standard.

EN 50082-1:1992 Electromagnetic Compatibility; Generic immunity standard
(Performance criterion B).

EN 61010-1:1993 Safety requirements for electrical equipment for measurement, control and laboratory use.

EN 61010-2-010:1995 Particular requirements for laboratory equipment for the heating of materials.

I have made all reasonable enquiries regarding the unit stated and its conformance to the following EU directives:

Low Voltage directive, 73/23/EEC and amendment 93/68/EEC, and

EMC Directive 89/336/EEC and amendments 91/263/EEC 92/31/EEC and 93/68/EEC.

To the best of my knowledge and belief these units conform to these directives.



This Declaration is controlled under an ISO 9001:1994 system certificated by BSI Quality Assurance, certificate number FM13585.

Introduction

Please read all the information in this booklet before using the unit.

Warning

HIGH TEMPERATURES ARE DANGEROUS: they can cause serious burns to operators and ignite combustible material.

Omega have taken great care in the design of these units to protect operators from hazards, but users should pay attention to the following points:

- **USE CARE AND WEAR PROTECTIVE GLOVES TO PROTECT HANDS;**
- **DO NOT** put hot objects on or near combustible objects;
- **DO NOT** operate the unit close to inflammable liquids or gases;
- **DO NOT** place any liquid directly in your unit;
- At all times **USE COMMON SENSE.**

Operator Safety

All users of Omega equipment must have available the relevant literature needed to ensure their safety.

It is important that only suitably trained personnel operate this equipment, in accordance with the instructions contained in this manual and with general safety standards and procedures. If the equipment is used in a manner not specified by Omega the protection provided by the equipment to the user may be impaired.

All Omega units have been designed to conform to international safety requirements and are fitted with an overtemperature cut-out. On some models, the cut-out is adjustable and should be set to suit the application. On all other models the cut-out is preset to protect the unit.

If a safety problem should be encountered, switch off at the mains socket and remove the plug from the supply.

Installation

1. All Omega units are supplied with a power cable. This may be integral or plug-in.
2. Before connecting the mains supply, check the voltage against the rating plate. Connect the mains cable to a suitable plug according to the table below. **Note that the unit must be earthed to ensure proper electrical safety.**

Connections	220/240V	110/120V
Live	Brown	Black
Neutral	Blue	White
Earth	Green/yellow	Green

The fused plug supplied with the mains lead for use in the UK is fitted with the following value fuse to protect the cable:

230V UK 10 AMP

The fuse in the unit protects the unit and the operator.

Note that units marked 230V on the rating plate work at 220V; units marked 120V work at 110V. In both cases, however, the heating rate will degrade by approximately 8%. The rating plate is on the rear of the unit.

3. Plug the mains cable into the socket on the rear of the unit.
4. Place the unit on a suitable bench or flat workspace, or in a fume cupboard if required, ensuring that the air inlet vents on the underside are free from obstruction.
5. Note that the following symbols may be next to the indicator lamps on the front panel of the units and have the following meanings:

-  : the power indicator
 : the heater indicator
 : the over-temperature indicator

6. Symbols on or near the power switch of the unit have the following meanings:

- I : mains switch On
 O : mains switch Off

After use

When you have finished heating samples, remember that parts of the unit – the tubes, blocks and associated accessories – may be very hot. Take the precautions listed earlier.

Guarantee

The unit is guaranteed against any defect in material or workmanship for the period specified on the enclosed guarantee card. This period is from the date of purchase, and within this period all defective parts will be replaced free of charge provided that the defect is not the result of misuse, accident or negligence. Servicing under this guarantee should be obtained from the supplier.

Notwithstanding the description and specification(s) of the units contained in the Operator's Manual, Omega hereby reserves the right to make such changes as it sees fit to the units or to any component of the units.

This Manual has been prepared solely for the convenience of Omega customers and nothing in this Instruction Book shall be taken as a warranty, condition or representation concerning the description, merchantability, fitness for purpose or otherwise of the units or components.

User maintenance

NOTE THAT THIS EQUIPMENT SHOULD ONLY BE DISMANTLED BY PROPERLY TRAINED PERSONNEL.

REMOVING THE SIDE, FRONT OR REAR PANELS EXPOSES POTENTIALLY LETHAL MAINS VOLTAGES.

THERE ARE NO USER MAINTAINABLE PARTS WITHIN THE EQUIPMENT.

In the unlikely event that you experience any problems with your unit which cannot easily be remedied, you should contact your supplier and return the unit if necessary. Please include any details of the fault observed and remember to return the unit in its original packing. Omega accept no responsibility for damage to units which are not properly packed for shipping: if in doubt, contact your supplier. See the De-contamination Certificate supplied with your unit.

1. Cleaning

Before cleaning your unit **ALWAYS** disconnect from the power supply and allow to cool below 50°C.

Your unit can be cleaned by wiping with a damp soapy cloth. Care should be exercised to prevent water from running inside the unit. Do not use abrasive cleaners.

2. Fuses

Your unit is protected by one or two fuses. These should only be changed by suitably qualified personnel.

If the fuses blow persistently, a serious fault is indicated and you may need to return the unit to your supplier for repair.

Introduction

Veuillez lire attentivement toutes les instructions de ce document avant d'utiliser l'appareil.

Avertissement

DANGER DE TEMPERATURES ELEVÉES : les opérateurs peuvent subir de graves brûlures et les matériaux combustibles risquent de prendre feu.

Omega a apporté un soin tout particulier à la conception de ces appareils de façon à assurer une protection maximale des opérateurs, mais il est recommandé aux utilisateurs de porter une attention spéciale aux points suivants :

- **PROCÉDER AVEC SOIN ET PORTER DES GANTS POUR SE PROTÉGER LES MAINS.**
- **NE PAS** poser d'objets chauds sur ou près de matériaux combustibles.
- **NE PAS** utiliser l'appareil à proximité de liquides ou de gaz inflammables.
- **NE PAS** verser de liquide directement dans l'appareil.
- **FAIRE TOUJOURS PREUVE DE BON SENS.**

Sécurité de l'opérateur

Tous les utilisateurs de produits Omega doivent avoir pris connaissance des manuels et instructions nécessaires à la garantie de leur sécurité.

Important : cet appareil doit impérativement être manipulé par un personnel qualifié et utilisé selon les instructions données dans ce document, en accord avec les normes et procédures de sécurité générales. Dans le cas où cet appareil ne serait pas utilisé selon les consignes précisées par Omega, la protection pour l'utilisateur ne serait alors plus garantie.

Tous les appareils Omega sont conçus pour répondre aux normes de sécurité internationales et sont dotés d'un coupe-circuit en cas d'excès de température. Sur certains modèles, ce coupe-circuit est réglable pour s'adapter à l'application désirée. Sur d'autres modèles, il est pré-réglée en usine pour assurer la protection de l'appareil.

Dans le cas d'un problème de sécurité, coupez l'alimentation électrique au niveau de la prise murale et enlevez la prise connectée à l'appareil.

Installation

1. Tous les appareils Omega sont livrés avec un câble d'alimentation qui peut être intégré à l'appareil ou à raccorder.
2. Avant de brancher l'appareil, vérifiez la tension requise indiquée sur la plaque d'identification. Raccordez le câble électrique à la prise appropriée en vous reportant au tableau ci-dessous. **Il est important que l'appareil soit relié à la terre pour assurer la protection électrique requise.**

Connexions 220/240 V 110/120 V

Phase	Marron	Noir
Neutre	Bleu	Blanc
Terre	Vert/jaune	Vert

Le fusible de la prise fournie avec le câble électrique pour une utilisation au Royaume-Uni est destiné à la protection du câble: 230 V Royaume-Uni 10 A

Le fusible à l'intérieur de l'appareil est destiné à assurer la protection de l'appareil et de l'opérateur.

Remarque : les appareils dont la plaque indique 230 V peuvent fonctionner sur 220 V, et ceux dont la plaque indique 120 V peuvent fonctionner sur 110 V. Dans les deux cas cependant, la capacité de chauffage diminuera d'environ 8 %. La plaque d'identification se trouve à l'arrière de l'appareil.

3. Raccordez le câble d'alimentation à la prise située à l'arrière de l'appareil.
4. Placez l'appareil sur un plan de travail ou surface plane, ou le cas échéant, dans une hotte d'aspiration, en s'assurant que les trous d'aération situés sous l'appareil ne sont pas obstrués.
5. Les symboles ci-dessous situés à côté des témoins lumineux sur la face avant de l'appareil ont la signification suivante :

 : témoin d'alimentation

 : témoin de chauffage

 : témoin d'excès de température

6. Les symboles situés sur ou à côté de l'interrupteur de l'appareil ont la signification suivante :

I : arrêt

O : marche

Après utilisation

Lorsque vous avez fini de chauffer les échantillons, n'oubliez pas que certaines parties de l'appareil - les éprouvettes, leurs supports et autres accessoires - risquent d'être très chaudes. Il est donc recommandé de toujours prendre les précautions citées plus haut.

Garantie

L'appareil est garanti contre tout défaut ou vice de fabrication pour la durée figurant sur la carte de garantie, à compter de la date d'achat de l'appareil. Au cours de cette période, toutes les pièces défectueuses seront remplacées gratuitement, dans la mesure où la défaillance n'est pas due à une mauvaise utilisation, un accident ou une négligence. Toute réparation sous garantie sera effectuée par le fournisseur.

Malgré la description et les spécifications de l'appareil données dans le manuel de l'utilisateur, Omega se réserve le droit d'effectuer les changements nécessaires à l'appareil ou à tout élément qui entre dans sa composition.

Ce manuel a été exclusivement rédigé à l'attention des clients de Omega, et aucun élément de ce guide d'instructions ne peut être utilisé comme garantie, condition ou représentation concernant la description, commercialisation, adaptation aux conditions d'utilisation ou autre des appareils ou de leurs composants.

Entretien utilisateur

IMPORTANT : CET APPAREIL NE PEUT ÊTRE DEMONTÉ QUE PAR DU PERSONNEL QUALIFIÉ.

LORSQUE LES PANNEAUX AVANT, ARRIÈRE ET LATÉRAUX SONT DÉMONTÉS, L'OPÉRATEUR EST EXPOSÉ À DES TENSIONS QUI PEUVENT ÊTRE MORTELLES.

CET APPAREIL NE CONTIENT AUCUN ÉLÉMENT QUI DEMANDE UN ENTRETIEN DE LA PART DE L'UTILISATEUR.

Dans le cas peu probable où votre appareil présente un défaut de fonctionnement auquel il est difficile de remédier, il est alors préférable de contacter votre fournisseur et, le cas échéant, de renvoyer le matériel. Veuillez inclure une description détaillée du problème constaté et retourner l'appareil dans son emballage d'origine. Omega ne sera pas tenu responsable des dommages subis par tout appareil dont l'emballage est inadéquat pour le transport. Pour plus de sûreté, contactez votre fournisseur. Voir le certificat de décontamination livré avec le produit.

1. Nettoyage

Avant de nettoyer l'appareil, assurez-vous TOUJOURS que le câble d'alimentation est déconnecté et laissez la température redescendre en dessous de 50 °C.

Utilisez un chiffon imprégné d'eau savonneuse pour nettoyer l'appareil. Veillez à ne pas introduire d'eau dans l'appareil. N'utilisez pas de produits abrasifs.

2. Fusibles

La protection de l'appareil est assurée par un ou deux fusibles dont le remplacement ne peut être effectué que par un personnel qualifié.

Si les fusibles sautent sans arrêt, il s'agit d'un problème sérieux. Nous vous conseillons dans ce cas de prendre contact avec votre fournisseur pour réparation.

Einleitung

Bitte lesen Sie diese Bedienungsanleitung komplett bevor Sie dieses Gerät benutzen.

Warnung

HOHE TEMPERATUREN SIND GEFÄHRLICH: sie können dem Bediener ernsthafte Verletzungen zufügen und brennbare Materialien können sich leicht entzünden.

Omega hat bei der Konstruktion dieses Gerätes sehr darauf geachtet, daß der Bediener vor Gefahren geschützt ist. Dennoch sollten Sie auf die folgenden Punkte achten:

- SEIEN SIE VORSICHTIG UND TRAGEN SIE SCHUTZHANDSCHUHE
- Legen Sie heiße Gegenstände NICHT auf oder in die Nähe von leicht brennbaren Materialien; vermeiden Sie Arbeiten in der Nähe von leicht entzündbaren Flüssigkeiten oder Gasen.
- Bringen sie KEINE Flüssigkeiten direkt in Ihr Gerät.
- Benutzen Sie immer den normalen Menschenverstand

Sicherheit des Anwenders

Alle Benutzer von Omega Geräten müssen Zugang zu der entsprechenden Literatur haben, um ihre Sicherheit zu gewähren.

Es ist wichtig, daß diese Geräte nur von entsprechend geschultem Personal betrieben werden, das die in dieser Gebrauchsanweisung enthaltenen Maßnahmen und allgemeine Sicherheitsbestimmungen und -vorschriften beachtet. Wenn das Gerät anders eingesetzt wird als vom Hersteller empfohlen, kann dies die persönliche Sicherheit des Anwenders beeinträchtigen. Die Geräte von Omega entsprechen den internationalen Sicherheitsbestimmungen und sind mit einem automatischen Übertemperaturabschalter ausgestattet. Bei einigen Modellen ist der Übertemperaturabschalter verstellbar und sollte je nach Anwendung entsprechend eingestellt werden. Bei allen anderen Modellen ist der Temperaturschutz voreingestellt um Schäden am Gerät zu vermeiden. Wenn ein Sicherheitsproblem auftreten sollte, muß das Gerät ausgeschaltet und vom Stromnetz getrennt werden.

Installation

1. Alle Omega Geräte werden mit einem Stromanschlußkabel geliefert. Dieses ist entweder fest mit dem Gerät verbunden oder zum Einstecken.
2. Vergleichen Sie, ob die Spannung Ihrer Stromversorgung mit den Angaben auf dem Typenschild des Gerätes übereinstimmen. Verbinden Sie das Stromanschlußkabel mit einer geeigneten Stromversorgung gemäß der nachstehenden Tabelle. **Achtung:** Das Gerät muß geerdet sein, um die elektrische Sicherheit zu gewährleisten!

	Verbindungen	220/240V 110/120V
Schwarz	Stromführend	Braun
Weiß	Neutral	Blau
	Erde	Grün/Gelb Grün

Geräte, die für 230 Volt ausgelegt sind, können auch bei 220 Volt arbeiten, Geräte für 120 Volt auch bei 110 Volt. In beiden Fällen verringert sich die Aufheizrate um ca. 8%. Das Typenschild befindet sich hinten am Gerät.

3. Stecken Sie das Stromkabel in die vorgesehene Buchse hinten am Gerät.
4. Stellen Sie das Gerät auf eine ebene Arbeitsfläche bzw. (falls erforderlich) unter einen Laborabzug. Beachten Sie, daß die Entlüftungsrillen an der Geräteunterseite immer frei zugänglich sind.
5. Wenn die Anzeigenlampchen an der Vorderseite leuchten, hat dies folgende Bedeutung:

~ : Gerät ist eingeschaltet

☼ : Gerät heizt

⚡ : Übertemperaturschutz ist ausgelöst

6. Die Symbole auf oder neben dem EIN/AUS-Schalter an der Geräterückseite bedeuten:

I : An

O : Aus

Nach dem Gebrauch

Vergessen Sie nicht, daß Teile des Gerätes (die Gefäße, die Blöcke und andere Zubehörteile) nach dem Erhitzen von Proben noch sehr heiß sein können. Bitte beachten Sie die oben genannten Vorsichtsmaßnahmen.

Garantie

Die Garantiedauer des Gerätes ist auf der beiliegenden Garantiekarte angegeben und schließt Fehler im Material oder der Verarbeitung ein. Die Garantiedauer beginnt am Tag des Einkaufs. Sämtliche defekte Teile werden innerhalb dieses Zeitraumes kostenlos ersetzt unter der Voraussetzung, daß dem Defekt keine unsachgemäße Handhabung, Fahrlässigkeit oder ein Unfall zugrundeliegt. Der unter diese Garantie fallende Service wird vom Lieferanten geleistet.

Ungeachtet der in dieser Gebrauchsanweisung enthaltenen Beschreibungen und Spezifikationen, behält sich Omega hiermit das Recht vor, Änderungen an den Geräten bzw. an einzelnen Geräteteilen durchzuführen.

Diese Gebrauchsanleitung wurde ausschließlich dazu erstellt, um Kunden die Handhabung der Omega-Geräte zu erleichtern. Nichts in dieser Gebrauchsanleitung darf als Garantie, Bedingung oder Voraussetzung verstanden werden, sei es die Beschreibung, Marktängigkeit, Zweckdienlichkeit oder sonstiges bezüglich der Geräte oder deren Bestandteile.

Wartung durch den Bediener

BEACHTEN SIE, DASS DIESES GERÄT NUR VON TECHNISCHEN FACHKRÄFTEN GEÖFFNET UND DEMONTIERT WERDEN DARF.

DURCH ENTFERNEN DES GEHÄUSES ODER GEHÄUSETEILEN SIND BAUTEILE MIT LEBENGEFÄHRLICHEN SPANNUNGEN FREI ZUGÄNLICH.

IM INNERN DES GERÄTES BEFINDEN SICH KEINE TEILE, DIE VOM ANWENDER GEWARTET WERDEN MÜSSEN.

Falls Ihr Gerät nicht ordnungsgemäß arbeitet, wenden Sie sich an Ihren Lieferanten oder senden Sie das Gerät wenn nötig zurück. Fügen Sie eine genaue Beschreibung des Defektes bei. Verpacken Sie das Gerät möglichst im Originalkarton. Bitte beachten Sie, daß Omega und thermo-DUX keine Haftung bei Transportschäden aufgrund unzureichender Verpackung übernehmen. Setzen Sie sich im Zweifelsfall mit Ihrem Lieferanten in Verbindung. Bitte beachten Sie die Entgiftungsbescheinigung, die Sie mit dem Gerät erhalten haben.

1. Reinigen

Bevor Sie Ihr Gerät reinigen, sollten Sie

- zuerst den Netzstecker ziehen
- das Gerät unter 50°C abkühlen lassen.

Ein feuchtes Tuch mit Seifenlösung reinigt Ihr Gerät am besten. Achten Sie darauf, daß kein Wasser in das Gerät gelangt. Verwenden Sie keine Scheuermittel.

2. Sicherungen

Die Stromzuleitung ist durch ein oder zwei Sicherungen geschützt. Diese sollten nur durch qualifiziertes Fachpersonal ausgetauscht werden. Wenn die Sicherung wiederholt durchbrennt, liegt ein größerer Defekt vor. Das Gerät muß zur Reparatur an Ihren Lieferanten eingesandt werden.

Introducción

Le rogamos lea cuidadosamente la información contenida en este folleto antes de manipular el aparato.

Aviso

LAS TEMPERATURAS ELEVADAS SON PELIGROSAS: pueden causar graves quemaduras y provocar fuego en materiales combustibles.

Omega ha puesto gran cuidado en el diseño de estos aparatos para proteger al usuario de cualquier peligro; aún así se deberá prestar atención a los siguientes puntos:

- **EXTREME LAS PRECAUCIONES Y UTILICE GUANTES PARA PROTEGERSE LAS MANOS;**
- NO coloque objetos calientes encima o cerca de objetos combustibles;
- NO maneje el aparato cerca de líquidos inflamables o gases;
- NO introduzca ningún líquido directamente en el aparato;
- **UTILICE EL SENTIDO COMUN** en todo momento.

Seguridad del usuario

Todos los usuarios de equipos Omega deben disponer de la información necesaria para asegurar su seguridad.

De acuerdo con las instrucciones contenidas en este manual y con las normas y procedimientos generales de seguridad, es muy importante que sólo personal debidamente capacitado opere estos aparatos. De no ser así, la protección que el equipo le proporciona al usuario puede verse reducida.

Todos los equipos Omega han sido diseñados para cumplir con los requisitos internacionales de seguridad y traen incorporados un sistema de desconexión en caso de sobretemperatura. En algunos modelos el sistema de desconexión es variable, lo que le permite elegir la temperatura según sus necesidades. En otros, el sistema de desconexión viene ya ajustado para evitar daños en el equipo.

En caso de que surja un problema de seguridad, desconecte el equipo de la red.

Instalación

1. Todos los aparatos Omega se suministran con un cable de alimentación. Puede ser fijo o independiente del aparato.
2. Antes de conectarlo, compruebe que el voltaje corresponde al de la placa indicadora. Conecte el cable de alimentación a un enchufe adecuado según la tabla expuesta a continuación. El equipo debe estar conectado a tierra para garantizar la seguridad eléctrica.

Conexiones 220/240V 110/120V

Línea	Marrón	Negro
Neutro	Azul	Blanco
Tierra	Verde/amarillo	Verde

El enchufe suministrado con el cable de alimentación viene equipado con un fusible del siguiente valor para proteger el cable: 230V Reino Unido 10 AMP

El fusible una vez instalado protege tanto al equipo como al usuario.

Asegúrese de que los equipos marcados 230V en la placa indicadora funcionan a 220V y de que los equipos marcados 120V funcionan a 110V. No obstante, en ambos casos la velocidad de calentamiento se verá reducida en un 8% aproximadamente. La placa indicadora está situada en la parte posterior del equipo.

3. Conecte el cable a la toma de tensión en la parte posterior del equipo.
4. Sitúe el aparato en un lugar apropiado tal como una superficie de trabajo plana, o si fuera necesario incluso en una campana con extractor de humos, asegurándose de que las entradas de aire en la parte inferior no queden obstruidas.
5. Los símbolos, que pueden aparecer junto a las luces indicadoras en el panel frontal del equipo, tienen los siguientes significados:

~ : Indicador de potencia

☰ : Indicador del calor

⚡ : Indicador de sobretemperatura

6. Los símbolos que se encuentran en o cerca del interruptor de alimentación tienen los siguientes significados:

I : Interruptor principal encendido

O : Interruptor principal apagado

Después de su uso

Cuando haya finalizado el calentamiento de muestras, recuerde que las piezas del equipo, tales como tubos, bloques y demás accesorios, pueden estar muy calientes. Tome las precauciones mencionadas anteriormente.

Garantía

Este aparato está garantizado contra cualquier defecto material o de fabricación durante el periodo especificado en la tarjeta de garantía adjunta. Este plazo inicia a partir de la fecha de compra, y dentro de este periodo todas las piezas defectuosas serán reemplazadas gratuitamente siempre que el defecto no sea resultado de un uso incorrecto, accidente o negligencia. Mientras se encuentre bajo garantía las revisiones las debe llevar a cabo el proveedor.

A pesar de la descripción y las especificaciones de los aparatos contenidas en el Manual del Usuario, Omega se reserva por medio de este documento el derecho a efectuar los cambios que estime oportunos tanto en los aparatos como en cualquier componente de los mismos.

Este manual ha sido preparado exclusivamente para los clientes de Omega y nada de lo especificado en este folleto de instrucciones se tomará como una garantía, condición o aseveración de la descripción, comerciabilidad o adecuación para cualquier fin específico de los aparatos o sus componentes.

Mantenimiento

ESTE APARATO DEBE SER DESMONTADO SOLO Y EXCLUSIVAMENTE POR PERSONAL DEBIDAMENTE CAPACITADO.

EL RETIRAR LOS PANELES LATERALES, FRONTALES O TRASEROS SUPONE DEJAR AL DESCUBIERTO TENSION DE LA RED PELIGROSA.

EL EQUIPO NO CONSTA DE NINGUNA PIEZA DE CUYO MANTENIMIENTO SE PUEDA ENCARGAR EL USUARIO.

En el caso improbable de que experimentara algún problema con su aparato que no pudiera resolver con facilidad, debería ponerse en contacto con su proveedor y devolverlo si fuera necesario. Indique de forma detallada todos los defectos que haya notado y devuelva el equipo en su embalaje original. Omega no aceptará responsabilidad alguna por daños causados en equipos que no estuvieran debidamente embalados para su envío; si tuviera alguna duda, póngase en contacto con su proveedor. Sírvasc consultar el Certificado de Descontaminación suministrado con su aparato.

1. Limpieza

Antes de limpiar su aparato, desconéctelo SIEMPRE de la fuente de alimentación y permita que se enfríe por debajo de los 50°C.

Este aparato se puede limpiar pasándole un paño húmedo enjabonado. Hágalo con cuidado para evitar que caiga agua dentro del mismo. No utilice limpiadores abrasivos.

2. Fusibles

Su aparato está protegido por uno o dos fusibles. Sólo deben cambiarlos personal debidamente capacitado.

Si los fusibles se fundieran repetidamente, esto indicaría una avería grave y puede que tuviera que devolverle el aparato a su proveedor para su reparación.

INTRODUCTION

The Omega Calibrator is designed to provide safe and convenient calibration of a wide range of thermal sensors. It features fast heat up times, with accuracy and repeatability.

Applications

Before using the Calibrator, make sure you have read this manual carefully. If you have any queries, contact your supplier.

The Omega unit can calibrate temperature probes without the need to return them to a specialist laboratory. To ensure accuracy the unit must be operated in an environment with a stable ambient temperature.

The thermal sensors are placed in a well in the temperature controlled block. A number of inserts with different dimension wells are available to match standard probe sizes: these are detailed towards the back of this manual.

The calibrator has four main applications:

Maintaining a set temperature

The required temperature is set on the calibrator and the operation of the probe is checked.

Temperature cycling

A sequence of temperatures (each with a heat up/cool down rate and a hold time) may be stored as a program and recalled from memory.

A program consists of:

- a series of specified temperatures
- the times for which samples are to be maintained at each specified temperature (hold times)
- the desired heating or cooling rates in between each specified temperature (ramp rates), and
- the number of times that a sequence is repeated.

You can connect a PC to the Calibrator using Omega's Data Logging software, CL7A-SOFT, to gather data. You may also print out profiles using the printer connected to the PC.

Switch test

In a switch test, the contacts of a thermostat are connected to the calibrator, with the thermostat placed in the temperature controlled block. A temperature change is then initiated by one of the above methods. When the switch point of the thermostat is reached, the contacts switch over (either making or breaking the circuit). The switch must be connected prior to starting a run.

Warning

HIGH TEMPERATURES ARE DANGEROUS: they can cause serious burns to operators and ignite combustible material.

Omega have taken great care in the design of these units to protect operators from hazards, but operators should pay attention to the following points:

- USE CARE AND WEAR PROTECTIVE GLOVES TO PROTECT HANDS;
- DO NOT put hot objects on or near combustible objects;
- DO NOT operate the unit close to inflammable liquids or gases;
- DO NOT place any liquid directly in your Omega unit;
- DO NOT place the unit into its carrying case if the block temperature exceeds 50°C;
- If you are using a cooling probe, make sure that water is flowing through the cooling probe BEFORE inserting the probe into the block;
- At all times USE COMMON SENSE.

Cleaning your Omega unit

Before cleaning your unit, disconnect from the power supply and allow to cool to ambient temperature.

You can clean the case of the Calibrator with a cloth dipped in water or ethanol (methanol can also be used). No part of the case or cover should be immersed in the solvents.

Do not use acetone or abrasive cleaners.

Packing

When you receive your unit, make sure you keep the original packing in case you ever need to return it for service or repair. When returning a unit, remember to remove the insert from the temperature controlled block.

The unit must be transported in the original packing to avoid damage. The packing comprises; the unit in the soft carrying case, packed with foam into an outer cardboard box. Omega accepts no responsibility for damage incurred unless the unit is correctly packed and transported in this way.

Specification

The figures stated in the specification are as measured 0-50 mm from the base of the well of the insert, using an SPRT, at the time of calibration.

Omega CL-750A

Measuring zone	0 to 50 mm	0" to 2"
	from base of well	from base of well
Depth of well in insert	152.4 mm	6"
Temperature range	20°C above ambient	36°F above ambient
	to 650°C	to 1202°F
Temperature accuracy in measuring zone	±0.2°C	±0.36°F
Temperature uniformity in measuring zone	±1.0°C at 400°C	1.8°F at 752°C
Temperature uniformity in measuring zone	±1.3°C at 650°C	2.3°F at 1202°F
Temperature stability after 1 hr	±0.09°C	±0.16°F
Display resolution	0.1°C	0.1°F
Heat up rate	35 minutes	20°C to 600°C
Cool down rate	30 minutes	600°C to 200°C
Programmable ramp rate	0.1 to 10°C/min	0.2 to 18 °F/min
Switch Test		Yes
Fan cooling		Automatic
Comms Port 9way D type		bi-directional RS232

Omega CL-760A

Measuring zone	0 to 50 mm	0" to 2"
	from base of well	from base of well
Depth of well in insert	114.3 mm	4.5"
Temperature range	20°C above ambient	36°F above ambient
	to 425°C	to 797°F
Temperature accuracy in measuring zone	±0.3°C	±0.54°F
Temperature uniformity in measuring zone	±0.2°C at 300°C	0.36°F at 542°C
Temperature uniformity in measuring zone	±0.6°C at 425°C	1.08°F at 797°F
Temperature stability after 1 hr	±0.06°C	±0.108°F
Display resolution	0.1°C	0.1°F
Heat up rate	15 minutes	20°C to 400°C
Cool down rate	25 minutes	400°C to 100°C
Programmable ramp rate	0.1 to 10°C/min	0.2 to 18 °F/min
Switch Test		Yes
Fan cooling		Automatic
Comms Port 9way D type		bi-directional RS232

Omega CL-740A

Measuring zone	0 to 50 mm	0" to 2"
	from base of well	from base of well
Depth of well in insert	114.3 mm	4.5"
Temperature range	-40°C to 140°C **	-40°F to 284°F **
Temperature accuracy in measuring zone	±0.3°C	±0.54°F
Temperature uniformity in measuring zone	±0.2°C at 100°C	0.36°F at 182°C
Temperature stability after 10 minutes	±0.05°C	±0.09°F
Display resolution	0.1°C	0.1°F
Heat up rate 5 minutes	20°C to 100°C	68°F to 182°F
Cool down rate 9 minutes	100°C to 0°C	182°F to 32°F
Programmable ramp rate	0.1 to 10°C/min	0.2 to 18 °F/min
Switch Test	Yes	
Comms Port 9way D type	bi-directional RS232	

** The lowest temperatures can only be achieved when the Tecal 140 is used with a chilled water supply

Dimensions

Height	272mm	10.7"
Width	185mm	7.28"
Depth	439mm	17.28"

Wells in the block:

Central Well for inserts in CL-760A and CL-740A*

Depth	130mm	5.1"
Diameter	38.2mm	1.5"

Reference well in CL-760A

Depth	101.6mm	4"
Diameter	6.6mm	0.26"

Central Well for inserts in CL-750A *

Depth	159mm	6.25"
Diameter	38.2mm	1.5"

Reference well for CL-750A only*

Depth	146mm	5.7"
Diameter	6.6mm	0.26"

* See the list of inserts at the back of this book

Working conditions

The Calibrator is designed to work safely under the following conditions:

Ambient temperature range 5°C to 40°C

Humidity Up to 95% relative humidity, non-condensing

Note: The control specifications are quoted at an ambient temperature of 20°C. The specification may deteriorate outside an ambient temperature range of 10°C to 30°C.

Radio frequency interference tested and passed to EN50081-1.

Immunity Tested and passed to EN50082-1

THE FRONT PANEL


The control panel of the Calibrator consists of a membrane keypad, an alphanumeric LCD panel, an LED display and three LEDs.

The LCD panel can display up to four lines of characters and shows the parameters for the selected mode, or the options available for each function.

The LED Display shows the actual temperature of the block.


The keypad consists of eight keys.

A diagram of the control panel is shown below:

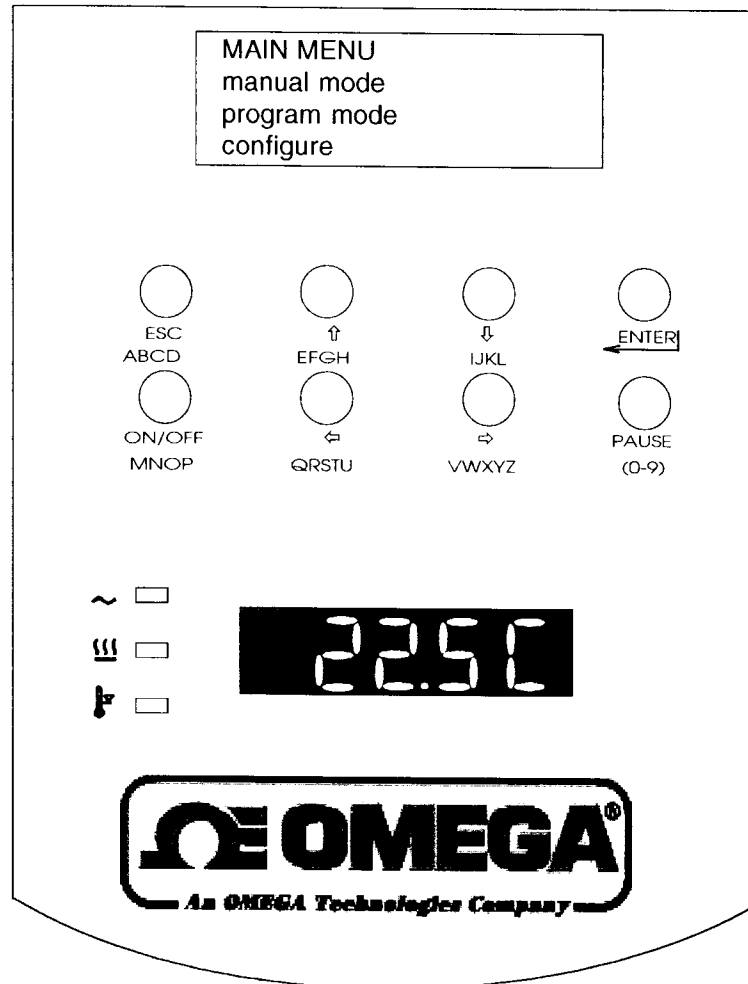


The Front Panel Controls

The ESC key

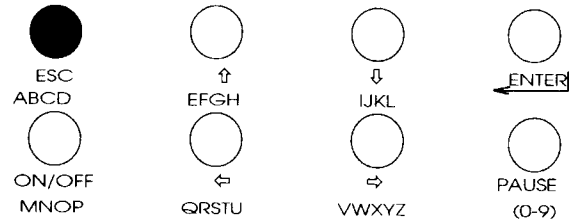


The **ESC** key allows the operator to exit the current sub-menu and go back to the next higher level menu. Where a word can be entered, then successive presses of this key will toggle through the letters **ABCD**.

The UP ARROW key

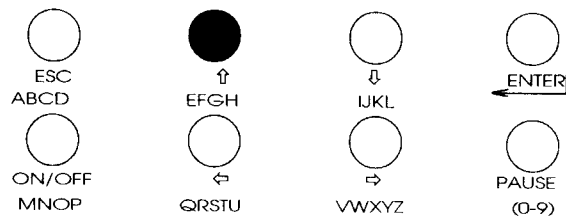


The ↑ key allows the operator to move up the current sub-menu. This key can also be used to increase numeric values in some fields. Where a word can be entered, then successive presses of this key will toggle through the letters **EFGH** until the **ENTER** key is pressed.

The DOWN ARROW Button

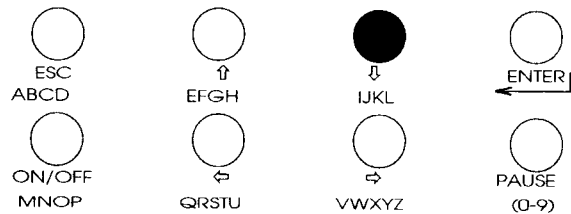


The ↓ key allows the operator to move down the current sub-menu. This key can also be used to decrease numeric values in some fields. Where a word can be entered, then successive presses of this key will toggle through the letters **IJKL**.


The ENTER key

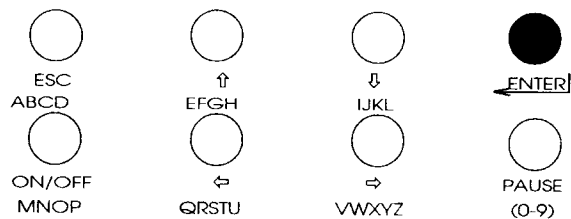


The **ENTER** key allows the operator to accept any entry and move onto the next data entry field or screen. It also starts a program in Program Mode.

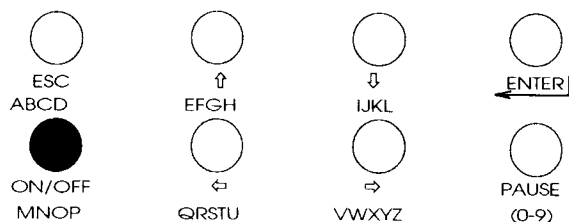The ON/OFF key


The **ON/OFF** key allows the operator to start or stop the unit in Manual Mode or stop a program in Program Mode. Where a word can be entered, then successive presses of this key will toggle through the letters **MNOP**.

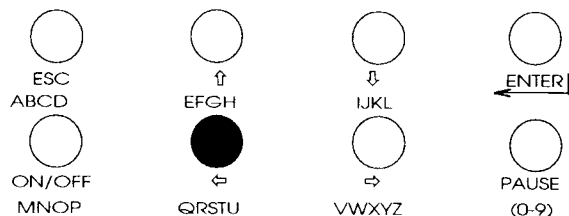The LEFT ARROW key

The ← key allows the operator to move within the data field. Where a word can be entered, then successive presses of this key will toggle through the letters **QRSTU**.

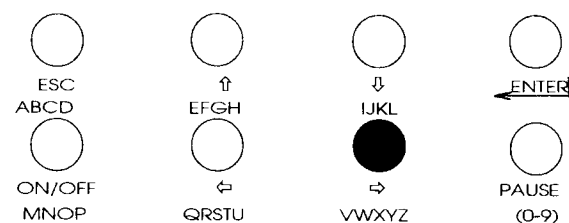The RIGHT ARROW key

The → key allows the operator to move within the data field. Where a word can be entered, then successive presses of this key will toggle through the letters **VWXYZ**.

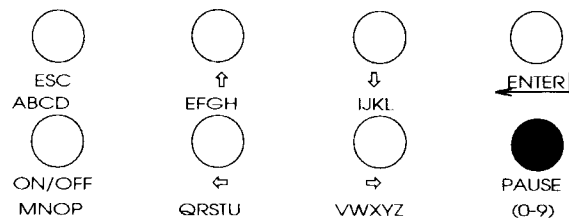The PAUSE Button

Except when the Ramp Rate is set the MAX, the **PAUSE** key allows the operator to pause the unit (a 'P' will appear on the display) until the PAUSE key is pressed again (the 'P' will disappear) or until the ON/OFF key is pressed to stop the Calibrator. Where a word can be entered, then successive presses of this key will toggle through the numbers **0-9**.

Power Indicator



The top indicator shows that there is power to the unit

Power to the Block Indicator



The next indicator shows when there is power to the block.

For the Omega CL760A and CL750A

When the set temperature is higher than the block temperature this indicator will light. If the light is on continuously the heater is getting constant power. The only exception is described under Over-Temperature Indicator. As the temperature approaches the set temperature the indicator will flash. When set temperature is reached the indicator will stay on for shorter periods. If the block temperature is above the set temperature then the indicator will be off, as the heater is not getting any power.

For the Omega CL740A

When the set temperature is different to the block temperature this indicator will light. If the light is on continuously the block is getting constant power. The only exception is described under Over-Temperature Indicator. As the temperature approaches the set temperature the indicator will flash. When set temperature is reached the indicator will stay on for shorter periods.

Over-Temperature Indicator (Omega CL760A and CL750A units only)



If the unit should, for any reason, exceed the temperature set for the over-temperature cutout (see page 15), the over-temperature indicator will light. The heater will have been switched off and the unit will begin to cool even if the heater light is on (the light staying on or not depends on which circuit has sensed an over-temperature).

Sensor fault Indicator



If there should, for any reason, be a sensor fault, the bottom indicator will light. The power to the block will have been switched off and the unit will begin to return to ambient even if the heater light is on (the light staying on or not depends on which circuit has sensed a fault).

When you Switch On

When you first switch on, the display will show a choice of options.

```

MAIN MENU
■ manual mode
program mode
configure
  
```

Use the $\uparrow$ $\downarrow$ keys to toggle between the options until the cursor is on the required one.


Press the **ENTER** key when the cursor is on the option you want and this will take you into the screen you wish to use.

Configure Menu

To configure the unit to the settings you want, use the $\downarrow$ key to put the cursor on **configure** then press the **ENTER** key.

```

MAIN MENU
manual mode
program mode
■ configure
  
```

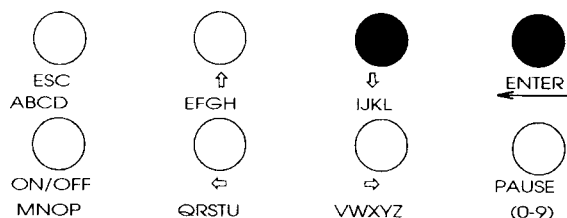

The following screen will appear:

```

CONFIGURE
Switch      no  ■      yes      Hold
Temperature °C
user probe  no      yes
  
```

Use the **ENTER** key to move to the field you wish to change. Use the $\uparrow$ $\downarrow$ keys to change the setting and the **ENTER** key to accept the change. Other keys have no effect when you are in the configure screen.

Switch/yes or Hold and **user probe/yes** are mutually exclusive when one or the other is selected.

Switch/yes (Hold) will record/display the switch contact status. Switch HOLD will also halt the calibrator at the temperature at which it switched over, until the **PAUSE** key is pressed. (Note that the unit may require time to settle before a valid reading is available.)

MANUAL MODE

To go into the Manual Mode, use the $\downarrow$ key to put the cursor on **manual mode** then press the **ENTER** key.

MAIN MENU
m anual mode
program mode
configure

The following screen will appear:

MANUAL MODE	
temperature	200.0°C
ramp rate	7.0°C/min
hold time	99 min

see spec for each unit
0.1 to 10 or MAX
1 min to 240min or HOLD

Pressing the **ESC** key in this screen will return you to the MAIN MENU.

For large changes use the $\leftarrow$ $\rightarrow$ keys to move to neighbouring digits. Use the $\uparrow$ $\downarrow$ keys to increase or decrease the numeric values, one digit at a time. Press the **ENTER** key when the whole value has been entered. Each time you press the **ENTER** key you will move onto the next field.

Press the **ON/OFF** key and the unit will start to heat or cool (depending on the setting) and one of the following screens will appear:

If neither the **switch** nor the **probe** options are on **Hold/yes**:

temperature	200.0°C
ramp rate	MAX
hold time	HOLD

If the **switch** option is on yes:

temperature	200.0°C
ramp rate	2.0°C/min
hold time	9.2 min
switch s/c	

If the **probe** option is on yes:

temperature	-10.0°C
ramp rate	MAX
hold time	10.0 min
user probe	11.0°C

The bottom line on this screen is the temperature of the probe itself; if no probe is fitted then the display shows 0.0.

Extended temperature hold

If you press the **PAUSE** key during the run in which the ramp rate is selected other than MAX, the unit will hold the current temperature until the **PAUSE** key is pressed again or until the **ON/OFF** key is pressed.

Completion of the run

The run will terminate and the unit will return to ambient either after the hold time has elapsed or if you press the **ON/OFF** key during the run. If you press the **ON/OFF** key the unit will retain the last set values and when the **ON/OFF** key is pressed again the unit will re-start the run, provided the unit is not switched off. The **ESC** key has no effect during the run.

PROGRAM MODE

To go into the Program Mode, use the **↓** key to put the cursor on **program mode** then press the **ENTER** key.

```
MAIN MENU
manual mode
program mode
configure
```

The following screen will appear:

```
PROGRAM MODE
run program
new program
delete program
```

Pressing the **ESC** key in this screen will return you to the MAIN MENU.

Use the **↑** **↓** keys to move to option you require.

Press the **ENTER** key when you have selected the option you want.

The three options are explained in the next sections.

Run Program

If you have chosen run program, the following screens will appear:

```
RUN PROGRAM
name: TEST_PRG
```

Pressing the **ESC** key in this screen will return you to the Program Mode.

Use the **↑** **↓** keys to find the program you want to run. Press the **ENTER** key to select it. The display will change to the Program Running display which is explained later.

Other keys have no effect.

If you have chosen New Program the following screen will appear

NEW PROGRAM	
name:	█ _ _ _ _ _

Use the keys with letters beneath them to enter the name of the program you are creating.

If you press the ESC key you will cancel New Program entry and the display will return to the Program Mode screen. Other keys have no effect.

For example: Press the **ESC** key once for A, or twice for B and so on. Press the **ENTER** key to confirm the letter. Confirmation automatically moves the cursor on to the next character position. When eight characters or spaces have been selected the display automatically moves on to:

XXXX_ _ _ _		
no. of steps	█ 1	01 to 10
no. of loops	01	01 to 10
save data	no	

Use the $\uparrow$ $\downarrow$ keys to increase or decrease the numeric values. The values scroll from 01 to 10. Press the **ENTER** key when the value has been entered. Each time you press the **ENTER** key you will move onto the next field.

The 'no of steps' is limited by the amount of program memory available and the maximum value will be set automatically. If there is no data memory available the 'save data' option will not be shown.

Set the fields in the order they are shown. On pressing the ENTER key when the last field has been set, the display will automatically go to:

XXXX_ _ _ _	step 01/05	
temperature	25.█ °C	see spec for each unit
ramp rate	MAX	0.1 to 10 or MAX
hold time	10 min	1 min to 240min or HOLD

Use the $\uparrow$ $\downarrow$ keys to increase or decrease the numeric values, one digit at a time. For large changes use the $\leftarrow$ $\rightarrow$ keys to move to neighbouring digits. Press the **ENTER** key when the whole value has been entered. Each time you press the **ENTER** key you will move onto the next field.

Set the fields in the order they are shown. On pressing the ENTER key when the last field has been set, the display will automatically be repeated for each step in the program which you set earlier. Each time the screen is repeated the step number will be incremented.

From step 2 onwards it is possible to go back to earlier steps by pressing the ESC key.

When all steps have been programmed the display will go to the Program Mode screen

Program Running Display

The Display will automatically go into the the program running display as described earlier.

One of the following screens will appear:

If neither the **switch** nor the **probe** options are on **yes**:

temperature	200.0°C
ramp rate	MAX
hold time	HOLD

If the **switch** option is on Hold/yes:

temperature	200.0°C
ramp rate	2.0°C/min
hold time	9.2 min
switch s/c	

If the **probe** option is on yes:

temperature	-10.0°C
ramp rate	MAX
hold time	10.0 min
user probe	11.0°C

The bottom line on this screen is the temperature of the probe itself.

In any of these screens, except in Pause Mode (see below), press the **ENTER** key and the display will go to:

XXXX_PRG
step 01/01
loop 01/01
switch o/c

If you press the **ENTER** key while this screen is displayed, except in Pause Mode (see below), the screen will return to the appropriate program running screen above.

Extended temperature hold

If you press the **PAUSE** key during the run, if the Ramp Rate is not set to MAX, the unit will hold the current temperature, and show a 'P' in the bottom right hand corner of the display, until the **PAUSE** key is pressed again or until the **ON/OFF** key is pressed.

Completion of the run

The run will terminate and the unit will return to ambient after the hold time has elapsed, or if the **ON/OFF** key has been pressed before the end of the run. If you press the **ON/OFF** key the unit will retain the last set values and when the **ON/OFF** key is pressed again the unit will re-start the run. The **ESC** key has no effect during the run.

Switch Test


The switch test indicates the switch point temperature of a thermostat by detecting the making or breaking of the circuit made by the contacts of the thermostat.

In Manual or Program Mode, the last line of the LCD indicates whether the Switch is open or closed.

If the test is set to Switch Hold when a change is detected (except when the Ramp Rate is set to MAX), the run is put into pause mode, and the letter 'P' appears at the bottom right hand corner of the display. Either stop the run by pressing the **ON/OFF** key, to return the unit to ambient temperature, or restart by pressing **PAUSE**, to continue heating or cooling.

If the test is set to switch, when a change is detected, the run continues cycling to the set point temperature.

Note that it is not possible for both "User Probe" and "Switch" tests to be active at the same time; selecting one automatically disables the other.

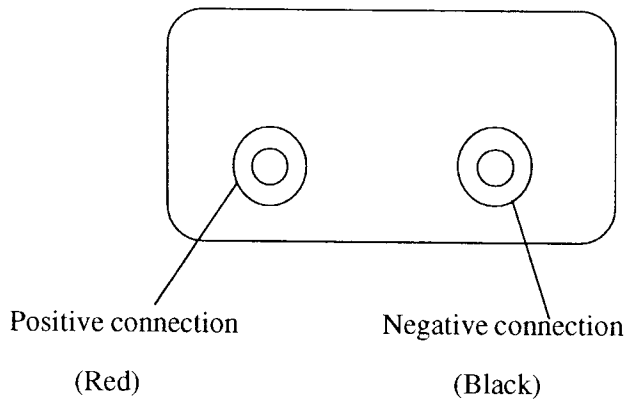

Program Delete

```
PROGRAM MODE
run program
new program
delete program
```

To go into the Program Delete Mode from the Program Mode screen, use the **↓** key to put the cursor on **delete program** then press the **ENTER** key.

The following screen will appear:

```
DELETE PROGRAM
name: TEST_PRG
```

Pressing the **ESC** key in this screen will return you to the Program Mode without deleting a program.

Use the **↑** **↓** keys to find the program you want to delete. Press the **ENTER** key to select it.

Other keys have no effect.

The following screens will appear:

```
DELETE PROGRAM
name: TEST_PRG
are you sure? no
```

Use the **↑** **↓** keys to select 'yes' or 'no'.

Press the **ENTER** key to:

either

delete the program;

or

leave the program intact.

In both cases you will return to the Program Mode display.

Other keys have no effect.

Omega CL-760A and Omega CL-750A only

Operating temperatures below ambient can be achieved by using the cooling probe with a chilled water circulator. The cooling probe is supplied as an accessory and can be used in an insert with a 3/8" or 10mm hole (see Accessories). Instructions for its use are included with the probe.

The block should not be operated at temperatures below dewpoint as excessive build up of moisture will occur which may cause damage to the interior of the unit.

After Use

1. When you have finished heating samples, remember that parts of the unit – inserts and associated accessories – may be very hot. Take the precautions listed earlier. We recommend that the inserts should be allowed to cool to 70°C before being removed from the unit. They will still have to be handled with care.
2. If you need to remove an insert while it is hot, fit the extractor tool into the locating holes and lift the insert out carefully. Never leave the extractor tool in the insert while it is being used in the Tecal unit.

Water Cooling

Omega CL-760A only

The CL-760A unit can be used with a chilled water supply at 4°C, enabling an extended temperature range to -40°C.

Connect a chiller to the calibrator using suitable pipes and clips. Switch on the chiller unit before the calibrator and allow the chiller to stabilize for 15 minutes before performing a calibration. After stabilisation temperatures between -40 and ambient can be used. The cooling fan in the calibrator will automatically switch off if there is a chilled water supply.

RS232 SERIAL INTERFACE

The calibrator may send data logging information to an IBM PC or compatible computer by connecting the unit and the PC via an RS232 cable, and installing the "CL7A-Soft" software supplied with each unit.

Ensure that there is a connection made before the calibrator is switched on.


The RS232 cable must be fitted to both the unit and the PC before either unit is powered up, otherwise, data integrity cannot be guaranteed. Once the cable is fitted, it does not matter which unit is powered up first.

RS232 9-way PC serial port

ON/OFF switch

Fuses

Power inlet

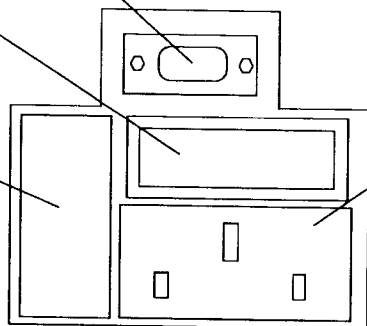

The following table indicates the cable specifications for a 9-way PC serial port:

Calibrator		PC
9-way female D type		9-way female D type
pin	signal	pin
Case	F.GND	Case
3	TxD	3
2	RxD	2
7	RTS	7
8	CTS	8
6	DSR	6
1	CD	1
4	DTR	4
5	S.GND	5

To Retrieve Test Results

In "CL7A-Soft", select the name of the program whose test results you wish to retrieve and click the "Retrieve Program's Test Results" button. Save the test results as a file name. Close the window; then view as a 'graph' or 'text' as appropriate.

To Retrieve a Program

In "CL7A-Soft", select "Retrieve Program"; select the program name you wish to retrieve then click the "Retrieve Program" button.

Brief fault finding notes and lists of replacement parts, accessories and inserts for the Tecal units are given in this section.

NOTE THAT THIS EQUIPMENT SHOULD ONLY BE DISMANTLED BY PROPERLY TRAINED PERSONNEL. REMOVING THE OUTER COVERS OR BASE EXPOSES POTENTIALLY LETHAL MAINS VOLTAGES.

THERE ARE NO OPERATOR SERVICEABLE PARTS WITHIN THE EQUIPMENT.

General fault finding

Over temperature cutout (Omega CL-760A and Omega CL-750A units only)

Your Calibrator is fitted with two independent circuits to protect it from overheating. The unit constantly checks that the block temperature does not exceed its maximum. If for some reason this temperature is exceeded, all power to the block is cut.

Allow the unit to cool to a safe temperature (less than 100°C) before switching off and check for any obvious causes of overheating before switching it back on. Switching off the mains power resets the over-temperature cutout.

Repeated cutouts indicate a serious fault and you should return the unit to your supplier for repair.

HELP display

If HELP is displayed there is a problem with the internal sensing device. The calibrator should be returned to your supplier for repair.

Fuses

If neither the power light nor display (on the front panel) is lit, one of the two fuses may have blown. Make sure there is no external cause (such as a faulty plug or lead).

Fuses should only be changed by suitably qualified personnel. If the fuses blow persistently, a serious fault is indicated and you should return the calibrator to your supplier for repair.

Never fit a fuse rated higher than the value indicated on the unit, serious damage or personal injury may result.

Replacement parts

Each unit is supplied with an extraction tool, a carrying case and a mains cable. The following parts may be purchased if replacements or alternatives are required.

<i>Part N°</i>	<i>Description</i>
6100121	Insert extractor
FCAB10UK	Mains cable, 230V UK units
FCABLEEU	Mains cable, 230V units
FCABLEUS	Mains cable, 120/100V units
6103711	Soft carrying case

Accessories

<i>Part N°</i>	<i>Description</i>
CL7A-PROBE	Cooling Probe
CL7A-SOFT	CALSOFT PC software kit

Inserts

Inserts are made from aluminium or aluminium-bronze and must be ordered separately from the calibrator. Each insert is stamped for identification.

A blank insert is available which may be drilled to suit your application.

Aluminium Inserts for the Omega CL-740A and the Omega CL-760A

Immersion depth 4.5"

<i>NUMBER</i>	<i>PROBE DIAMETER</i>
CL701B	5 of 1/4"
CL702B	1 of each 3/8", 5/16", 1/4", 3/16", 1/8"
CL703B	2 of 1/4", 2 of 3/8"
CL704B	2 of 1/4", 2 of 1/2"
CL705B	1 of 1/4"
CL707B	1 of 9/16", 1 of 1/4"
CL708B	1 of 5/8", 1 of 1/4"
CL710B	1 of 3/4", 1 of 1/4"
CL709B	1 of 11/16", 1 of 1/4"
BLANK	
CL706B	BLANK

Aluminium Bronze Inserts for the Omega CL-750A

Immersion Depth 6"

CL701A	5 of 1/4"
CL702A	1 of each 3/8", 5/16", 1/4", 3/16", 1/8"
CL703A	2 of 1/4", 2 of 3/8"
CL704A	2 of 1/4", 2 of 1/2"
CL705A	1 of 1/4"
CL707A	1 of 9/16", 1 of 1/4"
CL708A	1 of 5/8", 1 of 1/4"
CL710A	1 of 3/4", 1 of 1/4"
CL709A	1 of 11/16", 1 of 1/4"
BLANK	
CL706A	BLANK



WARRANTY/DISCLAIMER

OMEGA ENGINEERING, INC. warrants this unit to be free of defects in materials and workmanship for a period of **13 months** from date of purchase. OMEGA Warranty adds an additional one (1) month grace period to the normal **one (1) year product warranty** to cover handling and shipping time. This ensures that OMEGA's customers receive maximum coverage on each product.

If the unit should malfunction, it must be returned to the factory for evaluation. OMEGA's Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective it will be repaired or replaced at no charge. OMEGA's WARRANTY does not apply to defects resulting from any action of the purchaser, including but not limited to mishandling, improper interfacing, operation outside of design limits, improper repair, or unauthorized modification. This WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of being damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA's control. Components which wear are not warranted, including but not limited to contact points, fuses, and triacs.

OMEGA is pleased to offer suggestions on the use of its various products. However, OMEGA neither assumes responsibility for any omissions or errors nor assumes liability for any damages that result from the use of its products in accordance with information provided by OMEGA, either verbal or written. OMEGA warrants only that the parts manufactured by it will be as specified and free of defects. OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESSED OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. LIMITATION OF LIABILITY: The remedies of purchaser set forth herein are exclusive and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.

CONDITIONS: Equipment sold by OMEGA is not intended to be used, nor shall it be used: (1) as a "Basic Component" under 10 CFR 21 (NRC), used in or with any nuclear installation or activity; or (2) in medical applications or used on humans. Should any Product(s) be used in or with any nuclear installation or activity, medical application, used on humans, or misused in any way, OMEGA assumes no responsibility as set forth in our basic WARRANTY/DISCLAIMER language, and additionally, purchaser will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the Product(s) in such a manner.

RETURN REQUESTS / INQUIRIES

Direct all warranty and repair requests/inquiries to the OMEGA Customer Service Department. BEFORE RETURNING ANY PRODUCT(S) TO OMEGA, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OMEGA'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS). The assigned AR number should then be marked on the outside of the return package and on any correspondence.

The purchaser is responsible for shipping charges, freight, insurance and proper packaging to prevent breakage in transit.

FOR **WARRANTY** RETURNS, please have the following information available BEFORE contacting OMEGA:

1. P.O. number under which the product was PURCHASED,
2. Model and serial number of the product under warranty, and
3. Repair instructions and/or specific problems relative to the product.

FOR **NON-WARRANTY** REPAIRS, consult OMEGA for current repair charges. Have the following information available BEFORE contacting OMEGA:

1. P.O. number to cover the COST of the repair,
2. Model and serial number of product, and
3. Repair instructions and/or specific problems relative to the product.

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering.

OMEGA is a registered trademark of OMEGA ENGINEERING, INC.

© Copyright 1996 OMEGA ENGINEERING, INC. All rights reserved. This document may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without prior written consent of OMEGA ENGINEERING, INC.