

# OM-EL-PANEL-IR


## PANEL MOUNT INFRARED COMMUNICATIONS MODULE

INSTRUCTION  
SHEET

M-3147

The OM-EL-PANEL-IR module converts serial data between electrical and InfraRed formats. Ideal for applications that require remote control or dangerous environments where cables would be a safety risk, OM-EL-PANEL-IR employs the IrDA infra-red communications standard to achieve reliable transfer of data. The snap-in integral bezel makes installation quick and easy.

- Panel mounted
- Uses IrDA Communication Standard
- Connects to Microcontroller, UART, or EasyLog Module
- Half-duplex Communications
- 10-Way Pin Header

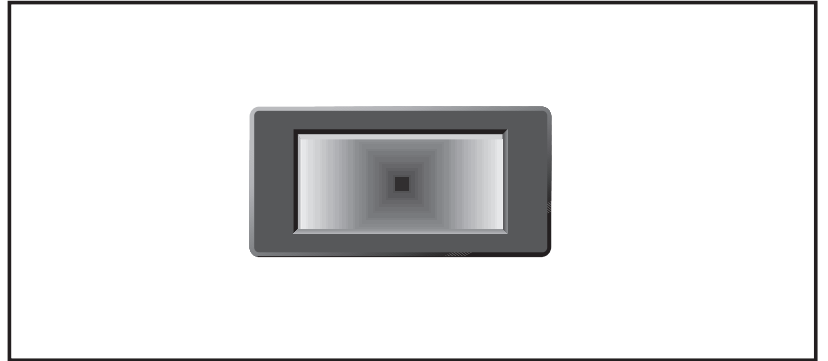

### Baud rate

Select the baud rate as shown in the table below. Where a "0" is shown, either connect the pin to 0V or leave it unconnected. Where a "1" is shown, connect the pin to V+.

Pin6	Pin7	Pin8	Baud
0	0	0	9600
0	0	1	14400
0	1	0	19200
0	1	1	28800
1	0	0	38400
1	0	1	57600
1	1	0	115200


InfraRed Module	Model No OM-EL-PANEL-IR			
Specification	Min	Typ	Max	Unit
Power supply	3	5	5.5	V
Current consumption	3	5	6	mA
Receive	7	12	25	mA
Transmit <sup>1</sup>				
Communication cone		±15		°
Communication distance <sup>2</sup>	0	1/3.3		m/ft
Data rate (bits per second)	9600		115200	bps
Infra-red pulse duration		1.6		µs
Latency <sup>3</sup>	10			ms

Note 1: Depending on transmission duty cycle

Note 2: Under normal lighting conditions

Note 3: This is the time delay between receive and transmit operations

### DIMENSIONS All dimensions in mm (inches)

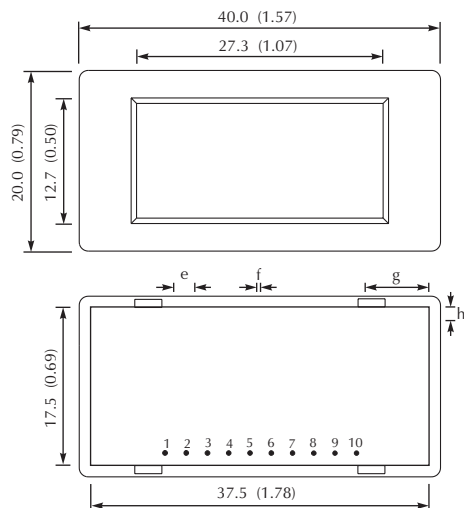

- a. 2.00 (0.08)
- b. 6.00 (0.24)
- c. 1.60 (0.06) max
- d. 6.00 (0.24)
- e. 2.54 (0.10)
- f. 0.50 (0.02)
- g. 6.00 (0.23)
- h. 2.00 (0.08)

Panel cut-out

38.0 x 18.0 (1.50 x 0.71)

Panel thickness

1.0 to 2.5 (0.04 to 0.1)

- Pin Name
1. Polarity
  2. Disable
  3. N/C
  4. 0V
  5. V+
  6. Baud 3
  7. Baud 2
  8. Baud 1
  9. RxD
  10. TxD

### PANEL FITTING


Locate the module by passing it through the front of the panel cut-out and gently push until the rear of the bezel is flush with the panel. DO NOT PUSH ON THE SCREEN. The snap-in lugs will now automatically hold the module firmly in position.

### PIN FUNCTION

1. Polarity Selects whether the transmit/receive lines use positive or negative logic. Connect to 0V for positive logic. Connect to V+ or leave unconnected for negative logic.
  2. Disable Disables the receiver/transmitter. Connect to 0V to disable. Connect to V+ or leave unconnected to enable.
  3. N/C No connection. Do not connect anything to this pin.
  4. 0V 0V Power supply.
  5. V+ 5V Power supply.
  6. Baud 3
  7. Baud 2
  8. Baud 1
- ] Baud rate select (see table overleaf).
9. RxD Receive data - received data appears on this pin.
  10. TxD Transmit data - apply data to be transmitted to this pin.  
If the PANEL-IR is solely used for receiving data then TxD should be connected to V+ via a 47k resistor.

## APPLICATION NOTES

Communication can take place at distances from 0m (i.e. "nose-to-nose") to 1m. The red window of the OM-EL-PANEL-IR module should be pointed at the window of the device at the other end of the InfraRed link. The InfraRed light beam spans approximately 30°, so the two devices do not have to be directly aligned. There should however be a clear line of sight between the two devices. At close range, communication is more forgiving and small obstacles will not affect the link.

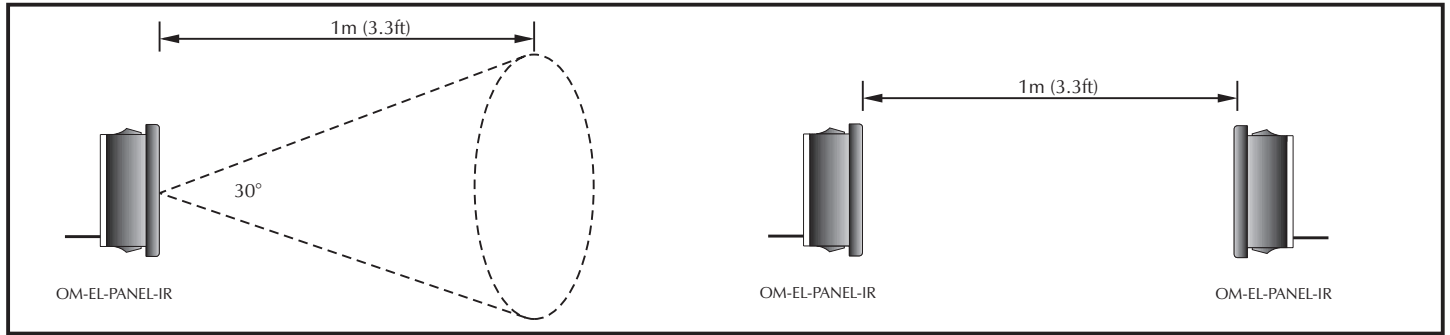


## Protocol

The OM-EL-PANEL-IR module acts as a "transparent" data translator i.e.: there is no built-in communications protocol to adhere to. The device works by transmitting an IR pulse for "Low" bits, and not transmitting anything for "High" bits. Since the first bit of the serial byte (the start bit) is always "Low", this marks the start of the byte. Subsequent bits are synchronized from there. Take care to set the Polarity pin (pin 1) correctly. For more detailed application advice, contact OMEGA.

## Connection to EasyLog Data Logging Modules


Connect as shown below to give your OM-EL-1 InfraRed communication capability. The flying leads should be soldered into the two PCB holes on the OM-EL-1 module, at the left hand end of the 10-way pin header. A 1K resistor must be fitted as shown if a serial communication cable is used in addition to the InfraRed link, otherwise it can be omitted.

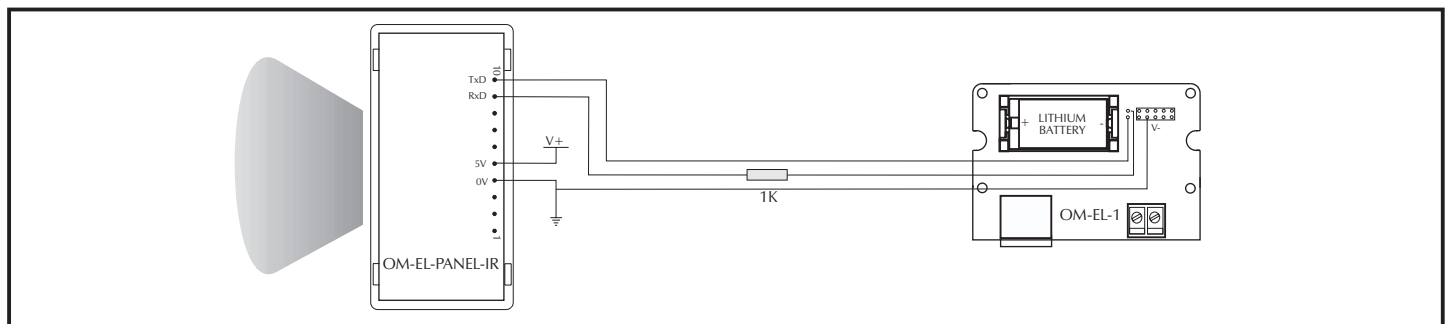

## Typical application: industrial controller

The OM-EL-PANEL-IR module forms part of an InfraRed communications link between two totally isolated systems.

The OM-EL-PANEL-IR module will communicate with any computer featuring an IrDA compatible serial port, or any other PC fitted with a OM-EL-LINK-IR adapter.

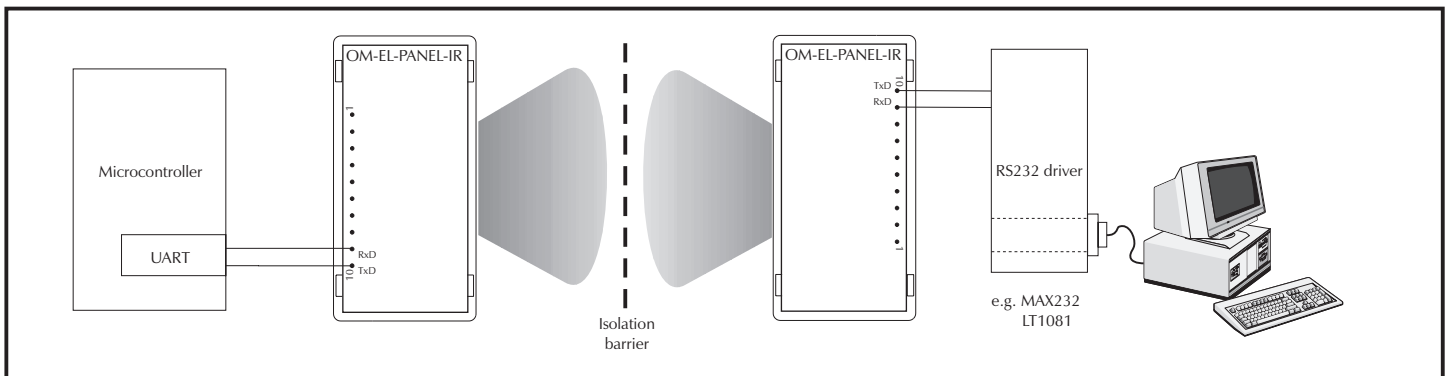

OMEGAnet™ On-Line Service <a href="http://www.omega.com">http://www.omega.com</a>	Internet e-mail <a href="mailto:info@omega.com">info@omega.com</a>
--	---

### Servicing North America:

**USA:** One Omega Drive, Box 4047  
Stamford, CT 06907-0047  
Tel: (203) 359-1660  
e-mail: [info@omega.com](mailto:info@omega.com)  
FAX: (203) 359-7700

**Canada:** 976 Bergar  
Laval (Quebec) H7L 5A1  
Tel: (514) 856-6928  
e-mail: [canada@omega.com](mailto:canada@omega.com)  
FAX: (514) 856-6886

### For immediate technical or application assistance:

**USA and Canada:** Sales Service: 1-800-826-6342 / 1-800-TC-OMEGA<sup>SM</sup>  
Customer Service: 1-800-622-2378 / 1-800-622-BEST<sup>SM</sup>  
Engineering Service: 1-800-872-9436 / 1-800-USA-WHEN<sup>SM</sup>  
TELEX: 996404 EASYLINK: 62968934 CABLE: OMEGA

**Mexico and Latin America:** Tel: (95) 800-TC-OMEGA<sup>SM</sup> FAX: (95) 203-359-7807  
En Español: (203) 359-1660 ext:2203 e-mail: [espanol@omega.com](mailto:espanol@omega.com)

### Servicing Europe:

**Benelux:** Postbus 8034, 1180 LA Amstelveen, The Netherlands  
Tel: (31) 20 6418405 FAX: (31) 20 6434643  
Toll Free in Benelux: 06 0993344  
e-mail: [nl@omega.com](mailto:nl@omega.com)

**Czech Republic:** Ostravska 767, 733 01 Karvina  
Tel: 42 (69) 6311899 FAX: 42 (69) 6311114  
e-mail: [czech@omega.com](mailto:czech@omega.com)

**France:** 9, rue Denis Papin, 78190 Trappes  
Tel: (33) 130-621-400 FAX: (33) 130-699-120  
Toll Free in France: 0800-4-06342  
e-mail: [france@omega.com](mailto:france@omega.com)

**Germany/Austria:** Daimlerstrasse 26, D-75392 Deckenpfronn, Germany  
Tel: 49 (07056) 3017 FAX: 49 (07056) 8540  
Toll Free in Germany: 0130 11 21 66  
e-mail: [germany@omega.com](mailto:germany@omega.com)

**United Kingdom:** 25 Swannington Road, PO Box 7, Omega Drive,  
Broughton Astley, Leicestershire, Irlam, Manchester,  
LE9 6TU, England M44 5EX, England  
Tel: 44 (1455) 285520 Tel: 44 (161) 777-6611  
FAX: 44 (1455) 283912 FAX: 44 (161) 777-6622  
Toll Free in England: 0800-488-488  
e-mail: [uk@omega.com](mailto:uk@omega.com)

## WARRANTY/DISCLAIMER

OMEGA ENGINEERING, INC. warrants this unit to be free of defects in materials and workmanship for a period of **13 months** from date of purchase. OMEGA Warranty adds an additional one (1) month grace period to the normal **one (1) year product warranty** to cover handling and shipping time. This ensures that OMEGA's customers receive maximum coverage on each product.

If the unit should malfunction, it must be returned to the factory for evaluation. OMEGA's Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective it will be repaired or replaced at no charge. OMEGA's WARRANTY does not apply to defects resulting from any action of the purchaser, including but not limited to mishandling, improper interfacing, operation outside of design limits, improper repair, or unauthorized modification. This WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of being damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA's control. Components which wear are not warranted, including but not limited to contact points, fuses, and triacs.

OMEGA is pleased to offer suggestions on the use of its various products. However, OMEGA neither assumes responsibility for any omissions or errors nor assumes liability for any damages that result from the use of its products in accordance with information provided by OMEGA, either verbal or written. OMEGA warrants only that the parts manufactured by it will be specified and free of defects. OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESSED OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. LIMITATION OF LIABILITY: The remedies of purchaser set forth herein are exclusive and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.

CONDITIONS: Equipment sold by OMEGA is not intended to be used, nor shall it be used: (1) as a "Basic Component" under 10 CFR 21 (NRC), used in or with any nuclear installation or activity; or (2) in medical applications or used on humans. Should any Product(s) be used in or with any nuclear installation or activity, medical application, used on humans, or misused in any way, OMEGA assumes no responsibility as set forth in our basic WARRANTY/DISCLAIMER language, and additionally, purchaser will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the Product(s) in such a manner.

## RETURN REQUESTS/INQUIRIES

Direct all warranty and repair requests/inquiries to the OMEGA Customer Service Department. BEFORE RETURNING ANY PRODUCT(S) TO OMEGA, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OMEGA'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS). The assigned AR number should then be marked on the outside of the return package and on any correspondence.

The purchaser is responsible for shipping charges, freight, insurance and proper packaging to prevent breakage in transit. FOR WARRANTY RETURNS, please have the following information available BEFORE contacting OMEGA:

1. P.O. number under which the product was PURCHASED,
2. Model and serial number of the product under warranty, and
3. Repair instructions and/or specific problems relative to the product.

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering. OMEGA is a registered trademark of OMEGA ENGINEERING, INC.

© Copyright 1996 OMEGA ENGINEERING, INC. All rights reserved. This document may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without prior written consent of OMEGA ENGINEERING, INC.

It is the policy of OMEGA to comply with all worldwide safety and EMC/EMI regulations that apply. OMEGA is constantly pursuing certification of its products to the European New Approach Directives. OMEGA will add the CE mark to every appropriate device upon certification.

The information contained in this document is believed to be correct but OMEGA Engineering, Inc. accepts no liability for any errors it contains, and reserves the right to alter specifications without notice.

**WARNING:** These products are not designed for use in, and should not be used for, patient connected applications.