


# User's Guide

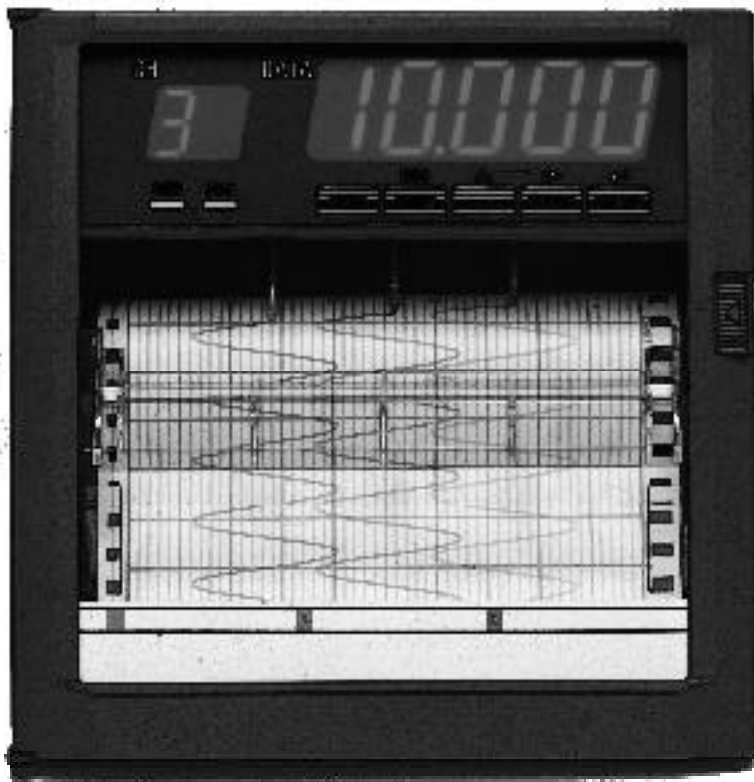

**omega.com**<sup>®</sup>  
CEOMEGA<sup>®</sup>

*http://www.omega.com*  
*e-mail: info@omega.com*

## **RD260A RECORDER** **Users Manual**



**OMEGAnet® On-Line Service**  
<http://www.omega.com>

**Internet e-mail**  
[info@omega.com](mailto:info@omega.com)

### Servicing North America:

**USA:**  
ISO 9001 Certified

One Omega Drive, Box 4047  
Stamford, CT 06907-0047  
Tel: (203) 359-1660 FAX: (203) 359-7700  
e-mail: [info@omega.com](mailto:info@omega.com)

**Canada:**

976 Bergar  
Laval (Quebec) H7L 5A1  
Tel: (514) 856-6928 FAX: (514) 856-6886  
e-mail: [info@omega.ca](mailto:info@omega.ca)

### For immediate technical or application assistance:

**USA and Canada:** Sales Service: 1-800-826-6342 / 1-800-TC-OMEGA<sup>SM</sup>  
Customer Service: 1-800-622-2378 / 1-800-622-BEST<sup>SM</sup>  
Engineering Service: 1-800-872-9436 / 1-800-USA-WHEN<sup>SM</sup>  
TELEX: 996404 EASYLINK: 62968934 CABLE: OMEGA

**Mexico and  
Latin America:**

Tel: (001) 800-826-6342 FAX: (001) 203-359-7807  
En Español: (001) 203-359-7803 e-mail: [espanol@omega.com](mailto:espanol@omega.com)

### Servicing Europe:

**Benelux:**

Postbus 8034, 1180 LAAmstelveen, The Netherlands  
Tel: (31) 20 6418405 FAX: (31) 20 6434643  
Toll Free in Benelux: 0800 0993344  
e-mail: [nl@omega.com](mailto:nl@omega.com)

**Czech Republic:**

ul. Rude armady 1868, 733 01 Karvina-Hranice  
Tel: 420 (69) 6311899 FAX: 420 (69) 6311114  
Toll Free: 0800-1-66342 e-mail: [czech@omega.com](mailto:czech@omega.com)

**France:**

9, rue Denis Papin, 78190 Trappes  
Tel: (33) 130-621-400 FAX: (33) 130-699-120  
Toll Free in France: 0800-4-06342  
e-mail: [france@omega.com](mailto:france@omega.com)

**Germany/Austria:**

Daimlerstrasse 26, D-75392 Deckenpfronn, Germany  
Tel: 49 (07056) 3017 FAX: 49 (07056) 8540  
Toll Free in Germany: 0130 11 21 66  
e-mail: [info@omega.de](mailto:info@omega.de)

**United Kingdom:**

ISO 9002 Certified

One Omega Drive, River Bend Technology Centre  
Northbank, Irlam, Manchester  
M44 5EX, United Kingdom  
Tel: +44 (0) 161 777-6611 FAX: +44 (0) 161 777-6622  
Toll Free in United Kingdom: 0800-488-488  
e-mail: [info@omega.co.uk](mailto:info@omega.co.uk)

It is the policy of OMEGA to comply with all worldwide safety and EMC/EMI regulations that apply. OMEGA is constantly pursuing certification of its products to the European New Approach Directives. OMEGA will add the CE mark to every appropriate device upon certification.

The information contained in this document is believed to be correct, but OMEGA Engineering, Inc. accepts no liability for any errors it contains, and reserves the right to alter specifications without notice.

**WARNING:** These products are not designed for use in, and should not be used for, patient-connected applications.

---

### **Notes**

- The contents of this manual are subject to change without prior notice as a result of improvements in the instrument's performance and functions. Display contents illustrated in this manual may differ slightly from what actually appears on your screen.
- Every effort has been made in the preparation of this manual to ensure the accuracy of its contents. However, should you have any questions or find any errors, please contact OMEGA Engineering.

# SAFETY PRECAUTIONS

This recorder is developed to satisfy and to be used under the following conditions:

- It is a component type instrument to be installed on an instrumentation panel or rack.
- It complies with the IEC class II safety standard.
- It complies with the EN61010-1 safety standard.
- It complies with the CSA1010-1 safety standard.
- It is based on EN55011 (EMI) Group 1, Class A (for commercial and industrial use).
- It complies with the EN50082-2 (EMS) safety standard.

## General definitions of safety symbols used on the recorder and in this manual:

Make sure to comply with the following safety precautions. Not complying might result in injury, death of personnel, or cause damage to the instrument. We assume no liability for customer's failure to comply with these requirements.



Where this mark is found on the recorder there is danger of injury or death. Please check the manual carefully



In-position of bistable push control



Out-position of bistable push control



Power ON



Alternating current



Power OFF



Functional earth terminal (This terminal should not be used as a "Protective earth terminal".)



Equipment protected throughout by double insulation or reinforced insulation (Class II).

## WARNING

### Power Supply

Ensure the source voltage matches the voltage of the power supply before turning ON the power.

### Grounding

Make sure to ground the recorder before turning on the power.

### Necessity of Grounding

Grounding is necessary to prevent noise interference.

### Do not Operate in an Explosive Atmosphere

Do not operate the recorder in the presence of flammable liquids or vapors. Operation of any electrical instrument in such an environment constitutes a safety hazard.

### Keep Away from Live Circuits

Inside this recorder there are areas of high voltage; therefore, never touch the interior when the power supply is connected. The recorder has replaceable parts and subassemblies; however, the replacement must be carried out only by our service personnel.

### External Connection

Before connecting to measurement and control unit, connect the grounding wire.

---

# Using the User's Manual

This manual contains information about the instrument's functions and operating procedures as well as precautions that should be observed during use. To ensure proper use of the instrument, please read this manual thoroughly before operating it. Keep the manual in a safe place for quick reference whenever a question arises.

Two manuals are provided with the instrument, including this User's Manual.

Manual Name	Description
User's Manual	Basic information for recorder operators.
Technical Manual	Detailed technical manual for recorder engineers, including mounting, wiring and setting information. Read this manual first.

## Structure of this Manual

Chapter	Title	Content
1	<b>Before Operation</b>	Explains basic functions and display of the recorder, and contains the handling precautions. Please read carefully.
2	<b>Daily Operation</b>	Contains all information needed for simple daily operation of the recorder, including instructions on chart, pen and ribbon cassette replacement
3	<b>Periodic Inspection</b>	About periodic inspection and cleaning of the recorder
4	<b>Troubleshooting</b>	Explains the meaning of some basic error messages on recorder display.
<b>Index</b>		

## Conventions Used in this Manual

### Displayed characters

Bold alphanumeric characters enclosed with [ ] refer to characters or setting values that are displayed on the screen.

### Symbols

The following symbol marks are used to attract the operator's attention.



Affixed to the instrument. Indicates danger to personnel or instrument and the operator must refer to the User's Manual. ThinUser's Manual to indicate the reference.



Describes precautions that should be observed to prevent injury or death to the user.



Describes precautions that should be observed to prevent minor or moderate injury, or damage to the instrument.

### *Note*

Provides important information for the proper operation of the instrument.

# Contents

△ SAFETY PRECAUTIONS .....	ii
Using the User's Manual .....	iii
<b>Chapter 1 Before Operation .....</b>	<b>1-1</b>
1.1 Front/Rear Panels: Functions and Display .....	1-1
1.2 Handling Precautions .....	1-3
<b>Chapter 2 Daily Operation .....</b>	<b>2-1</b>
2.1 Recording .....	2-1
2.2 Selecting the Display .....	2-2
2.3 Recorder Modes .....	2-3
2.4 Loading Chart Paper .....	2-4
2.5 Installing/Replacing Pens (Pen Model) .....	2-6
2.6 Installing/Replacing the Ribbon Cassette (Dot Model) .....	2-8
<b>Chapter 3 Periodic Inspection .....</b>	<b>3-1</b>
3.1 Periodic Inspection .....	3-1
<b>Chapter 4 Troubleshooting .....</b>	<b>4-1</b>
4.1 Error Messages .....	4-1
4.2 Troubleshooting .....	4-2
<b>Index .....</b>	<b>Index-1</b>

1

2


3

4

Index

## 1.1 Front/Rear Panels: Functions and Display

### Front Panel

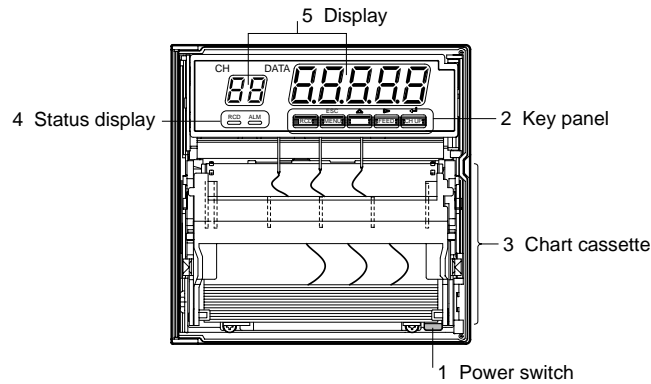

#### 1. Power switch (push-button type)

Pressing the switch turns the power ON and OFF.

#### 2. Key panel (push-key type)

The panel contains the following five keys:



##### RCD key

Pressing the key starts or stops the recording.



##### DISP key, ESC key

**DISP** function: Cycles through the modes of display in the order of AUTO, MANUAL, and OFF. Also selects between the Regular Setting and Operation modes.

If this key is pressed for three seconds, the recorder enters the Regular Setting Mode.

**ESC** function: Exits from the menu in the middle of setting or selecting procedures.



##### △ key

Selects setting parameters (numerics or command codes). Selecting step is upward circulation.

If the recorder is a pen model, pressing this key for three seconds causes the recorder to enter the pen-replacement mode.



##### FEED key, ▷ key

**FEED** function: The chart is fed as long as this key is being pressed.

▷ key function: Changes the number of digits for setting numeric values. The digit moves from high to low.



##### CH UP key, ENT key

**CH UP** function: Selects a channel for which the display shows the screen in the MANUAL display mode.

← function: Makes a parameter entry or executes a function after selecting parameters (numerals or command codes). Pressing the key executes the settings.



## Front/Rear Panels: Functions and Display

### 3. Chart cassette

Contains a Z-fold chart (width: 100 mm, length: 16 m).

### 4. Status Display

RCD indicator: illuminated when recording of measurement values is in progress.

ALM indicator: illuminates when an alarm occurs.

### 5. Seven-segment character display

Used to display data, setting screen, and so on.

- Data display (left) : Displays channel No., type of alarms, and measured data.
- Setting screen (right): Displays various settings of the recorder.

## Characters on Display


The display consists of seven segments, and therefore characters exist which are difficult to display.

Characters are presented on the display as shown in the following table:

Display	A	b	c	d	E	F	G	H	h	i	J	K	L	l
Alphabet	A	B	C	D	E	F	G	H	h	I	J	K	L	l
Display	m	n	o	P	q	r	S	t	U	v	W	X	Y	Z
Alphabet	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z

## Rear Panel

Below, the rear panel of the dot model recorder, for more details and the rear of the pen model recorder see the *Technical Manual*, Section 1.7, *Wiring*.

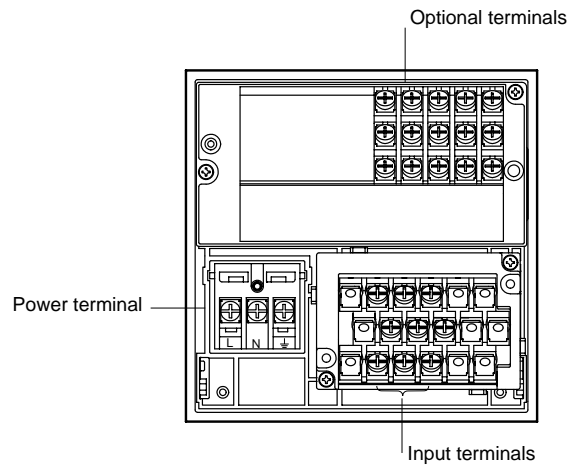

## 1.2 Handling Precautions

### Safety precautions

- Before you use this recorder make sure to read the Safety Precautions on page 2 of this manual.
- Do not touch the interior of this recorder. For the replacement of parts, please contact the dealer of which you purchased this recorder
- Turn the recorder power switch off as soon as any symptoms of malfunction such as unusual sound, smell, or smoke yield from the recorder. Also turn the main power switch off.  
If a malfunction occurs, contact the dealer from which you purchased the instrument.

### General handling precautions


- The recorder contains many plastic parts. To clean, use a soft, dry cloth. Do not use chemicals such as benzene or thinner, since these may cause discoloration or damage.
- Do not bring any objects charged with static electricity near the signal terminals. This might cause malfunction.
- Do not allow any volatile substances to the front or key panel. Do not allow rubber or vinyl to remain in contact with the recorder for long periods.
- Whenever the recorder is not used, turn the power switch OFF.

## 2.1 Recording

### Switching Power ON/OFF

The power switch is located at the lower right-hand corner of the front face behind the door. The switch is a push-button type. Press the switch to turn the recorder ON and press again to turn it OFF.

After the power turns ON, the recorder executes a self-diagnostic check for several seconds before starting measurement and recording.

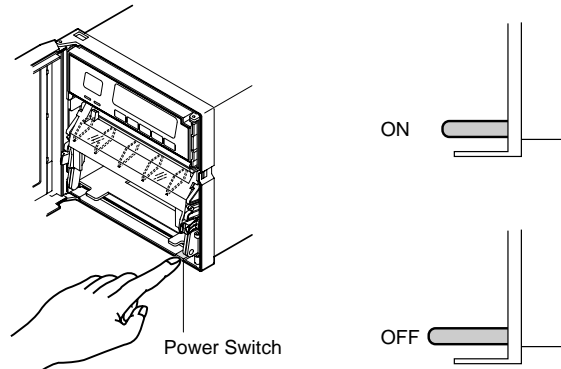

#### Note

- The warm-up time is approximately 30 minutes; however, after the initial start-up, the recorder might need more time.
- If the input wiring is connected parallel with other equipment, do not turn the power switch ON/OFF to prevent fluctuations in measuring values.

### Starting/Stopping Recording

Press the **RCD** key to start or stop the recording.

### Feeding Chart Paper

The chart paper is fed by pressing the **FEED** key as long as the key is pressed. See also Section 2.4, *Loading Chart Paper*.

## 2.2 Selecting the Display

Three different displays can be selected: Auto, Manual, and display OFF.

If the **DISP** key is pressed you the recorder will change the display modes in the order of AUTO > MANUAL > OFF,


Note that manual display can't be selected on the 1-pen model.

### Auto Display

Channel number and measured values will appear on the display.

Every channel will be shown for approximately 2 sec. If the input is greater than the upper limit of the recording span, ---- will appear.

If the input is less than the lower limit of the recording span, ---- will appear.

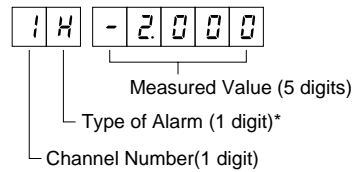

\*Type of alarm

H : high limit

L : low limit

### Manual Display

#### Pen model

The measured values of specified channels are alternately displayed every two seconds. The contents of the display are the same as that of auto mode.

#### Dot-printing model (Dot model)

The measured values of specified channels are alternately displayed every measurement cycle. The contents of the display are the same as that of auto mode.

Pressing the **CH UP** key changes the channel No. being displayed (channel No. increases).

Manual display can't be selected on the 1-pen model.

### Display OFF

Turns OFF all displays except the status display.

### Characters on Display

The display consists of seven segments, and therefore characters exist which are difficult to display.

Characters are presented on the display as shown in the following table:

Display	A	b	C	d	E	F	G	H	h	I	J	K	L	l
Alphabet	A	B	C	D	E	F	G	H	h	I	J	K	L	l
Display	m	n	o	P	q	r	S	t	U	v	W	X	Y	Z
Alphabet	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z

## 2.3 Recorder Modes

### Operation Mode

The recorder has three modes as described below:

This is the mode for daily operation; when the power turns on, the recorder automatically enters this mode.

Select from the following functions by pressing the appropriate keys on the key panel.

- △ key Replacement of pens (pen model only). See Section 2.5.
- RCD key Starting/stopping the recording.
- FEED key Feeding the chart. See Section 2.1, *Feeding Chart Paper*.
- DISP key Selection from the modes on display. See Section 1.1.

### Regular Setting Mode

In this mode, daily-used data such as alarm setpoints, date, and time are set. Pressing the **DISP** key three seconds in the operation mode changes the mode to the Regular Setting mode. For details, refer to the *Technical Manual* Section 2, *Regular Settings*.


### Basic (SETUP) Setting Mode

In the Basic (SETUP) Setting Mode, you can adjust a whole range of detailed settings such as the pen's position, dot printing position and color, the noise input filter, and remote trigger settings. For details, refer to the *Technical Manual* Section 3.


#### Note

While in the Basic (SETUP) mode, measurement, recording, and alarm detection are not carried out. Using the settings protection function, you can protect your settings by defining a password when you enter the Regular or Basic (SETUP) mode. For details on the settings protection function, see the *Technical Manual* Section 3.12.

#### Turning the Recorder Modes ON

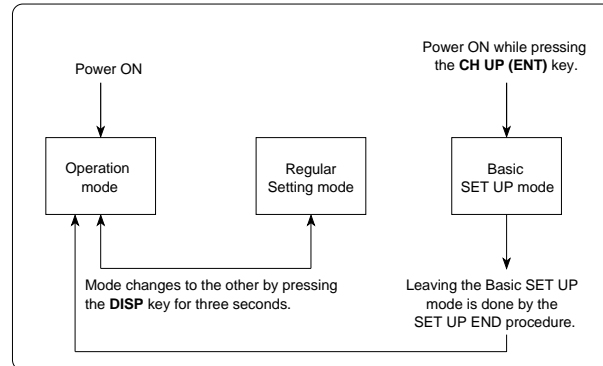


#### Turning the Recorder Modes OFF

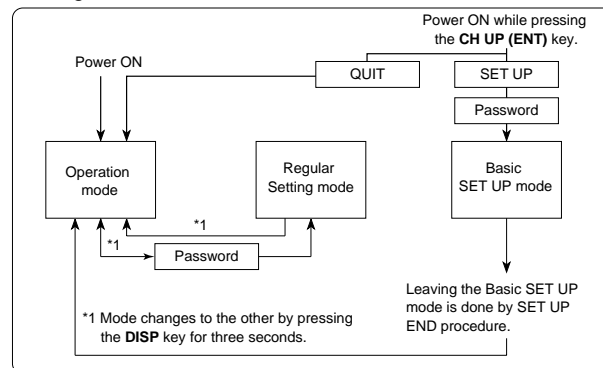



## 2.4 Loading Chart Paper

### Installing / Replacing Chart Paper


1. Open the front door of the recorder, as shown below.

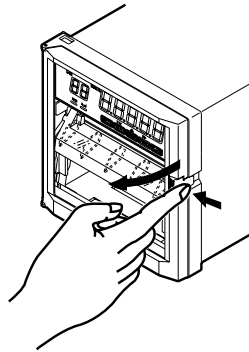

2. Make sure that recording is OFF. Power may be ON.
3. Riffle the chart thoroughly before loading.
4. While gently pressing the chart-cassette stoppers, located at both front ends of the cassette, lift and draw the cassette out of the recorder case.

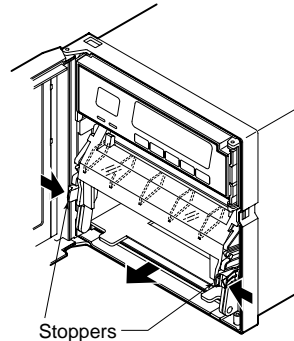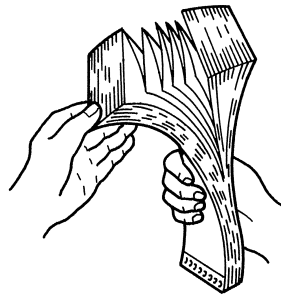


5. Open the chart retainer backward on the cassette.
6. Pull and open the front transparent chart guide.

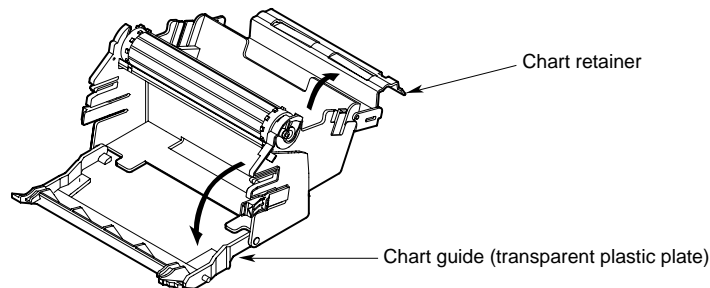


### **CAUTION**

- If you replace the chart paper compartment back into the unit without closing the front transparent chart guide, the lock tabs might be damaged.


7. Load the chart paper into the chart compartment; the small perforations should be at the left-hand. Make sure that the sprocket teeth of the chart drives are properly engaged in the chart paper perforations. Take care not to load the chart paper backwards.

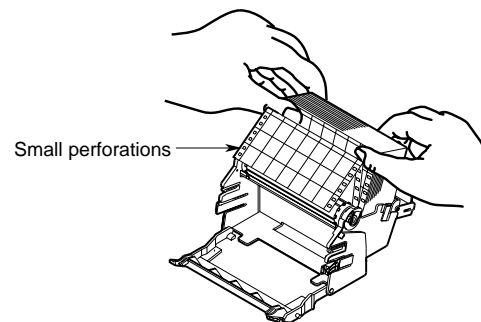

8. Close the chart retainer.
9. Close the chart guide (transparent plastic plate).

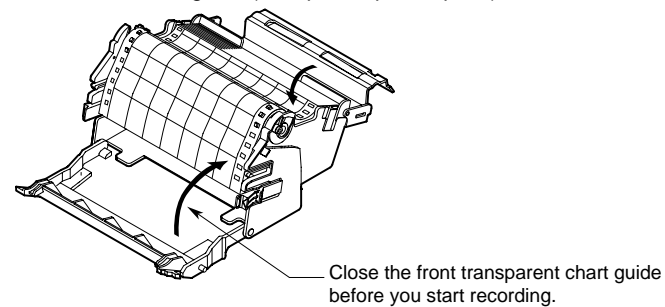

10. Replace the chart cassette back into the recorder case; hang the knurls of the cassette to the grooves of the case, and move the cassette to trap the stopper.

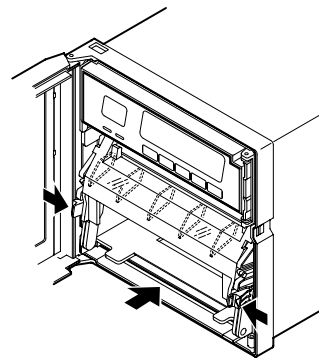

11. Press the **FEED** key on the key panel to assure that the chart moves two or more folds smoothly into the chart receiver. If it moves unsteadily, do the installing procedure again from step (4).

**Note**

A red band with a 'RENEW CHART' notice appears when the chart nears to its end (length of remaining chart is approximately 40 cm) to suggest you to prepare a new chart.


## 2.5 Installing/Replacing Pens (Pen Model)

### CAUTION

- Do not press or pinch the felt tip to prevent deformation. Do not move the pen holder up- or down-scale to protect the driving mechanism.
- Always make sure to remove the pen cap before installation.

#### Simple replacement

1. Open the front door, and make sure that recording is OFF. Power may be ON.

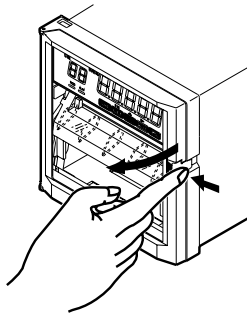


2. Pull and open the display around the hinge.

### CAUTION

- Please take care not to apply any undue pressure in an upward or downward direction to the display, to prevent strain on the hinges.
- Do not force the display open any further than about 100° from being closed.

3. Pull out the pen-cartridge by pulling the protruding part of the cartridge from the pen holder.

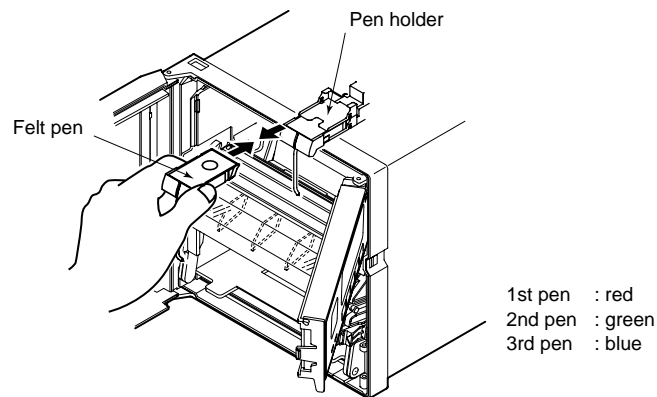

4. Remove the cap from a new felt-tip pen, and insert the pen firmly to the pen holder.
5. Press the **RCD** key to restart the recording.



**Replacement under pen-replacement mode**

When a pen is located at a place where its replacement is difficult to do, relocate the pen by the following procedures:

1. Make sure that recording is OFF. The main Power switch must be ON.
2. Press the  $\triangle$  key for three seconds to display **[C\_Pen]**, and press the **ENT** key.
3. Press the  $\triangle$  key to display **[Yes]**, and press the **ENT** key. The pens will move near to the center of the scale where the pens can be easily replaced.

Note that a line is drawn on the chart when the pens move.


4. Replace the pen according to the 'simple replacement' 2, 3, and 4 described above.
5. After pen replacement the indicator shows **[End]**, then press the **ENT** key.
6. To restart recording, press the **RCD** key.

## 2.6 Installing/Replacing the Ribbon Cassette (Dot Model)

### CAUTION

- Improper cassette insertion may cause faulty print color or damage the cassette.

1. Open the front door, and make sure that power is switched OFF.

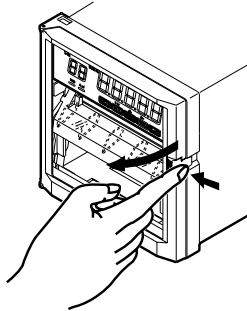


2. Open the display by pulling its left end.

### CAUTION

- Please take care not to apply any undue pressure in an upward or downward direction to the display, to prevent strain on the hinges.
- Do not force the display open any further than about 100° from being closed.

3. Hold the printer carriage, and move it to the right.
4. Hold the left-hand part of the ribbon cassette, and pull it out from the recorder case.

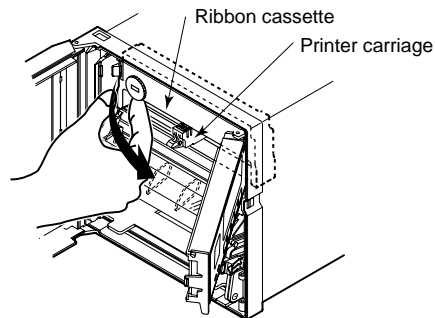

5. Insert a new ribbon cassette into the cassette holder; first, insert the right-hand part, next the left-hand part. Check that the cassette is properly engaged with the cassette holder snap.

If the cassette is not engaged with the holder properly, turn the ribbon feeding knob in the direction of the arrow to fit the peg to the driving hole of the holder.

6. To check that the cassette is properly inserted, turn the left-hand knob in the direction of the arrow a half or more turning.
7. If the ribbon loosens, turn the knob in the direction of the arrow to tighten it.
8. Turn the display back to the normal position.

## 3.1 Periodic Inspection

Check the following items periodically, and replace parts, if necessary:

### Character printing

Are recorded lines or printed characters clear, not blurred?


To replace a felt-tip pen, refer to the *User's Manual* Section 2.5 *Installing/Replacing Pens*; also, refer to *User's Manual* Section 2.6 *Installing/Replacing Ribbon Cassette* to replace the ribbon cassette of a dot-printing model.

### Chart paper

Is there enough chart paper left in the chart compartment ?


Remaining chart length (cm) is printed on the left margin of the chart at intervals of 20 cm. See also *User's Manual* Section 2.4 *Loading Chart Paper*.

Indication of Remaining Chart Length:

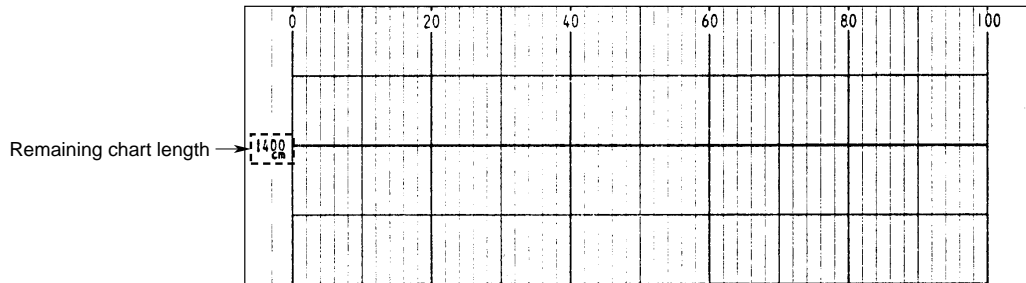

### Cleaning the Carriage Shafts (Dot Model)

To maintain proper recording functions, it is recommended to, if necessary, wipe up dust from the shaft of the printer carriage with a piece of soft cloth or paper without fluffing.

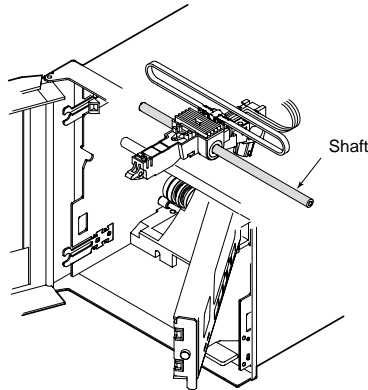

## 3.2 Fuse

### WARNING

Don't replace the fuse by yourself. Never take the recorder apart if the fuse needs to be replaced.

Contact your nearest Omega sales representative if the fuse needs to be replaced.

#### Fuse Ratings

Rated Voltage:	250V
Rated Current	1.25A
Type:	Time Lag
Approved Standard:	IEC/VE

## 4.1 Error Messages

### Error Code List


Please contact the dealer from which you purchased this recorder in case the following errors appear. See the *Technical Manual*, Section 6, for more error messages.

Error Codes	Meaning	Recovery
Er n_d t 1	Main memory reading error.	Contact OMEGA Engineering.
Er n_d t 2	Main memory writing error.	
Er A_d t 1	A/D converter memory reading error.	
Er A_d t 2	A/D converter memory writing error.	
Er A d A d d	Calibration data error of A/D converter.	
Er r o n	System ROM failure.	
Er r A n	System RAM failure.	
Er r b n	Ribbon shift, ribbon feed failure (dot model).	
Er P r n	Printer failure (dot model).	
Er S_d t □	Range memory reading/writing error.	
Er 0 0 1	System failure.	
Er 0 0 2	Entered value exceeds allowable setting range.	Enter correct data.

## 4.2 Troubleshooting

See the *Technical Manual*, Section 6, for more troubleshooting information.

**Recorder is completely inoperative:**

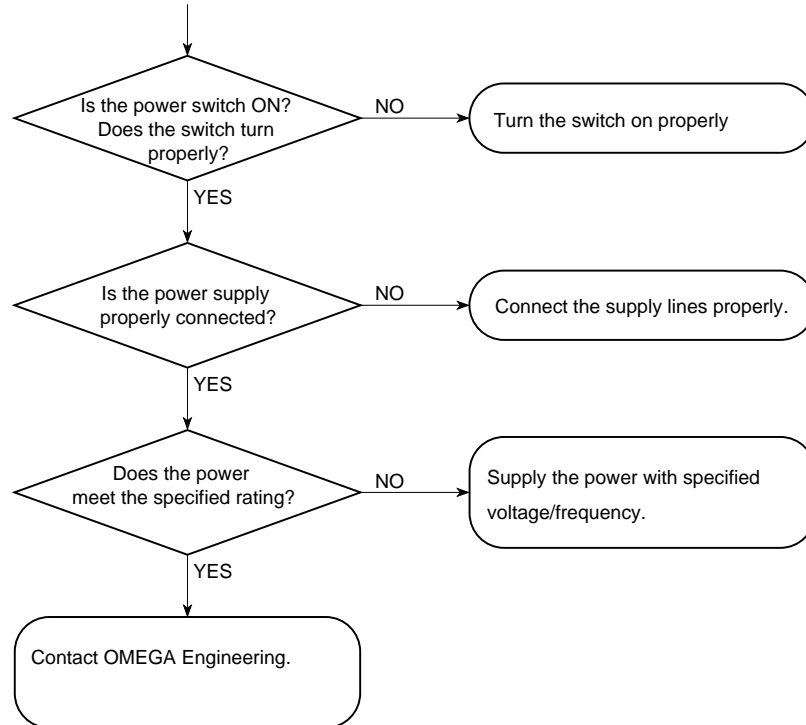

# Index

## A

ALM indicator ..... 1-2

## B

Basic (SETUP) Setting Mode ..... 2-3

## C

C\_Pen ..... 2-7  
 Carriage Shat Cleaning (Dot Model) ..... 3-1  
 Cassete (Ribbon) Installing/Replacement ..... 2-8  
 CH UP key ..... 1-1  
 Characters on Display ..... 1-2  
 Copyright ..... i

## D

DISP key ..... 1-1  
 Display  
     Auto ..... 2-2  
     Characters ..... 1-2  
     Manual ..... 2-2  
     of Status ..... 1-2  
     Turning OFF ..... 2-2  
 Dot Printing ..... 2-2

## E

ENT key ..... 1-1  
 Error Messages ..... 4-1  
 ESC key ..... 1-1

## F

FEED key ..... 1-1  
 Feeding Chart Paper ..... 2-1  
 Functions ..... 1-1

## O

Operation Mode ..... 2-3

## P

Pen Model Recorder ..... 2-2  
 Pens, Installing/Replacing (Dot Model) ..... 2-6, 2-7

## R

RCD indicator ..... 1-2  
 RCD key ..... 1-1  
 Rear Panel ..... 1-2  
 Regular Setting Mode ..... 2-3  
 Ribbon Cassete, Installing/Replacing ..... 2-8

## S

Safety Precautions ..... ii, 1-3  
 Starting/Stopping Recording ..... 2-1

## WARRANTY / DISCLAIMER

OMEGA ENGINEERING, INC. warrants this unit to be free of defects in materials and workmanship for a period of 25 months from date of purchase. OMEGA Warranty adds an additional one (1) month grace period to the normal two (2) year product warranty to cover handling and shipping time. This ensures that OMEGA's customers receive maximum coverage on each product.

If the unit malfunctions, it must be returned to the factory for evaluation. OMEGA's Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective, it will be repaired or replaced at no charge. OMEGA's WARRANTY does not apply to defects resulting from any action of the purchaser, including but not limited to mishandling, improper interfacing, operation outside of design limits, improper repair, or unauthorized modification. This WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of having been damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA's control. Components which wear are not warranted, including but not limited to contact points, fuses, and triacs.

OMEGA is pleased to offer suggestions on the use of its various products. However, OMEGA neither assumes responsibility for any omissions or errors nor assumes liability for any damages that result from the use of its products in accordance with information provided by OMEGA, either verbal or written. OMEGA warrants only that the parts manufactured by it will be as specified and free of defects. OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESS OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. LIMITATION OF LIABILITY : The remedies of purchaser set forth herein are exclusive, and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.

CONDITIONS: Equipment sold by OMEGA is not intended to be used, nor shall it be used: (1) as a "Basic Component" under 10 CFR 21 (NRC), used in or with any nuclear installation or activity; or (2) in medical applications or used on humans. Should any Product(s) be used in or with any nuclear installation or activity, medical application, used on humans, or misused in any way, OMEGA assumes no responsibility as set forth in our basic WARRANTY/DISCLAIMER language, and, additionally, purchaser will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the Product(s) in such a manner.

## RETURN REQUESTS / INQUIRIES

Direct all warranty and repair requests/inquiries to the OMEGA Customer Service Department. BEFORE RETURNING ANY PRODUCT(S) TO OMEGA, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OMEGA'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS). The assigned AR number should then be marked on the outside of the return package and on any correspondence.

The purchaser is responsible for shipping charges, freight, insurance and proper packaging to prevent breakage in transit.

FOR WARRANTY RETURNS, please have the following information available BEFORE contacting OMEGA:

1. Purchase Order number under which the product was PURCHASED,
2. Model and serial number of the product under warranty, and
3. Repair instructions and/or specific problems relative to the product.

FOR NON-WARRANTY REPAIRS, consult OMEGA for current repair charges. Have the following information available BEFORE contacting OMEGA:

1. Purchase Order number to cover the COST of the repair,
2. Model and serial number of the product, and
3. Repair instructions and/or specific problems relative to the product.

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering.

OMEGA is a registered trademark of OMEGA ENGINEERING, INC.

© Copyright 1998 OMEGA ENGINEERING, INC. All rights reserved. This document may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without the prior written consent of OMEGA ENGINEERING, INC.



# Where Do I Find Everything I Need for Process Measurement and Control? OMEGA...Of Course!

## TEMPERATURE

- ☑ Thermocouple, RTD & Thermistor Probes, Connectors, Panels & Assemblies
- ☑ Wire: Thermocouple, RTD & Thermistor
- ☑ Calibrators & Ice Point References
- ☑ Recorders, Controllers & Process Monitors
- ☑ Infrared Pyrometers

## PRESSURE, STRAIN AND FORCE

- ☑ Transducers & Strain Gauges
- ☑ Load Cells & Pressure Gauges
- ☑ Displacement Transducers
- ☑ Instrumentation & Accessories

## FLOW/LEVEL

- ☑ Rotameters, Gas Mass Flowmeters & Flow Computers
- ☑ Air Velocity Indicators
- ☑ Turbine/Paddlewheel Systems
- ☑ Totalizers & Batch Controllers

## pH/CONDUCTIVITY

- ☑ pH Electrodes, Testers & Accessories
- ☑ Benchtop/Laboratory Meters
- ☑ Controllers, Calibrators, Simulators & Pumps
- ☑ Industrial pH & Conductivity Equipment

## DATA ACQUISITION

- ☑ Data Acquisition & Engineering Software
- ☑ Communications-Based Acquisition Systems
- ☑ Plug-in Cards for Apple, IBM & Compatibles
- ☑ Datalogging Systems
- ☑ Recorders, Printers & Plotters

## HEATERS

- ☑ Heating Cable
- ☑ Cartridge & Strip Heaters
- ☑ Immersion & Band Heaters
- ☑ Flexible Heaters
- ☑ Laboratory Heaters

## ENVIRONMENTAL MONITORING AND CONTROL

- ☑ Metering & Control Instrumentation
- ☑ Refractometers
- ☑ Pumps & Tubing
- ☑ Air, Soil & Water Monitors
- ☑ Industrial Water & Wastewater Treatment
- ☑ pH, Conductivity & Dissolved Oxygen Instruments