

1 YEAR
WARRANTY



OMEGA[®] User's Guide



**Shop online at
*omega.com[®]***

e-mail: *info@omega.com*
For latest product manuals:
www.omegamanual.info

MADE IN TAIWAN

OMEGAETTE[®] HH306A Thermometer/Data Logger



omega.com info@omega.com

Servicing North America:

U.S.A.:

Omega Engineering, Inc., One Omega Drive, P.O. Box 4047
Stamford, CT 06907-0047 USA
Toll-Free: 1-800-826-6342 (USA & Canada only)
Customer Service: 1-800-622-2378 (USA & Canada only)
Engineering Service: 1-800-872-9436 (USA & Canada only)
Tel: (203) 359-1660 Fax: (203) 359-7700
e-mail: info@omega.com

For Other Locations Visit omega.com/worldwide

The information contained in this document is believed to be correct, but OMEGA accepts no liability for any errors it contains, and reserves the right to alter specifications without notice.

WARNING: These products are not designed for use in, and should not be used for, human applications.

CONTENTS

<i>TITLE</i>	<i>PAGE</i>
I. Introduction.....	1
II. Specifications.....	1
III. Symbol Definition and Button Location.....	2
IV. Operation Instructions.....	3
4.1 Power-Up.....	3
4.2 Connection the Thermocouples.....	3
4.3 Selecting the Temperature Scale.....	3
4.4 Data-Hold Operation.....	3
4.5 DataLogger.....	3
4.6 Clock Setup	3
4.7 Recording Interval Setup.....	4
4.8 Time Operation.....	4
4.9 MAX/MIN Operation.....	4
4.10 Auto Power Off.....	4
4.11 Low Battery Condition	4
4.12 Calibration Point.....	4
4.13 Digital Output.....	5
V. Setup SE-305 (Thermo DataLogger)—RS232 interface software.....	7

I. Introduction:

This instrument is a digital thermometer for use with any K-type thermocouple as temperature sensor. Temperature indication follows National Bureau of Standards and IEC584 temperature/voltage table for K-type thermocouples. Its internal memory can keep up to 16312 records.(note1.) It uses RS232 interface to perform bi-directional communication with PC.

II. Specifications:

Numerical Display: 4 digital Liquid Crystal Display

Measurement Range: -200°C ~ 1370°C ; -328°F ~ 2498°F

Resolution: -200°C~ 200°C 0.1°C; 200°C ~1370°C 1°C
-200°F~ 200°F 0.1°F; else 1°F

Input Protection at Thermocouple Input: 60V DC, or 24Vrms AC

Environmental:

- ☐ Operating Temperature and Humidity: 0°C ~50°C (32°F ~ 122°F); 0 ~ 80% RH
- ☐ Storage Temperature and Humidity: -10°C to 60°C (14°F ~ 140°F); 0 ~ 80% RH
- ☐ Altitude up to 2000 meters.

Accuracy: at (23 ± 5°C)

Range	Accuracy
-200°C ~ 200°C	±(0.2% reading + 1°C)
200°C ~ 400°C	±(0.5% reading + 1°C)
400°C ~1370°C	±(0.2% reading + 1°C)
-328°F ~ -200°F	±(0.5% reading + 2°F)
-200°F ~ 200°F	±(0.2% reading + 2°F)
200°F ~ 2498°F	±(0.3% reading + 2°F)

Temperature Coefficient:

For ambient temperatures from 0°C ~ 18°C and 28°C ~ 50°C, for each °C ambient below 18°C or above 28°C add the following tolerance into the accuracy spec.

0.01% of reading + 0.03°C
(0.01% of reading + 0.06°F)



Note:

The basic accuracy Specification does not include the error of the probe. Please refer to the probe accuracy specification for additional details.

Sample Rate: 1.25 times per second

Dimension: 184×64×30mm

Weight: 210g Approx.

Accessory: K Type Bead Probe, Battery, Carrying Case, Instruction Menu, Software program, RS-232 & USB Connection Cable.

Power requirement: 9 Volt Battery

Battery Life: Approx. 100hrs with alkaline battery

AC Adapter: 9VDC ±15% 100mA




Plug Diameter: 3.5mm×1.35mm


Option : AC Adapter

note1:

Every time you press "REC" button to start recording data and press "REC" button again to stop recording, there will be a data set in memory, you can store as many data sets as you want until memory is full.

III. Symbol Definition and Button Location:

-  : This indicates that the minus temperature is sensed.
- °C°F** : Centigrade and Fahrenheit indication.
- K** : Thermocouple Type Indication
- MAX** : The Maximum value is now being displayed
- MIN** : The Minimum value is now being displayed
-  : This indicates auto power off is enabled.
- H** : This indicates that the display data is being held.
- m-d** : it indicates the value below is month and day
- h:m** : it indicates the value below is hour and minute
- m:s** : it indicates the value below is minute and second
- y** : it indicates year is displayed in the main window.
-  : The Battery is not sufficient for proper operation.
- REC** : This indicates that the tester is recording. If it blinks, it indicates the memory is full.

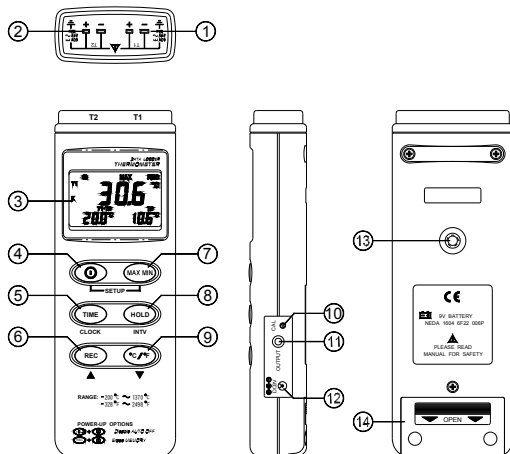

Button Location:

- ① K type temperature sensor T1 input connector
- ② K type temperature sensor T2 input connector
- ③ LCD display
- ④ ON/OFF button
- ⑤ Time display button
- ⑥ Record button
- ⑦ MAX MIN function control button
- ⑧ HOLD button
- ⑨ °C, °F control button
- ⑩ Offset calibration screw
- ⑪ Digital output connector
- ⑫ AC power adapter connector
- ⑬ Tripod connector
- ⑭ Battery cabinet cover

IV. Operation Instructions:

4.1 Power-Up

Press the power button to turn the thermometer ON or OFF.

When the user powers on, the LCD will show how much memory space is available to use.



For example: It indicates that there are 16,000 records memory space available.

4.2 Connection the Thermocouples

For measurement, plug the thermocouple into the input connectors.

4.3 Selecting the Temperature Scale

When the meter is first powered on, the default scale setting is set at Celsius (°C) scale. The user may change it to Fahrenheit (°F) by pressing "°C/°F" button and vice versa to Celsius. Next time you power on, the scale setting will be the same as which when you power off last time.

4.4 Data-Hold Operation

The user may hold the present reading and keep it on the display by pressing the "HOLD" button. When the held data is no longer needed, one may release the data-hold operation by pressing "HOLD" button again.

When the meter is under Data Hold operation, the "TIME", "MAX MIN" and "°C/°F" button are disabled. (when you press "TIME", "°C/°F" and "max min" button in HOLD mode, there will be two continuous beeps)

To exit the MAX/MIN mode, one may press and hold "MAX MIN" button for two seconds.

4.5 DataLogger:

When one presses the "REC" button, the meter will start recording, and pressing the "REC" button again will stop recording, If you want to clear the memory, power off the meter, then press and hold "REC" button and then press power button and hold at least 2 seconds, then release all buttons, then LCD will show "CLR" to clear the memory.



4.6 Clock Setup:




1: press and hold "MAX MIN" button and then power on the meter:

2: press "TIME"(clock):

3: press "REC" ▲ or "°C/°F" ▼ to increase or decrease number, press "TIME"(clock) to adjust next item. The adjusting order is year→month→day→hour→minute, then press "TIME" (clock) to finish adjusting. If you want abort during a setup process, press power button to cancel.

4.7 Recording Interval Setup :



1: press and hold "MAX MIN" button and then power on the meter:

2: press "HOLD"(INTV)

3: press "REC" ▲ or "°C/°F" ▼ to increase or decrease number, press "HOLD" (INTV) to adjust next item, then press "HOLD" (INTV) to finish. If you want abort during a setup process, press power button to cancel.

4.8 Time Operation:

When pressing the "TIME" button, the LCD will display time, it will show year on top of the LCD, show month and day on the left bottom of the LCD, show hour and minute on the right bottom of the LCD. Press "TIME" button or any other button will exit this mode. This operation will not interrupt the recording and "MAX MIN" operation.

4.9 MAX/MIN Operation:

When pressing the "MAX MIN" button the meter will enter the MAX/MIN mode. Under this mode the maximum value, minimum value is kept in the memory simultaneously and updated with every new sample of data.

When the MAX symbol is display, the Maximum is shown on the display.

Press "MAX MIN" again, then the MIN symbol is on the display and also the minimum reading.

Press "MAX MIN" again, MAX, and MIN will blink together. This means that all these data is updated in the memory and the reading is the present temperature.


One may press "MAX MIN" to circulate the display mode among these options.

When the meter is under "MAX MIN" operation and "°C/°F" button are disabled.(when you press "°C/°F" button in "MAX MIN" mode, there will be two continuous beep)


To exit the MAX/MIN mode, one may press and hold "MAX MIN" for two seconds.

4.10 Auto Power Off:

By default, when the meter is powered on, it is under auto power off mode. The meter will power itself off after 30 minutes if no key operation and no RS232 communication combination at power on can disable auto power off.

One may press and hold "HOLD" button and then power on the meter and there will be two successive beeps to indicate that auto power off is disabled and the  will not show up.

4.11 Low Battery Condition

When the battery voltage is under proper operation requirement, the  symbol will show on the LCD and the battery need to be replaced with new one.

4.12 Calibration Point:

input	Adjust VR	tolerance
0 °C	VR1	± 0.1 °C
190 °C	VR2	± 0.1 °C
1000 °C	VR3	± 1 °C
1900 °F	VR4	± 1 °F

P.S


Normally, performing offset Calibration with thermal stabled ice water through VR1 will give a very good calibration result.

4.13 Digital Output:

The Digital Output is a 9600bps N 81 serial interface.

The RX is a 5V normal high input port.

The TX is a 5V normal high output port.

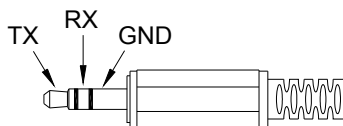

The command of Digital Output is list below:

RS232 command	Function	Remarks
K(ASC 4BH)	Ask for model No.	Return 4 bytes
A(ASC 41H)	Inquire all encoded data	Return encoded 10 byte
H(ASC 48H)	Hold button	
M(ASC 4DH)	MAX/MIN button	
N(ASC 4EH)	Exit MAX/MIN mode	
T(ASC 52H)	TIME button	
C(ASC 43H)	C/F button	
U(ASC 55H)	Dump all memory of thermometer	return 32768 bytes
P(ASC 50H)	Load recorded data	

- **Command K:**

Return 4 bytes. For example, when sending command "K" to the meter, it will return "3","0","6", ASCII(13).

- **Command U:**

Return 32768 bytes.

- **Command P:**

Instead of returning all 32768 bytes, it only return recorded data.

- **Command H:**

Equivalent to one pushing on the HOLD button and no message is returned.

- **Command M:**

Equivalent to one pushing on the MAX/MIN button and no message is returned.

- **Command N:**

Equivalent to one pushing and hold the MAX/MIN button for two seconds to exit MAX/MIN mode.

- **Command T:**

Equivalent to one pushing on the TIME button and no message is returned.

- **Command C:**

Equivalent to one pushing on the °C/°F button and no message is returned.

- **Command A:**

1st BYTE:

The first byte is the start byte , it value is 2.

2nd BYTE:

bit7	bit6	bit5	bit4	bit3	bit2	bit1	bit0
C/F	Low Bat	Hold		TIME	MAX/MIN		REC

bit 0: 1→recording mode, 0→not recording

bit 2 bit 1

0	0	→normal mode
0	1	→MAXIMUM mode
1	0	→MINIMUM mode
1	1	→calculate MAX/MIN in background mode .

bit3: 1→Indicates the LCD is displaying time.

bit4: no use

bit5: 1→ HOLD, 0→not HOLD

bit6: 1→LOW BATTERY , 0→BATTERY NORMAL

bit7: 1→°C 0→°F

3th BYTE:

bit7	bit6	bit5	bit4	bit3	bit2	bit1	bit0
Auto Power Off	memory full	resolution	sign	OL	resolution	sign	OL

bit0: 1→T1 is OL, 0→not OL

bit1: 1→T1 value is minus, 0→T1 value is plus.

bit2: 1→4th byte and 5th byte represent ##### , 0→4th byte and 5th byte represent ###.#

bit3: 1→T2 is OL, 0→not OL

bit4: 1→T2 value is minus, 0→T2 value is plus.

bit5: 1→8th byte and 9th byte represent ##### , 0→8th byte and 9th byte represent ###.#

bit6: 1→Memory is full. 0→Memory is not full.

bit7: 1→Auto power off enabled. 0→Auto power off disabled.

4th BYTE: first two BCD code of T1 value.

5th BYTE: last two BCD code of T1 value

6th BYTE:

If bit3 of 2nd **BYTE** =0 : first two BCD code of T1-T2 value.

If bit3 of 2nd **BYTE** =1 : two BCD code of month.

7th BYTE:

If bit3 of 2nd **BYTE** =0 : last two BCD code of T1-T2 value.

If bit3 of 2nd **BYTE** =1 : two BCD code of day.

8th BYTE:

If bit3 of 2nd **BYTE** =0 : first two BCD code of T2 value.

If bit3 of 2nd **BYTE** =1 : two BCD code of hour.

9th BYTE:

If bit3 of 2nd **BYTE** =0 : last two BCD code of T2 value.

If bit3 of 2nd **BYTE** =1 : two BCD code of minute.


10th BYTE: end byte, it value is 3, 1nd and 10th are used to check frame error.

V. Setup SE-305 (Thermo DataLogger)— RS232 interface software:

- **The ThermoLog package contains:**
 1. One CD.
 2. Custom designed RS232 cable for SE-305-SW.
 3. Custom designed USB cable for SE-305-SW.
- **System Required:**
Windows 95 or Windows 98 or Windows NT 4.0 above.
- **Minimum Hardware Required:**
486-100 MHz PC compatible , 16 MB RAM ;
At least 5 MB hard disk space available to install ThermoLog program. Recommended display resolution is 800X600.
- **Install ThermoLog:**
 1. We recommend to close all other applications before installing ThermoLog software.
 2. Insert CD into disk drive.
 3. Choose the Start button on the Taskbar and select Run.
 4. Type A:\SETUP and choose OK, then it will copy ThermoLog.exe (executable file) and help file to your hard disk (default is c:\program files\ThermoLog).

For other operation instruction, please refer to the on-line help while executing ThermoLog.

Main Menu

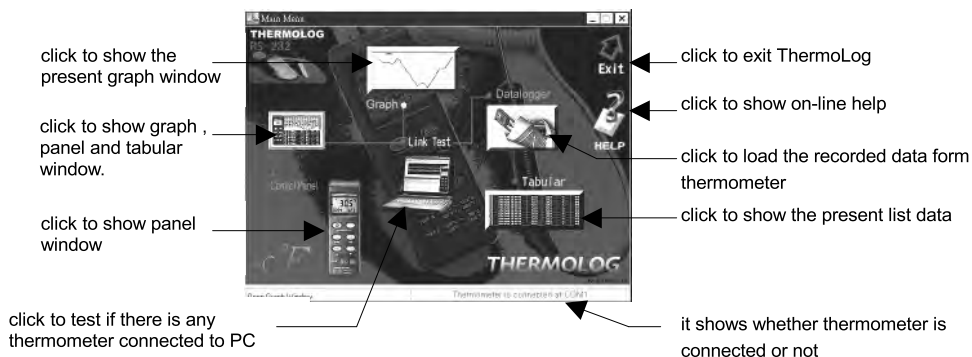

Link Test :

Open Link Test window to search for thermometer connected to PC. When you start the ThermoLog, this window will display first and search for thermometer. The result will be shown in the text box.

View | Control Panel:

By opening the Panel Window, the user can control meter via the button in this window.

View | Real-Time Graph:

Open Real-Time Graph display to graph the present data.

Real Time | Run - Start collecting real time data.

Stop - Stop collecting real time data.

DataLogger:

By opening the DataLogger Window, the user can load recorded data of meter to PC in this window.

ComPort: Select the port manually.

Option: | Range : Change the Y axis extension.

Graph Customization : Graph Customization.

For more operation instruction, please refer to the online help while executing SE-305.

NOTES:

NOTES:

NOTES:

WARRANTY/DISCLAIMER

OMEGA ENGINEERING, INC. warrants this unit to be free of defects in materials and workmanship for a period of **13 months** from date of purchase. OMEGA's WARRANTY adds an additional one (1) month grace period to the normal **one (1) year product warranty** to cover handling and shipping time. This ensures that OMEGA's customers receive maximum coverage on each product.

If the unit malfunctions, it must be returned to the factory for evaluation. OMEGA's Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective, it will be repaired or replaced at no charge. OMEGA's WARRANTY does not apply to defects resulting from any action of the purchaser, including but not limited to mishandling, improper interfacing, operation outside of design limits, improper repair, or unauthorized modification. This WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of having been damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA's control. Components in which wear is not warranted, include but are not limited to contact points, fuses, and triacs.

OMEGA is pleased to offer suggestions on the use of its various products. However, OMEGA neither assumes responsibility for any omissions or errors nor assumes liability for any damages that result from the use of its products in accordance with information provided by OMEGA, either verbal or written. OMEGA warrants only that the parts manufactured by the company will be as specified and free of defects. OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESSED OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. LIMITATION OF LIABILITY: The remedies of purchaser set forth herein are exclusive, and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.

CONDITIONS: Equipment sold by OMEGA is not intended to be used, nor shall it be used: (1) as a "Basic Component" under 10 CFR 21 (NRC), used in or with any nuclear installation or activity; or (2) in medical applications or used on humans. Should any Product(s) be used in or with any nuclear installation or activity, medical application, used on humans, or misused in any way, OMEGA assumes no responsibility as set forth in our basic WARRANTY/DISCLAIMER language, and, additionally, purchaser will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the Product(s) in such a manner.

RETURN REQUESTS/INQUIRIES

Direct all warranty and repair requests/inquiries to the OMEGA Customer Service Department. BEFORE RETURNING ANY PRODUCT(S) TO OMEGA, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OMEGA'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS). The assigned AR number should then be marked on the outside of the return package and on any correspondence.

The purchaser is responsible for shipping charges, freight, insurance and proper packaging to prevent breakage in transit.

FOR **WARRANTY** RETURNS, please have the following information available BEFORE contacting OMEGA:

1. Purchase Order number under which the product was PURCHASED,
2. Model and serial number of the product under warranty, and
3. Repair instructions and/or specific problems relative to the product.

FOR **NON-WARRANTY** REPAIRS, consult OMEGA for current repair charges. Have the following information available BEFORE contacting OMEGA:

1. Purchase Order number to cover the COST of the repair,
2. Model and serial number of the product, and
3. Repair instructions and/or specific problems relative to the product.

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering.

OMEGA is a registered trademark of OMEGA ENGINEERING, INC.

© Copyright 2014 OMEGA ENGINEERING, INC. All rights reserved. This document may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without the prior written consent of OMEGA ENGINEERING, INC.

Where Do I Find Everything I Need for Process Measurement and Control? **OMEGA...Of Course!** *Shop online at omega.comSM*

TEMPERATURE

- ☑ Thermocouple, RTD & Thermistor Probes, Connectors, Panels & Assemblies
- ☑ Wire: Thermocouple, RTD & Thermistor
- ☑ Calibrators & Ice Point References
- ☑ Recorders, Controllers & Process Monitors
- ☑ Infrared Pyrometers

PRESSURE, STRAIN AND FORCE

- ☑ Transducers & Strain Gages
- ☑ Load Cells & Pressure Gages
- ☑ Displacement Transducers
- ☑ Instrumentation & Accessories

FLOW/LEVEL

- ☑ Rotameters, Gas Mass Flowmeters & Flow Computers
- ☑ Air Velocity Indicators
- ☑ Turbine/Paddlewheel Systems
- ☑ Totalizers & Batch Controllers

pH/CONDUCTIVITY

- ☑ pH Electrodes, Testers & Accessories
- ☑ Benchtop/Laboratory Meters
- ☑ Controllers, Calibrators, Simulators & Pumps
- ☑ Industrial pH & Conductivity Equipment

DATA ACQUISITION

- ☑ Data Acquisition & Engineering Software
- ☑ Communications-Based Acquisition Systems
- ☑ Plug-in Cards for Apple, IBM & Compatibles
- ☑ Data Logging Systems
- ☑ Recorders, Printers & Plotters

HEATERS

- ☑ Heating Cable
- ☑ Cartridge & Strip Heaters
- ☑ Immersion & Band Heaters
- ☑ Flexible Heaters
- ☑ Laboratory Heaters

ENVIRONMENTAL MONITORING AND CONTROL

- ☑ Metering & Control Instrumentation
- ☑ Refractometers
- ☑ Pumps & Tubing
- ☑ Air, Soil & Water Monitors
- ☑ Industrial Water & Wastewater Treatment
- ☑ pH, Conductivity & Dissolved Oxygen Instruments