

## Where Do I Find Everything I Need for Process Measurement and Control? OMEGA...Of Course!

### TEMPERATURE

- ☑ Thermocouple, RTD & Thermistor Probes, Connectors, Panels & Assemblies
- ☑ Wire: Thermocouple, RTD & Thermistor
- ☑ Calibrators & Ice Point References
- ☑ Recorders, Controllers & Process Monitors
- ☑ Infrared Pyrometers

### PRESSURE, STRAIN AND FORCE

- ☑ Transducers & Strain Gages
- ☑ Load Cells & Pressure Gages
- ☑ Displacement Transducers
- ☑ Instrumentation & Accessories

### FLOW/LEVEL

- ☑ Rotameters, Gas Mass Flowmeters & Flow Computers
- ☑ Air Velocity Indicators
- ☑ Turbine/Paddlewheel Systems
- ☑ Totalizers & Batch Controllers

### pH/CONDUCTIVITY

- ☑ pH Electrodes, Testers & Accessories
- ☑ Benchtop/Laboratory Meters
- ☑ Controllers, Calibrators, Simulators & Pumps
- ☑ Industrial pH & Conductivity Equipment

### DATA ACQUISITION

- ☑ Data Acquisition & Engineering Software
- ☑ Communications-Based Acquisition Systems
- ☑ Plug-in Cards for Apple, IBM & Compatibles
- ☑ Datalogging Systems
- ☑ Recorders, Printers & Plotters

### HEATERS

- ☑ Heating Cable
- ☑ Cartridge & Strip Heaters
- ☑ Immersion & Band Heaters
- ☑ Flexible Heaters
- ☑ Laboratory Heaters


### ENVIRONMENTAL MONITORING AND CONTROL

- ☑ Metering & Control Instrumentation
- ☑ Refractometers
- ☑ Pumps & Tubing
- ☑ Air, Soil & Water Monitors
- ☑ Industrial Water & Wastewater Treatment
- ☑ pH, Conductivity & Dissolved Oxygen Instruments

CE



# User's Guide

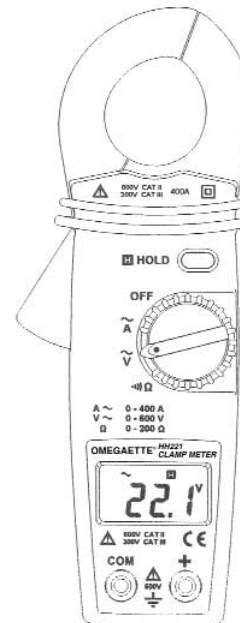

**omega.com™**  
Ω-OMEGA®

[www.omega.com](http://www.omega.com)  
e-mail: [info@omega.com](mailto:info@omega.com)

# OMEGAETTE® HHM221 Mini Clamp Meter



OMEGA<sup>net</sup>™ On-Line Service  
www.omega.com

Internet e-mail  
info@omega.com

### Servicing North America:

**USA:**  
ISO 9001 Certified  
One Omega Drive, Box 4047  
Stamford CT 06907-0047  
Tel: (203) 359-1660  
e-mail: info@omega.com  
FAX: (203) 359-7700

**Canada:**  
976 Bergar  
Laval (Quebec) H7L 5A1  
Tel: (514) 856-6928  
e-mail: info@omega.ca  
FAX: (514) 856-6886

### For immediate technical or application assistance:

**USA and Canada:** Sales Service: 1-800-826-6342 / 1-800-TC-OMEGA™  
Customer Service: 1-800-622-2378 / 1-800-622-BEST™  
Engineering Service: 1-800-872-9436 / 1-800-USA-WHEN!  
TELEX: 996404 EASYLINK; 62968934 CABLE: OMEGA

**Mexico:** Tel: (001) 800-826-6342 FAX: (001) 203-359-7807  
En Español: (001) 203-359-7803 e-mail: espanol@omega.com  
info@omega.com.mx

### Servicing Europe:

**Benelux:** Postbus 8034, 1180 LA Amstelveen, The Netherlands  
Tel: +31 (0)20 6418405 FAX: +31 (0)20 6434643  
Toll Free in Benelux: 0800 0993344  
e-mail: nl@omega.com

**Czech Republic:** Rudé armády 1868, 733 01 Karviná 8  
Tel: +420 (0)69 6311899 FAX: +420 (0)69 6311114  
Toll Free: 0800-1-66342 e-mail: czech@omega.com

**France:** 9, rue Denis Papin, 78190 Trappes  
Tel: +33 (0)130 621 400 FAX: +33 (0)130 699 120  
Toll Free in France: 0800-4-06342  
e-mail: france@omega.com

**Germany/Austria:** Daimlerstrasse 26, D-75392 Deckenpfronn, Germany  
Tel: +49 (0)7056 3017 FAX: +49 (0)7056 8540  
Toll Free in Germany: 0800 TC-OMEGA™  
e-mail: germany@omega.com

**United Kingdom:** One Omega Drive, River Bend Technology Centre  
ISO 9002 Certified Northbank, Irlam, Manchester  
M44 5EX United Kingdom  
Tel: +44 (0)161 777 6611 FAX: +44 (0)161 777 6622  
Toll Free in United Kingdom: 0800-488-488  
e-mail: sales@omega.co.uk

It is the policy of OMEGA to comply with all worldwide safety and EMC/EMI regulations that apply. OMEGA is constantly pursuing certification of its products to the European New Approach Directives. OMEGA will add the CE mark to every appropriate device upon certification.

The information contained in this document is believed to be correct, but OMEGA Engineering, Inc. accepts no liability for any errors it contains, and reserves the right to alter specifications without notice.  
**WARNING:** These products are not designed for use in, and should not be used for, patient-connected applications.

### WARRANTY/DISCLAIMER

OMEGA ENGINEERING, INC. warrants this unit to be free of defects in materials and workmanship for a period of **13 months** from date of purchase. OMEGA's WARRANTY adds an additional one (1) month grace period to the normal **one (1) year product warranty** to cover handling and shipping time. This ensures that OMEGA's customers receive maximum coverage on each product.

If the unit malfunctions, it must be returned to the factory for evaluation. OMEGA's Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective, it will be repaired or replaced at no charge. OMEGA's WARRANTY does not apply to defects resulting from any action of the purchaser, including but not limited to mishandling, improper interfacing, operation outside of design limits, improper repair, or unauthorized modification. This WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of having been damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA's control. Components which wear are not warranted, including but not limited to contact points, fuses, and triacs.

**OMEGA is pleased to offer suggestions on the use of its various products. However, OMEGA neither assumes responsibility for any omissions or errors nor assumes liability for any damages that result from the use of its products in accordance with information provided by OMEGA, either verbal or written. OMEGA warrants only that the parts manufactured by it will be as specified and free of defects. OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESS OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. LIMITATION OF LIABILITY:** The remedies of purchaser set forth herein are exclusive, and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.

**CONDITIONS:** Equipment sold by OMEGA is not intended to be used, nor shall it be used: (1) as a "Basic Component" under 10 CFR 21 (INPC), used in or with any nuclear installation or activity; or (2) in medical applications or used on humans. Should any Product(s) be used in or with any nuclear installation or activity, medical application, used on humans, or misused in any way, OMEGA assumes no responsibility as set forth in our basic WARRANTY/ DISCLAIMER language, and, additionally, purchaser will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the Product(s) in such a manner.

### RETURN REQUESTS / INQUIRIES

Direct all warranty and repair requests/inquiries to the OMEGA Customer Service Department. **BEFORE RETURNING ANY PRODUCTS TO OMEGA, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OMEGA'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS).** The assigned AR number should then be marked on the outside of the return package and on any correspondence. The purchaser is responsible for shipping charges, freight, insurance and proper packaging to prevent breakage in transit.

**FOR WARRANTY RETURNS,** please have the following information available **BEFORE** contacting OMEGA:

1. Purchase Order number under which the product was PURCHASED.
2. Model and serial number of the product under warranty, and
3. Repair instructions and/or specific problems relative to the product.

**FOR NON-WARRANTY REPAIRS,** consult OMEGA for current repair charges. Have the following information available **BEFORE** contacting OMEGA:

1. Purchase Order number to cover the COST of the repair,
2. Model and serial number of the product, and
3. Repair instructions and/or specific problems relative to the product.

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering.

OMEGA is a registered trademark of OMEGA ENGINEERING, INC.  
© Copyright 1999 OMEGA ENGINEERING, INC. All rights reserved. This document may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without the prior written consent of OMEGA ENGINEERING, INC.

## CONTENTS

TITLE	PAGE
<b>I. Safety Information</b> .....	3
Environmental Conditions.....	3
Explanation of Symbols.....	3
<b>II. Specification</b> .....	4
General Specification.....	4
Electrical Specification.....	4
<b>III. Instrument Familiarization</b> .....	5
Symbol Definition.....	5
<b>IV. Measuring Instruction</b> .....	7
4.1 ACA measurement.....	7
4.2 ACV measurement.....	8
4.3 Resistance measurement.....	9
4.4 Continuity Test.....	10
<b>V. Battery Changing</b> .....	11
<b>VI. Maintenance</b> .....	11

**I.  Safety Information**

Do not operate the tester if the body of meter or the test lead look broken.


Check the main function dial and make sure it is at the correct position before each measurement.

Do not perform resistance and continuity test on a live power system.

Do not apply voltage between the test terminals and test terminal to ground that exceed the maximum limit refer in this manual.

Exercise extreme caution when measuring live system with voltage greater than 60V DC or 30V AC.

Keep the fingers after the protection ring when measuring through the test lead.

Change the battery when the  symbol appears to avoid incorrect data.

**Environmental Conditions:**


Altitude up to 2000 meters.


Operating temperature: 0°C ~ 40°C, <80% RH, non-condensing


Storage temperature: -10°C ~ 60°C, <70% RH, battery removed


Pollution Degree: 2

**Explanation of Symbols:**

 Attention! Refer to operation Instructions.

 Dangerous voltage may be present at terminals.

 This instrument has double insulation.

Approvals:  EN61010 600V CAT II 300V CAT III

## II. Specification

### General Specification:

**Digital Display:**

3 1/2 digits LCD display with maximum reading 1999


**Over Load:**

When the indication is larger than the 1999 counts, the LCD will show 1000 with blinking 1

**Sample Rate:**

2 times/sec

**Low Power Indication:**

When the battery is under the proper operation range,  symbol will appear on the LCD display.

**Power Source:** AAA 1.5V battery x 2.

**Clamp opening size:** 25mm

**Dimension (L x W x H) :**

187x50x29mm, 7.36x1.97x1.14 inch

**Weight:** 210g( include battery)

**Accessory:**

Instruction Manual, Carrying Case, Test lead, Battery 1.5Vx2

**Battery Life:** 1000 hr approx. (alkaline battery)

### Electrical Specification:

The accuracy specification is defined as  $\pm ( \dots \% \text{reading} + \dots \text{count} )$   
At  $23 \pm 5^{\circ}\text{C}$ ,  $\leq 80 \% \text{RH}$

**ACA (Autorange)**

Range	Resolution	Accuracy ( 50Hz~60Hz)	Overload Protection
200A	0.1A	2%+5	660Arms
600A	1A		

**ACV (Autorange)**

Range	Resolution	Accuracy (50Hz-500Hz)	Overload Protection
200V	0.1V	1.5%+5	660Vrms
600V	1V		

**Ohm ( Ω )**


Range	Resolution	Accuracy	MAX Test Voltage	Overload Protection
200 Ω	0.1 Ω	1.9%+3	1.6Vdc	500Vrms

**Continuity (••))**


Range	Active Region	MAX Test Voltage	Overload Protection
••))	<100 Ohm	1.6Vdc	500Vrms

**III. Instrument Familiarization:**

**Symbol Definition:**

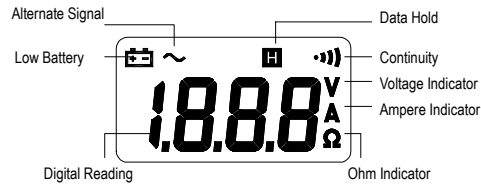

**Instrument Familiarization:**

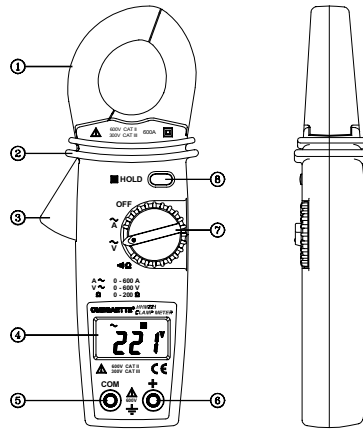

- |                          |                           |
|--------------------------|---------------------------|
| ← Current Sensing Clamp  | ◦ COM input terminal      |
| ↑ Safety protection ring | ± Positive input terminal |
| → Clamp opening handle   | ” Function select dial    |
| ↓ LCD display            | ≥ Data hold button        |

**IV. Measuring Instruction:****4.1 ACA measurement:**

Switch the function selector to A~ range.



Open the clamp by pressing the jaw-opening handle and insert the cable to be measured into the jaw.

Close the clamp and get the reading from the LCD panel.

**Note:**

Before this measurement, disconnect the test lead with the meter for safety.

In some occasion that the reading is hard to read, push the HOLD button and read the result later.

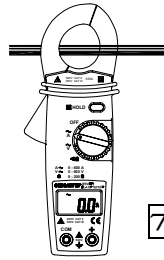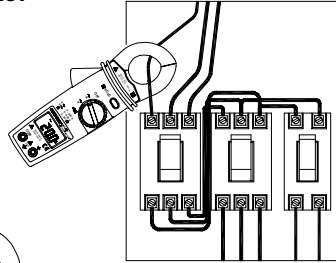**4** CORRECT**7** INCORRECT




**4.2 ACV measurement:**

Switch the function selector to V~ range.

Connect red test lead to "+" terminal and black one to the "COM" terminal.

Measure the voltage by touch the test lead tips to the test circuit where the value of voltage is needed.

Read the result from the LCD panel.

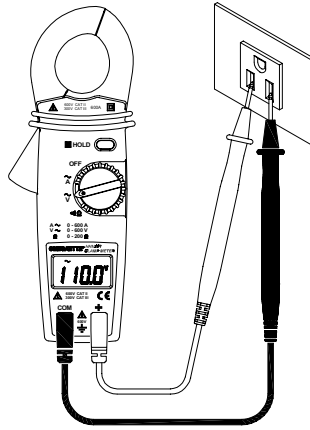

**4.3 Resistance measurement:**

Switch the function selector to  $\Omega$  range.


Connect red test lead to "+" terminal and black one to the "COM" terminal.

Connect tip of the test leads to the points where the value of the resistance is needed.

Read the result from the LCD panel.

**Note:**

When take resistance value from a circuit system, make sure the power is cut off and all capacitors need to be discharged.

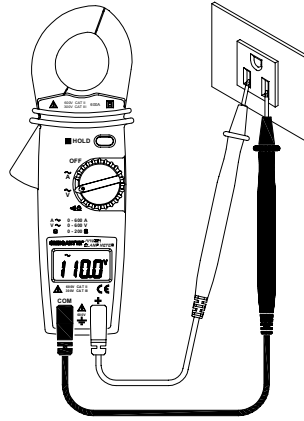


**4.4 Continuity Test:**

Switch the function selector to  $\Omega$  range.


Connect red test lead to "+" terminal and black one to the "COM" terminal.

Connect tip of the test leads to the points where the conducting condition needed.

If the resistance is under  $100\Omega$ , the beeper will sound continuously.

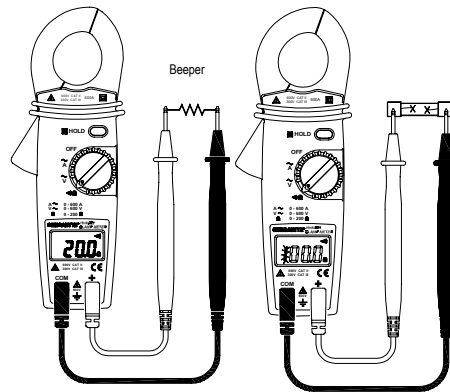

**V. Battery Changing:**

1. When the battery voltage drops below proper operation range, the  symbol will appear on the LCD display and the battery needs to be changed.
2. Before changing the battery, switch the function selector to "OFF" and disconnect test leads.  
Open the back cover with a screwdriver. Replace the old batteries with two AAA size batteries.
3. Close the back cover and fasten the screw.

**VI. Maintenance:****CAUTION**

To avoid contamination or static damage, do not touch the circuit board without proper static protection.

**REMARK**

- \* If the meter is not going to be used for a long time, take out the battery and do not store the meter in high temperature or high humidity environment.
- \* When making current measurement, keep the cable at the center of the clamp to get more accurate reading.

**CLEANING**

Periodically wipe the case with a dry cloth and without detergent. Do not use abrasives or solvents on this instrument.