

# Where Do I Find Everything I Need for Process Measurement and Control? **OMEGA...Of Course!**

*Shop online at [www.omega.com](http://www.omega.com)*

## **TEMPERATURE**

- Thermocouple, RTD & Thermistor Probes, Connectors, Panels & Assemblies
- Wire: Thermocouple, RTD & Thermistor
- Calibrators & Ice Point References
- Recorders, Controllers & Process Monitors
- Infrared Pyrometers

## **PRESSURE, STRAIN AND FORCE**

- Transducers & Strain Gages
- Load Cells & Pressure Gages
- Displacement Transducers
- Instrumentation & Accessories

## **FLOW/LEVEL**

- Rotameters, Gas Mass Flowmeters & Flow Computers
- Air Velocity Indicators
- Turbine/Paddlewheel Systems
- Totalizers & Batch Controllers

## **pH/CONDUCTIVITY**

- pH Electrodes, Testers & Accessories
- Benchtop/Laboratory Meters
- Controllers, Calibrators, Simulators & Pumps
- Industrial pH & Conductivity Equipment

## **DATA ACQUISITION**

- Data Acquisition & Engineering Software
- Communications-Based Acquisition Systems
- Plug-in Cards for Apple, IBM & Compatibles
- Datalogging Systems
- Recorders, Printers & Plotters

## **HEATERS**

- Heating Cable
- Cartridge & Strip Heaters
- Immersion & Band Heaters
- Flexible Heaters
- Laboratory Heaters

## **ENVIRONMENTAL MONITORING AND CONTROL**

- Metering & Control Instrumentation
- Refractometers
- Pumps & Tubing
- Air, Soil & Water Monitors
- Industrial Water & Wastewater Treatment
- pH, Conductivity & Dissolved Oxygen Instruments

## **Eight Zone Temperature Monitor and Alarm**


Models:

OMA-VM505

OMA-VM505-DCP

OMA-VM500-7

OMA-VM500-7-DCP

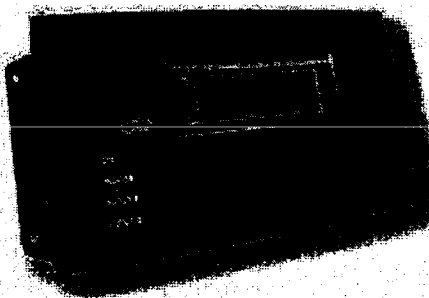

**Manual and Installation Instructions**

---

# User's Guide

*Shop online at*

**omega.com\***

THE OMEGA\*

[www.omega.com](http://www.omega.com)

*e-mail: [info@omega.com](mailto:info@omega.com)*



M4358-0806

**omega.com®**

ΩOMEGA™

**OMEGAnet® Online Service**  
www.omega.com

**Internet e-mail**  
info@omega.com

**Servicing North America:**

**USA:**  
ISO 9001 Certified  
One Omega Drive, Box 4047  
Stamford CT 06907-0047  
Tel: (203) 359-1660 FAX: (203) 359-7700  
e-mail: info@omega.com

**Canada:**  
976 Bergar  
Laval (Quebec) H7L 5A1  
Tel: (514) 856-6928 FAX: (514) 856-6886  
e-mail: info@omega.ca

**For immediate technical or application assistance:**

**USA and Canada:** Sales Service: 1-800-826-6342 / 1-800-TC-OMEGA®  
Customer Service: 1-800-622-2378 / 1-800-622-BEST®  
Engineering Service: 1-800-872-9436 / 1-800-USA-WHEN®  
TELEX: 996404 EASYLINK: 62968934 CABLE: OMEGA

**Mexico:** En Español: (001) 203-359-7803 e-mail: espanol@omega.com  
FAX: (001) 203-359-7807 info@omega.com.mx

**Servicing Europe:**

**Benelux:** Postbus 8034, 1180 LA Amstelveen, The Netherlands  
Tel: +31 (0)20 3472121 FAX: +31 (0)20 6434643  
Toll Free in Benelux: 0800 0993344  
e-mail: sales@omegaeng.nl

**Czech Republic:** Rudé armády 1868, 733 01 Karviná 8  
Tel: +420 (0)69 6311899 FAX: +420 (0)69 6311114  
Toll Free: 0800-1-66342 e-mail: czech@omega.com

**France:** 9, rue Denis Papin, 78190 Trappes  
Tel: +33 (0)130 621 400 FAX: +33 (0)130 699 120  
Toll Free in France: 0800-4-06342  
e-mail: sales@omega.fr

**Germany/Austria:** Daimlerstrasse 26, D-75392 Deckenpfronn, Germany  
Tel: +49 (0)7056 9398-0 FAX: +49 (0)7056 9398-29  
Toll Free in Germany: 0800 639 7678  
e-mail: info@omega.dl

**United Kingdom:** One Omega Drive, River Bend Technology Centre  
ISO 9002 Certified Northbank, Irlam, Manchester  
M44 5BD United Kingdom  
Tel: +44 (0)161 777 6611 FAX: +44 (0)161 777 6622  
Toll Free in United Kingdom: 0800-488-488  
e-mail: sales@omega.co.uk

**General Description**

The Eight Zone Temperature Monitor is a complete multiple temperature sensor monitor and alarm system with integrated auto-dialer.

The Eight Zone Temperature Monitor monitors up to eight (8) temperature sensors, an unlimited number of magnetic door sensors, and power.

The Eight Zone Temperature Monitor has programmable high and low temperature limits and an alarm time delay for each sensor. An identification message can be recorded for each sensor, indicating where the sensor is located to allow a quick response to a problem. The Eight Zone Temperature Monitor has numerous options that allow it to be configured for any application.

The Eight Zone Temperature Monitor can monitor doors with its dedicated door sensor input. A time delay can be programmed, enabling a freezer door to be left open for a maximum amount of time before the buzzer is activated and the Eight Zone Temperature Monitor begins its alarm procedures.

The Eight Zone Temperature Monitor will turn on the alarm relay and buzzer and begin making emergency notification calls when the temperature of any sensor is out of limits for greater than the alarm time delay or if a door has been left open.

**Model Details:**


Model: OMA-VM505, OMA-VM505-DCP  
Maximum Temperature Sensor Range: -148°F to 96°F, -100°C to 35°C  
Measurement resolution: 1°  
Sensor Type: 1000 Ohm Platinum RTD (.00385 TCR)

Model: OMA-VM500-7, OMA-VM500-7-DCP  
Maximum Temperature Sensor Range: -328°F to 482°F, -200°C to 250°C  
Measurement resolution: 1°  
Sensor Type: 100 Ohm Platinum RTD (.00385 TCR)

It is the policy of OMEGA to comply with all worldwide safety and EMC/EMI regulations that apply. OMEGA is constantly pursuing certification of its products to the European New Approach Directives. OMEGA will add the CE mark to every appropriate device upon certification.

The information contained in this document is believed to be correct, but OMEGA Engineering, Inc. accepts no liability for any errors it contains, and reserves the right to alter specifications without notice.

**WARNING:** These products are not designed for use in, and should not be used for, patient-connected applications.

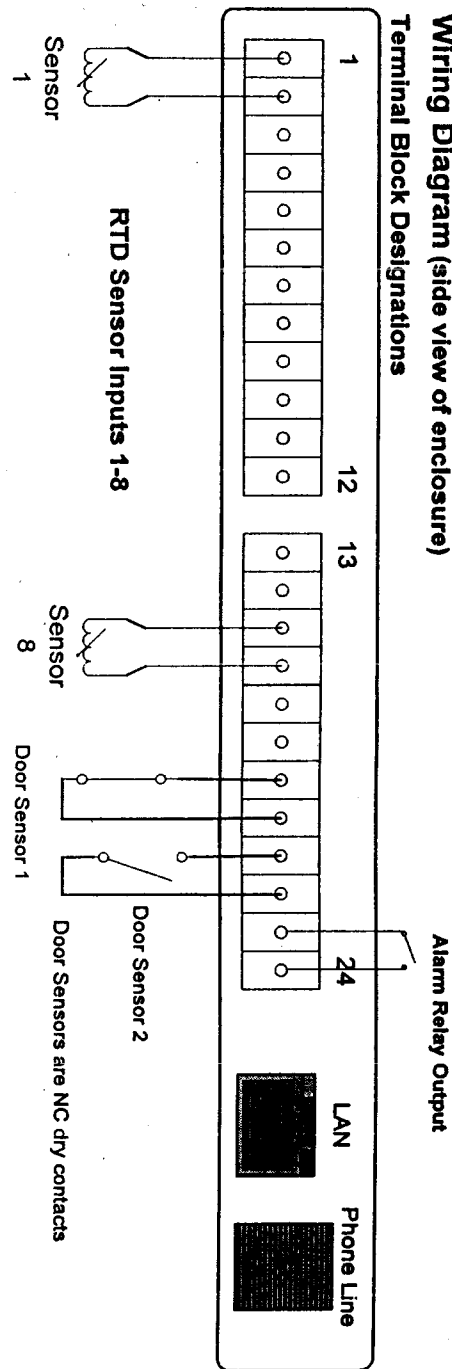

For ease of wiring, remove the terminal blocks by pulling straight down. Follow the wiring diagram on the previous page.

### Temperature Sensors

Locate the sensor so that it will yield an average temperature. Try to avoid locating the sensors in air streams. The temperature sensor wires can be extended as required.

### Door Sensor Inputs

Wire closed loop magnetic door sensors to the Door Sensor Inputs, to detect when doors are open. Multiple door sensor switches can be wired in series.

## Installing the Eight Zone Temperature Monitor

- Select a location with access to 120 VAC power, an analog telephone line, and a network drop (DCP models).
- Mount the Eight Zone Temperature Monitor to the wall.
- Connect the phone line to an active analog telephone jack. **A surge suppresser must be used for the phone line.**
- Connect the RJ45 patch cord to an active network drop and into the LAN jack. (DCP models)
- Plug the power jack into the **POWER INPUT** before plugging the power pack into a wall outlet. **A surge suppresser must also be used for the power line.**
- **Connect Sensors and Inputs.** See the Wiring Diagram on the previous page. **Temperature Sensors must be installed before turning on the unit**
- Turn on the Eight Zone Temperature Monitor by moving the power switch to the left of the terminal blocks to the "1" position.

**Getting Started with OMA-VM505-DCP or OMA-VM500-7-DCP** (optional data logging package)

**Get the latest DCP software from:** <http://www.omega.com>

**Install the software on your computer**

- 1 Extract the files to a new folder on your desktop.
- 2 Run setup.exe in the new folder.
- 3 Follow the onscreen instructions.
- 4 The installation program will install the Data Capture program, the Device IP Setup program, and documentation for both programs.

### Power up the Eight Zone Temperature Monitor

After booting up the Eight Zone Temperature Monitor, the LEDs on the Ethernet jack will begin to blink first orange and then green. When fully power up the left LED will be on steady green and the right LED will blink green. Verify that the left LAN LED is green and on steady, and the right LAN LED is blinking green. Below is a table that describes the meaning of the two LEDs.

Link LED (Left Side)		Activity LED (Right Side)	
Color	Meaning	Color	Meaning
Off	No Link	Off	No Activity
Amber	10 Mbps	Amber	Half-Duplex
Green	100 Mbps	Green	Full-Duplex

**WARNING: DO NOT PULL OUT THE POWER JACK FROM THE TEMPERATURE GUARD WHILE THE POWER PACK IS PLUGGED INTO A WALL SOCKET.**

### Set the IP address of your Eight Zone Temperature Monitor

Click on Device IP Setup Manual and read the documentation for the Device IP Setup Program.

### Collect data from your Eight Zone Temperature Monitor

Click on Data Capture Manual and read the documentation for the Data Capture Program.

## Accessing the Eight Zone Temperature Monitor

- 1 From another phone line call the Eight Zone Temperature Monitor. The device will pick up after the programmed number of rings (Default is 1).
- 2 To access all functions, enter the 4-digit "Full Access" PIN. (Factory default is 0000). To access only the "Confirmation Only" functions, enter the 4-digit "Confirmation Only" PIN 1234.  
The "Confirmation Only" functions are:
  - A) Confirming Alarm Conditions Remotely
  - B) Checking Sensor Inputs Remotely
- 3 You will hear the Main Menu options:

Main Menu	
Option	Function
1	Status
2	Set Limits
3	Program
#	Repeat Warning message (if any input is in alarm condition)
0	Exit (Hang Up the phone)

NOT  
SPOKEN  
MENU ITEM

## Programming Temperature Sensor Parameters

Each temperature sensor has four (4) programmable parameters as well as a programmable temperature correction.

**Sensor Identification Message.** The Sensor ID message will be played when the Eight Zone Temperature Monitor is reporting the status of that Sensor.

**Sensor Low and High Temperature limits.** The low and high temperature limit values are programmed in degrees. When a sensor's temperature exceeds either the high or low limit for longer than the programmed callout time delay, that sensor will be in alarm condition.

**Sensor callout time delay.** A sensor's temperature must be out of limits for greater than the callout delay time for the sensor to be in alarm condition.

## Programming Sensor Parameters

### 1. Accessing the Sensor Configuration

- a) From the Main Menu, press 2 to Set Limits
  - ▶ The "Full Access" PIN will be requested if the "Confirmation Only" PIN was entered initially. If the correct "Full Access" PIN is not entered, the Eight Zone Temperature Monitor will hang up.
- b) You will hear "Enter Sensor Number"
- c) Enter the sensor you want to program (1-8)
  - ▶ To return to the Main Menu press 0
- d) Proceed to Step 2.a.

### 2. Programming the Sensor ID message

- a) You will hear "Sensor x message is ...."
- b) You will hear "Press 1 to change"
- c) Press 1 to change the message
  - ▶ Press 2 to skip and proceed to step 3.a or press 0 to stop programming this sensor and return to step 1.b
- d) You will hear a tone



**TIP** Record something specific that will allow the people receiving the alarm calls to understand where the problem is.

- e) Begin speaking after the tone. The Eight Zone Temperature Monitor will record for about 2 seconds
- f) After 2 seconds you will hear the tone again, marking the end of your message
- g) You will hear the message you recorded
- h) Proceed to step 3.a

### 3. Programming the Lower and Upper Temperature Limits

- a) You will hear "Sensor x lower limit is" and the current low temperature limit for that sensor (i.e. 35°)
- b) You will hear "Press 1 to change"
- c) Press 1 to change the limit
  - ▶ Press 2 to skip and proceed to step 3.g or press 0 to stop programming this sensor and return to step 1.b
- d) You will hear "Enter number then press pound"
- e) Enter the value then press #.
  - ▶ Use \* to program a negative number (i.e. \*20 = -20°)
  - ▶ Acceptable range is -999 to 999
- f) You will hear the value you just entered (i.e. 39°)
- g) You will hear "Sensor x upper limit is" and the current high temperature limit for the selected sensor (i.e. 60°)
- h) You will hear "Press 1 to change"
- i) Press 1 to change the limit
  - ▶ Press 2 to skip and proceed to step 3.g or press 0 to stop program-

- ming this sensor and return to step 1.b
- j) You will hear "Enter number then press pound"
- k) Enter the value then press #.
  - ▶ Use \* to program a negative number (i.e. \*20 = -20°)
  - ▶ Acceptable range is -999 to 999
- l) You will hear the value you just entered (i.e. 50°)
- m) Proceed to step 4.a

#### 4. Programming the callout delay time

- a) You will hear "Callout time delay is x minutes press 1 to change" (default 0 minutes)
  - b) Press 1 to make a change
    - ▶ Press 2 to skip and return to step 1.b
  - c) You will hear "Enter number then press pound"
  - d) Enter the time delay in minutes (i.e. 15 for 15 minutes or 0 minutes for an immediate callout)
    - ▶ Acceptable range is 0 to 900 minutes
  - e) You will hear the value you just entered
  - f) Proceed to step 1.b
- Repeat the steps 1 to 4 for each additional sensor.

#### Programming Temperature Corrections

The Eight Zone Temperature Monitor allows the user to correct for small temperature measurement errors due to sensor cable extension length for each sensor. A calibrated standard must be used to obtain the actual temperature.

- a) From the Main Menu, press 2 to Set Limits
- b) You will hear "Enter Sensor Number"
- c) Enter #
- d) You will hear "Enter Sensor Number to Adjust"
- e) Enter the number of the sensor you want to correct (1-8)
  - ▶ To return to the Set Limits Menu press 0
- f) You will hear "Enter Sensor Number x Actual Temperature, then press pound"
- g) Enter the actual temperature measured using the standard, then press #.
  - ▶ Use \* for negative numbers (i.e. \*20 = -20°)
  - ▶ The maximum the temperature measurement can be corrected is +-10° from the currently displayed temperature.  
(i.e. If the temperature currently being displayed is 20°, the max correction is 30° and the min correction is 10°. An "invalid" message is played for larger corrections.)
- h) You will hear the corrected temperature and the corrected temperature will be displayed on the display.

## Programming the Door Sensor Input

To enable the Door Sensor Input to go into alarm condition and generate alert callouts, it **must be programmed with a time delay of at least 1 minute.**

- a) From the Main Menu, press 2 to set Limits
- b) You will hear "Enter Sensor Number"
- c) Enter 9 to program Door Sensor Input 1 or \* to program Door Sensor Input 2.
  - ▶ To return to the Main Menu press 0
- d) You will hear "Door Input 1 callout time delay is xx minutes press 1 to change". Default is 0 minutes (**Disabled**)
- e) Press 1 to make a change or press any other button to not make a change
- f) You will hear "Enter number then press pound"
- g) Enter the time delay in minutes (i.e. 15 for 15 minutes)
  - ▶ Acceptable range is 0 to 900 minutes
  - ▶ **An entry of 0 will disable the Door Sensor Input**
- h) You will hear the value you just entered
- i) You will be returned to the Set Limits Menu

# Programming the Autodialer Functions

## Accessing the Program Menu

From the Main Menu, press 3

- ▶ The "Full Access" PIN will be requested if the "Confirmation Only" PIN was entered initially. If the correct "Full Access" PIN is not entered, the Eight Zone Temperature Monitor will hang up.

Program Menu		
Option	Function	
1	Program Contact Telephone Numbers	
2	Program Local ID Number	
3	Record Unit ID Message	
4	Program Number of Rings	
5	Change "Full Access" PIN	
6	Program Reminder Calls	NOT SPOKEN
7	Program Repeat Warning Messages	NOT SPOKEN
8	Set Temperature Readout Units (°C or °F)	NOT SPOKEN
9	Program Power Outage Delay Time	NOT SPOKEN
*	Change Callout Time Delay	NOT SPOKEN
#	Change "Acknowledge Only" PIN	NOT SPOKEN
0	Exit (return to Main Menu)	

## Programming Contact Telephone/Pager Numbers

The Eight Zone Temperature Monitor stores up to four (4) contact telephone or pager numbers.

- From the Program Menu, Select 1 to set telephone numbers.
- You will hear "Select contact one to four"
- Select 1 for the first contact number, 2 for the second contact number, 3 for the third contact number, or 4 for the fourth contact number.
  - ▶ Press 0 to return to the Program Menu.
- You will hear "Contact x is xxxxxxx" or "Contact x is Empty, press one to change"
- Press 1 to make a change or enter a telephone number.
- You will hear "Enter number then press pound"
- Enter the number, followed by a #
  - ▶ For pager numbers, enter \* as the first digit of the number
  - ▶ Enter the full telephone number (1 + area code if necessary)
  - ▶ If an extra delay between digits or after dialing is required, entering \*

will provide a two second delay. Do not enter \* for the first digit unless programming a pager number.

- ▶ Entering only the # key will erase the currently programmed contact telephone number.
- You will hear the telephone number you just entered.
  - You will be prompted to select another contact to program.
    - ▶ Press 0 to return to the Program Menu.

## Programming a Local Identification Number For Pagers

The local ID number is printed on a pager's display, when calls are made to a pager. The ID number can be up to 20 digits long.

- From the Program Menu, press 2 for the local ID
- You will hear the programmed number or the Eight Zone Temperature Monitor will say "Empty"
- You will hear "Press one to change"
- Press 1 to make a change or 2 to return to the Program Menu
- You will hear "Enter number, then press pound"
- Enter the number, followed by a #
- You will hear the number you just entered.
- You will be automatically returned to the Program Menu

## Recording a Unit Identification Message

During callouts, this message is played to identify the unit. Record a message to help ID where the Eight Zone Temperature Monitor is located.

- From the Program Menu, press 3 to record a message
- If this is the first time setup, go to step 4
- You will hear the recorded message
- You will hear "Press one to change."
- Press 1 to make a change or 2 to return to the Program Menu



**TIP**

Record something to identify where the monitor is located to allow people receiving the alarm calls to understand what is calling them.

- You will hear a tone
- Begin speaking after the tone. The Eight Zone Temperature Monitor will record for about 4 seconds
- After 4 seconds you will hear the tone again, marking the end of your message
- You will hear the message you recorded
- You will be automatically returned to the Program Menu

## Programming the Number of Rings

The Eight Zone Temperature Monitor answers the telephone line after the programmed number of rings. Valid rings are 1 – 25. The setting can be used to enable the Eight Zone Temperature Monitor to share a line with an-

other device. See the Frequently Asked Questions section for details.

- 1 From the Program Menu, press 4 to set the number of rings
- 2 You will hear the programmed number of rings
- 3 You will hear "Press one to change."
- 4 Press 1 to make a change or 2 to return to the Program Menu
- 5 You will hear "Enter number then press pound"
- 6 Enter the number of rings, then press #
- 7 You will hear the number of rings you entered
- 8 You will be automatically returned to the Program Menu

#### Programming the "Full Access" PIN Number

The Eight Zone Temperature Monitor has a programmable "Full Access" 4-digit PIN number (0000-9999) to allow users to access the Set Limits option and Program sub-menu, and to confirm alarm conditions.

**PIN number must be 4 digits and must not include a # sign.**

- 1 From the Program Menu, press 5 to change the "Full Access" PIN
- 2 You will hear the programmed PIN number
- 3 You will hear "Press one to change."
- 4 Press 1 to make a change or 2 to return to the Program Menu
- 5 You will hear "Enter number"
- 6 Enter a four digit number
- 7 You will hear the PIN number you just entered
- 8 You will be automatically returned to the Program Menu

#### Programming the "Acknowledge Only" PIN Number

The Eight Zone Temperature Monitor has a programmable "Acknowledge Only" 4-digit PIN number (0000-9999) to allow users to only to confirm alarm conditions.

**PIN number must be 4 digits and must not include a # sign.**

- 1 From the Program Menu, press # to change the "Acknowledge Only" PIN
  - 2 You will hear the programmed PIN number
  - 3 You will hear "Press one to change."
  - 4 Press 1 to make a change or 2 to return to the Program Menu
  - 5 You will hear "Enter number"
  - 6 Enter a four digit number
  - 7 You will hear the PIN number you just entered
- You will be automatically returned to the Program Menu

#### Programming Reminder Calls

If a temperature is out of limits or a refrigerator/freezer door remains open after the alarm has been acknowledged, the Eight Zone Temperature Monitor can make "reminder calls". This feature alerts personnel that a problem still exists, and has not been fixed. The reminder call delay can be programmed from 0 to 900 minutes.

- 1 From the Program Menu, press 6
- 2 You will hear "Off"
- 3 You will hear "Press one to change."

- 4 Press 1 to change this setting, or 2 to return to the Program Menu.
- 5 You will hear "On"
- 6 You will hear "Callout time delay is XX minutes press 1 to change" (Default value is 60 minutes)
- 7 Press 1 to make a change or press 2 to not make a change
- 8 You will hear "Enter number then press pound"
- 9 Enter the time delay in minutes (i.e. 120 for 2 hours)
- 10 You will hear the value you just entered
- 11 You will be automatically returned to the Program Menu

#### Programming Warning Message Repetitions

During callouts the Eight Zone Temperature Monitor will repeat the local ID message and warning conditions a programmable number of times (Default 1 repetition)

- 1 From the Program Menu, press 7
- 2 You will hear "Warning Reminder is 1"
- 3 You will hear "Press one to change."
- 4 Press 1 to change this setting, or 2 to return to the Program Menu.
- 5 You will hear "Enter number then press pound"
- 6 Enter the number of times (0,1, or 2) that you would like the warning message repeated.
- 7 You will hear the value you just entered
- 8 You will be automatically returned to the Program Menu

#### Set Temperature Readout Units (°C or °F)

The Eight Zone Temperature Monitor can display and output temperature readings in degrees Celsius or Fahrenheit.

- 1 From the Program Menu, press 8
- 2 You will hear "Degrees is 32, press one to change", indicating the temperature reading at freezing in its current mode. (Default is Fahrenheit)
- 3 Press 1 to switch to Celsius Temperature Readout, or 2 to return to the Program Menu.
- 4 You will hear "Degrees is 0"
- 5 You will be automatically returned to the Program Menu

#### Program Power Outage Delay Time

The Eight Zone Temperature Monitor can delay a programmable amount of time before alarming due to a power outage. The default time is 5 minutes.

- 1 From the Program Menu, press 8
- 2 You will hear "Power callout time delay is 5 minutes press 1 to change"
- 3 Press 1 to change
  - ▶ Press 2 to skip and return to step 1.b
- 4 You will hear "Enter number then press pound"
- 5 Enter the time delay in minutes (i.e. 15 for 15 minutes or 0 minutes for an immediate callout)
  - ▶ Acceptable range is 0 to 900 minutes
- 6 You will hear the value you just entered
- 7 You will be automatically returned to the Program Menu

### Changing the Callout Delay Time

When a refrigerator or freezer's temperature is out of range the Eight Zone Temperature Monitor will wait this programmable amount of time before making telephone alert calls. (Default 2 minutes)

- 1 From the Program Menu, press \*
- 2 You will hear "Callout Time Delay is 2 minutes"
- 3 You will hear "Press one to change."
- 4 Press 1 to change this setting, or 2 to return to the Program Menu.
- 5 You will hear "Enter number then press pound"
- 6 Enter the time delay in minutes (i.e. 60 for 1 hour)
- 7 You will hear the value you just entered
- 8 You will be automatically returned to the Program Menu

### Checking Sensor Inputs Locally

All temperature sensors connected will have their temperature readings displayed next to the sensor number on the display. High and low readings are displayed on the right side of the display in the status window at 2 second intervals. If a Door Sensor Input has been enabled (see programming the Door Sensor Inputs section) and a door is open the Door Sensor Status will be displayed in the status window.

### Checking Sensor Inputs with a Telephone Call

- 1 Call the Eight Zone Temperature Monitor
- 2 Enter you PIN number
- 3 From the main menu press 1
- 4 You will hear "Enter Sensor Number"
- 5 Enter the number of the sensor you wish to hear (i.e. 1)
- 6 For Temperature Sensors, you will hear the sensor's temperature and the highest and lowest reading, and how long the sensor has been out of limits in minutes.

For Door Sensor Inputs, you will hear the status of the door sensor switches, unless power is out. If power is out you will hear, "Power is out".

### Checking Status Remotely with a Web Browser (OMA-VM500-5-DCP OMA-VM500-7-DCP only)

- 1 Open a web browser such as Internet Explorer.
- 2 Enter the IP address of the device for the URL address.
- 3 The status of all connected sensors will be displayed.

### Clearing High and Low Temperature Readings Locally

High and low temperature readings can be cleared by holding the black pushbutton on the front of the enclosure down for at least 5 seconds while that sensor's data is being displayed.

### Clearing High and Low Temperature Readings Remotely

- 1 Call the Eight Zone Temperature Monitor
- 2 Enter the "Full Access" PIN number

- 3 From the main menu press 1
- 4 You will hear "Enter Sensor Number"
- 5 Press #
- 6 You will hear "Enter Sensor Number to Change"
- 7 Enter the number of the sensor whose min and max readings you wish to reset to the current temperature.

### Confirming Alarm Conditions Remotely

During callouts, the Eight Zone Temperature Monitor will prompt you to enter a PIN number, enter either the Full Access PIN or "1234", the Confirmation Only PIN.

If you have received a page or a voice mail message regarding an alarm condition that you wish to confirm. Simply call the Eight Zone Temperature Monitor and enter either the Full Access PIN or "1234", the Confirmation Only PIN, The alarm relay will de-energize, and the Eight Zone Temperature Monitor will stop making callouts for the current alarm condition. **This action does not override the Reminder Call feature.**

### Confirming Alarm Conditions Locally

To confirm an alarm condition locally push the black button on the left side of the Eight Zone Temperature Monitor. The alarm relay will de-energize, and the Eight Zone Temperature Monitor will stop making callouts for the current alarm condition. **This action does not override the Reminder Call feature.**




# Interpreting the Display

## Start Up

When starting up, the Eight Zone Temperature Monitor checks each temperature sensor input to verify a good sensor reading.


If a sensor is connected and has a reading within range, "ok" will be printed next to that sensors label.

If a sensor is not connected or does not have a reading within range, "n/c" will be printed next to that sensors label.

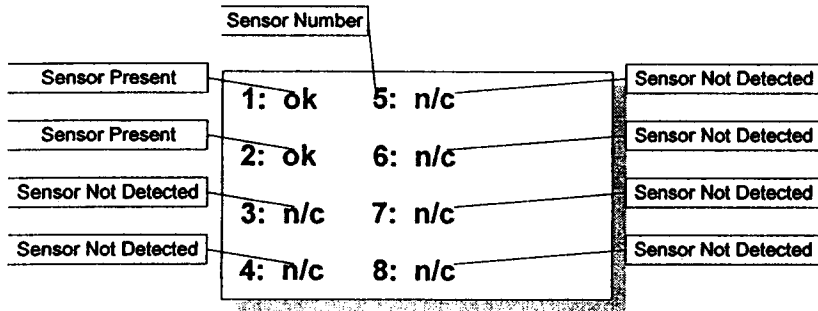

## Sensor Reading

The Eight Zone Temperature Monitor continuously displays all temperatures simultaneously and cycles through the maximum and minimum values for each sensor in the right side of the screen.

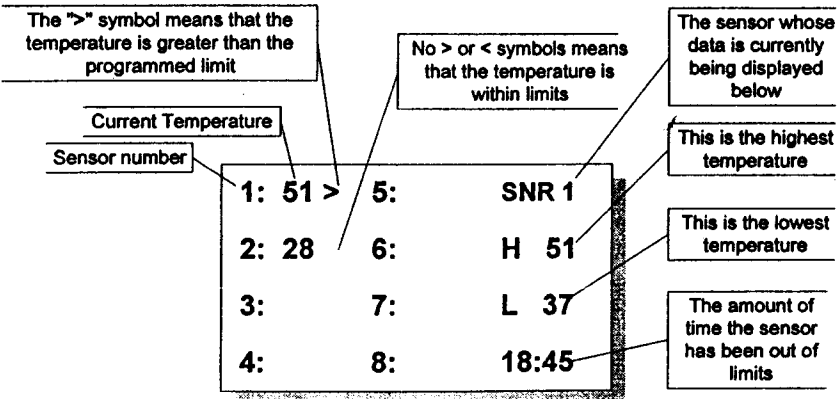


## Alarm Conditions

When an alarm condition occurs, the alarm relay and buzzer are activated and the Refrigerator/Freezer Guard waits 2 minutes before making callouts.

The time remaining before alarm callouts commence is displayed.


During this time, onsite personnel can cancel the emergency by pressing the black alarm acknowledge button on the face of the Refrigerator/Freezer Guard.

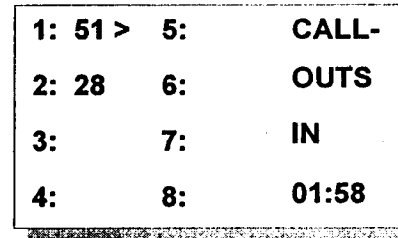

## Alarm Callouts

When the Refrigerator/Freezer Guard is making callouts, the status is displayed in the right side of the screen.

While the Refrigerator/Freezer Guard is making telephone calls, the display is not updated with new temperature readings.

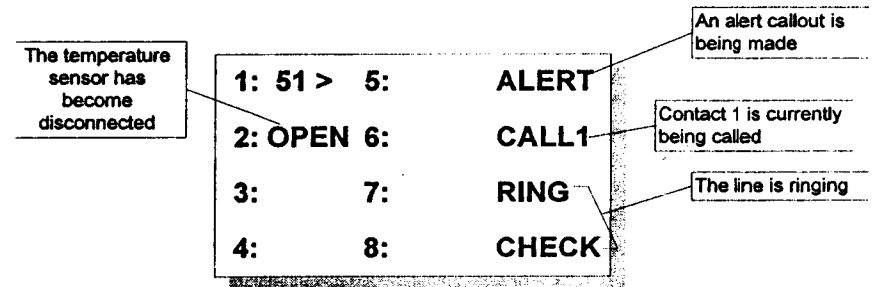

### Sensor Reading After Callouts

If the Eight Zone Temperature Monitor has called all programmed telephone numbers and not made contact it will wait 20 minutes before attempting to callout again. Periodically, the time before callouts resume will be displayed.

1: 51 >	5:	CALL-
2: 28	6:	OUTS
3:	7:	IN
4:	8:	17:25

## Frequently Asked Questions

### When does the Eight Zone Temperature Monitor callout?

The Eight Zone Temperature Monitor will callout when any sensor/input is in an alarm condition and has not been confirmed.

When an alarm condition first occurs, the Eight Zone Temperature Monitor turns on the alarm relay and buzzer, and then waits two minutes to allow local personnel time to react to the alarm.

### When is a sensor/input in alarm condition?

When a temperature sensor has been out of limits for greater than the programmed time delay.

When a temperature sensor opens or shorts after having been connected.  
When the door sensor has been open longer than the programmed time delay.

When the power has been out for greater than five minutes.

### What happens when the Eight Zone Temperature Monitor calls?

- 1 The Eight Zone Temperature Monitor will dial the contact number exactly as it was programmed.
  - ▶ If the contact number was programmed as a pager number (\* is the first digit. The Eight Zone Temperature Monitor will dial all digits following the \*.
- 2 The Eight Zone Temperature Monitor will wait for a person or voice mail system to answer the call.
- 3 The Eight Zone Temperature Monitor will beep while it waits for a person to stop speaking or the voice mail system's outgoing message to stop.
- 4 For voice contact numbers, the Eight Zone Temperature Monitor will play the recorded personal identification message.  
For pager contact numbers, the Eight Zone Temperature Monitor will print the Local Identification number on the pager screen. The Eight Zone Temperature Monitor will then hang up and call the next programmed contact number.
- 5 The Eight Zone Temperature Monitor will report any alarm conditions (i.e. "Warning, Sensor 2, *sensor 2 recorded message*, is 89 degrees and has been out of limits for, x hours and y minutes.
- 6 The Eight Zone Temperature Monitor will ask for the PIN number.

Once the PIN number has been entered, the Eight Zone Temperature Monitor will not call again because the current alarm condition has been acknowledged, unless the alarm still exists and the reminder call has been enabled.

If the correct PIN number is not entered within 4 seconds the Eight Zone Temperature Monitor will repeat the warning message. This warning message can be repeated up to 2 times by changing the programmed value.

See the **Programming Repeat Warning Messages** section.

If the correct PIN number is not entered the Eight Zone Temperature Monitor will call the next programmed contact telephone number.

If the Eight Zone Temperature Monitor has called all programmed contact numbers without having the correct PIN number entered, it will wait 20 minutes and repeat the sequence until the alarm condition goes away or the Eight Zone Temperature Monitor receives confirmation either locally or remotely.

### **How can I connect the Eight Zone Temperature Monitor to a Phone Line which has a fax or answering machine connected to it?**

Program the Eight Zone Temperature Monitor to answer after one more ring than the other device. This allows the other device to always answer first.

To call and access the Eight Zone Temperature Monitor

1. Dial the phone number
2. Hang up one ring before the other device answers.
3. Wait no longer than 30 seconds, then dial the phone number again.
4. The Eight Zone Temperature Monitor will answer.

For Example:

*A fax machine on the same line as the Eight Zone Temperature Monitor is set to answer after 4 rings. The Eight Zone Temperature Monitor is programmed to answer after 5 rings. To access the Eight Zone Temperature Monitor, dial the number, let it ring three times, then hang up. Wait 20 seconds and call again. After two rings, the Eight Zone Temperature Monitor will answer.*

## **Troubleshooting**

### **Verifying telephone communication**

To verify telephone communications, perform the following test.

- 1 Using another phone line, call the Eight Zone Temperature Monitor and verify that it answers the phone.
- 2 Verify at least one programmed telephone number.
- 3 Hang up.
- 4 Call the Eight Zone Temperature Monitor again.
- 5 Enter "#999" (including the "pound" sign) for the PIN.
- 6 Hang up.
- 7 The Eight Zone Temperature Monitor will perform a test call to your programmed telephone number's.
  - ▶ Do not enter your PIN if you would like the Eight Zone Temperature Monitor to continue calling any remaining programmed telephone numbers.
- 8 Watch the display and note any messages present.

### **If the Eight Zone Temperature Monitor does not answer the phone**

Verify that the phone line is a standard analog telephone line. Digital phone lines are not compatible with the Eight Zone Temperature Monitor.

Verify that the phone line is working. Connect a standard phone to the line intended for the Eight Zone Temperature Monitor. Verify that there is a dial tone.

Check that the phone line is plugged in securely.

Verify that the Eight Zone Temperature Monitor is powered up and some data is being displayed on the display.

### **If the Eight Zone Temperature Monitor does not call out**

Perform the telephone communication verification procedure. Connect a phone to the line intended for the Eight Zone Temperature Monitor. Verify that there is a dial tone.

Check that the phone line is plugged in securely

Verify that the Eight Zone Temperature Monitor is powered up and the status light is blinking

Verify that the Eight Zone Temperature Monitor is programmed correctly.

Call up the Eight Zone Temperature Monitor and verify the programmed phone numbers and limits.

### **Optional 20 / 30 Hour Extended Batteries**

If your unit has been ordered with an extended battery, it is installed at the factory.

### **Standard 4 hour / 20 / 30 Hour Batteries**

The rechargeable batteries used in the Eight Zone Temperature Monitor are trickle charged and can take up to a week to reach full capacity. The batteries are charging whenever the monitor is powered on.

### **OMA-VM505-DCP, OMA-VM500-7-DCP Networking Issues**

If you are not able to find the device on your network using Device IP Setup, pull the power jack from the device, wait a couple of seconds, plug it back in and try to find the device again. If that does not work, try the items below.

Verify that the Temperature Guard is powered on from its power supply.

Verify that you connected a good Ethernet cable to the device.

Verify that the LED's on the LAN adapter are on as described on page 5, if not **recycle power by pulling out the power jack from the Temperature Guard** and consult your IS/IT staff.

### **Accessing advanced network setup**

To set either the Subnet Mask or Gateway Address of the device, access the advanced network setup web page by entering:

**http://{Device IP Address}/ltx\_conf.html** Click on the "Server Properties" button.

Enter the Subnet Mask and/or Gateway Address and click "Update Settings"

## FCC PART 68 INFORMATION

This equipment complies with Part 68 of the FCC Rules. The FCC Part 68 Label is located on the bottom of the unit. This label contains the FCC Registration Number and Ringer Equivalence Number (REN) for this equipment. If requested, this information must be provided to your telephone company.

The REN is useful to determine the quantity of devices you may connect to your telephone line and still have all of those device ring when your telephone number is called. In most, but not all areas, the sum of the RENs of all devices connected to one line should not exceed five (5.0). To be certain of the number of devices you may connect to your line, as determined by the REN, you should contact your local telephone company to determine the maximum REN for your calling area.

Connection to the telephone network should be made by using standard modular telephone jacks, type RJ11. The plug and/or jacks used must comply with FCC Part 68 rules. If this telephone equipment causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the proper functioning of your equipment. If they do, you will be notified in advance in order for you to make necessary modifications to maintain uninterrupted service.

This equipment may not be used on coin service provided by the telephone company. Connection to party lines is subject to tariffs.

If trouble is experienced with this unit, for repair or warranty information, please contact customer service at the address and phone listed below. If the equipment is causing harm to the network, the telephone company may request that you disconnect the equipment until the problem is resolved.

**DO NOT DISASSEMBLE THIS EQUIPMENT.** It does not contain any user serviceable components.

MAR  
USA

## WARRANTY/DISCLAIMER

OMEGA ENGINEERING, INC. warrants this unit to be free of defects in materials and workmanship for a period of **13 months** from date of purchase. OMEGA's Warranty adds an additional one (1) month grace period to the normal **one (1) year product warranty** to cover handling and shipping time. This ensures that OMEGA's customers receive maximum coverage on each product.

If the unit malfunctions, it must be returned to the factory for evaluation. OMEGA's Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective, it will be repaired or replaced at no charge. OMEGA's WARRANTY does not apply to defects resulting from any action of the purchaser, including but not limited to mishandling, improper interfacing, operation outside of design limits, improper repair, or unauthorized modification. This WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of having been damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA's control. Components which wear are not warranted, including but not limited to contact points, fuses, and triacs.

**OMEGA is pleased to offer suggestions on the use of its various products. However, OMEGA neither assumes responsibility for any omissions or errors nor assumes liability for any damages that result from the use of its products in accordance with information provided by OMEGA, either verbal or written. OMEGA warrants only that the parts manufactured by it will be as specified and free of defects. OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESS OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. LIMITATION OF LIABILITY: The remedies of purchaser set forth herein are exclusive, and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.**

**CONDITIONS:** Equipment sold by OMEGA is not intended to be used, nor shall it be used: (1) as a "Basic Component" under 10 CFR 21 (NRC), used in or with any nuclear installation or activity; or (2) in medical applications or used on humans. Should any Product(s) be used in or with any nuclear installation or activity, medical application, used on humans, or misused in any way, OMEGA assumes no responsibility as set forth in our basic WARRANTY/DISCLAIMER language, and, additionally, purchaser will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the Product(s) in such a manner.

## RETURN REQUESTS/INQUIRIES

Direct all warranty and repair requests/inquiries to the OMEGA Customer Service Department. **BEFORE RETURNING ANY PRODUCT(S) TO OMEGA, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OMEGA'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS).** The assigned AR number should then be marked on the outside of the return package and on any correspondence.

The purchaser is responsible for shipping charges, freight, insurance and proper packaging to prevent breakage in transit.

FOR **WARRANTY** RETURNS, please have the following information available **BEFORE** contacting OMEGA:

1. Purchase Order number under which the product was **PURCHASED**,
2. Model and serial number of the product under warranty, and
3. Repair instructions and/or specific problems relative to the product.

FOR **NON-WARRANTY** REPAIRS, consult OMEGA for current repair charges. Have the following information available **BEFORE** contacting OMEGA:

1. Purchase Order number to cover the **COST** of the repair,
2. Model and serial number of the product, and
3. Repair instructions and/or specific problems relative to the product.

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering.

OMEGA is a registered trademark of OMEGA ENGINEERING, INC.

© Copyright 2002 OMEGA ENGINEERING, INC. All rights reserved. This document may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without the prior written consent of OMEGA ENGINEERING, INC.