


Mini Vane

ANEMOMETER

HHF801

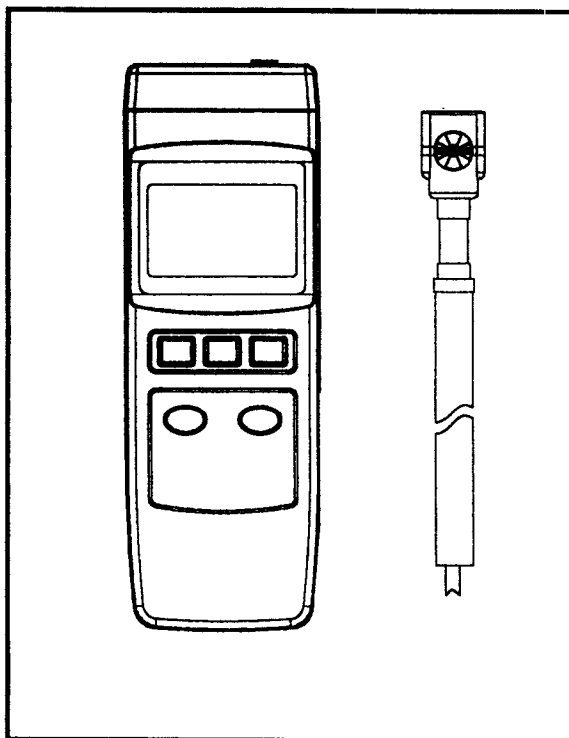

Made in Taiwan

M4793/0603



OMEGAnet™ On-Line Service
<http://www.omega.com>

Internet e-mail
info@omega.com

Servicing North America:

USA: ISO 9001 Certified Canada:
One Omega Drive, Box 4047 976 Bergar
Stamford, CT 06907-0047 Laval (Quebec) H7L5A1
Tel: (203) 359-1660 Tel: (514) 856-6928
FAX: (203)359-7700 FAX: (514) 856-6886
e-mail: info@omega.com e-mail: info@omega.com

For immediate technical or application assistance:

USA and Canada: Mexico and Latin America:
Sales Service: 1-800-826-6342 / 1-800-TC-OMEGASM Tel: (95) 800-TC-OMEGASM
Customer Service: 1-800-622-2378 / 1-800-622-BESTSM FAX: (95) 203-359-7807
Engineering Service: 1-800-872-9436 / 1-800-USA-WHENSM En Español: (203) 359-7803
TELEX: 996404 EASYLINK: 62968934 CABLE: OMEGA e-mail: espanol@omega.com

Servicing Europe:

Benelux:
Postbus 8034, 1180 LA Amstelveen,
The Netherlands
Tel: (31) 20 6418405 FAX: (31) 20 6434643
Toll Free in Benelux: 06 0993344
e-mail: nl@omega.com

France:
9, rue Denis Papin, 78190 Trappes
Tel: (33) 130-621-400 FAX: (33)130-699-120
Toll Free in France: 0800-4-06342
e-mail: france@omega.com

United Kingdom: ISO 9002 Certified.
One Omega Drive
Riverbed Technology Centre Northbank, Irlam,
Manchester, M44 5EX, England
Tel: 44 (161) 777-6611 FAX: 44 (161) 777-6622

Czech Republic:
ul. Rude armady 1868, 733 01 Karvina
Hranice, Czech Republic
Tel: 420 (69) 6311627 FAX: 420 (69)
6311114
e-mail: czech@omega.com

Germany/Austria:
Daimlerstrasse 26, D-75392
Deckenpfronn, Germany
Tel: 49 (07056) 3017 FAX: 49 (07056) 8540
Toll Free in Germany: 0800 82 66342
e-mail: germany@omega.com

Toll Free: in England: 0800-488-488
e-mail: sales@omega.com.uk

TABLE OF CONTENTS

1. FEATURES.....	1
2. SPECIFICATIONS.....	2
2-1 General Specifications.....	2
2-2 Electrical Specifications.....	3
A. Air velocity.....	3
B. Temperature.....	3
3. FRONT PANEL DESCRIPTION.....	4
3-1 Display.....	4
3-2 Power Button.....	4
3-3 Hold Button.....	4
3-4 Record (Max/Min) Button.....	4
3-5 Unit button.....	4
3-6 °C/°F button.....	4
3-7 RS-232 Output Terminal.....	4
3-8 Probe Input Socket.....	4
3-9 Battery Compartment/Cover.....	4
3-10 Stand.....	4
3-11 Mini Vane Probe Head.....	4
3-12 Telescope Probe.....	4
3-13 Probe Plug.....	4
4. MEASURING PROCEDURE.....	5
4-1 Air velocity/Temperature measurement.....	5
4-2 Data Hold, Date Record.....	5
5. AUTO POWER OFF DISABLE.....	7
6. RS232 PC SERIAL INTERFACE.....	7
7. BATTERY REPLACEMENT.....	9

1. FEATURES

- * 13 mm dia heavy duty mini vane with telescope probe available for high temp. air velocity measurement.
- * Low-friction ball vane wheels is accurate in both high & low velocities.
- * Separate probe, easy for operation of the different measurement environment.
- * Microprocessor circuit assures maximum possible accuracy, provides special functions and features.
- * The portable anemometer provides fast, accurate readings, with digital readability and the convenience of a remote sensor separately.
- * Multi display units for air velocity measurement : m/s, km/h, ft/min, knots, mile/h.
- * Dual temperature display unit : °C and °F.
- * Thermistor sensor for Temp. measurement, fast response time.
- * Large LCD, show the air velocity and the temperature value at the same time.
- * Records Maximum and Minimum reading with recall.
- * Data hold.
- * Auto shut off saves battery life.
- * RS 232 PC serial interface.
- * Operates from 006P DC 9V battery.
- * Used the durable, long-lasting components, including a strong, light weight ABS-plastic housing case.
- * Wide applications: use this anemometer to check air conditioning & heating systems, measure air velocities, wind speeds, temperature...etc.

2. SPECIFICATIONS

2-1 General Specifications

Display	* 51 mm x 32 mm supper large LCD. * Dual function meter's display.
Measurement	m/s (meters per second), km/h (kilometers per hour), ft/min (feet/per minute), knots (nautical miles per hour), mph (mile/h, miles per hour), Temp. – °C, °F., Data hold.
Sensor Structure	<i>Air velocity sensor :</i> Conventional twisted van arm and low friction ball bearing design. <i>Temperature sensor :</i> Precision thermistor.
Circuit	Custom one – chip microprocessor LSI IC.
Memory Recall	Records Maximum and Minimum readings with recall.
Power off	Manual off by push button or Auto shut off after 10 minutes (Not activated during memory record function).
Data Output	RS 232 PC serial interface.
Over load indication	Indicated by " – – – –".
Operating Temperature	<i>Meter :</i> 0 °C to 50 °C (32 °F to 122 °F). <i>Vane Probe :</i> 0 °C to 80 °C (32 °F to 176 °F).
Operating Humidity	Max. 80% RH.
Power Supply	Heavy duty type DC 9V battery, 006P, MN1604(PP3) or equivalent.
Power Current	Approx. DC 8.3 mA.

Weight	220 g/0.48 LB.
Size	<i>Main instrument:</i> 200 x 68 x 30 mm (7.9 x 2.7 x 1.2 inch). Probe : Vane – 13 mm dia. Telescope probe length – Max. 600 mm.
Accessories Included	Instruction manual..... 1 PC. Telescope Sensor probe..... 1 PC. Carrying case..... 1 PC.
Optional Accessories	RS232 cable, UPCB-02.....UPCB-02 Application Software.....SW-U801-WIN

2-2 Electrical Specifications (23 ± 5 °C)

A. Air velocity

Measurement	Range	Resolution	Accuracy
m/s	0.8 – 12.00 m/s	0.01 m/s	± (2% + 0.2 m/sec)
km/h	2.8 – 43.2 km/h	0.1 km/h	± (2% + 0.2 km/h)
mph	1.8 – 26.8 mph	0.1 mph	± (2% + 0.2 mph)
knots	0.8 – 23.3 knots	0.1 knots	± (2% + 0.2 knots)
ft/min	160 – 2358 ft/min	1 ft/min	± (2% + 20 ft/min)

Remark :

m/s – meters per second km/h – kilometers per hour
ft/min – feet/per minute knots – nautical miles per hour
mph – miles per hour (international knot)

B. Temperature

Measuring Range	0 °C to 80 °C/32 °F to 176 °F
Resolution	0.1 °C/0.1 °F
Accuracy	0.8 °C/1.5 °F

Remark : Above specification are tested under the environment RF Field Strength less than 3 V/M & frequency less than the 30 MHz only.

3. FRONT PANEL DESCRIPTION

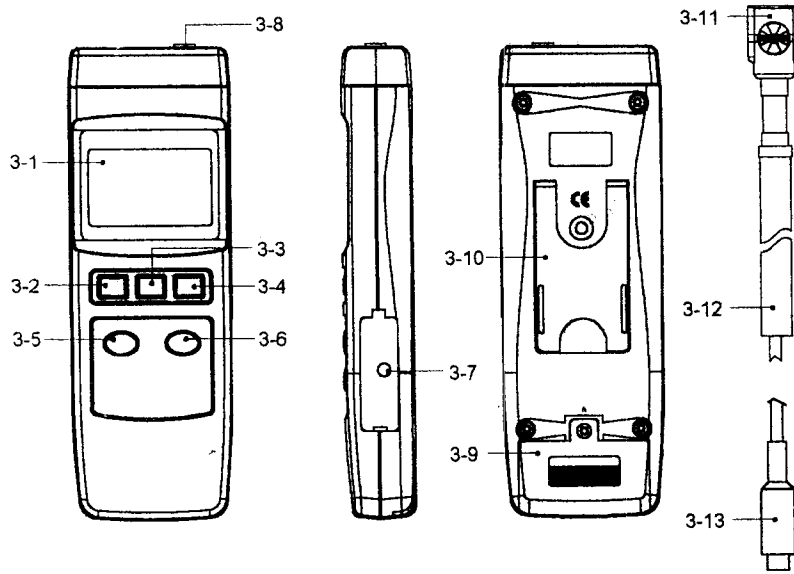


Fig. 1

- | | |
|-------------------------------|-------------------------------|
| 3-1 Display | 3-8 Probe Input Socket |
| 3-2 Power Button | 3-9 Battery Compartment/Cover |
| 3-3 Hold Button | 3-10 Stand |
| 3-4 Record (Max/Min) Button | 3-11 Vane Probe Head |
| 3-5 Unit button | 3-12 Telescope Probe |
| 3-6 °C/°F button | 3-13 Probe Plug |
| 3-7 RS-232 Output Terminal | |

4. MEASURING PROCEDURE

4-1 Air velocity/Temperature measurement

- 1) Install the " Probe Plug " (3-13, Fig. 1) into the " Input Socket " (3-8, Fig. 1).
- 2) Power ON the meter by pressing the " Power Button " (3-2, fig. 1).
- 3) a. Select the desired air velocity unit (m/s, km/h, mph, knots, ft/min) by pushing the " unit Button " (3-5, fig. 1).
b. Select the desired temperature units by pushing the " °C/°F Button " (3-6, fig. 1).
- 4) Use the hand to hold the " Telescope Probe " (3-12, Fig. 1), face the " Vane Probe Head " (3-11, Fig. 1) to the measured wind. In the same time the air velocity and the temp. value will show on the LCD display.

** The Vane probe head's label that show the " IN " marker is right face that should toward the measured wind.*

** Do not measured wind speed value more than 12 m/s.*

Measuring Consideration :

The " IN " mark on the sensor head indicates the mark need to face against the direction of air flow.

4-2 Data Hold, Date Record

- 1) Data Hold
 - a. During the measurement, pushing the " Data Hold Button " (3-3, Fig. 1) will hold the measured value & the LCD will indicate " HOLD " symbol.
 - b. Push the " Data Hold Button " again to release the data hold function.
- 2) Data Record (Max., Min. reading)
 - a. The data record function records the maximum and minimum readings. Press the " REC. Button " (3-4, Fig. 1) to start the Data Record function and there will be a " REC " symbol on the display.

- b. With the " REC " symbol on the display :
- * Press the " REC Button " (3-4, Fig. 1) once, the " REC Max " symbol along with the maximum value will appear on the display.

Note :

If intend to delete the maximum value, just press the " Hold Button " (3-3, Fig. 1) for a while, and then the display will show the " REC " symbol only & execute the memory function continuously.

- * Press the " REC. Button " (3-4, Fig. 1) again, the " REC Min " symbol along with the minimum value will appear on the display.

Note :

If intend to delete the minimum value, just press the " Hold Button " (3-3, Fig. 1) for a while, and then the display will show the " REC " symbol only & execute the memory function continuously.

- c. To exit the memory record function, just press the " REC " button for 2 seconds at least. The display will revert to the current reading.

5. AUTO POWER OFF DISABLE

The instrument has " Auto Power Off " function in order to prolong battery life. The meter will shut off automatically if none of the buttons are pressed in approx. 10 min.


To disable this function, Select the memory record function during the measurement by pressing the " REC. Button " (3-4, Fig. 1).

6. RS232 PC SERIAL INTERFACE

The instrument has RS232 PC serial interface via a 3.5 mm terminal (3-7, Fig. 1).

The data output is a 16 digit stream which can be utilized for user's specific application.

A RS232 lead with the following connection will be required to link the instrument with the PC serial port.

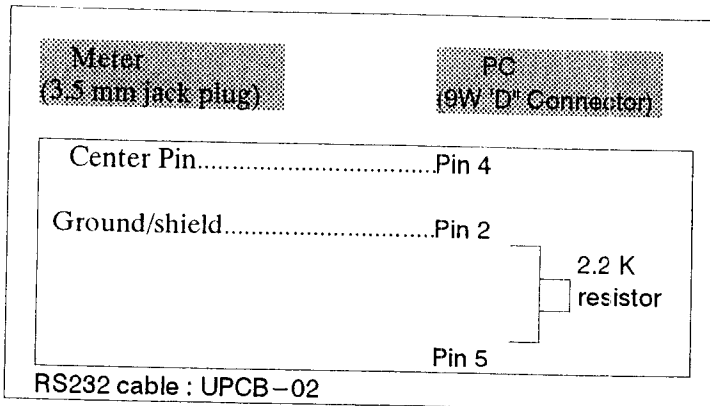

The 16 digits data stream will be displayed in the following format :

D15 D14 D13 D12 D11 D10 D9 D8 D7 D6 D5 D4 D3 D2 D1 D0

Each digit indicates the following status :

D0	End Word		
D1 & D8	Display reading, D1 = LSD, D8 = MSD <i>For example :</i> <i>If the display reading is 1234, then D8 to D1 is :</i> <i>00001234</i>		
D9	Decimal Point(DP), position from right to the left 0 = No DP, 1= 1 DP, 2 = 2 DP, 3 = 3 DP		
D10	Polarity 0 = Positive 1 = Negative		
D11 & D12	Annunciator for Display		
	°C = 01	°F = 02	m/s = 08
	Km/h = 10	ft/min = 11	mile/h = 12
	knot = 09		
D13	When send the upper display data = 1		
	When send the lower display data = 2		
D14	4		
D15	Start Word		

RS232 FÓRMAT : 9600, N, 8, 1

7. BATTERY REPLACEMENT

- 1) When the left corner of LCD display show " ", it is necessary to replace the battery. However, in-spec. measurement may still be made for several hours after low battery indicator appears.
- 2) Slide the " Battery Cover " (3-9, Fig. 1) away from the instrument and remove the battery.
- 3) Replace with 9V battery (Alkaline or Heavy duty type) and reinstate the cover.
- 4) Make sure the battery cover is secured after changing the battery.

WARRANTY

OMEGA warrants this unit to be free of defects in materials and workmanship and to give satisfactory service for a period of **13 months** from date of purchase. OMEGA Warranty adds an additional one (1) month grace period to the normal **one (1) year product warranty** to cover handling and shipping time. This ensures that OMEGA's customers receive maximum coverage on each product. If the unit should malfunction, it must be returned to the factory for evaluation. OMEGA's Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective it will be repaired or replaced at no charge. However, this WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of being damaged as a result of excessive corrosion; or current, heat moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA's control. Components which wear or which are damaged by misuse are not warranted. This includes contact points, fuses, and triacs.

OMEGA is glad to offer suggestions on the use of its various products. Nevertheless, OMEGA only warrants that the parts manufactured by it will be as specified and free of defects

OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESSED OR IMPLIED, EXCEPT THAT OF TITLE AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED.

LIMITATION OF LIABILITY: The remedies of purchaser set forth herein are exclusive and the total liability of OMEGA with respect to this order, whether based on contract warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.

Every precaution for accuracy has been taken in the preparation of this manual; however, OMEGA ENGINEERING, INC. neither assumes responsibility for any omissions or errors that may appear nor assumes liability for any damages that result from the use of the products in accordance with the information contained in the manual.

SPECIAL CONDITION: Should this equipment be used in or with any nuclear installation or activity, purchaser will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the equipment in such a manner.

It is the policy of OMEGA to comply with all worldwide safety and EMC/EMI regulations that apply. OMEGA is constantly pursuing certification of its products to the European New Approach Directives. OMEGA will add the CE mark to every appropriate device upon certification.

The information contained in this document is believed to be correct but OMEGA Engineering, Inc. accepts no liability for any errors it contains, and reserves the right to alter specifications without notice.

WARNING: These products are not designed for use in, and should not be used for, patient connected application.

RETURN REQUESTS / INQUIRIES

Direct all warranty and repair requests/inquiries to the OMEGA Customer Service Department. BEFORE RETURNING ANY PRODUCT(S) TO OMEGA, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OMEGA'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS). The assigned AR number should then be marked on the outside of the return package and on any correspondence. The purchaser is responsible for shipping charges, freight, insurance and proper packaging to prevent breakage in transit.

FOR **WARRANTY** RETURNS, please have the following information available BEFORE contacting OMEGA:

1. P.O. number under which the product was PURCHASED.
2. Model and serial number of the product under warranty, and
3. Repair instructions and/or specific problems relative to the product.

FOR **NON-WARRANTY** REPAIRS, consult OMEGA for current repair charges. Have the following information available BEFORE contacting OMEGA:

1. P.O. number to cover the COST of the repair.
2. Model and serial number of product, and
3. Repair instructions and/or specific problems relative to the product.

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering. OMEGA is a registered trademark of OMEGA ENGINEERING, INC. © Copyright 1999 OMEGA ENGINEERING, INC. All rights reserved. This document may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without prior written consent of OMEGA ENGINEERING, INC.

**Where Do I Find Everything I Need for
Process Measurement and Control?
OMEGA...Of Course!**

HEATERS

- Heating Cable
- Cartridge & Strip Heaters
- Immersion & Band Heaters
- Flexible Heaters
- Laboratory Heaters

PRESSURE/STRAIN AND FORCE

- Transducers & Strain Gauges
- Load Cells & Pressure Gauges
- Displacement Transducers
- Instrumentation & Accessories

FLOW/LEVEL

- Rotameters, Gas Mass
- Flowmeters & Flow Computers
- Air Velocity Indicators
- Turbine/Paddlewheel Systems
- Totalizers & Batch Controllers

TEMPERATURE

- Thermocouple, RTD & Thermistor Probes, Connectors, Panels & Assemblies
- Wire: Thermocouple, RTD & Thermistor
- Calibrators & Ice Point References
- Recorders, Controllers & Process Monitors
- Infrared Pyrometers

ENVIRONMENTAL

MONITORING AND CONTROL

- Metering & Control Instrumentation
- Refractometers
- Pumps & Tubing
- Air, Soil & Water Monitors
- Industrial Water & Wastewater Treatment
- pH, Conductivity & Dissolved Oxygen Instruments

pH/CONDUCTIVITY

- pH Electrodes, Testers & Accessories
- Benchtop/Laboratory Meters
- Controllers, Calibrators, Simulators & Pumps
- Industrial pH & Conductivity Equipment

DATA ACQUISITION

- Data Acquisition & Engineering Software
- Communications-Based Acquisition Systems
- Plug-in Cards for Apple, IBM & Compatibles
- Datalogging Systems
- Recorders, Printers & Plotters