

Using This Quick Start Manual

Use this Quick Start Manual to set up your controller and begin operation. Information is provided on how to:

- Connect ac power
- Connect sensor input
- Set basic options for operation

- Connect ac power
- Connect sensor input
- Set basic options for operation

For complete information on all setup options, see the Operator's Manual.


Before You Begin

In addition to the controller and the related parts, you will need the following items to set up your unit:

- ac power
- Sensor
- 1/8" flat blade screwdriver

Mount the Meter


1. Cut a panel opening using the dimensions shown to the right.
2. Position the unit in the opening, making sure the front bezel is flush with the panel.

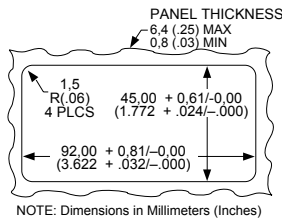

Connect ac Power

Warning: Do not connect ac power to your meter until you have completed all input and output connections. Failure to do so may result in injury!


1. Remove the panel at the back of the unit.
2. Locate the TB1 connector.
3. Insert the correct wire in each terminal as shown in the following figure and tighten the lockdown screws. Tug gently on the wires to verify connections.

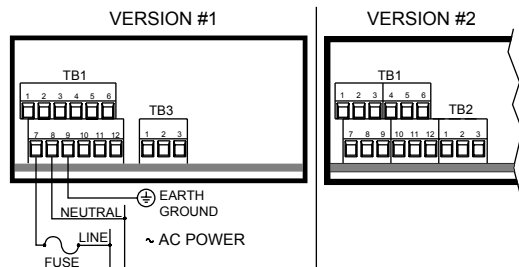


Main ac Power Connections

Connecting the Sensor Input

1. Locate the TB2 (TB3 on Version #1) connector on the rear of the unit.
2. Connect sensors, referring to the appropriate diagram below and tighten down lockdown screws.
3. Tug gently on the wires to verify the connections.
4. Replace the panel at the back of the unit.

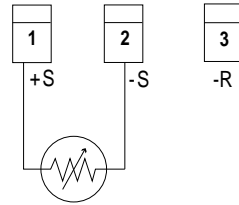

2-Wire Input (400 Series)

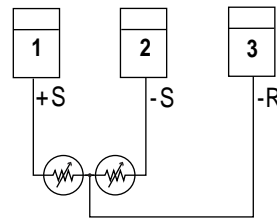

3-Wire Input (700 Series)

Hook up Alarm 1 (Setpoint) (refer to TB1 Main ac Power Connection Drawing)

1. Connect a jumper from ac Line (Terminal 7) to Relay 1 Common (Terminal 3).
2. Connect Relay 1 Normally Open (Terminal 1) to External Alarm ac Line.
3. Connect External Alarm to ac Neutral (Terminal 8).

Hook up Alarm 2 (Setpoint) (refer to TB1 Main ac Power Connection Drawing)

1. Connect a jumper from ac Line (Terminal 7) to Relay 2 Common (Terminal 6).
2. Connect Relay 2 Normally Open (Terminal 4) to External Alarm ac Line.
3. Connect External Alarm to ac Neutral (Terminal 8).

Turn on the Unit

1. Apply power to the unit. The unit initializes, flashing "THERMISTOR". Then the temperature should appear.
2. Verify that a temperature is displayed. If not:
 - Remove ac power
 - Verify the TB1 power connections
 - Check your power source
 - Apply power again

Configure the Unit

To configure the unit, use the buttons on the controller's front panel.



To:	Take This Action
Display the Configuration Menu.	Press the MENU button. The first function on the menu, "INPT", displays.
Select the submenu function.	<ol style="list-style-type: none"> 1. Press MENU until the function you want is shown. 2. Press ▶/MIN.
Select a value for that submenu function.	<ol style="list-style-type: none"> 1. Press ▲/MAX to display the option you want. 2. Press MENU to select it. "STRD" quickly flashes, indicating that the selection has been stored in memory. Then the next menu function displays.

Go back to the previous menu function. Press **RESET** once.

- Exit the Configuration Menu.
- Press **RESET** twice. The unit reinitializes (displays "RST", then "THERMISTOR"). When the temperature displays, the meter is back in Run Mode.
 - Optionally, you can press **MENU** to move through all the menu functions until the meter reinitializes.



To Change the Input Type:

1. Press **MENU** until the display shows "INPT":
2. Press **▶/MIN** to show current input type:
3. Press **▲/MAX** to select the setting. Choices are: 4004, 4005, 4006, 4007, 4008, 4017, 4018 and 700.
4. Press **MENU** to store the value.
5. Press **RESET** twice to display the current temperature.

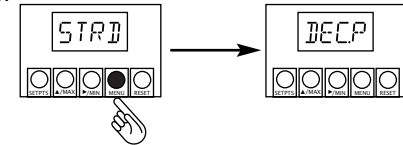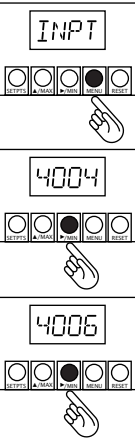

To Change the Decimal Point:

1. Press **MENU** until the display shows "DEC.P":
2. Press **▶/MIN** to show the current decimal point location:
3. Press **▲/MAX** to select the setting. Choices are: "FFF.F", "FFFF." or "FF.FF".
4. Press **MENU** to store the value.
5. Press **RESET** twice to display the current temperature.

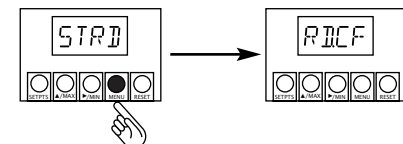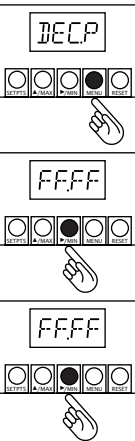

MADE IN USA **WARRANTY/DISCLAIMER**

OMEGA Engineering, Inc. warrants this unit to be free of defects in materials and workmanship for a period of **13 months** from date of purchase. OMEGA Warranty adds an **additional one (1) month** grace period to the normal **one (1) year** product warranty to cover handling and shipping time. This ensures that OMEGA's customers receive maximum coverage on each product.

If the unit should malfunction, it must be returned to the factory for evaluation. OMEGA's Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective it will be repaired or replaced at no charge. Omega's WARRANTY does not apply to defects resulting from any action of the purchaser, including but not limited to mishandling, improper interfacing, operation outside of design limits, improper repair, or unauthorized modification. This WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of being damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA's control. Components which wear are not warranted, including but not limited to contact points, fuses, and triacs.

OMEGA is pleased to offer suggestions on the use of its various products. However, OMEGA neither assumes responsibility for any omissions or errors nor assumes liability for any damages that result from the use of its products in accordance with information provided by OMEGA, either verbal or written. OMEGA warrants only that the parts manufactured by it will be as specified and free of defects. OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESSED OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. LIMITATION OF LIABILITY: The remedies of purchaser set forth herein are exclusive and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.

CONDITIONS: Equipment sold by OMEGA is not intended to be used, nor shall it be used: (1) as a "Basic Component" under 10 CFR 21 (NRC), used in or with any nuclear installation or activity; or (2) in medical applications or used on humans. Should any Product(s) be used in or with any nuclear installation or activity, medical application, used on humans, or misused in any way, OMEGA assumes no responsibility as set forth in our basic WARRANTY / DISCLAIMER language, and additionally, purchaser will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the Product(s) in such a manner.

RETURN REQUESTS / INQUIRIES

Direct all warranty and repair requests/inquiries to the OMEGA Customer Service Department. **BEFORE RETURNING ANY PRODUCT(S) TO OMEGA, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OMEGA'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS).** The assigned AR number should then be marked on the outside of the return package and on any correspondence.

The purchaser is responsible for shipping charges, freight, insurance and proper packaging to prevent breakage in transit.

FOR WARRANTY RETURNS, please have the following information available BEFORE contacting OMEGA:

1. P.O. number under which the product was PURCHASED,
2. Model and serial number of the product under warranty, and
3. Repair instructions and/or specific problems relative to the product.

FOR NON-WARRANTY REPAIRS, consult OMEGA for current repair charges. Have the following information available BEFORE contacting OMEGA:

1. P.O. number to cover the COST of the repair,
2. Model and serial number of product, and
3. Repair instructions and/or specific problems relative to the product.

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering.





OMEGA is a registered trademark of OMEGA ENGINEERING, INC. © Copyright 2000 OMEGA ENGINEERING, INC. All rights reserved. This document may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without prior written consent of OMEGA ENGINEERING, INC.

PATENT NOTICE: The "Meter Case Bezel Design" is a trademark of NEWPORT Electronics, Inc., registered in the U.S. USED UNDER LICENSE. This product is covered by one or more of the following patents: U.S. Pat. No. Des. 336,895; 5,274,577 / CANADA 2052599; 2052600 / ITALY 1249456; 1250938 / FRANCE BREVET No. 91 12756 / SPAIN 2039150; 2048066 / UK PATENT No. GB2 249 837; GB2 248 954 / GERMANY DE 41 34398 C2. OTHER INTERNATIONAL PATENTS PENDING.

5

To Select the Temperature Unit (Fahrenheit or Celsius):

1. Press **MENU** until the display shows "RD.CF".
2. Press **►/MIN** to display the current temperature unit.
3. Press **▲/MAX** to select between "°F" and "°C".
4. Press **MENU** to store the value.
5. Press **RESET** twice to display the current temperature.



Begin Operation



Reinitialize the unit (press **RESET** twice or press **MENU** until "RST" flashes on the display).

When the temperature appears, the unit is up and running.

6

Changing Setpoint Values (for Dual Relay):

1. While in RUN Mode, press **SETPTS**. The unit displays Setpoint 1:
 - Press **►/MIN** until the digit(s) you want to change flashes on the display.
 - Press **▲/MAX** to change the value.
 - Press **SETPTS** to store the value shown. The current value for Setpoint 2 is shown.
2. To change the Setpoint 1 value:
 - Press **►/MIN** until the digit(s) you want to change flashes on the display.
 - Press **▲/MAX** to change the value.
 - Press **SETPTS** to store the value shown. The current value for Setpoint 2 is shown.
3. When Setpoint 2 appears, you can change it using the procedure above or press **SETPTS** to return to RUN Mode.



4. Repeat steps 1 through 3 to enter the next setpoint.

WARNING: These products are not designed for use in, and should not be used for, patient connected applications.

This device is marked with the international caution symbol. It is important to read the Setup Guide before installing or commissioning this device as it contains important information relating to safety and EMC.

It is the policy of OMEGA to comply with all worldwide safety and EMC/EMI regulations that apply. OMEGA is constantly pursuing certification of its products to the European New Approach Directives. OMEGA will add the CE mark to every appropriate device upon certification.

The information contained in this document is believed to be correct but OMEGA Engineering, Inc. accepts no liability for any errors it contains, and reserves the right to alter specifications without notice.

TRADEMARK NOTICE: **Ω omega.com™** and **Ω OMEGA** are trademarks of OMEGA Engineering, Inc.

QUICK START



DP25-TH Thermistor Indicator/Controller



OMEGAnet® On-Line Service http://www.omega.com	Internet e-mail info@omega.com
--	--

Servicing North America:

USA: ISO 9001 Certified	One Omega Drive, P.O. Box 4047 Stamford CT 06907-0047 TEL: (203) 359-1660 e-mail: info@omega.com	FAX: (203) 359-7700
Canada:	976 Bergar Laval (Quebec) H7L 5A1 TEL: (514) 856-6928 e-mail: info@omega.ca	FAX: (514) 856-6886

For immediate technical or application assistance:

USA and Canada:	Sales Service: 1-800-826-6342 / 1-800-TC-OMEGA® Customer Service: 1-800-622-2378 / 1-800-622-BEST® Engineering Service: 1-800-872-9436 / 1-800-USA-WHEN® TELEX: 996404 EASYLINK; 62968934 CABLE: OMEGA
Mexico:	TEL: (001)800-TC-OMEGA® FAX: (001) 203-359-7807 En Español: (001) 203-359-7803 e-mail: info@omega.com.mx

Servicing Europe:

Benelux:	Postbus 8034, 1180 LA Amstelveen, The Netherlands TEL: +31 (0)20 6418405 FAX: +31 (0)20 6434643 Toll Free in Benelux: 0800 0993344 e-mail: nl@omega.com
Czech Republic:	Rudé armády 1868, 733 01 Karviná 8 TEL: +420 (0)69 6311899 FAX: +420 (0)69 6311114 e-mail: czech@omega.com
France:	9, rue Denis Papin, 78190 Trappes TEL: +33 (0)130 621 400 FAX: +33 (0)130 699 120 Toll Free in France: 0800406342 e-mail: france@omega.com
Germany/Austria:	Daimlerstrasse 26, D-75392 Deckenpfronn, Germany TEL: +49 (0)7056 9398-0 FAX: +49 (0)7056 9398-29 Toll Free in Germany: 0800 TC-OMEGA® e-mail: germany@omega.com
United Kingdom: ISO 9002 Certified	One Omega Drive River Bend Technology Centre Northbank, Irlam Manchester M44 5EX United Kingdom TEL: +44 (0) 161 777 6611 FAX: +44 (0) 161 777 6622 Toll Free in the UK: 0800 488 488 e-mail: sales@omega.co.uk