


1 YEAR
WARRANTY

MADE IN
USA

**OMEGA
CARE**
Extended Warranty
Program

CE



User's Guide

Shop online at

omega.com[®]

Ω OMEGA[®]

omega.com

e-mail: info@omega.com

*For latest product manuals:
omegamanual.info*

ISO 9001
CERTIFIED
CORPORATE QUALITY

STAMFORD, CT

ISO 9001
CERTIFIED
CORPORATE QUALITY

MANCHESTER, UK



LDM485

Fully Isolated, Limited-Distance Modem, RS-232/485 Converter



OMEGAnet® Online Service omega.com	Internet e-mail info@omega.com
---	---

Servicing North America:

U.S.A.: ISO 9001 Certified Omega Engineering, Inc., One Omega Drive, P.O. Box 4047
Stamford, CT 06907-0047 USA
Toll Free: 1-800-826-6342 TEL: (203) 359-1660
FAX: (203) 359-7700 e-mail: info@omega.com

Canada: 976 Bergar
Laval (Quebec), Canada H7L 5A1
Toll-Free: 1-800-826-6342 TEL: (514) 856-6928
FAX: (514) 856-6886 e-mail: info@omega.ca

For immediate technical or application assistance:

U.S.A. and Canada: Sales Service: 1-800-826-6342/1-800-TC-OMEGA®
Customer Service: 1-800-622-2378/1-800-622-BEST®
Engineering Service: 1-800-872-9436/1-800-USA-WHEN®

Mexico: En Español: 001 (203) 359-7803 FAX: (001) 203-359-7807
info@omega.com.mx e-mail: espanol@omega.com

Servicing Europe:

Benelux: Managed by the United Kingdom Office
Toll-Free: 0800 099 3344 TEL: +31 20 347 21 21
FAX: +31 20 643 46 43 e-mail: sales@omega.nl

Czech Republic: Frystatska 184
733 01 Karviná, Czech Republic
Toll-Free: 0800-1-66342 TEL: +420-59-6311899
FAX: +420-59-6311114 e-mail: info@omegashop.cz

France: Managed by the United Kingdom Office
Toll-Free: 0800 466 342 TEL: +33 (0) 161 37 29 00
FAX: +33 (0) 130 57 54 27 e-mail: sales@omega.fr

Germany/Austria: Daimlerstrasse 26
D-75392 Deckenpfronn, Germany
Toll-Free: 0 800 6397678 TEL: +49 (0) 7059 9398-0
FAX: +49 (0) 7056 9398-29 e-mail: info@omega.de

United Kingdom: ISO 9001 Certified OMEGA Engineering Ltd.
One Omega Drive, River Bend Technology Centre, Northbank
Irlam, Manchester M44 5BD England
Toll-Free: 0800-488-488 TEL: +44 (0)161 777-6611
FAX: +44 (0)161 777-6622 e-mail: sales@omega.co.uk

It is the policy of OMEGA Engineering, Inc. to comply with all worldwide safety and EMC/EMI regulations that apply. OMEGA is constantly pursuing certification of its products to the European New Approach Directives. OMEGA will add the CE mark to every appropriate device upon certification. The information contained in this document is believed to be correct, but OMEGA accepts no liability for any errors it contains, and reserves the right to alter specifications without notice.
WARNING: These products are not designed for use in, and should not be used for, human applications.

Unpacking Instructions



Remove the Packing List and verify that you have received all equipment, including the following (quantities in parentheses):

- LDM485 Modem
- Operator's Manual.

If you have any questions about the shipment, please call the OMEGA Customer Service Department. When you receive the shipment, inspect the container and equipment for signs of damage. Note any evidence of rough handling in transit. Immediately report any damage to the shipping agent.

NOTE

The carrier will not honor damage claims unless all shipping material is saved for inspection. After examining and removing contents, save packing material and carton in the event reshipment is necessary.

From the Technical Library of _____

LDM485

Fully Isolated Limited Distance Modem, RS-232/485 Converter


Description

The LDM485 is a compact RS-232 to RS-485 converter that features a complete electrical isolation barrier and heavy duty electrical surge protectors. These devices feature a rugged aluminum enclosure small enough to mount on the back panel of typical computer equipment, saving valuable desk and floor space. Isolation is provided by optical couplers and a DC-to-DC converter. The RS-232 connection is through male or female EIA 25-pin connectors. The RS-485 connections are made through convenient solderless screw terminals.

The LDM485 series is designed for full duplex operation over two-wire pairs. Outputs are tri-state, allowing multidropping of up to 64 units. Hardware handshake is available over two separate wire pairs. Data rates are DC to 57.6K baud. Six diagnostic LED indicators are provided (see Figure 1) for installation guidance and system troubleshooting. The RS-232 interface supports Request To Send, Clear To Send, Data Set Ready, Received Line Signal Detect, and Data Terminal Ready. A convenient null modem switch is provided for the data lines. Also, a line termination switch connects a line termination resistor and line bias resistors to the RS-485 receive lines. The RS-485 interface supports Request To Send and Clear To Send on separate wire pairs. The LDM485 may be used to convert two sets of send and receive channels by using RTS and CTS circuits as the second data channels. Data rates are the same. The units use 12 VAC from a wall-mounted transformer to screw terminals 1 and 2 on the RS-485 connector. Alternately, they can use ± 12 VDC to pins 9 (+) and 10 (-) of the RS-232 connector.

Specifications

Model	LDM485
Baud Rate Range	0 – 57.6K
Baud Rate	57.6K 38.4K 19.2K 9.6K 4.8K 2.4K – 0
Distance (miles) ⁽¹⁾	0.5 1 3 4 5 8
Distance (km)	0.8 1.7 5 6.7 8.3 13.3
Wire Capacitance	Equal to 25pF per foot and up to 32 multidrop units
Maximum Multidrop Units	64
Common Mode Isolation	Surge: 1500 V Continuous: 1000 V
Differential Mode Surge Protection (9 devices)	(AC input) ANSI/IEEE C37.90.1-1989 (all RS-485 inputs and outputs)
Modes	Asynchronous 4-wire duplex, 2-wire half-duplex, 2-wire simplex

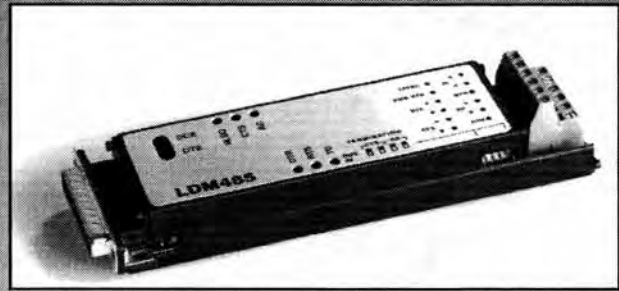


Features

- COMPLETE ISOLATION WITH OPTICAL COUPLERS AND POWER DC-TO-DC CONVERTER
- INDUSTRIAL SURGE PROTECTION DEVICES
- SIX LED DIAGNOSTIC INDICATORS
- 19.2K BAUD AT 3 MILES (5KM), 57.6K BAUD AT 0.5 MILES (0.8KM)
- REQUEST-TO-SEND, CLEAR-TO-SEND HANDSHAKE
- TRI-STATE OUTPUTS FOR MULTIDROP APPLICATIONS, UP TO 64 DEVICES
- SELECTION OF CONNECTORS
- WIDE OPERATING TEMPERATURE RANGE
- SOLDERLESS SCREW TERMINAL FIELD CONNECTIONS

Model	LDM485
Channel Lines ⁽²⁾	TD, RD, RTS, CTS
Control Lines ⁽²⁾	RTS, CTS, DTR, DSR, RLSD
Null Modem Switch	1 (Reverses RS-232 pins 2 and 3)
RS-485 Output Drive	60 mA max/output
RS-485 Input Impedance	12k Ω min/input
Power:	
AC operation ⁽³⁾	12 VAC, $\pm 10\%$, 10W screw terms 1 & 2
DC operation	+11.5 to +17 VDC @ 500 mA on pin 9 -11.5 to -17 VDC @ 100 mA on pin 10
Operating Environment	0°C to +70°C, 0-95% relative humidity, noncondensing
Dimensions	6.6 in x 2.1 in x 1.28 in (167.6 mm x 53.3 mm x 32.5 mm)
Weight	7 oz (200 g) max
PT3, PT3E	11.0 oz (311.8 g) max
MTBF ⁽⁴⁾	> 100,000 hrs

Notes: (1) Distances reduced if multidropping more than 32 units; by 30% for 33-48 units, 50% for 49-64. (2) TD = Transmit Data, RD = Receive Data, RTS = Request To Send, CTS = Clear To Send, DTR = Data Terminal Ready, DSR = Data Set Ready, RLSD = Received Line Signal Detect. (3) 120VAC and 220 VAC power transformers are available. (4) Ground-benign environmental conditions (no salt atmosphere, <50°C ambient temperature).

Figure 1. LDM485 Logic Diagram

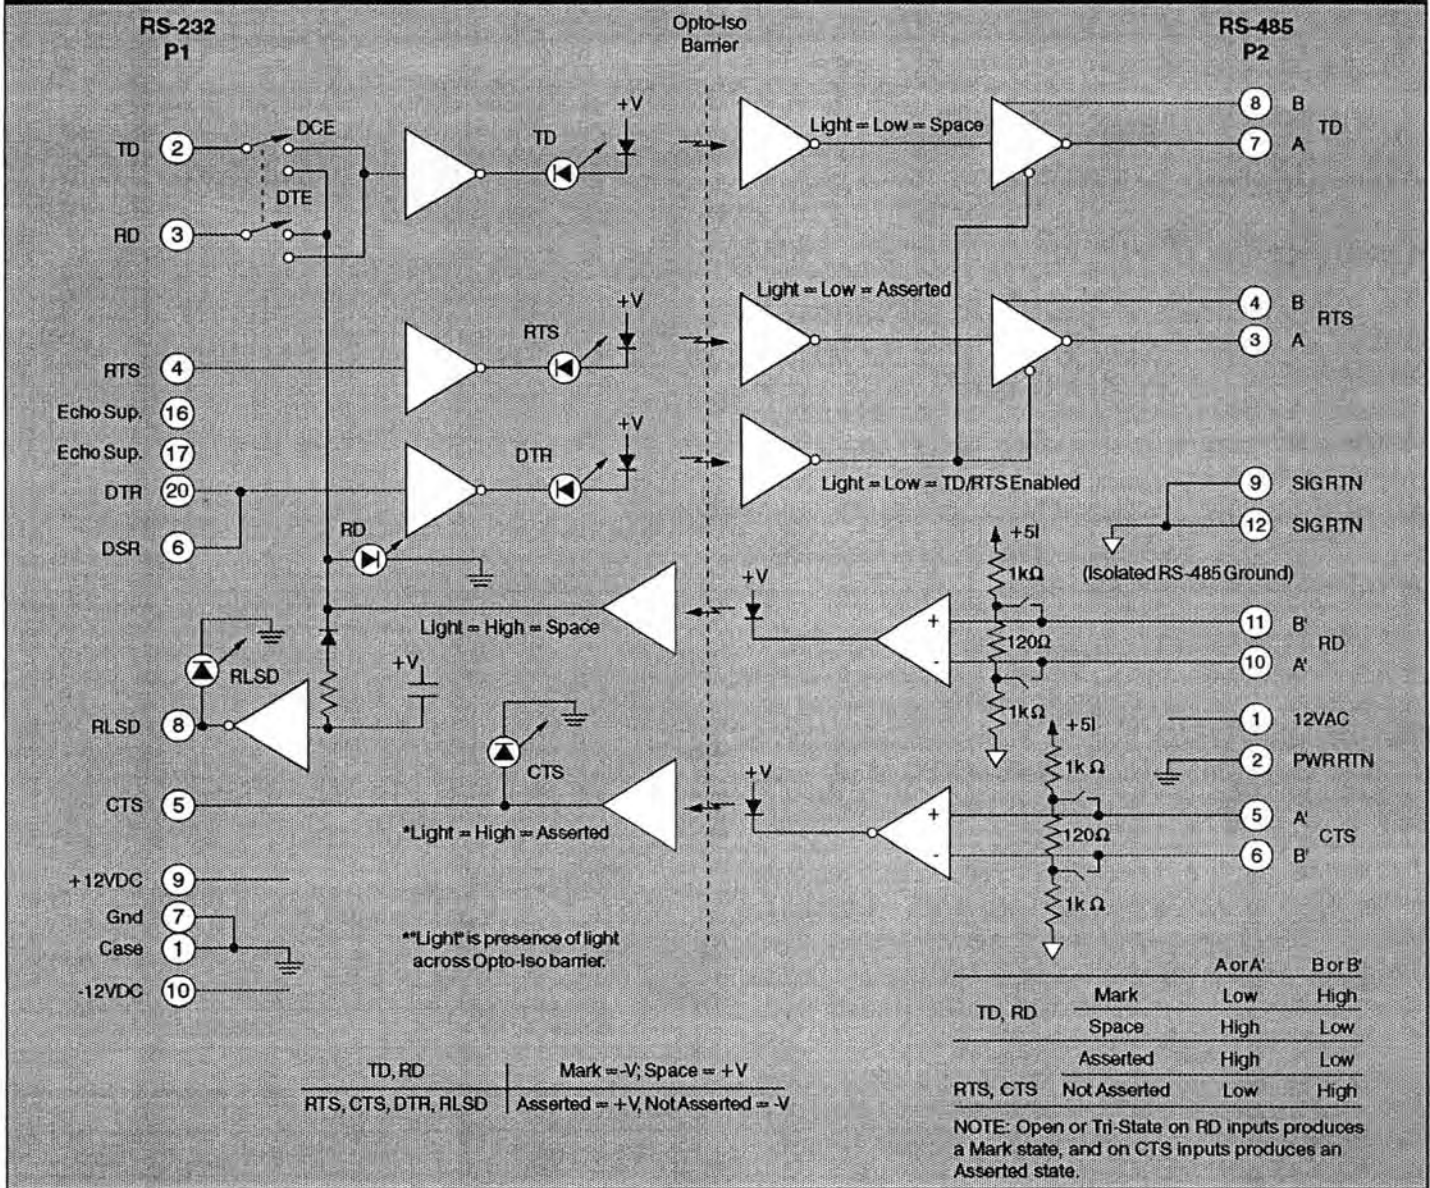

RS-232 P1 Pin	Descriptions	RS-485 P2 Pin	Descriptions
Pin 1	Case	Pin 1	Case Ground
Pin 2	TD	Pin 2	12VAC
Pin 3	RD	Pin 2	PWR RTN
Pin 3	RD	Pin 3	RTS A
Pin 4	RTS	Pin 4	RTS B
Pin 5	CTS	Pin 5	CTS A'
Pin 6	DSR	Pin 6	CTS B'
Pin 7	Sig Gnd	Pin 7	TD A
Pin 8	RLSD	Pin 8	TD B
Pin 9	+12 VDC	Pin 9	SIG RTN
Pin 10	-12 VDC	Pin 10	RD A'
Pin 16	Echo Sup	Pin 11	RD B'
Pin 17	Echo Sup	Pin 12	SIG RTN
Pin 20	DTR		

The LDM485 conforms to EIA RS-232 and RS-485 specifications. Data Terminal Ready must be asserted by the host RS-232 port before the LDM485 can transmit data. When Data Terminal Ready is not asserted, all outputs of the LDM485 are high impedance, allowing up to 64 LDM485 units to be multidropped on a common communications cable. See Figures 1 and 3 for details.

Request To Send and Clear To Send are carried through the RS-485 port as two separate wire pairs. These may be used for full duplex flow control.

Cable Capacitance Effects On Distances

The distances in the specifications are for the wire sizes 18-24AWG (1.02-0.51mm) with a maximum capacitance of 25pF/ft (82pF/m). For higher capacitance cables, decrease distance specifications for

2400 baud and above by a proportionate amount. For example, shielded cable with 50pF/ft (164pF/m) would reduce the distances by 50%. Recommended wire gauges are #18 to #24 (1.02 to 0.51mm).

For baud rates of 1200 and below, distances are limited by DC voltage drop. For 2400 baud and above, distances are limited by pulse distortion. The use of low-capacitance cable can extend the distances shown. Belden 9182 and 9184 are, respectively, single and dual twisted-pair cables that are especially designed for high-speed data communications applications. With these cables the distances can be extended by 50%. However, the DC-resistance-limited distance given under 1200 baud may not be exceeded.

Cable capacitance for individually shielded wire pairs is usually given by manufacturers as capacitance between wires and capacitance from each wire to the shield. The effective transmission line capacitance is approximately the interwire capacitance plus one-half of the wire-to-shield capacitance.

Installation

Installation of the LDM485 consists of attaching it to its mating 25-pin connector on the terminal of the host computer, either directly or through a cable. Optional mounting screws and screw jacks are provided.

The DCE/DTE (data-communication equipment/data terminal equipment) switch must be set to be complementary to the terminal or computer port (DCE connects to DTE and DTE to DCE). Since the LDM485 is a communications device, its normal setting is DCE.


In the event that the host port is not known, the LED indicators may be used to find the proper switch setting. The transmit and receive LEDs will be off during a MARK, which is the normal, or standby, condition when no data are being transmitted. Set the switch to the position that allows these LEDs to be off. The field wiring as shown in Figure 2 must be correct. It is sometimes useful to tie the RS-485 data output back to the RS-485 input during initial check-out.

The four other LEDs indicate the status of various control conditions and will be on when these functions are asserted. An open circuit to Request To Send will be interpreted as assertion, allowing convenient operation with equipment not supporting this function. An open circuit on the Receive Data line of the RS-485 circuits will be interpreted as a MARK.

For 2-wire half-duplex and for 2-wire multi-drop installations, echo suppression is available by strapping P1 pin 16 to P1 pin 17. Then RTS asserted enables echo suppression and forces RD (P1 pin 3) to a MARK.

Data Terminal Ready, DTR, must be asserted before the LDM485 can transmit data. This is normally done by the host computer. For situations where the host equipment does not have the capability of supplying a DTR signal, RLSD may be used to automatically assert DTR. On the RS-232 connector P1 of each LDM485, simply connect RLSD pin 8 to DTR pin 20. This connection is not appropriate for multi-drop installations.

Figure 2. Field Wiring, LDM to LDM

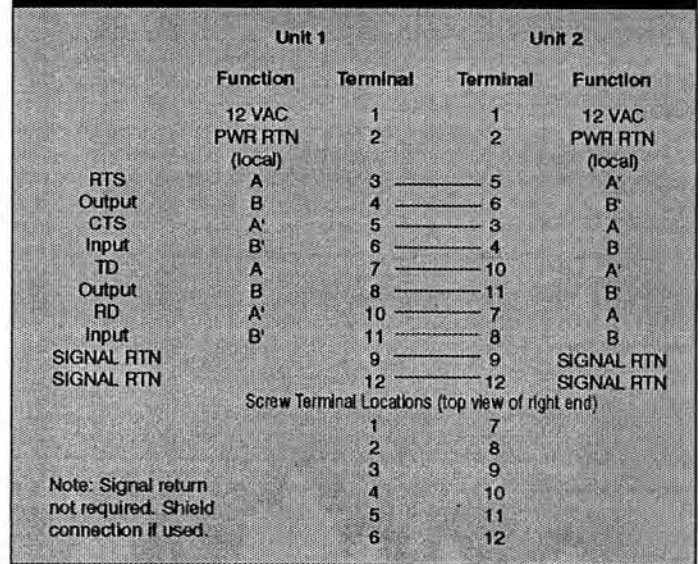

Notes: (1) For data channels MARK is A negative relative to B. (2) For control lines Assertion is A positive relative to B. (3) RTS = Request To Send, CTS = Clear To Send, TD = Transmitted Data, RD = Received Data. (4) Recommended wire sizes are 14AWG to 22AWG. Belden 8442 or Signal 1172 are typical low cost, nonshielded, twisted pair cables for use with LDM485. (5) Signal return is not required. Cable shield, if used, should be connected to SIGNAL RTN. (6) LDM485 units are suitable for use in RS-422/485 applications.

For multi-drop installations, the following points should be considered (see Figure 3 for multi-drop wiring connections):

1. If the LDM485 is not powered, it releases the transmit bus so other RS-485 devices may use the bus.
2. Local equipment connected to the RS-232 connector must not leave DTR in the asserted state.
3. An open circuit or zero volts on the RS-232 connector pin 20 (DTR) is equivalent to disassertion.
4. The RS-485 line should be terminated at both ends using internal line termination DIP switches (see Figure 3). Stub length off the main line should be as short as possible.
5. DTR should be asserted at least 5.0 μ s before start bit and disasserted at end of last stop bit. This disables the RS-485 line after 6.0 μ s min.

WARNING! Because PWR RTN and RS-232 GND (P1-7) and Shield (P1-1) are common, when powering more than one unit from the same transformer, wire all units' 12 VAC's together to one side of the secondary and all PWR RTN's together to the other side of the secondary.

Figure 3. LDM485 Multidrop Wiring Connection


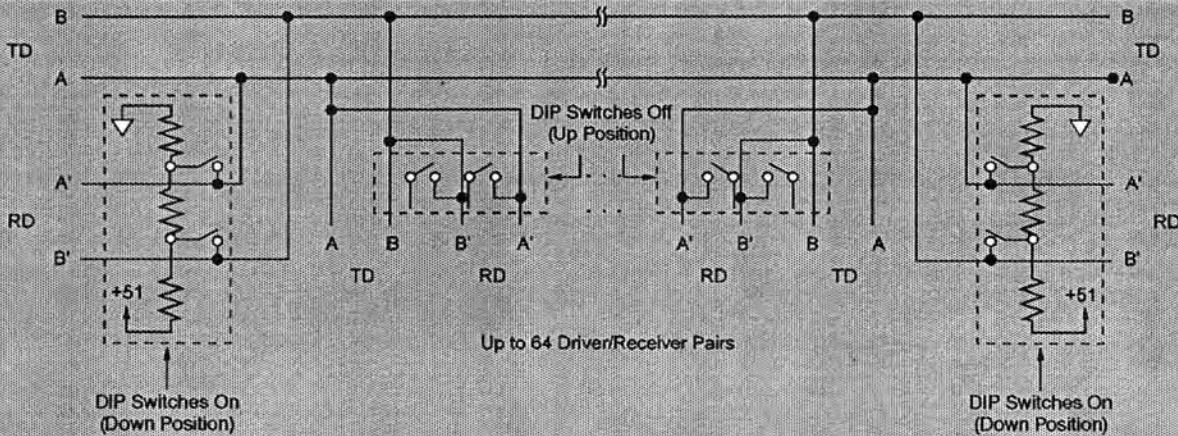


Figure 4. LDM485 Mechanical Drawing

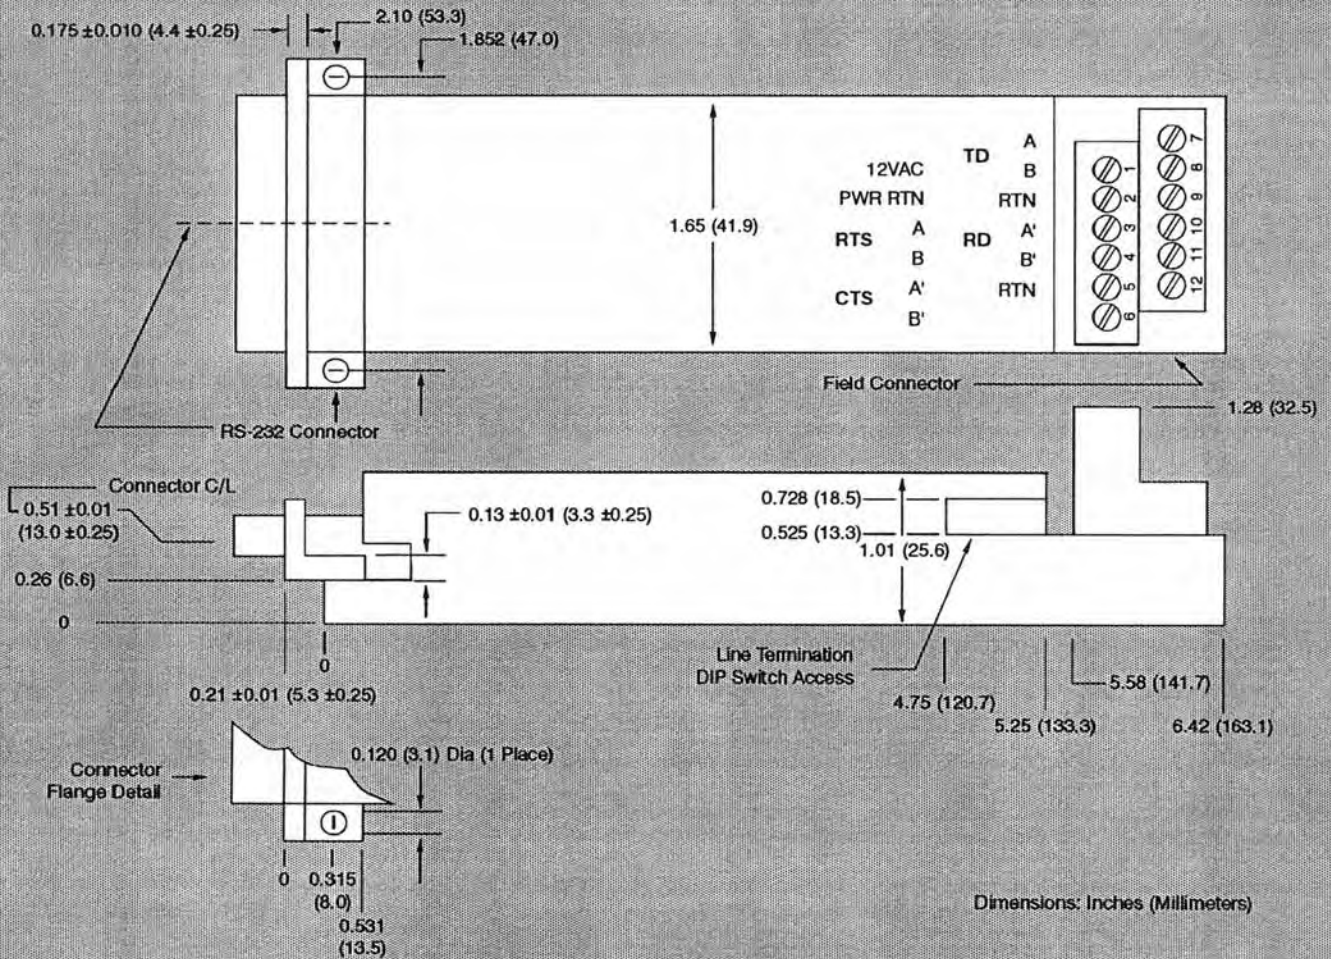

Models

LDM485-P	Male RS-232 connector
LDM485-S	Female RS-232 connector
LDM485-PT	Male RS-232 connector and U.S. power transformer
LDM485-ST	Female RS-232 connector and U.S. power transformer

NOTES:



WARRANTY/DISCLAIMER

OMEGA ENGINEERING, INC. warrants this unit to be free of defects in materials and workmanship for a period of **13 months** from date of purchase. OMEGA's WARRANTY adds an additional one (1) month grace period to the normal **one (1) year product warranty** to cover handling and shipping time. This ensures that OMEGA's customers receive maximum coverage on each product.

If the unit malfunctions, it must be returned to the factory for evaluation. OMEGA's Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective, it will be repaired or replaced at no charge. OMEGA's WARRANTY does not apply to defects resulting from any action of the purchaser, including but not limited to mishandling, improper interfacing, operation outside of design limits, improper repair, or unauthorized modification. This WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of having been damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA's control. Components in which wear is not warranted, include but are not limited to contact points, fuses, and triacs.

OMEGA is pleased to offer suggestions on the use of its various products. However, OMEGA neither assumes responsibility for any omissions or errors nor assumes liability for any damages that result from the use of its products in accordance with information provided by OMEGA, either verbal or written. OMEGA warrants only that the parts manufactured by the company will be as specified and free of defects. OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESSED OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. LIMITATION OF LIABILITY: The remedies of purchaser set forth herein are exclusive, and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.

CONDITIONS: Equipment sold by OMEGA is not intended to be used, nor shall it be used: (1) as a "Basic Component" under 10 CFR 21 (NRC), used in or with any nuclear installation or activity; or (2) in medical applications or used on humans. Should any Product(s) be used in or with any nuclear installation or activity, medical application, used on humans, or misused in any way, OMEGA assumes no responsibility as set forth in our basic WARRANTY/DISCLAIMER language, and, additionally, purchaser will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the Product(s) in such a manner.

RETURN REQUESTS/INQUIRIES

Direct all warranty and repair requests/inquiries to the OMEGA Customer Service Department. BEFORE RETURNING ANY PRODUCT(S) TO OMEGA, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OMEGA'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS). The assigned AR number should then be marked on the outside of the return package and on any correspondence.

The purchaser is responsible for shipping charges, freight, insurance and proper packaging to prevent breakage in transit.

FOR **WARRANTY** RETURNS, please have the following information available BEFORE contacting OMEGA:

1. Purchase Order number under which the product was PURCHASED,
2. Model and serial number of the product under warranty, and
3. Repair instructions and/or specific problems relative to the product.

FOR **NON-WARRANTY** REPAIRS, consult OMEGA for current repair charges. Have the following information available BEFORE contacting OMEGA:

1. Purchase Order number to cover the COST of the repair,
2. Model and serial number of the product, and
3. Repair instructions and/or specific problems relative to the product.

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering.

OMEGA is a registered trademark of OMEGA ENGINEERING, INC.

© Copyright 2011 OMEGA ENGINEERING, INC. All rights reserved. This document may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without the prior written consent of OMEGA ENGINEERING, INC.

Where Do I Find Everything I Need for Process Measurement and Control? **OMEGA...Of Course!** *Shop online at omega.comSM*

TEMPERATURE

- ☑ Thermocouple, RTD & Thermistor Probes, Connectors, Panels & Assemblies
- ☑ Wire: Thermocouple, RTD & Thermistor
- ☑ Calibrators & Ice Point References
- ☑ Recorders, Controllers & Process Monitors
- ☑ Infrared Pyrometers

PRESSURE, STRAIN AND FORCE

- ☑ Transducers & Strain Gages
- ☑ Load Cells & Pressure Gages
- ☑ Displacement Transducers
- ☑ Instrumentation & Accessories

FLOW/LEVEL

- ☑ Rotameters, Gas Mass Flowmeters & Flow Computers
- ☑ Air Velocity Indicators
- ☑ Turbine/Paddlewheel Systems
- ☑ Totalizers & Batch Controllers

pH/CONDUCTIVITY

- ☑ pH Electrodes, Testers & Accessories
- ☑ Benchtop/Laboratory Meters
- ☑ Controllers, Calibrators, Simulators & Pumps
- ☑ Industrial pH & Conductivity Equipment

DATA ACQUISITION

- ☑ Data Acquisition & Engineering Software
- ☑ Communications-Based Acquisition Systems
- ☑ Plug-in Cards for Apple, IBM & Compatibles
- ☑ Data Logging Systems
- ☑ Recorders, Printers & Plotters

HEATERS

- ☑ Heating Cable
- ☑ Cartridge & Strip Heaters
- ☑ Immersion & Band Heaters
- ☑ Flexible Heaters
- ☑ Laboratory Heaters

ENVIRONMENTAL MONITORING AND CONTROL

- ☑ Metering & Control Instrumentation
- ☑ Refractometers
- ☑ Pumps & Tubing
- ☑ Air, Soil & Water Monitors
- ☑ Industrial Water & Wastewater Treatment
- ☑ pH, Conductivity & Dissolved Oxygen Instruments