

Specifications

Potentiometer Input:

- End-to-end Resistance: 100 ohms up to 100k ohms
- Input Impedance: >1M ohms
- Input Excitation: 500mV, 5mA maximum drive.
- Zero Turn-Up: 80% of full scale input
- Span Turn-Down: 80% of full scale input
- Common Mode Rejection: 1800VDC (input to power)

Output:

- Voltage
 - Output: 0-5V, 0-10V
 - Source Impedance: <10 ohms
 - Drive: 10mA, max. (1k ohms min. @10V)

Current Output

- Output: 0-1mA, 0-20mA, 4-20mA
- Source Impedance: >100k ohms

- Compliance:
- 0-1mA: 7.5V, max. (7.5k ohms, max.)
 - 0-20mA: 12V, max. (600 ohms, max.)
 - 4-20mA: 12V, max. (600 ohms, max.)

Accuracy (Including Linearity, Hysteresis):

±0.1% maximum at 25°C.

Stability:

Temperature: <±0.05%/°C maximum of full scale range.

Response Time (10 to 90%):

<200mSec., typical.

Common Mode Rejection:

120dB @ DC, >100dB @ 60Hz

Isolation:

800VDC between line power and input, output

EMC Compliance (CE Mark):

Emissions: EN50081-1

Immunity: EN50082-2

Safety: EN50178

LED Indication (green):

Active DC power

Humidity (Non-Condensing):

Operating: 15 to 95% @ 45°C

Soak: 90% for 24 hours @ 65°C

Temperature Range:

- Operating: 0 to 55°C (32 to 131°F)
- Storage: -25 to 70°C (-13 to 158°F)

Power:

- Consumption: 1.5W typical, 2.5W max
- Range: 100 to 240VAC, ±10%, 50 to 400Hz

Weight:


0.48 lbs

Agency Approvals:

- UL recognized per standard UL508 (File No. E99775).
- CE Compliance per EMC directive 89/336/EEC and Low Voltage 73/23/EEC.

Terminal	Connection	Terminal	Connection
A1	DC Output (+)	C3	Shield Ground
A2	DC Output (-)	C4	Pot. Input (fully CCW)
A3	Not Used	C5	Pot. Input Wiper
A4	Not Used	C6	Pot. Input (fully CW)
A5	Not Used	P1	AC Power (Hot)
A6	Not Used	P2	Not Used
C1	Not Used	P3	Not Used
C2	Not Used	P4	AC Power (Neutral)

Dimensions

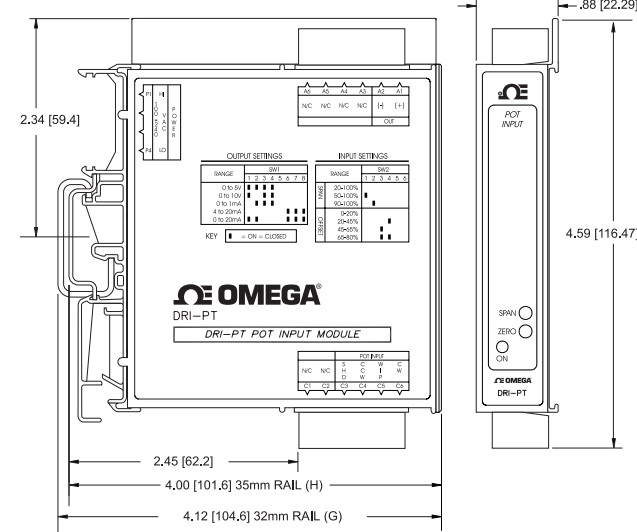


DRI-PT

AC Powered Potentiometer Input DIN Rail Signal Conditioner

INSTRUCTION
SHEET

M5473/0815

Shop online at omega.com e-mail: info@omega.com
For latest product manuals: www.omegamannual.info

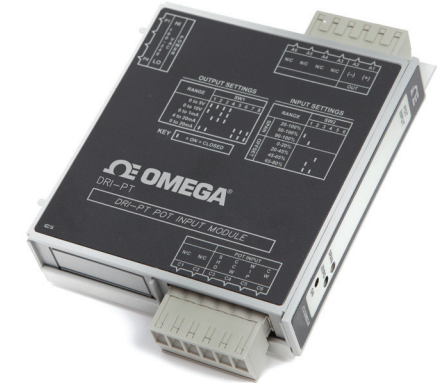

Provides a DC Output in Proportion
to a Potentiometer Input

- Accepts Potentiometers from 100 Ohms to 100k Ohms
- Wide Ranging Zero and Span
- ASIC Technology
- DIN Rail Mounting with IQRL
- Universal AC Power 85 to 265 VAC
- Plug-in Terminals

Description

The DRI-PT is a DIN rail mount, potentiometer input signal conditioner with 1800VDC isolation between AC power and the input/output circuitry. The input provides a constant voltage and is designed to accept any 3-wire potentiometer from 100 ohms to 100k ohms. The field configurable output is switch selectable providing a 0-5V, 0-10V, 0-1mA, 0-20mA or 4-20mA DC signal. Wide ranging, precision zero and span pots, used in conjunction with DIP switches, allow 80% adjustability of offset and gain to transmit a full scale output from any 20% portion of the potentiometer input.

Application

The DRI-PT is useful in transmitting process control setpoints to remote PID controllers or interfacing position or level sensors to data acquisition and control systems. The high density DIN rail mounting offers an extremely compact solution for saving valuable panel space.

Configuration

In a valve positioning application a potentiometer is sometimes used as a feedback signal. Quite often a wide open valve is only a 25% turn of the feedback potentiometer. The DRI-PT can easily be adjusted with the zero and span to provide a fullscale output signal (e.g. 4-20mA) representing 0-25% or even 50-75% of the potentiometer input.

Unless otherwise specified, the factory presets the Model DRI-PT as follows:

Input Range: 0 to 100%
Output: 4 to 20mA

For other output ranges, refer to Tables 1 and 2 to reconfigure switches SW1 and SW2 for the desired input and output ranges.

WARNING: Do not change switch settings with power applied. Severe damage will result!

Calibration

Note: For best results, calibration should be performed with the intended output load, in the operating environment, mounted on a DIN rail, allowing at least one hour for thermal equilibrium of the system.

1. With power disconnected, set the output and input switch selectors (SW1 and SW2) to the desired ranges (see Tables 1 and 2).

Note: An ACPB rail is required to power the modules. See Ordering Information.

2. Connect the input to a potentiometer. Connect the output to the actual device load (or a load approximately equivalent to the actual device load value) and apply power.

Note: To maximize thermal stability, final calibration should be performed in the operating installation, allowing approximately 1 to 2 hours for warm up and thermal equilibrium of the system.

3. Set the input to the desired minimum and adjust the zero potentiometer for the desired minimum output.

4. Set the input to the desired maximum and adjust the span potentiometer for the desired maximum output.

5. Repeat steps 3 and 4, if necessary.

Table 1: Input Range Settings

Span	Selector SW2					
	1	2	3	4	5	6
20 - 100%						
45 - 100%	■					
(default) 85 - 100%		■				
Offset	1	2	3	4	5	6
(default) 0 - 20%						
20 - 45%				■		
45 - 65%			■			
65 - 80%			■	■		

Key: ■ = 1 = ON or Closed

Table 2: Output Range Settings

Output	Selector SW1							
	1	2	3	4	5	6	7	8
0 to +5V	■	■	■	■				
0 to +10V	■		■	■				
0 to 1mA		■	■	■				
(default) 4 to 20mA						■	■	■
0 to 20mA	■	■				■	■	■

Key: ■ = 1 = ON or Closed



omega.com info@omega.com

Servicing North America:

U.S.A.:

Omega Engineering, Inc., One Omega Drive,
P.O. Box 4047, Stamford, CT 06907-0047 USA
Toll-Free: 1-800-826-6342 (USA & Canada only)
Customer Service: 1-800-622-2378
(USA & Canada only)
Engineering Service: 1-800-872-9436
(USA & Canada only)
Tel: (203) 359-1660
Fax: (203) 359-7700
e-mail: info@omega.com

For Other Locations Visit omega.com/worldwide

The information contained in this document is believed to be correct, but OMEGA accepts no liability for any errors it contains, and reserves the right to alter specifications without notice.

WARRANTY/DISCLAIMER

OMEGA ENGINEERING, INC., warrants this unit to be free of defects in materials and workmanship for a period of **13 months** from date of purchase. OMEGA's WARRANTY adds an additional one (1) month grace period to the normal **one (1) year product warranty** to cover handling and shipping time. This ensures that OMEGA's customers receive maximum coverage on each product. If the unit malfunctions, it must be returned to the factory for evaluation. OMEGA's Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective, it will be repaired or replaced at no charge. OMEGA's WARRANTY does not apply to defects resulting from any action of the purchaser, including but not limited to mishandling, improper interfacing, operation outside of design limits, improper repair, or unauthorized modification. This WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of having been damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA's control. Components in which wear is not warranted, include but are not limited to contact points, fuses, and triacs. **OMEGA is pleased to offer suggestions on the use of its various products. However, OMEGA neither assumes responsibility for any omissions or errors nor assumes liability for any damages that result from the use of its products in accordance with information provided by OMEGA, either verbal or written. OMEGA warrants only that the parts manufactured by the company will be as specified and free of defects. OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESSED OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. LIMITATION OF LIABILITY: The remedies of purchaser set forth herein are exclusive, and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.** CONDITIONS: Equipment sold by OMEGA is not intended to be used, nor shall it be used: (1) as a "Basic Component" under 10 CFR 21 (NRC), used in or with any nuclear installation or activity; or (2) in medical applications or used on humans. Should any Product(s) be used in or with any nuclear installation or activity, medical application, used on humans, or misused in any way, OMEGA assumes no responsibility as set forth in our basic WARRANTY/DISCLAIMER language, and, additionally, purchaser will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the Product(s) in such a manner.

RETURN REQUESTS/INQUIRIES

Direct all warranty and repair requests/inquiries to the OMEGA Customer Service Department. BEFORE RETURNING ANY PRODUCT(S) TO OMEGA, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OMEGA'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS). The assigned AR number should then be marked on the outside of the return package and on any correspondence. The purchaser is responsible for shipping charges, freight, insurance and proper packaging to prevent breakage in transit.

FOR **WARRANTY RETURNS**, please have the following information available BEFORE contacting OMEGA.

- Purchase order number which the product was PURCHASED,
- Model and serial number of the product under warranty, and
- Repair instructions and/or specific problems relative to the product.

FOR **NON-WARRANTY RETURNS**, consult OMEGA for current repair charges. Have the following information available BEFORE contacting OMEGA.

- Purchase Order number to cover the COST of the repair,
- Model and serial number of the product and
- Repair instructions and/or specific problems relative to the product.

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. This affords customers the latest technology and engineering. OMEGA is a registered trademark of OMEGA ENGINEERING, INC.
© COPYRIGHT 2015 OMEGA ENGINEERING, INC. All rights reserved. This document may not be copied, photocopied, translated, or reduced to any electronic medium-readable form, in whole or in part, without the prior written consent of OMEGA ENGINEERING, INC.

**PAGE
INTENTIONALLY
BLANK**

**PAGE
INTENTIONALLY
BLANK**