


**1 YEAR**  
WARRANTY



# User's Guide

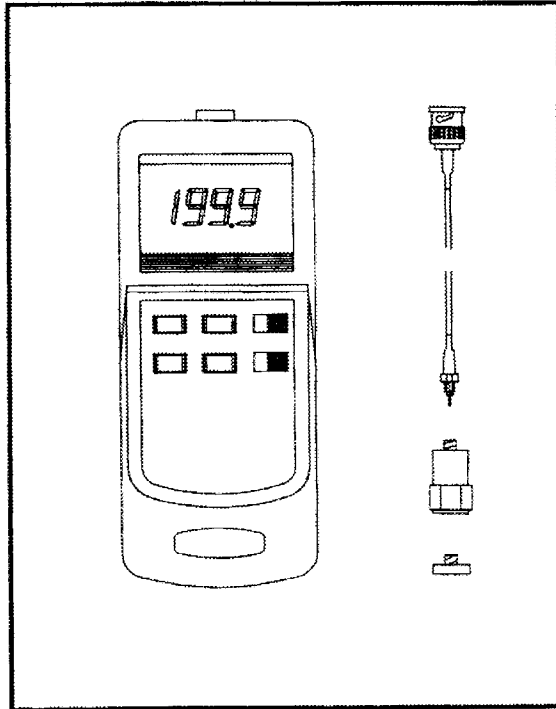

**Shop online at**

**omega.com®**  
CEOMEGA®

*omega.com*

*e-mail: info@omega.com*

*For latest product manuals:*  
*omegamanual.info*



MADE IN TAIWAN

## **HHVB82** **Vibration Meter** **Acceleration & Velocity**



OMEGAnet® Online Service  
omega.com

Internet e-mail  
info@omega.com

### Servicing North America:

**U.S.A.:** Omega Engineering, Inc., One Omega Drive, P.O. Box 4047  
ISO 9001 Certified Stamford, CT 06907-0047  
Toll-Free: 1-800-826-6342 Tel: (203) 359-1660  
FAX: (203) 359-7700 e-mail: info@omega.com

**Canada:** 976 Bergar  
Laval (Quebec), Canada H7L 5A1  
Toll-Free: 1-800-826-6342 TEL: (514) 856-6928  
FAX: (514) 856-6886 e-mail: info@omega.ca

### For immediate technical or application assistance:

**U.S.A. and Canada:** Sales Service: 1-800-826-6342/1-800-TC-OMEGA®  
Customer Service: 1-800-622-2378/1-800-622-BEST®  
Engineering Service: 1-800-872-9436/1-800-USA-WHEN®

**Mexico:** En Español: 001 (203) 359-7803 FAX: (001) 203-359-7807  
info@omega.com.mx e-mail: espanol@omega.com

### Servicing Europe:

**Benelux:** Managed by the United Kingdom Office  
Toll-Free: 0800 099 3344 TEL: +31 20 347 21 21  
FAX: +31 20 643 46 43 e-mail: sales@omega.nl

**Czech Republic:** Frystatska 184  
733 01 Karviná, Czech Republic  
Toll-Free: 0800-1-66342 TEL: +420-59-6311899  
FAX: +420-59-6311114 e-mail: info@omegashop.cz

**France:** Managed by the United Kingdom Office  
Toll-Free: 0800 466 342 TEL: +33 (0) 161 37 29 00  
FAX: +33 (0) 130 57 54 27 e-mail: sales@omega.fr

**Germany/Austria:** Daimlerstrasse 26  
D-75392 Deckenpfronn, Germany  
Toll-Free: 0 800 6397678 TEL: +49 (0) 7059 9398-0  
FAX: +49 (0) 7056 9398-29 e-mail: info@omega.de

**United Kingdom:** OMEGA Engineering Ltd.  
ISO 9001 Certified One Omega Drive, River Bend Technology Centre, Northbank  
Irlam, Manchester M44 5BD England  
Toll-Free: 0800-488-488 TEL: +44 (0)161 777-6611  
FAX: +44 (0)161 777-6622 e-mail: sales@omega.co.uk

---

It is the policy of OMEGA Engineering, Inc. to comply with all worldwide safety and EMC/EMI regulations that apply. OMEGA is constantly pursuing certification of its products to the European New Approach Directives. OMEGA will add the CE mark to every appropriate device upon certification.

The information contained in this document is believed to be correct, but OMEGA accepts no liability for any errors it contains, and reserves the right to alter specifications without notice.

**WARNING:** These products are not designed for use in, and should not be used for, human applications.

## TABLE OF CONTENTS

1. FEATURES.....	1
2. SPECIFICATIONS.....	2
3. FRONT PANEL DESCRIPTION.....	4
3-1 Display.....	4
3-2 BNC socket of meter.....	4
3-3 RMS/PEAK switch.....	4
3-4 Acceleration/Velocity switch.....	4
3-5 Data hold button.....	4
3-6 Power button.....	4
3-7 Memory RECORD button.....	4
3-8 Memory RECALL button.....	4
3-9 Battery compartment/cover.....	4
3-10 BNC plug of cable.....	4
3-11 Mini plug of cable.....	4
3-12 Input socket of vibration sensor.....	4
3-13 Vibration sensor ( VB-81A ).....	4
3-14 Magnetic base.....	4
4. MEASURING PROCEDURE.....	5
5. ZERO ADJUSTMENT PROCEDURE.....	6
6. AUTO POWER OFF DISABLE.....	10
7. BATTERY REPLACEMENT.....	10
8. CLASSIFICATION RANGES.....	11
9. SENSITIVITY RELATIVE TABLE ACCORDING ISO 2954.....	12

## 1. FEATURES

- \* Applications for industrial vibration monitoring :  
*All industrial machinery vibrates. The level of vibration is a useful guide to machine condition. Poor balance, misalignment & looseness of the structure will cause the vibration level increase, it is a sure sign that the maintenance is needed.*
- \* Frequency range 10 Hz – 1 kHz, sensitivity relative meet ISO 2954.
- \* Professional vibration meter supply with vibration sensor & magnetic base, full set.
- \* Velocity measuring range 200 mm/s.
- \* Acceleration measuring range 200 m/s<sup>2</sup>
- \* RMS & Peak measurement.
- \* Wide frequency range.
- \* Data hold button to freeze the desired reading.
- \* Memory function to record maximum and minimum reading with recall.
- \* Separate vibration probe, easy operation
- \* Super large LCD display.
- \* Microcomputer circuit, high performance.
- \* Auto shut off saves battery life.
- \* Built – in low battery indicator.
- \* Heavy duty & compact housing case.
- \* Complete set with the hard carrying case.

## 2. SPECIFICATIONS

Display	61 mm x 34 mm supper large LCD display. 15 mm ( 0.6" ) digit size.
Measurement	Velocity, Acceleration RMS value, Peak value, Data hold, Max. & Min. value.
Range	<i>Velocity :</i> 200 mm/s : 0.5 to 199.9 mm/s <i>Acceleration :</i> 200 m/s <sup>2</sup> : 0.5 to 199.9 m/s <sup>2</sup>
Frequency range	10 Hz to 1 KHz <i>* Sensitivity relative during the the frequency range meet ISO 2954 Refer to table 1, page 11.</i>
Accuracy	± ( 5 % + 2 d ) reading , 160 Hz, 80 Hz. <i>@ 23 ± 5 °C</i>
Calibration point	<i>Velocity :</i> 50 mm/s ( 160 Hz ) <i>Acceleration :</i> 50 m/s <sup>2</sup> ( 160 Hz )
Circuit	Exclusive microcomputer circuit.
Data hold	Freeze the desired reading.
Peak measurement	To measure the peak value.
Memory	Maximum & Minimum value.
Power off	Auto shut off, saves battery life, or manual off by push button.
Sampling time	Approx. 1 second.
Operating temperature	0 °C to 50 °C ( 32 °F to 122 °F ).
Operating humidity	Less than 80% RH.

<b>Power supply</b>	Alkaline battery duty type, DC 9V Battery, 006P, MN1604 (FP3) or equivalent.	
<b>Power consumption</b>	Approx. DC 6 mA.	
<b>Weight</b>	<i>Meter</i>	274 g/0.60 LB
	<i>Probe with magnetic base</i>	38 g/0.08 LB
<b>Dimension</b>	<i>Main instrument:</i> 185 x 78 x 38 mm ( 7.3 x 3.1 x 1.5 inch ).	
	<i>Vibration sensor probe:</i> Round 16 mm Dia. x 29 mm.	
<b>Accessories included</b>	Instruction manual..... 1 PC. Vibration sensor ( VB-81A )..... 1 PC. Cable..... 1 PC. Magnetic base..... 1 PC. Carrying Case..... 1 PC.	

### 3. FRONT PANEL DESCRIPTION

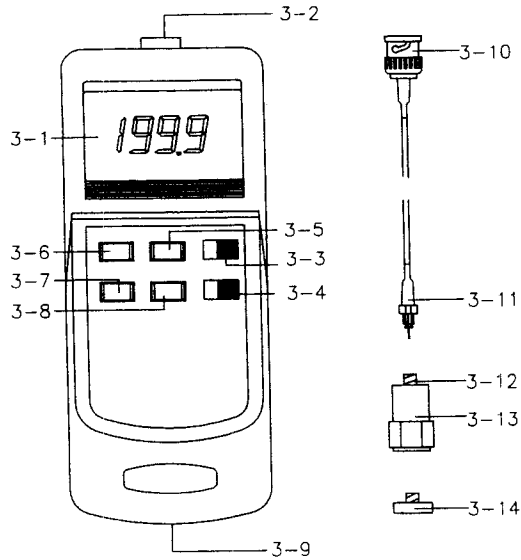


Fig. 1

- |                                  |                                       |
|----------------------------------|---------------------------------------|
| 3-1 Display                      | 3-9 Battery compartment /cover        |
| 3-2 BNC socket of meter          | 3-10 BNC plug of cable                |
| 3-3 RMS/PEAK switch              | 3-11 Mini plug of cable               |
| 3-4 Acceleration/Velocity switch | 3-12 Input socket of vibration sensor |
| 3-5 Data hold button             | 3-13 Vibration sensor                 |
| 3-6 Power button                 | 3-14 Magnetic base                    |
| 3-7 RECORD button                |                                       |
| 3-8 RECALL button                |                                       |

#### 4. MEASURING PROCEDURE

- 1) Plug in the " BNC plug of cable " ( 3-10, Fig. 1 ) to the " BNC socket of meter " ( 3-2, Fig. 1 ).
- 2) Plug in the " Mini plug of cable " ( 3-11, Fig. 1 ) to the " Input socket of vibration sensor " ( 3-12, Fig. 1 ).
- 3) For the acceleration measurement, select the " Acceleration/Velocity switch " ( 3-4, Fig. 1 ) to the " ACC. " position.  
For the velocity measurement, select the " Acceleration/Velocity switch " ( 3-4, Fig. 1 ) to the " VEL. " position.

***For general applications of industrial vibration monitoring, select " Velocity measurement " typically.***

- 4) Select the " RMS/PEAK switch " ( 3-3, Fig. 1 ) to the " RMS " position.
- 5) Power on the meter by pushing the " Power button " ( 3-6, Fig. 1 ) once.
- 6) If the surface material of measuring article is not the ferrous material, hold the vibration sensor by hand & touch the sensor to the surface of the measuring article, refer to the Fig. 2, page 6.



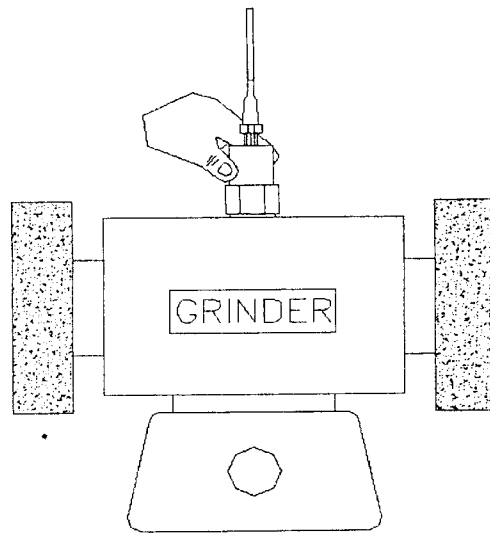


Fig. 2

- 8) If the surface material of measuring article is the ferrous material, connect " Vibration sensor " ( 3-13, Fig. 1 ) with the " Magnetic base " ( 3-14, Fig. 1 ), refer to Fig. 3, page 6. Put the whole unit ( Vibration sensor & Magnetic base ) to the surface of measuring article, refer to Fig. 4, page 7





Fig. 3

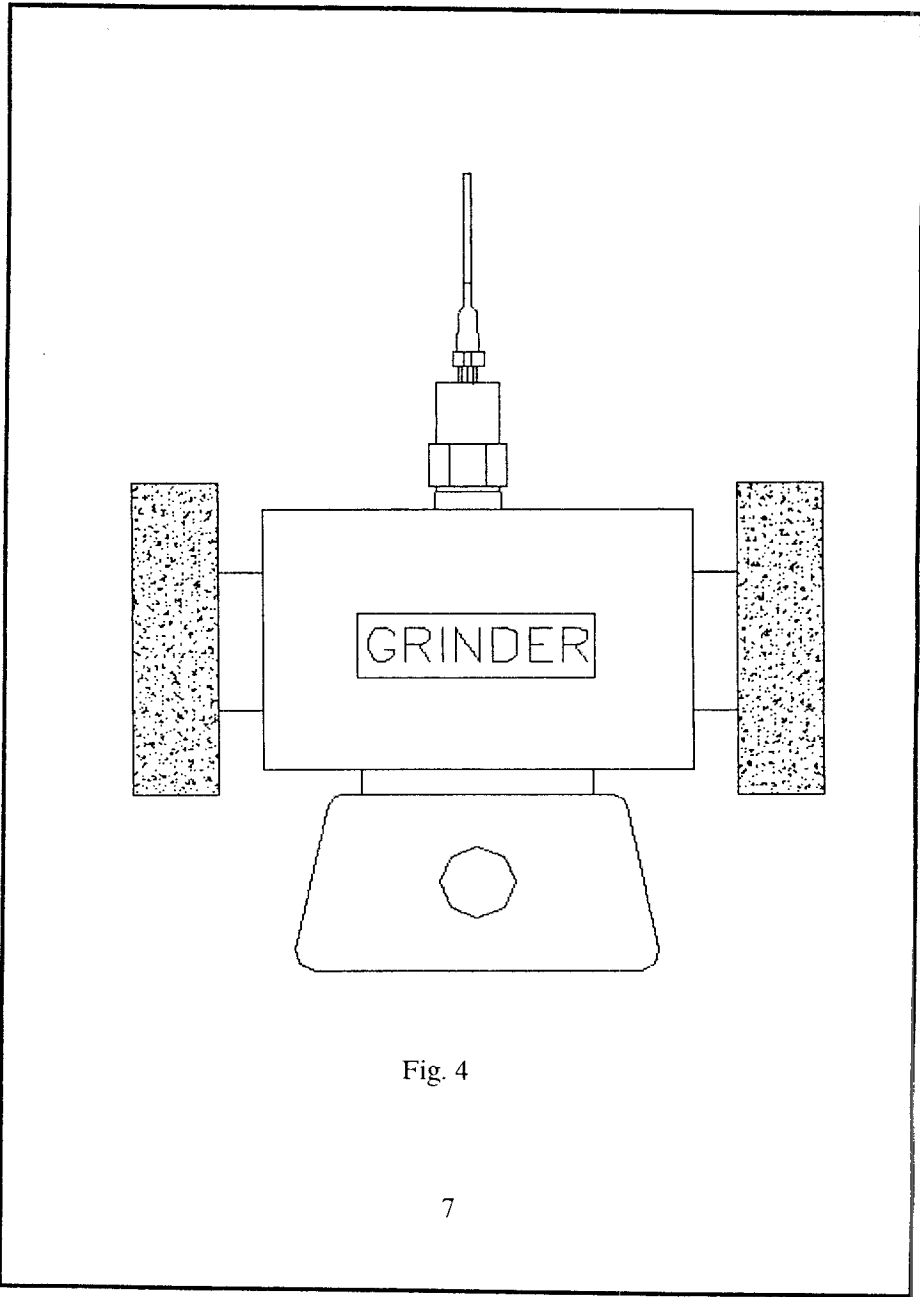

### 9) PEAK value measurement

Before the measurement if select the " RMS/PEAK switch " ( 3-3, Fig. 1 ) to the " PEAK " position. Then during the measurement, the display will display the peak value.

### 10) Data Hold

During the measurement, push the " Data Hold button " ( 3-5, Fig. 1 ) will hold the measured value & the LCD will indicate " D.H." symbol. Push the " Data hold button " again to release the data hold function.

### 11) Data Record ( Max., Min. reading )

- \* The DATA RECORD function displays the maximum, minimum and average readings. To start the DATA RECORD function, press the " RECORD Button " ( 3-7, Fig. 1 ) once. " REC " symbol will appear on the LCD display.
- \* With the " REC " symbol on the display :
  - (a) Push the " RECALL button " ( 3-8, Fig. 1 ) once, the " Max " symbol along with the maximum value will appear on the display.
  - (b) Push the " RECALL Button" again, the " Min " symbol along with the minimum value will appear on the display.
  - (c) To exit the memory record function, push the " RECORD " button once again. The display will revert back to the current reading.

## 5. ZERO ADJUSTMENT PROCEDURE

Due to drift of environment temperature value, battery power change or, meter used for a long time or other reasons. The display value may exist not zero value ( few digits ) in case of no signal into the " Vibration Sensor ". General speaking those not zero value will not effect the measurement typically. However if intend to make the precision measurement, the following zero adjustment procedures should be executed as :

- 1) Select the " Acceleration/Velocity Switch " to the " Acceleration " position.
- 2) No signal into the vibration sensor.
- 3) Open the battery cover.
- 4) Use a convenient screw driver to adjust " Zero adjust VR " until the display reach the zero value.

## 6. AUTO POWER OFF DISABLE

The meter is built the " Auto power shut off " to prolong battery life. If no function buttons be pushed for approx. 10 minutes, the power will be off automatically.

If the user intend to disable the " Auto Power off " function, following procedures should be taken. :

**During the measurement, push the " Record Button " ( 3-7, Fig. 1 ) to execute the memory record function.**

## 7. BATTERY REPLACEMENT

- 1) When the left corner of LCD display show " LBT ", it is necessary to replace the battery. However, in-spec measurement may still be made for several hours after low battery indicator appears.
- 2) Loóse the screw from the battery cover, then open the " Battery Cover " ( 3-9, Fig. 1 ) away from the instrument and remove the battery.
- 3) Install a 9 V battery ( Alkaline or heavy duty ) and replace the cover.

## 8. CLASSIFICATION RANGES

For the valuation of machines and equipment in the ISO 2372 and VDI 2056, four different kinds of machine groups with four classification ranges and their limits for vibration severity ( mm/s ) are determined.

The classifications for each machine group are specified as follows :

### **Small machines, especially production electrical motors of up to 15 KW ( Group K )**

Good	0 to 0.71 mm/s
Acceptable	0.72 to 1.80 mm/s
Still permissible	1.81 to 4.5 mm/s
Dangerous	> 4.5 mm/s

### **Medium sized machines, especially electrical motors with 15 up to 75 KW output, without special foundations ( Group M )**

Good	0 to 1.12 mm/s
Acceptable	1.13 to 2.80 mm/s
Still permissible	2.81 to 7.1 mm/s
Dangerous	> 7.1 mm/s

**Large machines on heavy foundations ( Group G )**

Good	0 to 1.80 mm/s
Acceptable	1.81 to 4.50 mm/s
Still permissible	4.51 to 11.2 mm/s
Dangerous	> 11.2 mm/s

**Largest machines and turbo machines with a special foundations ( Group T ).**

Good	0 to 2.80 mm/s
Acceptable	2.81 to 7.10 mm/s
Still permissible	7.11 to 18.0 mm/s
Dangerous	> 18 mm/s

**9. SENSITIVITY RELATIVE to the reference sensitivity at 80 Hz , according ISO 2954**

Frequency Hz	Relative sensitivity		
	Normal value	Minimum value	Maximum value
10 Hz	1.0	0.8	1.1
20 Hz	1.0	0.9	1.1
40 Hz	1.0	0.9	1.1
80 Hz	1.0	1.0	1.0
160 Hz	1.0	0.9	1.1
500 Hz	1.0	0.9	1.1
1000 Hz	1.0	0.8	1.1

Table 1

## WARRANTY/DISCLAIMER

OMEGA ENGINEERING, INC. warrants this unit to be free of defects in materials and workmanship for a period of **13 months** from date of purchase. OMEGA's WARRANTY adds an additional one (1) month grace period to the normal **one (1) year product warranty** to cover handling and shipping time. This ensures that OMEGA's customers receive maximum coverage on each product.

If the unit malfunctions, it must be returned to the factory for evaluation. OMEGA's Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective, it will be repaired or replaced at no charge. OMEGA's WARRANTY does not apply to defects resulting from any action of the purchaser, including but not limited to mishandling, improper interfacing, operation outside of design limits, improper repair, or unauthorized modification. This WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of having been damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA's control. Components in which wear is not warranted, include but are not limited to contact points, fuses, and triacs.

**OMEGA is pleased to offer suggestions on the use of its various products. However, OMEGA neither assumes responsibility for any omissions or errors nor assumes liability for any damages that result from the use of its products in accordance with information provided by OMEGA, either verbal or written. OMEGA warrants only that the parts manufactured by the company will be as specified and free of defects. OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESSED OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. LIMITATION OF LIABILITY: The remedies of purchaser set forth herein are exclusive, and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.**

CONDITIONS: Equipment sold by OMEGA is not intended to be used, nor shall it be used: (1) as a "Basic Component" under 10 CFR 21 (NRC), used in or with any nuclear installation or activity; or (2) in medical applications or used on humans. Should any Product(s) be used in or with any nuclear installation or activity, medical application, used on humans, or misused in any way, OMEGA assumes no responsibility as set forth in our basic WARRANTY/DISCLAIMER language, and, additionally, purchaser will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the Product(s) in such a manner.

## RETURN REQUESTS/INQUIRIES

Direct all warranty and repair requests/inquiries to the OMEGA Customer Service Department. BEFORE RETURNING ANY PRODUCT(S) TO OMEGA, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OMEGA'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS). The assigned AR number should then be marked on the outside of the return package and on any correspondence.

The purchaser is responsible for shipping charges, freight, insurance and proper packaging to prevent breakage in transit.

FOR **WARRANTY** RETURNS, please have the following information available BEFORE contacting OMEGA:

1. Purchase Order number under which the product was PURCHASED,
2. Model and serial number of the product under warranty, and
3. Repair instructions and/or specific problems relative to the product.

FOR **NON-WARRANTY** REPAIRS, consult OMEGA for current repair charges. Have the following information available BEFORE contacting OMEGA:

1. Purchase Order number to cover the COST of the repair,
2. Model and serial number of the product, and
3. Repair instructions and/or specific problems relative to the product.

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering.

OMEGA is a registered trademark of OMEGA ENGINEERING, INC.

© Copyright 2008 OMEGA ENGINEERING, INC. All rights reserved. This document may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without the prior written consent of OMEGA ENGINEERING, INC.



# Where Do I Find Everything I Need for Process Measurement and Control? **OMEGA...Of Course!** *Shop online at [omega.com](http://omega.com)<sup>SM</sup>*

## **TEMPERATURE**

- ☑ Thermocouple, RTD & Thermistor Probes, Connectors, Panels & Assemblies
- ☑ Wire: Thermocouple, RTD & Thermistor
- ☑ Calibrators & Ice Point References
- ☑ Recorders, Controllers & Process Monitors
- ☑ Infrared Pyrometers

## **PRESSURE, STRAIN AND FORCE**

- ☑ Transducers & Strain Gages
- ☑ Load Cells & Pressure Gages
- ☑ Displacement Transducers
- ☑ Instrumentation & Accessories

## **FLOW/LEVEL**

- ☑ Rotameters, Gas Mass Flowmeters & Flow Computers
- ☑ Air Velocity Indicators
- ☑ Turbine/Paddlewheel Systems
- ☑ Totalizers & Batch Controllers

## **pH/CONDUCTIVITY**

- ☑ pH Electrodes, Testers & Accessories
- ☑ Benchtop/Laboratory Meters
- ☑ Controllers, Calibrators, Simulators & Pumps
- ☑ Industrial pH & Conductivity Equipment

## **DATA ACQUISITION**

- ☑ Data Acquisition & Engineering Software
- ☑ Communications-Based Acquisition Systems
- ☑ Plug-in Cards for Apple, IBM & Compatibles
- ☑ Datalogging Systems
- ☑ Recorders, Printers & Plotters

## **HEATERS**

- ☑ Heating Cable
- ☑ Cartridge & Strip Heaters
- ☑ Immersion & Band Heaters
- ☑ Flexible Heaters
- ☑ Laboratory Heaters

## **ENVIRONMENTAL MONITORING AND CONTROL**

- ☑ Metering & Control Instrumentation
- ☑ Refractometers
- ☑ Pumps & Tubing
- ☑ Air, Soil & Water Monitors
- ☑ Industrial Water & Wastewater Treatment
- ☑ pH, Conductivity & Dissolved Oxygen Instruments

M4716/1008