

**omega.com®**  
ΩOMEGA®


**HHP886, HHP886U** USB & DC Power  
**HHP886W** Wireless  
Dual Input Differential Manometer

INSTRUCTION SHEET M4742/0109

Shop online at: [omega.com](http://omega.com) e-mail: [info@omega.com](mailto:info@omega.com)  
For latest product manuals: [omegamannual.info](http://omegamannual.info)

MADE IN TAIWAN

1 YEAR WARRANTY FC

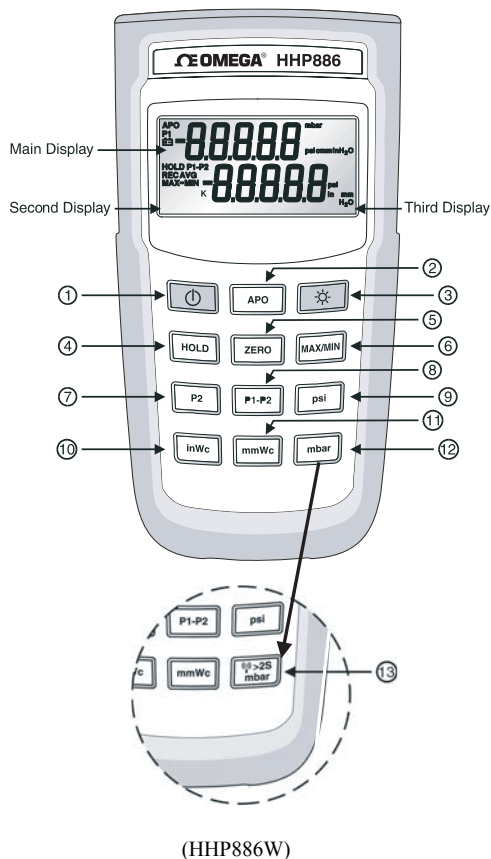

## INTRODUCTION

The meter is a portable standalone dual port manometer. The meter is capable of taking gas pressure as well as static pressure. The meter comes in a rugged rubber boot. The meter also has a zero adjust and a hold button to hold the currently displaced reading. The auto-power-off function conserves battery life but can be disabled if desired.

The meter will allow you to take gas pressure up to ±60" of Wc. The meter will take differential pressure readings and display the difference between P1 and P2 at all times in the lower right corner of the LCD. The meter also has four different measurement scales including inches of water column, millimeters of water column, mbar and psi. Static pressure is possible with the resolution to 0.01" of Wc. Special purpose static pressure instruments are on the market with better accuracy and temperature compensation but they typically cost many times more than the meter.

### WARNING

Before every use, check to be sure the meter and its tubing are free from breaks or blockage. While using the meter, if you suspect gas is leaking, or if you can smell gas, close off the gas supply and ventilate the occupied space. Identify and repair the source of the leak before continuing with the test.

In the interest of safety, this instrument should only be used by trained, competent professionals who know the hazard and consider the risk of working on and with industrial equipment.

The meter does not measure water pressure; under these conditions they will fail. Do not exceed 5 psi input pressure.

### FEDERAL COMMUNICATIONS COMMISSION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Shielded interface cables must be used in order to comply with emission limits.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### WIRELESS NOTE

Wireless receiver must keep a distance at least 40cm from the meter and meter to meter distance must be at least 30cm.

## SPECIFICATIONS

### ELECTRICAL

#### Temperature

**Temperature coefficient:** 0.1 x (specified accuracy) per °C  
**Accuracy:** Stated accuracy at 23°C ± 5°C (18°C to 28°C): ±1.5% FS

### GENERAL

**Display:** 5 digit liquid crystal display (LCD).

**Overload:** "----." or "OL" is display.

**Battery:** 1.5V x 4 PCS (SIZE AAA) UM-4 R03.

**Battery Life:** 200 hours with low battery indicator on display.

**Low Battery:** Symbol is displayed.

**Auto-Off power:** 15 minutes.

**Dimensions:** 171mm (H) x 83mm (W) x 40mm (D)

**Weight:** Approximately 230g including batteries.


**Operating environment:** 32°F (0°C) to 122°F (50°C)

**Compatible Media:** Dry, non-corrosive gases.

**Wire Communication Protocol:** 19200 baud rate. (HHP886U)

**Back Side:** (HHP886U)

1. USB Port
2. DC power JACK(12V)



**Wireless Features:** (HHP886W)

Frequency range: 910~920MHz

Low current consumption less than 1mA

The transmitting distance can reach 25M without magnetic interference.

### Pressure

**Pressure Ports:** Tube connectors for 4mm

**Units of Measure:** inWc, mmWc, mbar, psi

**Resolution:** 0.01 inch Wc

**Accuracy:** ±1.5% FS

### Measurement Range:

inWc: 0.00 to ±60.00  
mmWc: 0.0 to ± 1500.0  
mbar: 0.00 to ±150.00  
psi: 0.000 to ±2.0000

## OPERATING INSTRUCTIONS

### 1. "⏻" Button

When the power is off, press "⏻" button to turn on the meter. In the MAX/MIN record mode can not power off, must exit MAX/MIN recording mode then power off.

### 2. "APO" Button

Press the "APO" button to trigger on or off APO(auto power off) function and the "APO" annunciator is displayed. (It will auto power off when no operation for 15 mins).

### 3. "☀" Button

Press "☀" button to trigger on the backlight function, press the "☀" button again to cancel the backlight function. The backlight will switch-off automatically after 30 seconds.

### 4. "HOLD" Button

Press the "HOLD" button to enter the data hold mode, the "HOLD" annunciator is displayed at the center-left of display. When data hold mode is selected, the manometer meter held the present readings and stops all further measurements. Press the "HOLD" button again to cancel data hold mode, causing manometer meter to resume taking measurements.

### 5. "ZERO" Button

ZERO button just before taking the pressure readings, while at ambient pressure. This will zero both P1 and P2.

### 6. "MAX/MIN" Button

Press "MIN/MAX" button to enter the MIN/MAX recording mode and REC shows on the display. The beeper emits a tone when a new minimum or maximum measurement is recorded. Press the "MIN/MAX" button again to cycle through the current readings:

MAX: The highest measurement recorded.

MIN: The lowest measurement recorded.

MAX-MIN: The difference of the highest and the lowest measurement.

AVG: The average values of the measurements.

Pressing "MIN/MAX" button over two seconds to exit the function. In this mode, press "HOLD" button to stop recording, all values are frozen, press "HOLD" button again to restart recording. In this mode, the APO function and other buttons are disabled, excluding "HOLD" a Back-light buttons. Pressing and holding down the "MAX/MIN" button for more than 2 seconds to exit the MAX/MIN function.

## 7. "P2" and "P1-P2" Button

Press the "P2" or "P1-P2" button you can change the display between P2 and P1-P2.

## 8. "psi", "inWc", "mmWc", "mbar" Button:

Press the "psi" or "inWc" or "mmWc" or "mbar" button you can change pressure unit.

1 psi = 27.67990500784 inWc.

1 psi = 703.0698934059 mmWc.

1 psi = 68.94756718687 mbar.

## 9. WIRELESS MODE: (886W/886UW)

Pressing the "☺" key for more than two seconds to start wireless function. Pressing the "☺" key again for another two seconds to stop wireless function. The wireless mode will shut down if there is no wireless signal for two minutes.

To SET CH/ID to 00,00, pressing the "mbar" key and "☺" power key for more than 4 seconds with the meter powered down. The meter will set channel and ID to 00,00 status. The second display will show 00, which means that the channel and ID has been set to 00.

### To check the channel and ID of the meter:

When the meter is off, press "APO" key and "☺" for 4 seconds, LCD's main display will show channel number, the second display will show ID number.

## OPERATION

1. Zero the meter by pressing the "ZERO" button just before taking the pressure readings, while at ambient pressure. This will zero both P1 and P2.
2. Connect a single hose to get the gauge pressure relative to the ambient or ZERO pressure.
3. Connect both hoses if you want to see relative pressure, P1 minus P2.
4. By pressing the "P2" or "P1-P2" button you can change the display between P2 and P1-P2 is constantly displayed in the LCD.
5. Press the unit button makes it possible to switch between the four measurements scales of inches of water column (inWc), millimeters of water column (mmWc), mbar, and psi. The scale being viewed is displayed on the LCD.
6. If you are in an environment where the temperature is noticeably changing while you are taking your reading, it is advised that you disconnect the meter from the hoses and ZERO it relative to ambient before each reading.

## OPERATOR MAINTENANCE

### Battery Replacement

1. Power is supplied by 4pcs 1.5V (SIZE AAA) UM-4 R03.
2. The "🔋" appears on the LCD display when replacement is needed. To replace battery remove screw from back of meter and lift off the battery cover.
3. Remove the battery from battery contacts and replace.
4. When not use for long time remove battery.
5. Don't keep in place with high Temp, or high humidity.

### Cleaning

Periodically wipe the case with a damp cloth and detergent, do not use abrasives or solvents.

**\*Software operation manual is on the software disk.**



OMEGAnet® On-Line Service omega.com	Internet e-mail info@omega.com
--	-----------------------------------

### Servicing North America:

**U.S.A.:** OMEGA Engineering, Inc.  
**ISO 9001 Certified** One Omega Drive, P.O. Box 4047  
Stamford, CT 06907-0047 USA  
Toll-Free: 1-800-826-6342 TEL: (203) 359-1660  
FAX: (203) 359-7700 e-mail: info@omega.com

**Canada:** 976 Bergar, Laval (Quebec), Canada H7L 5A1  
Toll-Free: 1-800-826-6342 TEL: (514) 856-6928  
FAX: (514) 856-6886 e-mail: info@omega.ca

### For immediate technical or application assistance:

**U.S.A. and Canada:** Sales Service: 1-800-826-6342/1-800-TC-OMEGA®  
Customer Service: 1-800-622-2378 1-800-622-BEST®  
Engineering Service: 1-800-872-9436/1-800-USA-WHEN®

**Mexico:** En Español: 001 (203) 359-7803 FAX: (001) 203-359-7807  
info@omega.com.mx e-mail: espanol@omega.com

### Servicing Europe:

**Benelux:** Managed by the United Kingdom Office  
Toll-Free: 0800 099 3344 TEL: +31 20 347 21 21  
FAX: +31 20 643 46 43 e-mail: sales@omega.nl

**Czech Republic:** Frystatska 184, 733 01 Karviná, Czech Republic  
Toll-Free: 0800-1-66342 TEL: +420-59-6311899  
FAX: +420-59-6311114 e-mail: info@omegashop.cz

**France:** Managed by the United Kingdom Office  
Toll-Free: 0800 466 342 TEL: +33 (0) 161 37 29 00  
FAX: +33 (0) 130 57 54 27 e-mail: sales@omega.fr

**Germany/Austria:** Daimlerstrasse 26, D-75392 Deckenpfronn, Germany  
Tel: + 49 (0)7056 9398-0 FAX: +49 (0)7056 9398-29  
Toll Free in Germany: 0800 639 7678 e-mail: info@omega.de

**United Kingdom:** OMEGA Engineering Ltd.  
**ISO 9001 Certified** One Omega Drive  
River Bend Technology Centre, Northbank  
Irlam, Manchester M44 5BD England  
Toll-Free: 0800-488-488 TEL: +44 (0)161 777-6611  
FAX: +44 (0)161 777-6622 e-mail: sales@omega.co.uk

It is the policy of OMEGA to comply with all worldwide safety and EMC/EMI regulations that apply. OMEGA is constantly pursuing certification of its products to the European New Approach Directives. OMEGA will add the CE mark to every appropriate device upon certification.

The information contained in this document is believed to be correct, but OMEGA Engineering, Inc. accepts no liability for any errors it contains, and reserves the right to alter specifications without notice.

**WARNING:** These products are not designed for use in, and should not be used for, human applications.

## WARRANTY / DISCLAIMER

OMEGA ENGINEERING, INC. warrants this unit to be free of defects in materials and workmanship for a period of **13 months** from date of purchase. OMEGA's WARRANTY adds an additional one (1) month grace period to the normal **one (1) year product warranty** to cover handling and shipping time. This ensures that OMEGA's customers receive maximum coverage on each product.

If the unit malfunctions, it must be returned to the factory for evaluation. OMEGA's Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective, it will be repaired or replaced at no charge. OMEGA's WARRANTY does not apply to defects resulting from any action of the purchaser, including but not limited to mishandling, improper interfacing, operation outside of design limits, improper repair, or unauthorized modification. This WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of having been damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA's control. Components which wear is not warranted, include but are not limited to contact points, fuses, and triacs.

OMEGA is pleased to offer suggestions on the use of its various products. However, OMEGA neither assumes responsibility for any omissions or errors nor assumes liability for any damages that result from the use of its products in accordance with information provided by OMEGA, either verbal or written. OMEGA warrants only that the parts manufactured by it will be as specified and free of defects. OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESS OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. LIMITATION OF LIABILITY: The remedies of purchaser set forth herein are exclusive, and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.

CONDITIONS: Equipment sold by OMEGA is not intended to be used, nor shall it be used: (1) as a "Basic Component" under 10 CFR 21 (NRC), used in or with any nuclear installation or activity; or (2) in medical applications or used on humans. Should any Product(s) be used in or with any nuclear installation or activity, medical application, used on humans, or misused in any way, OMEGA assumes no responsibility as set forth in our basic WARRANTY / DISCLAIMER language, and, additionally, purchaser will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the Product(s) in such a manner.

## RETURN REQUESTS / INQUIRIES

Direct all warranty and repair requests / inquiries to the OMEGA Customer Service Department. BEFORE RETURNING ANY PRODUCT(S) TO OMEGA, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OMEGA'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS). The assigned AR number should then be marked on the outside of the return package and on any correspondence.

The purchaser is responsible for shipping charges, freight, insurance and proper packaging to prevent breakage in transit.

FOR **WARRANTY** RETURNS, please have the following information available BEFORE contacting OMEGA:

1. Purchase Order number under which the product was PURCHASED,
2. Model and serial number of the product under warranty, and
3. Repair instructions and/or specific problems relative to the product.

FOR **NON-WARRANTY**

REPAIRS, consult OMEGA for current repair charges. Have the following information available BEFORE contacting OMEGA:

1. Purchase Order number to cover the COST of the repair,
2. Model and serial number of the product, and
3. Repair instructions and/or specific problems relative to the product.

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering.

OMEGA is a registered trademark of OMEGA ENGINEERING, INC. © Copyright 2009 OMEGA ENGINEERING, INC. All rights reserved. This document may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without the prior written consent of OMEGA ENGINEERING, INC.

## Where Do I Find Everything I Need for Process Measurement and Control?

### OMEGA...Of Course!

Shop online at [omega.com](http://omega.com)

### TEMPERATURE

- ☑ Thermocouple, RTD & Thermistor Probes, Connectors, Panels & Assemblies
- ☑ Wire: Thermocouple, RTD & Thermistor
- ☑ Calibrators & Ice Point References
- ☑ Recorders, Controllers & Process Monitors
- ☑ Infrared Pyrometers

### PRESSURE, STRAIN AND FORCE

- ☑ Transducers & Strain Gages
- ☑ Load Cells & Pressure Gages
- ☑ Displacement Transducers
- ☑ Instrumentation & Accessories

### FLOW/LEVEL

- ☑ Rotameters, Gas Mass Flowmeters & Flow Computers
- ☑ Air Velocity Indicators
- ☑ Turbine/Paddlewheel Systems
- ☑ Totalizers & Batch Controllers

### pH/CONDUCTIVITY

- ☑ pH Electrodes, Testers & Accessories
- ☑ Benchtop/Laboratory Meters
- ☑ Controllers, Calibrators, Simulators & Pumps
- ☑ Industrial pH & Conductivity Equipment

### DATA ACQUISITION

- ☑ Data Acquisition & Engineering Software
- ☑ Communications-Based Acquisition Systems
- ☑ Plug-in Cards for Apple, IBM & Compatibles
- ☑ Datalogging Systems
- ☑ Recorders, Printers & Plotters

### HEATERS

- ☑ Heating Cable
- ☑ Cartridge & Strip Heaters
- ☑ Immersion & Band Heaters
- ☑ Flexible Heaters
- ☑ Laboratory Heaters

### ENVIRONMENTAL MONITORING AND CONTROL

- ☑ Metering & Control Instrumentation
- ☑ Refractometers
- ☑ Pumps & Tubing
- ☑ Air, Soil & Water Monitors
- ☑ Industrial Water & Wastewater Treatment
- ☑ pH, Conductivity & Dissolved Oxygen Instruments